

NEXA

GRAND VITARA

OWNER'S MANUAL

For vehicle fitted with CNG fuel system, use **Grand Vitara CNG**
Supplementary Owner's Manual

- Refer for vehicle usage at all times
- Contains Warranty policy and Important Information On Safety, Operation & Maintenance

Part No. 99011M76T12-74W
July, 2026

ENG

This Owner Manual applies to the GRAND VITARA series
produced by MARUTI SUZUKI INDIA LIMITED



*NOTE: The illustrated model is one of the GRAND VITARA series
Accessories shown in the picture are not part of standard equipment*

© Copyright 2026 **Maruti Suzuki India Limited**. All rights reserved.

No part of this manual can be reproduced in any manner whatsoever or transmitted
in any form or by any means without prior written consent of Maruti Suzuki India Limited.

FOREWORD

The digital Owner's Manual is an essential part of your vehicle a rich document which familiarizes you with the vehicle by providing information such as features, warnings, operations and equipment description etc. Please read this manual carefully before operating your new MARUTI SUZUKI vehicle and review the manual from time to time. It is recommended to download this manual (from the "Maruti Suzuki" mobile application with your registered mobile number) and save a soft copy of the same for easy access all times. Please visit MARUTI SUZUKI authorised workshop for availing any service.

To prolong the life of your vehicle and reduce maintenance cost, the periodic maintenance must be carried out according to "PERIODIC MAINTENANCE SCHEDULE" described in "INSPECTION AND MAINTENANCE" section of this manual. It is essential for preventing trouble and accidents to ensure your satisfaction and safety.

Daily inspection and care as per "DAILY INSPECTION CHECKLIST" described in the "OPERATING YOUR VEHICLE" section of this manual is essential for prolonging the life of the vehicle and for safe driving.

Vehicle and the available features/accessories therein should be used and plied by the owner/user in accordance with the applicable legal requirements.

MARUTI SUZUKI INDIA LIMITED believes in conservation and protection of Earth's natural resources.

To that end, we encourage every vehicle owner to recycle, trade-in or properly dispose of, as appropriate, used Engine Oil, coolant and other fluids, batteries and tyres etc.

MARUTI SUZUKI INDIA LIMITED

All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. MARUTI SUZUKI INDIA LIMITED reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.

This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

IMPORTANT

WARNING/ **CAUTION/NOTICE/NOTE**

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words **WARNING**, **CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay particular attention to messages highlighted by these signal words:

WARNING

Indicates a potential hazard that could result in death or serious injury.

CAUTION


Indicates a potential hazard that could result in minor or moderate injury.

NOTICE

Indicates a potential hazard that could result in vehicle damage.

NOTE:

Indicates special information to make maintenance easier or instructions clearer.

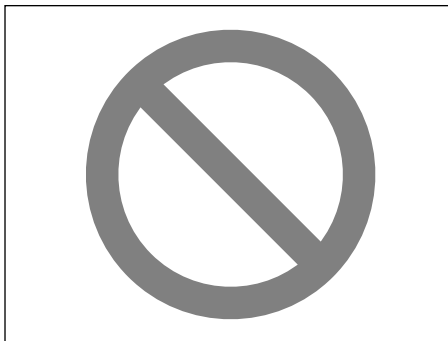

75F135

The circle with a slash in this manual means "Don't do this" or "Don't let this happen".

NOTE:

- Words like *car*, *model/variant* are invariably used in this manual to denote the "Vehicle".
- Pictorial representations used in this manual are for reference purposes only.

MODIFICATION WARNING

WARNING

Do not modify your vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification shall not be covered under warranty.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios may cause electronic interference with your vehicle's ignition system, resulting in vehicle performance problems. Consult your Maruti Suzuki authorized workshop or qualified service technician for advice on installing such mobile communication equipment.

NOTICE

The diagnostic connector of your vehicle is prepared only for the specific diagnostic tool for inspection and service purpose. Connecting any other tool or device may interfere with electronic parts operations and cause running out of batteries.

“WARNING”



Vehicle may break-down, meet with an accident or catch fire due to

1. Installation of
 - High wattage bulbs
 - Non genuine lamps / horns
 - Modified suspension / wheels
 - Non genuine parts / accessories etc.
2. Retrofitment of LPG / CNG fuel systems/kits.
3. Usage of domestic LPG.
4. Short circuiting due to tampering of wiring harness.

CAUTION: DO NOT STORE OR CARRY INFLAMMABLE MATERIALS IN THE VEHICLE.



Avoid driving into or starting the vehicle in a heavily water logged area. Vehicle may break-down or engine may fail due to

1. Water entry into the engine (which may lead to hydrostatic lock).
2. Short circuiting of the electrical systems.

If the vehicle is stuck in deep water, do not start / crank the vehicle until the level of water drops below the level of exhaust pipe.

NOTE:

IF THE VEHICLE IS SUBMERGED IN WATER, REPORT TO THE NEAREST AUTHORIZED WORKSHOP.

“CAUTION”

1. Retro-fitting of LPG / CNG kit may deteriorate vehicle performance, reduce engine & engine related component's life and also warranty will be null and void for such vehicles.
2. Do not use domestic LPG/LPG cylinder for your factory fitted LPG vehicles.
3. Usage of domestic LPG for running vehicles is prohibited as per law.
4. Do not remove company fitted LPG/CNG kit to install some other kit. It may affect vehicle performance and may cause fire.
5. Drive slowly on wet roads. Tires may slip while braking at higher speeds due to aquaplaning. (reduced contact area between tire and road due to presence of water)
6. Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon-monoxide in cabin and may lead to suffocation or breathing problems.
7. Do not park vehicle on dry leaves or grass. This may lead to fire due to hot catalytic converter, igniting the dry leaves/grass.
8. If the vehicle is equipped with CNG/LPG, ensure availability of fire extinguisher in the vehicle all the time.
9. Always wear seat belt at all the times.
10. Do not use mobile phone while driving.
11. Avoid Smoking in the car, live bud thrown in car may cause fire.
12. Do not put any body part under the vehicle when it is supported on a Jack.
13. Do not use non-genuine accessories in your vehicle.
14. Do not fit accessories from unauthorized workshops/sources.
15. Usage of non-approved electrical accessories in your vehicle may result in spark, fire or personal injury.
16. Do not use camphor, incense sticks inside cabin room. Doing so may cause fire.
17. Avoid usage of cellular phones while refueling. Electric current and/or electronic interference from cellular phones can potentially ignite fuel vapors and cause fire.
18. Avoid entry inside vehicle immediately once after you have begun refueling. You can generate a build up of static electricity by touching, rubbing or sliding against any item or fabric capable of producing static electricity. Static electricity discharge can ignite fuel vapors and may causing a fire.
19. Do not check the engine room/ open the hood near the fire area (Outside the vehicle). Fuel, washer fluid, etc. are flammable oils that may cause fire.
20. Avoid driving when vehicle has met with an accident. Before driving, Please contact with authorized MSIL dealership.

To experience and use the Digital Owner's Manual, download Maruti Suzuki application



Maruti Suzuki application ensures a hassle free ownership experience. Get easy access to all the services and information you need by downloading the application



How to download Owners manual from Maruti Suzuki application

Step 1: Download the “Maruti Suzuki” mobile application from the Apple App Store or Google Play Store.

Step 2: Enter your registered mobile number and verify with the OTP received via SMS.

Step 3: Tap the “Offerings” icon on the bottom bar.

Step 4: Select “Owner’s Manual” to access your car’s digital manual.

Step 5: Tap on download icon at top right of the page to download the Owner's Manual.

Now, the Owner's Manual is available on your mobile phone for reference at all times.

(For assistance, contact Maruti Suzuki authorized workshop)

WARRANTY POLICY

Maruti Suzuki India Limited (hereinafter called "Maruti Suzuki"), warrants that each new Maruti Suzuki vehicle distributed in India by Maruti Suzuki and sold by a Maruti Suzuki authorized dealer will be free, under normal use and service, from any defects in material and workmanship at the time of manufacture SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS:

(1) Qualification:

To qualify for this warranty the vehicle must be delivered by a Maruti Suzuki authorized dealer and set-up, and serviced by a Maruti Suzuki authorized workshop.

(2) Term:

The term of this warranty shall be Thirty-Six (36) months or 1,00,000 kilometers (whichever occurs first) from the date of invoice to the first owner, except for the following parts for which the term is as under:

NOTE:

Maruti Suzuki offers warranty for the below parts in vehicle, if equipped, as follows:

- *Lithium-ion battery, Integrated Starter Generator (ISG), Hybrid ECU, Inverter / Converter Unit, Power Management ECU- Sixty (60) months or 1,00,000 kilometers (whichever occurs first).*
- *Hybrid Electric Vehicle (HEV) Battery- Ninety six (96) months or 1,60,000 kilometers (whichever occurs first).*
- *Lead acid battery – Twenty four (24) months or 40,000 kilometers (whichever occurs first).*

(3) Maruti Suzuki Warranty Obligation:

If any defect(s) should be found in a Maruti Suzuki vehicle within the term stipulated above, Maruti Suzuki's only obligation is to repair or replace at its sole discretion any part shown to be defective, with a new part or the equivalent at no cost to the owner for parts or labor, when Maruti Suzuki acknowledges that such a defect is attributable to faulty material or workmanship at the time of manufacture. Such defective parts, which have been replaced, will become the property of Maruti Suzuki. The owner is responsible for any repair or replacements which are not covered by this warranty. The decision of Maruti Suzuki shall be final & binding.

(4) Limitation:

This warranty shall not apply to:

- (a) Normal maintenance service required other than the three free services, including without limitation, oil and fluid changes, consumables, headlight aiming, fastener retightening, wheel balancing, wheel alignment and tyre rotation, cleaning of injectors, adjustments of clutch and valve clearance.
- (b) The normal wear of parts including without limitation, bulbs, tyres* and tubes, spark plugs, belts, hoses, filters, wiper blades, brushes, contact points, fuses, clutch disc, brake shoes, brake pads, cable and all rubber parts (except oil seal and glass run).
(* - If there is a complaint related to tyre, the customer may contact respective tyre manufacturer).
- (c) Any vehicle which has been used for competition, rallies or racing.
- (d) Any repairs or replacement arising from accidents or collision.

-
- (e) Any defect/ damage caused by misuse, negligence, abnormal use, insufficient care, vandalism, theft, riot, fire, flooding - not limited to entry of water in the components resulting in engine seizure, hydrostatic lock, etc. or external damages to the body/ components.
 - (f) Any damage resulting due to usage of adulterated fuel/ lubricants/ oil/ coolant/ fluids/ polishing products and fuel/ lubricants/ oil/ coolant/ fluids used other than those specified in the Owner's Manual.
 - (g) Any vehicle which has been modified or altered, including without limitation, the installation of performance accessories, enlargements of lights, other changes and external/ consequential reasons.
 - (h) Any vehicle on which parts or accessories not approved by Maruti Suzuki (Non-MSGA, Non-MSGP) have been used.
 - (i) Any vehicle which has not been operated in accordance with the operating instructions in this Owner's Manual.
 - (j) Any vehicle which has not received the service inspections prescribed in this Owner's Manual.
 - (k) Any vehicle which has been assembled, disassembled, adjusted or repaired by other than a Maruti Suzuki authorized workshop.
 - (l) Any vehicle which has been used for purposes other than what it was designed for.
 - (m) Any damage or deterioration caused by airborne fallout, industrial fallout, acid rain, hail or hail storm, wind storm, lightning, bird droppings, rodents bite / rat bite and such other thing that result in damage to the vehicle.
 - (n) Insignificant defects / noise which do not affect the function of the vehicle including without limitation, sound, vibration and fluid seep.
 - (o) Any natural wear and tear including without limitation, ageing, wear & tear or deterioration such as discoloration, fading, deformation or blurring and fabric discoloration.
 - (p) Installation and usage of domestic LPG gas/LPG Cylinder.
 - (q) V-belts, hoses and gas leaks.
 - (r) Any vehicle retrofitted with LPG/CNG kits.
 - (s) Repainting including patchwork, bodywork and mouldings and interior trims.
 - (t) Corrosion, rusting of body parts and/ or components.
 - (u) Any vehicle on which odometer has been changed unauthorizedly or odometer reading has been modified/ tampered with/ or not matching the service records.
 - (v) The damage(s) caused to the vehicle being unattended despite knowledge that the defect exists and ignorance by the owner/ user of the vehicle.
 - (w) Any damage(s) caused to vehicle including battery/ tyre due to improper maintenance or prolonged parking of the vehicle in idle condition for long duration.
 - (x) Any vehicle on which the retro-fitment is not authorized and/ or type approved as per the standards prescribed by the relevant authority including but not limited to Automotive Standards of India.
 - (y) Any vehicle on which the retro-fitment is such which directly or indirectly causes any damage to the vehicle or affects the functions of the vehicle in any manner whatsoever.

(5) Extent of Warranty:

This warranty is the entire written warranty given by Maruti Suzuki for Maruti Suzuki vehicles and no dealer or its or his agent or employee is authorized to extend or enlarge this warranty and no dealer or its or his agent or employee is authorized to make any oral warranty or representation or assurance on behalf of Maruti Suzuki.

Maruti Suzuki reserves the right to add any improvements or change the design of any model at any time with no obligation to make the same changes on units previously sold.

(6) Warranty Service:

To obtain warranty service, the complete vehicle must be presented at the owner's expenses to Maruti Suzuki authorized workshop.

The customer shall be responsible for his belongings or accessories fitted in the vehicle at the time of presenting the vehicle for service and no claim shall be entertained in any manner under any circumstances.

(7) Owner's Warranty Obligations:

NOTICE
The owner shall not use the vehicle in a damaged condition and report the same immediately to the nearest Maruti Suzuki authorized workshop. This would result in early inspection and repair of the vehicle and any possible harm to the person or aggravation of damage to the vehicle can be prevented.

It is responsibility of each owner to:

- Have performed, at his own expenses, by a Maruti Suzuki authorized workshop all the service inspections specified in the Owner's Manual described in "INSPECTION AND MAINTENANCE" section.
- Should you resell the vehicle, please guide the new users/owners to download this manual (from the "Maruti Suzuki" mobile application with your registered mobile number). Also the soft copy of the manual must be passed on to new users/owners when resold or otherwise transferred.

If the Owner's Manual is lost due to any reason, the owner or user may download a soft copy of the same (from the "Maruti Suzuki" mobile application with the mobile number) and save it for easy access at any point of time".

(8) Disclaimer of Consequential Damage:

Maruti Suzuki assumes no responsibility for loss of vehicle, loss of time, inconvenience or any other indirect incidental or consequential damage resulting from the vehicle not being available to the owner because of any defect covered by this warranty.

(9) Change of Owner

Even if ownership of the vehicle changes, the remaining warranty period is effective for the new owner.

This warranty is applicable only in India and not transferable to any other country.

NOTE:

Notwithstanding the warranty obligations, Maruti Suzuki may reuse reworked (refurbished) parts for undertaking rectification of recalled vehicles in terms of applicable laws.

TABLE OF CONTENTS

QUICK GUIDE	1
FOR SAFE DRIVING	2
BEFORE DRIVING	3
INSTRUMENT CLUSTER	4
OPERATING YOUR VEHICLE	5
ADVICE FOR YOUR DRIVING	6
OTHER CONTROLS AND EQUIPMENT	7
VEHICLE LOADING AND TOWING	8
INSPECTION AND MAINTENANCE	9
EMERGENCY SERVICE	10
APPEARANCE CARE	11
SPECIFICATIONS	12
SERVICE NETWORK	13



59RN00020

QUICK GUIDE

Illustrated Table of Contents 1-1

Warning Lights and Indicators 1-10

Warning Buzzer 1-21


FAQ 1-28

QUICK GUIDE

Illustrated Table of Contents

Exterior

- (1) Door (P.3-1)
- (2) Door Locks (P.3-1)
- (3) Side Turn Signal Light on Outside Rearview Mirrors (P.9-36)
- (4) Roof Rails (if equipped)
- (5) Sun Roof (if equipped)
- (6) Windshield Wiper (P.3-25, 9-44)
- (7) Fuel Filler Cap (P.7-1)
- (8) Tailgate (P.3-4)
- (9) Radio Antenna (P.7-43)
- (10) High Mount Stop Light (P.9-37)
- (11) Rear Window Wiper (if equipped) (P.3-25, 9-44)
- (12) Rear Camera (if equipped) (P.5-73, 5-104)
- (13) Side Camera (if equipped) (P.5-73)
- (14) Outside Rearview Mirror (P.2-9)
- (15) Position Light, Daytime Running Light (D.R.L.) and Front Turn Signal Light (P.3-21)
- (16) Headlight (P.3-19, 9-35)
- (17) Engine Hood (P.7-4)
- (18) Front Camera (if equipped) (P.5-73)
- (19) Towing Eye Cover (P.10-5)
- (20) Brake Light and Tail Light (P.9-36)
- (21) Rear Turn Signal Light (P.3-24, 9-36)
- (22) Reversing Light (P.9-36)
- (23) Parking Sensor (P.5-99)
- (24) License Plate Light (P.9-37)
- (25) Tail Light (P.9-36)

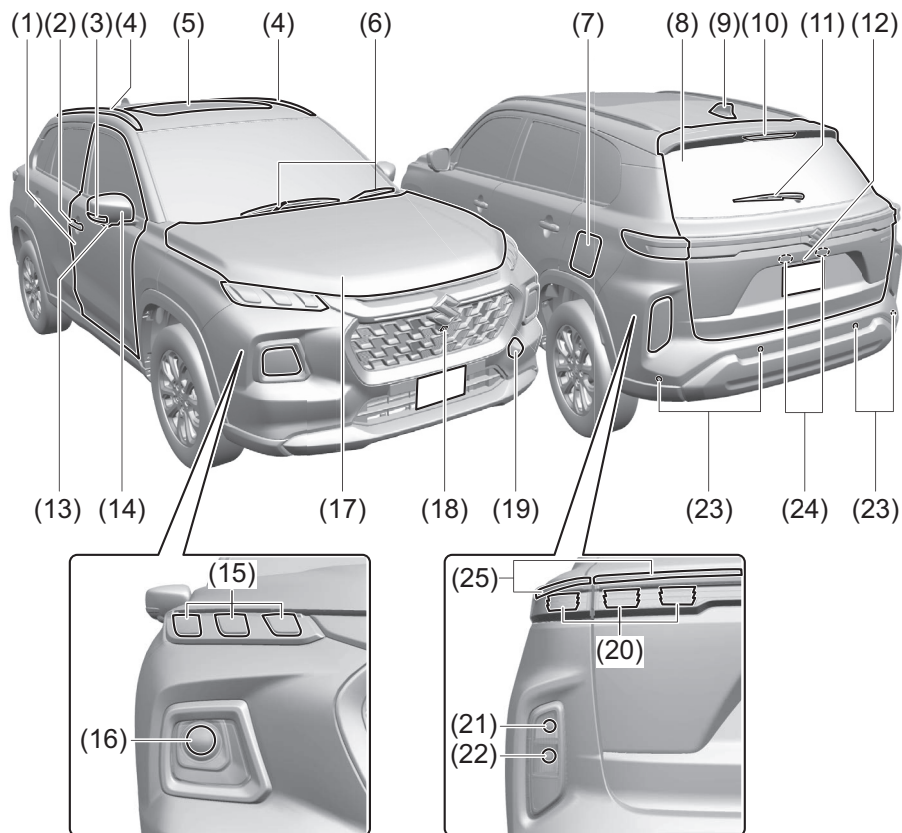

76TS10170

Interior, Side


- (1) Inside Rearview Mirror (P.2-8)
- (2) Front Interior Light (P.7-7, 9-38)
- (3) Sun Visor (P.7-6)
- (4) Warning Label for Front Passenger's Front Airbag (P.2-47) *1, *2
- (5) Hands-free Microphone (if equipped) (P.7-45)
- (6) Seat Belt (P.2-20)
- (7) Side Curtain Airbag (P.2-48)
- (8) Front Seat (P.2-5)
- (9) Side Airbag (P.2-48)
- (10) Front Seat Back Pocket (if equipped) (P.7-30)
- (11) Center Interior Light (P.7-7)

*1: Be sure to read the detailed information in the target page before using a child restraint system.

*2: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.



76TM01001

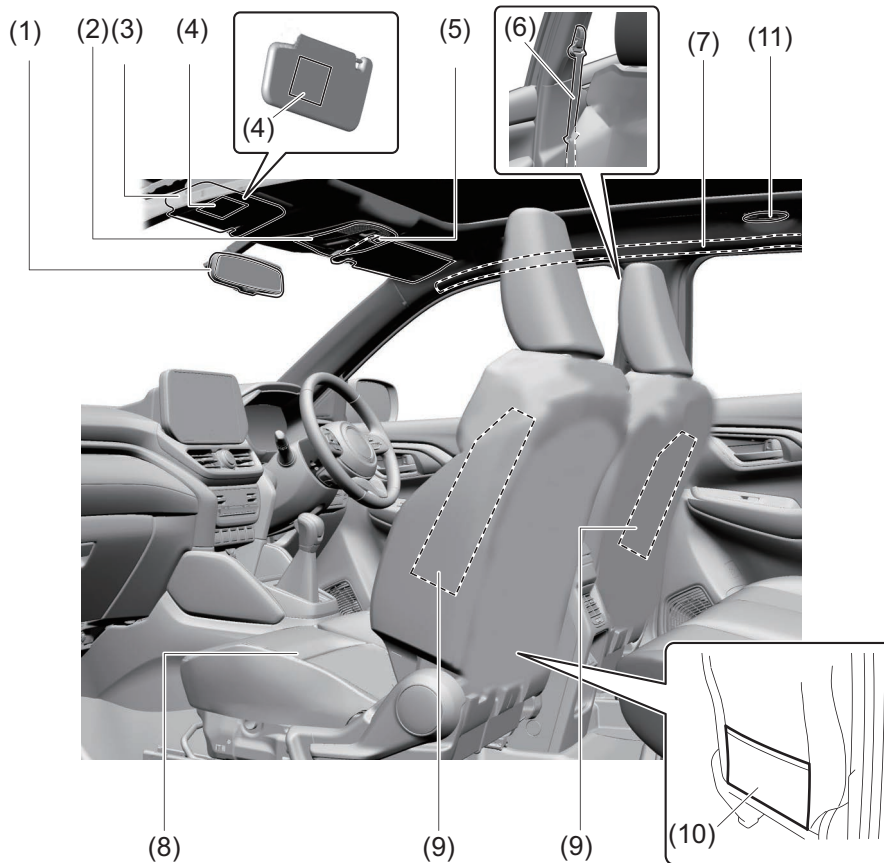


76TS10140

QUICK GUIDE

Interior, Rear


- (1) Assist Grip (P.7-21)
- (2) Seat Belt (P.2-20)
- (3) Rear Seat (P.2-13)
- (4) USB Charging Socket (if equipped) (P.7-24)
- (5) Front Armrest (if equipped) (P.7-18)
- (6) Rear Armrest (if equipped) (P.7-14)
- (7) Roller sunshade (if equipped) (P.7-7)

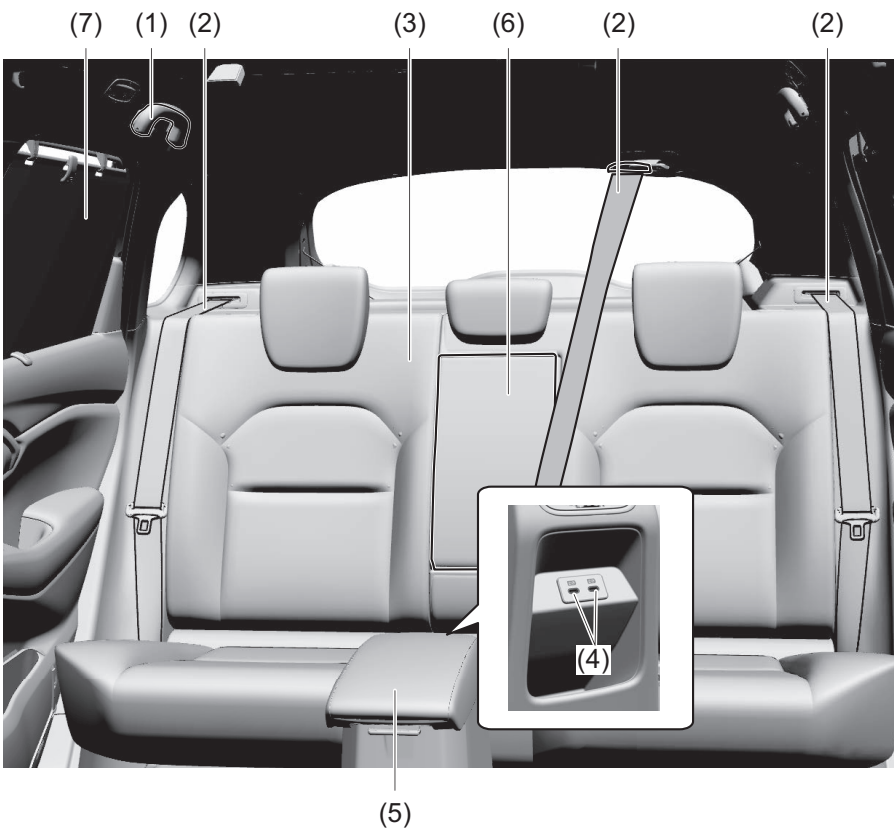

76TS10211

Interior, Front

- (1) Glove Box (P.7-17)
- (2) Front Passenger's Front Airbag (P.2-48)
- (3) Accessory Socket (P.7-12)
- (4) Heating and Air Conditioning System (P.7-35)
- (5) USB Socket (if equipped) (P.7-23)
- (6) Driver's Front Airbag (P.2-48)
- (7) Engine Hood Release Handle (P.7-4)
- (8) Fuel Lid Opener Lever (P.7-1)
- (9) Parking Brake Lever (if equipped) (P.5-20)
- (10) Electric Parking Brake Switch (if equipped) (P.5-22)
- (11) Brake Hold Switch (if equipped) (P.5-24)
- (12) Gearshift Lever (P.5-26, 5-30)
- (13) Door Lock Switch (P.3-2)
- (14) Electric Window Control (P.3-15)
- (15) Electric Mirror Control (P.2-10)
- (16) Window Lock Switch (P.3-16)

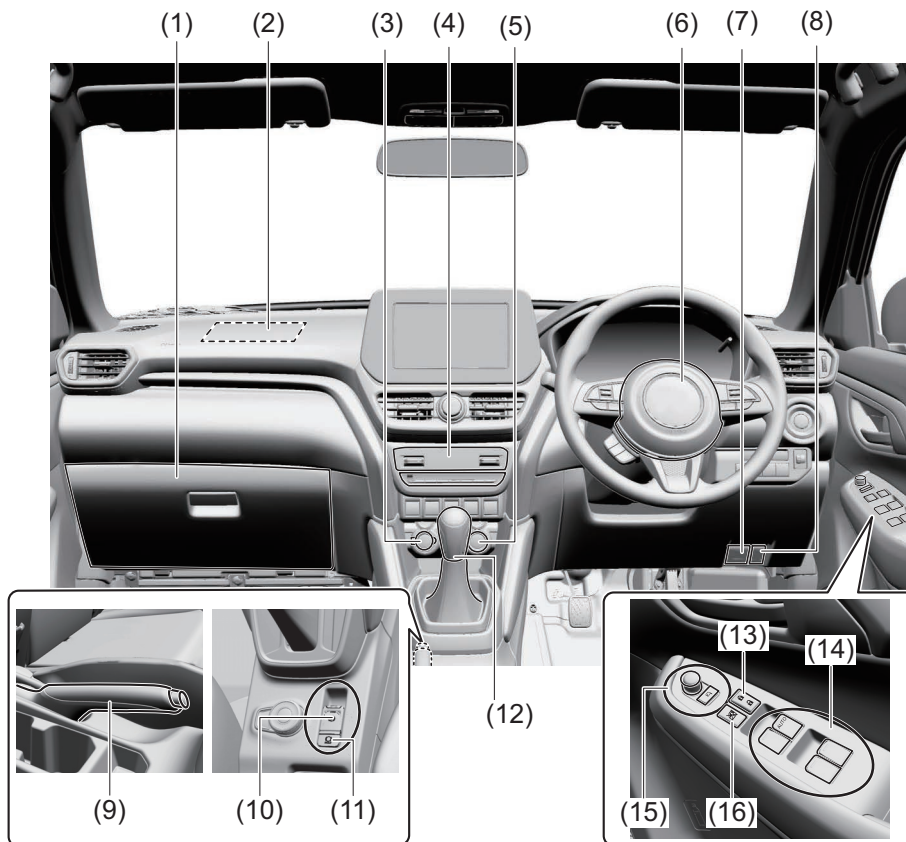


76TS10010

QUICK GUIDE

Instrument Panel 1

- (1) Hazard Warning Switch (P.3-25)
- (2) Hands-free Switch (if equipped) (P.7-45)
- (3) Voice Recognition Switch (if equipped) (P.7-45)
- (4) Remote Audio Controls (P.7-44)
- (5) Windshield Wiper and Washer Lever (P.3-25)/
Rear Window Wiper/Washer Switch (P.3-28)
- (6) Instrument Cluster (P.4-1, 4-38)
- (7) Head-up Display (if equipped) (P.5-65)
- (8) Cruise Control Switches (if equipped) (P.5-62)
- (9) Lighting Control Lever (P.3-19)/
Turn Signal Control Lever (P.3-24)
- (10) Heated Rear Window Switch (P.3-29)
- (11) Fuses (P.9-27)
- (12) Drink Holder (P.7-14)
- (13) Tilt / Telescoping Steering Lock Lever (P.2-7)
- (14) Engine Switch / Power Switch (P.5-3)

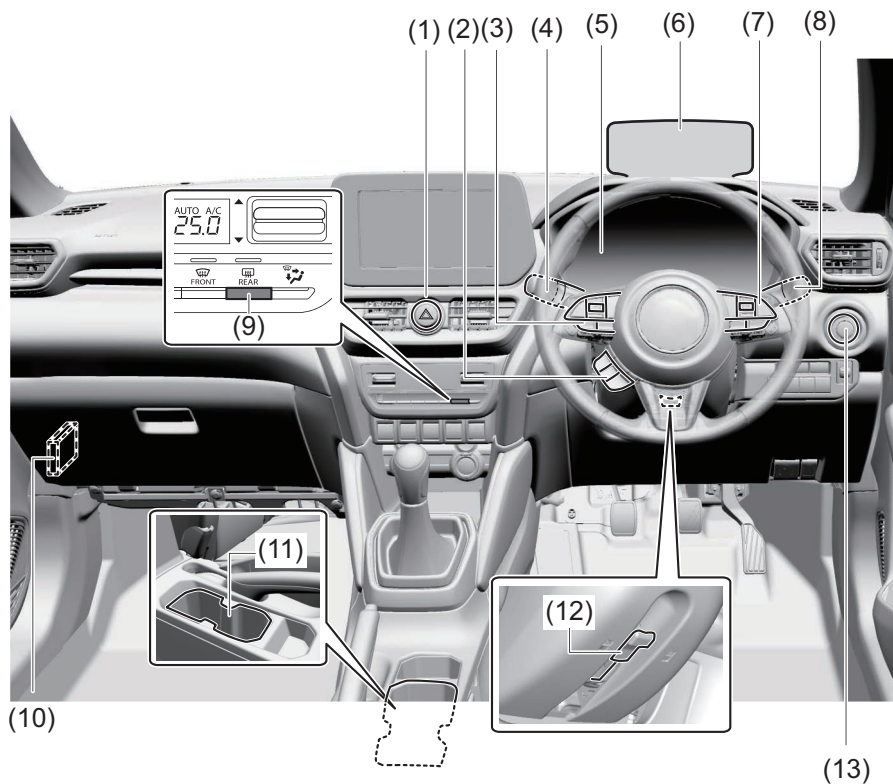


76TS10020

Instrument Panel 2

- (1) Down Switch* (if equipped) (P.5-65)
- (2) Up Switch* (if equipped) (P.5-65)
- (3) Brightness Control Switch* (if equipped) (P.5-65)
- (4) Head-up Display Switch* (if equipped) (P.5-65)
- (5) Headlight Leveling Switch (P.3-23)
- (6) Camera Switch (if equipped) (P.5-73)
- (7) Hill Descent Control Switch (if equipped) (P.5-112)
- (8) ESP[®] OFF Switch (P.5-110)
- (9) ENG A-STOP OFF Switch (if equipped) (P.5-51)
- (10) Changeover / Selector Switch Position (for CNG model)

*: For Head-up display

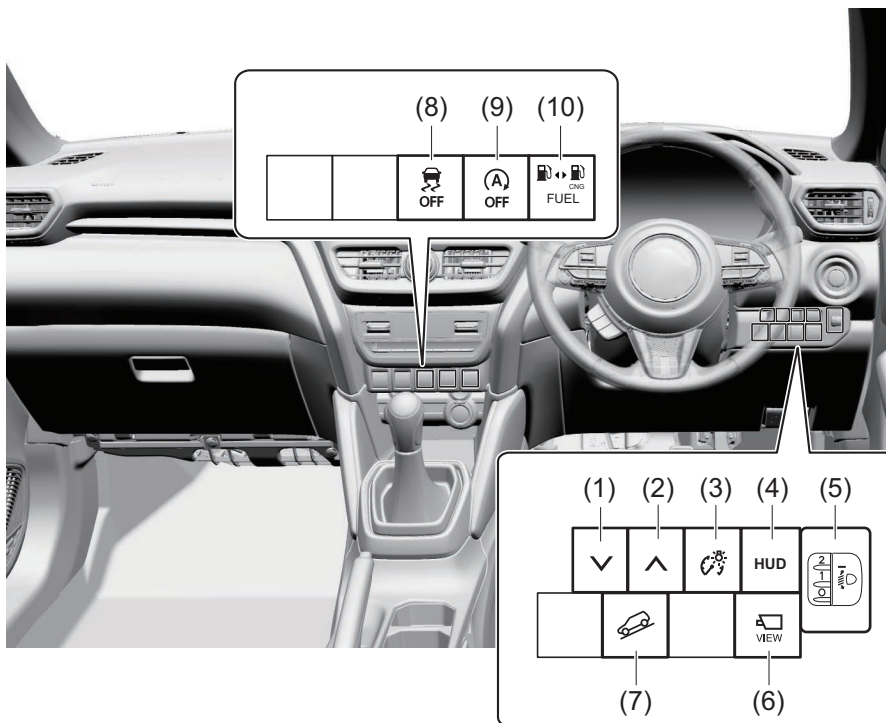


QUICK GUIDE

Luggage Compartment

- (1) Luggage Compartment Cover (if equipped) (P.7-31)
- (2) Luggage Compartment Board (P.7-32)
- (3) Luggage Compartment Hook (P.7-31)
- (4) Accessory Socket (if equipped) (P.7-13)
- (5) Luggage Compartment Light (if equipped) (P.7-11, 9-50, 12-4)
- (6) Tool boxes (P. 10-7)
- (7) Jack (P.10-9)
- (8) Flat tyre repair kit (P. 10-14)
- (9) Jack Handle (P.10-7)
- (10) Towing Eye (P.10-3)
- (11) Wheel Wrench (P.10-7)
- (12) Warning Triangle (P.10-23)

K15C Petrol model

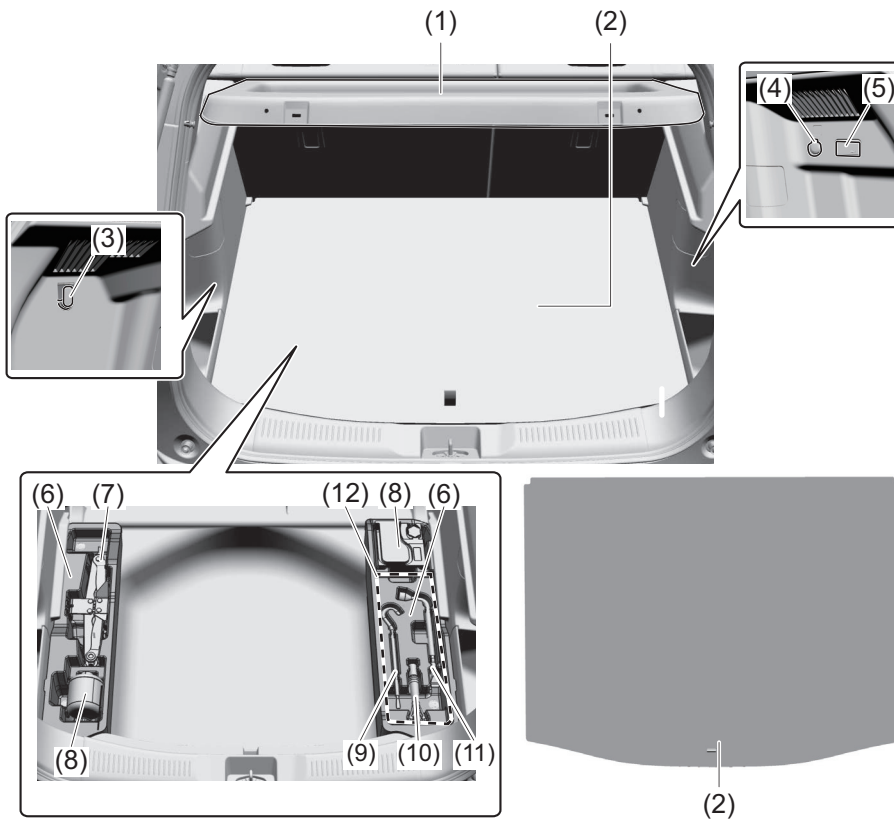


76TS10191

Luggage Compartment

M15D model

- (1) Luggage Compartment Cover (P.7-31)
- (2) Luggage Compartment Board FR (P.7-32)
- (3) Luggage Compartment Board RR (P.7-32)
- (4) Luggage Compartment Board R (P.7-32)
- (5) Luggage Compartment Board L (P.7-32)
- (6) Luggage Floor Carpet
- (7) Luggage Compartment Hook (P.7-31)
- (8) Accessory Socket
- (9) Luggage Compartment Light (if equipped) (P.7-11, 9-50, 12-4)
- (10) Jack (P.10-7)
- (11) Towing Eye (P.10-7)
- (12) Wheel Wrench (P.10-7)
- (13) Tool Box
- (14) Flat tyre repair kit (P. 10-14)
- (15) Jack Handle (P.10-9)
- (16) Warning Triangle (P.10-23)

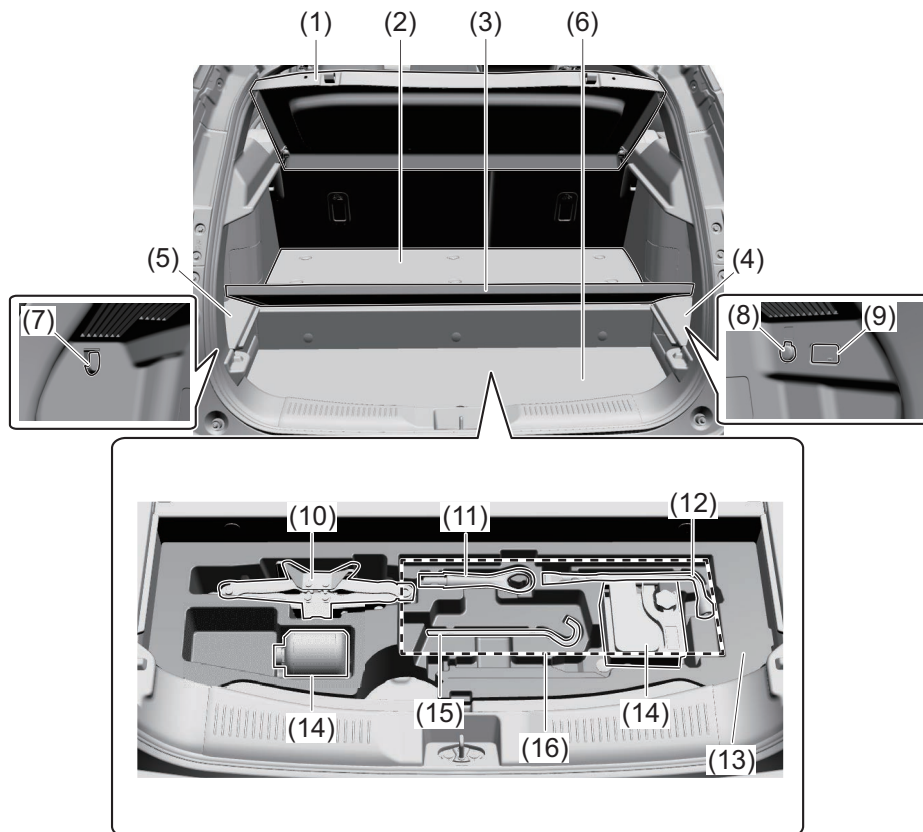


76TS10031

QUICK GUIDE

Key

- (1) Keyless Push Start System Remote
Controller (P.3-7)
Keyless Push Start System (P.5-8)
Starting Engine (P.5-13)
- (2) Key (P.3-1)
Door Locks (P.3-1)

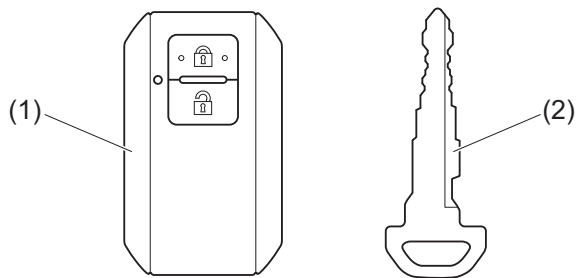


76T010010

Warning Lights and Indicators

Warning Lights


Instrument cluster (Type A)

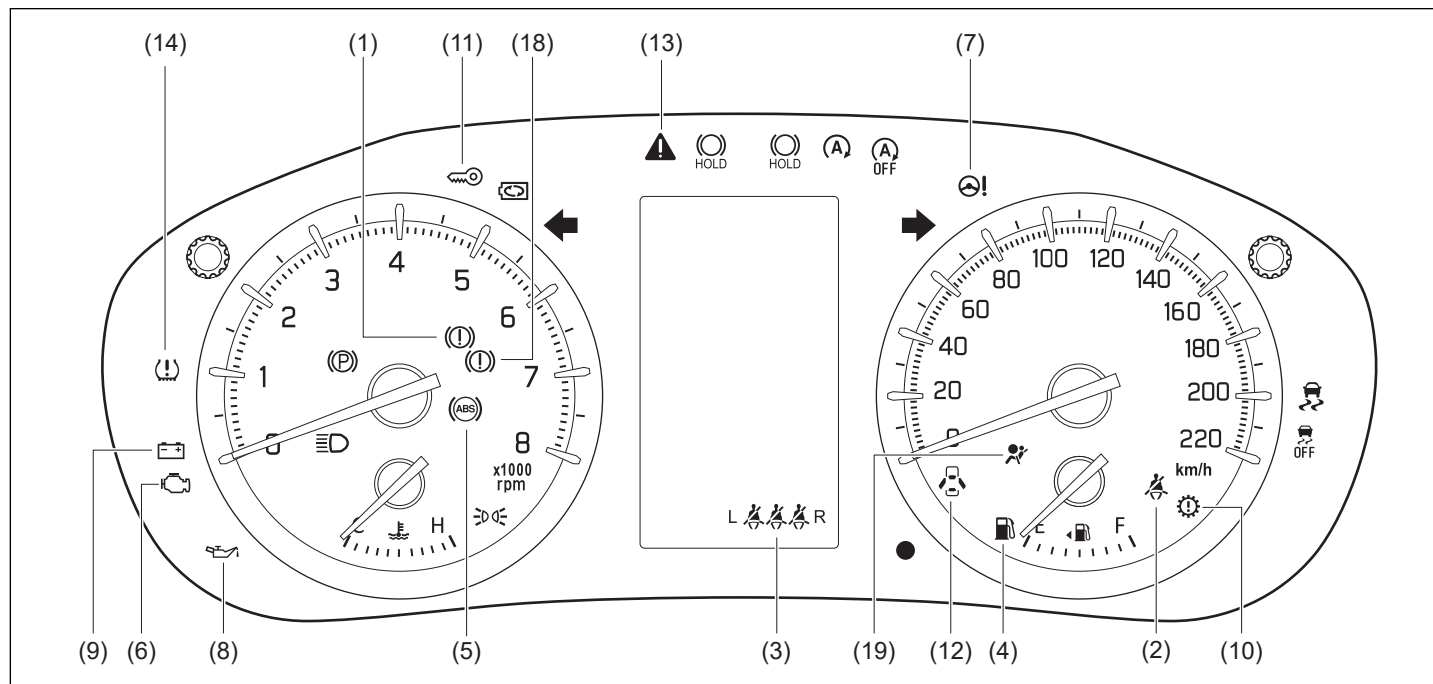

76TS10231


QUICK GUIDE

Instrument cluster (Type B) K15C engine model

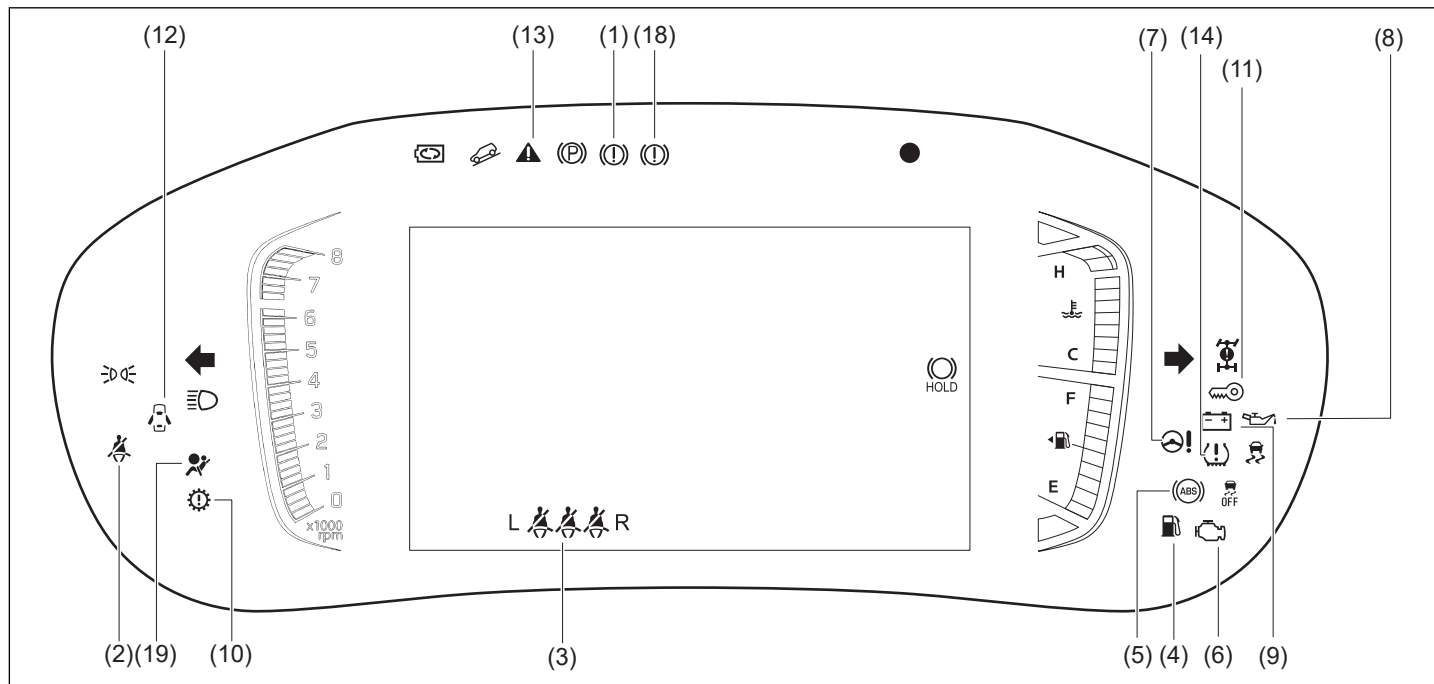

76TS11005

M15D engine model

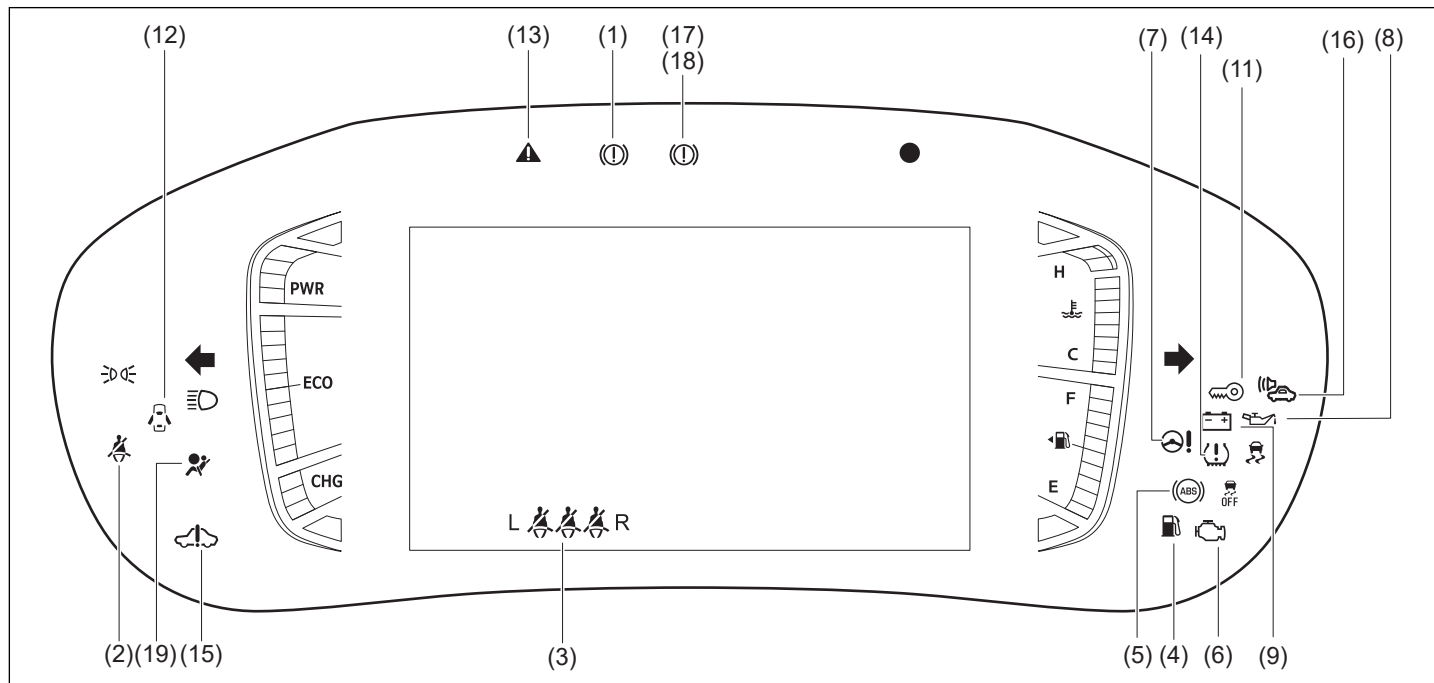

76TS01005

QUICK GUIDE

- If a warning light continues to be lit or is blinking, there may be a problem with the vehicle or the system. Carefully read the following reference information and consult with a Maruti Suzuki authorized workshop.
- It is considered normal that warning lights and indicators marked with an asterisk (*) are lit when pressing the engine switch or the power switch to change the ignition mode to ON (i.e., high engine coolant temperature warning light initially lights up in red). If such lights do not light up, consult with a Maruti Suzuki authorized workshop.


Warning light			Color	Name
(1)		*	Red	Brake System Warning Light
(2)			Red	Driver's Seat Belt Reminder Light / Front Passenger's Seat Belt Reminder Light
(3)	L  R		Red	Rear Seat Passenger's Seat Belt Reminder Light (Left / Center / Right)
(4)			Yellow	Low Fuel Warning Light
(5)		*	Yellow	Anti-lock Brake System (ABS) Warning Light
(6)		*	Yellow	Malfunction Indicator Light
(7)		*	Yellow	Electric Power Steering Light

Warning light			Color	Name
(8)		*	Red	Engine Oil Pressure Warning Light
(9)		*	Red	Charge Warning Light
(10)		*	Yellow	Transmission Warning Light (Automatic Transmission models)
(11)		*	Yellow	Immobilizer/Keyless Push Start System Warning Light
(12)			Red	Open Door Warning Light
(13)		*	Yellow	Master Warning Indicator Light
(14)		*	Yellow	Low Tyre pressure Warning Light (if equipped)
(15)		*	Red	Hybrid System Warning Light (M15D engine model)

QUICK GUIDE

Warning light			Color	Name
(16)		*	Orange	Acoustic Vehicle Alerting System Warning Light (if equipped)
(17)		*	Orange	Brake System Warning Light (M15D engine model)
(18)		*	Orange	Brake System Warning Light (vehicles with electric parking brake)
(19)		*	Red	Airbag Warning Light


Indicators Instrument cluster (Type A)

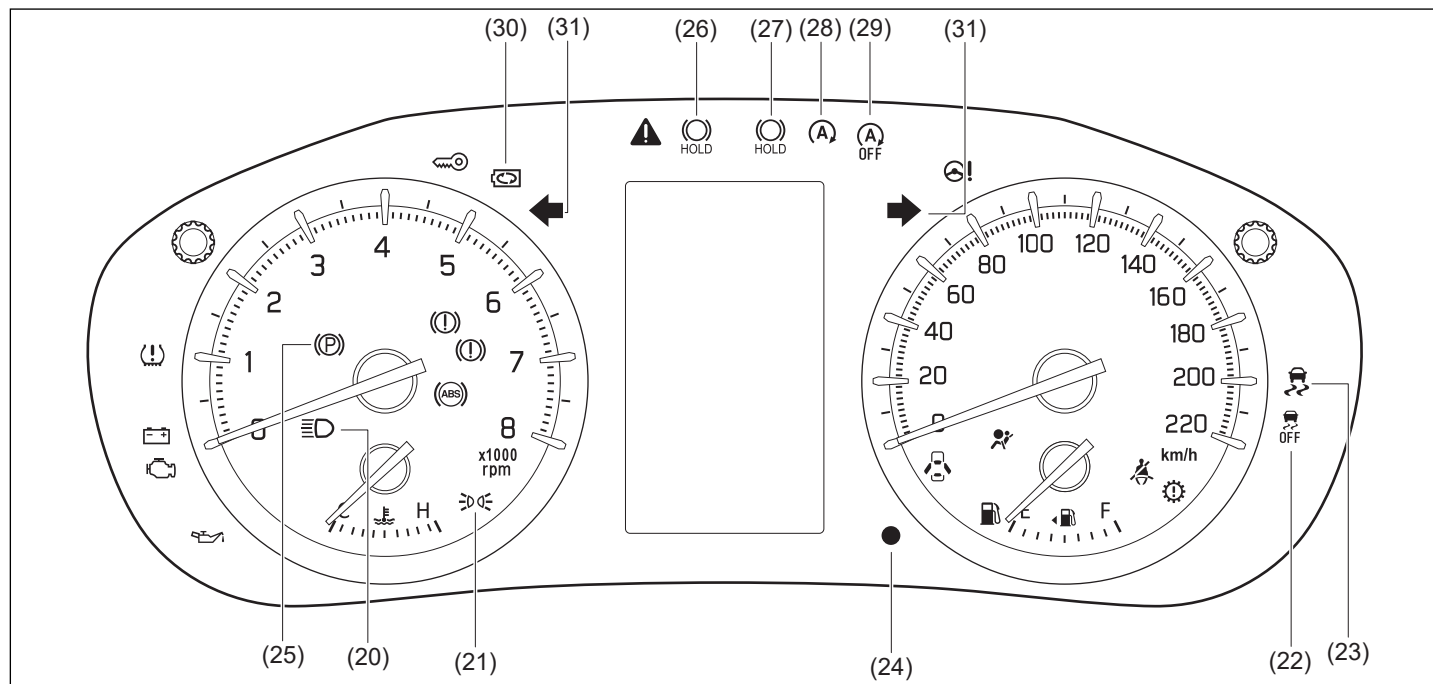

76TS10091


QUICK GUIDE

Instrument cluster (Type B) K15C engine model

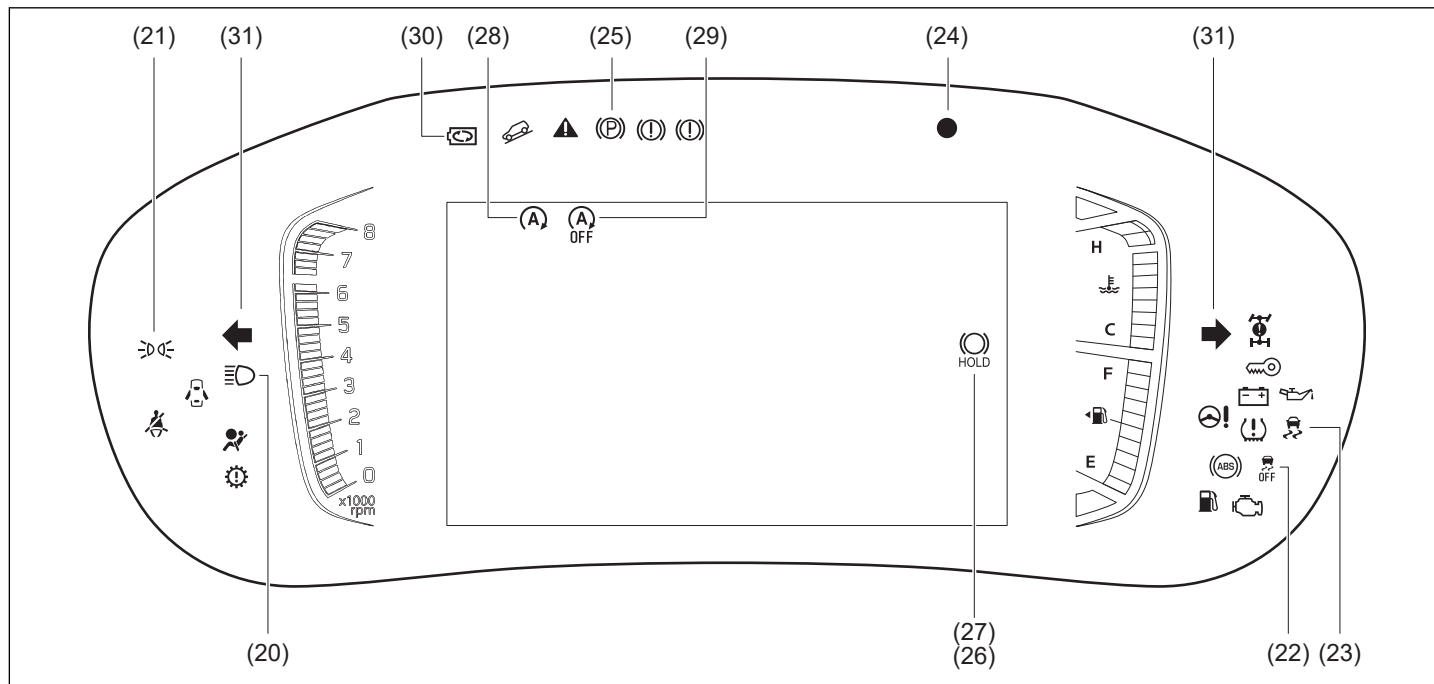

76TS11003

M15D engine model

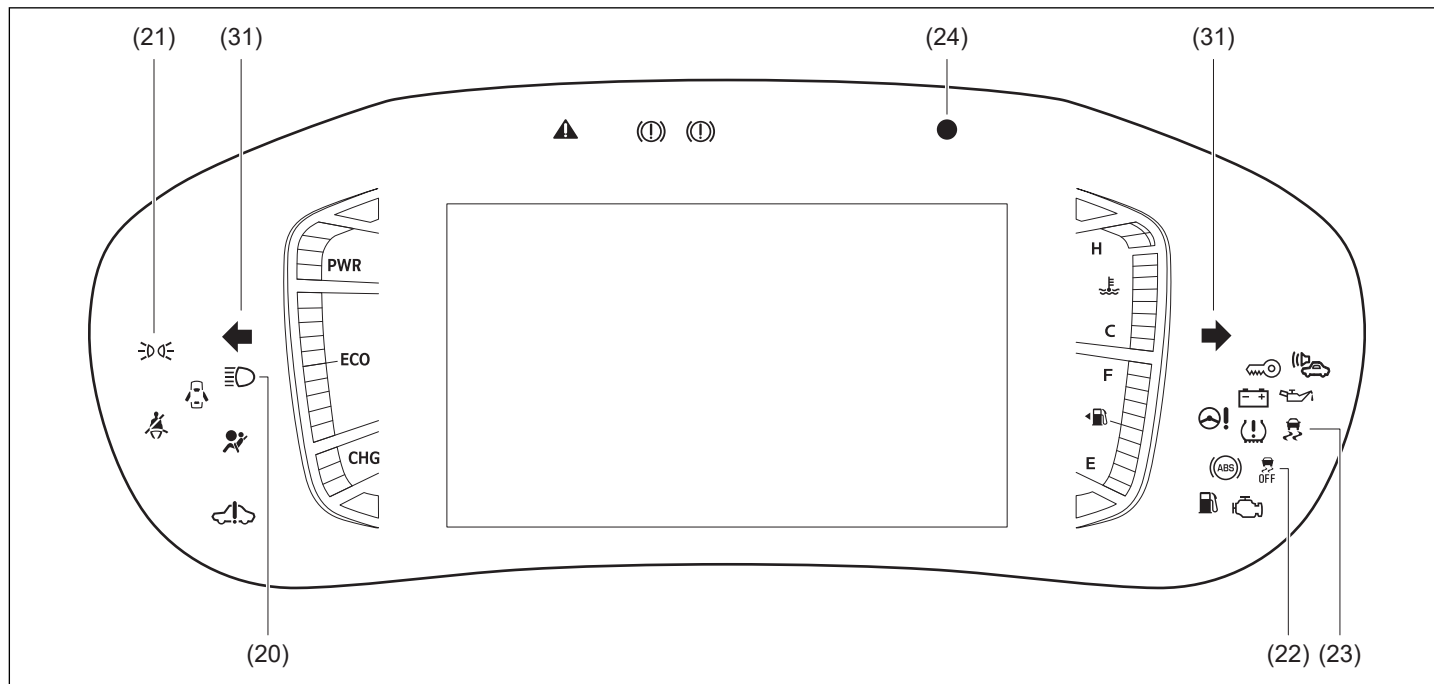

76TS01003

QUICK GUIDE

Indicator			Color	Name
(20)			Blue	Main Beam (High Beam) Indicator Light
(21)			Green	Illumination Indicator Light
(22)		*	Orange	ESP® OFF Indicator Light
(23)		*	Orange	ESP® Warning Light
(24)			Red	Security System Indicator
(25)		*	Red	Electric Parking Brake Operation Indicator Light (if equipped)
(26)		*	Green	Brake Hold Operation Indicator Light (if equipped)
(27)		*	White	Brake Hold Standby Indicator Light (if equipped)

Indicator			Color	Name
(28)			Green	ENG A-STOP Indicator Light (if equipped)
(29)			Orange	ENG A-STOP OFF Indicator Light (if equipped)
(30)			White	Deceleration Energy Regenerating Indicator Light (if equipped)
(31)			Green	Turn Signal Indicators

QUICK GUIDE

Warning Buzzer

- *1: The master warning  in the instrument cluster blinks. At the same time, the message will be shown on the information display to inform the driver of the vehicle condition and the remedy.
- *2: The message will be shown on the information display to inform the driver of the vehicle condition and the remedy.

When	Warning buzzer	Instrument cluster	Cause and remedy
When one of the doors or the engine hood is opened	Interior buzzer	 Blinks every 2 seconds	The security system warning is being activated. You can stop the warning by either of the following operations: • Unlock the doors using the keyless push start system remote controller or the request switch. • Press the engine switch or the power switch to change the ignition mode to ON.
	• Beeping at short intervals for approx. 10 seconds		
When the engine switch or the power switch is pressed to change the ignition mode to ON	Interior buzzer	 Blinks rapidly for approx. 8 seconds	Indicates that a security system has been activated while the vehicle has been parked; check the vehicle to make sure that it is not broken into or nothing is stolen.
	• Beeping 4 times		
	Interior buzzer	*1	The steering wheel lock has not been released. With load not applied, turn the steering wheel to the left or right so as to press the engine switch or the power switch again.
	• Chime (once)		
When the engine switch or the power switch is in ON mode	Interior buzzer	 Lights up	The fuel level is low. Refuel soon.
	• Chime (once)		

When	Warning buzzer	Instrument cluster	Cause and remedy
When driving	Interior buzzer	 Blinks *1	The driver does not wear his/her seat belt. Stop the vehicle in a safe place and wear your seat belt. The front or rear passenger(s) does not wear his/her seat belt. Wear the seat belt.
	• Beeping at short intervals for approx. 95 seconds		
	Interior buzzer	L   R Blinks *1	One of the doors is not completely closed. Stop the vehicle in a safe place and close all doors completely.
	• Beeping at short intervals for approx. 35 seconds		
	Interior buzzer	 Lights up *1	
	• Chime (once)		
When opening the driver's door	Interior buzzer	 Lights up *1	The headlights and/or the position lights are left on. Turn them off.
	• Continuous beep		
When the engine switch or the power switch is in ON mode	Interior buzzer	 Blinks every 1 second *1	There may be a problem with the keyless push start system. Consult with a Maruti Suzuki authorized workshop.
	• Chime (once)		

QUICK GUIDE

When	Warning buzzer	Instrument cluster	Cause and remedy
When the engine switch or the power switch operated	Interior buzzer	 Lights up *1	The remote controller may be outside the vehicle or its battery may have become discharged. Bring the remote controller in the vehicle or touch the engine switch or the power switch with the remote controller.
	• Beeping twice		
When the engine switch or the power switch is pressed to change the ignition mode to ON or ACC	Exterior and/or interior buzzers	 Blinks *1	When the engine switch or the power switch was pressed to change the ignition mode to ON or ACC, the remote controller was detected. However, when starting the engine, the remote controller was not detected. Place the remote controller in the interior workable area and then press the engine switch or the power switch again.
	• 5 beeps repeating at short intervals		
	Interior buzzer		
When one of the door is opened or closed	Exterior and/or interior buzzers	 Blinks *1	The remote controller may be outside the vehicle. Bring the remote controller in the vehicle.
	• 5 beeps repeating at short intervals		
When opening the driver's door	Interior buzzer	—	Press the engine switch or the power switch to change the ignition mode from ON or ACC to LOCK (OFF).
	• Beeping at short intervals		
	Interior buzzer	—	The steering lock fails to engage due to a fault in the system when the ignition mode is turned to LOCK (OFF) by pressing the engine switch or the power switch. Have the vehicle inspected by a Maruti Suzuki authorized workshop.
	• Continuous short beeps		

When	Warning buzzer	Instrument cluster	Cause and remedy
When pushing the request switch	Exterior buzzer	—	The engine switch or the power switch is in ACC or ON mode. Press the engine switch or the power switch to change the ignition mode to LOCK (OFF).
	• Beeping at short intervals for approx. 2 seconds	—	The remote controller is left inside the vehicle. Take the remote controller outside the vehicle.
		 Lights up *2	Any door (including the tailgate) is open. Close all doors completely
When pushing LOCK button on the remote controller	Exterior buzzer	 Lights up *2	Any door (including the tailgate) is open. Close all doors completely
	• Beeping at short intervals for approx. 2 seconds		
When stopping or backing up the vehicle	Interior buzzer	—	Rear parking sensors detect an obstacle on the rear side of the vehicle. Check the surrounding area directly with your eyes and the mirrors, and back up the vehicle slowly.
When using the shift paddle (if equipped)	Interior buzzer	—	The gear position is not set in the desired position by operating the paddle shift switch. Select the proper gear position for the vehicle speed.
	• 2 beeps at short intervals		

QUICK GUIDE

Vehicles with Automatic Transmission model

When	Warning buzzer	Instrument cluster	Cause and remedy
When operate the gearshift lever with depressing the brake pedal.	Interior buzzer	—	Even though the gearshift lever is shifted, the gear is not shifted to the desired selector position. Shift the gearshift lever into “P” with depressing the brake pedal, and then operate the gearshift lever again.
	• Beeps at short intervals		
When operate the gearshift lever without depressing the brake pedal.	Interior buzzer	—	
	• Continuous beeps		

Vehicles with ENG A-STOP System

When	Warning buzzer	Instrument cluster	Cause and remedy
When the engine is stopped automatically by the ENG A-STOP system	Interior buzzer	—	The engine stalled because the hood is opened after the engine is stopped automatically. To restart the engine, follow the procedure below. 1) Set the parking brake firmly, and then place the gearshift lever in the “P” position. 2) Securely close the engine hood. 3) Press the engine switch or the power switch to restart the engine.
	• 2 beeps		

Vehicles without Electric Parking Brake

When	Warning buzzer	Instrument cluster	Cause and remedy
When driving	Interior buzzer	 Lights up *1	The parking brake has not been released. Stop the vehicle in a safe place and release the parking brake.
	• 3 beeps repeating at short intervals		

Vehicles with Electric Parking Brake

When	Warning buzzer	Instrument cluster	Cause and remedy
When driving	Interior buzzer	 Lights up *1	The electric parking brake has not been released. Stop the vehicle in a safe place and release the parking brake.
	• Continuous short beeps		
When stopping	Interior buzzer	—	The electric parking brake has not been released, or the brake hold has not been set. Confirm safety, and release the electric parking brake or set the brake hold again.
	• Continuous short beeps		
When stopping	Interior buzzer	*2	The electric parking brake has been activated automatically in response to a request from other function (system).
	1 beep		
When stopping	Interior buzzer	*1	Since the vehicle may move, promptly depress the brake pedal, and park the vehicle in a place that is not on a steep slope.
	• Continuous short beeps		

QUICK GUIDE

FAQ

Q&A

Refer to the following list of frequently asked questions.

Door opening / closing

Q. The keyless entry system does not work. What should I do?

A. There is a possibility that something is interfering with the function of the keyless entry system. Refer to “Keyless Push Start System Remote Controller” in the “BEFORE DRIVING” section.

A. If the battery of the keyless push start system remote controller is dead, replace it. Refer to “Battery Replacement” in the “BEFORE DRIVING” section.

Q. A loud alarm sounds when opening the door. What does this mean?

A. The security system has been activated. Press the engine switch or the power switch to change the ignition mode to ON to stop the alarm. For the correct method of handling, refer to “Security System” in the “BEFORE DRIVING” section.

Window glass

Q. How can I clear fog on the inside of the windshield and door glass areas?

A. Use the defroster switch. Refer to “Automatic Heating and Air Conditioning System (Climate Control)” in the “OTHER CONTROLS AND EQUIPMENT” section.

Q. How can I clear fog on the inside of the rear window glass?

A. Use the heated rear window switch. Refer to “Heated Rear Window Switch” in the “BEFORE DRIVING” section.

Tyres

- Q. I get a flat tyre. What should I do?
- A. Depending on the tyre conditions, you can repair the flat tyre by the flat tyre repair kit, or change the flat tyre with a spare tyre (optional). Refer to “Flat tyre repair kit” or “Tyre changing tool” section.

Running out of battery

- Q. The battery runs out and the engine does not start. What should I do?
- A. Connect the battery of a vehicle for assistance to jump leads and start the engine. Refer to “Jump-starting Instructions” in the “EMERGENCY SERVICE” section.

Engine oil

- Q. I would like to change the engine oil. What should I do?
- A. Refer to “Engine Oil and Filter” in the “INSPECTION AND MAINTENANCE” section and “Specifications” in the “SPECIFICATIONS” section.

ENG A-STOP system (if equipped)

- Q. The ENG A-STOP system does not work. What should I do?
- A. Refer to “ENG A-STOP System (Engine Auto Stop Start System) (if equipped)” in the “OPERATING YOUR VEHICLE” section.

QUICK GUIDE


Electrical equipment

Q. The headlights or brake lights do not light up. What should I do?

A. Check the light bulbs. Refer to “Bulb Replacement” in the “INSPECTION AND MAINTENANCE” section and “Specifications” in the “SPECIFICATIONS” section.

Q. I cannot use an electrical device. What should I do?

A. Check the fuses. Refer to “Fuses” in the “INSPECTION AND MAINTENANCE” section.

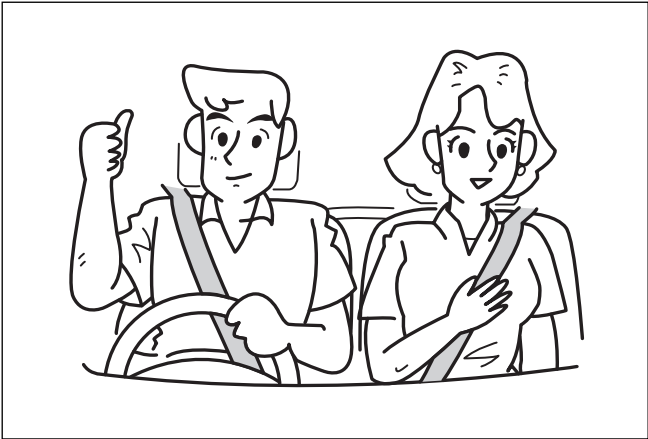

76TM02010


FOR SAFE DRIVING

Driver's Seat Floor	2-1
Seat Belts and Child Restraint Systems	2-2
Front Seats	2-5
Tilt / Telescoping (if equipped) Steering Lock Lever	2-8
Mirrors	2-8
Rear Seats	2-14
Seat Utility	2-15
Safety for Child	2-17
Seat Belt	2-21
Handling and Care for Seat Belt	2-28
Seat Belt Pretensioner System (Only for Front Seat)	2-30
Seat Belt Force Limiter System (Only for Front Seat)	2-31
Child Restraint Systems	2-32
Supplemental Restraint System (Airbags)	2-48
When Driving the Vehicle with SRS Airbag System	2-51
Handling for Airbags	2-54
Function of Airbags	2-57
When Starting the Engine	2-65
When Loading the Luggage	2-66
Hybrid system features (if equipped)	2-68

FOR SAFE DRIVING

Driver's Seat Floor Floor Mats

Example for genuine floor mat

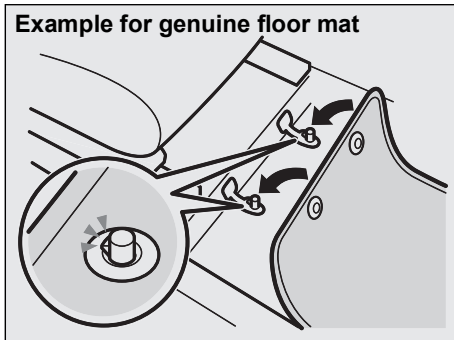

55T020010

To prevent the driver's side floor mat from sliding forward and possibly interfering with the operation of the pedals, Maruti Suzuki genuine floor mats are recommended.

Whenever you put the driver's side floor mat back in the vehicle after it has been removed, hook the floor mat grommets to the fasteners and position the floor mat properly in the footwell.


When you replace the floor mats in your vehicle with a different type such as all-weather floor mats, we highly recommend to use Maruti Suzuki genuine floor mats for proper fitting.

WARNING

Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.

- Check that the floor mat grommets are hooked to the fasteners.
- Never stack floor mats.
- Never use a floor mat which does not fit the floor as the same may cause hindrance/damage in vehicle and its functioning.
- Never use damaged floor mats.

Clearing the Floor

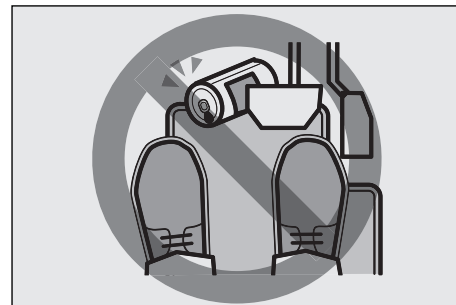


69RHS157

WARNING

Do not leave empty cans, etc. at your feet. These objects may interfere with pedal operation and cause accidents.

Seat Belts and Child Restraint Systems

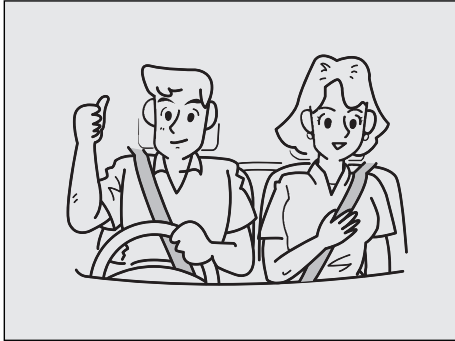

59RN02300

⚠ WARNING


- Wear your seat belts at all times.
- An airbag supplements or adds to the frontal collision protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times, even if driving for a very short distance, whether or not an airbag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a collision.

(Continued)


⚠ WARNING

(Continued)


- Do not modify, remove, disassemble seat belts. Doing so may prevent them from functioning properly and cause the risk of severe injury or death in the event of a collision.

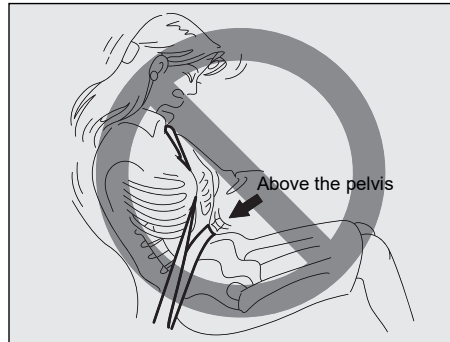

59RN02390

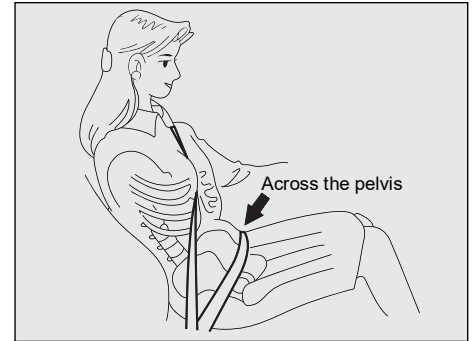

59RN02400

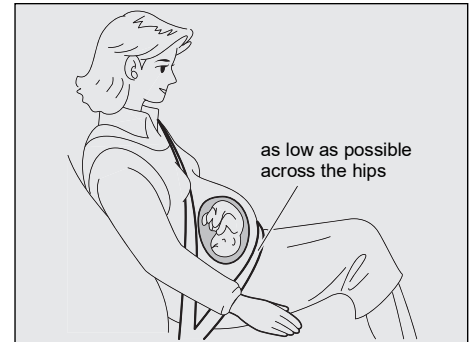

59RN02380

FOR SAFE DRIVING

⚠ WARNING

- Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.
- Ensure that all seat belts are worn correctly. An improperly worn seat belt increases the risk of injury or death if a collision occurs.
- Seat belts should always be adjusted as follows:
 - the lap portion of the belt should be worn low across the pelvis, not across the waist.
 - the shoulder straps should be worn on the outside shoulder only, and never under the arm.
 - the shoulder straps should be away from your face and neck, but not falling off your shoulder.
- Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than a snug belt.
- Check that seat belt latch plate (tongue) is inserted into the proper buckle especially in the rear seats. It is not possible to insert into the wrong buckles in the rear seats.

(Continued)

⚠ WARNING

(Continued)

- Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the illustration.
- Do not wear seat belts over hard, fragile, or sharp items such as pens, keys, eyeglasses, etc in pockets or on clothing. The pressure from seat belt on such items can cause injury in case of an accident.



59RN02440

- Do not hold a child on a passenger's lap. Even if the passenger holds the child tightly, he/she would not be supported enough in the event of an accident and it could result in a serious injury of the child.

(Continued)

⚠ WARNING

(Continued)

- Never use the same seat belt for more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.
- Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.
- Children aged 12 and under should ride properly restrained in the rear seat.

(Continued)

⚠ WARNING

(Continued)

- **Infants and small children should never be transported unless they are properly restrained.** Restraint systems for infants and small children can be purchased locally and should be used. Check that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.
- For child, if the seat belt irritates the neck or face, use a child restraint system appropriately for the child. The seat belts of your vehicle are principally designed for persons of adult size.
- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- Do not insert any items such as coins and clips into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

Adjustment before Driving



80J014

⚠ WARNING


- **When driving, do not adjust the steering wheel (only adjustable type with certain specifications), the seat, the inside rearview mirror or the outside rearview mirrors. Otherwise, there is the risk of mistaken operation of the steering wheel or reduced awareness of what is in front of you, possibly leading to an accident.**
- **Do not tilt the seatback further back than necessary. Otherwise, the head restraint and the seat belt cannot function as intended.**

Correct Use of Seat Belt



69RHS158

- Adjust the seat to the correct position. Sit your body fully into the seat.
- Make sure that the seat belt is not twisted.
- Make sure that you place the lap portion of the belt as low as possible across the pelvis.
- The upper belt should rest on the area midway between the shoulder and the base of the neck.
- Confirm that the belt is not twisted in any way, and remove any slack.

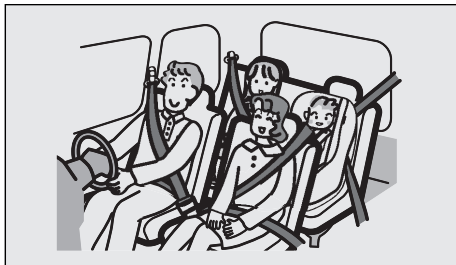

77R20050

WARNING

- If you do not fasten your seat belt properly, your body may not be restrained in a sudden braking and a collision. This may cause severe injury. Fasten your seat belt properly before driving.
- If all the passengers do not fasten their seat belts properly, their body may not be restrained in a sudden braking and a collision. This may cause severe injury. Ask all the passengers on the front passenger's seat and the rear seats to fasten their seat belts properly before driving.

Front Seats Seat Adjustment

WARNING

- Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Check that the driver's seat and seatback are properly adjusted before you start driving.
- To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, check that the seats are adjusted before the seat belts are fastened.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.


(Continued)

WARNING


(Continued)

- If you place a cushion, etc. between the seatback and your back, you may not be able to drive the vehicle in a correct posture. Also, the seat belt and the head restraint may not provide the best performance. This may cause severe injury in an accident. Do not place a cushion, etc. between the seatback and your back.
- Do not place any object under the front seat. If an object becomes caught under the front seat, the following may occur.
 - The seat will not be latched.
- Do not leave cigarette lighters or spray cans on the floor. If a cigarette lighter or spray can is on the floor, it may light accidentally when luggage is loaded or the seat is adjusted, causing a fire.


Manual seat adjustment

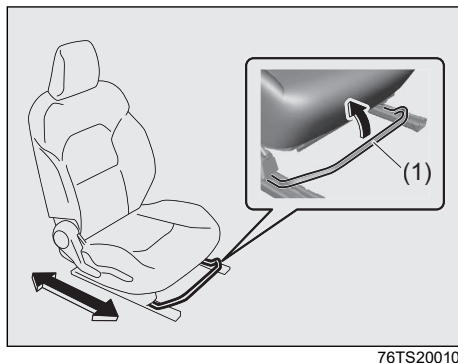

Seat position adjustment lever (1)
Pull the lever up and slide the seat.

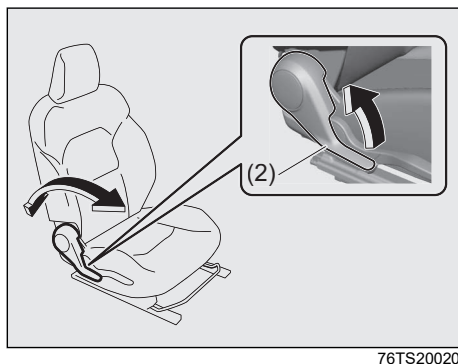

Seatback angle adjustment lever (2)
Pull the lever up and move the seatback.

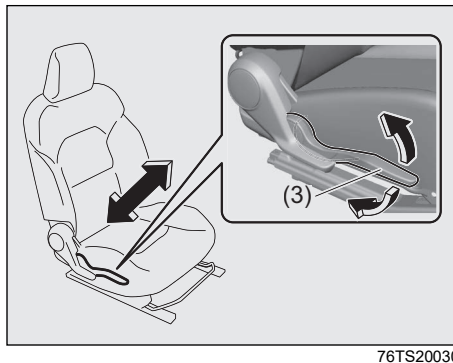

Seat height adjustment lever (3) (if equipped)
Pull the lever up to raise the seat. Push the lever down to lower the seat.

After adjustment, move the seat and seat-back back and forth to check if it is securely latched.


NOTE:


To operate the seat back smoothly, pull the seat back adjustment lever (2) in upward direction. Ensure to move seat back only after lever is moved to fully up position. After adjustment of seat back, release the lever gently. Check that seat back is locked by moving it forward and backward.

Power seat adjustment (if equipped)

NOTICE

If you adjust the power seat for a long time during the power switch is OFF or ACC, the lead-acid battery may discharge.

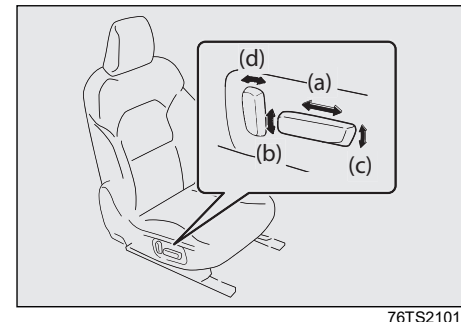


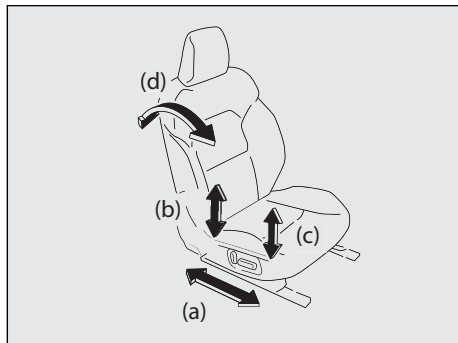

76TS22010

- (a) Seat position adjustment (driver's seat)
Operate the switch and slide the seat.
- (b) Seat height adjustment (driver's seat)
Operate the switch and raise/lower the entire seat.
- (c) Cushion angle adjustment (driver's seat)
Operate the switch and raise/lower the front of the cushion.
- (d) Seatback angle adjustment (driver's seat)
Operate the switch and adjust the angle of the seatback.

Head Restraints

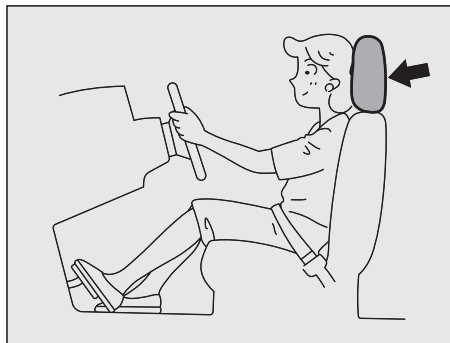

80J001

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident. Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.


⚠ WARNING

Make sure that you observe the following precautions. Failure to do so may result in serious injury or, in the worst case, death. Headrests are important parts to mitigate injuries to the neck and head in an accident.

- Do not drive with the head restraint removed.
- Do not install head restraints backwards.
- Adjust the head restraint to the correct position. After adjustment, press down to confirm that it does not move.
- Do not adjust the head restraint during driving.

NOTE:

It may be necessary to recline the seat back to provide enough overhead clearance to remove the head restraint.

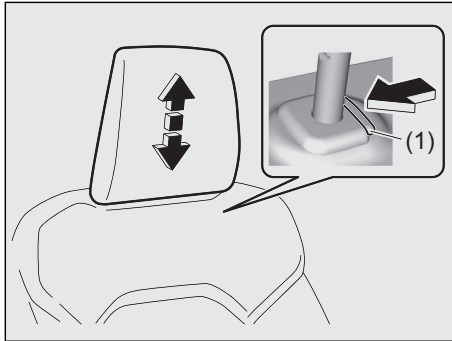

76TS20040

To raise the front head restraint, pull upward the head restraint until it clicks. To lower the head restraint, push down the head restraint while holding in the lock button (1). If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock button (1) and pull the head restraint all the way out.

Tilt/Telescoping (if equipped) Steering Lock Lever



76TS20130

- (1) LOCK
(2) UNLOCK

The lock lever is located under the steering column. To adjust the steering wheel height:

- 1) Push down the lock lever to unlock the steering column.
- 2) Adjust the steering wheel to the desired height and fore-aft position and lock the steering column by pulling up the lock lever.
- 3) Try moving the steering wheel up and down back and forth to check that it is securely locked in position.

WARNING

Never attempt to adjust the steering wheel while the vehicle is moving or you could lose control of the vehicle.


Mirrors

WARNING


- Failure to observe following point may result in loss of vehicle control and cause an accident, leading to death or serious injury. Always follow below points while driving.
- Always unfold all the outside rear-view mirrors and adjust properly before driving.
- Do not place objects in the rear of the vehicle which may hinder visibility or interfere with your vision from the rear window glass.

FOR SAFE DRIVING

Inside Rearview Mirror

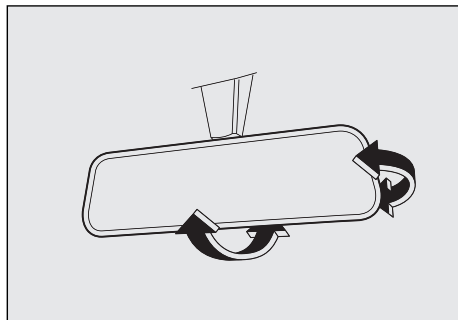

81M30360

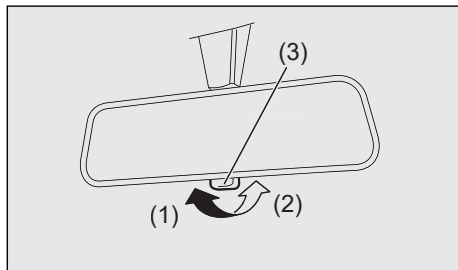

83S02352

- (1) Night driving
- (2) Day driving
- (3) Selector tab

You can adjust the inside rearview mirror by hand to see the rear of your vehicle in the mirror. To adjust the mirror, set the selector tab (3) to the day position, then move the mirror up, down or sideways by hand to obtain the best view.

When driving at night, you can move the selector tab (3) to the night position to reduce glare from the headlights of vehicles behind you.

WARNING

- If you adjust the inside rearview mirror while driving, you could lose control of the vehicle, resulting in an accident.


Adjust the inside rearview mirror before driving.

- Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you. Be aware that in this position you may not be able to see some objects that could be seen in the day position.

CAUTION

Do not modify the inside rearview mirror or install a non-genuine wide mirror. It could result in injury during accident.

Auto Dimming Rearview Mirror (if equipped)

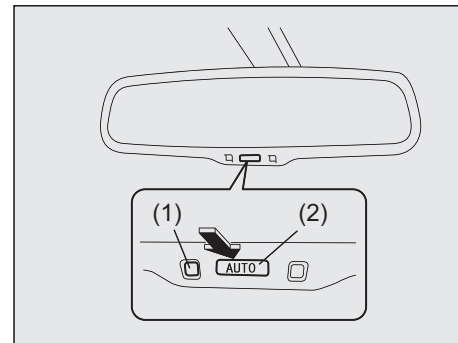


53SB20214

You can adjust the auto dimming rearview mirror by hand so you can see to the rear of your vehicle in the mirror. This rearview mirror has a function of automatically reducing glare from the lights of vehicles behind you. The function works when the ignition mode has been changed to "ON" by pressing the engine switch.

- The mirror is always set to the automatic dimming mode when the ignition mode is "ON".
- When the switch (2) is pushed, the green indicator (1) is lit, indicating that the mirror is set to the automatic dimming mode. To cancel the automatic dimming mode, push the switch (2); the indicator (1) then goes out.

- The auto dimming rearview mirror is automatically deactivated while the gear-shift lever is in the “R” position.

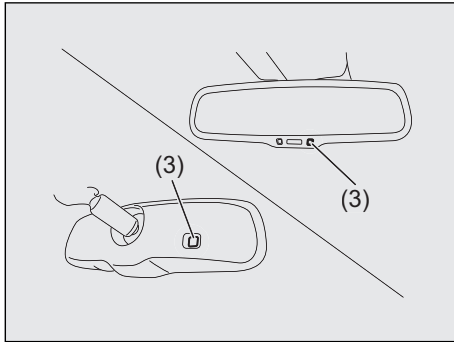

57L30020

⚠ WARNING

Do not touch or cover the sensor (3) since this may impair normal operation of the system. Blocking glare from the sensor with an object such as a shade, sticker, accessory or baggage may also impair proper operation of the system.

⚠ CAUTION

Do not modify the inside rearview mirror or install a non-genuine wide mirror. It could result in injury during accident.

NOTICE

Do not hook anything heavy on the mirror, or the mirror may break under the weight.

NOTE:


Auto dimming system may not work in any of the following cases:

- *Light from the rear is not directly focused to the sensor (3).*
- *Rear window glass is not transparent enough or is dark tinted glass.*

Outside Rearview Mirrors

Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

Electric mirrors

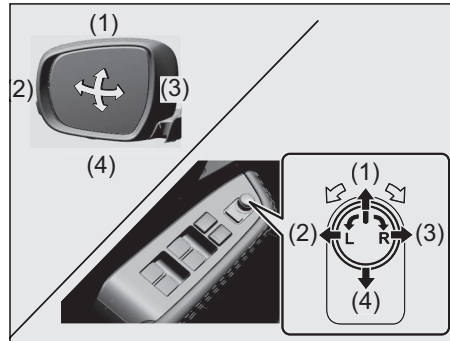

76TS20060

The switch to control the electric mirrors is located on the driver's door panel. You can adjust the mirrors when the ignition mode the ignition mode is ACC or ON. To adjust the mirrors:

- 1) Move the selector switch (1) to the left or right to select the mirror you wish to adjust.
- 2) Press the outer part of the switch (2) that corresponds to the direction in which you wish to move the mirror.
- 3) Return the selector switch (1) to the center position to help prevent unintended adjustment.


⚠ WARNING

If you adjust the inside rearview mirror while driving, you could lose control of the vehicle, resulting in an accident. Adjust the inside rearview mirror before driving.


NOTICE

- The electric type outside rearview mirror operates even though the ignition switch is in the ACC position. However, to prevent unnecessary battery discharge, do not adjust the mirrors longer than necessary while the engine is not running.
- The mirrors stop moving when they reach the maximum adjusting angles, but the motor continues to operate while the switch is pressed. Do not continue to press the switch in such a situation as the motor may be damaged.
- Do not attempt to adjust the outside rearview mirror by hand which may cause damage to the motor.
- Do not fold the electrical foldable outside rearview mirror by hand. It could cause motor failure.

Outside Rearview Mirror Folding Switch

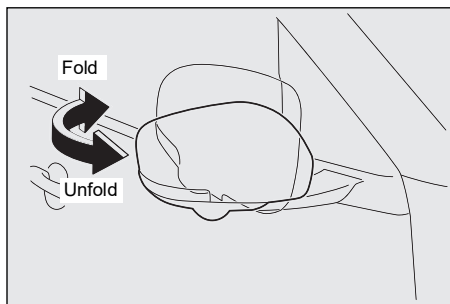

76TS20070

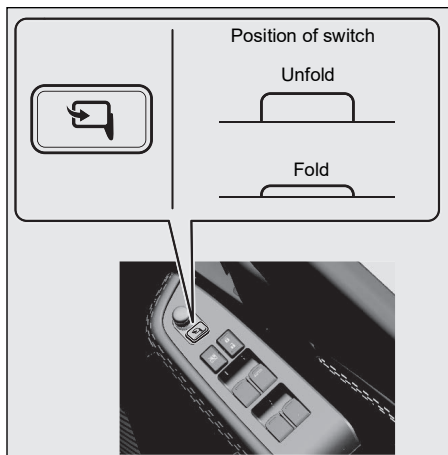

76TS20090

You can fold the mirrors when you park the vehicle in a narrow space. Push the folding switch to fold and unfold the mirrors. Make sure the mirrors are completely unfolded before you start driving.

⚠ WARNING

**If you drive the vehicle with the outside rearview mirrors folded, it may result in an accident.
Do not drive the vehicle with the outside rearview mirrors folded.**

⚠ CAUTION

Moving mirrors can pinch and injure a hand. Do not allow anyone's hand to get near the mirrors when folding and unfolding the mirrors.

NOTE:

- If you press the folding switch to open the outside rearview mirrors and simultaneously start the engine, then the outside rearview mirrors may get stuck during that moment. To open the outside rearview mirrors completely, again press the folding switch after starting the engine.
- Slight time difference in opening of both outside rearview mirrors is due to angular positioning of the driver seat.

Remote Folding Mirrors (if equipped)

When the outside rearview mirror folding switch is in the unfolded position, the outside rearview mirrors are folded or unfolded in conjunction with the door locking or engine switch operation.

- When you lock the doors (including the tailgate) by using the remote controller or pushing the request switch, the mirrors will be folded automatically.
- To unfold the mirrors, push the engine switch to change the ignition mode to ACC or ON.
- The factory setting is that the function is enabled. You can switch the function from enabled to disabled, and vice versa. To switch the function for your preference, refer to "How to switch the remote folding mirror function" in this section.

NOTICE

In a cold winter such as the mirrors are frozen, disable the function. If the mirrors are folded and unfolded repeatedly without thawing, the mirrors may be damaged.


NOTE:

- *If the doors are locked by using the key or lock knob, the mirrors will not be folded automatically.*
- *If the outside rearview mirror folding switch is in the folded position, the mirrors will not be unfolded automatically, even when the engine switch is pushed to change the ignition mode to ACC or ON.*
- *If any of the doors is not opened within about 30 seconds after the doors are unlocked by using the keyless push start system remote controller or request switch, the doors will be locked again and the mirrors will be folded automatically.*

How to switch the remote folding mirror function

When the ignition mode is LOCK (OFF), you can switch the function from the enabled state to the disabled state, and vice versa, using the following method.

- 1) Sit in the driver's seat and make sure that all doors are closed.
 - If any door is open, the open door warning light comes on.

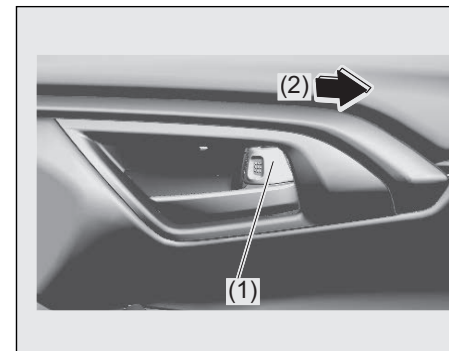


76TS20110

- 2) Turn the lock knob (1) on the driver's door rearward (2).


NOTE:

All operations included in the following steps 3) and 4) must be completed within 15 seconds.

FOR SAFE DRIVING

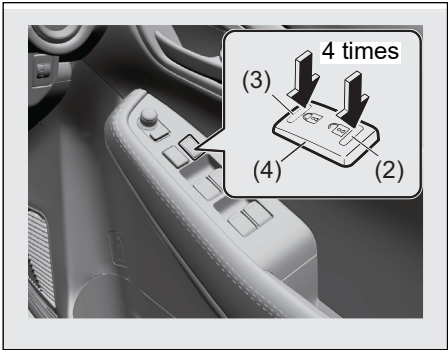

3) Push the lock end (3) (forward end) of the power door lock switch (4) to lock the doors, and then the unlock end (2) (backward end) to unlock the doors. Repeat these operations 4 times and finally push the lock end of the switch.

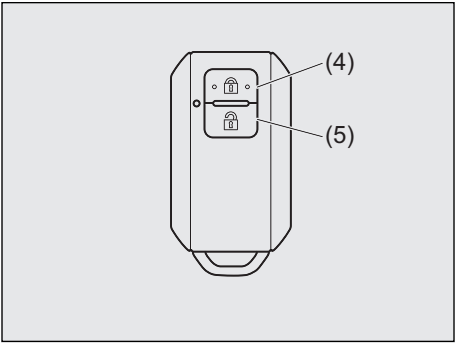

(4) LOCK button
(5) UNLOCK button

- 4) Push any of the buttons on the keyless push start system remote controller 3 times.
- Push any buttons described above you like.
 - During operation, the doors are not locked, unlocked, opened or closed.

Every time you perform the series of the above steps, the state of the remote folding mirror function changes from the currently selected one to the other. You can check whether the system is enabled or disabled by the number of interior buzzer beeps at the end of the procedure as follows.

System state	Number of beeps
Disabled	Once
	↕
Enabled	Twice

- If you cannot complete the operations in step 3) and 4) within 15 seconds correctly, the state of the remote folding mirror function will not change and the interior buzzer does not beep. Perform the procedure again from the beginning.

Rear Seats

Head Restraints

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident.

⚠ WARNING

- If you drive the vehicle with the head restraint removed, a passenger's backward tilting cannot be prevented in a collision from the backward and the impact to a passenger's head cannot be reduced in a sudden braking or a collision. This may cause severe injury. Never drive the vehicle with the head restraints removed.
- If the head restraint is installed back to front or it is not installed securely, the head restraint may not provide the best performance in case of emergency, resulting in severe injury. If the head restraint is installed back to front, you cannot adjust the height and install it securely. Make sure to install the head restraint securely in the right direction.

(Continued)

⚠ WARNING

(Continued)


- Being distracted by head restraint adjustment could lead to an accident. Do not attempt to adjust the head restraint while driving.
- If you try to install a child restraint system and it touches the head restraint, a child may be severely injured in a collision. When you install a child restraint system, adjust the height of the head restraint as high as possible or remove the head restraint for avoiding that the child restraint system touches the head restraint.

⚠ CAUTION


If you leave the removed head restraint in the vehicle, it may jump out and hit passengers or objects, resulting in injury or damage. Do not leave the removed head restraint in the vehicle.

NOTE:

It may be necessary to fold forward the seatback to provide enough overhead clearance to remove the head restraint.

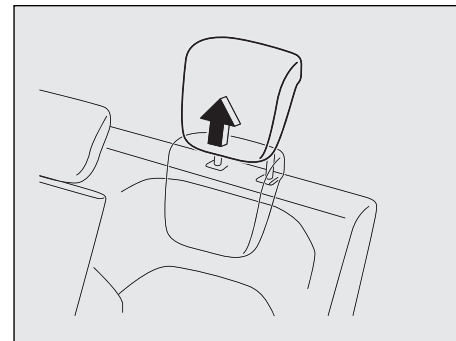

76TS20170

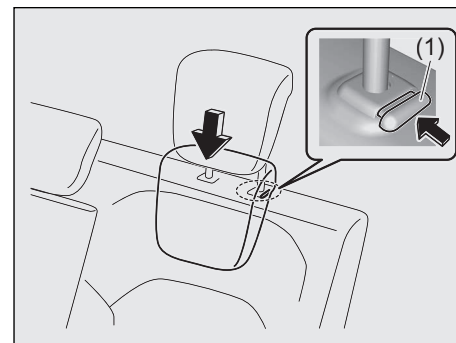

76TS20180


To raise the rear head restraint, pull up the head restraint until it clicks. To lower the head restraint, push down the head restraint while holding in the lock button (1). If a head restraint must be removed

FOR SAFE DRIVING

(for cleaning, replacement, etc.), push in the lock button (1) and pull the head restraint all the way out.

When installing a child restraint system, adjust the height of the head restraint or remove it for fitting the child restraint system, as necessary.

Rear center head restraint

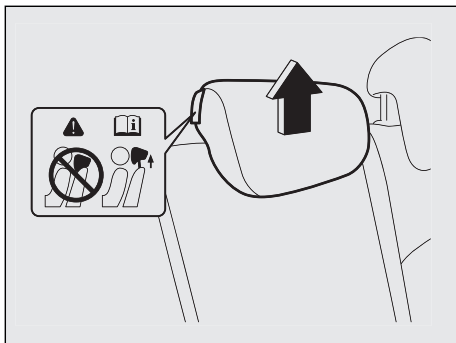

When using the rear center head restraint, pull it up and lock it securely before driving.

WARNING

Do not allow anyone to sit in the rear center seat with the rear center head restraint removed or in stowed position.


Seat Utility

Folding Rear Seats

The rear seats of your vehicle can be folded forward to provide additional cargo space.


To fold the rear seats forward:

- 1) Lower the head restraint fully.

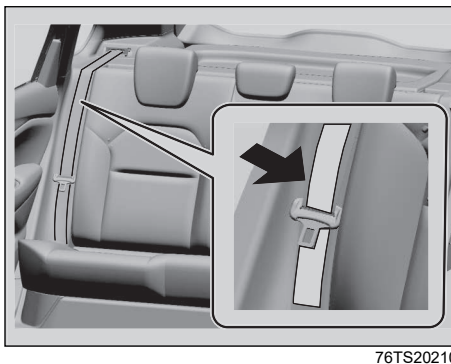

- 2) Move the outboard lap shoulder belts to the rear door side trims.

NOTICE
• When you move a seatback, make sure the seat belts are placed on the rear door side trims so the seat belts and buckles are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system. • Make sure the belt webbing is not twisted.

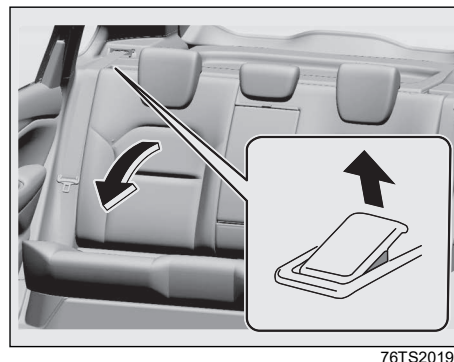

- 3) Slide the release lever on the top of each split seat in arrow direction, and fold the seatbacks forward.

NOTICE

After folding the rear seatback forward, do not allow any foreign material to enter the lock opening. This may cause damage to the inside of the lock and prevent the seatback from being locked securely.

⚠ WARNING

If you need to carry cargo in the passenger compartment with the rear seatback folded forward, secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatbacks.


To return the seat to the normal position, follow the procedure below.

⚠ CAUTION

When returning the rear seatback to the normal position, be careful that your finger is not caught between the lock and the striker.

NOTICE

When you move a seatback, make sure the seat belts are placed on the rear door side trims so the seat belts and buckles are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

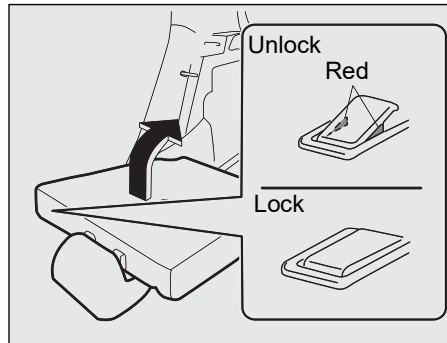

76TS20200

Raise the seatback until it locks into place.

After returning the seat, move the seatback back and forth to check if it is securely latched.

⚠ CAUTION

Do not put your hand into the rear seatback lock opening, or your finger may get caught and be injured.

⚠ CAUTION

After securing the rear seatback, check that it is locked securely. If it is not, red will appear in the release lever.

NOTICE


- When returning the rear seatback to the normal position, do not allow any foreign material to enter the lock opening. This may prevent the seatback from being locked securely.
- When returning the rear seatback to the normal position, handle it carefully by hand to avoid any damage to the lock itself. Do not push it by using some material or by applying excessive force.
- As the lock is designed exclusively for securing the rear seatback, do not use it for any other purpose. Incorrect use of it may cause damage to the inside of the lock and prevent the seatback from being locked securely.

FOR SAFE DRIVING

Safety for Child

For safety, carefully drive at lower speed than usual.

Place a Child in the Rear Seat

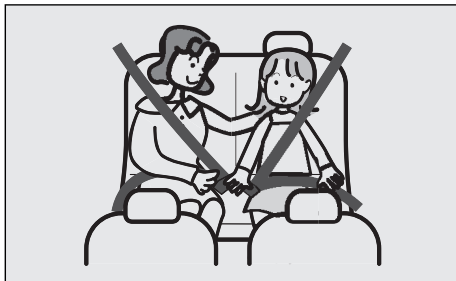

51K0188

- Seat a child next to an adult when possible, and ensure that the child can be visually monitored.
- Select an appropriate child restraint system suitable for the child's age and physical size.

WARNING

- If you do not use the child-proof lock, a child may open a door and the child may be thrown out, resulting in severe injury. To avoid this, use the child-proof lock setting.
- When it is necessary to seat the child who does not need a child restraint system in the front passenger's seat, observe the following point.
 - Slide the front passenger's seat all the way back. If the front passenger's seat is in a forward position, there is a risk of serious injury due to major impact if the front passenger's seat airbag was to be deployed.

(Continued)

WARNING

(Continued)



59RN04650

- If a child put a hand out of the window or lean on a door, the child may get severe injury by a strong impact of side or curtain airbag activation. Do not allow a child to put hand out of the window or lean on a door.
- Do not allow the hands or feet, etc., of a child near movable parts inside a vehicle, such as the armrests and the seat rails. Otherwise, there is the possibility of injury.

A Child Needs to Wear Seat Belt



69RHS159

WARNING

- Do not drive with a child on your lap. Even if you hold the child tightly, proper support is not possible, and in the event of a collision, etc., the child may get serious injury.
- If a child does not wear a seat belt, in a sudden braking and a collision, the child may get serious injury. Be sure to always have a child wear a seat belt.

(Continued)

WARNING

(Continued)

- If two or more people use a single seat belt, in a sudden braking and a collision, the seat belt may not provide the best performance, resulting in severe injury. Do not allow two or more people to use a single seat belt.




69RHS160

WARNING

- The seat belts of this vehicle are designed to be suitable for occupants of adult size. If the shoulder strap rests on the neck or chin of a child rather than the shoulder, or if the lap portion of the belt does not rest securely on the hipbone, ensure that the child is seated in a child restraint system placed in the rear seat. Failure to properly use a seat belt may result in serious injury to the child.
- Use a child restraint system securely fastened to the rear seat for any child that cannot hold their head upright or sit on their own.

FOR SAFE DRIVING

Do not Let a Child Play with Seat Belt

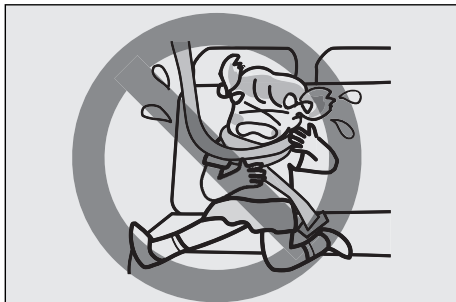

69RHS161

WARNING

If a child play with a seat belt, for example, if the child's body is wrapped by the seat belt, it may cause severe injury such as suffocation. In case of emergency, cut the seat belt with scissors.

Using the Child Restraint System

Refer to "Securing Child Restraint System by Seat Belt" in this section.

An Adult Needs to Open or Close Each Door or Window, and Adjust Seats

Only an adult should open or close each door or window and adjust seats, not to get a child's hands, arms, legs or neck, etc. caught in.



69RHS162

WARNING

- If the windows are not locked, a child may operate the windows by mistake or the other passengers may be caught in the windows. To avoid unintended operation of the power window by a child, use the window lock switch.

(Continued)

WARNING

(Continued)

- If you leave the power window in ready condition, it may cause unintended operation of the power window by a child, resulting in an accident.

When you leave the vehicle, make sure to press the engine switch to change the ignition mode to OFF, keep the key with you and leave the vehicle with your child.

Do not Let a Child Stick His/her Head or Hands out of the Window



69RHS163

⚠ WARNING

Ensure that a child does not put their hands or heads, etc., out the windows. Otherwise, serious injuries due to falling out or sudden braking may occur. Moreover, serious injury could also occur if a child were to come into contact with objects outside the vehicle.

Do not Leave a Child Unattended in the Vehicle




69RHS164

⚠ WARNING

When getting out of the vehicle, do not allow a child to stay in the vehicle without you.

- Unintended and wrong operations by a child may cause a fire or an accident from the vehicle start.
- As the inside temperature of the vehicle will become hot under the blazing sun, a child may suffer from heat stroke or dehydration, resulting in severe health problems or death in the worst case. Even if you turn on the air conditioner, do not leave a child alone in the vehicle.

Do not Place a Child in Luggage Compartment

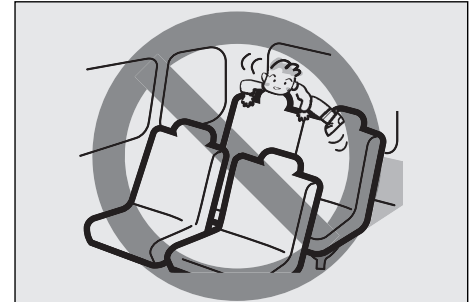

69RHS165

⚠ WARNING

The luggage areas do not feature a structure that can accommodate people. Do not allow a child to ride in such areas. Otherwise, there is the danger of accidents due to sudden braking, etc. Do not let a child play in luggage areas even while the vehicle is stopped on the road.


FOR SAFE DRIVING

Seat Belt

A Child Needs to Wear Seat Belt

Refer to "Safety for Child" in this section.

Information for Pregnant Woman and the Sick Person

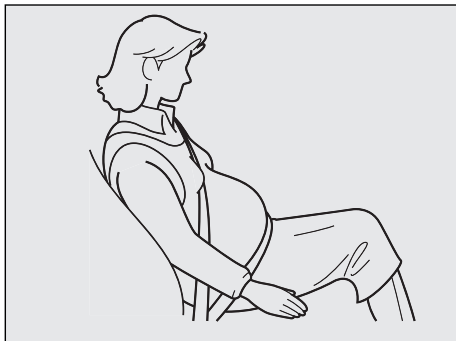

69RHS166

⚠ WARNING


- Those that are pregnant or sick/disabled must also wear their seat belts. However, in the event of a collision, there is the danger of heavy pressure focused on certain body areas. Consultation with a physician is recommended.
- For those that are pregnant, ensure that the lap portion of the belt is as low as possible across the pelvis, avoiding to touch the abdomen. Make sure that the shoulder strap rests halfway between the shoulder and the base of the neck, crossing the chest and avoiding to touch the abdomen.

Lap-shoulder Belt


Emergency locking retractor (ELR)

The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this happens, let the belt go back to unlock it, and then pull the belt across your body more slowly.

Safety reminder

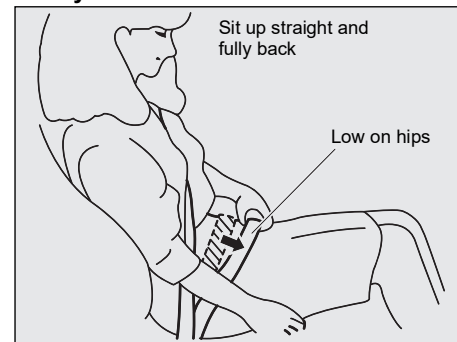


59RN02310

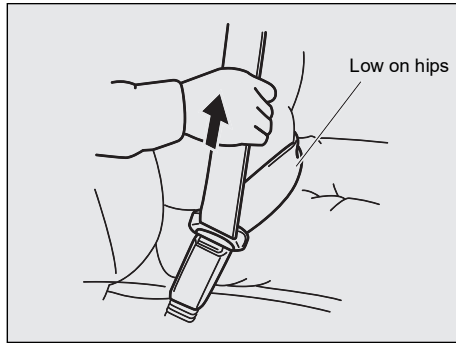


59RN02320

To reduce the risk of sliding under the belt during a collision, position the lap portion of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length of the diagonal shoulder strap adjusts itself to allow freedom of movement.

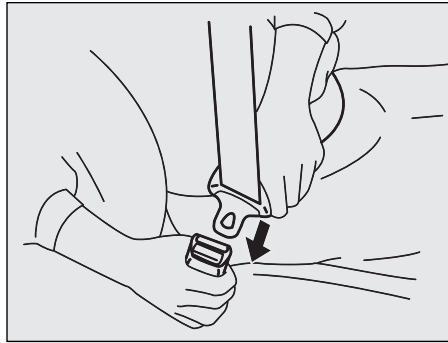

59RN02330

To fasten the seat belt, sit up straight and far back into the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a click. After pressing the latch plate into the buckle, pull the seat belt to make sure it is securely latched. After pressing the latch plate into the buckle, pull the seat belt to make sure it is securely latched.

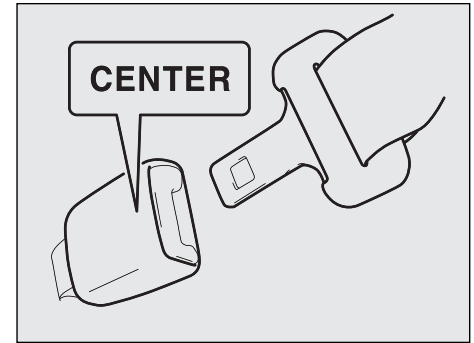


80J2008

NOTE:

The word "CENTER" is marked on the buckle for the rear center belt. The buckles are designed so a latch plate cannot be inserted into the wrong buckle.


FOR SAFE DRIVING

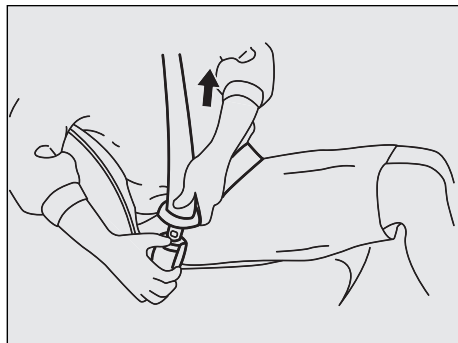

59RN02340

To unfasten the seat belt, push the red “PRESS” button on the buckle and retract the belt slowly while holding the belt or/and the latch plate.

Lap-Shoulder Belt with Detachable Connector

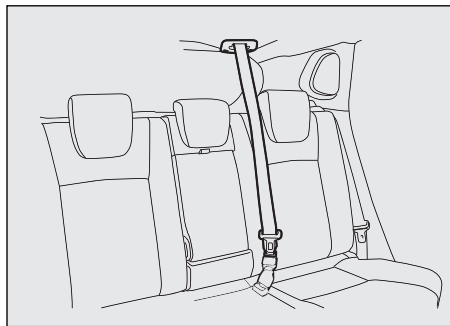


65T02100

The rear center lap-shoulder belt has a buckle, a latch plate and a detachable connector. The buckle is marked as “CENTER” for distinction from the rear left seat belt buckle. The rear center seat belt buckle and the connector are designed so as not to allow a wrong latch plate to be inserted.

When the rear seatback is in the upright position, keep the detachable connector latched. Only when the rear seatback will be folded down, unlatch the detachable connector. To latch and unlatch the connector, see “Unlatching and Latching Detachable Connector” later in this section.

Fastening

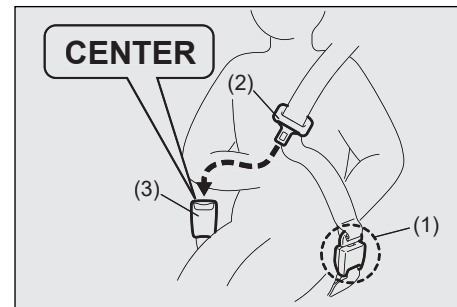


61MM0A060a

Before fastening the rear center lap-shoulder belt, make sure the detachable connector (1) is securely latched and the webbing is not twisted.


To fasten the belt, sit up straight and well back in the seat, pull the latch plate (2) across your body and press it straight into the buckle (3) until you hear a click.

Unfastening

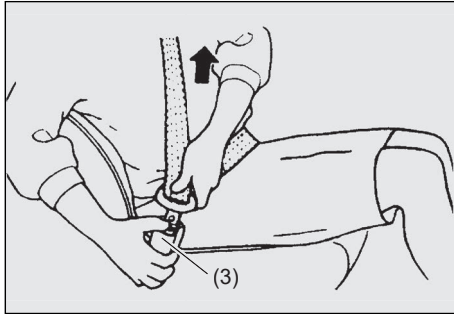

61MM0A094a

To unfasten the seat belt, push the button on the buckle (3) and retract the belt slowly while attaching a hand to the belt or/and the latch plate.

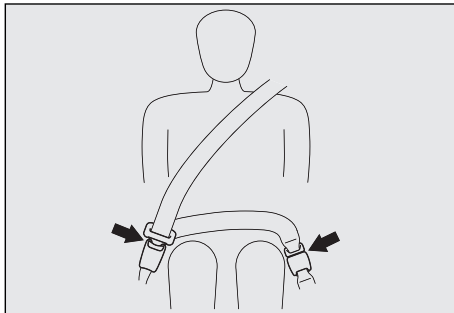

61MM0A061




61MM0A062

⚠ WARNING

To minimize risk of severe injury or death in the event of a collision, always wear seat belt with both latches buckled.

Unlatching and Latching Detachable Connector

Unlatching

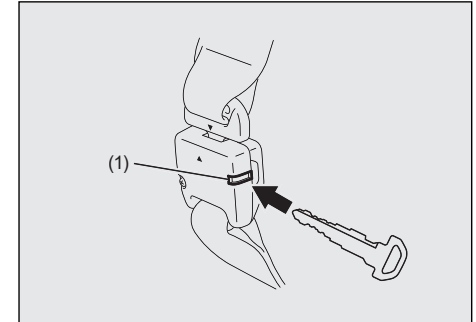

76TS40620

To unlatch the connector:

- 1) Insert a latch plate into the slot (1) on the connector and allow the belt to retract.
- 2) Once the belt has completely retracted, stow the belt in the holder. Refer to "Stowing Rear Center Lap-Shoulder Belt" for details later in this section.

NOTICE


When the rear seatback is folded forward, be sure to unlatch the connector of rear center lap-shoulder belt. Otherwise, the seat belt webbing can be damaged.

FOR SAFE DRIVING

Latching

To latch the connector:

- 1) Pull the belt out from the holder.

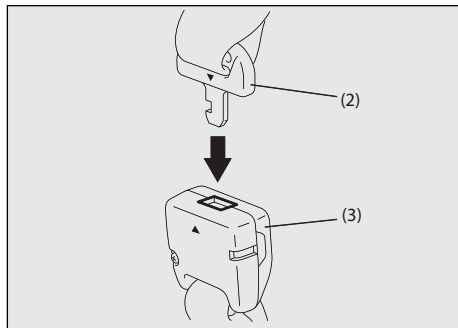

61MM0A064


- 2) Insert the connector latch plate (2) into the connector (3) until you hear a click.

WARNING

Make sure the detachable connector is securely latched and the webbing is not twisted.

Stowing Rear Center Lap-Shoulder Belt

Stow the belt after it is retracted completely.

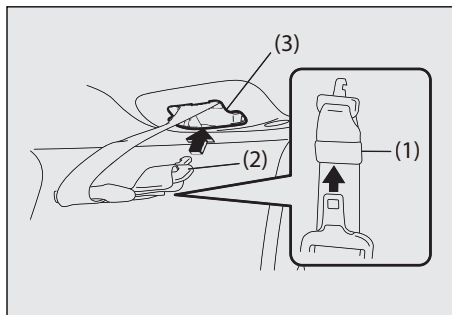

61MM0A065

To stow the belt, insert the latch plate into the slit (1). Then insert the connector latch plate (2) into the roof holder slot (3).

Adjustment of Seat Belt Length

The seat belt does not require length adjustment. The seat belt extends and retracts according to the movement of the body. If the seat belt gets a strong impact, the belt locks its tension automatically, in order to secure the body.


Correct Use of Seat Belt

WARNING

- Use the seat belt correctly. Otherwise, in a sudden braking or a collision, the body may not be restrained, resulting in severe injury. Observe the following points.
- If the seat belt is twisted or contains excessive slack, there is danger of heavy pressure focused on certain body areas.
- If the seat belt rests on the abdomen, this area may sustain heavy pressure when you get a strong impact.
- If the seat belt does not rest firmly over the shoulder, you may be thrown forward when you get a strong impact.


Seat Belt Reminder

Type A

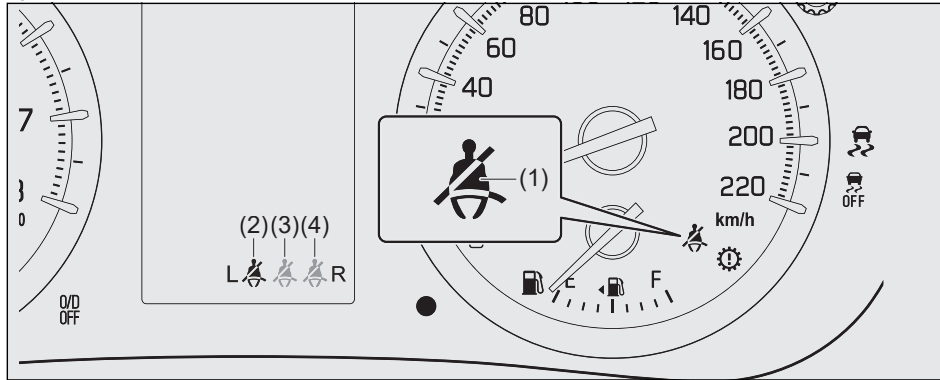

76TS20551

Type B

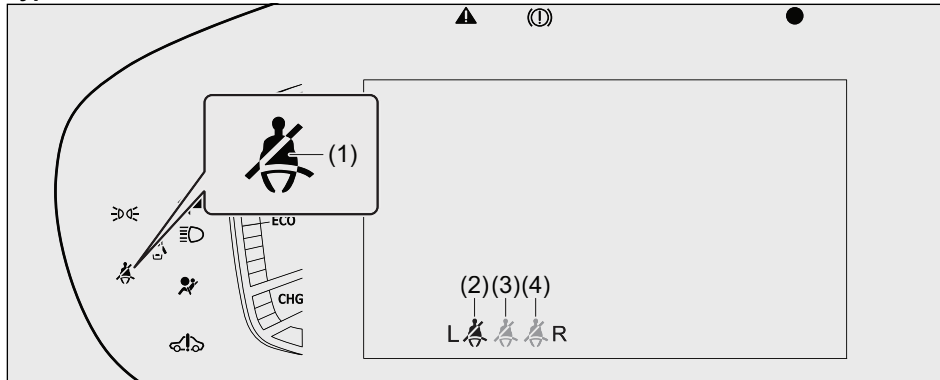

76TS120223

- 1) Driver's seat belt reminder light / front passenger's seat belt reminder light.
- 2) Rear passenger's seat belt reminder light (rear left)
- 3) Rear passenger's seat belt reminder light (rear center)
- 4) Rear passenger's seat belt reminder light (rear right)

For more details, refer to the explanation below.

⚠ WARNING

It is absolutely essential that the driver, front passenger and rear passenger fasten their seat belts at all times. Persons who are not fastening seat belts have a much greater risk of injury if an accident occurs. Make a regular habit of buckling your seat belt before starting the engine.

NOTE:

- Along with the seat belt reminder light, a reminder message shall also come on the information display (if equipped), for un-restrained driver and/or front passenger.
- The driver's seat belt reminder light / front passenger's seat belt reminder light is for both the driver and front passenger.

FOR SAFE DRIVING

Driver's seat belt reminder

If the driver's seat belt remains unbuckled when the engine switch is pressed to change the ignition mode to ON, the reminder works as follows:

- 1) The driver's seat belt reminder light will come on.
- 2) After the vehicle's speed has reached about 15 km/h, the driver's seat belt reminder light will blink and a buzzer will sound for about 95 seconds.
- 3) The reminder light will remain on until the driver's seat belt is buckled.

If the driver has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from Step 1) or 2) according to the vehicle's speed. When the vehicle's speed is less than 15 km/h, the reminder will start from Step 1). When the vehicle's speed is more than 15 km/h, the reminder will start from Step 2).

The reminder will be automatically canceled when the driver's seat belt is buckled or the engine switch is pressed to change the ignition mode to LOCK (OFF).

Front passenger's seat belt reminder

If there is a person sitting in the front passenger seat and the front passenger seat belt is unbuckled when the engine switch is pressed to change the ignition mode to ON, the front passenger's seat belt reminder will activate. The front passenger's seat belt reminder works in the same manner as the driver's seat belt reminder.

NOTICE

The sensor of the front passenger's seat belt reminder is located in the seat cushion. Therefore, if you spill liquid such as liquid aromatics, soft drinks or juice on the front passenger's seat cushion, immediately wipe it dry with a soft cloth. Otherwise, the sensor of the front passenger's seat belt reminder can be damaged.

NOTE:

- *If you put an object on the passenger's seat, the weight of the object will be sensed by the sensor and the front passenger's seat belt reminder light will come on and then the interior buzzer may beep.*
- *If a child or a small sized person sit on the front passenger's seat or the cushion is put on the front passenger's seat, the weight will not be sensed by the sensor and the interior buzzer may not beep.*

Rear passenger's seat belt reminder

Reminder light in speedometer for rear passengers to fasten their seat belts. Whether or not a passenger is seated, the rear seat belt reminder system works as follows, when ignition mode is turned ON:


- 1) Reminder light will turn ON for the non-buckled seats and continue for vehicle speed below 15 km/h.
- 2) When vehicle speed is above 15 km/h, reminder light will remain ON for the non-buckled seats for about 65 seconds and then turn OFF.
- 3) Further, when a buckled seat belt is unbuckled, the corresponding reminder light will turn ON. Above 15 km/h, the reminder light will blink (about 65 seconds) along with a buzzer sound (about 35 seconds). The reminder light will remain ON until the seat belt is buckled.

If rear door is opened in vehicle stationary condition, then reminder system will start from step 1.

The reminder will be automatically canceled when all the rear seat belts are buckled or the ignition mode to LOCK (OFF).

Handling and Care for Seat Belt

Seat Belt Handling

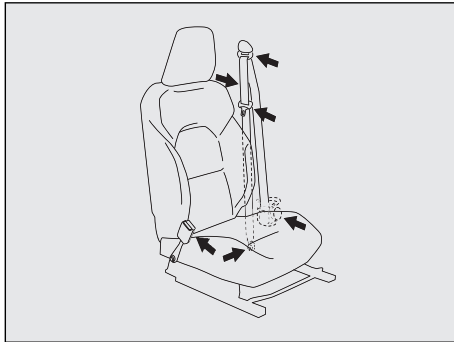

76TS20340

Periodically check if the seat belts work properly and are not damaged. Check the webbing, buckles, latch plates, retractors, anchorages and guide loops. Replace any seat belts which do not work properly or are damaged.

WARNING

- Inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly even which was not in use during a collision must be replaced if the seat belt pretensioners were activated. The pretensioners and the load limiter only function once. In case they did not activate, consult with a Maruti Suzuki authorized workshop.
- If frays, scratches, cuts are found on the seat belt, replace it with a new one.
- If the buckle does not work properly, ask Maruti Suzuki authorized workshop for inspection.
- If strong force was applied to the seat belt in a collision, the seat belt function may be damaged, even though its appearance is normal. Replace the seat belt with a new one.

(Continued)


WARNING

(Continued)

- As the seat belt may not provide the best performance and it may result in severe injury in case of emergency, observe the following points.
 - When foreign material enters into the buckle or you spill a drink, the seat belt may not work properly. In this case, ask Maruti Suzuki authorized workshop for inspection.
 - As the seat belt may be damaged, be careful not to get the seat belt caught in the door. Before closing the door, check that the seat belt is retracted without any slack.
 - Do not modify or remove the seat belt.

FOR SAFE DRIVING

Shoulder anchor height adjuster (Only for Front Seat)

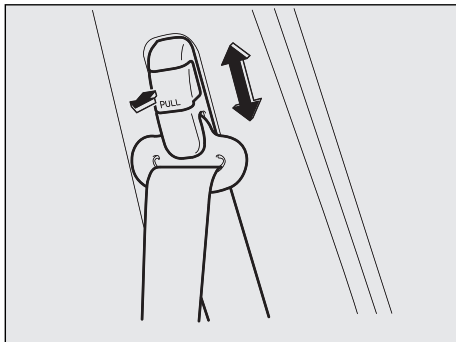


64J198

Adjust the shoulder anchor height so that the shoulder belt rides on the center of the outboard shoulder. To move upward, slide the anchor up. To move downward, slide the anchor down while pulling the lock knob out. After adjustment, check that the anchor is securely locked.

WARNING

Check that the shoulder belt is positioned on the center of the outside shoulder. The belt should be away from your face and neck, but not falling off your shoulder. Misadjustment of the belt could reduce the effectiveness of the seat belt in a collision.

Rear Seat Belt Handling

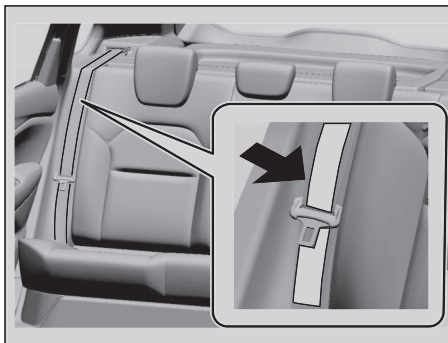

76TS20210

Place the outboard lap shoulder belts on the rear door side trims when the rear seat belts are not used.

NOTICE

When you move a seatback, make sure the seat belts are placed on the rear door side trims so the seat belts and buckles are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.


Seat Belt Care

Caring for seat belts is the same as caring for any type of regular cloth material, etc.

WARNING

Do not use bleach, solvent or dyes on seat belts. Doing so may cause stains, discoloration and strength deterioration, and the seat belt may not function properly.

Seat Belt Pretensioner System (Only for Front Seat)

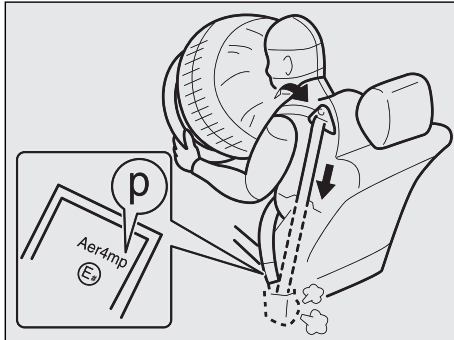

76TS20540

⚠ WARNING

This section describes your Maruti Suzuki vehicle's seat belt pretensioner system. Read and follow all these instructions carefully to minimize your risk of severe injury or death.

To determine if your vehicle is equipped with a seat belt pretensioner system at the front or rear seating positions, check the label on the seat belt at the bottom part.

If the letter "p" appears as illustrated, your vehicle is equipped with the seat belt pretensioner system. You can use the pretensioner seat belts in the same manner as ordinary seat belts.

Read this section and "Supplemental Restraint System (Airbags)" section to learn more about the pretensioner system.

The seat belt pretensioner system works with the supplemental restraint system (airbags). The crash sensors and the electronic controller of the airbag system also control the seat belt pretensioners. The pretensioners are triggered only when there is a frontal or side collision severe enough to trigger the airbags and the seat belts are fastened. For precautions and general information including servicing the pretensioner system, refer to "Supplemental Restraint System (Airbags)" section in addition to this "Seat Belt Pretensioner system" section, and follow all those precautions.

The pretensioner is located in each front seat belt retractor. The pretensioner tightens the seat belt so the belt fits the occupant's body more snugly in the event of a frontal or side collision. The retractors will remain locked after the pretensioners are activated. Upon activation, some noise will occur and some smoke may be released. These conditions are not harmful and do not indicate a fire in the vehicle.

The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not a pretensioner is equipped at their seating position, to minimize the risk of severe injury or death in the event of a collision.

Sit fully back in the seat; sit up straight; do not lean forward or sideways. Adjust the belt so the lap portion of the belt is worn low across the pelvis, not across the waist. Please refer to "Seat Adjustment" section and the instructions and precautions about the seat belts in this "Seat Belts and Child Restraint Systems" section for details on proper seat and seat belt adjustments. Please note that the pretensioners along with the airbags will activate in severe frontal or side collisions. They are not designed to activate in rear impacts, roll-overs, or minor frontal side collisions. The pretensioners can be activated only once. If the pretensioners are activated (that is, if the airbags are activated), have the pretensioner system serviced by Maruti Suzuki authorized workshop as soon as possible.

The pretensioner system or the airbag system may not work properly if any of the following conditions occurs:

- 1) If the air bag warning light on the instrument cluster does not come on briefly, when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".

FOR SAFE DRIVING

2) If the air bag light comes on and stays on for more than 10 seconds, when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".

3) If the air bag light comes on while driving.

Have both systems inspected by Maruti Suzuki authorized workshop as soon as possible.

Service on or around the pretensioner system components or wiring must be performed only by Maruti Suzuki authorized workshop, who is specially trained. Improper service could result in unintended activation of pretensioners or could render the pretensioner inoperative. Either of these two conditions may result in personal injury.

To prevent damage or unintended activation of the pretensioners, check that the lead-acid battery is disconnected and the ignition mode has been in LOCK (OFF) for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle.

Do not touch pretensioner system components or wiring. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow. When scrapping your Maruti Suzuki vehicle, ask a Maruti Suzuki authorized workshop, body repair shop or scrap yard for assistance.

For Proper Operation of Seat Belt Pretensioner System

Do not modify any parts that can affect the functionality of the seat belt pretensioner system. The seat belt may be retracted unexpectedly, or it may not be properly retracted when necessary.


Disposal and Scrapping

Seat belt pretensioners that have not been activated must be activated according to the predetermined procedure before disposal.

WARNING


If you do not handle a pretensioner properly for disposal, the pretensioner system may activate unexpectedly, resulting in severe injury. When disposing of a pretensioner or scrapping the vehicle equipped with a pretensioner, consult Maruti Suzuki authorized workshop.

Seat Belt Force Limiter System (Only for Front Seat)

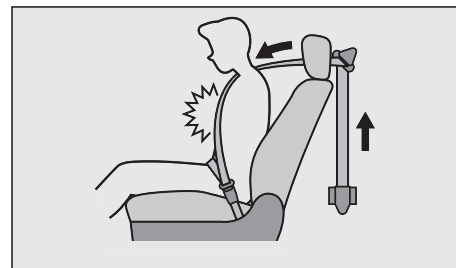

69RHS167

In the event of a strong impact coming from the front, the seat belt force limiter operates in one stage to reduce a force to the shoulder strap, thus lessening the impact being sustained by the front passengers.

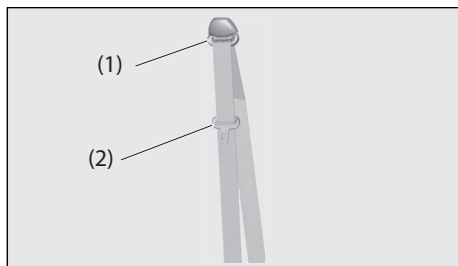


55T020340

⚠ WARNING

If the seat belt sustains strong impact, the resin of the shoulder anchor part (1) and the tongue plate part (2) could soften due to heavy friction, thus sticking to the seat belt, making the belt slide less easily. In such a case, the seat belt may not provide the best performance, resulting in severe injury in case of emergency. Have the seat belt replaced by Maruti Suzuki authorized workshop.

Child Restraint Systems


Child Restraint System Usage

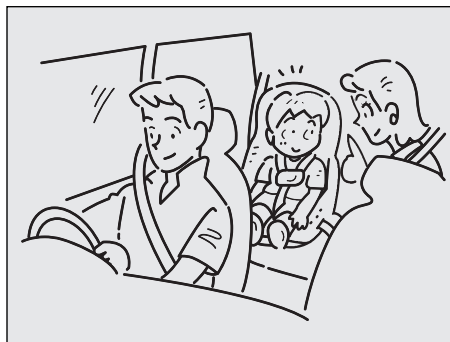

59RN02280


The following types of child restraint system are available generally.

Infant restraint

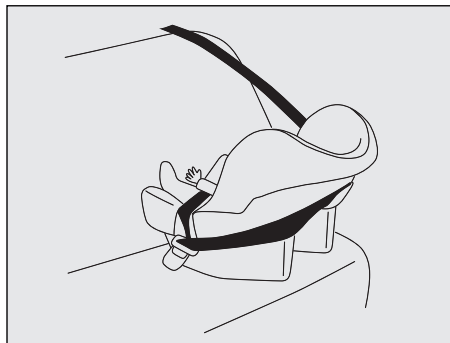


80JC007

Child restraint

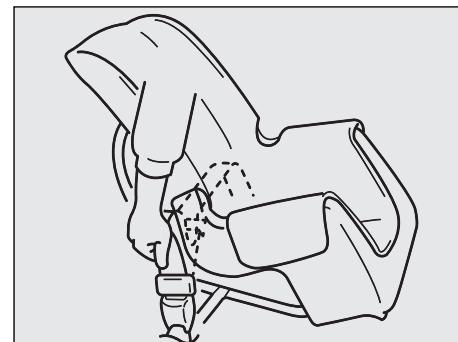

59RN02350

Booster seat

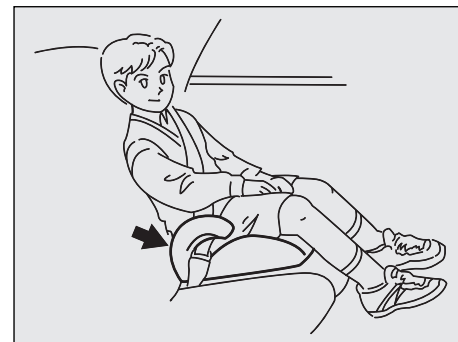

59RN02290

FOR SAFE DRIVING


Maruti Suzuki highly recommends that you use a child restraint system to restrain infants and small children. Many different types of child restraint systems are available; check that the restraint system you select meets applicable safety standards.

All child restraint systems are designed to be secured in vehicle seats either by seat belts (lap belts or the lap portion of lap-shoulder belts) or by special rigid lower anchor bars built onto the floor. Whenever possible, Maruti Suzuki recommends that child restraint systems be installed on the rear seat. According to accident statistics, children are safer when properly restrained in rear seating positions than in front seating positions.

NOTE:

Observe any statutory regulation about child restraints.

⚠ WARNING

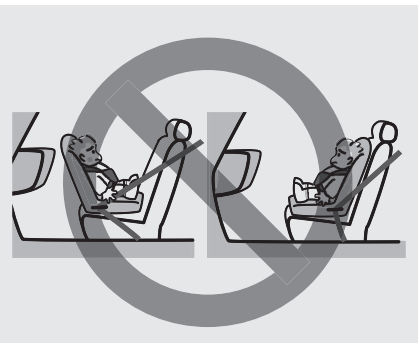

61M0241

- Do not install a child restraint system on the front passenger's seat.
- When installing a child restraint system to the rear seat, touching the child's foot or the child restraint system to the seatback of the front seat can cause serious injury to the child in the event of an accident. Adjust the front seat so that it does not touch the child or the child restraint system.

(Continued)

⚠ WARNING

(Continued)

- If child restraint systems are not installed properly, children or other occupants could be seriously injured in the event of an accident. Secure the child restraint system firmly according to both this manual and the instruction provided by child restraint system's manufacturer.
- If the child is not secured properly in the child restraint system, it could cause serious injury to the child in the event of an accident. Use the child restraint system correctly following the instruction provided by child restraint system's manufacturer.
- If you recline the seatback, a child restraint system may not be secured properly and a child body may slip beneath the seat belt. This may cause severe injury. Do not recline the seatback when a child restraint system is installed on the seat.

(Continued)

 WARNING

(Continued)

- If you use the child restraint system which was severely damaged by an accident, etc., it may not provide the best performance. This may cause severe injury to a child. If the child restraint system was severely damaged by an accident, etc., do not reuse the child restraint system even though its appearance looks normal.

FOR SAFE DRIVING

Child Restraint Systems for India

Child Restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below. Whenever you carry children up to 12 years of age, properly use the child restraints which conform to AIS 072 or UN R44^{*1} or UN R129^{*1} the standard for child restraints, referring to the table.

*1: UN R44/R129 means the international regulation for the child restraint system.

Child Restraint Systems Installation Suitability for Each Seat Position (AIS 072 Format)

MASS GROUP#	Seating position (or other site)				
	Front Passenger	Rear Outboard	Rear Center	Intermediate Outboard	Intermediate Center
Group 0 Up to 10 kg	X	U	U	N.A.	N.A.
Group 0+ Up to 13 kg	X	U	U	N.A.	N.A.
Group I 9 to 18 kg	X	U	U	N.A.	N.A.
Group II 15 to 25 kg	X	U	U	N.A.	N.A.
Group III 22 to 36 kg	X	U	U	N.A.	N.A.

Key letters in the above table indicates the following:

U =Suitable for 'universal' category restraints approved for use in this mass group

X =Seat position not suitable for children in this mass group


N.A = Seat position not available for children in this mass group.

NOTE:

- 'universal' is the category as per AIS 072.
- 'Outboard' indicates window side seat.

#Mass Groups are classification of child restraint systems which conform to AIS 072 or UN R44.

Child Restraint Systems Installation Suitability for Each Seat Position (UN R16^{*2} Format)

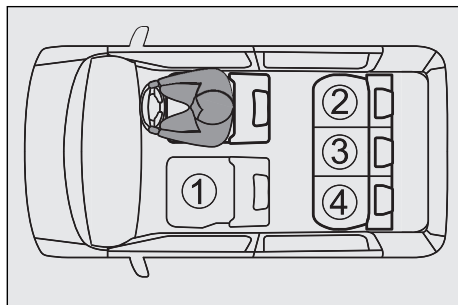

55T02001

NOTE:

For detailed information on seating positioning for child restraint system, please refer to the table on the next page.

①	 
② (#1, #2)	  
③ (#1, #2)	
④ (#1, #2)	  



It is suitable for universal category of child restraint system fixed with the vehicle seat belt.



It is suitable for i-Size and ISOFIX child restraint system.



This seat is equipped with Top tether anchorage point.



Never use a rearward facing child restraint system on passenger seat with active passenger airbag.



It is not suitable for child restraint system.

NOTICE

#1 If the head restraint interferes with the child restraint system, adjust the height of the head restraint or remove it, as necessary.

#2 When you install a forward facing child restraint, if there is a gap or space between the child restraint and the seatback, adjust the seatback angle in order to install the child restraint system properly.

*2: UN R16 means the international regulation for safety belts, including compatibility with child restraint systems.

FOR SAFE DRIVING

Detailed information for child restraint system (UN R16 Format)

Seat position number	Seating position			
	①	②	③	④
Seating position suitable for universal belted (YES/NO)	NO	YES	YES	YES
i-Size seating position (YES/NO)	NO	YES	NO	YES
Seating position suitable for lateral fixture (L1/L2)*	NO	X	NO	X
Suitable rearward facing fixture (R1/R2X/R2/R3)*	NO	R1,R2,R3	NO	R1,R2,R3
		R2X ^{#1}		R2X ^{#1}
Suitable forward facing fixture (F2X/F2/F3)*	NO	F2,F3	NO	F2,F3
		F2X ^{#1}		F2X ^{#1}
Suitable booster fixture (B2/B3)*	NO	B2, B3	B2, B3	B2, B3

Key letters in the above table indicates the following:

YES =Suitable for this seating position

NO = Not suitable for this seating position

X =This ISOFIX seat position is not suitable for ISOFIX child restraint systems in this fixture.

The child restraint system can be used in the seating positions for fixture shown in the above table.

NOTE:

#1: The head restraint should be pulled up until it clicks.

*For child restraint system fixtures mentioned herein, refer to table on the next page.

If your child restraint system has no size class (or if you cannot find information in the following table), refer to the child restraint system suitability information for the vehicle or ask with child seat retailer.

ISOFIX child restraint systems are shown as follows:

ISOFIX child restraint systems are divided into different mass group, size class and fixture.

Mass group	Size class of child restraint system	Fixture	Description
0 (up to 10 kg)	F	L1	Left Lateral facing position Child Restraint Systems (carry-cot)
	G	L2	Right Lateral facing position Child Restraint Systems (carry-cot)
	E	R1	Rearward facing Infant Child Restraint Systems
0+ (up to 13kg)	E	R1	Rearward facing Infant Child Restraint Systems
	D	R2	Reduced-Size rearward facing toddler Child Restraint Systems
	–	R2X	Reduced-Size rearward facing toddler Child Restraint Systems
	C	R3	Full-Size rearward facing toddler Child Restraint Systems
I (9kg to 18kg)	D	R2	Reduced-Size rearward facing toddler Child Restraint Systems
	–	R2X	Reduced-Size rearward facing toddler Child Restraint Systems
	C	R3	Full-Size rearward facing toddler Child Restraint Systems
	B	F2	Reduced-Height forward facing toddler Child Restraint Systems
	B1	F2X	Reduced-Height forward facing toddler Child Restraint Systems
	A	F3	Full-Height forward facing toddler Child Restraint Systems

FOR SAFE DRIVING

Mass group	Size class	Fixture	Description
II (15kg to 25kg)	X	X	–
III (22kg to 36kg)	X	X	–

Key letters in the above table indicates the following:

X = There is no fixture for this mass group.

Booster seat fixtures are shown as follows;

Fixture	Description
B2	Booster seat, reduced width 440 mm
B3	Booster seat, full width 520 mm

Installation suitability of MARUTI SUZUKI recommendation child restraint systems for India

Body size	Direction of Child restraint system	Recommendation of Child restraint system (#A)	Seating position			
			①	②	③	④
40 - 83 cm ≤ 13 kg	Rearward facing	BRITAX RÖMER BABY-SAFE 3 i-SIZE	NO	YES (#1)	NO	YES (#1)
40 - 83 cm ≤ 13 kg	Rearward facing	BRITAX RÖMER BABY-SAFE 3 i-SIZE and VARIO BASE 5Z	NO	YES	NO	YES
40 - 83 cm ≤ 13 kg	Rearward facing	BRITAX RÖMER BABY-SAFE 3 i-SIZE and FLEX BASE 5Z	NO	YES	NO	YES
76 - 105 cm and exceed 15 months ≤ 20 kg	Forward facing	BRITAX RÖMER KING PRO	NO	YES (#1)	YES (#1)	YES (#1)
76 - 105 cm and exceed 15 months ≤ 22 kg	Forward facing	BRITAX RÖMER TRIFIX 2 i-SIZE	NO	YES	NO	YES

Key letters in the above table indicates the following:

YES = It is suitable for this seating position

NO = It is not suitable for this seating position

#1: Only belted.


#A: These child restraint systems are MARUTI SUZUKI Genuine Accessory which comply with the UN R129, refer to the genuine accessories catalog.

FOR SAFE DRIVING

Securing Child Restraint System by Seat Belt

Choose the appropriate seat for the child's age and physical size.

⚠ WARNING

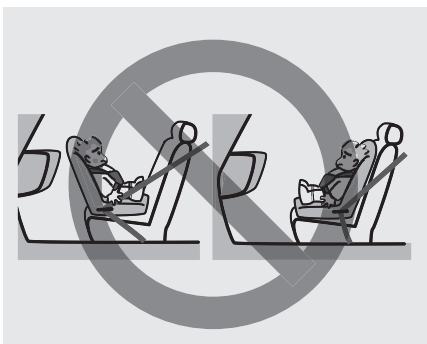

61M0241

- Do not install a child restraint system on the front passenger's seat.
(Continued)

⚠ WARNING

(Continued)

- If you install a child restraint system in the rear seat, slide the front seat far enough forward so that the child's feet do not contact the front seatback. This will help avoid injury to the child in the event of an accident.
- Do not hold a child on passenger's lap when the vehicle is in motion.
- Even if the passenger holds the child tightly, he/she would not be supported enough in the event of an accident and it could result in a serious injury of the child.

⚠ CAUTION


If your vehicle is equipped with the head restraint, adjust the height of the head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the head restraint is fitted, the head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.

NOTE:

Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

Securing

This section explains securing the child restraint system in the rear seat.

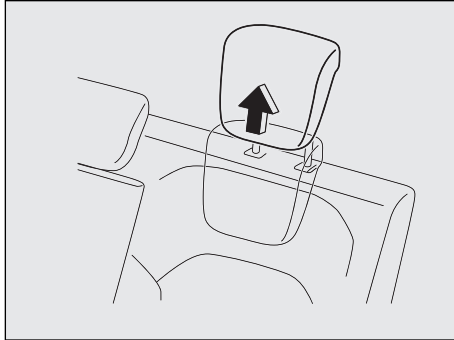


76TS20170

- 1) When the child restraint system contacts the head restraint, adjust the height of the head restraint or remove it for fitting the child restraint system.

WARNING

If the child restraint system contacts the head restraint, the child restraint system cannot be secured firmly. This may cause severe injury to a child in a collision. When installing the child restraint system, adjust the head restraint height to the highest position as much as possible or remove the head restraint so that the child restraint system would not contact the head restraint.


- 2) If your vehicle is equipped with the reclining mechanism of rear seatback, adjust the angle of the seatback so that there is no gap between the child restraint system and the seatback.
- 3) Make sure that the child restraint system is securely fastened to the main seat.
- 4) Make sure to pass the seat belt of the passenger's seat through the specified parts, according to the instruction manual that came with the child restraint system.

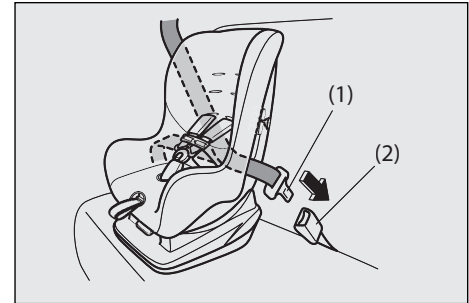

59RN02141

- 5) Insert the tongue plate (1) firmly into the seat belt buckle (2) until you hear a click.
 - The child restraint system in the above figure is a typical example.

FOR SAFE DRIVING

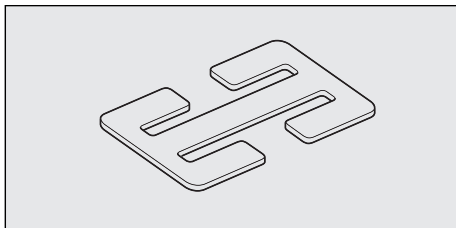

72M00172

- 6) If the child restraint system does not have a seat belt locking mechanism or a locking clip, secure it to the seat by using an aftermarket locking clip.
- The aftermarket locking clip shown in the above figure is a typical example.

WARNING

Failure to securely fasten a child restraint system via the seat belt locking mechanism or a locking clip may cause serious injury to a child when sudden braking or a collision occurs.

- 7) Shake the child restraint system back and forth, and left and right to check if it is securely in position.


- If you cannot ensure secure positioning, check the instruction manual that came with the child restraint system or consult the dealer where you purchased the seat.

WARNING

Make sure to position the child restraint system securely. Failure in doing so could result in the child sustaining serious injury when sudden braking or a collision occurs.

Securing Child Restraint System by ISOFIX

Securing

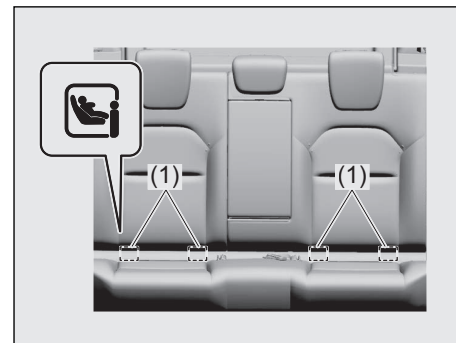

76TS20240


(1) Lower anchorage

Your vehicle is equipped with the lower anchorages in the rear seat outboard seating positions for securing a ISOFIX type of child restraints with the connecting bars. The lower anchorages are located where the rear of the seat cushion meets the bottom of the seatback.

WARNING

Install the ISOFIX type of child restraint(s) in the only outboard seating positions, not in the central position for the rear seat.

Install the ISOFIX type child restraint system according to the instructions provided by the child restraint system manufacturer. After installation, try moving the child restraint system in all directions especially forward to check that connecting bars are securely latched to the anchorages.

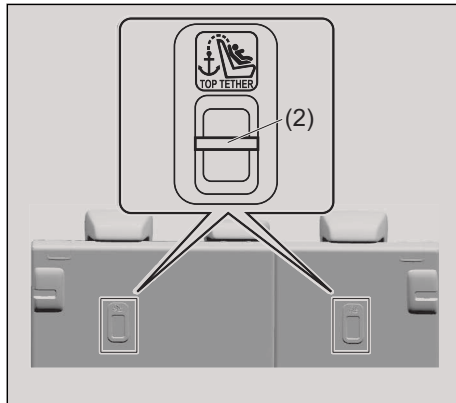

76TS20251

(2) Top tether anchorage

Your vehicle is equipped with the top tether anchorages. Use the top tether strap of the child restraint according to the instructions provided by the child restraint system manufacturer.


Here is a general instruction:

CAUTION

If your vehicle is equipped with the head restraint, adjust the height of the rear head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the head restraint is fitted, the head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.

NOTE:

Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

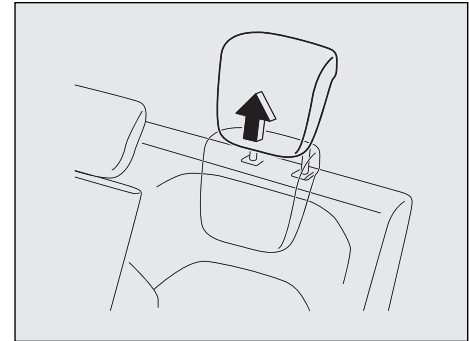


76TS20170

- 1) When the child restraint system contacts the head restraint, adjust the height of the head restraint or remove it for fitting the child restraint system.

WARNING


If the child restraint system contacts the head restraint, the child restraint system cannot be secured firmly. This may cause severe injury to a child in a collision. When installing the child restraint system, adjust the head restraint height to the highest position as much as possible or remove the head restraint so that the child restraint system would not contact the head restraint.

FOR SAFE DRIVING

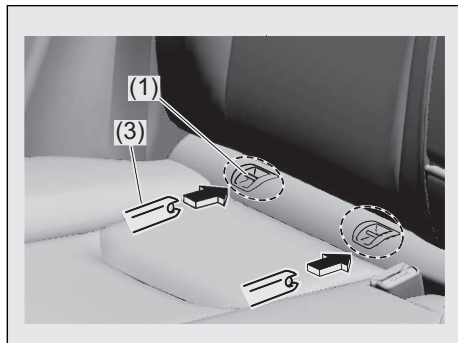


76TS20230

- 2) Place the child restraint in the rear seat, inserting the connecting bars (3) to the lower anchorages (1) between the seat cushion and the seatback.

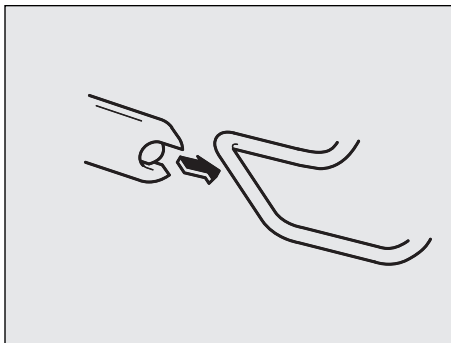


68LM268

- 3) Use your hands to carefully align the connecting bar tips with the anchorages. Take care not to pinch your fingers.

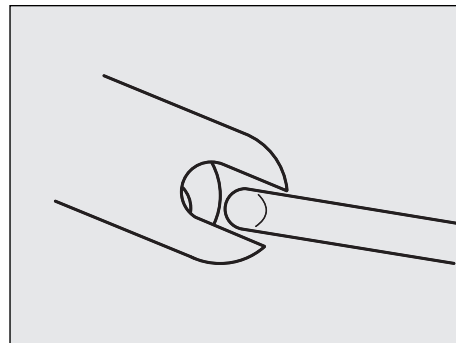

54G184

- 4) Push the child restraint toward the anchorages so that the connecting bar tips are partially hooked to the anchorages. Use your hands to confirm the position.

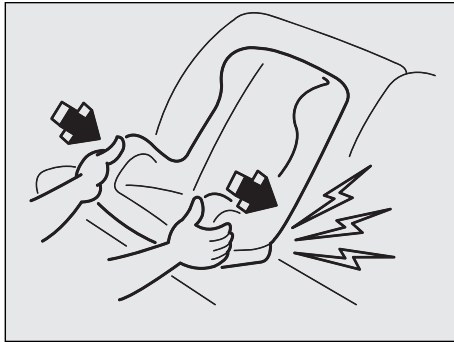


54G185

- 5) Grasp the front of the child restraint and push the child restraint forcefully to latch the connecting bars. Check that they are securely latched by trying to move the child restraint system in all directions, especially forward.
- 6) Attach the top tether strap referring to "Installation of child restraint with top tether" section. When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of your child's body.

NOTICE

When installing a child restraint system to the rear seat, adjust the front seat position so that the front seat does not interfere with the child restraint system.

Installation of Child Restraint with Top Tether

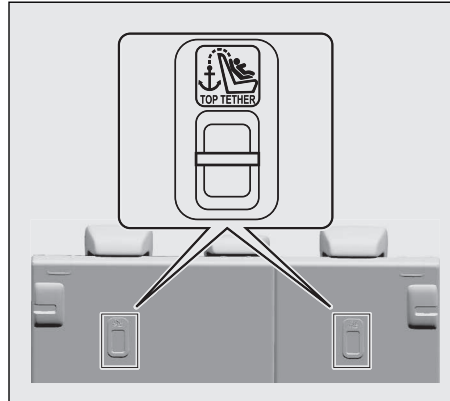

76TS20271


Some child restraint systems require the use of a top tether strap. Top tether anchorages are provided in your vehicle at the locations shown in the illustrations. The number of the top tether anchorage brackets provided in your vehicle depends on the vehicle specification. Install the child restraint system as follows:

- 1) Remove the luggage compartment cover (if equipped).

- 2) Secure the child restraint on the rear seat using the procedure described above for securing a restraint system that does not require a top tether strap.
- 3) Hook the top tether strap to the top tether anchorage and tighten the top tether strap according to the instructions provided by the child restraint system manufacturer. Attach the top tether strap to the corresponding top tether anchorage located directly behind the child restraint. Do not attach the top tether strap to the luggage restraint loops (if equipped).

⚠ WARNING

Do not attach the child restraint top tether strap to the luggage restraint loops. Incorrectly attached top tether strap will reduce the intended effectiveness of the child restraint system.

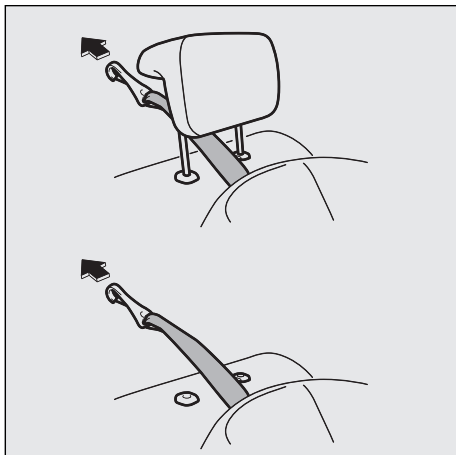

52RS20431



WARNING

If the seat belt, etc. gets stuck in the child restraint system, it may not be secured properly and this may cause severe injury to a child in a collision. When you install the child restraint system, check that obstacles and the seat belt do not exist near the ISOFIX anchorages and the top tether anchorages.

- 4) When routing the top tether strap, pass the top tether strap as shown in the illustration. (Refer to "Head Restraints" section for details on how to adjust the height of head restraint or remove it.)
- 5) Check that cargo does not interfere with routing of the top tether strap.


Supplemental Restraint System (Airbags)

⚠ WARNING

This section describes the protection provided by your Maruti Suzuki vehicle's supplemental restraint system (airbags). Read and follow all instructions carefully to minimize your risk of severe injury or death in the event of a collision.

Your vehicle is equipped with a supplemental restraint system consisting of the following components in addition to a lap-shoulder belt at each seating position.

- (1) Side curtain airbag module
- (2) Side crash sensor (if equipped)
- (3) Front passenger's front airbag module
- (4) Driver's front airbag module
- (5) Forward crash sensor
- (6) Front seat belt pretensioner
- (7) Side airbag module
- (8) Airbag controller

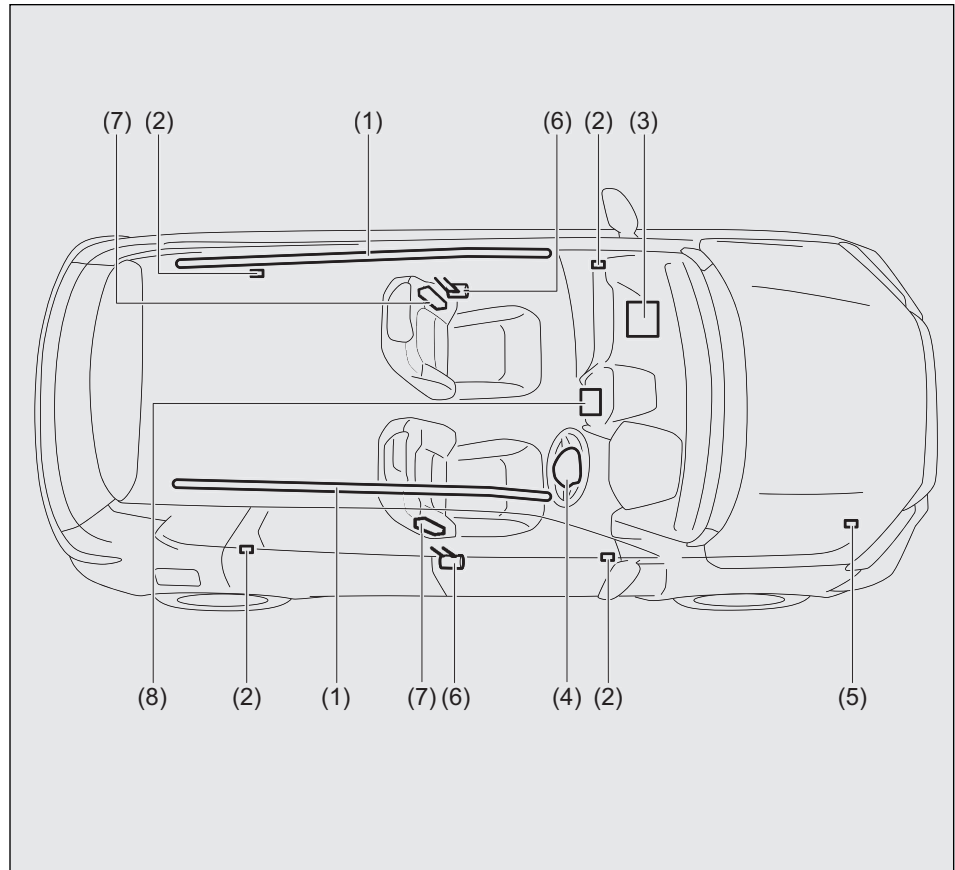

76TS20450

FOR SAFE DRIVING

What is SRS Airbag System?

SRS stands for "Supplemental Restraint System". This system aims to restrain passengers in their seats for safety.



76TS20290


If airbag warning light on the instrument cluster does not blink or come on when the ignition mode is first changed to ON, or airbag warning light stays on, or comes on while driving, the airbag system (or the seat belt pretensioner system) may not work properly. Have the airbag system inspected by Maruti Suzuki authorized workshop as soon as possible

WARNING

- **SRS airbag system is not a substitute for seat belts. SRS airbag system is the supplemental restraint system and will provide the effectiveness by using the seat belts at the same time. If you and the passengers do not fasten their seat belts, it may result in severe injury in a sudden braking or a collision. Even when you drive the vehicle equipped with SRS airbag system, make sure to fasten seat belt.**
- **If the seat belts are not fastened properly, airbags may not provide the best performance. This may cause severe injury in a sudden braking and a collision. Make sure that the driver and all the passengers fasten the seat belts properly in a correct posture.**

NOTE:

Via the event data recorder (EDR) system, this vehicle records and accumulates data when the airbag is deployed.

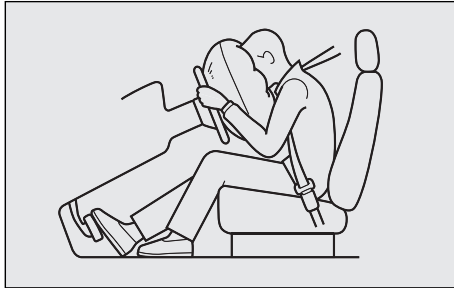Front airbags

80J090


Front airbags are designed to inflate in severe frontal collisions when the ignition mode is ON.

NOTE:

In a frontal angle collision, the side airbags and side curtain airbags may inflate.

Front airbags are not designed to inflate in rear impacts, side impacts, rollovers or minor frontal collisions, since they would offer no protection in those types of accidents. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

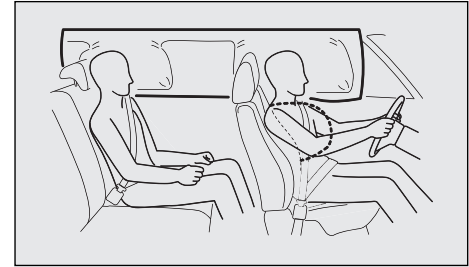Side airbags and side curtain airbags

68KM090

Side airbags and side curtain airbags are designed to inflate in severe side impact collisions when the ignition mode is ON.


Side airbags and side curtain airbags are not designed to inflate in frontal or rear collisions, rollovers or minor side collisions, since they would offer no protection in those types of accidents. Only the side airbag and side curtain airbag on the side of the vehicle that is struck will inflate. However, in a frontal angle collision, the side airbags and side curtain airbags may inflate. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

FOR SAFE DRIVING

When Driving the Vehicle with SRS Airbag System

Make Sure to Fasten Seat Belt

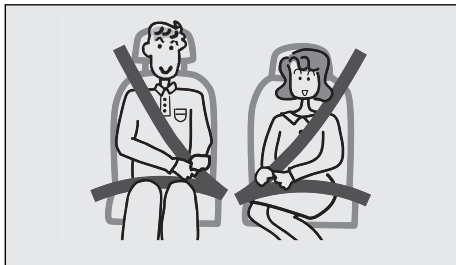


65J106

WARNING

SRS airbag system is not a substitute for seat belts. SRS airbag system is the supplemental restraint system and will provide the effectiveness by using the seat belts at the same time. If you and the passengers do not fasten their seat belts, it may result in severe injury in a sudden braking or a collision. Even when you drive the vehicle equipped with SRS airbag system, make sure to fasten seat belt.

Correct Sitting Posture

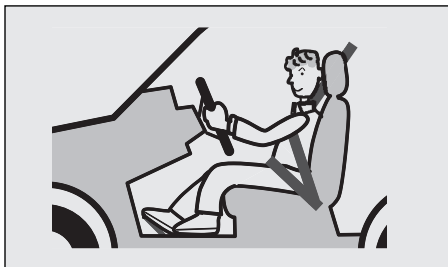

80J014

There is a possibility of major impact from the front airbags when the airbags activate and deploy instantaneously, the driver and the passenger should sit deeply into their seats and touch their backs lightly to the seatback. In addition, the seat should be positioned so that it is not too far forward.




59RN02190

WARNING

- Do not position your face, chest, etc., close to the steering wheel or instrument cluster, and do not rest your feet up into this area. Otherwise, there is the risk of serious injury due to major impact if the airbag were to be deployed.
- If side airbags or side curtain airbags activate, you may get strong impact, resulting in severe injury. Do not put hands out of the window or lean on the door. Also, when sitting in the rear seat, do not hug the seatback of the front seat.


For Proper SRS Airbag System Operation

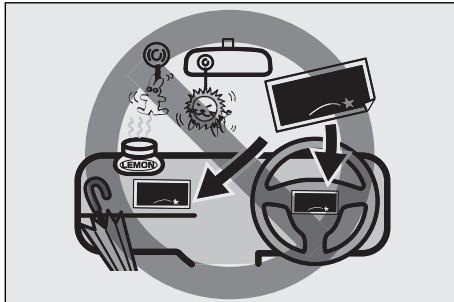

69RHS169

⚠ WARNING

- Do not modify the steering wheel, such as replacing it, placing stickers on it, painting it or putting the cover on it.
- Do not place stickers on the airbag units or the surrounding areas or paint them. Also, do not attach any accessories, fragrances, electronic toll control units, portable car navigation systems, etc. to this area, and do not lean umbrellas or other objects against it.
- Do not attach accessories (except for Maruti Suzuki genuine products), etc., to the windshield or the inside rearview mirror.

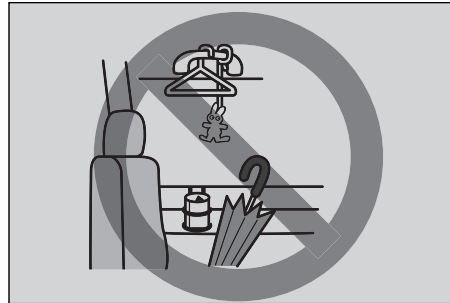

59RN02200

⚠ WARNING

For the vehicle with side airbags or side curtain airbags, do not attach accessories such as cup holders or hangers near the door. Also, do not lean umbrellas against the door.

Warning Label of SRS Airbag for Front Passenger's Seat



72M00150

You may find this label on the sun visor.

⚠ WARNING

NEVER use a rearward facing child restraint on a seat protected by an **ACTIVE AIRBAG** in front of it, **DEATH** or **SERIOUS INJURY** to the **CHILD** can occur.

FOR SAFE DRIVING

Symbol	Symbol meaning
	Do not install a rearward facing child restraint system to the front passenger's seat equipped with an airbag.
	If the front passenger's seat airbag were to be deployed, a major impact could be applied to a rearward facing child restraint system and the child.
	For more details, read this owner's manual.


“SRS AIRBAG” Mark and Location

Driver's front airbag




76TS20310

Front passenger's front airbag

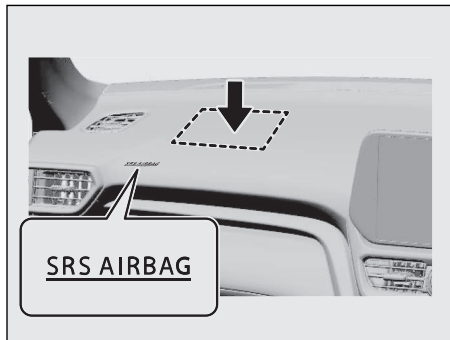


76TS20330

Side airbags

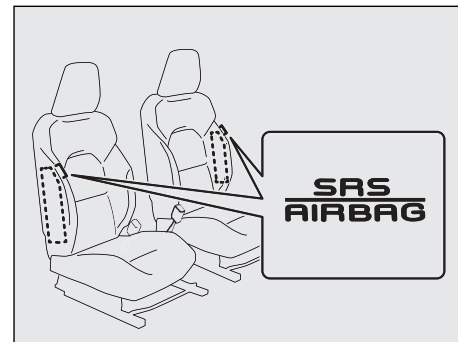

76TS20350

Side curtain airbags

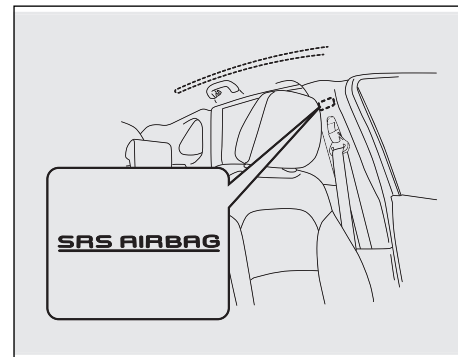

76TS20370

The driver's front airbag is located behind the center pad of the steering wheel and the front passenger's front airbag is located behind the passenger's side of the dashboard.

Side airbags are located in the part of the front seatbacks closest to the doors.

Side curtain airbags are located in the roof lining.

The words "SRS AIRBAG" are molded into the airbag covers to identify the location of the airbags.

⚠ WARNING

- If the airbag stored place is damaged or cracked, the airbag system may not work properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by Maruti Suzuki authorized workshop.
- If you smash the airbag stored place or apply a strong impact to it, the airbag may not work properly or may inflate unexpectedly, resulting in serious injury. Do not smash the airbag stored place or apply a strong impact to it.

Installation of Child Restraint System

⚠ WARNING



Do not install a child restraint system on the front passenger's seat.

Refer to "Seat Belts and Child Restraint Systems" section for details on securing your child.

Handling for Airbags

For Proper SRS Airbag System Operation

If objects are positioned within the range where the airbag deploys, such objects might be impacted and blown off or the airbag may not deploy properly.

⚠ WARNING

- As the airbag may not provide the best performance and it may result in severe injury in case of emergency, observe the following points.
 - Do not modify the suspension. If the vehicle height or the stiffness of the suspension were to change, airbag malfunction may result.
 - When installing a grille guard, etc., on the front of the vehicle, consult Maruti Suzuki authorized workshop. If you modify the front part of the vehicle, the airbag system may not work properly.
 - When installing radio equipment, etc., consult Maruti Suzuki authorized workshop. Radio waves, etc., from a radio may adversely affect the computer module used in the airbag system.

(Continued)

WARNING

(Continued)

- Even though your vehicle is damaged by a collision, it may not be severe enough to trigger front, side or side curtain airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by Maruti Suzuki authorized workshop to ensure that it works properly. If the original function of airbag system is damaged, airbag may not function effectively and fully in case of an emergency.
- If the airbag-related parts are replaced or repaired, which has an impact on the airbag functions, the airbag may activate unnecessarily or may not activate when necessary.
The following situations may give a negative impact to the airbag system. In these cases, consult Maruti Suzuki authorized workshop beforehand.
 - Removing the steering wheel, repairing the areas around the steering wheel, etc.


(Continued)

WARNING

(Continued)

- Center console repair, repairs around the instrument cluster, repairs under the front seat, and repairs of electrical wiring
- Installation of audio equipment, etc.
- Sheet metal painting and repairs around the dashboard
- Replacement of the front seat and repairs around the seat
- Repairs around the front pillar, the back pillar or the roof side
- Repairs around the center pillar

Driver's front airbag precautions

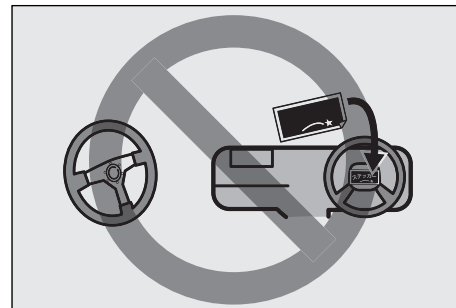


69RHS022

WARNING

- Do not position your hands, face, chest, etc., close to airbag unit area or lean on the steering wheel. Otherwise, there is the risk of serious injury due to major impact if the airbag were to be deployed.
- Do not modify the steering wheel, such as replacing it, placing stickers on it, painting it or putting the cover on it. Otherwise, the airbag may not deploy normally in case of emergency, resulting in severe injury.

Side airbags and side curtain airbags precautions

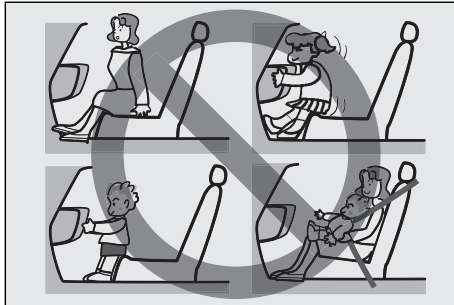

69RHS170

⚠ WARNING

- When riding in the front passenger's seat or when allowing a child to ride in this seat, be sure to observe the following points. Failure to do so may result in serious injury due to major impact if the airbag is deployed.
 - Do not position your hands or feet on the airbag unit area, and do not position your face, chest, etc., close to this area.
 - Do not allow a child to stand in front of the airbag unit area or sit on a passenger's lap in the front passenger's seat. Have a child ride in the rear seat wearing a seat belt.

(Continued)

⚠ WARNING

(Continued)

- For a child that is not yet big enough to wear a seat belt properly, be sure to use a child restraint system on the rear seat.




69RHS171

⚠ WARNING

- As the airbag may not provide the best performance and it may result in severe injury in case of emergency, observe the following points.
 - Do not place stickers on the airbag units or the surrounding areas or paint them. Also, do not attach any accessories, fragrances, electronic toll control units, portable car navigation systems, etc. to this area, and do not lean umbrellas or other objects against it.
 - Do not attach accessories (except for Maruti Suzuki genuine products), etc., to the windshield or the inside rearview mirror.

FOR SAFE DRIVING

Side airbags and side curtain airbags precautions

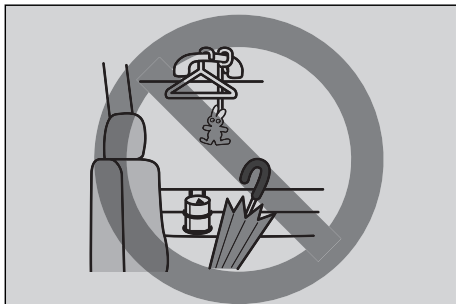

59RN02200

WARNING

If you attach accessories such as cup holders or hangers near the door, or if you lean umbrellas against the door, when side airbags or side curtain airbags activate, these objects may be thrown out and may not inflate properly, resulting in severe injury.

Do not attach accessories such as cup holders or hangers near the door. Also, do not lean umbrellas against the door.

Function of Airbags

How the System Works

In a frontal collision, the collision sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal collision, the controller will trigger the inflators. The inflators inflate the appropriate airbags with nitrogen or argon gas. The inflated airbags provide a cushion for your head and upper body. The airbag inflates and deflates so quickly that you may not even realize that it has activated. The airbag will neither hinder your view nor make it harder to exit the vehicle.

A seat belt helps keep you in the proper position for maximum protection when an airbag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel or dashboard. Front occupants should not lean on or sleep against the door. Refer to "Seat Adjustment" section and "Seat Belts and Child Restraint Systems" section in this section for details on proper seat and seat belt adjustments.



59RN02370



59RN02360



59RN04670

⚠ WARNING

- The driver should not lean over the steering wheel. The front passenger should not rest his or her body against the dashboard where a front air bag is mounted or a child should not stand in front of the dashboard. Otherwise, he or she will get too close to the dashboard. For vehicles with side air bags and side curtain air bag, occupants should not lean on or sleep against the door. In these situations, the out-of-position occupant would be too close to an inflating airbag, and may suffer severe injury.

(Continued)

⚠ WARNING

(Continued)

- Do not attach any objects to, or place any objects over, the steering wheel or dashboard. Do not place any objects between the airbag and the driver or front passenger. These objects may interfere with airbag operation or may be propelled by the airbag in the event of a collision. Also, these objects may move when you start moving vehicle or while vehicle is moving, they may interfere with driver's view or safe driving. In each condition, it may cause severe injury.
- For vehicles with side airbags, do not use non-genuine seat covers on the front seats, because non-genuine seat covers may obstruct the inflation of side airbags. Maruti Suzuki highly recommends Maruti Suzuki-genuine seat covers to be used when covering the front seats of such vehicles with side airbags. Also, near the door, do not place cup holders, hangers or any other objects and do not lean an umbrella, as these objects could be propelled by the airbag in the event of a collision. Either of these conditions may cause severe injury.

(Continued)

⚠ WARNING

(Continued)

- Do not strike or apply significant levels of impact to the airbag component areas. It can cause the airbags to malfunction.
- Even though your vehicle is damaged by a collision, it may not be severe enough to trigger front, side or side curtain airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by Maruti Suzuki authorized workshop to ensure that it works properly. If the original function of air bag system is damaged, air bag may not function effectively and fully in case of an emergency.

CAUTION

Airbags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the airbag may irritate bare skin, such as the facial area against a front airbag. Wash off any residue as soon as possible to prevent skin irritation. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however, that some airbag components may be hot for a while after inflation. This may cause burn injury.

Your vehicle is equipped with a diagnostic module which records information about the airbag system if the airbags deploy in a collision. The module records information about overall system status, and which sensors activated the deployment.

Servicing the airbag system

If the airbags inflate, have the airbags and related components replaced by Maruti Suzuki authorized workshop as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the airbag controller could be damaged. If this happens, ask Maruti Suzuki authorized workshop to check the airbag system as soon as possible.

Special procedures are required for servicing or replacing an airbag. For that reason, only Maruti Suzuki authorized workshop should be allowed to service or replace your airbags. Remind anyone who services your Maruti Suzuki vehicle that it has airbags.

Service on or around airbag components or wiring must be performed only by Maruti Suzuki authorized workshop. Improper service could result in unintended airbag deployment or could render the airbag inoperative. Either of these two conditions may result in severe injury.


To prevent damage or unintended inflation of the airbag system, check that the battery is disconnected and the ignition mode has been in LOCK (OFF) for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle. Do not touch airbag system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

CAUTION

If you do not handle the airbags properly, they may inflate unexpectedly, resulting in personal injury. When scrapping the airbags or the vehicle that has the airbags, consult Maruti Suzuki authorized workshop.


Front Airbag Deployment Conditions

Front airbags deploy (inflation)

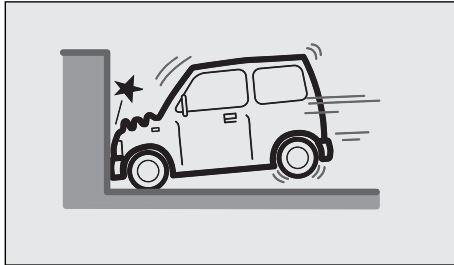

80J097

- Frontal collision with a fixed wall that does not move or deform at more than about 25 km/h

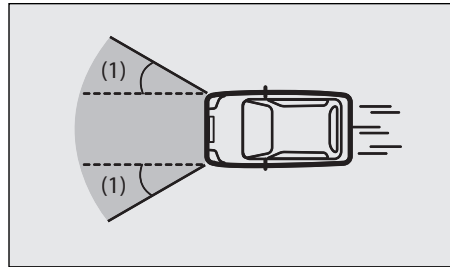


80J098E

- Strong impact equivalent to frontal collision such as above at left and right angles of about 30 degrees (1) or less from the front of your vehicle


Front airbags may inflate

Receiving a strong impact to the lower body of your vehicle, the front airbags may inflate.

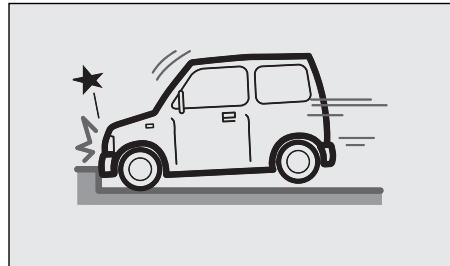


80J099

- Hitting a curb or medial strip

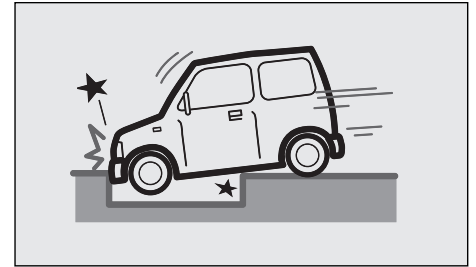

80J100E

- Falling into a deep hole or ditch

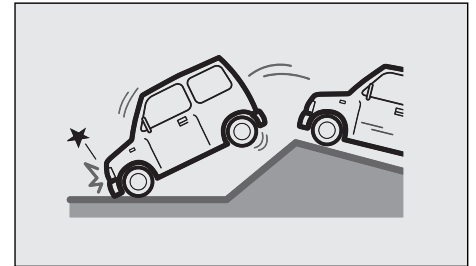

80J101


- Landing hard or falling

FOR SAFE DRIVING

Front airbags may not inflate


The front airbags may not inflate when a strong impact has not occurred since the collision object (including living beings like animals) was easy to be deformed or moved, or the crashed portion of your vehicle was easy to be deformed.

Also, front airbags may not inflate in many cases when the collision angle is greater than about 30 degrees at left and right angles from the front of your vehicle. Also, in certain collisions at low speed, the airbag may not inflate.

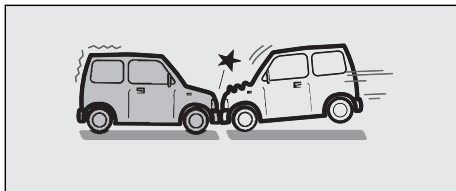

80J102

- Frontal collision to a stopped vehicle at less than about 50 km/h

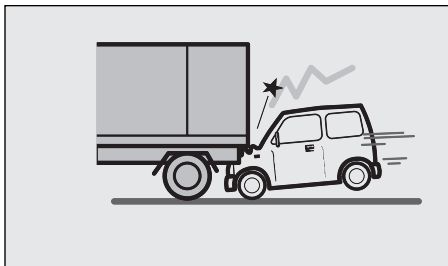


80J103

- Collision that the front of your vehicle goes under the bed of a truck etc.




80J104

- Collision with a utility pole or stumpage

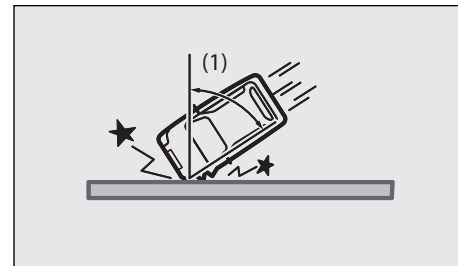

80J105E

- Collision with a fixed wall or guardrail at left and right angles of greater than about 30 degrees (1) from the front of your vehicle

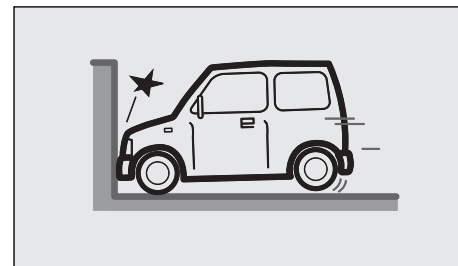


80J106

- Frontal collision with a fixed wall that does not move or deform at less than about 25 km/h


Front airbags do not inflate

Front airbags do not inflate in rear impacts, side impacts or rollovers, etc. However, these might inflate in a strong impact.

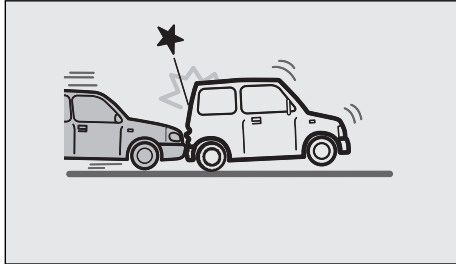


80J120

- Impact from the rear

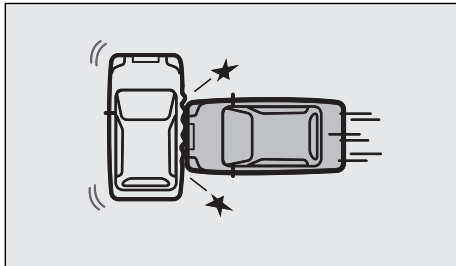

80J119

- Impact from the side

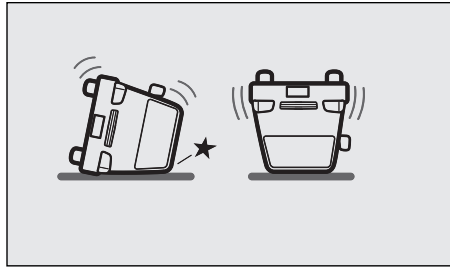


80J110

- Vehicle rollover

Side Airbags and Side Curtain Airbags Deployment Conditions

Side airbags and side curtain airbags deploy (inflation)

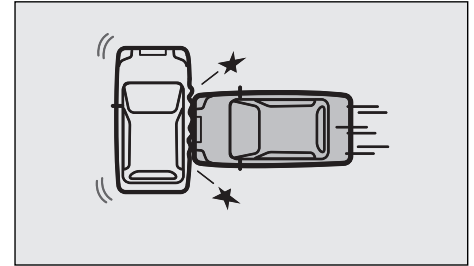


80J119

- Impacts from the side at about a right angle by a general passenger car to your vehicle at more than about 30 km/h or in a greater impact

FOR SAFE DRIVING


Side airbags and side curtain airbags may inflate in a strong impact

Side airbags and side curtain airbags may inflate even in a frontal collision, if there is a strong impact to the lateral direction.

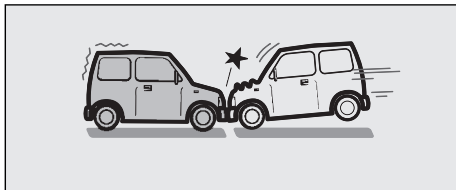


80J102

- Frontal collision

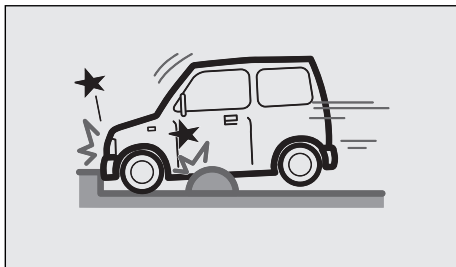


52RM20730

- Hitting a curb or bump

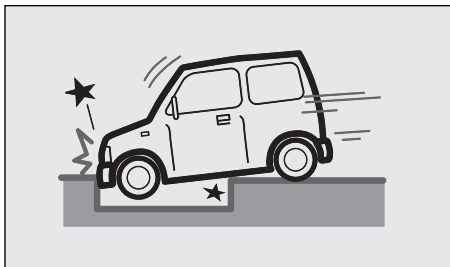

80J100E


- Falling into a deep hole or ditch

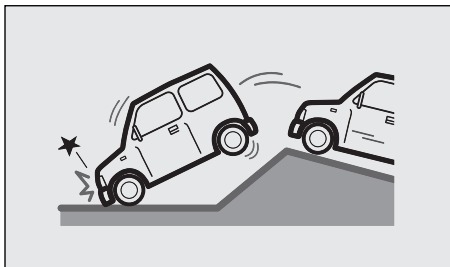


80J101

- Landing hard or falling

Side airbags and side curtain airbags may not inflate

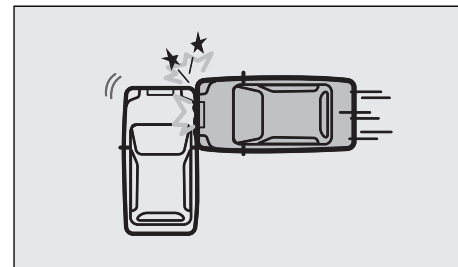


80J121

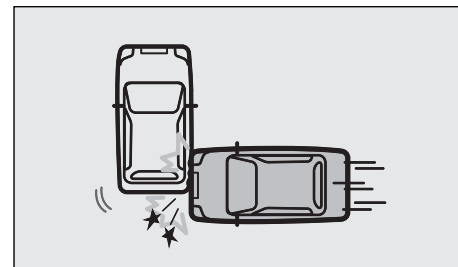


80J122

- Impact from the side to the vehicle body other than the passenger compartment

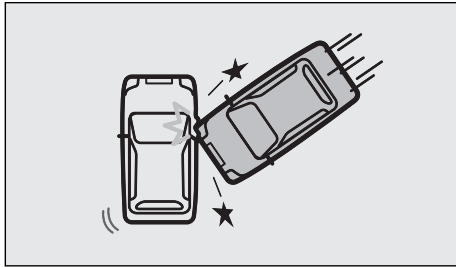


80J123

- Impact from the side at an oblique angle

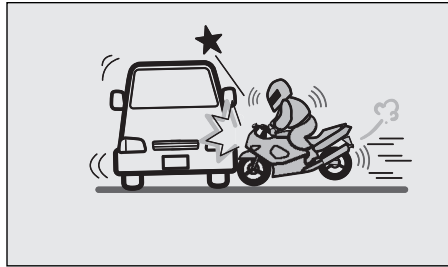


80J125

- Impact from the side by a motorcycle or bicycle

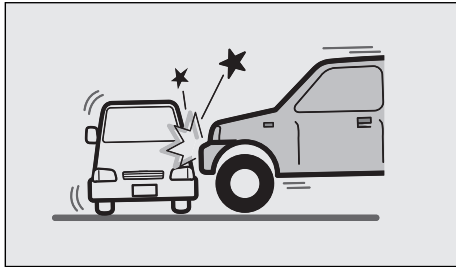

80J124


- Impact from the side by a high hood vehicle

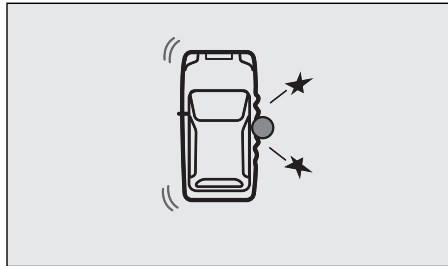

80J126


- Collision with a utility pole or stumpage

Side airbags and side curtain airbags do not inflate

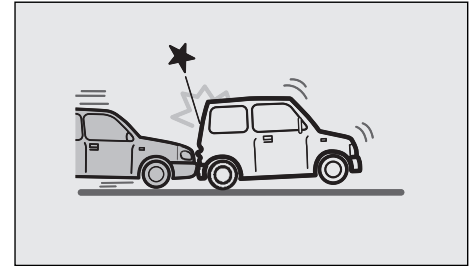

80J120

- Impact from the rear

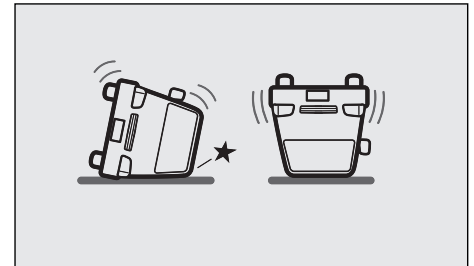

80J110

- Vehicle rollover

FOR SAFE DRIVING


When Starting the Engine

Be Careful of Carbon Monoxide Poisoning

WARNING

Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. If you breathe exhaust gases, you may feel drowsy, resulting in severe health problems or death in the worst case. If you start the engine, be careful of carbon monoxide poisoning.

Do not Run Engine in a Poorly-ventilated Area

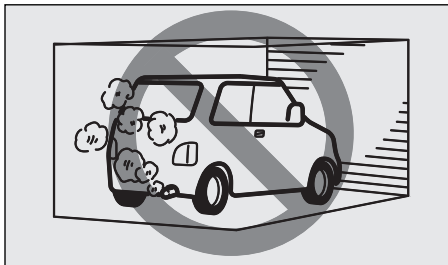

52D334

WARNING

Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, take the following precautions to help prevent carbon monoxide from entering your vehicle. Otherwise, it may result in severe health problems or death in the worst case.

- Do not leave the engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon monoxide in cabin and may lead to suffocation or breathing problem and lead to death.

(Continued)

WARNING

(Continued)

- Do not park with the engine running for a long period of time, even in an open area. In case of long periods, danger of choking and death on being inside the vehicle is a possibility when the engine is running. If it is necessary to sit for a short time in a parked vehicle with the engine running, check that the air intake selector is set to "FRESH AIR" and the blower is at high speed.
- Avoid operating the vehicle with the tailgate or trunk open. If it is necessary to do so, check that the all windows are closed, and the blower is at high speed with the air intake selector set to "FRESH AIR".
- To allow proper operation of your vehicle's ventilation system, keep the air inlet grill in front of the windshield clear of snow, leaves or other obstructions at all times.
- Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.
- Have the exhaust system inspected periodically for damage and leakage. Any damage or leakage should be repaired immediately.

Do not Take a Nap with Engine Running



69RHS172

⚠ WARNING

Do not take a nap with the engine running. Otherwise, it may result in an accident, severe health problems or death in the worst case.

- Exhaust gases can enter the vehicle due to surrounding conditions and wind direction, possibly causing carbon monoxide poisoning.
- The gearshift lever could change unintentionally, or the accelerator pedal could be depressed accidentally, causing an accident.
- If you were to accidentally step on the accelerator pedal while asleep, the engine and exhaust system could overheat, resulting in danger of fire

When Loading the Luggage

Loading too much luggage in the vehicle may have negative effects to the vehicle body or driving performance.

⚠ WARNING



59RN02230

- Fuel, chemical containers, spray cans etc. may catch a fire or cause an explosion.
Do not bring these objects into the vehicle.

(Continued)

WARNING

(Continued)



59RN02240

- If you place any objects on the instrument panel, these objects may move and interfere with driver's view or safe driving. Also, the front passenger's front airbag may not work properly or these objects may be thrown out when the airbag inflates in an accident. Do not place any objects on the instrument panel.



59RN07290

CAUTION


- If you hang any objects on the gearshift lever or use it as a handrest, the gearshift lever may not work properly, resulting in a malfunction or an accident. Do not hang any objects on the gearshift lever or use it as a handrest.
- If you pile up luggage, it may interfere with driver's view. Also, in a sudden braking, the luggage would jump out and it may result in an accident. Do not pile up luggage in the vehicle.
- If animals move about in the vehicle, it may interfere with driver's view. Also, in a sudden braking, it may result in an accident. When you bring animals into the vehicle, make sure that animals do not move about.

Hybrid system features (if equipped)

Your vehicle is a hybrid vehicle. It has characteristics different from conventional gasoline vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate it with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

System components

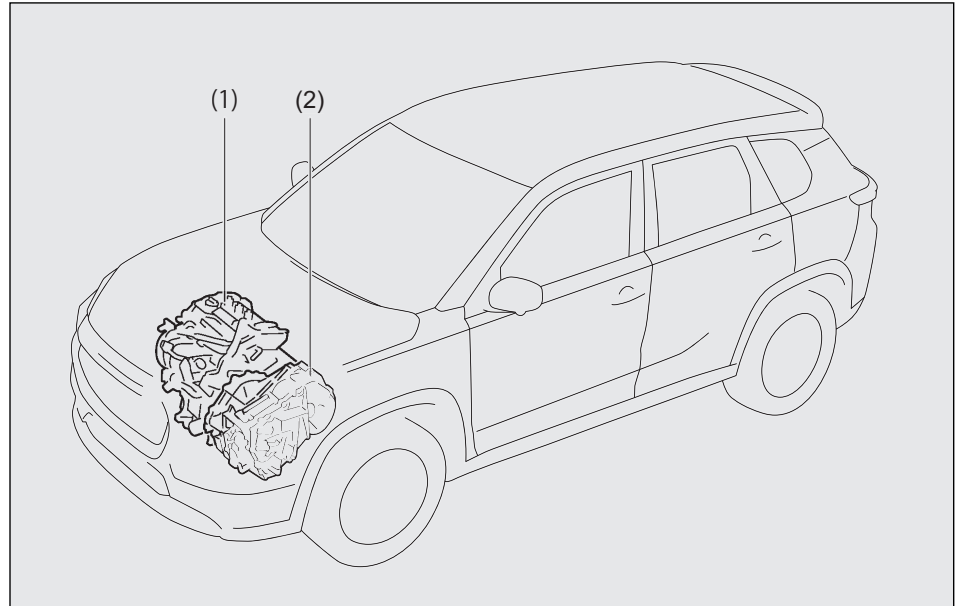

76TS20430

- 1) Gasoline engine
- 2) Electric motor (traction motor)

This illustration is an example of the Hybrid system explanation and may be different from the actual system on the vehicle.

FOR SAFE DRIVING

When stopped/during starting off

The gasoline engine stops* when the vehicle is stopped. During start off, the electric motor (traction motor) drives the vehicle. At slow speeds or when traveling down a gentle slope, the engine is stopped* and the electric motor (traction motor) is used.

When the shift lever is in N, the hybrid battery (traction battery) is not being charged.

*: When the hybrid battery (traction battery) requires charging or the engine is warming up, etc., the gasoline engine will not automatically stop.

During normal driving

The gasoline engine is predominantly used. The electric motor (traction motor) charges the hybrid battery (traction battery) as necessary.


When braking (regenerative braking)

The wheels operate the electric motor (traction motor) as a power generator and the hybrid battery (traction battery) is charged.

In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).

- The accelerator pedal is released while driving with the shift lever in D or B.
- The brake pedal is depressed while driving with the shift lever in D or B.

EV indicator

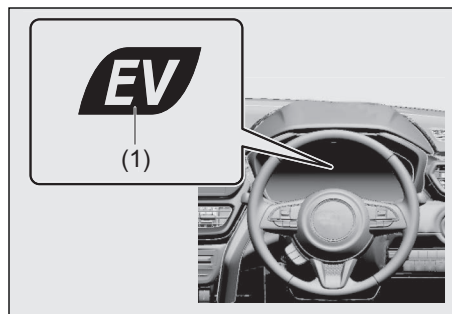

76TS20380

1) EV indicator

EV indicator comes on when the vehicle is driven using only the electric motor (traction motor) or the gasoline engine is stopped.

Conditions in which the gasoline engine may not stop

The gasoline engine starts and stops automatically. However, it may not stop automatically in the following conditions:

- During gasoline engine warm-up

- During hybrid battery (traction battery) charging
- When the temperature of the hybrid battery (traction battery) is high or low
- When the heater is switched on

Depending on the circumstances, the gasoline engine may also not stop automatically in other situations.

Charging the hybrid battery (traction battery)

As the gasoline engine charges the hybrid battery (traction battery), the battery does not need to be charged from an outside source. However, if the vehicle is left parked for a long time the hybrid battery (traction battery) will slowly discharge. For this reason, make sure to drive the vehicle at least once every few months for at least 30 minutes or 16 km. If the hybrid battery (traction battery) becomes fully discharged and you are unable to start the hybrid system, contact your Maruti Suzuki authorized workshop.

Charging the lead-acid 12-volt battery

Refer to “Jump-starting instructions” in “EMERGENCY SERVICE” section.

After the lead-acid battery has discharged or when the terminal has been removed and installed during exchange, etc, the gasoline engine may not stop even if the vehicle is being driven by the hybrid battery (traction battery). If this continues for a few days, contact your Maruti Suzuki authorized workshop.

Sounds and vibrations specific to a hybrid vehicle

There may be no engine sound or vibration even though the vehicle is able to move with the “READY” indicator is illuminated. For safety, apply the parking brake and make sure to shift the shift lever to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) from the rear luggage compartment when the hybrid system starts or stops.

- Relay operating sounds such as a snap or soft clank will be emitted from the hybrid battery (traction battery) from the rear luggage compartment when the hybrid system is started or stopped.
- Sounds from the hybrid system maybe heard when the back door is open.
- Sounds may be heard from the transmission when the gasoline engine starts or stops when driving at low speeds, or during idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds from the motor or hybrid system may be heard when the brake pedal is depressed or as the accelerator pedal is released.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vent on the rear door side trim beside the rear left seat.

Maintenance, repair, recycling, and disposal

Contact your Maruti Suzuki authorized workshop regarding maintenance, repair, recycling and disposal. Do not dispose of the vehicle yourself.


FOR SAFE DRIVING

Hybrid system precautions

Take care when handling the hybrid system, as it is a high voltage system (about 580V at maximum) as well as the vehicle contains parts that become extremely hot when the hybrid system is operating. Follow the warning labels attached to the vehicle.

System components

This illustration is an example of the Hybrid system explanation and may be different from the actual system on the vehicle.

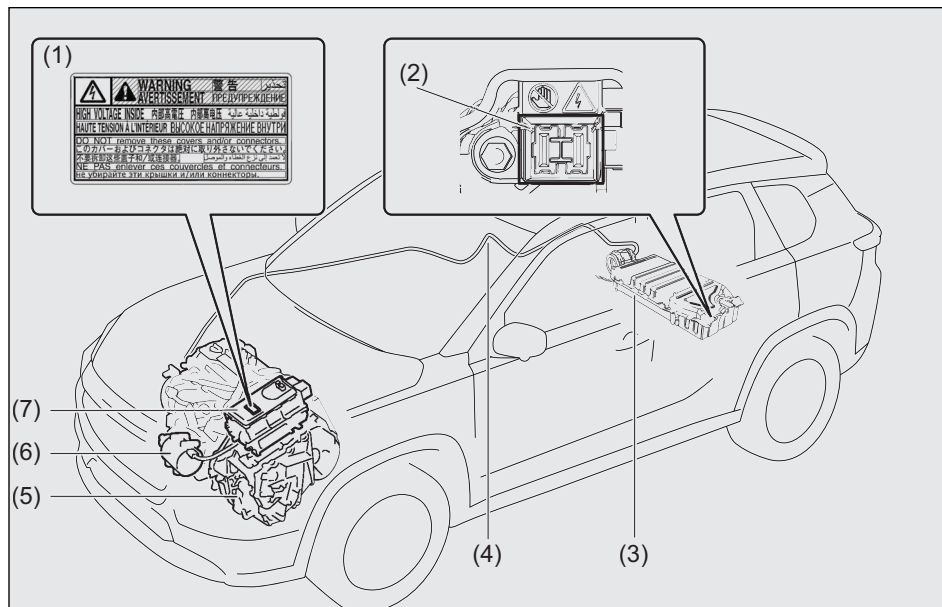

76TS20441

- | | |
|---------------------------------------|----------------------------------|
| (1) Warning label | (2) Service plug |
| (3) Hybrid battery (traction battery) | (4) High voltage cables (orange) |
| (5) Electric motor (traction motor) | (6) Air conditioning compressor |
| (7) Power control unit | |

Running out of fuel

When the vehicle runs out of fuel and the hybrid system cannot be restarted, fill the fuel tank with the gasoline until the low fuel warning light is turned off.

The amount of the gasoline required to restart the hybrid system is 11L (19.4 Imp pt) at minimum which depends on the tilt of the vehicle. Add more gasoline if the hybrid system cannot be restarted.

Electromagnetic waves

High voltage parts and cables on hybrid vehicles incorporate electromagnetic shielding, and therefore emit approximately the same amount of electromagnetic waves as conventional gasoline powered vehicles or home electronic appliances.

Your vehicle may cause sound interference in some third party-produced radio parts.

Hybrid battery (traction battery)

The hybrid battery (traction battery) has a limited service life. The lifespan of the hybrid battery (traction battery) can change in accordance with driving style and driving conditions.

Starting the hybrid system in an extremely cold environment

When the hybrid battery (traction battery) is extremely cold (below approximately -15°C [5°F]) under the influence of the outside temperature, it may not be possible to start the hybrid system. In this case, try to start the hybrid system again after the temperature of the hybrid battery increases due to the outside temperature increase etc.

WARNING

This vehicle has high voltage DC and AC systems as well as a 12-volt system. DC and AC high voltage is very dangerous and can cause severe burns and electric shock that may result in death or serious injury.

- Never touch, disassemble, remove or replace the high voltage parts, cables or their connectors.
- The hybrid system will become hot after starting as the system uses high voltage. Be careful of both the high voltage and the high temperature, and always obey the warning labels attached to the vehicle.
- Never try to open the service plug located beside the traction battery in the luggage compartment. The service plug is used only when the vehicle is serviced and is subject to high voltage.

WARNING

Observe the following precautions to reduce the risk of death or serious injury:

- Pull your vehicle off the road, apply the parking brake, shift the shift lever to “P” (Park) and turn the hybrid system off.
- Do not touch the high voltage parts, cables and connectors.
- If electric wires are exposed inside or outside your vehicle, an electric shock may occur. Never touch exposed electric wires.
- If a fire occurs in the hybrid vehicle, leave the vehicle as soon as possible. Never use a fire extinguisher that is not meant for electric fires. Using even a small amount of water may be dangerous.
- If your vehicle needs to be towed, do so with the front wheels raised. If the wheels connected to the electric motor (traction motor) are on the ground when towing, the motor may continue to generate electricity. This may cause a fire.

WARNING

- Inspect the ground under the vehicle carefully. If you find that liquid has leaked onto the ground, the fuel system may have been damaged. Leave the vehicle as soon as possible.
- Never touch, disassemble, remove or replace the high voltage parts, cables or their connectors.
- Do not touch the battery if liquid is leaking from or adhering to it. If electrolyte (carbonate ester-based organic electrolyte) from the hybrid battery (traction battery) comes into contact with the eyes or skin, it could cause blindness or skin wounds. In the unlikely event that it comes into contact with the eyes or skin, wash it off immediately with a large amount of water, and seek immediate medical attention.

(Continued)

WARNING

(Continued)

- If electrolyte is leaking from the hybrid battery (traction battery), do not approach the vehicle. Even in the unlikely event that the hybrid battery (traction battery) is damaged, the internal construction of the battery will prevent a large amount of electrolyte from leaking out. However, any electrolyte that does leak out will give off a vapor. This vapor is an irritant to skin and eyes and could cause acute poisoning if inhaled.
- Do not bring burning or high-temperature items close to the electrolyte. The electrolyte may ignite and cause a fire.

⚠ WARNING

Your vehicle contains a sealed lithium-ion battery.

Never resell, hand over or modify the hybrid battery. To prevent accidents, hybrid batteries that have been removed from a disposed vehicle are collected through your Maruti Suzuki authorized workshop. Do not dispose of the battery yourself.

Unless the battery is properly collected, the following may occur, resulting in death or serious injury:

- The hybrid battery may be illegally disposed of or dumped, and it is hazardous to the environment or someone may touch a high voltage part, resulting in an electric shock.
- The hybrid battery is intended to be used exclusively with your hybrid vehicle. If the hybrid battery is used outside of your vehicle or modified in any way, accidents such as electric shock, heat generation, smoke generation, an explosion and electrolyte leakage may occur.
- When reselling or handing over your vehicle, the possibility of an accident is extremely high because the person receiving the vehicle may not be aware of these dangers.

(Continued)

⚠ WARNING

(Continued)


- If your vehicle is disposed of without the hybrid battery having been removed, there is a danger of serious electric shock if high voltage parts, cables and their connectors are touched. In the event that your vehicle must be disposed of, the hybrid battery must be disposed of by your Maruti Suzuki authorized workshop. If the hybrid battery is not disposed of properly, it may cause electric shock that can result in death or serious injury.

NOTICE

Your vehicle contains the hybrid battery (traction battery) air intake vent. Do not carry large amounts of water such as water cooler bottles in the vehicle. If water spills onto the hybrid battery (traction battery), the battery may be damaged. Have the vehicle inspected by your Maruti Suzuki authorized workshop.

Before opening the hood

Before you open the hood, make sure that the ignition mode is LOCK (OFF) and READY indicator comes off on the information display (1).

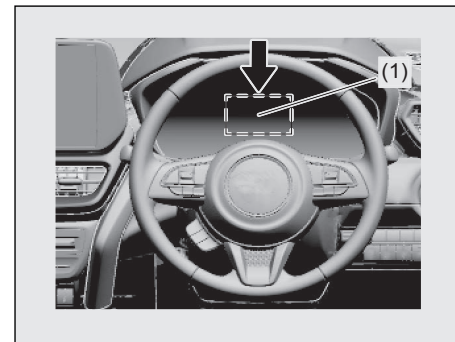

76TS40410

(1) Information display

⚠ WARNING

Before opening the hood, make sure the power switch and "READY" indicator are turned off to avoid a sudden engine start. Failure to do so may result in serious injury.

FOR SAFE DRIVING

Hybrid battery (traction battery) air intake vent

There is an air intake vent near the right side of the rear seat and rear right door for the purpose of cooling the hybrid battery (traction battery). If the vent becomes blocked, the hybrid battery (traction battery) input and output may be reduced.



76TS40410

(1) Hybrid battery air intake vent

NOTICE

- **Make sure that the air intake vent is not blocked, such as by a seat cover, plastic cover, or luggage. If the vent is blocked, the hybrid battery (traction battery) input and output may be restricted, possibly leading to a malfunction.**
- **Clean the air intake vent regularly to prevent the hybrid battery (traction battery) from overheating.**
- **Do not get water or foreign materials in the air intake vent as this may cause a short circuit and damage the hybrid battery (traction battery).**
- **A filter is installed to the air intake vent. When the filter remains noticeably dirty even after cleaning the air intake vent, filter cleaning or replacement is recommended.**


Emergency shut off system

When a certain level of impact is detected by the impact sensor, the emergency shut off system blocks the high voltage current and stops the fuel pump to minimize the risk of electrocution and fuel leakage. If the emergency shut off system activates, your vehicle will not restart. To restart the hybrid system, contact your Maruti Suzuki authorized workshop.

Hybrid warning message

A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.

If a warning message is shown on the multi-information display, read the message and follow the instructions.

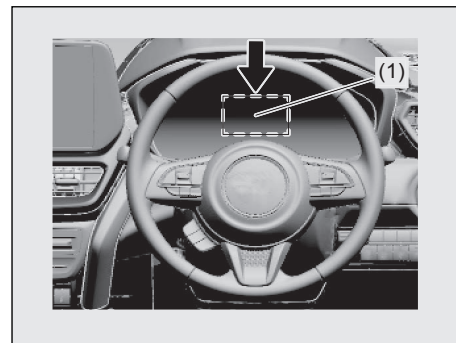

76TS40410

(1) Information display

If a warning light comes on, a warning message is displayed, or the 12-volt lead-acid battery is disconnected, the hybrid system may not start. In this case, try to start the system again. If the "READY" indicator does not come on, contact your Maruti Suzuki authorized workshop.

Hybrid battery (Traction battery)

Check the charge of the hybrid battery (traction battery). If the charge is low, shift the gearshift lever to "P" position allow the engine of the hybrid system to run to charge the hybrid battery (traction battery) and then press the power switch.

NOTICE

If the gearshift lever is in "N" position, the hybrid battery (traction battery) will not be charged even when the engine is running. Therefore, if the vehicle is left with the shift lever in "N" position for a long period of time, the hybrid battery (traction battery) will discharge and this may result in the vehicle not being able to start.

If "DRIVE BATTERY POWER LOW AVOID USING GEAR POSITION N" is displayed

This message may be displayed when the gearshift lever is in "N" position. As the hybrid battery (traction battery) cannot be charged when the gearshift lever is in "N" position, shift the gearshift lever to "P" position when the vehicle is stopped.

If "DRIVE BATTERY POWER LOW USE GEAR P TO RESTART" is displayed

This message is displayed when the hybrid battery (traction battery) charge has become extremely low because the gearshift lever has been left in "N" position for a certain amount of time.

If "CHANGE GEARSHIFT POSITION TO P" is displayed

Message is displayed when the driver's door is opened without turning the power switch to OFF with the gearshift lever in any position other than "P" position. Shift the gearshift lever to "P" position.

If "GEAR POSITION N RELEASE ACCELERATOR BEFORE SHIFTING" is displayed

The accelerator pedal has been depressed when the shift lever is in "N" position. Release the accelerator pedal and shift the gearshift lever to "D" position or "R" position.

If "DRIVE BATTERY COOLING PARTS MALFUNCTION SEE OWNER'S MANUAL" is displayed


This message is displayed when the filters may be clogged, the air intake vents may be blocked, or there may be a gap in the duct. Therefore, have the vehicle inspected by Maruti Suzuki authorized workshop immediately.

If "BRAKING POWER LOW STOP IN SAFE PLACE CONTACT DEALER" is displayed

This message is displayed when the brake power is low. Continuing to drive your vehicle may be dangerous. Stop your vehicle in a safety place immediately and contact your Maruti Suzuki authorized workshop for your vehicle inspected.

If "BRAKE SYSTEM MALFUNCTION BRAKING POWER LOW CONTACT DEALER" is displayed

This message is displayed when there may be a problem or malfunction with the brake system and the brake power is low. Have your vehicle inspected by Maruti Suzuki authorized workshop.

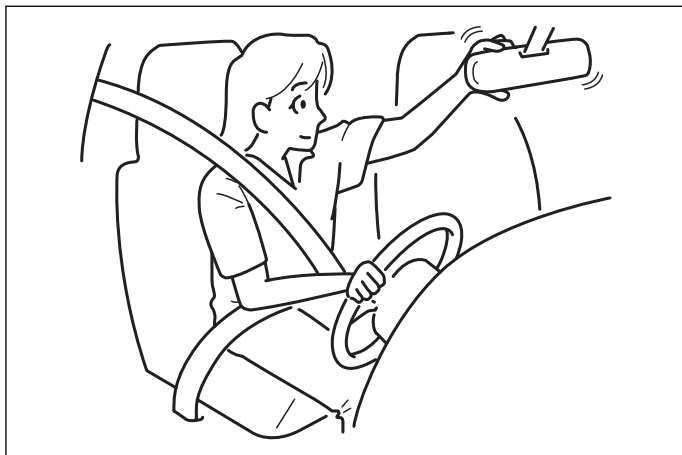

60G404

BEFORE DRIVING


Keys	3-1
Doors	3-1
Keyless Push Start System Remote Controller	3-6
Security System	3-13
Windows	3-15
Lighting Control Lever	3-19
Headlight Leveling Switch	3-23
Turn Signal Control Lever	3-24
Hazard Warning Switch	3-25
Windshield Wiper and Washer Lever	3-25
Horn	3-28
Heated Rear Window Switch	3-29

BEFORE DRIVING

Keys

Your vehicle comes with a pair of identical keys. Keep one of the keys as a spare key in a safe place. One key can open all of the locks on the vehicle.

Key Number Plate

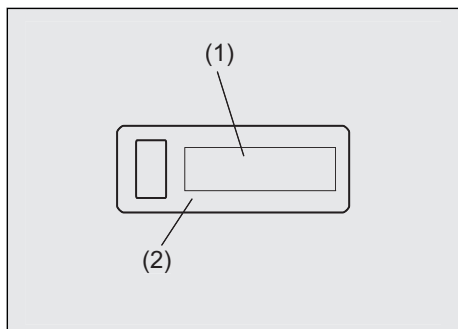

55T030020

The key identification number (1) is stamped on a metal tag (2) provided with the keys. Keep the tag in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.

KEY NUMBER:

NOTE:

- *Carefully keep the tag in the place other than your vehicle, so that someone does not find out about the key identification number. If you lose your key, inform the key identification number to a Maruti Suzuki authorized workshop.*
- *When you resell or transfer your vehicle to a new owner or operator, give the key number plate with your vehicle to him or her.*

Immobilizer System

For detail of immobilizer system, "Immobilizer System" in the "OPERATING YOUR VEHICLE" section

Doors

⚠ WARNING


- When a seat belt or luggage is caught by a door, the door cannot be shut properly and it may open while driving. This may cause an accident. Close a door not to catch a seat belt or luggage in the door.
- When you keep the tailgate open with the engine running or the hybrid system activating, exhaust gases will enter the vehicle and cause carbon monoxide poisoning. This may cause severe health problems or death in the worst case. Do not keep the tailgate open with the engine running or the hybrid system activating.
- To prevent fire or theft, stop the engine or the hybrid system and lock the doors when leaving the vehicle.
- When opening a door, be careful of the surrounding area. An accident, such as a collision with the vehicle or a pedestrian behind your vehicle, may occur. Be very careful when opening a door especially on a windy day.

⚠ CAUTION

- When a child opens or closes a door, his / her hands, legs or head may be caught in the door and this may cause injury. Opening or closing a door should be performed not by a child but by an adult.
- When the tailgate is not fully opened, it may be unexpectedly closed and this may cause injury. When opening the tailgate, open it fully.
- Opening the tailgate right behind the exhaust pipes may cause burn injury. With the engine running or the hybrid system activating, do not open the tailgate right behind the exhaust pipes.

NOTE:

- When leaving the vehicle even for a short period of time, do not leave cash or valuables in the vehicle, to avoid risk of theft.
- Depending on the setting conditions of the security alarm and the opening conditions of the doors, an alarm may operate. Refer to "Security System (if equipped)" in this section.

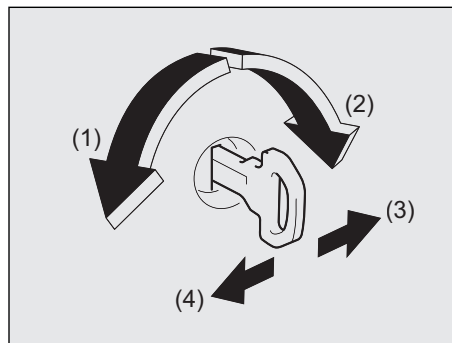Side Door Locks

59RN03180

- (1) UNLOCK
- (2) LOCK
- (3) Front
- (4) Rear

To lock a front door from outside the vehicle:

- Insert the key and turn the top of the key toward the front of the vehicle, or
- Turn the lock knob forward, then pull and hold the door handle as you close the door.

To unlock a front door from outside the vehicle, insert the key and turn the top of the key toward the rear of the vehicle.



76TS30010

- (1) UNLOCK
- (2) LOCK

To lock a door from inside the vehicle, turn the lock knob forward. Turn the lock knob rearward to unlock the door.


To lock a rear door from outside the vehicle, turn the lock knob forward and close the door. You do not need to pull and hold the door handle as you close the door.

NOTE:

Be sure to hold the door handle when you close a locked front door, or the door will not remain locked.

BEFORE DRIVING

Central Door Locking System

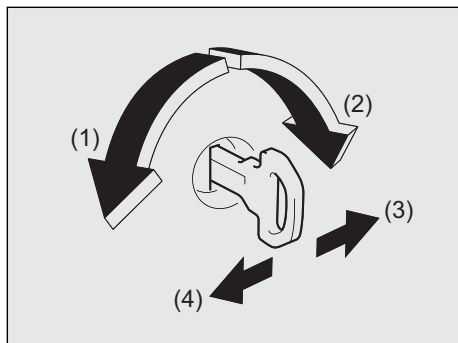

- (1) UNLOCK
- (2) LOCK
- (3) Front
- (4) Rear

You can lock and unlock all doors (including the tailgate) simultaneously by using the key in the driver's door lock.


To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle once.

To unlock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle twice.

NOTE:

You can switch the function that unlocks all doors from requiring two turns to requiring one turn, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in "INSTRUMENT CLUSTER" section.

To unlock the driver's door only, insert the key in that door lock and turn the top of the key toward the rear of the vehicle once.

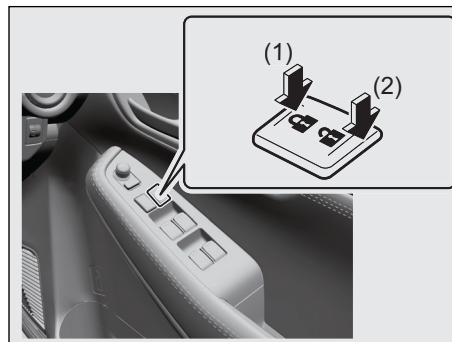


- (1) LOCK
- (2) UNLOCK

You can also lock or unlock all doors by pressing the front or rear of the switch, respectively.

NOTE:

- You can also lock or unlock all doors by operating the remote controller. Refer to "Keyless Push Start System Remote Controller" in this section.
- If your vehicle is equipped with the keyless push start system, you can also lock or unlock all doors by pushing the request switch. Refer to "Keyless Push Start System Remote Controller" in this section.

Child-proof Locks (rear door)

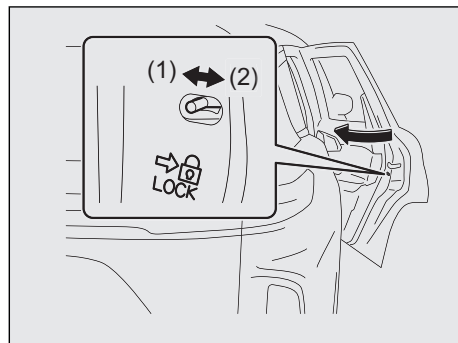

55T030410

- (1) UNLOCK
- (2) LOCK

Each of the rear doors is equipped with a child-proof lock which can be used to help prevent unwanted opening of the door from inside the vehicle. When the lock lever is in the lock position (2), the rear door can only be opened from outside. When the lock lever is in the unlock position (1), the rear door can be opened from inside or outside.

WARNING


Be sure to place the child-proof lock in the lock position whenever children are seated in the rear.

NOTE:

When you open a door from inside, put your hand out of the window and use the door handle.

Tailgate

Locking and unlocking from outside the vehicle

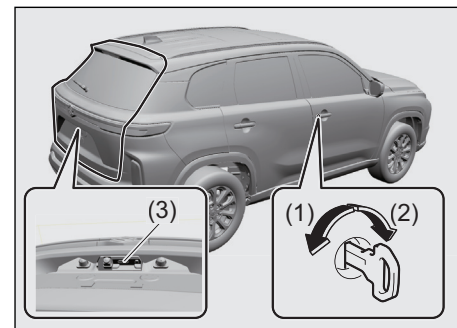

76TS30100

- (1) UNLOCK
- (2) LOCK
- (3) Tailgate unlatch switch

You can lock and unlock the tailgate by using the key in the driver's door lock.

To open the tailgate, push and hold the tailgate unlatch switch (3) and lift the tailgate.

NOTE:

When the tailgate is closed incompletely, follow the procedure below:


- 1) Push the tailgate unlatch switch (3) and open the tailgate.
- 2) Close the tailgate.
- 3) Check that the tailgate is closed completely.

BEFORE DRIVING

WARNING

Always make sure that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.

CAUTION

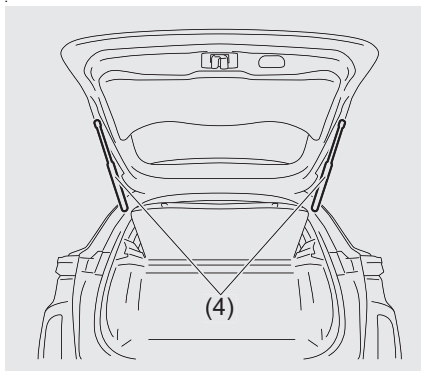

76TS30130


To avoid damage and malfunction of the dumper stay, observe the following precautions. Otherwise, the damper stay (4) which upholds the tailgate may not operate smoothly and the tailgate may not be kept up when opening it.

- Do not scratch the rod part of the damper stay and do not attach foreign materials such as dirt, vinyl and tape to this part.
- Do not lay your hands on the damper stay and do not hang any objects.

Unlocking from inside the vehicle

If you cannot unlock the tailgate by using the key in the driver's door lock due to a discharged lead-acid battery or malfunction, ask Maruti Suzuki authorized workshop. In emergency situations, follow the procedures below.

- 1) Remove the luggage compartment cover (if equipped) and fold the rear seat forward for easier access. Refer to "Folding rear seats" in "FOR SAFE DRIVING" section for details on how to fold the rear seat forward.

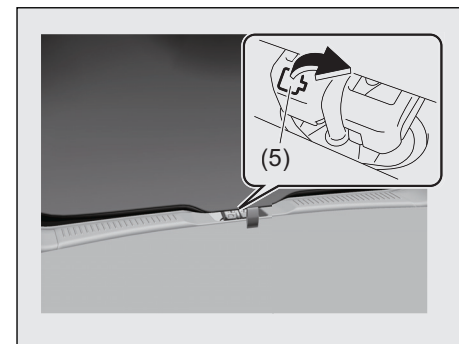


76TS30470

- 2) Open the cover (5) in the lock mechanism of the tailgate.

NOTE:

Be careful not to lose the cover (5) because it is small and detachable.

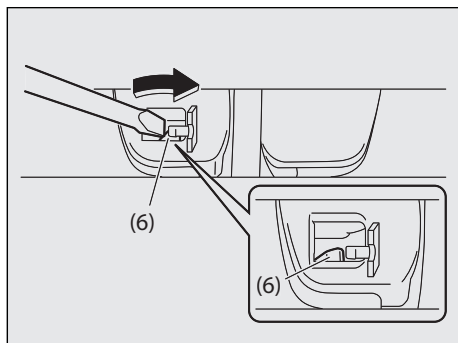

65P30080

- 3) Move the lever (6) in arrow direction by using a flat-bladed screwdriver to unlock the tailgate.
- 4) Push open the tailgate from inside. The tailgate will be latched again by simply closing the tailgate.


If you release the lever immediately after unlocking, the tailgate will be half-shut. Push open the tailgate while pulling the lever.

If the tailgate cannot be unlatched, have the vehicle inspected by a Maruti Suzuki authorized workshop.

⚠ CAUTION

- Do not touch the edges of the holes of the tailgate when you pull or push the lever. Otherwise you could be injured.
- Check that there is no one near the tailgate when pushing open the tailgate from inside the vehicle.

Keyless Push Start System Remote Controller

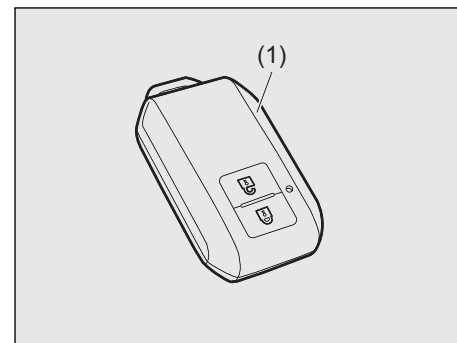

55T030010

Your vehicle is equipped with a keyless push start system remote controller (1). The remote controller has a keyless entry system and a keyless push start system. For details, refer to the following explanations.

BEFORE DRIVING

WARNING


Radio waves from the keyless push start system antenna(s) may interfere with operation of electrical medical equipment such as pacemakers. Failure to take the precautions listed below can increase the risk of severe injury or death due to radio wave interference.

- Anyone who uses electrical medical equipment such as a pacemaker should consult the medical equipment supplier or their medical advisor about whether radio waves from the antenna(s) can interfere with the medical equipment.
- If radio wave interference is a concern, have the function of the antenna(s) disabled by a Maruti Suzuki authorized workshop.

Keyless Push Start System Remote Controller

The remote controller enables the following operations:

- You can lock or unlock the doors by operating LOCK/UNLOCK buttons on the remote controller. Refer to the explanation in this section.
- You can lock or unlock the doors by pushing the request switch. For details, refer to the explanation in this section.
- You can start the engine or hybrid system without using an ignition key. For details, refer to "Engine switch (vehicle with keyless push start system)" in "OPERATING YOUR VEHICLE" section.

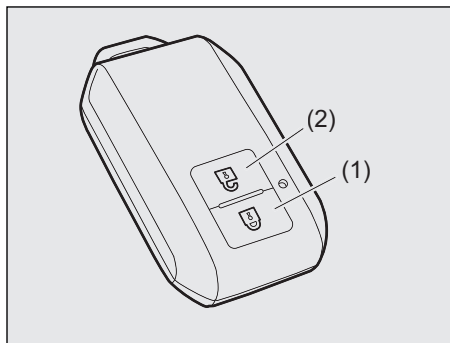

- (1) LOCK button
(2) UNLOCK button

There are two ways to lock or unlock all doors (including the tailgate) simultaneously by operating the remote controller near the vehicle.

Central door locking system

- To lock all doors, push LOCK button (1) once.
- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

NOTE:

You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in "INSTRUMENT CLUSTER" section.

The turn signal lights will flash once and the exterior buzzer will sound once when the doors are locked.

When the doors are unlocked:

- The turn signal lights will flash once and the exterior buzzer will sound twice.
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you press the engine switch or the power switch during this time, the light will start to fade out immediately.

Check that the doors are locked after you operate LOCK button (1).


NOTE:

If no door is opened within about 30 seconds after UNLOCK button (2) is operated, the doors will automatically lock again.

NOTE:

- The maximum operating distance of the remote controller is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the remote controller if the ignition mode is other than the "LOCK" (OFF).
- When any door is open, if you push LOCK button on the remote controller, the exterior buzzer will sound and doors cannot be locked.
- If you lose one of the remote controllers, ask your Maruti Suzuki authorized workshop as soon as possible for a replacement. Have your Maruti Suzuki authorized workshop program the new transmitter code in your vehicle's memory so that the old code is erased.

Keyless unlocking/locking using the request switches

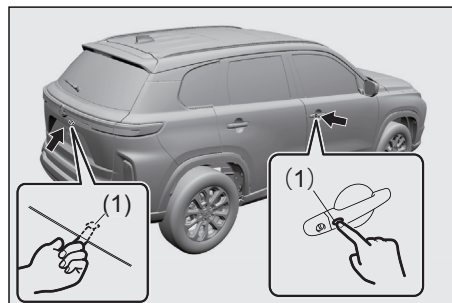

76TS30110

When the remote controller is within the operating range described in this section, you can lock or unlock all the doors (including tailgate) by pushing the request switch (1) on the driver's door handle or front passenger's door handle or tailgate.

When all doors are unlocked:

- To lock all doors, push one of the request switches once.

The turn signal lights will flash once and the exterior buzzer will sound once when the doors are locked.

To unlock a door or all doors:

- Push one of the request switches once to unlock only one door.
- Push one of the request switches twice to unlock all doors.

NOTE:

You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in "INSTRUMENT CLUSTER" section.

When the doors are unlocked:


- The turn signal lights will flash twice and the exterior buzzer will sound twice.
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you press the engine switch or the power switch during this time, the light will start to fade out immediately.

Check that the doors are locked after you operate the request switch to lock the doors.

NOTE:

- The door locks cannot be operated by the request switch under the following conditions:
 - If any door is open or is not completely closed.
 - If the ignition mode is in any other mode than LOCK (OFF).
- If no doors are opened within about 30 seconds after unlocking the doors by pushing the request switch, the doors will be locked again automatically.

BEFORE DRIVING

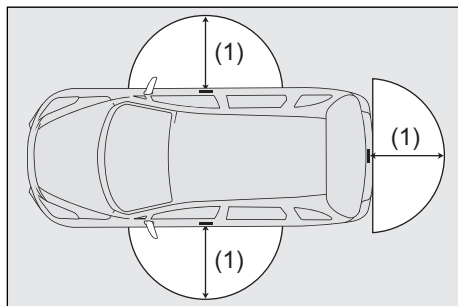

68PH00210

(1) 80 cm (2.6 ft)

When the remote controller is within approximately 80 cm (2.6 ft) from a front door handle or the tailgate switch, you can lock or unlock the doors by pushing the request switch.

NOTE:

- If the remote controller is outside the request switch operating range described above, you will not be able to operate the request switch.
- If the battery of the remote controller runs down or there are strong radio waves or noise, the request switch operating range may be reduced or the remote controller may be inoperative.
- If the remote controller is too close to the door glass, the request switches may not operate.
- If a spare remote controller is in the vehicle, the request switches may not operate normally.

- The remote controller will only operate a request switch if it is within the switch's operating range. For example, if the remote controller is within the operating range of the driver's door request switch but not the front passenger's door request switch or the tailgate request switch, the driver's door switch can be operated but the front passenger's door switch or tailgate switch cannot be operated.
- If the remote controller is located in the following places in the vehicle, the remote controller may be detected and the request switch may be activated depending on the radio wave condition, there is a risk of that the remote controller may be trapped inside the vehicle.
 - On the instrument panel
 - Floor
 - Luggage compartment
 - Deep in storage compartments such as the glove box or a door pocket, etc.

NOTICE

The remote controller is a sensitive electronic instrument. To avoid damaging the remote controller:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the remote controller away from magnetic objects such as a television.

NOTE:


The keyless push start system may not function correctly in certain environments or under certain operating conditions such as the following:

- When there are strong signals coming from a television, power station or a cellular phone.
- When the remote controller is in contact with or covered by a metal object.
- When a radio wave type remote keyless entry is used nearby.
- When the remote controller is placed near an electronic device such as personal computer.

Some additional precautions you should take and information you should be aware of are:


- Check that the key is stowed in the remote controller. If the remote controller becomes unusable, you will not be able to lock or unlock the doors.
- Check that the driver always carries the remote controller.
- If you lose one of the remote controllers, ask your Maruti Suzuki authorized workshop as soon as possible for a replacement. Have your Maruti Suzuki authorized workshop program the new transmitter code in your vehicle's memory so that the old code is erased.
- You can use up to four remote controllers and the keys for your vehicle. Ask your Maruti Suzuki authorized workshop for details.

- The battery life of the remote controller is about two years, but it can vary depending on usage conditions.

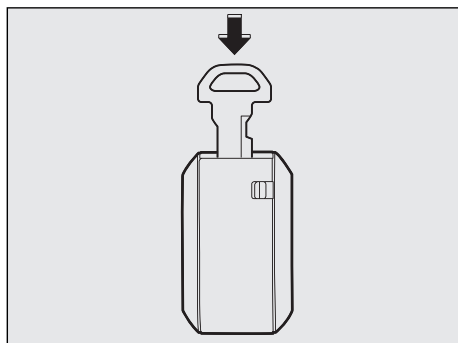

55T030030

To stow the key into the remote controller, push the key in the remote controller until you hear a click.

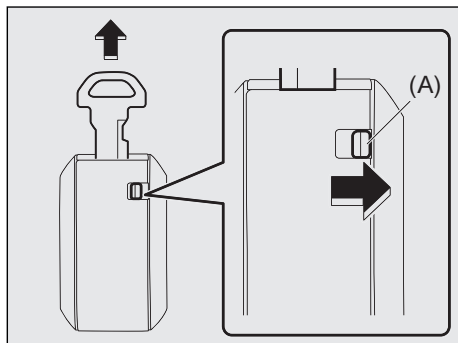

55T030040

To remove the key from the remote controller, slide the lock knob (A) in arrow direction and pull the key out from the remote controller.

Request switch warning buzzer

The exterior buzzer beeps for about 2 seconds in the following conditions to warn you that the request switch is not working:


- The request switch is pressed after all doors are closed with the ignition mode changed to ACC or ON position by pressing the engine switch or the power switch when the remote controller is outside the vehicle.
- The request switch is pressed in any of the following conditions after changing the ignition mode to LOCK (OFF) by pressing the engine switch or the power switch.
 - The remote controller is left inside the vehicle.
 - Any door (including the tailgate) is open.

Press the request switch again after doing the following:

With the ignition mode changed to LOCK (OFF) by pressing the engine switch or the power switch, bring out the remote controller if it is inside the vehicle and check that all doors are completely closed.


Reminder function

With 4.2inch information display model

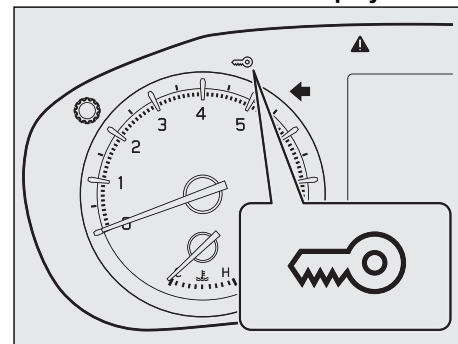

76TS30180

With 7.0inch information display model

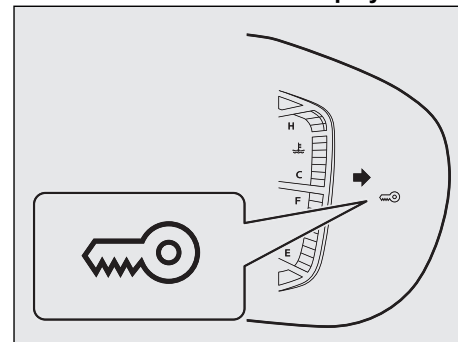

55T030360

BEFORE DRIVING

If the remote controller is not in the vehicle under the following conditions, the buzzer sounds intermittently for about 2 seconds and the immobilizer/keyless push start system warning light on the instrument cluster blinks:

When one or more doors are opened and all of the doors are later closed with the ignition in any other mode than LOCK (OFF).

The indicator light will turn off within several seconds after the remote controller is returned to an area of the vehicle other than the rear luggage area.

If the remote controller is left in the vehicle and you lock the driver's door or front passenger's door as described below, the door will be automatically unlocked.

- If you open the driver's door and lock the door by turning the lock knob forward or pushing the power door locking switch, the driver's door will be automatically unlocked.
- If you open the front passenger's door and lock the door by turning the lock knob forward or pushing the power door locking switch, the front passenger's door will be automatically unlocked.

NOTE:

- *The reminder will not operate when the remote controller is on the instrument panel, in the glove box, in a storage compartment, in the sun visor or on the floor, etc.*
- *Check that the driver always carries the remote controller.*
- *Do not leave the remote controller in the vehicle when leaving the vehicle.*

Battery replacement

WARNING

Swallowing a lithium battery may cause serious internal injury or death in the worst case. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

NOTICE

- **The remote controller is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.**
- **When you replace the battery by yourself, touch a metallic part and remove static electricity to prevent damaging the remote controller.**

NOTE:


- Used batteries must be disposed of properly according to applicable rules or regulations and must not be disposed of with ordinary household trash.
- You may damage the remote controller when replacing its battery. Ask your Maruti Suzuki authorized workshop to inspect the system.
- When you purchase the battery by yourself at Maruti Suzuki authorized workshop check the year of manufacture for the battery.

If the remote controller becomes unreliable, replace the battery.

NOTE:


You may damage the remote controller when replacing its battery. Asking a Maruti Suzuki authorized workshop is recommended.

To replace the battery of the remote controller:

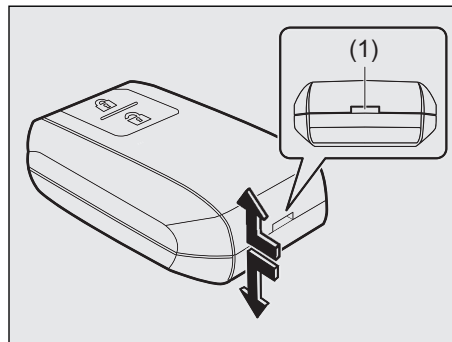

73S020020


- 1) Pull the key out from the remote controller.
- 2) Separate the remote controller up and down while applying force to the slot (1) on the side of the remote controller.

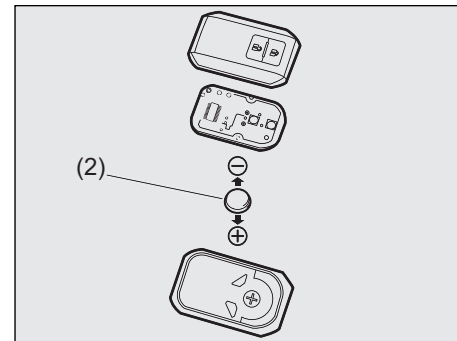

73S020040

- (2) Lithium disc type battery: CR2032

- 3) Replace the battery (2) so its + terminal faces the bottom of the case as shown in the illustration.
- 4) Close the remote controller firmly.
- 5) Check that the door locks can be operated with the remote controller.
- 6) Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.

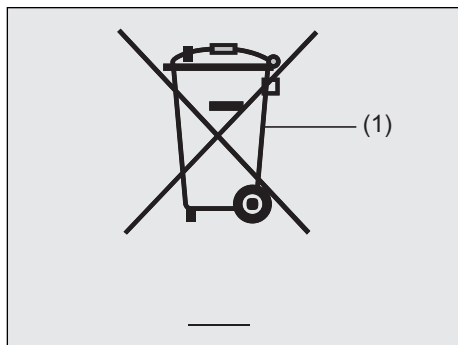

(1) Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that a used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate battery disposal.

The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling of the used battery, consult Maruti Suzuki authorized workshop.

Security System

The security system is armed after you close and lock all doors (including engine hood and tailgate) by using the keyless push start system remote controller or request switch.

Once the system is armed, any attempt to open a door by using any other means (*) than the keyless push start system remote controller, request switch or open the engine hood, will cause the alarm to be triggered.

* These means include the following:

- The key
- The lock knob on a door
- The central door locking switch
- The tailgate unlatch switch

Also, in case that you have set the shock sensor to enabled state and set sensitivity of the pre-warning function and full blast warning function to a level other than 0, the warning will be triggered in case of any attempt to tamper with the vehicle. The shock sensor can be selected enabled or disabled state, and sensitivity of each warning can be adjusted as desired. To set the shock sensor, ask your Maruti Suzuki authorized workshop or use the setting mode of the information display.

NOTE:

- The default setting of the shock sensor is in the disabled state. Set to the enabled state and adjust sensitivity of each warning according to your preference. For details on how to use the information display, refer to "Information Display" in "INSTRUMENT CLUSTER" section.
- Your dealer may have already set the shock sensor of the vehicle to the enabled state before you purchase it. Consult your dealer for further information.


NOTE:

- The security system generates alarms when any of the predetermined conditions is met. However, the system does not have any function of blocking unauthorized entry into the vehicle.
- Always use the keyless push start system remote controller or request switch to unlock the doors when the security system has been armed. Using a key instead will trigger the alarm.
- If a person who does not know the security system is going to drive the vehicle, we recommend you explain the system and its operation to the person. Mistakenly triggering the alarm may cause a nuisance to others.

- Even if the security system is armed, you should still be careful to guard against theft. Do not leave money or valuable things in the vehicle.

How to Arm the Security System

Lock all doors (including engine hood and tailgate) using the keyless push start system remote controller or request switch. When the system is armed, the indicator continues to blink at intervals of approximately 2 seconds.

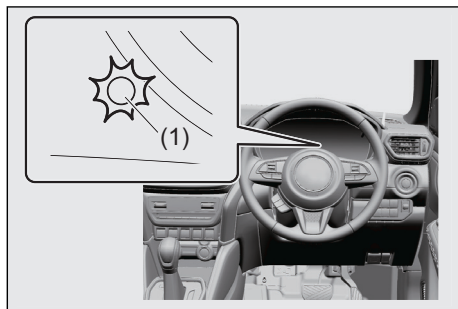

76TS30030

NOTE:

- To prevent the alarm from being accidentally triggered, avoid arming it while anyone remains inside the vehicle. The alarm will be triggered if any person inside opens the door, tailgate, engine hood, or the warning may be triggered if anyone swings the vehicle (if the shock sensor is in the enabled state).

- The security system is not armed when all doors are locked using the key from outside, using the door lock knobs or the central door locking switch from inside.
- If any door is not operated within approximately 30 seconds after the doors have been unlocked using the keyless push start system remote controller or request switch, the doors are automatically locked again. When the doors are locked, the security system will be armed.
- If the security system indicator (1) blinks when the ignition mode is "ON", there may be something wrong with the security system. Ask your Maruti Suzuki authorized workshop to inspect the system.

How to Disarm the Security System

Simply unlock the doors using the keyless push start system remote controller or request switch. The security system indicator will go out, indicating that the security system is disarmed.

How to Stop the Alarm

Should the alarm be triggered accidentally, the alarm will stop by the following operations.

- Press the engine switch or the power switch to change the ignition mode to ON in case of emergency.
- Unlock the doors using the keyless push start system remote controller or request switch.

NOTE:

- Even after the alarm has stopped, if you lock the doors using the keyless push start system remote controller or request switch, the security system will be rearmed.
- If you disconnect the battery while the security system is in the armed condition or the alarm is actually in operation, the alarm will be re-triggered when the battery is reconnected.
- Even after the alarm has stopped at the end of the predetermined operation time, it will be triggered again if any of the doors, tailgate or engine hood is opened, without disarming the security system.

BEFORE DRIVING

Checking Whether the Alarm has Been Triggered During Parking

If the alarm was triggered and you then the ignition mode is ON the security system indicator will blink rapidly for about 8 seconds and a buzzer will beep 4 times during this period. If this happens, check whether the vehicle has been broken into while you were away from it.

Security System Indication

- If any of the doors or tailgate are opened without unlocking by the keyless push start system remote controller or request switch, all turn signal lights start to blink and the interior buzzer beeps intermittently. After 5 seconds, the siren will sound for about 27.5 seconds. The security system indicator continues to blink during this time.
- If the engine hood is opened, all turn signal lights blink, and the siren sounds for about 27.5 seconds. The security system indicator continues to blink during this time.

(If the shock sensor is in the enabled state)

- If the vehicle feels a shock higher than the pre-warning sensitivity, the siren sounds for about 2 seconds (pre-warning). If the vehicle feel a shock higher than the full blast warning sensitivity, the siren sounds for about 5 seconds (full blast warning). The security system indicator continues to blink during this time.

NOTE:


If you set the full blast warning sensitivity higher than the pre-warning sensitivity in the setting mode of the information display, or the vehicle feels such shock as to be able to trigger the full blast warning, the full blast warning will be triggered preferentially. In this case, the pre-warning will not be triggered.

Windows

Electric Window Controls


The electric windows can only be operated when the ignition mode is ON.

Driver's side

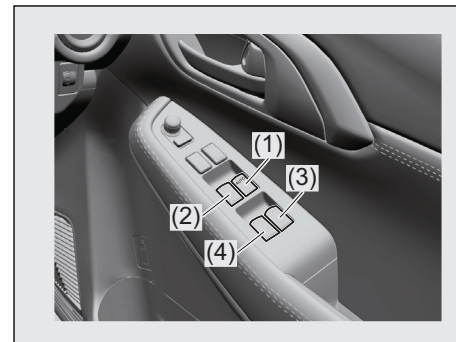


76TS30040

The driver's door has a switch (1) to operate the driver's window, and a switch (2) to operate the front passenger's window or there are switches (3), (4), to operate the rear right and left passenger windows, respectively.

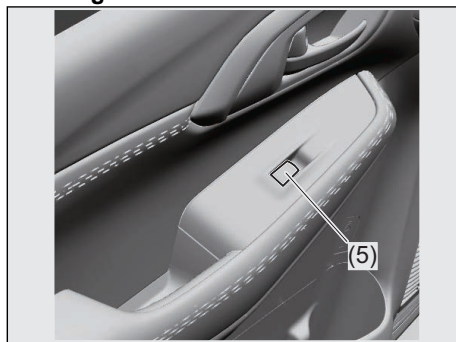Passenger's door / rear door

76TS30050

The passenger's door has a switch (5) to operate the passenger's window.

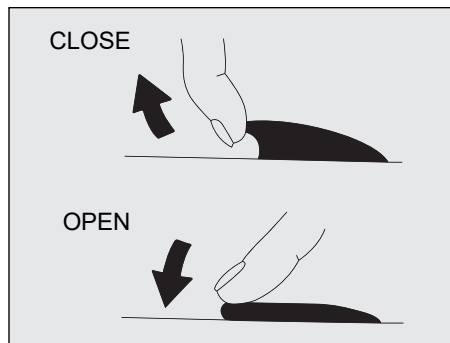

81A009

To open a window, push the top part of the switch. To close the window, lift up the top part of the switch.

The driver's window has AUTO-DOWN and AUTO-UP features for greater convenience (at toll booths or drive-through restaurants, for example). These features allow the driver to open or close the window without holding the window switch in DOWN or UP position. Press down or lift up the driver's window switch completely and release it. To stop the window before it reaches the FULL-DOWN or FULL-UP position, pull up or push down the switch briefly.

Lock switch

76TS30060

The driver's door also has a lock switch for the passenger's window(s). When you push in the lock switch, the passenger's window(s) cannot be raised or lowered by operating any of the switches (2), (3), (4) or (5). To restore normal operation, release the lock switch by pushing it again.

WARNING

- When opening or closing a window, a part of body such as hands, legs and neck may be caught by the window and an accident may occur. When you operate a window, observe the following precautions:
 - A driver and the other passengers should be careful when opening or closing a window.
 - Do not allow a child to operate the window switches.
 - You should always lock the passenger's window operation when there are children in the vehicle. Children can be seriously injured if they get part of their body caught by the window during operation. Refer to "Window Lock Switch" in this section for details.
 - When you leave your vehicle, make sure to press the engine switch or the power switch to change the ignition mode to OFF. Then, carry your key with you and take a child or children out of the vehicle.

(Continued)

WARNING

(Continued)

- When you open or close the front passenger's window or the rear windows on the driver's side, check that the other passengers and children do not take their hands and faces outside the vehicle, before the window operation. Also, make sure to inform them that you will perform the window operation.
- When you operate the electric window controls from the outside of the window, your hands or neck may be caught by the window and an accident may occur. Do not operate the electric window controls from the outside of the window.

NOTE:

If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.

Pinching Prevention Function

The driver's window is equipped with a pinching prevention function. This function detects a foreign object that is caught in the window as it is being closed by AUTO-UP feature, which allows you to close the window without holding the window switch in UP position, and stops the window from closing to prevent damage.

WARNING

The function may not detect the object depending on shape, size, hardness and position of the object caught by the closing window. This may cause severe injury. Be very careful when opening or closing the windows.

⚠ CAUTION

- **The pinching prevention function does not operate while you are holding the window switch in UP position.**
- **The pinching prevention function may not detect an object caught in the window just before the window is fully closed.**

NOTE:

Even if you cannot close the window by the AUTO-UP feature because there may be something wrong with the pinching prevention function, you can close the window by holding the window switch in UP position. If you drive in extreme off-road condition, the pinching prevention function may operate accidentally because the window reacts to vehicle jolting.

Pinching prevention function initialization

When you disconnect and reconnect the lead-acid battery or replace the fuse, the function will be deactivated. In this condition, the AUTO-DOWN feature will be deactivated, while the AUTO-UP feature may remain activated. The pinching prevention function needs to be initialized.

To initialize the pinching prevention function, use the following procedure:

- 1) Press the engine switch or the power switch to change the ignition mode to ON.
- 2) Open the driver's window fully by holding the window switch in DOWN position.
- 3) Close the driver's window by holding the switch in UP position, and keep holding the switch for 2 seconds after the window is fully closed.
- 4) Check the driver's window to see if the AUTO-DOWN/UP feature works.

⚠ WARNING


As the pinching prevention function will not operate until its initialization is completed, an accident may occur. Make sure to perform the pinching prevention function initialization.

If the AUTO-DOWN/UP feature will not work after initialization, there might be something wrong with the pinching prevention function. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

BEFORE DRIVING


Lighting Control Lever

Lighting Lever Operation

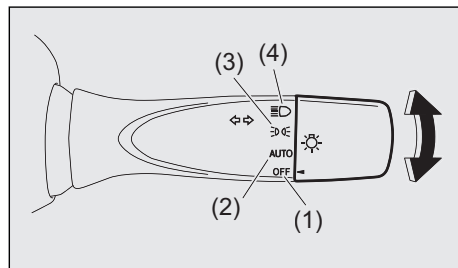

76TS30400

- The image in the above figure is a typical example; it depends on the vehicle type.

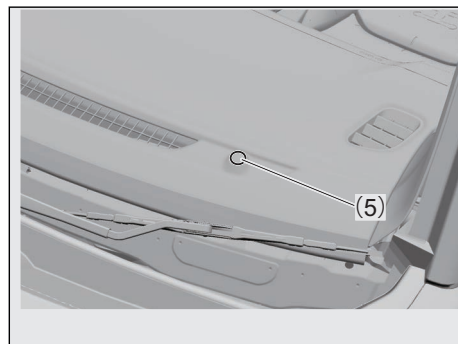

76TS30070

Your vehicle's lighting system is controlled by the lighting switch and the auto-on headlight system (If equipped: when the lighting switch is in "AUTO" position).

The lighting switch and the auto-on headlight system (If equipped) work to operate your lights as shown in the following chart:

ON: Lights ON

LIGHT: When it is light around the light sensor (5) (If equipped).

DARK: When it is dark around the light sensor (5) (If equipped).

Lighting switch position	Main lights to be operated	Ignition mode LOCK (OFF) or ACC		Ignition mode ON	
		LIGHT	DARK	LIGHT	DARK
(1) OFF	Position lights, Tail lights, License plate light	—	—	—	—
	Headlights	—	—	—	—
(2) AUTO (If equipped)	Position lights, Tail lights, License plate light	—	—	—	ON
	Headlights	—	—	—	ON
(3) ㊦	Position lights, Tail lights, License plate light	ON	ON	ON	ON
	Headlights	—	—	—	—
(4) ㊧	Position lights, Tail lights, License plate light	ON	ON	ON	ON
	Headlights	ON	ON	ON	ON

To turn the lights on or off, twist the knob on the end of the lever. There are three or four positions:

OFF (1)

Position lights, tail lights, license plate light, and headlights are off.

AUTO (2) (If equipped)

This function works when the engine switch or the power switch is pressed to change the ignition mode to ON. The position lights, tail lights, license plate light, and headlights are turned on and off automatically according to the amount of outside light detected by a sensor. They go out automatically when you change the ignition mode to ACC or LOCK (OFF) by pressing the engine switch or the power switch.

CAUTION

If the light sensor area of the windshield is covered with mud, ice, or other similar substances, the position lights, tail lights, license plate light, and headlights may be turned on even when it is still light outside.

NOTE:


- Avoid covering the light sensor area of the windshield with a sticker. The sticker may impair the performance of the sensor and make the system unable to control operation of the lights correctly.
- If you changed the ignition mode to ON by pressing the engine switch or the power switch and "AUTO" position remains selected, the position lights, tail lights, license plate light, and headlights come on automatically as it gets dark outside, even with the engine not running and the hybrid system not activating. Leaving the lights lit for a long time may lead to a completely discharged battery.

⌂ (3)

Position lights, tail lights, license plate light, and instrument lights are on, but headlights are off.

⌂ (4)

Position lights, tail lights, license plate light, instrument lights and headlights are on.

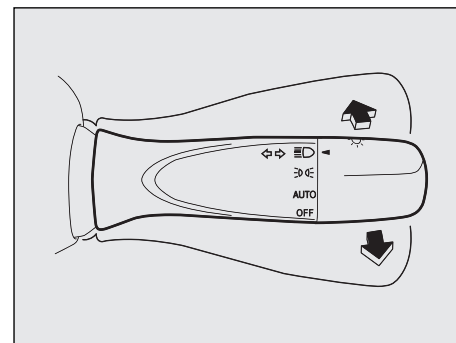


76TS30410

With the headlights on, push the lever forward to switch to the high beams (main beams) and pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument cluster will come on. To momentarily activate the high beams (main beams) as a passing signal, pull the lever slightly toward you and release it when you have completed the signal.

BEFORE DRIVING

Auto-on headlight system (If equipped)

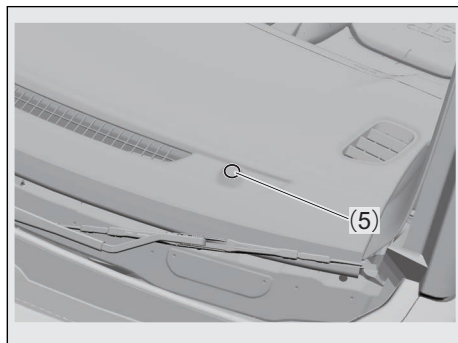

76TS30070

The auto-on headlight system automatically turns on all lights that are operated by the lighting switch, when the following three conditions are all met.

Conditions for auto-on headlight system operation:

- 1) It is dark around the light sensor (5).
- 2) The lighting switch is in "AUTO" position.
- 3) You press the engine switch or the power switch to change the ignition mode to ON.

This system is activated by a signal from the light sensor (5) on the passenger side of instrument panel. Do not cover the sensor (5). Otherwise, the system will not work correctly.

WARNING

It takes about 5 seconds for the light sensor to react to a change in lighting conditions. To help avoid an accident due to reduced visibility, turn on your headlights before driving into a tunnel, parking structure, etc.

NOTE:

The light sensor reacts even to infrared rays, so it may operate incorrectly when there are strong infrared rays.

Light Reminder Buzzer

The interior buzzer continuously beeps if you open the driver's door without turning off the headlights and position lights. This function is triggered under the following condition:

The headlights and/or position lights are on even after engine switch or the power switch is pressed to change the ignition mode to LOCK (OFF).

The buzzer stops sounding when you turn off the headlights and position lights.

NOTE:

A message is indicated on the information display in the instrument cluster while the buzzer is sounding.

Daytime Running Light (D.R.L.) System

When the engine or the hybrid system is started, the daytime running lights are turned on by this system.

Conditions for D.R.L. system operation

- 1) The engine is running or the hybrid system is activating.
- 2) Headlights are off.

To change the function:

- 1) Set ignition "ON".
- 2) Perform the following steps within 15 seconds after Step 1).
 - a) Turn lighting switch to "ON" position.
 - b) Turn lighting switch to "OFF" position.
 - c) Repeat Step a) to b) for another 4 more times.
 - d) Turn lighting switch to "OFF" position.
 - e) Turn lighting switch to "OFF" position.
 - f) Repeat Steps d) to e) for another 4 more times.
- 3) Warning buzzer (in combination meter) sounds by the specified number for each mode as follows.
 - Changed from "Disabled" mode to "Active" mode: Buzzer sounds twice.
 - Changed from "Active" mode to "Disabled" mode: Buzzer sounds once.

NOTE:

- Brightness of the daytime running lights is different from the brightness of the position lights, but it is not a malfunction.
- When using the turn signal light, the Daytime Running Light on the side where the turn signal light is blinking goes off.

Guide Me Light (if equipped)

Guide me light has two functions of “To home” and “To car” for improving your visibility in the dark.

“To home” function

Even after you leave the car, the ground will be illuminated for a short while with this function. You can turn on the front position lights and the headlights in the low beam setting for about 10 seconds after the engine switch or the power switch is pressed to change the ignition mode to LOCK (OFF).

To set the function:

- 1) Turn the lighting switch to “AUTO” position.
- 2) Press the engine switch or the power switch to change the ignition mode to LOCK (OFF).
- 3) Pull the lighting control lever toward you once and open the driver's side door within 60 seconds. Or pull the lighting control lever toward you once while the driver's side door is open.

To cancel the function:

Perform any of the following operations.

- Pull the lighting control lever toward you once.
- Change the ignition mode to ACC or ON by pressing the engine switch or the power switch.
- Turn the lighting switch to any other position than “AUTO” position.

NOTE:

- *When the “To home” is functioning, and the headlights (high beam) are not turned on.*
- *Lighting time of the “To home” function can be changed on the information display. Refer to “Information display” in “INSTRUMENT CLUSTER” section.*

“To car” function

Before you get in the vehicle, the ground will be illuminated for a short while to easily lead the driver to the vehicle. If UNLOCK button of the keyless push start system remote controller is pressed while the lighting switch is positioned in “AUTO”, the position lights and the headlights in the low beam are turned on for 10 seconds.

This function will operate only when it is dark outside the vehicle.

To cancel the function:

Perform any of the following operations.


- Lock the doors by using the keyless push start system remote controller, the request switch or the key in the driver's door lock.
- Change the ignition mode to ACC or ON by pressing the engine switch or the power switch.
- Change the ignition mode to ACC or ON by pressing the engine switch or the power switch.

NOTE:

- *When the “To car” is functioning, the headlights (high beam) are not turned on.*
- *Lighting time of the “To car” function can be changed on the information display. Refer to “Information display” in “INSTRUMENT CLUSTER” section.*

BEFORE DRIVING

Headlight Leveling Switch

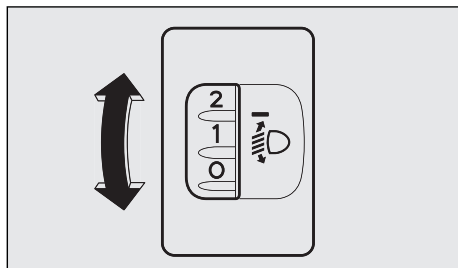

75RM008


Level the headlight beam according to the load condition of your vehicle by turning this switch. The chart shows the appropriate switch position for different vehicle load conditions.

	Halogen headlight	LED headlight
Vehicle Load Condition	Switch Position	
Driver only	0	0
Driver + 1 passenger (in front seat)	0.5	0.5
Driver + 4 passengers, no cargo	2.0	2.0
Driver + 4 passengers, cargo added	3.0	2.5
Driver + full cargo	4.0	3.5

Turn Signal Control Lever

You can use the turn signal control lever when the engine switch or the power switch is in ON mode.

Turn Signal Operation

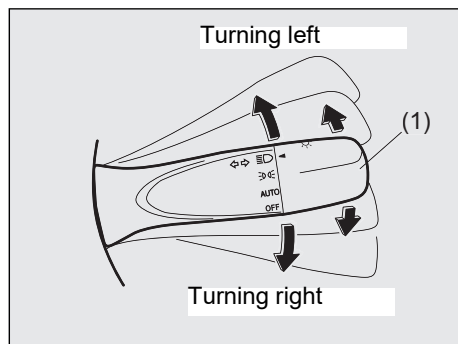

76TS30421


- Move the turn signal control lever (1) as follows:
 - Turning left: Move the lever upward.
 - Turning right: Move the lever downward.

- When you move the lever, the turn signal lights and the turn signal light indicators on the instrument cluster will flash simultaneously.
- When you move the lever to its original position, the turn signal lights and the turn signal light indicators on the instrument cluster will be turned off.
- When the turn is completed, the signal will cancel and the lever will return to its normal position.
- The turn signal control lever in the above figure is a typical example; the actual equipment depends on the vehicle type.

NOTE:

If the angle which you turn the steering wheel is small, the lever will not automatically returned to its original position. In this case, return the lever to its original position by your hand.

Lane change signal

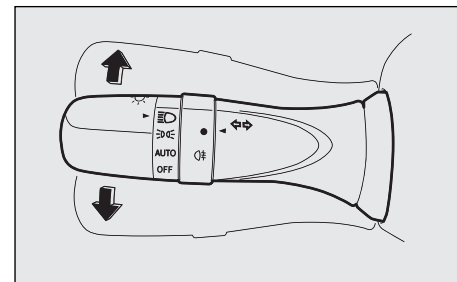

76TS30300

Move the lever partially upward or downward to turn right or left and hold the lever in the moved position.

- The turn signal and its indicator flash while the lever is held at the moved position.
- The turn signal and its indicator flash 3 times even if you returned the lever immediately after the activation.

NOTE:

- *The turn signal and its indicator can be set whether they flash 3 times after the turn signal lever is returned via the information display. Refer to "Information display" in "INSTRUMENT CLUSTER" section.*
- *You can customize the setting for the number of flashing times of the turn signal and its indicator (1 to 4 times). Please ask Maruti Suzuki authorized workshop for the customization.*

BEFORE DRIVING

Hazard Warning Switch



76TS30080

You can use the hazard warning switch to warn the other drivers of possible risk of traffic hazard when you park your vehicle in case of emergency.

- Push the hazard warning switch to activate the hazard warning lights. The turn signal lights and the turn signal indicators on the instrument cluster will flash simultaneously.
- Push the switch again to turn off the hazard warning switch.
- The instrument panel in the above figure is a typical example; the actual equipment depends on the vehicle type.

NOTICE

If you use the hazard warning switch for many hours with the engine or the hybrid system stopped, the lead-acid battery may run out.
Do not use the hazard warning switch for many hours with the engine or the hybrid system stopped.

Windshield Wiper and Washer Lever

When the ignition mode ON, you can use the wiper/washer lever.

CAUTION

In cold weather, the sprayed washer fluid on the glass may get frozen and it may cause poor visibility to a driver. Use the defroster to warm the glass and spray the washer fluid. Refer to "Heating And Air Conditioning" in the "OTHER CONTROLS AND EQUIPMENT" section.

NOTICE

- If you use the wipers with the glass dried, the glass and the wiper blade rubbers may be damaged. When the glass is dry, use the washer fluid and then use wipers.
- If you operate the wipers with the wiper blades stuck on the glass, the wiper blade rubbers may be damaged or the wipers may be broken. When the wiper blades are stuck on the glass, do not operate the wipers.
- If you use the washer when the washer fluid cannot be sprayed enough, the washer pump may be broken. When the washer fluid cannot be sprayed enough, turn off the washer switch.


When the operative wipers suddenly stop

When the wipers are under heavy load such as covered by snow and the temperature of the wiper motor becomes high, the breaker will be activated and the wipers will temporarily stop to protect the wiper motor from overheating.

If this happens, perform the following operations:

- 1) Stop the vehicle in a safe place, and press the engine switch or the power switch to change the ignition mode to ACC or LOCK (OFF).
- 2) Move the wiper lever and switch to "OFF" position.
- 3) Remove obstacles such as snow on the wipers.
- 4) After a while, when the temperature of the wiper motor becomes low enough, the breaker will be reset automatically and you can use the wipers.

If you cannot use the wipers after a while, there may be another problem. Ask Maruti Suzuki authorized workshop to have the wipers inspected.

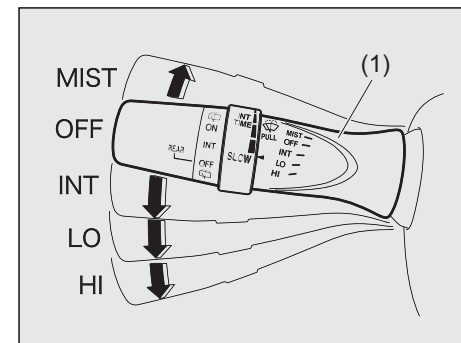
Windshield Wipers

76TS30520

You can operate the windshield wipers by moving the lever (1) upward or downward.

MIST	Temporary operation only while the lever is up
OFF	Off
INT	Intermittent operation
LO	Low speed operation
HI	High speed operation


BEFORE DRIVING

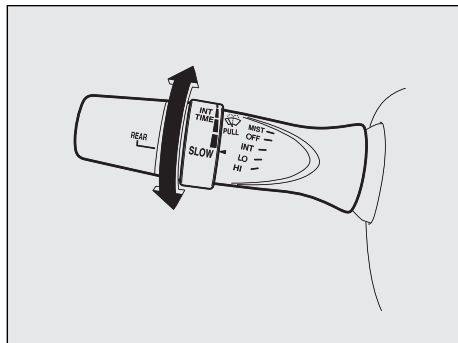

76TS30530

If the lever is equipped with "INT TIME" control, turn the control forward or backward to adjust the intermittent wiper operation to the desired interval.

Windshield Washer

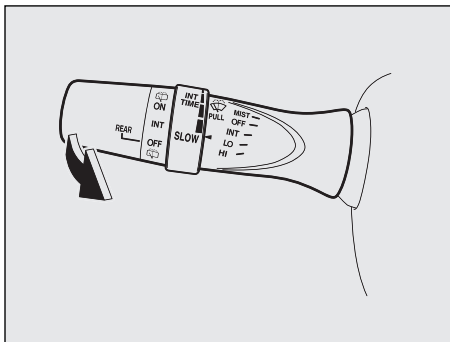

76TS30540

If you pull the lever (1) toward you, the windshield washer fluid will be sprayed and the windshield wipers will automatically operate a few times.

WARNING


- To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.
- Do not use radiator antifreeze in the windshield washer reservoir. It can severely impair visibility when sprayed on the windshield, and can also damage your vehicle's paint.

NOTICE

To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:

- Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.
- Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.
- Clear ice or packed snow from the wiper blades before using the wipers.
- Check the washer fluid level regularly. Check it often when the weather is bad.

Rear Window Wiper

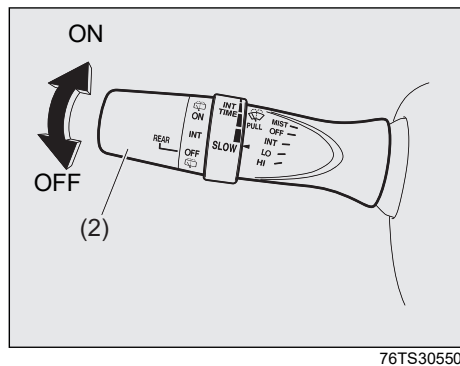


You can operate the rear window wiper by twisting the lever (2) as shown in the illustration.

ON	Normal operation
INT	Intermittent operation
OFF	Off

NOTICE


Clear ice or snow from the rear window and rear wiper blade before using the rear wiper. Accumulated ice or snow could prevent the wiper blade from moving, causing damage to the wiper motor.

Rear Window Washer

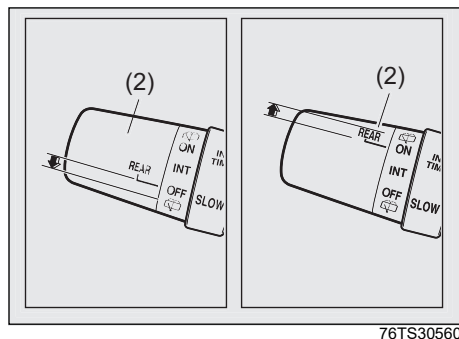

- If you twist the lever (2) in the direction of and align it to (washer) position above "ON" position, the rear window washer fluid will be sprayed and the rear wiper will operate simultaneously. If you release your hand from the lever, it will return to "ON" position.
- If you twist the lever (2) in the direction of and align it to (washer) position below "OFF" position, the rear window washer fluid will be sprayed and the rear wiper will operate simultaneously. If you release your hand from the lever, it will return to "OFF" position.


Horn

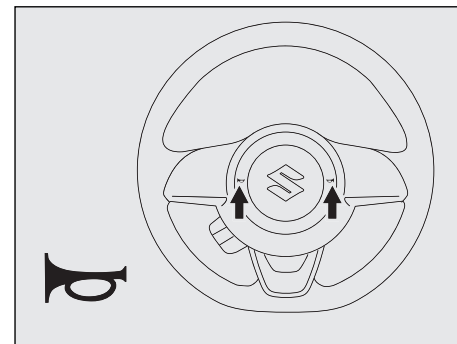

Press the horn button of the steering wheel to sound the horn. The horn will sound with any ignition mode.

BEFORE DRIVING

Heated Rear Window Switch

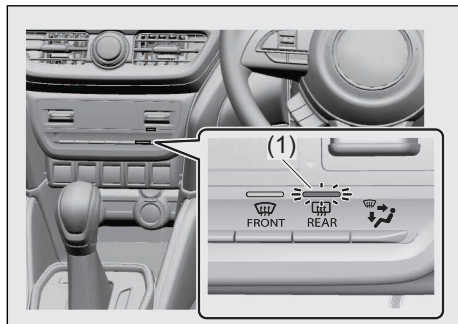

76TS30090

While the engine is running or the hybrid system is activating, you can use the heated rear window switch as the defogger for the rear window glass.

- If you push the rear defogger switch, the rear window glass will be heated and the indicator light (1) will turn on. To turn off the defogger, push the switch again.
- The defogger will automatically turn off after the defogger remains on for 15 minutes to prevent discharging of the lead-acid battery.
- If you press the engine switch or the power switch to change the ignition mode to ACC or LOCK (OFF) with the defogger on, the defogger will not automatically operate even if you start the engine again.

NOTICE

The heated rear window use a large amount of electricity. If you do not turn off the switch after the window and mirrors have become clear, the battery may run out. To protect the lead-acid battery, turn off the switch shortly after the window and mirrors have become clear.

Also, do not use the defogger to melt snow or dry rain water.

NOTE:

- *When you wipe the interior side of the rear window glass, use a soft cloth dampened with water and wipe the glass along the heat wires, not to damage the heat wires and the terminals.*
- *The defogger will work only when the engine is running or the hybrid system is activating.*

INSTRUMENT CLUSTER


Instrument Cluster (Type A) 4-1

Information Display (Type A) 4-4

Instrument Cluster (Type B) 4-40

Information Display (Type B) 4-46

Warning and Indicator Lights 4-75

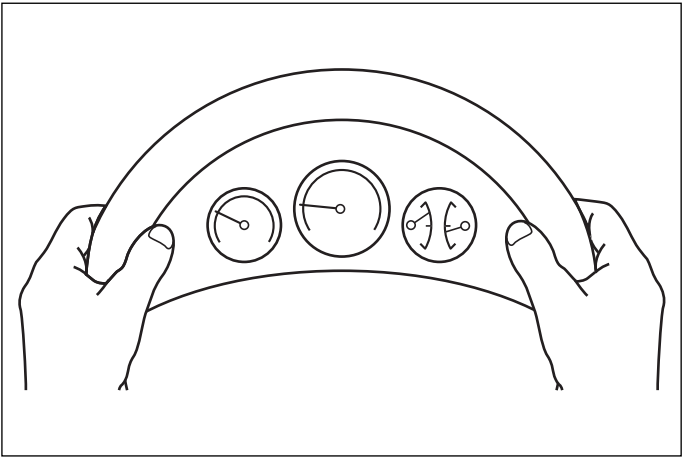


59RN04640

INSTRUMENT CLUSTER

Instrument Cluster (Type A)

1. Speedometer
2. Tachometer
3. Fuel gauge
4. Temperature gauge (if equipped)
5. Information display
6. Trip meter selector knob
7. Indicator selector knob
8. Warning and indicator light

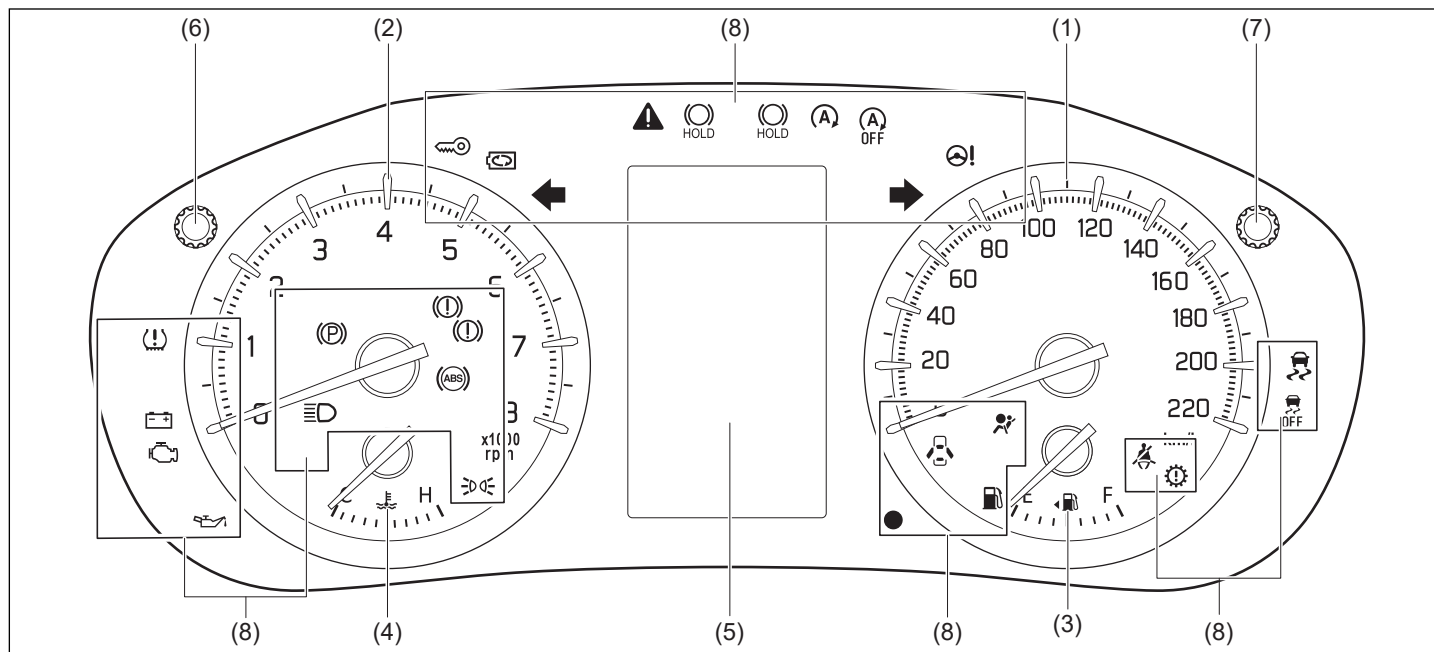

76TS40011

NOTE:

For vehicle fitted with CNG fuel system, refer to the supplementary owner's manual.

Speedometer

The speedometer indicates vehicle speed.

Speed Alert System

The speed alert system gives audible warning for alert of over-speed to driver. When the vehicle speed exceeds about 80 km/h, primary level warning with two beeps will sound every minute. When the vehicle speed exceeds about 120 km/h, secondary level warning with continuous beeps will sound.

If the vehicle speed is slowed down to about 118 km/h, primary warning will resume. If the vehicle is slowed down to about 78 km/h, speed alert warning will stop. This buzzer does not indicate any malfunction in vehicle.


Tachometer

The tachometer indicates engine speed in revolutions per minute.

NOTICE

Never drive the vehicle with the engine revving in the red zone or severe engine damage can result. Keep the engine speed below the red zone even when downshifting to a lower gear position. Refer to “Downshifting maximum allowable speeds” in “OPERATING YOUR VEHICLE” section.

Fuel Gauge

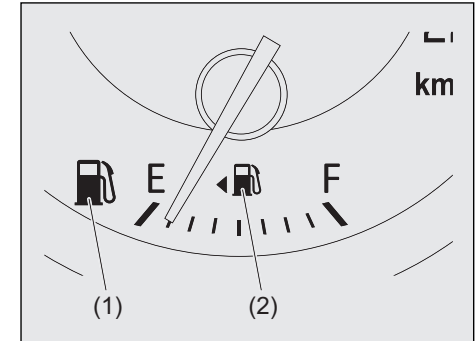

76TS40030

When ignition switch is turned to “ON” position or the ignition switch is pressed to change the ignition mode to ON, this gauge gives a rough indication of the amount of fuel in the fuel tank. “F” stands for full and “E” stands for empty.

If the indicator approaches a low level (near “E”) on fuel gauge, refill the tank as soon as possible.

NOTICE

To minimize the possibility of damage to catalytic converter or other components of the vehicle, avoid driving the vehicle near empty fuel tank level.

INSTRUMENT CLUSTER


NOTE:

The indicator moves a little depending on road conditions (for example, slope or curve) and driving conditions because of fuel movement in the tank.

If the low fuel warning light (1) comes on, refill the fuel tank as soon as possible. Refer to "Low fuel warning light" in "Warning and indicator lights" in this section for details.

The mark (2) indicates that the fuel filler door is located on the left side of the vehicle.

Temperature Gauge (if equipped)

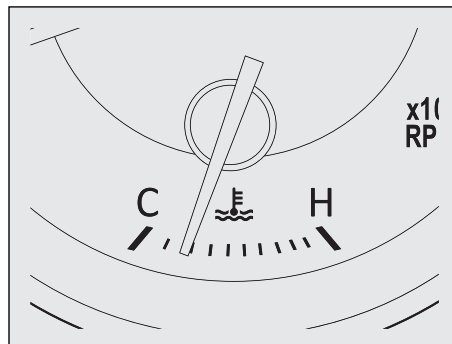


76TS40040

When the ignition switch is pressed to change the ignition mode to ON, this gauge indicates the engine coolant temperature. Under normal driving conditions, the indicator should stay within the normal, acceptable temperature range between "H" and "C". If the indicator approaches "H", overheating is indicated. Follow the instructions for "Engine trouble: Overheating" in "EMERGENCY SERVICE" section.


NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

Brightness Control

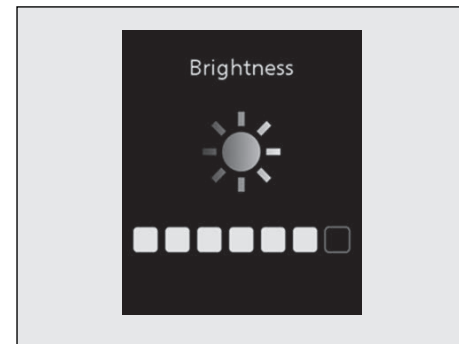

56RM02010

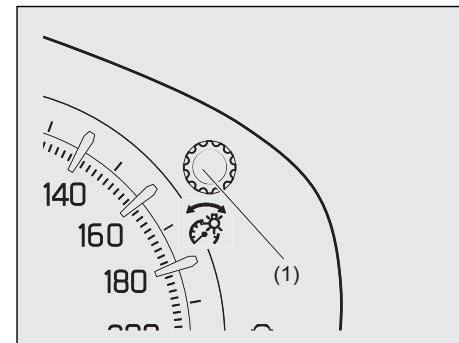

76TS40020

When the ignition switch is pressed to change the ignition mode to ON, the instrument panel lights come on.

Your vehicle has a system to automatically dim the brightness of the instrument panel lights when the position lights or headlights are on.

When the position lights and/or headlights are on, you can adjust the meter illumination brightness.

To increase the brightness of the instrument panel lights, turn the indicator selector knob (1) clockwise.

To reduce the brightness of the instrument panel lights, turn the indicator selector knob (1) counterclockwise.

⚠ WARNING

Do not adjust the brightness of the instrument panel lights while driving. Otherwise, you could lose control of the vehicle.

NOTE:

- If you do not turn the knob within several seconds of activating, the brightness control display will be cancelled automatically.
- When you reconnect the lead-acid battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.


NOTE:

If you adjust to the maximum brightness level when the position lights or headlights are on, the following functions will be cancelled.

- *The function which automatically dims the brightness of instrument panel lights*
- *The function which operates with the brightness control, except maximum brightness level*


Information Display (Type A)

The information display is shown when the ignition mode is "ON".

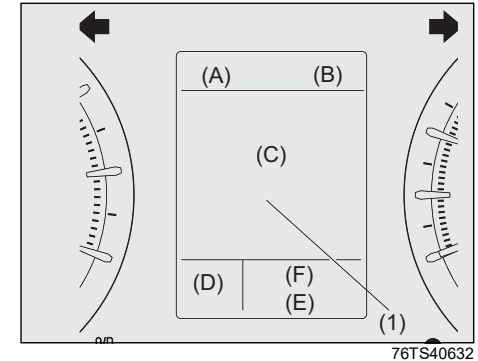

(1) Information display

INSTRUMENT CLUSTER

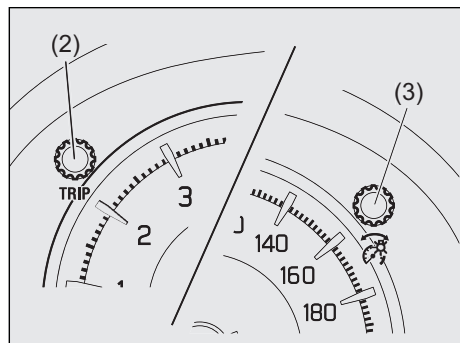

55T040160

- (2) Trip meter selector knob
- (3) Indicator selector knob

The information display shows the following information.

Display (A)

Clock

Display (B)

Thermometer

Display (C)

Warning and indicator messages /
Fuel consumption / Driving range /
Average Speed / Driving time / Clock and
date / Motion / Torque and power / Acceler-
ator and brake / Cruise control (if equipped)

Display (D)


Selector position

Display (E)

Odometer / Trip meter

Display (F)

Rear passenger's seat belt reminder

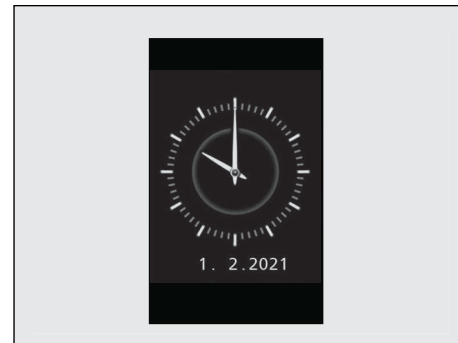

55T040250

When ignition switch is pressed to change the ignition mode to ON, the message display shown in the above illustration will appear on the display for several seconds. Some warning and indicator messages may appear on the display when the ignition mode is changed to ACC or LOCK (OFF)

Clock


The display (A) shows the time.

To set the clock, follow "Setting mode" instructions in this section.

Thermometer

The display (C) shows the thermometer.

The thermometer indicates the outside temperature.

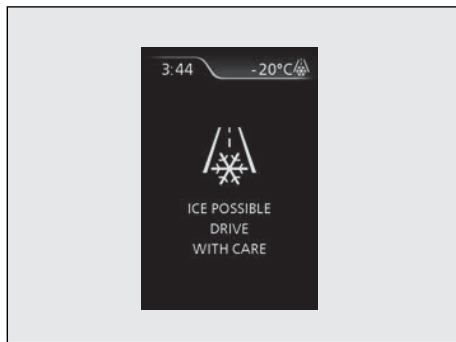

52RM21050

If the outside temperature nears freezing condition, the message shown in the above illustration will appear on the display.

To change the temperature unit between “°C” and “°F”, follow “Setting mode” instructions in this section.

NOTE:

The outside temperature indication is not the actual outside temperature when driving at low speed, or when stopped.


INSTRUMENT CLUSTER

Fuel Consumption (if equipped) / Driving Range (if equipped) / Average Speed / Driving Time / Clock and Date / Motion / Torque and Power / Accelerator and Brake (if equipped)

When there are no warning or indicator messages on the display (D), you can select one of the following indications to appear on the display: instantaneous fuel consumption, average fuel consumption, driving range, average speed, driving time, clock and date, motion, torque and power, accelerator and brake or no indication.

⚠ WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle. Do not attempt to adjust the display while driving.

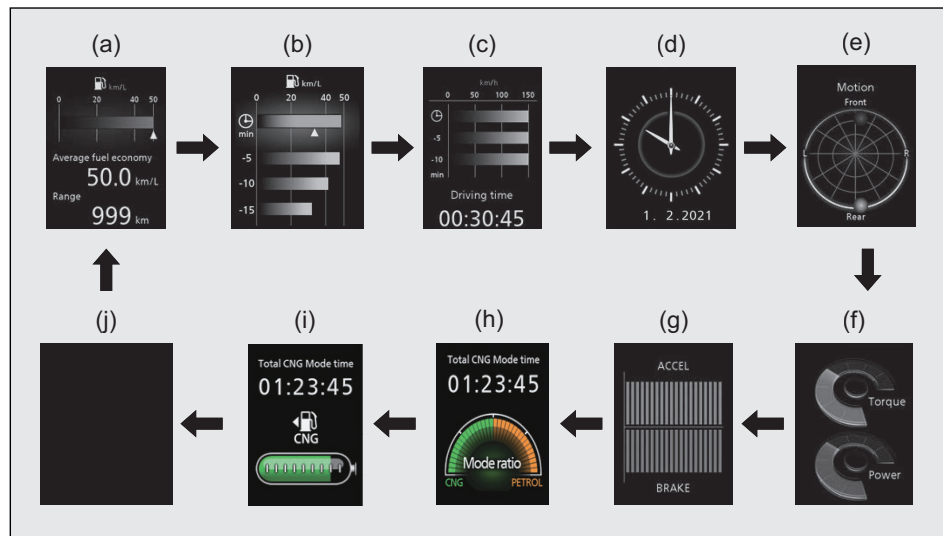

- (a) Instantaneous fuel consumption / Average fuel consumption / Driving range (if equipped)
- (b) Instantaneous fuel consumption / Average fuel consumption / 5-minute average fuel consumption (if equipped)
- (c) Average speed / 5-minute average speed / Driving time
- (d) Clock and date
- (e) Motion
- (f) Torque and power
- (g) Accelerator and brake (if equipped)
- (h) Mode ratio and total CNG mode time (If equipped) - Refer to the CNG supplementary owner's manual
- (i) CNG gauge and total CNG mode time (If equipped) - Refer to the CNG supplementary owner's manual
- (j) No indication

To switch the display indication, push the indicator selector knob (3) quickly.

NOTE:


The value of instantaneous fuel consumption, average fuel consumption, driving range, average speed, motion, torque and power, accelerator and brake shown on the display are affected by the following conditions;

- road condition
- surrounding traffic condition
- driving condition
- vehicle condition
- a malfunction which causes the malfunction indicator light to come on or blink.

55T040281

Instantaneous fuel consumption

The display shows instantaneous fuel consumption with a bar graph only when the vehicle is moving.

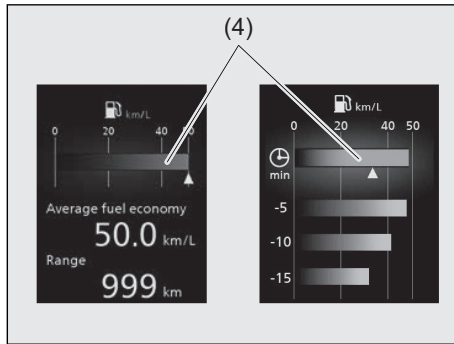

52RM21070

(4) Instantaneous fuel consumption

NOTE:


- The display does not show the bar graph unless the vehicle is moving.
- Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km, km/L or MPG.
- For "L/100km" setting, the indicated maximum value of instantaneous fuel consumption is 30. No more than 30 will be indicated on the display even if the actual instantaneous fuel consumption is higher.

- For "km/L" setting, the indicated maximum value of instantaneous fuel consumption is 50. No more than 50 will be indicated on the display even if the actual instantaneous fuel consumption is higher.
- For "MPG(UK)" setting, the indicated maximum value of instantaneous fuel consumption is 80. No more than 80 will be indicated on the display even if the actual instantaneous fuel consumption is higher.
- The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.
- The display shows estimated values. Indications may not be the same as actual values.

Average fuel consumption / 5-minute average fuel consumption / 1-driving cycle average fuel consumption

Average fuel consumption from previous reset and 5-minute average fuel consumption, and 1-driving cycle average fuel consumption are shown.

(Average fuel consumption)

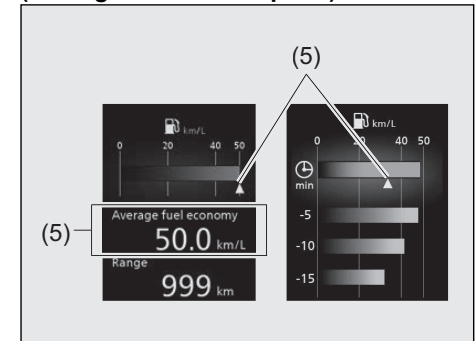

52RM21080

(5) Average fuel consumption

If you selected average fuel consumption the last time you drove the vehicle, the display shows the last value of average fuel consumption from previous driving when the ignition switch is pressed to change the ignition mode to ON. Unless you reset the value of average fuel consumption, the display indicates the value of average fuel consumption based on the average fuel consumption during previous driving.

INSTRUMENT CLUSTER

NOTE:

When you reconnect the negative (–) terminal to the lead-acid battery, the value of average fuel consumption will be shown after driving for a period of time.

You can select the timing to reset the value of average fuel consumption by one of the following three methods;


- Reset after refuel: the value of average fuel consumption will be reset automatically by refueling.
- Reset with trip meter A: the value of average fuel consumption will be reset automatically by resetting trip meter A.
- Reset manually: the value of average fuel consumption will be reset by pushing and holding the indicator selector knob (3) when the display indicates the average fuel consumption.

To change the timing to reset the value of average fuel consumption, refer to “Setting mode” in this section.

NOTE:


If you add only a small amount of fuel when you select “Reset after refuel”, the average fuel consumption value may not be reset.

(5-minute average fuel consumption)

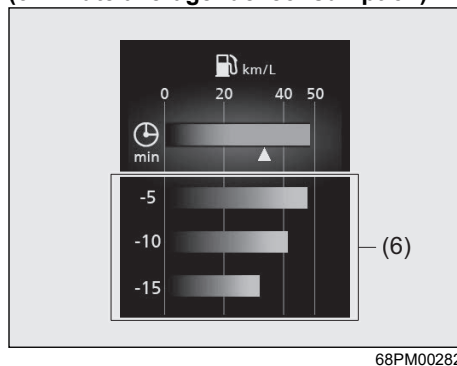

(6) 5-minute average fuel consumption


(1-driving cycle average fuel consumption)

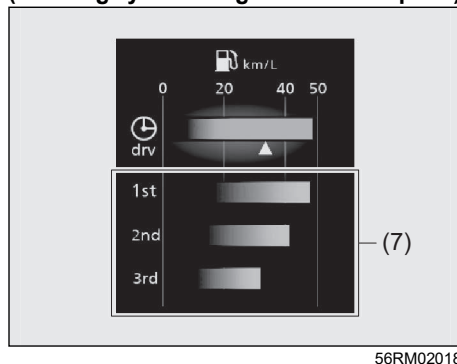

(7) 1-driving cycle average fuel consumption

You can check transition of average fuel consumption every 5 minutes from 15 minutes before up to now. Also, you can check transition of average fuel consumption the past 3 driving cycles. Time indication and driving cycle indication can be changed. For details, refer to “Setting mode” in this section.

Driving range

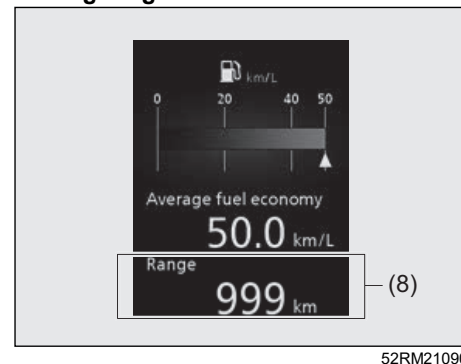

(8) Driving range

If you selected driving range the last time you drove the vehicle, the display indicates “---” for a few seconds and then indicates the current driving range when the ignition switch is pressed to change the ignition mode to ON.

The driving range shown in the display is an indicative unit of the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions and current fuel level in the fuel tank.

When the low fuel warning light comes on, the display "---" will appear.

If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

When you refuel, the driving range is updated. However, if you only add a small amount of fuel, the correct value will not be displayed.


NOTE:

- If you refuel when the ignition mode is "ON", the driving range may not indicate the correct value.
- When you reconnect the negative (-) terminal to the lead-acid battery, the value of driving range will be shown after driving for a period of time.
- If there are substantial changes in the driving pattern or vehicle usage, the displayed range may vary significantly.

Average speed / 5-minute average speed

Average speed from previous reset and 5-minute average speed are shown.

(Average speed)

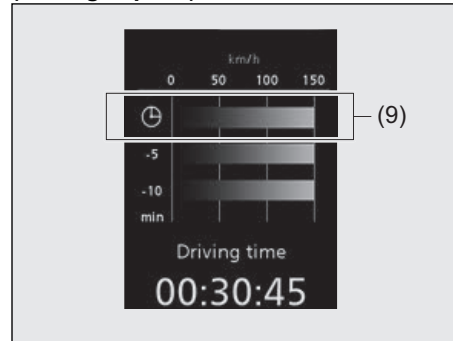

52RM21100

(9) Average speed

If you selected average speed the last time you drove the vehicle, the display indicates the last value of average speed from previous driving when the ignition switch is pressed to change the ignition mode to ON. Unless you reset the value of average speed, the display indicates the value of average speed which includes average speed during previous driving.

To reset the value of average speed, push and hold the indicator selector knob (3) for about 2 seconds when the display indicates an average speed. The display shows "---" and then indicates a new average speed after driving for a short time.

NOTE:

When you reconnect the negative (-) terminal to the lead-acid battery, the value of average speed will be shown after driving for a period of time.

(5-minute average speed)




52RM21110

(10) 5-minute average speed

You can check transition of 5-minute average speed every 5 minutes from 10 minutes before up to now.

INSTRUMENT CLUSTER

Driving time

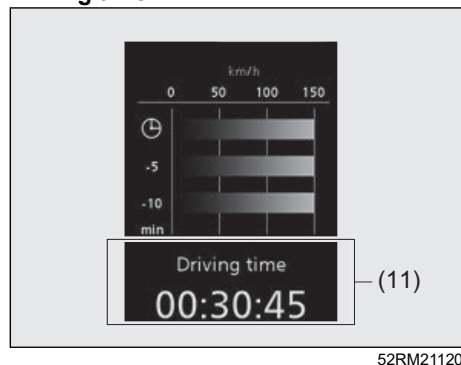

(11) Driving time

Driving time from previous reset is shown. To reset the driving time, push and hold the indicator selector knob (3) for about 2 seconds when the display indicates a driving time. The display shows “---” and then indicates a new driving time after driving for a short time.


NOTE:

- Disconnection of the lead-acid battery negative (-) terminal will reset the indication of the driving time.
- The indicated maximum value of driving time is 99:59:59. No more than this value will be indicated on the display until you reset the driving time.

Clock and date

Date and time are shown. For the setting procedure, refer to “Setting mode” in this section.

Motion

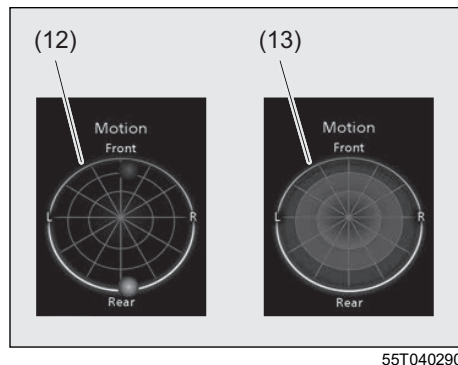

This indicates how the center of gravity is moved while driving.

G (acceleration of gravity) position applied to the vehicle body while driving is shown by a globe (12).

When the vehicle is stopped, historical data of G positions applied to the vehicle body during the driving is shown as a graph (13).

G position history graph at the vehicle stopped can be changed to indicate or hide. For details, refer to “Setting mode” in this section.

⚠ WARNING

Do not look in the display intensively while driving. Doing so may result in an unexpected accident.

NOTE:

- If G position history graph at the vehicle stopped has been set in indication mode, the graph (15) is shown for several seconds when you change the ignition mode to “LOCK” (OFF) after driving.
- The graph is shown approximately and the actual movement may differ.

Torque and power


Present engine torque and power are shown.

Accelerator and brake

Present accelerator pedal depressing degree and brake line pressure are shown. The display is selectable to indicate or not to indicate. For details, refer to “Setting mode” in this section.


Information shown after driving

When you press the ignition switch to change the ignition mode to "LOCK" (OFF), the following information appears for several seconds on the information display.

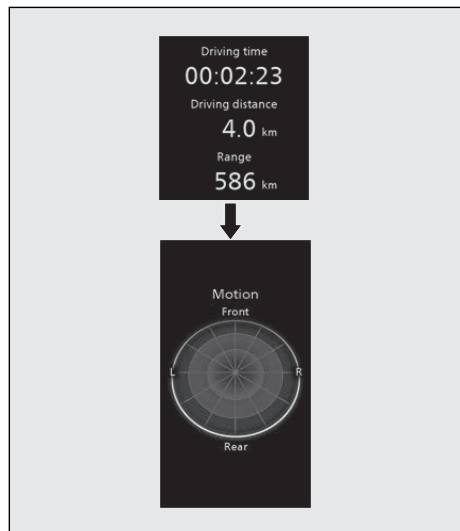

55T040010

Intersection Guidance (When using Android Auto™*1 or Apple CarPlay*2 on infotainment system)

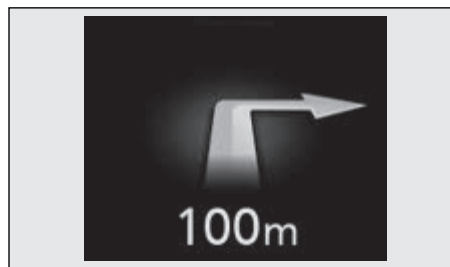

59RN04710

The display shows the direction of your driving and the distance, working with the infotainment system.

NOTE:

- A slight time lag may occur between the intersection guidance on the information display and the guidance from the infotainment system.
- Switch the intersection guidance to ON or OFF while the guidance from the infotainment system is displayed.
 - A time lag may occur between ON display and OFF display of the intersection guidance.
 - For the functions and operations of the infotainment system, refer to the supplementary manual, provided along with it.
- You can display or hide the intersection guidance by changing the setting (cus-

tomization). For details, refer to "Setting Mode" in this section.


*1: Android Auto™ may not be available in your country or region. For details about Android Auto™, refer to <http://support.google.com/androidauto>

*2: Apple CarPlay may not be available in your country or region. For details about Apple CarPlay, refer to <https://www.apple.com/ios/carplay/>

INSTRUMENT CLUSTER

Fuel Consumption (if equipped) / Driving Range (if equipped) / Average Speed / Driving Time / Total Idling Stop Time and Total Idling Fuel Saved (if equipped) / Clock and Date / Motion / Torque and Power / Accelerator and Brake / Energy flow (if equipped)

When there are no warning or indicator messages on the display (D), you can select one of the following indications to appear on the display: instantaneous fuel consumption, average fuel consumption, driving range, average speed, driving time, total idling stop time and total idling fuel saved, clock and date, motion, torque and power, accelerator and brake, energy flow or no indication.

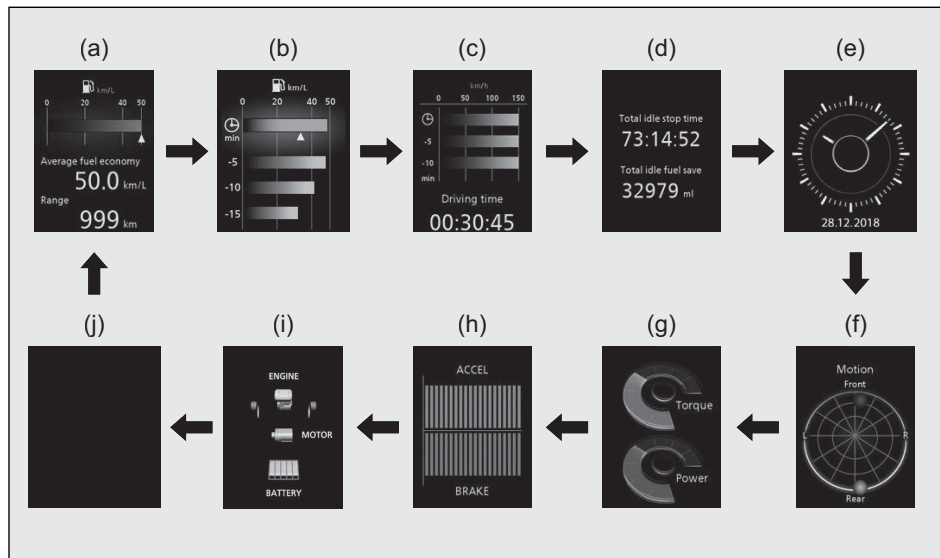

76TS40600

- (a) Instantaneous fuel consumption / Average fuel consumption / Driving range (if equipped)
- (b) Instantaneous fuel consumption / Average fuel consumption / 5-minute average fuel consumption (if equipped)
- (c) Average speed / 5-minute average speed / Driving time
- (d) Total idling stop time / Total idling fuel saved (if equipped)
- (e) Clock and date
- (f) Motion
- (g) Torque and power (if equipped)
- (h) Accelerator and brake
- (i) Energy flow (if equipped)
- (j) No indication

To switch the display indication, push the indicator selector knob (3) quickly.


NOTE:

The value of instantaneous fuel consumption, average fuel consumption, driving range, average speed, total idling fuel saved, motion, torque and power, accelerator and brake and energy flow shown on the display are affected by the following conditions;

- road condition
- surrounding traffic condition
- driving condition
- vehicle condition
- a malfunction which causes the malfunction indicator light to come on or blink

Instantaneous fuel consumption

The display shows instantaneous fuel consumption with a bar graph only when the vehicle is moving.

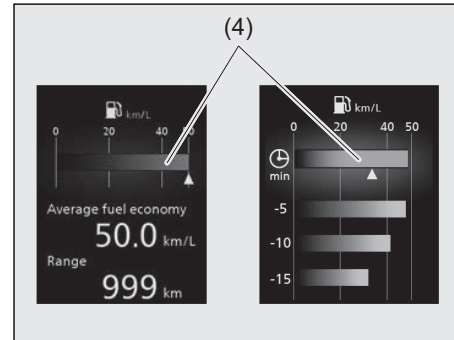

52RM21070

(4) Instantaneous fuel consumption

NOTE:

- The display does not show the bar graph unless the vehicle is moving.
- Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km, km/L, MPG (UK).
- The indicated maximum value of instantaneous fuel consumption is one of the followings. No more than the maximum value will be indicated on the display even if the actual instantaneous fuel consumption is higher.
 - For L/100km setting: 30
 - For km/L setting: 50

– For MPG (UK) setting: 80


- The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.
- The display shows estimated values. Indications may not be the same as actual values.

INSTRUMENT CLUSTER

Average fuel consumption / 5-minute average fuel consumption / 1-driving cycle average fuel consumption

Average fuel consumption from previous reset and 5-minute average fuel consumption, and 1-driving cycle average fuel consumption are shown.

(Average fuel consumption)

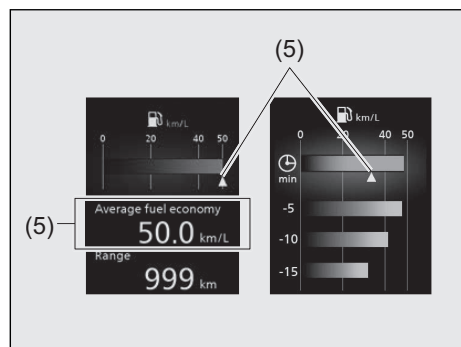

52RM21080

(5) Average fuel consumption

If you selected average fuel consumption the last time you drove the vehicle, the display shows the last value of average fuel consumption from previous driving when the ignition switch is pushed to "ON" mode. Unless you reset the value of average fuel consumption, the display indicates the value of average fuel consumption based on the average fuel consumption during previous driving.

NOTE:

When you reconnect the negative (-) terminal to the lead-acid battery, the value of average fuel consumption will be shown after driving for a period of time.

You can select the timing to reset the value of average fuel consumption by one of the following three methods;


- Reset after refuel: the value of average fuel consumption will be reset automatically by refueling.
- Reset with trip meter A: the value of average fuel consumption will be reset automatically by resetting trip meter A.
- Reset manually: the value of average fuel consumption will be reset by pushing and holding the indicator selector knob (3) when the display indicates the average fuel consumption.

To change the timing to reset the value of average fuel consumption, refer to "Setting mode" in this section.

NOTE:

If you add only a small amount of fuel when you select "Reset after refuel", the average fuel consumption value may not be reset.


(5-minute average fuel consumption)

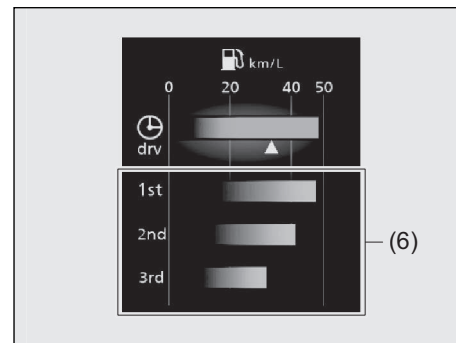

72R0136

(6) 5-minute average fuel consumption


(1-driving cycle average fuel consumption)

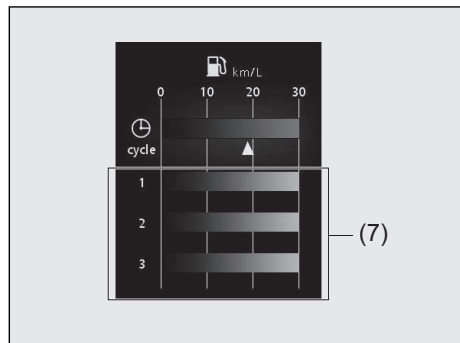

(7) 1-driving cycle average fuel consumption

You can check transition of average fuel consumption every 5 minutes from 15 minutes before up to now. Also, you can check transition of average fuel consumption the past 3 driving cycles. Time indication and driving cycle indication can be changed. For details, refer to "Setting mode" in this section.

Driving range

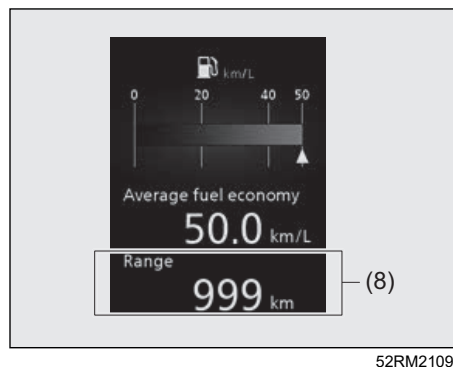

(8) Driving range

If you selected driving range the last time you drove the vehicle, the display indicates "---" for a few seconds and then indicates the current driving range when the ignition switch is pushed to "ON" mode.

The driving range shown in the display is the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions.

When the low fuel warning light comes on, the display "---" will appear. If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

When you refuel, the driving range is updated. However, if you only add a small

amount of fuel, the correct value will not be displayed.

NOTE:


- If you refuel when the ignition mode is "ON", the driving range may not indicate the correct value.
- When you reconnect the negative (-) terminal to the lead-acid battery, the value of driving range will be shown after driving for a period of time.

INSTRUMENT CLUSTER

Average speed / 5-minute average speed

Average speed from previous reset and 5-minute average speed are shown.

(Average speed)

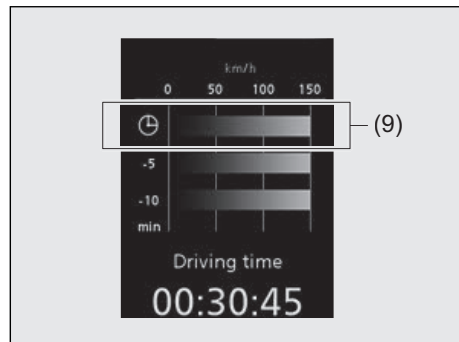

52RM21100

(9) Average speed


If you selected average speed the last time you drove the vehicle, the display indicates the last value of average speed from previous driving when the ignition switch is pushed to "ON" mode. Unless you reset the value of average speed, the display indicates the value of average speed which includes average speed during previous driving.

To reset the value of average speed, push and hold the indicator selector knob (3) for about 2 seconds when the display indicates an average speed. The display shows "---" and then indicates a new average speed after driving for a short time.

NOTE:

When you reconnect the negative (-) terminal to the lead-acid battery, the value of average speed will be shown after driving for a period of time.

(5-minute average speed)

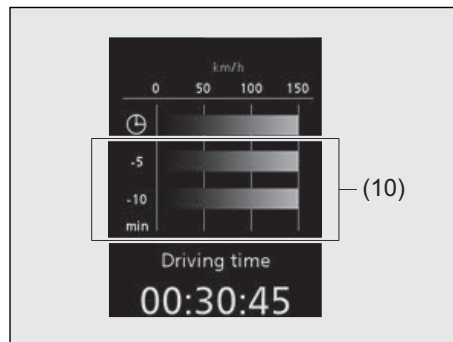


52RM21110

(10) 5-minute average speed

You can check transition of 5-minute average speed every 5 minutes from 10 minutes before up to now.

Driving time

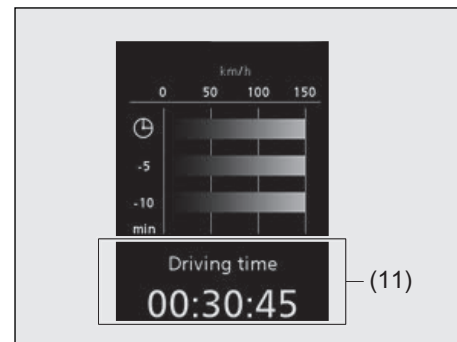

52RM21120


(11) Driving time

Driving time from previous reset is shown. To reset the driving time, push and hold the indicator selector knob (3) for about 2 seconds when the display indicates a driving time. The display shows "---" and then indicates a new driving time after driving for a short time.

NOTE:

- Disconnection of the lead-acid battery negative (-) terminal will reset the indication of the driving time.
- The indicated maximum value of driving time is 99:59:59. No more than this value will be indicated on the display until you reset the driving time.

Total idling stop time and total idling fuel saved (if equipped)

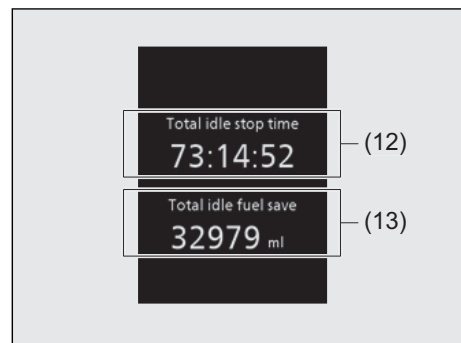

52RM217

- (12) Total idling stop time
- (13) Total idling fuel saved

The display shows the total length (in hours, minutes and seconds) of engine stopping time and the total amount (in milliliters) of fuel conservation by ENG ASTOP system since the indication was reset.

- To reset the total idling stop time and the total idling fuel saved, push and hold the indicator selector knob (3) for a while when the display shows the total idling stop time and the total idling fuel saved.

NOTE:


- The indicated maximum value of the total idling stop time is 99:59:59 and this value is fixed until it is reset.
- When you reconnect the negative (-) terminal to the lead-acid battery, the

value of the total idling stop time and the total idling fuel saved will be reset.

Clock and date

Date and time are shown. For the setting procedure, refer to "Setting mode" in this section.

Motion

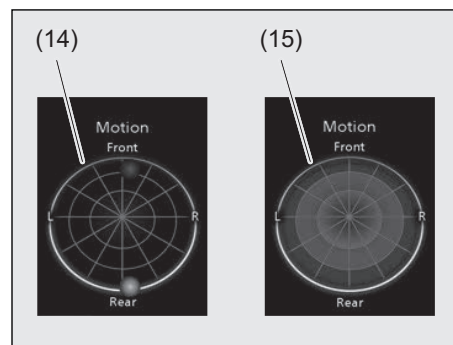

52RM218

The meter indication is different depending on whether the vehicle is stopped or running.

When driving, real time movement of imaginal G position (center of gravity) is displayed on the globe (14), which is resultant with inertia force.

When stopped, historical data of imaginal G positions applied to the vehicle body during the driving is shown as a graph (15).

G position history graph when the vehicle stopped can be changed to indicate or hide. For details, refer to "Setting mode" in this section.

⚠ WARNING

Do not look in the display intensively while driving. Doing so may result in an accident.

NOTE:

- If G position history graph at the vehicle stopped has been set in indication mode, the graph (15) is shown for several seconds when you change the ignition mode to "LOCK" (OFF) after driving.
- The graph is shown approximately and the actual movement may differ.

Torque and power

Present engine torque and power are shown.

 
 
 
 
Accelerator and brake

Present accelerator pedal depressing degree and brake line pressure are shown. The display is selectable to indicate or not to indicate. For details, refer to "Setting mode" in this section.

INSTRUMENT CLUSTER

Energy flow (if equipped)

The state of SHVS operation can be checked on the information display. For details, refer to “SHVS (Smart Hybrid Vehicle by Maruti Suzuki)” in “OPERATING YOUR VEHICLE” section.

Information display	Description
 76TS20470	When the vehicle is running, ISG (Integrated Starter Generator) assists engine power as an electric motor.
 76TS20480	When the vehicle is powered by the engine.
 76TS20490	When decelerating your vehicle, the ISG generates electricity without engine power.
 76TS20500	When the engine automatically stops by the ENG A-STOP system.

Information shown after driving

When you press the ignition switch to change the ignition mode to “LOCK” (OFF), the following information appears for several seconds on the information display.



52RM21140

Intersection Guidance (When using Android Auto™*1 or Apple CarPlay*2 on infotainment system)



59RN04710

The display shows the direction of your driving and the distance, working with the infotainment system.

NOTE:

- A slight time lag may occur between the intersection guidance on the information display and the guidance from the infotainment system.
- Switch the intersection guidance to ON or OFF while the guidance from the infotainment system is displayed.
 - A time lag may occur between ON display and OFF display of the intersection guidance.
 - For the functions and operations of the infotainment system, refer to the supplementary manual, provided along with it.

- You can display or hide the intersection guidance by changing the setting (customization). For details, refer to "Setting Mode" in this section.

*1: Android Auto™ may not be available in your country or region. For details about Android Auto™, Refer to the Google support site: <http://support.google.com/androidauto>

*2: Apple CarPlay may not be available in your country or region. For details about Apple CarPlay, refer to <https://www.apple.com/ios/carplay/>

Gear Position (if equipped)



76TS40670

Gear position

When the ignition switch is pressed to change the ignition mode to ON, the display (D) indicates the gear position (16). For details on how to use the transmission, refer to "Using Transmission" in "OPERATING YOUR VEHICLE" section.

NOTE:

When the engine switch is pressed to change the ignition mode to ON, or the selector position is changed, the display may not indicate current selector position immediately, but it is not a malfunction.

INSTRUMENT CLUSTER

Trip Meter

The display (F) shows the trip meter.

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use trip meter A or trip meter B independently.

To reset the trip meter, push and hold the trip meter selector knob (2) for few seconds when the display shows the trip meter.

Odometer

The display (F) shows the odometer.

The odometer records the total distance the vehicle has been driven.


NOTICE

Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

Setting Mode

When the ignition switch is in "ON" position or the ignition mode is ON and the vehicle is stationary, you can enter into the setting mode of the information display by pushing and holding the indicator selector knob (3) for few seconds.

- To select the setting item that you want to change, turn the indicator selector knob (3) left or right.
- To change the setting, push the indicator selector knob (3).
- To exit the setting mode, select "Back" and push the indicator selector knob (3).

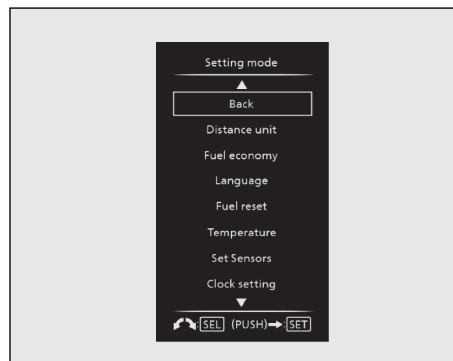

53SB2023

NOTE:

The currently selected setting item is surrounded by a frame.

NOTE:

- If you push and hold the indicator selector knob (3) to enter into the setting mode when the display (D) shows average fuel consumption, average speed, driving time, the value will be reset simultaneously. If you do not want to reset the value, push the indicator selector knob quickly to switch the indication of the display.
- If you turn the ignition switch, press the ignition switch or start to move the vehicle when the display is in the setting mode, the setting mode will be cancelled automatically.

Distance unit
(Odometer / trip meter / driving range / average speed distance unit setting)

You can change the units in which odometer / trip meter / driving range / average speed distance is displayed.

Fuel economy
(Fuel consumption unit setting)

You can change the units that fuel consumption is displayed in.

Language

You can change the language of the information display.

Fuel reset

(Average fuel consumption reset setting)

You can change when the value of average fuel consumption is reset.

Temperature

(Temperature unit setting)

You can change the units that temperature is displayed in.

- To change the temperature unit, select "Temperature" in "Setting mode". Then, select "°C" or "°F".

NOTE:

When you change the units that temperature is displayed in, the automatic heating and air conditioning system (if equipped) temperature display units will be changed automatically.

Set sensors

(Parking sensor setting) (if equipped)

The parking sensor can be switched between the normal mode and trailer mode.

Clock setting (if equipped)

(Adjusting the clock)

- Adjust the clock by selecting "Clock setting" in "Setting mode". Then, select "Adjust clock".
- To change the hour indication, turn the indicator selector knob (3) left or right repeatedly when the hour indication blinks. To change the hour indication quickly, turn and hold the indicator selector knob (3). To set the hour indication, push the indicator selector knob (3) and the minute indication blinks.
- To change the minute indication, turn the indicator selector knob (3) left or right repeatedly when the minute indication blinks. To change the minute indication quickly, turn and hold the indicator selector knob (3). To set the minute indication, push the indicator selector knob (3).

(Selecting 12H / 24H format) (if equipped)

- Switch the time indication between 12-hour and 24-hour format by selecting "Clock setting" in "Setting mode". Then, select "12H" or "24H".

(Adjusting the date) (if equipped)

- Adjust the date by selecting "Clock setting" in "Setting mode". Then select "Adjust date".
- To adjust year, month and day, operate the indicator selector knob (3) in the same way as adjusting the clock.

Door lock (Door lock setting)

(Door unlock)

- All Doors:
Unlock all doors by keyless push start system remote controller or request switch once
- Driver Door:
Unlock all doors by keyless push start system remote controller or request switch twice (default setting)

(Auto lock)

- Manual Lock:
Disable the automatic door locking function
- Speed Sync:
Lock all doors when the vehicle speed reaches 15 km/h (default setting)
- Gear shift sync: (if equipped)
Lock all doors when the gearshift lever is in other than "P" position.

(Auto unlock)

- Sync Off:
Disable the automatic door unlocking function (default setting)
- IGN-OFF Sync:
Unlock all doors when the ignition switch is pressed to change the ignition mode to LOCK (OFF)
- Gear shift sync:
(for automatic transmission vehicle)
Unlock all doors when the gearshift lever is moved from other position to "P" position.

INSTRUMENT CLUSTER

(Alarm)

You can turn off or on the siren sound when the door(s) is(are) locked or unlocked.

Lights

(Ambient light setting) (if equipped)

You can change the on/off of the ambient light.

(Ambient light level) (if equipped)

You can change the lighting level of the ambient light brightness.

(Lane change setting)

The turn signal and its indicator can be set whether they flash three times even if you return the turn signal control lever shortly after operating it.

- To change the lane change setting, select "Lane Change" in "Setting mode". Then, select "ON" or "OFF"

If you want to change the number of flashing, consult a Maruti Suzuki authorized workshop.

(Guide me light setting) (if equipped)

You can change the lighting time of "To car" function or "To home" function.

TPMS

(Tyre pressure monitoring system setting)

You can check the current tyre pressure on the information display.

Refer to "Tyre pressure monitoring system (TPMS) (if equipped)" in "OPERATING YOUR VEHICLE" section for details.

Antitheft (if equipped)

(Shock sensor system setting)

You can change the on/off of the shock sensor.

(Shock sensor P setting)

You can adjust the pre-warning sensitivity of shock sensor.

(Shock sensor F setting)

You can adjust the full blast warning sensitivity of shock sensor.

IS A/C

(ENG A-STOP system setting) (if equipped)

- When using the automatic heating and air conditioning system (if equipped), you can select one of the following engine auto stop settings.
 - Standard
 - Economy
 - Comfort

- When "Economy" is selected, engine auto stop condition is eased, compared with "Standard". As engine auto stop condition will occur more frequently, the stop time will be longer, leading to reduction of fuel consumption.
- When "Comfort" is selected, engine auto stop condition becomes severe, compared with "Standard". As engine auto stop condition will occur less frequently, the stop time will be shorter, leading to more comfortable cabin condition by air conditioner.

Display item

("Car color" setting)

You can change the car color of the information display.

("Calendar dis" setting)

You can select whether you show the calendar on the information display or not.

("Calendar form" setting)

You can change the calendar form of the information display.

To change the calendar form, select "Calendar form" in "Display item". Then, select the display order of date, month and year.

("Fuel eco hist" setting)

Transitional indication of average fuel consumption can be switched to time indication and driving cycle indication.

("Motion hist" setting)

Indication of G position history graph at the vehicle stopped can be selected to enable or disable.

("Idling disp" setting) (if equipped)

Display of ENG A-STOP operation with ignition mode LOCK (OFF) is selectable to indicate or not to indicate.

("Idling warn" setting) (if equipped)

You can switch whether the information display shows the warning and indicator messages related on the ENG A-STOP system.

("Regen disp" setting) (if equipped)

You can choose that deceleration energy regenerating indicator light comes on or does not come on.

("Hill descent" setting) (if equipped)

Display of "Hill descent" is selectable to indicate or not to indicate.

("Driving mode" setting) (if equipped)

Display of "Driving mode" is selectable to indicate or not to indicate.

("Parking sensors" setting) (if equipped)

Display of "Parking sensors" is selectable to indicate or not to indicate.

("Intersection" setting) (if equipped)

Display of "Intersection" is selectable to indicate or not to indicate.

("Animation (warning)" setting)

Display of "Animation (warning)" is selectable to indicate or not to indicate.

Head-up Display setting (if equipped) (Vehicle speed)

You can change ON/OFF of the vehicle speed.

(Gear position) (if equipped)

You can change ON/OFF of the gear position.

(Clock)

You can change ON/OFF of the clock.

(Intersection guidance (if equipped) (working with the infotainment system))

You can change ON/OFF of the intersection guidance.

(Air conditioning system)

You can change ON/OFF display of the air conditioning system.

(High temperature warning message)

You can change ON/OFF of the high temperature warning message.

Default

(Initialization setting)

If you select "YES" and push the indicator selector knob (3), all settings will be reinitialized.


Warning and Indicator Messages

The display shows warning and indicator messages to let you know about certain vehicle problems.

In some cases, the external or internal buzzer may also sound at the same time to alert you.

If warning and indicator messages appear on the display, follow the messages.

Master warning indicator light

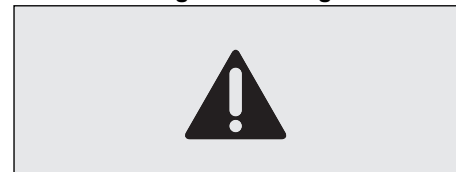

68PM00278

When the display shows warning and indicator messages, the master warning indicator light may also blink.

NOTE:

- When the problem that causes a message to appear is corrected, the message will disappear.
- If a message is displayed, and other problems requiring a message occur, the message for each of the problems will be alternately displayed about every 5 seconds.

INSTRUMENT CLUSTER

- *When you push and hold the indicator selector knob (3) for about 2 seconds while a message is displayed, the message will disappear temporarily. If the problem that caused the message is not corrected, the message will appear again after 5 seconds.*

Rear Passenger's Seat Belt Reminder Light



76TS01006


Reminder light for rear passengers to fasten their seat belts. For details of the seat belt reminder, refer to "Seat Belt Reminder" in "FOR SAFE DRIVING" section.

Warning and indicator messages

All models

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 76TS40430	Blinks (only while vehicle is in motion) 	Beep (one time from interior buzzer; only while vehicle is in motion)	A door, tailgate or engine hood is not properly closed. Stop the vehicle in a safe place and close the door, tailgate or engine hood properly.
 52RS005	Blinks 	Continuous beep (from interior buzzer)	The parking brake is not released. Stop the vehicle in a safe place and release the parking brake.

INSTRUMENT CLUSTER

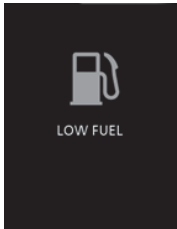Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 52RM21170	Blinks 	Continuous beep (from interior buzzer)	The headlights and/or the position lights are left on. Turn them off.
 52RM21180	Off	Beep (one time from interior buzzer)	Fuel level is low. Refill it as soon as possible. (#1)

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.



Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 55T050831C	Off	Beep (one time from interior buzzer)	CNG level is low. Refill CNG Tank as soon as possible. (#1)
 52RM21190	Off	Off	The road may be icy. Drive very carefully. (#1)

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

INSTRUMENT CLUSTER

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 52RM21210	Off	Off	This message is displayed when ACC position is selected as the ignition mode. (#1)
 52RM21220	Off	Off	The brake pedal (for automatic transmission models) or the clutch pedal (for manual transmission models) is depressed. Press the ignition switch to start the engine.

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

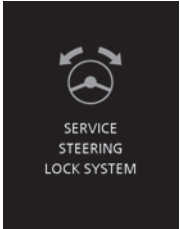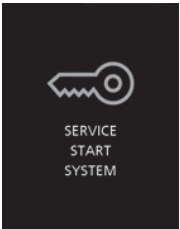Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 SERVICE STEERING LOCK SYSTEM 52RM21230	Blinks 	Beep (one time from interior buzzer)	There is a problem with the steering lock system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.
 SERVICE START SYSTEM 52RM21240	Blinks 	Beep (one time from interior buzzer)	There is a problem with the immobilizer/keyless push start system. Also, the vehicle battery voltage may be decreased. When the message is displayed even if you start the engine with normal voltage of the vehicle battery, have your vehicle inspected by a Maruti Suzuki authorized workshop.


INSTRUMENT CLUSTER

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 KEY FOB NOT DETECTED 55T040090  PLACE KEY FOB ON START SWITCH 55T040100	Blinks 	Series of beeps under certain conditions (for about 2 seconds from exterior and/or interior buzzers)	The remote controller may be outside the vehicle or its battery may be discharged. Bring the remote controller in the vehicle or touch the engine push start switch with the remote controller. If the message still appears, replace the remote controller battery.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 52RM21270	Off	Off	This message is displayed when "ON" position is selected as the ignition mode. (#1)
 55T040020	Blinks 	Beep (one time from interior buzzer)	The steering lock is not disengaged. While lightly turning the steering wheel in both directions, press the ignition switch again.

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

INSTRUMENT CLUSTER

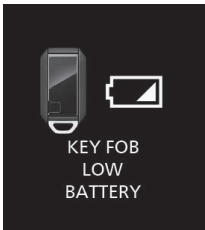Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 KEY FOB LOW BATTERY 55T040110	Off	Off	The remote controller battery is about to become flat. Replace the battery. (#1)

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

Manual transmission models



Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 52RM21300	Off	Off	The ignition switch is pressed without depressing the brake and clutch pedals. Try again as instructed by the message.

INSTRUMENT CLUSTER

Automatic transmission models

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 52RM21310	Off	Off	- The ignition switch is pressed with the gearshift lever in a position other than "P" or "N" or without depressing the brake pedal. Try again as instructed by the message. - Even though the gearshift lever is shifted, the gear is not shifted to the desired selector position. Shift the gearshift lever into "P" with depressing the brake pedal, and then operate the gearshift lever again.
 52RM21320	Off	Off	The ignition switch is pressed with the gearshift lever in a position other than "P". Try again as instructed by the message.

Vehicle with ESP[®] system

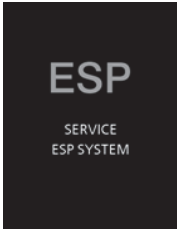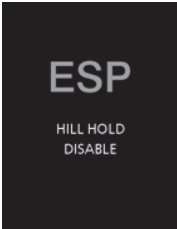Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 52RM21340	Blinks 	Beep (one time from interior buzzer)	There may be a problem with ESP[®] system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.
Hill hold control system  52RM21350	Blinks 	Beep (one time from interior buzzer)	There may be a problem with hill hold control system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

INSTRUMENT CLUSTER

Vehicles with electric parking brake system

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
RELEASE PARKING BRAKE	Blinks 	Continuous short beeps	The electric parking brake has not been released. Stop the vehicle in a safe place and release the electric parking brake.
VEHICLE MIGHT ROLL AVOID STEEP SLOPE	Blinks 	Continuous beeps	Since the vehicle may move, promptly depress the brake pedal, and park the vehicle in a place that is not on a steep slope.
FREQUENT OPERATION TEMPORARILY DISABLED	Blinks 	Continuous short beeps	The electric parking brake switch has been operated repeatedly in a short period and cannot operate temporarily. Wait for a while before attempting the operation again.
PARKING BRAKE INSPECTION REQUIRED	Blinks 	1 beep	The electric parking brake malfunction is detected. Consult with a Maruti Suzuki authorised workshop.
PARKING BRAKE UNAVAILABLE	Blinks 	Continuous beeps	The electric parking brake malfunction is detected. Consult with a Maruti Suzuki authorised workshop.
PARKING BRAKE AUTO ACTIVATED	Off	1 beep	The electric parking brake is automatically operated in response to the request from another function (system).

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
PARKING BRAKE SHIFT SYNCHRO FCN ACTIVATED	Off	1 beep	The electric parking brake system auto mode is ON.
PARKING BRAKE SHIFT SYNCHRO FCN DEACTIVATED	Off	1 beep	The electric parking brake system auto mode is OFF.
PUSH SWITCH WHILE PRESSING BRAKE PEDAL	Off	Continuous short beeps	The electric parking brake switch is operated when the brake pedal is not depressed. Operate the electric parking brake switch while depressing the brake pedal.
PARKING BRAKE ON (SEATBELT/ DOOR)	Off	Continuous short beeps	The electric parking brake cannot be automatically released due to the driver's seat belt not being fastened or the driver's door not being closed securely. Make sure you are wearing the seat belt and driver's door is closed, then try again.
BRAKE HOLD INSPECTION REQUIRED	Blinks 	1 beep	The brake hold malfunction is detected. Consult with a Maruti Suzuki authorised workshop.
BRAKE HOLD UNAVAILABLE STEEP SLOPE KEEP BRAKING	Blinks 	Continuous beeps	The brake hold function may not be set due to the vehicle being parked on a steep slope or similar conditions. Avoid parking on a steep slope or take other necessary precautions, then apply the brake hold again.

INSTRUMENT CLUSTER

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
BRAKE HOLD UNAVAILABLE (SEATBELT/ DOOR)	Off	Continuous short beeps	The brake hold system cannot be set automatically due to the driver's seat belt not being fastened or the driver's door not being closed securely. Make sure you are wearing the seat belt and driver's door is closed, then try again.
PUSH SWITCH WHILE PRESSING BRAKE_PEDAL	Off	Continuous short beeps	The brake hold switch is operated when the brake pedal is not depressed. Operate the electric parking brake switch while depressing the brake pedal.


Instrument Cluster (Type B)

1. Speedometer / Information display
2. Power meter

3. Fuel gauge
4. Temperature gauge


5. Warning and indicator lights

K15C engine model

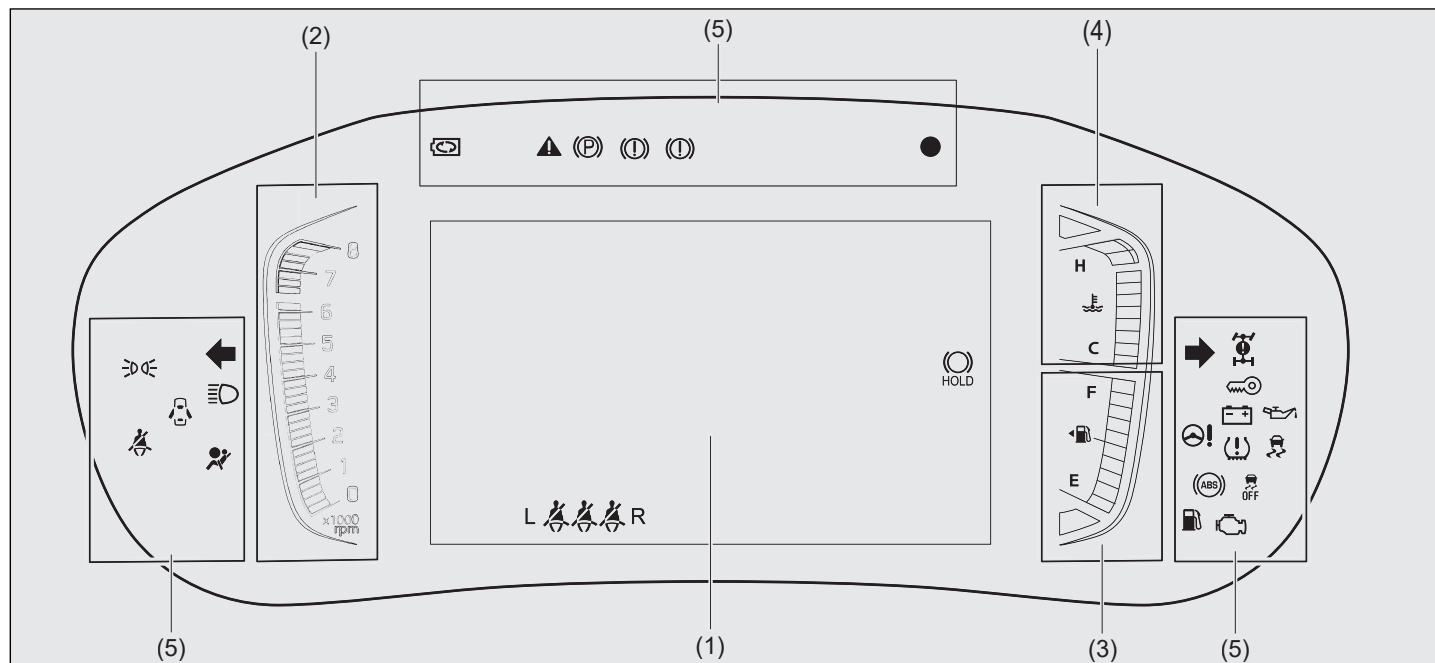

76TS14002

 M15D engine model




Speedometer

The speedometer indicates vehicle speed. You can change the digital or analog type of the speedometer on the information display.

Refer to “Setting Mode” in this section for details.


Analog type

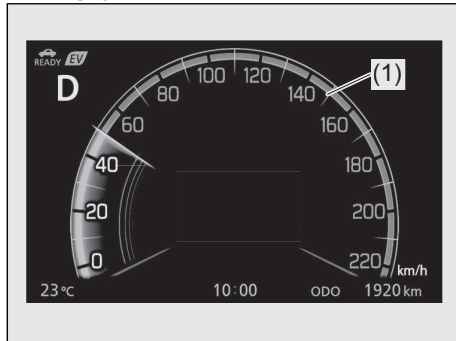

76TS40640

(1) Analog speedometer display

Digital type

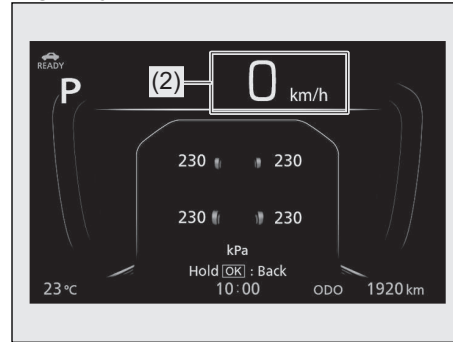

76TS40650


(2) Digital speedometer display

Speed Alert System

The speed alert system gives audible warning for alert of over-speed to driver. When vehicle speed exceeds about 80 km/h, primary level warning with two beeps will sound every minute. When the vehicle speed exceeds about 120 km/h, secondary level warning with continuous beeps will sound.

If the vehicle speed is slowed down to about 118 km/h, primary warning will resume. If the vehicle is slowed down to about 78 km/h, speed alert warning will stop. This buzzer does not indicate any malfunction in vehicle.

Power meter (if equipped)

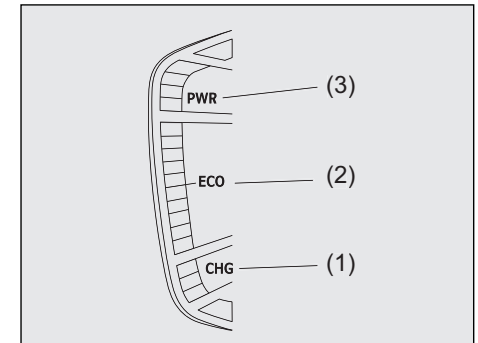

76TS40110

This power meter shows the following areas.

CHG (Charge) area (1)

This area shows regeneration* status. Regenerated energy will be used to charge the hybrid battery (traction battery).

ECO area (2)

This area shows that the vehicle is being driven in an Eco-friendly manner.

PWR (Power) area (3)

This area shows that an Eco-friendly driving range is being exceeded (during full power driving, etc.)

INSTRUMENT CLUSTER

NOTE:


“Regeneration” refers to the conversion of energy created by the movement of the vehicle into electrical energy.

In the following situation, the power meter does not operate.

- Power meter is not illuminated.
- The shift position is in a range other than D, B or R position.

Tachometer (if equipped)

The tachometer indicates engine speed in revolutions per minute.

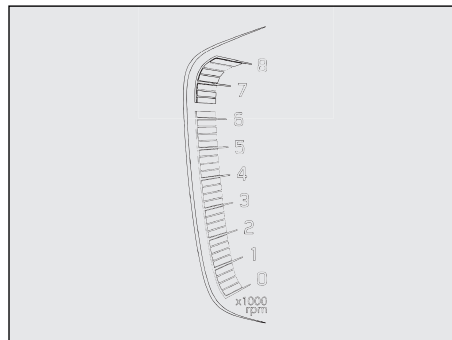


76TS140110

NOTICE

Never drive the vehicle with the engine revving in the red zone or severe engine damage can result. Keep the engine speed below the red zone even when downshifting to a lower gear position. Refer to “Downshifting maximum allowable speeds” in “OPERATING YOUR VEHICLE” section.

Fuel Gauge

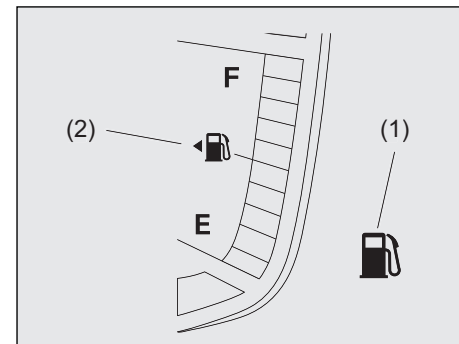

76TS40070

When the power switch is pressed to change the ignition mode to ON, this gauge indicates a rough indication of the amount of fuel in the fuel tank. “F” stands for full and “E” stands for empty.

If the indicator approaches a low level (near “E”) on fuel gauge, refill the tank as soon as possible.

NOTE:

The indicator moves a little depending on road conditions (for example, slope or curve) and driving conditions because of fuel movement in the tank.

If the low fuel warning light (1) comes on, refill the fuel tank as soon as possible.


NOTICE

To minimize the possibility of damage to catalytic converter or other components of the vehicle, avoid driving the vehicle near empty fuel tank level.

Refer to “Low fuel warning light” in “Warning and indicator lights” in this section for details.

The mark (2) indicates that the fuel filler door is located on the left side of the vehicle.

Temperature Gauge

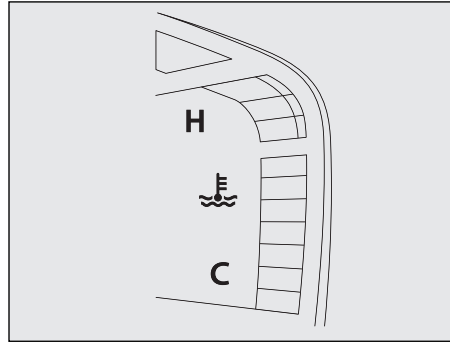

76TS40080

When the power switch is pressed to change the ignition mode to ON, this gauge indicates the engine coolant temperature. Under normal driving conditions, the indicator should stay within the normal, acceptable temperature range between “H” and “C”. If the indicator approaches “H”, overheating is indicated. Follow the instructions for “Engine trouble: Overheating” in “EMERGENCY SERVICE” section.


NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

Brightness Control



76TS40090

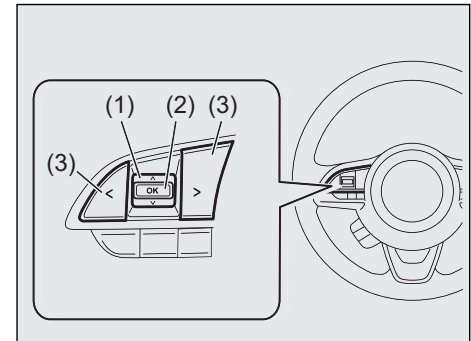

76TS40100

When the power switch is pressed to change the ignition mode to ON, the instrument panel lights come on. You can adjust

INSTRUMENT CLUSTER

the meter illumination brightness even if the ignition mode is LOCK (OFF).

To increase or reduce the brightness of the instrument panel lights, follow the below instructions.

- Press “<” or “>” of left/right selector switch (3) to select “Setting mode”.
- Press selector up/down switch (1) “^” up or down “v” to select the brightness after changing the display. Then press the switch (2).
- Press selector up/down switch (1) “^” up or down “v” to adjust the brightness.
- Press “<” of left selector switch (3) after adjusting the brightness.



WARNING

Do not adjust the brightness of the instrument panel lights while driving. Otherwise, you could lose control of the vehicle.

NOTE:

When you reconnect the lead-acid battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.

NOTE:


If you adjust to the maximum brightness level when the position lights or headlights are on, the following functions will be cancelled.

- *The function which automatically dims the brightness of instrument panel lights*
- *The function which operates with the brightness control, except maximum brightness level*

This software of this speedometer includes open software. The license information and source code for open source software is available through the following URL.
https://www.nippon-seiki.co.jp/business_ic_meter/

Information Display (Type B)

The information display is shown when the ignition mode is "ON".

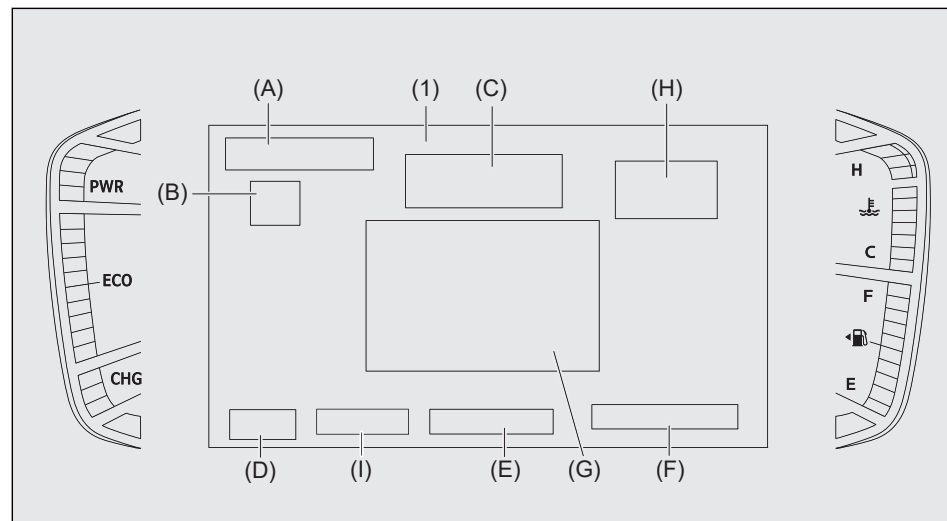

(1) Information display

The information display shows the following information.

Display (A)

Indicator lights

Display (B)

Shift position indicator

Four-mode 4WD System (for 4WD models)

Display (C)

Speedometer

Display (D)

Thermometer

Display (E)

Clock and menu bar indicator

Display (F)

Odometer / Trip meter

Display (G)

- Warning and indicator messages / Fuel consumption / Driving range / Average Speed / Driving time / Clock and date / Motion / Energy flow / Digital speedometer (if equipped) / Multimedia (if equipped) / Warning information / Setting mode / Odometer & Trip meter
- Total idling stop time / Total idling fuel saved (if equipped)
- Torque and power (if equipped)
- Accelerator and brake (if equipped)

Display (H)

Cruise control (if equipped)


Display (I)

Rear passenger's seat belt reminder light

INSTRUMENT CLUSTER

Display

The information display shows the following flows and images.

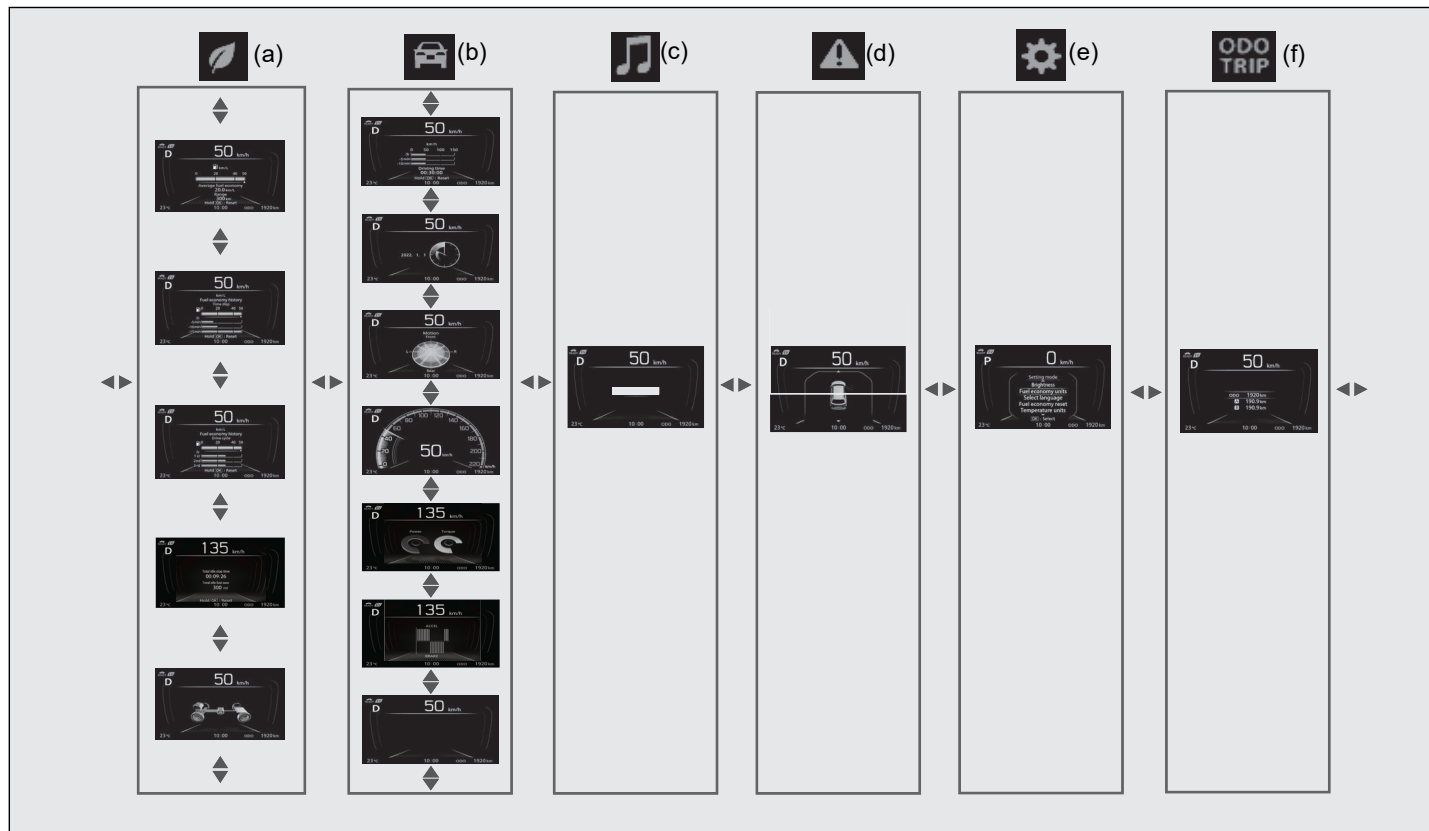


76TS40241

The following images of menu will be displayed on the Display (E). Select an icon by using left/right selector switch.

(a)		Driving information display
(b)		Vehicle information display
(c)		Multimedia display (if equipped)
(d)		Warning message display
(e)		Setting mode display
(f)		Odometer / Trip meter display

Changing the information display

The information display is shown and operated by using the steering switch for the information display.

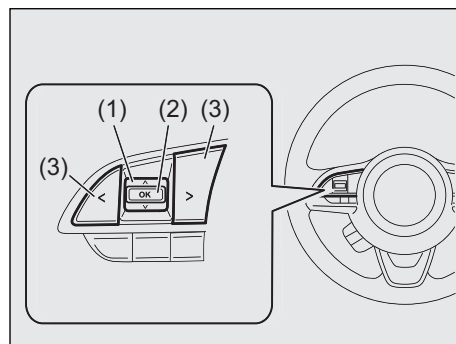


76TS40100


- (1) Up/down selector switch
(2) OK switch
(3) Left/right selector switch

- To change the menu, press “<” or “>” of the switch (3) to scroll or move the screen.
- Press the up/down selector switch (1) “^” up or down “v” to select the screen.
- Press the left/right selector switch after selecting and changing the menu on the display.

The menu bar is shown on Display (E) area and operated by using the Left/right selector switch.

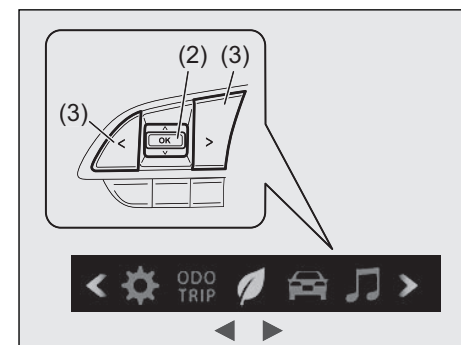


76TS40370

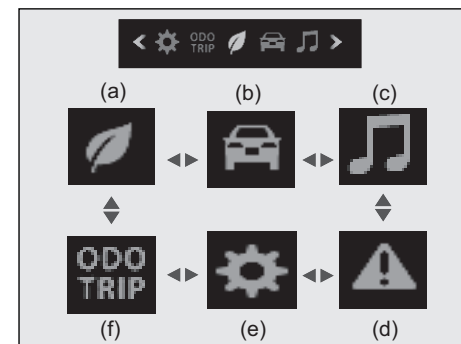

76TS40360

INSTRUMENT CLUSTER

To change the menu bar, press “<” or “>” of the switch (3).

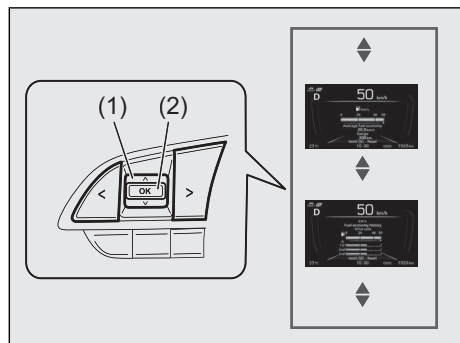

To change the screen on the menu bar, press the up/down selector switch (1) “^” up or down “v” to select the screen.

When there are no warning or indicator messages on the display (G), you can select one of the following indications to appear on the display: average speed/driving time, instantaneous fuel consumption/average fuel consumption/range, fuel economy history, motion, Energy flow, digital speedometer (if equipped), Multimedia (if equipped), and Odometer & Trip meter.

⚠ WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle. Do not attempt to adjust the display while driving.

NOTE:


The value of instantaneous fuel consumption, average fuel consumption, driving range, average speed, motion, torque and power, accelerator and brake shown on the display are affected by the following conditions;

- road condition
- surrounding traffic condition
- driving condition
- vehicle condition
- a malfunction which causes the malfunction indicator light to come on or blink

Average speed / 5-minute average speed / Driving time

Average speed from previous reset and 5-minute average speed are shown.

Average speed

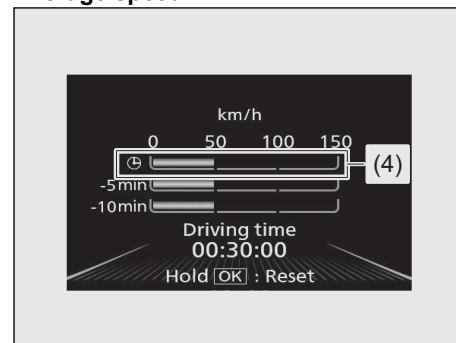

(4) Average speed


If you selected average speed the last time you drove the vehicle, the display indicates the last value of average speed from previous driving when the power switch is pressed to change the ignition mode to ON. Unless you reset the value of average speed, the display indicates the value of average speed which includes average speed during previous driving.

To reset the value of average speed, press OK switch (1) when the display indicates an average speed. The display resets and then indicates a new average speed after driving for a short time.

NOTE:

When you reconnect the negative (-) terminal to the lead-acid battery, the value of average speed will be shown after driving for a period of time.


5-minute average speed

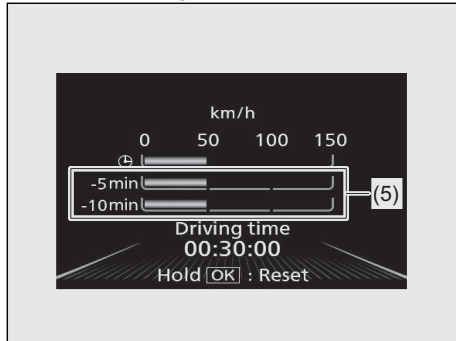

(5) 5-minute average speed

You can check transition of 5-minute average speed every 5 minutes from 10 minutes before up to now.

Driving time

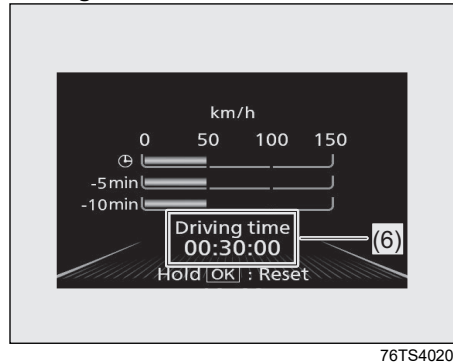

(6) Driving time


Driving time from previous reset is shown. To reset the driving time, change the display of a driving time when the display indicates a driving time. Press OK switch (2). The display resets and then indicates a new driving time after driving for a short time.

NOTE:

- Disconnection of the lead-acid battery negative (-) terminal will reset the indication of the driving time.
- The indicated maximum value of driving time is 99:59:59. No more than this value will be indicated on the display until you reset the driving time.

Instantaneous fuel consumption

The display shows instantaneous fuel consumption with a bar graph only when the vehicle is moving.

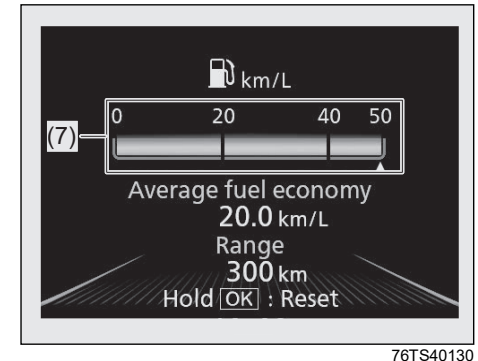

(7) Instantaneous fuel consumption

NOTE:

- The display does not show the bar graph unless the vehicle is moving.
- Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km, km/L or MPG.
- For "L/100km" setting, the indicated maximum value of instantaneous fuel consumption is 30. No more than 30 will be indicated on the display even if the actual instantaneous fuel consumption is higher.


INSTRUMENT CLUSTER

- For “km/L” setting, the indicated maximum value of instantaneous fuel consumption is 50. No more than 50 will be indicated on the display even if the actual instantaneous fuel consumption is higher.
- For “MPG(UK)” setting, the indicated maximum value of instantaneous fuel consumption is 80. No more than 80 will be indicated on the display even if the actual instantaneous fuel consumption is higher.
- The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.
- The display shows estimated values. Indications may not be the same as actual values.

Average fuel consumption / 5-minute average fuel consumption / 1-driving cycle average fuel consumption

Average fuel consumption from previous reset and 5-minute average fuel consumption, and 1-driving cycle average fuel consumption are shown.

Average fuel consumption

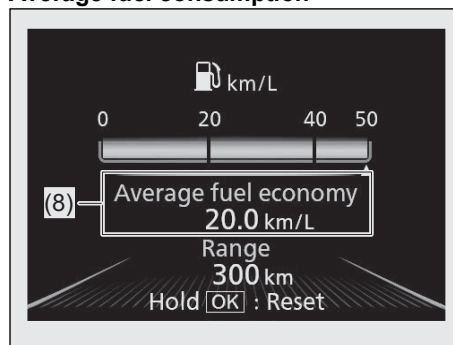

**76TS40140

(8) Average fuel consumption

If you selected average fuel consumption the last time you drove the vehicle, the display shows the last value of average fuel consumption from previous driving when the power switch is pressed to change the ignition mode to ON. Unless you reset the value of average fuel consumption, the display indicates the value of average fuel consumption based on the average fuel consumption during previous driving.

NOTE:

When you reconnect the negative (–) terminal to the lead-acid battery, the value of average fuel consumption will be shown after driving for a period of time.

You can select the timing to reset the value of average fuel consumption by one of the following three methods;


- Reset after refuel: the value of average fuel consumption will be reset automatically by refueling.
- Reset with trip meter A: the value of average fuel consumption will be reset automatically by resetting trip meter A.
- Reset manually: the value of average fuel consumption will be reset by pushing OK (2) switch when the display indicates the average fuel consumption.

To change the timing to reset the value of average fuel consumption, refer to “Setting mode” in this section.

NOTE:


If you add only a small amount of fuel when you select “Reset after refuel”, the average fuel consumption value may not be reset.

1-driving cycle fuel consumption

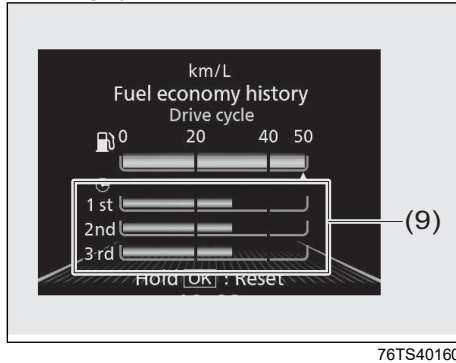

(9) 1-drive cycle fuel consumption


5-minute average fuel consumption

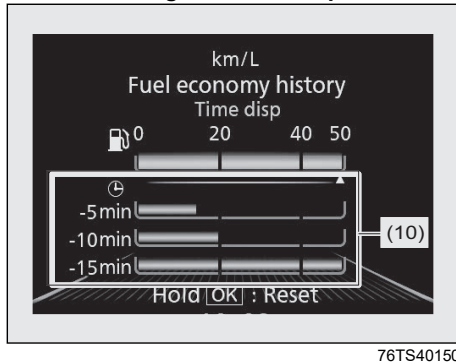

(10) 5-minute average fuel consumption

You can check transition of average fuel consumption every 5 minutes from 15 minutes before up to now. Also, you can check transition of average fuel consumption the past 3 driving cycles. Time indication and driving cycle indication can be changed. For details, refer to "Setting mode" in this section.

Driving range

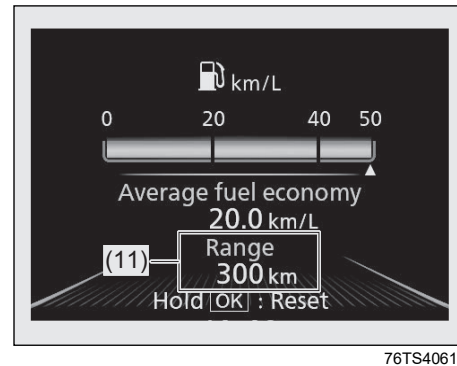

(11) Driving range

If you selected driving range the last time you drove the vehicle, the display indicates "---" for a few seconds and then indicates the current driving range when the ignition switch is pushed to "ON" mode.

The driving range shown in the display is the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions.

When the low fuel warning light comes on, the display "---" will appear. If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

When you refuel, the driving range is updated. However, if you only add a small amount of fuel, the correct value will not be displayed.

NOTE:

- If you refuel when the ignition mode is "ON", the driving range may not indicate the correct value.
- When you reconnect the negative (-) terminal to the lead-acid battery, the value of driving range will be shown after driving for a period of time.

INSTRUMENT CLUSTER

Total idling stop time and total idling fuel saved (if equipped)



52RM1217

- (12) Total idling stop time
(13) Total idling fuel saved


The display shows the total length (in hours, minutes and seconds) of engine stopping time and the total amount (in milliliters) of fuel conservation by ENG ASTOP system since the indication was reset.

- To reset the total idling stop time and the total idling fuel saved, push and hold the indicator selector knob (3) for a while when the display shows the total idling stop time and the total idling fuel saved.

NOTE:

- The indicated maximum value of the total idling stop time is 99:59:59 and this value is fixed until it is reset.
- When you reconnect the negative (-) terminal to the lead-acid battery, the value of the total idling stop time and the total idling fuel saved will be reset.

Motion

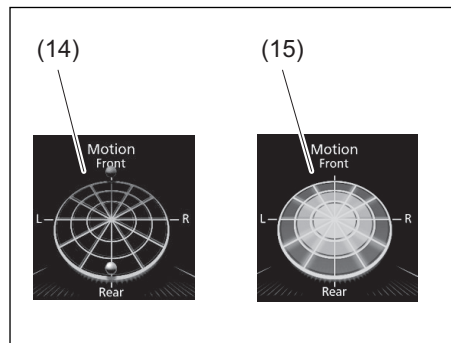

76TS40311

This indicates how the center of gravity is moved while driving.

G (acceleration of gravity) position applied to the vehicle body while driving is shown by a globe (14).

When the vehicle is stopped, historical data of G positions applied to the vehicle body during the driving is shown as a graph (15).

G position history graph at the vehicle stopped can be changed to indicate or hide. For details, refer to "Setting mode" in this section.


⚠ WARNING

Do not look in the display intensively while driving. Doing so may result in an unexpected accident.

NOTE:

- If G position history graph at the vehicle stopped has been set in indication mode, the graph (15) is shown for several seconds when you change the ignition mode to "LOCK" (OFF) after driving.
- The graph is shown approximately and the actual movement may differ.


Torque and power

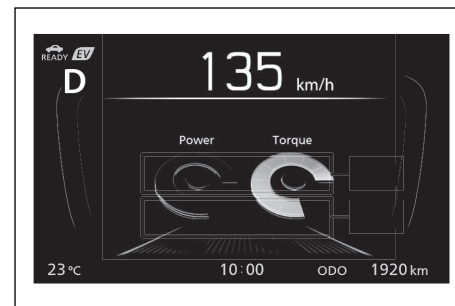

76TS99100

Present engine torque and power are shown.

Accelerator and brake

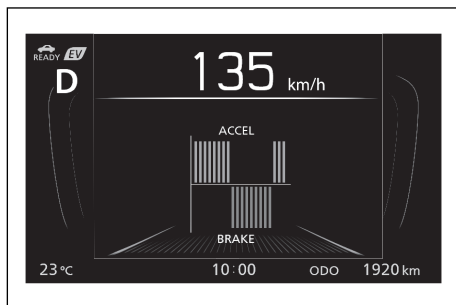


76TS99110

Present accelerator pedal depressing degree and brake line pressure are shown. The display is selectable to indicate or not to indicate. For details, refer to “Setting mode” in this section.

Energy flow indicator

With the energy flow indicator in the instrument cluster, you can check whether or not the energy flow is functioning. For details on the status lamp, refer to “Hybrid System (if equipped)” and “SHVS (Smart Hybrid Vehicle by Suzuki) (if equipped)” in the “OPERATING YOUR VEHICLE” section.

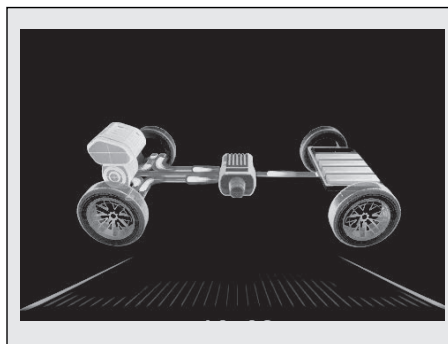

76TS40400


Warning message display

When there is any warning or information on your vehicle, the message shows on Display (G), if any.

Information shown after driving


When you press the power switch to change the ignition mode to “LOCK” (OFF), the following information appears for several seconds on the information display.

(Vehicles with ENG A-STOP system)

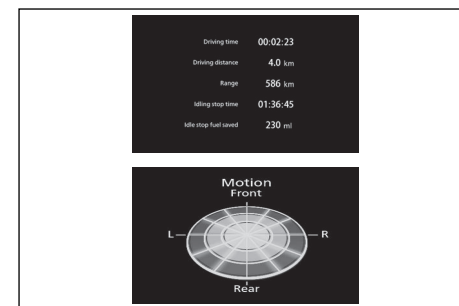

76TS40211


(Vehicles without ENG A-STOP system)

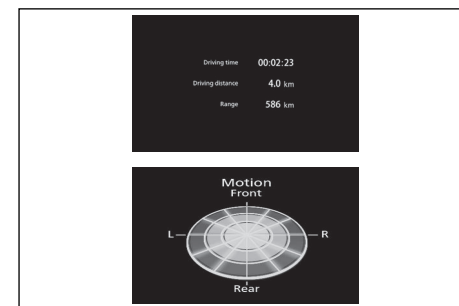

76TS40212

INSTRUMENT CLUSTER

Intersection Guidance (When using Android Auto™*1 or Apple CarPlay*2 on infotainment system)

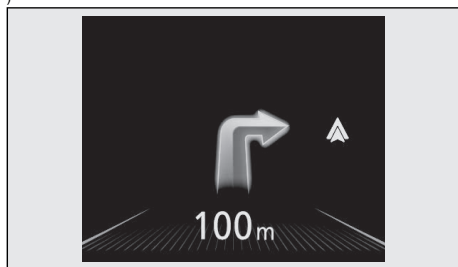

76TS40390

The display shows the direction of your driving and the distance, working with the infotainment system.

NOTE:

- A slight time lag may occur between the intersection guidance on the information display and the guidance from the infotainment system.
- Switch the intersection guidance to ON or OFF while the guidance from the infotainment system is displayed.
 - A time lag may occur between ON display and OFF display of the intersection guidance.
 - For the functions and operations of the infotainment system, refer to the supplementary manual, provided along with it.

- You can display or hide the intersection guidance by changing the setting (customization). For details, refer to "Setting Mode" in this section.

- *1: Android Auto™ may not be available in your country or region. For details about Android Auto™, refer to <http://support.google.com/androidauto>
- *2: Apple CarPlay may not be available in your country or region. For details about Apple CarPlay, refer to <https://www.apple.com/ios/carplay/>

Gear Position




76TS40221

When the power switch is pressed to change the ignition mode to ON, the display (B) indicates the gear position (16). For details on how to use the transmission, refer to "Using Transmission" in "OPERATING YOUR VEHICLE" section.

Digital speedometer display

When selecting the analog speedometer display, You can change ON/OFF of the digital speed display inside the analog speedometer.

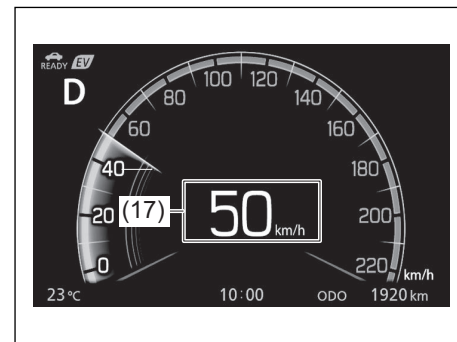

76TS40661

(14) Digital speed display

Trip Meter / Odometer

The display (F) shows the trip meter and the odometer. You can select the trip meter or the odometer.


The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use trip meter A or trip meter B independently.

The odometer records the total distance the vehicle has been driven.


NOTICE

Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

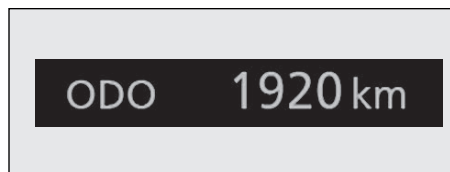

76TS40410

You can change the trip meter and the odometer display from the menu bar. After selecting "Odometer / Tripmeter display" on the menu bar, Odometer and trip meter display is shown on Display (G). To reset the trip meter, select trip meter A or trip meter B and then press OK switch until resetting the display.

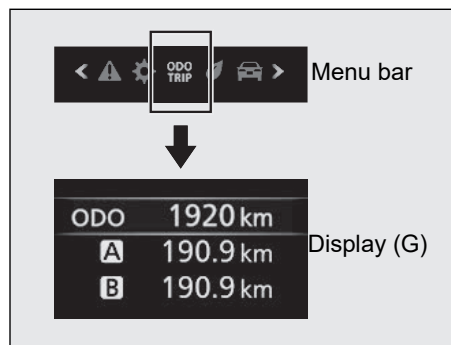


76TS40420

Setting Mode

When the ignition mode is ON, you can enter into the setting mode of the information display by selecting the setting mode from the menu bar by pressing "<" or ">" of the switch (3) to scroll or move the screen.

- To select the setting item that you want to change, select the setting mode from the menu bar and then select the item by moving the up/down selector switch (1).
- To exit the setting mode, press "<" or ">" of the selector switch (3).

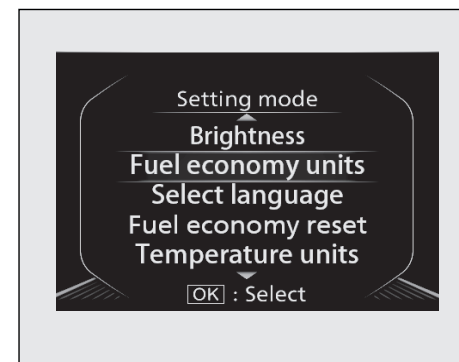

76TS40230

NOTE:

The currently selected setting item is highlighted on the display.

WARNING

Do not change the setting mode while driving. Doing so may result in an unexpected accident.

Brightness

You can change the brightness of the information display, power meter, fuel gauge and temperature gauge.

Fuel economy units (Fuel consumption unit setting)

You can change the units that fuel consumption is displayed in.

Language

You can change the language of the information display.

Fuel economy reset (Average fuel consumption reset setting)

You can change when the value of average fuel consumption is reset.

Temperature units (Temperature unit setting)

You can change the units that temperature is displayed in.

- To change the temperature unit, select "Temperature" in "Setting mode". Then, select "°C" or "°F".

NOTE:

When you change the units that temperature is displayed in, the automatic heating and air conditioning system (if equipped) temperature display units will be changed automatically.

Park sensor mode (Parking sensor setting)

The parking sensor can be switched between the normal mode and trailer mode.

Clock setting (Adjusting the clock) (if equipped)

- Adjust the clock by selecting "Clock setting" in "Setting mode". Then, select "Adjust clock".
- To change the hour indication, move to the hour indication and press the up/down selector switch (1) to adjust.
- To change the minute indication, move to the minute indication and press the up/down selector switch (1) to adjust.
- To exit the setting mode, press "<" of the selector switch (3).

(Selecting 12H / 24H format) (if equipped)

- Switch the time indication between 12-hour and 24-hour format by selecting "Clock setting" in "Setting mode". Then, select "12H" or "24H".

(Adjusting the date) (if equipped)

- Adjust the date by selecting "Clock setting" in "Setting mode". Then select "Adjust date".
- To adjust year, month and day, operate the up/down selector switch (1) in the same way as adjusting the clock.
- To adjust year, month and day, operate the up/down selector switch (1) in the same way as adjusting the clock.

Door lock (Door lock setting) (Door unlock)

- All Doors:
Unlock all doors by keyless push start system remote controller or request switch once
- Driver Door:
Unlock all doors by keyless push start system remote controller or request switch twice (default setting)

(Auto lock)

- Manual Lock:
Disable the automatic door locking function
- Speed Sync:
Lock all doors when the vehicle speed reaches 15 km/h (default setting)
- Gear shift sync:
Lock all doors when the gearshift lever is in other than "P" position.

(Auto unlock)

- Sync Off:
Disable the automatic door unlocking function (default setting)
- IGN-OFF Sync:
Unlock all doors when the power switch is pressed to change the ignition mode to LOCK (OFF)
- Gear shift sync:
Unlock all doors when the gearshift lever is moved from other position to "P" position.

(Siren)

- You can turn off or on the siren sound when the door(s) is(are) locked or unlocked.

Lights

(Lane change setting)

The turn signal and its indicator can be set whether they flash three times even if you return the turn signal control lever shortly after operating it.

- To change the lane change setting, select "Lane Change" in "Setting mode". Then, select "ON" or "OFF"
- If you want to change the number of flashing, consult a Maruti Suzuki authorized workshop.

(Ambient light setting) (if equipped)

You can change the on/off of the ambient light.

(Ambient light level) (if equipped)

You can change the lighting level of the ambient light brightness.

Guide me light setting (if equipped)

You can change the lighting time of "To car" function or "To home" function.

Antitheft

(Shock sensor system setting)

You can change the on/off of the shock sensor.

(Shock sensor pre setting)

You can adjust the pre-warning sensitivity of shock sensor.

(Shock sensor full setting)

You can adjust the full blast warning sensitivity of shock sensor.

TPMS

(Tyre pressure monitoring system setting)

You can check the current tyre pressure on the information display.

Refer to "Tyre pressure monitoring system (TPMS) (if equipped)" in "OPERATING YOUR VEHICLE" section for details.

IS A/C

(ENG A-STOP system setting) (if equipped)

- When using the automatic heating and air conditioning system (if equipped), you can select one of the following engine auto stop settings.
 - Standard
 - Economy
 - Comfort
- When "Economy" is selected, engine auto stop condition is eased, compared with "Standard". As engine auto stop condition will occur more frequently, the stop time will be longer, leading to reduction of fuel consumption.

When "Comfort" is selected, engine auto stop condition becomes severe, compared with "Standard". As engine auto stop condition will occur less frequently, the stop time will be shorter, leading to more comfortable cabin condition by air conditioner.

INSTRUMENT CLUSTER

Display item

("Speedometer type" setting)

You can change the digital or analogue type of the speedometer on the information display.

("Car colour" setting)

You can change the car colour of the information display.

("Calendar" display" setting)

You can select whether you show the calendar on the information display or not.

("Calendar format" setting)

You can change the calendar form of the information display.

To change the calendar form, select "Calendar form" in "Display item". Then, select the display order of date, month and year.

("Motion history" setting) (if equipped)

Indication of G position history graph at the vehicle stopped can be selected to enable or disable.

("Idling disp" setting) (if equipped)

Display of ENG A-STOP operation with ignition mode LOCK (OFF) is selectable to indicate or not to indicate.

("Idling warn" setting) (if equipped)

You can switch whether the information display shows the warning and indicator messages related on the ENG A-STOP system.

("Regen disp" setting) (if equipped)

You can choose that deceleration energy regenerating indicator light comes on or does not come on.

("Parking sensors" setting) (if equipped)

Display of "Parking sensors" is selectable to indicate or not to indicate.

("Intersection" setting) (if equipped)

Display of "Intersection" is selectable to indicate or not to indicate.

("Call display" setting) (if equipped)

Display of "Telephone Call display" is selectable to indicate or not to indicate.

Animation

("warning)" setting)

Display of "Animation (warning)" is selectable to indicate or not to indicate.

Head-up Display setting (if equipped)

(Vehicle speed)

You can change ON/OFF of the vehicle speed.

(Shift)

You can change ON/OFF of the shift position.

(Clock)

You can change ON/OFF of the clock.

(Intersection guidance) (if equipped)

(working with the infotainment system))

You can change ON/OFF of the intersection guidance.

(Air conditioning system)

You can change ON/OFF display of the air conditioning system.

(High temperature warning message)

You can change ON/OFF of the high temperature warning message.

Default

(Initialization setting)

If you select "YES" and push OK switch (2), all settings will be reinitialized.

Four-mode 4WD system (if equipped)

The display (B) shows the driving mode. For details on how to use the four-mode 4WD system, refer to "Four-mode 4WD system (if equipped)" in "OPERATING YOUR VEHICLE" section.

Rear Passenger's Seat Belt Reminder Light



76TS01006

Reminder light for rear passengers to fasten their seat belts. For details of the seat belt reminder, refer to "Seat Belt Reminder" in "FOR SAFE DRIVING" section.


Warning and Indicator Messages

The display shows warning and indicator messages to let you know about certain vehicle problems.

In some cases, the external or internal buzzer may also sound at the same time to alert you.

If warning and indicator messages appear on the display, follow the messages.

Master warning indicator light

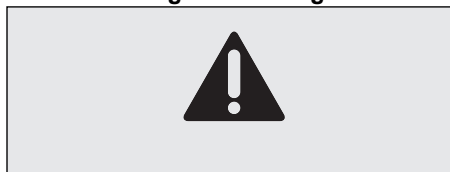

68PM00278

When the display shows warning and indicator messages, the master warning indicator light may also blink.

NOTE:


- When the problem that causes a message to appear is corrected, the message will disappear.
- If a message is displayed, and other problems requiring a message occur, the message for each of the problems will be alternately displayed about every 5 seconds.

- When you press and hold OK switch (2) for a while, the message will disappear.
- Unless the message is disappeared on the display, have your vehicle inspected by a Maruti Suzuki authorized workshop for the problems or messages.

INSTRUMENT CLUSTER

Warning and indicator messages

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 76TS40430	Blinks (only while vehicle is in motion) 	Beep (one time from interior buzzer; only while vehicle is in motion)	A door, tailgate or engine hood is not properly closed. Stop the vehicle in a safe place and close the door, tailgate or engine hood properly.
 76TS40440	Blinks 	Continuous beep (from interior buzzer)	The parking brake is not released. Stop the vehicle in a safe place and release the parking brake.

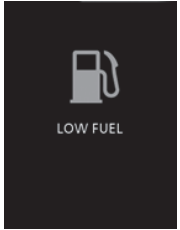Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 52RM21170	Blinks 	Continuous beep (from interior buzzer)	The headlights and/or the position lights are left on. Turn them off.
 52RM21180	Off	Beep (one time from interior buzzer)	Fuel level is low. Refill it as soon as possible. (#1)

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

INSTRUMENT CLUSTER

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 ICE POSSIBLE DRIVE WITH CARE 76TS40450	Off	Off	The road may be icy. Drive very carefully. (#1)

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 76TS40460	Off	Off	This message is displayed when ACC position is selected as the ignition mode. (#1)
 76TS40470	Off	Off	The brake pedal is depressed. Press the power switch to start Hybrid system.

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

INSTRUMENT CLUSTER

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 STEERING LOCK SYSTEM MALFUNCTION SEE OWNER'S MANUAL 76TS40480	Blinks 	Beep (one time from interior buzzer)	The steering lock is not disengaged. While lightly turning the steering wheel in both directions, press the power switch again.
 START SYSTEM MALFUNCTION SEE OWNER'S MANUAL 76TS40490	Blinks 	Beep (one time from interior buzzer)	There is a problem with the immobilizer/keyless push start system. Also, the vehicle battery voltage may be decreased. When the message is displayed even if you start the engine with normal voltage of the vehicle battery, have your vehicle inspected by a Maruti Suzuki authorized workshop.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 KEY FOB NOT DETECTED 76TS40500  PLACE KEY FOB ON START SWITCH 76TS40510	Blinks 	Series of beeps under certain conditions (for about 2 seconds from exterior and/or interior buzzers)	The remote controller may be outside the vehicle or its battery may be discharged. Bring the remote controller in the vehicle or touch the engine push start switch with the remote controller. If the message still appears, replace the remote controller battery.

INSTRUMENT CLUSTER

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 IGNITION SWITCH POSITION 76TS40520	Off	Off	This message is displayed when "ON" position is selected as the ignition mode. (#1)
 PRESS START SWITCH WHILE TURNING STEERING WHEEL 76TS40530	Blinks 	Beep (one time from interior buzzer)	The steering lock is not disengaged. While lightly turning the steering wheel in both directions, press the power switch again.

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 KEY FOB LOW BATTERY 76TS40540	Off	Off	The remote controller battery is about to become flat. Replace the battery. (#1)
Manual transmission models  PRESS BRAKE AND CLUTCH TO START 52RM21300	Off	Off	The ignition switch is pressed without depressing the brake and clutch pedals. Try again as instructed by the message.

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

INSTRUMENT CLUSTER

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 76TS40550	Off	Off	The power switch is pressed with the gearshift lever in a position other than "P" or "N" or without depressing the brake pedal. Try again as instructed by the message.
 76TS40560	Off	Off	The power switch is pressed with the gearshift lever in a position other than "P". Try again as instructed by the message.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 76TS40570	Blinks 	Beep (one time from interior buzzer)	The transmission fluid temperature becomes too high. Stop the vehicle in a safe place and let the fluid cool down.

INSTRUMENT CLUSTER

Vehicle with ESP[®] system

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 ESP SYSTEM MALFUNCTION CONTACT DEALER 76TS40580	Blinks 	Beep (one time from interior buzzer)	There may be a problem with ESP[®] system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.
Hill hold control system  ESP HILL HOLD UNAVAILABLE CONTACT DEALER 76TS40590	Blinks 	Beep (one time from interior buzzer)	There may be a problem with hill hold control system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

Vehicles with electric parking brake system

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
RELEASE PARKING BRAKE	Blinks 	Continuous short beeps	The electric parking brake has not been released. Stop the vehicle in a safe place and release the electric parking brake.
VEHICLE MIGHT ROLL AVOID STEEP SLOPE	Blinks 	Continuous beeps	Since the vehicle may move, promptly depress the brake pedal, and park the vehicle in a place that is not on a steep slope.
FREQUENT OPERATION TEMPORARILY DISABLED	Blinks 	Continuous short beeps	The electric parking brake switch has been operated repeatedly in a short period and cannot operate temporarily. Wait for a while before attempting the operation again.
PARKING BRAKE INSPECTION REQUIRED	Blinks 	1 beep	The electric parking brake malfunction is detected. Consult with a Maruti Suzuki authorised workshop.
PARKING BRAKE UNAVAILABLE	Blinks 	Continuous beeps	The electric parking brake malfunction is detected. Consult with a Maruti Suzuki authorised workshop.
PARKING BRAKE AUTO ACTIVATED	Off	1 beep	The electric parking brake is automatically operated in response to the request from another function (system).

INSTRUMENT CLUSTER

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
PARKING BRAKE SHIFT SYNCHRO FCN ACTIVATED	Off	1 beep	The electric parking brake system auto mode is ON.
PARKING BRAKE SHIFT SYNCHRO FCN DEACTIVATED	Off	1 beep	The electric parking brake system auto mode is OFF.
PUSH SWITCH WHILE PRESSING BRAKE PEDAL	Off	Continuous short beeps	The electric parking brake switch is operated when the brake pedal is not depressed. Operate the electric parking brake switch while depressing the brake pedal.
PARKING BRAKE ON (SEATBELT/ DOOR)	Off	Continuous short beeps	The electric parking brake cannot be automatically released due to the driver's seat belt not being fastened or the driver's door not being closed securely. Make sure you are wearing the seat belt and driver's door is closed, then try again.
BRAKE HOLD INSPECTION REQUIRED	Blinks 	1 beep	The brake hold malfunction is detected. Consult with a Maruti Suzuki authorised workshop.
BRAKE HOLD UNAVAILABLE STEEP SLOPE KEEP BRAKING	Blinks 	Continuous beeps	The brake hold function may not be set due to the vehicle being parked on a steep slope or similar conditions. Avoid parking on a steep slope or take other necessary precautions, then apply the brake hold again.

INSTRUMENT CLUSTER

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
BRAKE HOLD UNAVAILABLE (SEATBELT/ DOOR)	Off	Continuous short beeps	The brake hold system cannot be set due to the driver's seat belt not being fastened or the driver's door not being closed securely. Make sure you are wearing the seat belt and driver's door is closed, then try again.
PUSH SWITCH WHILE PRESSING BRAKE_PEDAL	Off	Continuous short beeps	The brake hold switch is operated when the brake pedal is not depressed. Operate the electric parking brake switch while depressing the brake pedal.

INSTRUMENT CLUSTER

Warning and Indicator Lights

NOTE:

If warning and indicator lights blink or come on, the corresponding messages may be shown on the information display.

Low Tyre Pressure Warning Light (if equipped)



52D305

As an added fuel efficiency feature, your vehicle is equipped with a tyre pressure monitoring system (TPMS) that uses a low tyre pressure warning light to inform you when one or more of your tyres is significantly under-inflated.

When the ignition switch or the power switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working.

When the low tyre pressure warning light is lit, one or more of your tyres is significantly under-inflated. You should stop and check your tyres as soon as possible, and inflate them to the proper pressure as indicated on the vehicle's tyre information placard. Driving on a significantly under-inflated tyre causes the tyre to overheat and can

lead to tyre failure. Under-inflation also reduces fuel efficiency and tyre tread life, and may affect the vehicle's handling and stopping ability. Each tyre, including the spare (optional), should be checked at least once a month when cold and set to the recommended inflation pressure as specified in the vehicle placard.

The low tyre pressure warning light is also used to inform you of a TPMS malfunction. When the system detects a malfunction, this light will blink for about 75 seconds and then remain continuously illuminated. This sequence will be repeated after the ignition switch or the power switch is pressed to change the ignition mode to "ON" as long as the malfunction exists.

NOTE:

The low tyre pressure warning light may not come on immediately if you have a sudden loss of air pressure.

WARNING

- Failure to take corrective action when the low tyre pressure warning light is not working or when it comes on and blinks while driving can lead to an accident. If the low tyre pressure warning light does not come on for 2 seconds after the ignition switch or the power switch is pressed to change the ignition mode to "ON", or comes on and blinks while driving, have your vehicle inspected by a Maruti Suzuki authorized workshop. Even if the light turns off after blinking, indicating that the monitoring system has recovered, you should still have the system checked by a Maruti Suzuki authorized workshop.

⚠ WARNING

The load-carrying capacity of your tyres is reduced at lower inflation pressures. If your tyres are even moderately under-inflated, the load on the tyres may exceed the load-carrying capacity of the tyres, which could lead to tyre failure. The low tyre pressure warning light will not alert you to this condition, because it only comes on when one or more of your tyres becomes significantly under-inflated.

Check and adjust your tyre inflation pressure at least once a month. Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section.

⚠ WARNING

Continuing to drive with the low tyre pressure warning light on can lead to an accident, resulting in severe injury or death.

If the low tyre pressure warning light comes on and stays on, reduce your speed and avoid abrupt steering and braking. Be aware that driving on a significantly under-inflated tyre can cause the tyre to overheat and can lead to tyre failure, and may affect steering control and brake effectiveness. Stop the vehicle in a safe place as soon as possible and check your tyres.

- If you have a flat tyre, repair it by the flat tyre repair kit or replace it with the spare tyre (optional). Refer to "Flat tyre repair kit" or "Tyre changing tool. Refer to "Jacking instructions" in "EMERGENCY SERVICE" section for the tyre replacement method. Also refer to "Replacing tyres and/or wheels" for instructions on how to restore normal operation of the TPMS after you have had a flat tyre.

(Continued)

⚠ WARNING

(Continued)

- Refer to "Flat tyre repair kit" or "Tyre changing tool" section.
- If one or more of your tyres is under-inflated, adjust the inflation pressure of all tyres to the recommended inflation pressure as soon as possible.

Refer to "Tyre pressure monitoring system (TPMS) (if equipped)" in "OPERATING YOUR VEHICLE" section for additional details on the tyre pressure monitoring system. Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section for information on maintaining proper tyre pressure.

INSTRUMENT CLUSTER

Brake System Warning Light (red color)



82K170

Three different types of operations exist depending on the vehicle's specification.

- 1) The light comes on briefly when the ignition switch or the power switch is pressed to change the ignition mode to ON.
- 2) The light comes on when the parking brake is engaged with the ignition mode ON.
- 3) The light comes on when under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (proportioning valve function) of the ABS system fails.

The light also comes on when the brake system is malfunctioning for the vehicle of M15D engine (hybrid) model.

If the brake system warning light comes on while you are driving the vehicle, it may mean that there is something wrong with the vehicle's brake system. If this happens, you should:

- 1) Pull off the road and stop carefully.

WARNING

Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.

For the vehicle of the gasoline model

- 2) Test the brakes by carefully starting and stopping on the shoulder of the road.
- 3) If you determine that it is safe, drive the vehicle cautiously at low speed to the nearest Maruti Suzuki authorized workshop for repairs or tow the vehicle to the nearest Maruti Suzuki authorized workshop for repairs.

For the vehicle of M15D engine (hybrid) model

- 2) Continuing to drive the vehicle may be dangerous. Contact a Maruti Suzuki authorized workshop.

WARNING

If any of the following conditions occur, you should immediately ask your Maruti Suzuki authorized workshop to inspect the brake system.

- If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.
- If the brake system warning light does not come on when the ignition switch or the power switch is pressed to change the ignition mode to ON.
- If the brake system warning light comes on at any time during vehicle operation.

NOTE:

Because the brake system is self-adjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.

NOTE:

(Parking Brake Reminder Buzzer)

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.

Seat Belt Reminder Light



80J221

When the driver and/or front passenger do(does) not buckle his or her seat belt, this light will come on and/or blink. For details about the seat belt reminder, refer to "Seat Belt Reminder" in "FOR SAFE DRIVING" section.

NOTE:

Along with the seat belt reminder light, a reminder message shall also come on the information display (if equipped), for unrestrained driver and/or front passenger.

Rear Passenger's Seat Belt Reminder Light



80J224

Reminder light for rear passengers to fasten their seat belts. For details of the seat belt reminder, refer to "Seat Belt Reminder" in "FOR SAFE DRIVING" section.

INSTRUMENT CLUSTER

Airbag Warning Light



63J030

This light blinks or comes on for several seconds when the ignition switch or the power switch is pressed to change the ignition mode to ON so you can check if the light is working.

The light will come on and stay on if there is a problem in the airbag system or the seat belt pretensioner system.

WARNING

If the airbag warning light does not blink or come on briefly when the ignition switch is pressed to change the ignition mode to ON, stays on for more than 6 seconds, or comes on while driving, the airbag system or the seat belt pretensioner system may not work properly, which could result in serious injury in the event of a crash. Have both systems inspected by a Maruti Suzuki authorized workshop.

Low Fuel Warning Light



54G343

When the ignition mode or the power switch is ON, this light comes on if the remaining fuel level is about 5.0L or less. If this light comes on, fill the fuel tank immediately.

When this light comes on, a ding sounds once to remind you to fill the fuel. If you do not fill the fuel, a ding sounds every time when the ignition switch or the power switch is pressed to change the ignition mode to ON.

NOTE:

- The activation point of this light varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.
- When this light comes on, low fuel warning message is displayed on the information display. For details, refer to "Warning and Indicator Messages" in this section.

Anti-lock Brake System (ABS) Warning Light



80J127

When the ignition switch or the power switch is pressed to change the ignition mode to ON, the light comes on briefly so you can check that the light is working. If the light stays on, or comes on when driving, there may be something wrong with the ABS.

If this happens:

- 1) Pull off the road and stop carefully.
- 2) Change the ignition mode to LOCK (OFF) by pressing the ignition switch or the power switch and then start the engine again.

If the warning light comes on briefly then turns off, the system is normal. If the warning light still stays on, the system will be something wrong.


If the light and the brake system warning light stay on, or come on simultaneously when driving, your ABS system is equipped with the rear brake force control function (proportioning valve function) and there may be something wrong with both the rear brake force control function and anti-lock function of the ABS system.

If one of these happens, have your vehicle inspected by a Maruti Suzuki authorized workshop.

If the ABS becomes inoperative, the brake system will function as an ordinary brake system that does not have this ABS system.

For details of ABS system, refer to "Anti-Lock Brake System (ABS)" in the "OPERATING YOUR VEHICLE" section.

High Engine Coolant Temperature Warning Light (red color) (if equipped)

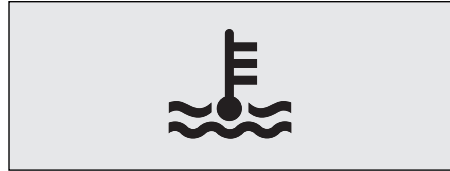


54G344

When the ignition switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working. If this light blinks while driving, it means the engine is running hot. If the light stays on after blinking, then the engine is overheating. To avoid actual overheating, if this light blinks or stays on while driving, follow the instructions in the "Engine Trouble: Overheating" of "EMERGENCY SERVICE" section.

NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

Malfunction Indicator Light

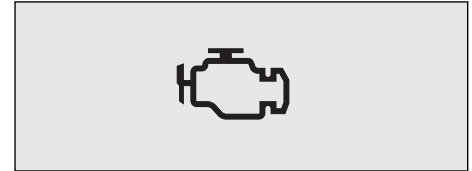

80J222

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument panel to indicate when it is necessary to have the emission control system serviced. The malfunction indicator light comes on when the ignition switch or the power switch is pressed to change the ignition mode to ON to let you know the light is working and goes out when the engine is started.

If the malfunction indicator light comes on or blinks when the engine is running, there is a damage in the emission control system.

Bring the vehicle to a Maruti Suzuki authorized workshop to have the damage fixed.

INSTRUMENT CLUSTER

WARNING

If this light blinks, stop your vehicle immediately in a safe place to avoid catalyst's melting problem since there may be a misfire in the engine.

- Do not drive or stop over such as withered grasses.

Drive slowly if required to move the vehicle.

NOTICE

Continuing to drive the vehicle when the malfunction indicator light is on or blinking can cause permanent damage to the vehicle's emission control system, and can affect fuel economy and driveability.

Electric Power Steering Light



80J408

This light comes on when the ignition switch or the power switch is pressed to change the ignition mode to ON, and goes out when the engine is started or hybrid system is activated.

If this light comes on while driving, the power steering system may not work properly. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:


- Following operations of the steering wheel while parking or driving at a very low speed may have steering effort bigger gradually. This is not a malfunction of the steering system, but the power steering control system limits the power assist in order to prevent them from overheating.
 - The steering wheel is operated very often.
 - The steering wheel is kept in a fully turned position for a long while.

When the power steering control system cool down, the power steering system back to the original condition.

However, repeating these operations could cause the power steering system damaged.

- *If the power steering system does not work properly, you will feel heavier to steer but you still will be able to steer.*
- *If the steering is operated, you may hear a noise. This is normal and indicates that the power steering system works properly.*

Engine Oil Pressure Warning Light

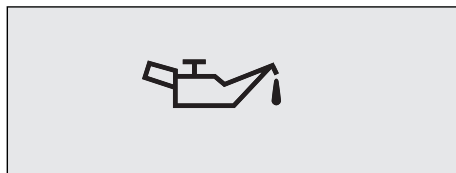

80J223


This light comes on when the ignition switch or the power switch is pressed to change the ignition mode to ON, and goes out when the engine is started or hybrid system is activated. The light will come on and remain on if there is insufficient oil pressure. If the light comes on when driving, pull off the road as soon as you can and stop the engine.

Check the oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by a Maruti Suzuki authorized workshop before you drive the vehicle again.

NOTICE

- If you operate the engine with this light on, severe engine damage can result.
- Do not rely on the engine oil pressure warning light to indicate the need to add oil. Be sure to periodically check the engine oil level.


Charge Warning Light

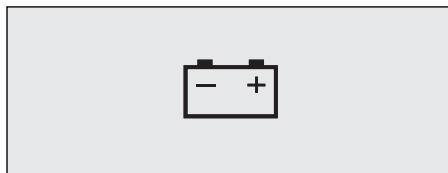

80J226

This light comes on when the ignition switch or the power switch is pressed to change the ignition mode to ON, and goes out when the engine is started or hybrid system is activated. The light will come on and remain on if there is something wrong with the battery charging system. If the light comes on when the engine is running or hybrid system is activated, the charging system should be inspected immediately by a Maruti Suzuki authorized workshop.

Cruise Control Indicator Light (if equipped)

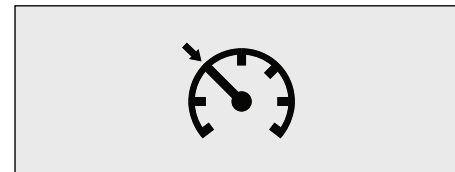

64MM02015

When the cruise control is on, this light will be on.

“SET” Indicator Light (if equipped)




65D474

When a cruising speed of the cruise control is set, this light will be on.

INSTRUMENT CLUSTER

Transmission Warning Light (Automatic Transmission models)

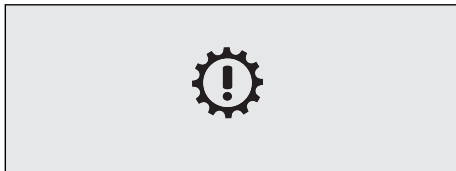


80J219

When the ignition switch is pressed to change the ignition mode to ON, this light comes on for several seconds so you can check that the light is working.

If this light comes on when the ignition switch is pressed to change the ignition mode to ON, there is a problem with the automatic transmission system.

If this light comes on or blinks, stop the vehicle in a safe place and contact a Maruti Suzuki authorized workshop. If the light comes on or blinks again after the light goes out, have the system inspected by a Maruti Suzuki authorized workshop.

Immobilizer / Keyless Push Start System Warning Light

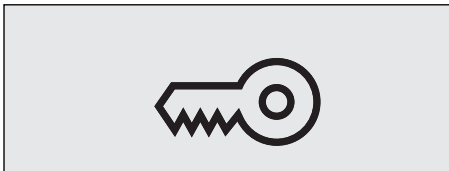


80JM122

When the ignition switch or the power switch is pressed to change the ignition mode to ON, the light comes on briefly so you can check that the light is working.

If this light blinks or stays on, there is a problem with the system.

If this light still blinks or stays on even if you start the engine with normal voltage of the vehicle battery, ask a Maruti Suzuki authorized workshop to have the system inspected.


Open Door Warning Light

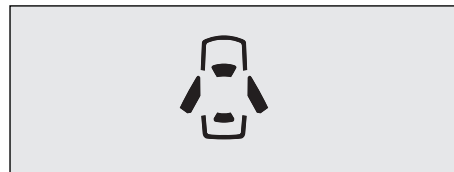

54G391

This light remains on until all doors (including the tailgate) are completely closed.

If any door (including the tailgate) is open when the vehicle is moving, a ding sounds to remind you to close all doors completely.

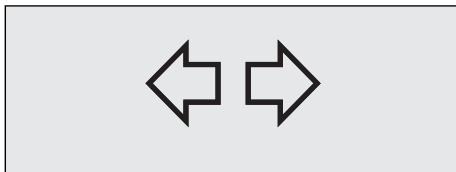
Turn Signal Indicators

59RN04690

When you turn on the left or right turn signals, the corresponding green arrow on the instrument panel will blink along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will blink along with all of the turn signal lights.


NOTE:

If any abnormality of the turn signals is observed, such as fast blinking, there may be a malfunction in the turn signal system. Ask your Maruti Suzuki authorized workshop to inspect the system.

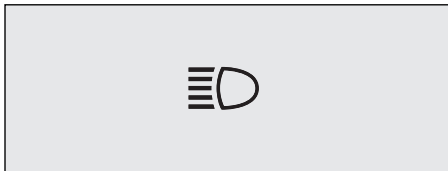Main Beam (High beam) Indicator Light

80J212

This indicator comes on when headlight main beams (high beams) are turned on.

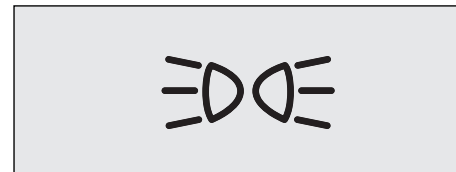
Illumination Indicator Light

64J045

This indicator light comes on while the position lights, tail light and/or the headlights are on.

INSTRUMENT CLUSTER

ESP® OFF Indicator Light

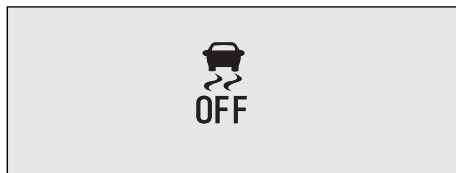

57L30045

When the ignition switch or the power switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working.

When the ESP® OFF switch is pushed to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light comes on and stays on.

For details of the ESP® systems, refer to "Electronic Stability Program (ESP®)" in the "OPERATING YOUR VEHICLE" section.

ESP® Warning Light



52KM133

ESP® is a registered trademark of Mercedes-Benz Group AG.

This light blinks 5 times per second when one of the ESP® systems other than ABS is activated. If this light blinks, drive carefully.

When the ignition switch or the power switch is pressed to change the ignition mode to ON, the light comes on briefly so you can check that the light is working. If the light stays on, or comes on when driving and remains on, there may be something wrong with the ESP® systems (other than ABS). You should have the system inspected by a Maruti Suzuki authorized workshop.


For details of the ESP® systems, refer to "Electronic Stability Program (ESP®)" in the "OPERATING YOUR VEHICLE" section.



WARNING

The ESP® systems cannot prevent accidents. Always drive carefully.

ENG A-STOP Indicator Light (if equipped)

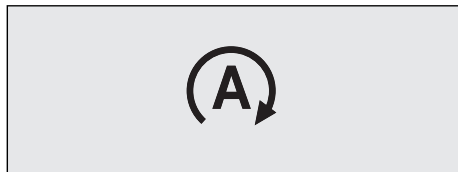


72M00032

When the ignition switch is pressed to change the ignition mode to ON, this light comes on briefly to let you know the light is working.

When the engine stops automatically, this light comes on.

For details, refer to “ENG A-STOP System (Engine Auto Stop Start System) (if equipped)” in the “OPERATING YOUR VEHICLE” section.

ENG A-STOP OFF Indicator Light (if equipped)

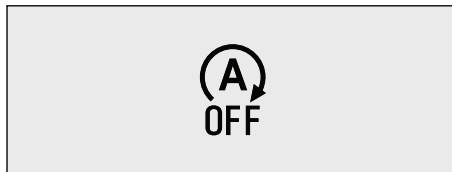

62R0352

When the ignition switch is pressed to change the ignition mode to ON, this light comes on briefly if the system works properly.


The ENG A-STOP OFF indicator light blinks under the following conditions:

- If there is something wrong with the ENG A-STOP system
- If there is something wrong with the lithium-ion battery
- When the lead-acid battery is due for replacement

If the ENG A-STOP OFF indicator light blinks, have your vehicle inspected immediately by Maruti Suzuki authorised workshop.

For details, refer to “ENG A-STOP OFF light” in the “OPERATING YOUR VEHICLE” section.

Master warning indicator light

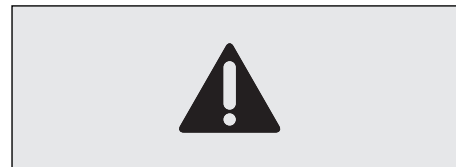

68PM00278

When the ignition switch is turned “ON”, this light comes on briefly so you can check that the light is working.

When the information display shows warning and indicator messages, this indicator light may also blink.

For details, refer to “Information Display (Type A)” and “Information Display (Type B)” in this section.

INSTRUMENT CLUSTER

4WD indicator light (if equipped)



57L30042

When the ignition switch is pressed to change the ignition mode to "ON", this light comes on briefly so you can check that the light is working.

- This light comes on if there is any problem with the four-mode 4WD system. The system will be deactivated automatically.
- The light blinks if the vehicle is in either of the following conditions, and the system will be deactivated automatically.
 - Wheels of different diameters are fitted to the vehicle.
 - Drive train components overheat as a result of spinning of a drive wheel in mud or snow.

NOTE:

Should the light blink, immediately move the vehicle to a safe place and park it there to protect the drive train components. If you let the engine run at idle for a while except for the case of different sized wheels are fitted, the light will go out and the system will resume.

Hill descent control indicator light (if equipped)



79K050

When the ignition switch is pressed to change the ignition mode to "ON", this light comes on briefly so you can check that the light is working.

When you push the hill descent control switch and the hill descent control operating conditions are fulfilled, the hill descent control indicator comes on. If the hill descent control indicator blinks, the hill descent control will not be activated.

For details of the hill descent control system, refer to "Hill descent control system (if equipped)" in "OPERATING YOUR VEHICLE" section.

Hybrid system warning light (if equipped)



53SB18209

When the power switch is pressed to change the ignition mode to "ON", this light comes on briefly so you can check that the light is working.

EV indicator (if equipped)



53SB08211

When the vehicle is driven using the electric motor (traction motor) or the gasoline engine is stopped, this indicator comes on.


Acoustic Vehicle Alerting System Warning Light (if equipped)



76TS04002

When the power switch is pressed to change the ignition mode to "ON", this light comes on briefly so you can check that the light is working. If this light blinks, there may be something wrong with the acoustic vehicle alerting system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.


Power mode (if equipped)

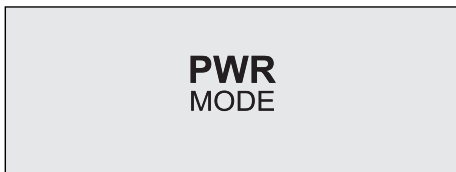

76TS40350

When pushing Drive mode switch and selecting Power mode, quick response and strong acceleration to accelerator pedal can be done and this light comes on.


ECO mode indicator (if equipped)

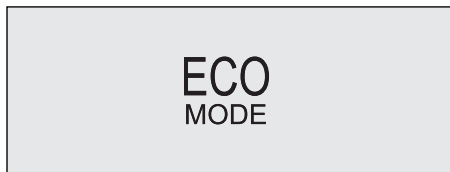

76TS40330

This indicator comes on when the vehicle is driven under ECO mode situation when pushing Drive mode switch and selecting ECO mode


EV drive mode (if equipped)

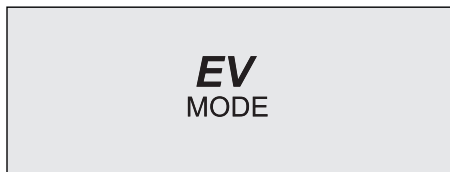

76TS40340

When electric power is supplied by the hybrid battery and electric motor is used only to drive the vehicle, this light comes on.

Deceleration energy regenerating indicator light (if equipped)

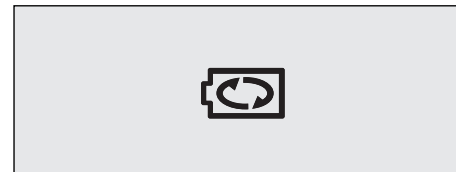

72M00168

When the ignition switch is pressed to change the ignition mode to "ON", this light comes on briefly so you can check that the light is working.

When the deceleration energy regenerating function is working, this light comes on.

For details, refer to "SHVS (Smart Hybrid Vehicle by Maruti Suzuki) (if equipped)" in "OPERATING YOUR VEHICLE" section.

INSTRUMENT CLUSTER


READY indicator (if equipped)



74SB20206

With the gearshift lever in "P" position and brake pedal depressed, pressing the power switch starts up the hybrid system to be ready to run and this READY indicator comes on.

Electric Parking Brake Operation Indicator Light (if equipped)

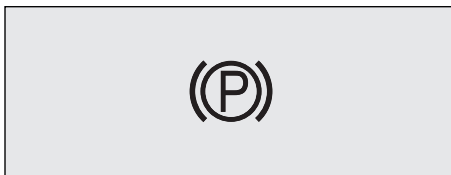

69TJ010130

- This indicator comes on when the electric parking brake is engaged.
- This indicator blinks when the electric parking brake system is malfunctioning.
- When the electric parking brake is functioning normally, the indicator comes on for several seconds when pressing the engine switch to change the ignition mode to ON, and the indicator continues as follows.
 - When the electric parking brake is ON, the indicator continues to stay illuminated.
 - When the electric parking brake is released, the indicator turns off.


Brake System Warning Light (yellow color) (if equipped)



82K170

- When the power switch is pressed to change the ignition mode to "ON", this light comes on briefly so you can check that the light is working.
- If the light stays on or comes on when driving, there may be something wrong with any of the below systems:
 - Regenerative brake function
 - Hill hold control system
 - Electric parking brake system
- If the light comes on temporarily while driving but then goes off and does not come back on, it is normal.

**Brake Hold Standby Indicator Light
(white color) (if equipped)**

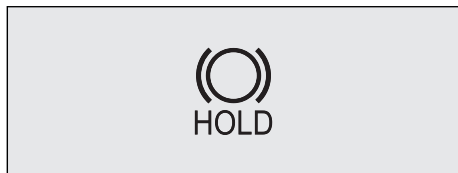


69TJ010140

This indicator comes on when the brake hold operational conditions (standby conditions) are met.

Vehicles with Instrument Cluster Type A


When the brake hold system is functioning normally, the indicator comes on for few seconds when pressing the engine switch to change the ignition mode to ON, then goes off.

**Brake Hold Operation Indicator
Light (green color) (if equipped)**

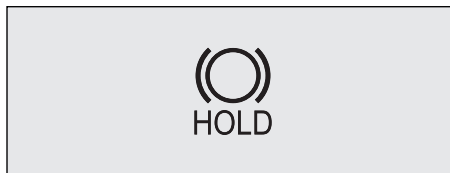

69TJ010140

- This indicator comes on when the brake hold system is operating. When the brake hold system is functioning normally, the indicator comes on for several seconds when pressing the engine switch to change the ignition mode to ON, then goes off.

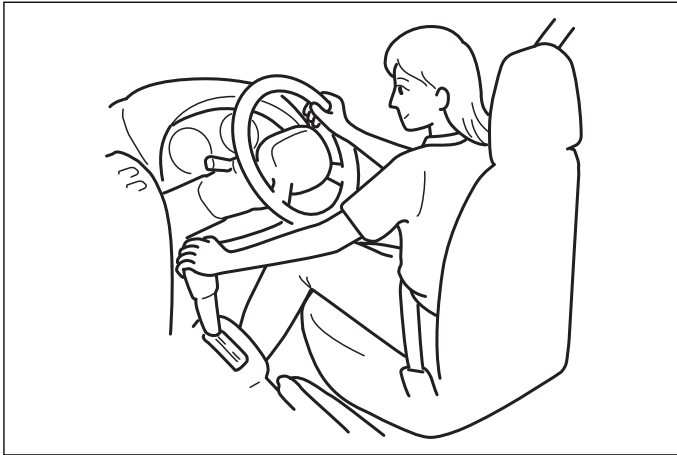

59RN05760


OPERATING YOUR VEHICLE

Daily Inspection Checklist	5-1
Engine Switch / Power Switch	5-3
Immobilizer System	5-6
Pedal	5-7
Keyless Push Start System	5-8
Starting / Stopping Engine or Hybrid System	5-13
Parking Brake Lever (if equipped)	5-20
Electric Parking Brake (if equipped)	5-22
Precaution for Parking	5-26
Using Transmission	5-30
Gearshift Indicator (if equipped)	5-38
SHVS (Smart Hybrid Vehicle by Suzuki) (if equipped)	5-39
Hybrid System (if equipped)	5-42
Acoustic Vehicle Alerting System (if equipped)	5-46
ENG A-STOP System (Engine Auto Stop Start System) (if equipped)	5-46
Driving Mode (if equipped)	5-60
Four-mode 4WD System (if equipped)	5-62
Cruise Control (if equipped)	5-68
SUZUKI SAFETY SUPPORT (if equipped)	5-71
Parking Sensors	5-105
Rearview Camera (if equipped)	5-110
Electronic Stability Program (ESP®)	5-113
Braking	5-121
Anti-lock Brake System (ABS)	5-122
Tyre Pressure Monitoring System (TPMS) (if equipped)	5-126

OPERATING YOUR VEHICLE

Daily Inspection Checklist

Before Driving

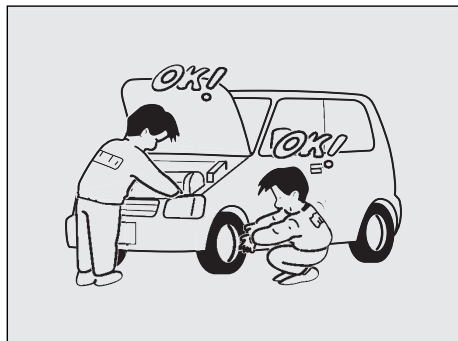

59RN05750

- 1) Check that the windows, mirrors, lights and reflectors are clean and unobstructed.
- 2) Visually check the tyres for the following points:
 - the depth of the tread groove
 - abnormal wear, cracks and damage
 - loose wheel nuts
 - existence of foreign material such as nails, stones, etc.

Refer to “Tyres” in “INSPECTION AND MAINTENANCE” section for details.

- 3) Look for fluid and oil leakage.

NOTE:

It is normal for water to drip from the air conditioning system while and after use.

- 4) Check that the hood is fully closed and latched.
- 5) Check the headlights, turn signal lights, brake lights and horn for proper operation.
- 6) Adjust the seat and head restraint.
- 7) Check the brake pedal feeling and the adjustment condition for the parking brake lever (if equipped). Refer to “Brake” in “INSPECTION AND MAINTENANCE” section for details.
- 8) Adjust the mirrors.
- 9) Check that you and all the passengers have properly fastened the seat belts.
- 10) Check that all the warning lights come on as the engine switch is pressed to change the ignition mode to ON.
- 11) Check all the gauges.
- 12) Check that the brake system warning light (if parking lever equipped) or Parking brake operation indicator light (for EPB equipped) turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank, or before a long distance driving (like highway driving) perform the following under-hood checks:

- 1) Engine oil level
- 2) Coolant level
- 3) Brake fluid level
- 4) Battery fluid (acid) level
- 5) Windshield washer fluid level
- 6) Hood latch operation

Pull the hood release lever inside the vehicle. Check that you cannot open the hood further without releasing the secondary latch. Close the hood securely after checking for proper latch operation. See the item “All latches, hinges and locks” of “Chassis, body and others” in “Maintenance Schedule” in “INSPECTION AND MAINTENANCE” section for lubrication schedule.

WARNING

Check that the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

Once a month, or each time you fill your fuel tank, check the tyre pressure using a tyre pressure gauge. Also check the tyre pressure of the spare tyre (optional).

When You Notice the Following Symptoms




80J009

⚠ CAUTION

If you keep using your vehicle in the following conditions, malfunction and an accident may occur. Consult a Maruti Suzuki authorized workshop.

- Leaked oil or other liquid appears on the ground below the vehicle.
- Brake fluid level is low.
- There are unusual odors, sounds or vibrations.
- The feeling of operating the steering wheel or the brakes is different than usual.

Check the Tyre Pressure

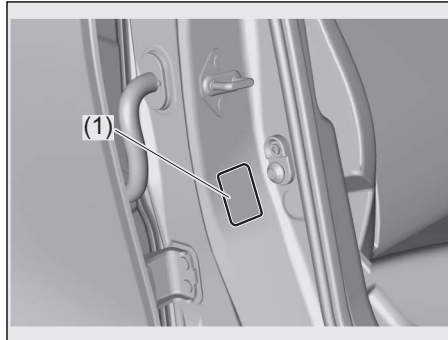


55T090020

- Periodically check and adjust the tyre pressure. The specified tyre pressure for the tyres of this vehicle can be confirmed by checking the tyre information label (1) affixed to the opening of the driver's door.
- Driving with insufficient tyre pressure can cause the sides of the tyre to wear, in addition to decreasing fuel efficiency.

⚠ WARNING

- Driving with extremely low tyre pressure can cause a tyre blowout (bursting) and may result in an accident. Do not drive with extremely low tyre pressure.

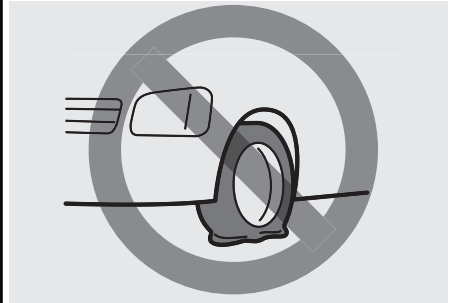

69RHS173

- If the specified tyre pressure is not maintained, the full performance of the vehicle cannot be achieved and the following could occur, leading to accidents or malfunctions. Adjust the tyre pressure as specified.
 - Decreased driving stability
 - Longer distance required for braking

(Continued)

OPERATING YOUR VEHICLE


WARNING

(Continued)

- Accurate tyre rotation speed cannot be detected, which interferes with the following functions:
 - ABS
 - Electronic stability program (ESP®)

To adjust the tyre pressure, refer to "Tyres" in "INSPECTION AND MAINTENANCE" section.

Check the Exhaust Pipe

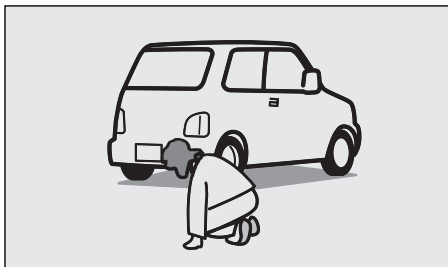

80J011


Periodically check the exhaust pipes for holes or cracks.

WARNING

If leaks in exhaust pipes are present, exhaust gas could enter the vehicle and possibly cause carbon monoxide poisoning. If you feel that something is abnormal, consult a Maruti Suzuki authorized workshop.


Engine Switch / Power Switch

The vehicle without the hybrid system

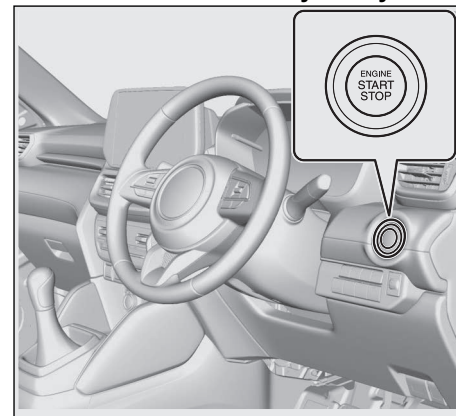

76TS50010

The vehicle with the hybrid system

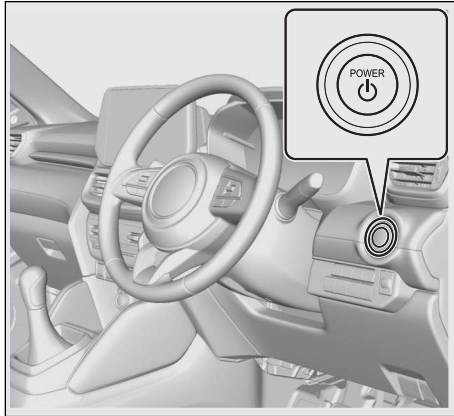

76TS50910

LOCK (OFF)

This mode is for parking the vehicle. When this mode is selected by pressing the engine switch or the power switch and then any door (including the tailgate) is opened or closed, the steering will be locked automatically.

NOTE:

*For the vehicle with the hybrid system:
If the shift lever is in a position other than P when turning off the hybrid system, the power switch will be remained to ON, not to off.*

ACC

Press the engine switch or the power switch to select this ignition mode to use such electric equipment as the audio system, outside rearview mirrors and accessory socket with the engine or the hybrid system off. When this position is selected, the information display in the instrument cluster shows the following message.



76TM05001



76TM05002

- **With the engine or the hybrid system on**

All electric equipment is operational. The vehicle can be driven when you have selected this ignition mode by pressing the engine switch or the power switch.

ON

- **With the engine or the hybrid system off**

You can use such electric equipment as the power windows and wipers with the engine or the hybrid system off. When this ignition mode is selected by pressing the engine switch or the power switch, the information display in the instrument cluster shows the following message.

OPERATING YOUR VEHICLE

START

Manual transmission vehicles:

Provided you have the keyless push start system remote controller with you, the engine automatically starts when you press the engine switch to select this ignition mode after shifting to "N" (Neutral) and depressing the brake and clutch pedals.

Automatic transmission vehicles / e-CVT vehicles:


Provided you have the keyless push start system remote controller with you, the engine or the hybrid system automatically starts when you press the engine switch or the power switch to select this ignition mode after placing the gearshift lever in "P" (Park) position and depressing the brake pedal. (If you need to restart the engine or the hybrid system while the vehicle is moving, shift into "N".)

NOTICE

Do not leave the engine switch or the power switch in ACC or ON mode when the engine is not running or the hybrid system is not operating. Avoid using the radio or other electric accessories for a long time when the engine switch or the power switch is in ACC or ON mode when the engine is not running or the hybrid system is not operating, otherwise the lead-acid battery may discharge.

NOTE:

- *The steering will be unlocked when you press the engine switch or the hybrid system to change the ignition mode from LOCK (OFF) to ACC or ON.*
- *You do not need to keep the engine switch or the hybrid system pressed until the engine or the hybrid system starts.*
- *In the presence of strong radio wave or noise, you may not be able to change the ignition mode to ACC or ON or to start the engine or the hybrid system using the engine switch or the power switch. In this case, the information display in the instrument cluster will show the following message.*

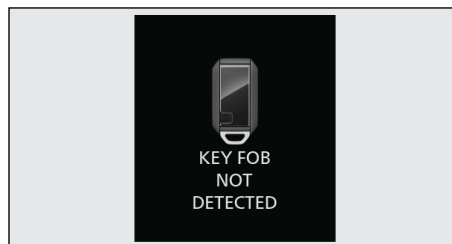

76TM05003

Unreleased Steering Lock Warning

If the steering lock remains engaged when you press the engine switch or the power switch to change the ignition mode to ON, the information display in the instrument cluster shows the following message and you cannot start the engine or the hybrid system. If this happens, press the engine switch or the power switch, turning the steering wheel to right or left.



55T050160



76TS50030

NOTE:

- The steering lock may not be released and the immobilizer/keyless push start system warning light turns on if some load is applied on the steering wheel. If this happens, turn the steering wheel system to the right or left to relieve it from the load before you press the engine switch or the power switch again to change to the desired ignition mode.
- For the vehicle with the hybrid system: To prevent the steering lock motor from overheating, the motor may be suspended if the hybrid system is turned on and off repeatedly in a short period of time. In this case, refrain from operating the power switch. After about 10 seconds, the steering lock motor will resume functioning.

Immobilizer System

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system or the hybrid system.

The engine or the hybrid system can be started only with your vehicle's original keyless push start system remote controller, which has an electronic identification code programmed in it. The remote controller communicates the identification code to the vehicle when the engine switch or the power switch is pressed to change the ignition mode to ON. If you need to make spare remote controllers, consult a Maruti Suzuki authorized workshop. The vehicle must be programmed with the correct identification code for the spare remote controllers.

In the case you can start the engine or the hybrid system, when press the engine switch or the power switch to change the ignition mode to ON, the immobilizer system will be released and the immobilizer/keyless push start system warning light will turn on for about 2 seconds and then it will turn off.

When you press the engine switch or the power switch to change the ignition mode to LOCK (OFF), the immobilizer system will operate.


NOTICE

If the immobilizer system is modified or removed, it cannot be properly operated. Do not modify or remove the immobilizer system.

NOTE:

This immobilizer system is maintenance-free.

Immobilizer / Keyless Push Start System Warning Light

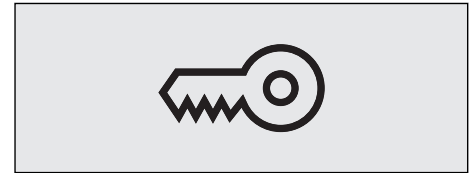

80JM122

This light will be shown on the instrument cluster.

- If there is abnormality on the immobilizer system or the keyless push start system, this light will turn on with the engine switch or the power switch in ON mode.

OPERATING YOUR VEHICLE

- If this light blinks or turns on for about 5 seconds, you may not be able to start the engine or the hybrid system. Check the position of the keyless push start system remote controller, change the ignition mode to LOCK (OFF), and then change it back to ON. Also, refer to "If the master warning indicator light blinks and the engine or the hybrid system cannot be started" in "Starting Engine" in this section.
- This light will blink when the remote controller outside warning operates as well. Refer to "Remote Controller Outside Warning" in this section.

NOTICE

The remote controller is sensitive electronic instrument. To avoid damaging it:


- Do not expose it to impacts, moisture or high temperature such as on the dashboard under direct sunlight.
- Keep it away from magnetic objects.

NOTE:

- If you lose your remote controller, ask your Maruti Suzuki authorized workshop as soon as possible to deactivate the lost one, and to make a new remote controller.
- If you own other vehicles with immobilizer keys, keep those keys away from the engine switch or the power switch when using your Maruti Suzuki vehicle. Otherwise, the engine or the hybrid system may not be started because they may interfere with your Maruti Suzuki vehicle's immobilizer system.
- If you attach any metal objects to the remote controller, it may not start the engine.


Pedal

Manual transmission

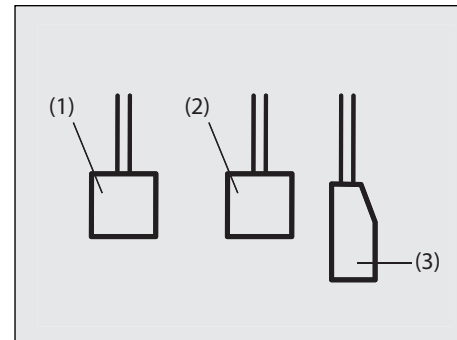

80J2121

Automatic transmission / e-CVT

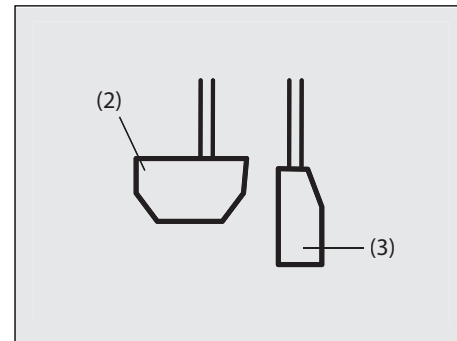

80J2122

Clutch Pedal (1)

A clutch pedal is used to disengage the driving force to the wheels when starting the engine, stopping, or shifting the gear-shift lever. Depressing the pedal disengages the clutch.

WARNING

Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

Brake Pedal (2)

Your vehicle is equipped with either front and rear disc brakes or front disc brakes and rear drum brakes. Depressing a brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as temperature, humidity, snow or dust, etc.

WARNING

If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by a Maruti Suzuki authorized workshop.

WARNING

Do not apply brakes continuously or rest your foot on the brake pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.

Accelerator Pedal (3)

An accelerator pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.


NOTE:

Your vehicle is equipped with Brake Override System. If you depress both the accelerator pedal and the brake pedal simultaneously, the engine power output / the hybrid system output may be suppressed.

Keyless Push Start System

Provided the keyless push start system remote controller is within the interior workable area, you can use the engine switch for starting the engine or the hybrid system and selecting an ignition mode (ACC or ON). In addition, the following functions can be used:

- Keyless entry function. Refer to “Keyless Push Start System Remote Controller” in “BEFORE DRIVING” section for details.
- Locking and unlocking doors (including the tailgate) using a request switch. Refer to “Keyless Push Start System Remote Controller” in “BEFORE DRIVING” section for details.
- Immobilizer (anti-theft) function. Refer to “Immobilizer System” in this section for details.

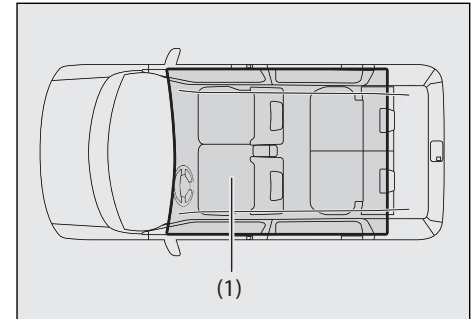

55T050230

(1) Interior workable area

OPERATING YOUR VEHICLE

The interior workable area is defined as all the interior spaces except for the space on the instrument panel or in the luggage compartment.

NOTE:


- Even when the remote controller is in the interior workable area, if it is in any of the following conditions, you may not be able to start the engine or the hybrid system or to select the ignition modes, and the remote controller outside warning may be given.
 - The remote controller's battery is low.
 - The remote controller is affected by strong radio wave or noise.
 - The remote controller is in contact with or covered by a metallic object.
 - The remote controller is in the secluded stowages such as the glove box or a door pocket.
 - The remote controller is in the sun visor pocket or on the floor.
- Even when the remote controller is outside the interior workable area, if it is in any of the following conditions, you may be able to start the engine or the hybrid system or to select the ignition mode. The remote controller outside warning may not be given at that time.
 - The remote controller is outside the vehicle but very close to a door.
 - The remote controller is on the instrument panel.

Engine Switch Illumination / Power Switch Illumination

The engine switch or the power switch is illuminated (lit) in the following situations:


- When the engine is off and the driver's door is open, or for 15 seconds after the driver's door is closed. The illumination will fade out after 15 seconds passed.
- While the headlights and/or the position lights are on, the illumination will turn on. The illumination will go out when the headlights and the position lights are turned off.

The vehicle without the hybrid system

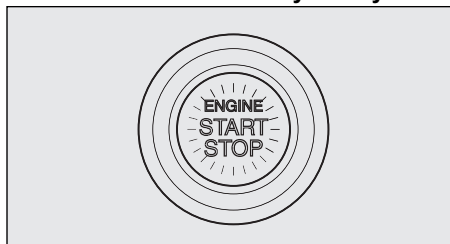

82K253

The vehicle with the hybrid system

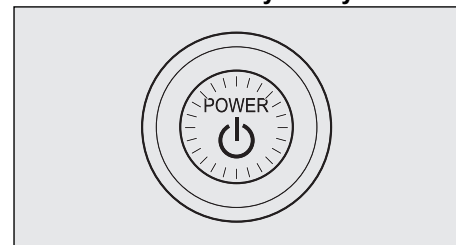

76TS50940

NOTE:

To save the lead-acid battery, the illumination will be automatically turned off when both of the following conditions are simultaneously met:

- The headlights and the position lights are turned off.
- 15 minutes has elapsed since opening the driver's door.

Selection of Ignition Modes


Press the engine switch or the power switch to select ACC or ON mode as follows when you use an electric accessory or check the operation of instrument cluster without running the engine.

NOTE:

When selecting the ignition modes, the information display in the instrument cluster show certain messages. Refer to "Information Display" in the "INSTRUMENT CLUSTER" section.


- 1) Bring the keyless push start system remote controller with you and sit in the driver's seat.

The vehicle without the hybrid system

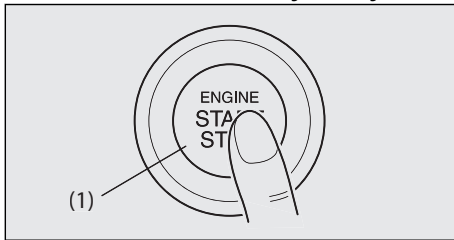

82K254

The vehicle with the hybrid system

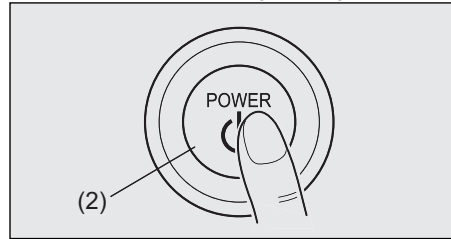


76TS50950

- 2) Manual transmission – Without depressing the clutch pedal, press the engine switch (1).

Automatic transmission / e-CVT – Without depressing the brake pedal, press the engine switch (1) or the power switch (2).


Every time you press the engine switch or the power switch, the ignition mode changes as follows.

Manual transmission

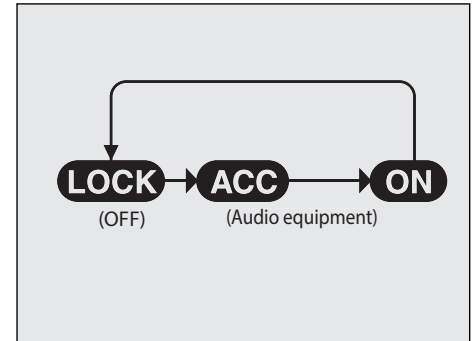

68PH00322

Automatic transmission / e-CVT

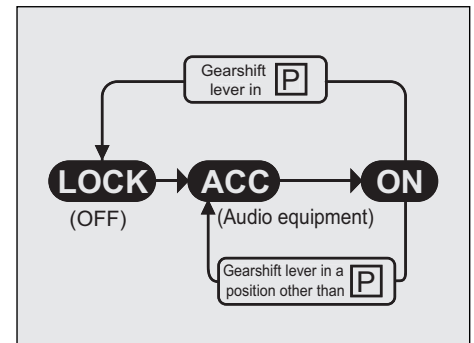

57L31006


OPERATING YOUR VEHICLE

NOTE:

- Automatic transmission / e-CVT – If the gearshift lever is in any position other than “P”, or if the knob button is pushed when the gearshift lever is in “P” position, the ignition mode cannot be returned to LOCK (OFF).
- If the gearshift lever has malfunction, you may not return the ignition mode to LOCK (OFF). Refer to “Returning Ignition Mode to LOCK (OFF)” in this section for details.

If the master warning indicator light blinks and the ignition modes cannot be selected


Your keyless push start system remote controller may not be sensed as being within the interior workable area (refer to the related explanation in this section). Try again after checking that you have the remote controller with you. If the ignition modes still cannot be selected, the battery of the remote controller may be discharged. To select an ignition mode, you must then use the following method:

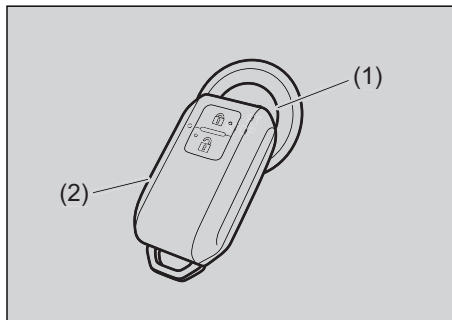

76TS50930

- 1) Manual transmission – Without depressing the clutch pedal, push the engine switch (1).
Automatic transmission / e-CVT – Without depressing the brake pedal, press the engine switch or the power switch (1).

- 2) Within about 10 seconds while the master warning indicator light blinks and the information display in the instrument cluster shows the following message, touch the engine switch or the power switch with the lock switch end of the remote controller (2) for about 2 seconds.

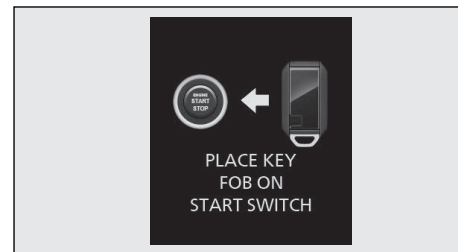


76TM05004

While the master warning indicator light blinks, the immobilizer/keyless push system warning light will come on for about 5 seconds.

If you still cannot select the ignition modes, there may be the other problem such as the discharged lead-acid battery. In this case, consult a Maruti Suzuki authorized workshop.

NOTE:

- You may customize the system to cause the interior buzzer to sound once for warning that remote controller is out of sensing range. For this customization, consult a Maruti Suzuki authorized workshop.
- If the battery of the remote controller is almost discharged, the information display in the instrument cluster shows the following message when you press the engine switch or the power switch to change the ignition mode to ON. Refer to "Information Display" in "INSTRUMENT CLUSTER" section for details. For details on replacing the battery, refer to "Keyless Push Start System Remote Controller" in "BEFORE DRIVING" section.

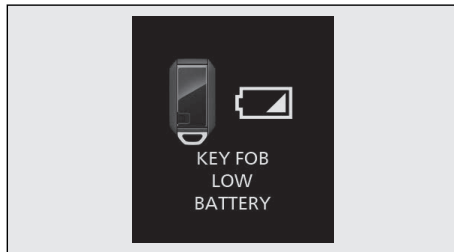


76TM05005

Remote Controller Outside Warning

When either of the following conditions is met, the system causes the remote controller outside warning by sounding the interior and exterior buzzers. At the same time, the immobilizer/keyless push start system warning light comes on, the master warning indicator light blinks and the information display in the instrument cluster will show the corresponding message.

- Any door is opened and then closed while the remote controller is not inside the vehicle and the engine is running (the hybrid system is operating) or the ignition mode has been changed to ACC or ON by pressing the engine switch or the power switch.
- The remote controller is not inside the vehicle when you attempt to start the engine or the hybrid system after changing the ignition mode to ACC or ON by pressing the engine switch or the power switch.

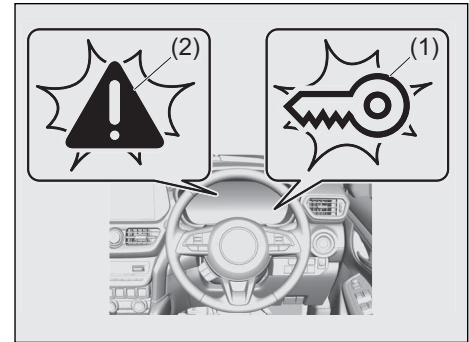

76TS50050

- (1) Immobilizer/keyless push start system warning light (blinks)
- (2) Master warning indicator light (blinks)

If the warning is given, place the remote controller inside the vehicle as soon as possible.

- Any attempt to start the engine or the hybrid system will fail while the warning is active. The message appearing in the information display in the instrument cluster will also indicate this condition. Refer to "Information Display" in the "INSTRUMENT CLUSTER" section for details.

OPERATING YOUR VEHICLE

- Normally, the immobilizer/keyless push start system warning light should go out and the master warning indicator light should stop blinking shortly after the remote controller is brought back inside the vehicle. If they remain lit and blinking, change the ignition mode to LOCK (OFF) by pressing the engine switch or the power switch and then perform the engine starting operation or the strong hybrid starting operation. Refer to “Starting / Stopping Engine or Hybrid System” in this section.


NOTE:

Always keep the remote controller with you as the driver.

Starting / Stopping Engine or Hybrid System

Starting Engine or Hybrid System


Manual Transmission model

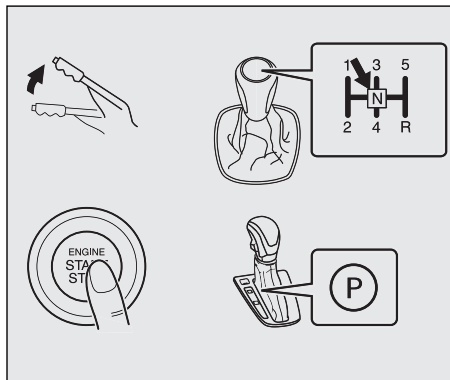

55T050040


- 1) Check that the parking brake is set fully.
- 2) Turn off such loads as the headlights and air conditioning system to facilitate starting of the engine.
- 3) Shift into “N” (Neutral). Hold the clutch pedal and brake pedal fully depressed.
- 4) The “PUSH START SWITCH” message will appear in the information display in the instrument cluster.

Automatic Transmission model

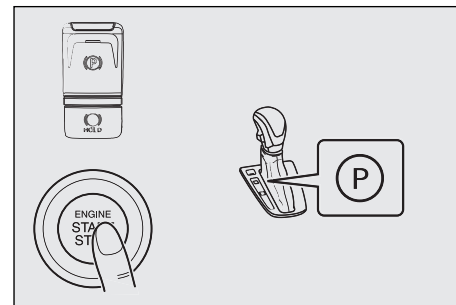

76T050045

e-CVT model

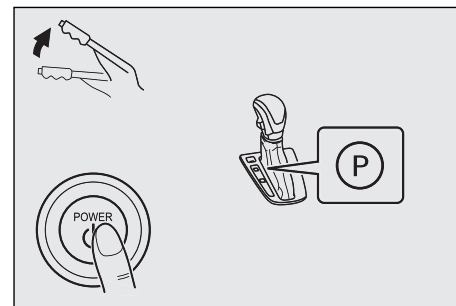

76TS50960

- 1) Check that the parking brake is set.
- 2) Turn off such loads as the headlights and air conditioning system to facilitate starting of the engine.

- 3) If the gearshift lever is not in "P" (Park) position, shift into "P" (Park). Hold the brake pedal fully depressed.
- 4) The "PUSH START SWITCH" message will appear in the information display in the instrument cluster.

Vehicles with electric parking brake




Check that the electric parking brake operation indicator light is illuminated.

NOTE:

- The hill hold control system is activated when the engine is restarted automatically.
- When engine restarts automatically, the electric parking brake may engage or disengage and interrupt the restarting process, and that is normal operation.

The vehicle without the hybrid system

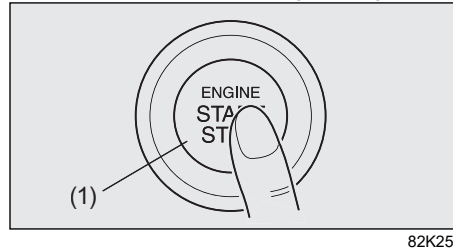

- 5) With your foot taken off the accelerator pedal, push the engine switch (1). When the engine is started, the starter motor will automatically stop.


- Even if you fail to start the engine, the starter motor will stop turning automatically after approximately 12 seconds. In this case, press the engine switch to select LOCK (OFF) mode and restart the engine.
- If there is a problem with the system, the engine will not start automatically even if the switch is pressed. In case the starter motor does not turn or stops immediately, start the engine by the following procedure.
 - a. Press the engine switch to select the ON mode.
 - b. Perform the above procedure 1) to 3).
 - c. Keep the engine switch pressed until the engine starts. Release your finger from the engine switch after the engine has started.

NOTICE

- If the engine does not start, press the engine switch to select LOCK (OFF) mode and wait for more than 30 seconds before trying again, for protection of a lead-acid battery and a starter motor. If the engine does not start after several attempts, consult a Maruti Suzuki authorized workshop.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill. This starting method could result in damage to the catalytic converter or damage to other parts.

OPERATING YOUR VEHICLE

The vehicle with the hybrid system

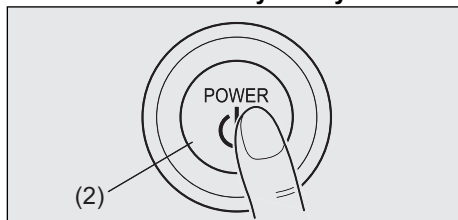

76TS50950

- 6) With your foot taken off the accelerator pedal, push the power switch (1).
- If there is a problem with the system, the hybrid system will not start automatically even if the switch is pressed.

NOTICE

- Do not try to start the hybrid system by pushing or towing the vehicle, or coasting down a hill. This starting method could result in damage to the catalytic converter or damage to other parts.
- During normal driving, do not turn off the hybrid system. Turning the hybrid system off while driving will not cause loss of steering or braking control, however, power assist to the steering will be lost. This will make it more difficult to steer smoothly, so you should pull over and stop the vehicle as soon as it is safe to do so.



76TS50970

- 7) For the vehicle with hybrid system: When READY indicator in the meter is on, the hybrid system is working.

⚠ WARNING

For the vehicle with hybrid system:

- When starting the hybrid system, always start the hybrid system while sitting in the driver's seat. Do not depress the accelerator pedal while starting the hybrid system under any circumstances. Doing so may cause an accident resulting in death or serious injury.
- If hybrid system failure occurs while the vehicle is moving, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting in death or serious injury.

NOTE:

- You do not need to keep the engine switch or the power switch pressed to start the engine or the hybrid system.
- Manual transmission vehicles:
The engine of a manual transmission vehicle will not start unless the clutch pedal is depressed.
- Automatic transmission vehicles:
Automatic transmission vehicles have a starter interlock device.
 - When the vehicle is stopped and you try to start the engine for the first time with the ignition mode OFF, you can start the engine only in the gearshift lever in “P” position.
 - When you are driving the vehicle and press the engine switch to change the ignition mode to OFF, you can start the engine in the gearshift lever in “N” position.
- e-CVT vehicles:
e-CVT vehicles have a starter interlock device.
 - When the vehicle is stopped and you try to start the hybrid system for the first time with the ignition mode OFF, you can start the hybrid system only in the gearshift lever in “P” position.
 - When you are driving the vehicle and press the power switch to change the ignition mode to OFF, you can start the hybrid system in the gearshift lever in “N” position.
- During the engine starting procedure or the hybrid system starting procedure, messages on the information display will help you. Refer to “Information display” in “INSTRUMENT CLUSTER” section for details.
- When the engine stalls in intersection and railway crossing etc., restart the engine by usual procedure.
- For the vehicle with the hybrid system:
 - When operating the power switch, one short, firm press is enough. It is not necessary to press and hold the switch. If the “READY” indicator turns on, the hybrid system will operate normally. Continue depressing the brake pedal until the “READY” indicator is illuminated. The hybrid system can be started from any power switch mode.
 - If the power switch is not pressed shortly and firmly, the power switch mode may not change or the hybrid system may not start.
 - If attempting to restart the hybrid system immediately after turning the power switch off, the hybrid system may not start in some cases. After turning the power switch off, please wait a few seconds before restarting the hybrid system.
 - If the hybrid system does not start, the immobilizer system may not have been deactivated. consult a Maruti Suzuki authorized workshop.
 - During winter driving conditions, when starting the hybrid system, the flashing

time of the “READY” indicator may be long. Leave the vehicle as it is until the “READY” indicator is steady on, as steady means the vehicle is able to move.

- When the hybrid battery (traction battery) is extremely cold (below approximately -15°C [5°F]) under the influence of the outside temperature, it may not be possible to start the hybrid system. In this case, try to start the hybrid system again after the temperature of the hybrid battery increases due to the outside temperature increase, etc.
- When starting the hybrid system, if the hybrid system becomes difficult to start, consult a Maruti Suzuki authorized workshop.

OPERATING YOUR VEHICLE

Stopping Engine or Hybrid System

- Depress the engine switch or the power switch to stop the engine or the hybrid system after the vehicle stopped completely.
- If the engine remains stopped for a while after it was stopped unexpectedly or was raced before stopping, a clicking sound may be heard from around the engine when it is restarted. This is not a malfunction. Always let the engine idle before stopping it.

WARNING

Except in cases of emergency, do not stop the engine or the hybrid system while the vehicle is in motion. If you stop the engine or the hybrid system while the vehicle is in motion, the steering wheel will lock and you will not be able to steer the vehicle. This may result in an accident. Avoid stopping the engine or the hybrid system while driving.

NOTICE

Automatic transmission vehicles / e-CVT vehicles:

If you stop the engine or the hybrid system while the vehicle is in motion, the automatic transmission / the e-CVT may be damaged. Avoid stopping the engine or the hybrid system while driving.

- For the vehicle with the hybrid system: If the hybrid system is stopped with the shift lever in a position other than P, the power switch will not be turned off. Perform the following procedure to turn the switch off:
 1. Check that the parking brake is set.
 2. Shift the shift lever to P.
 3. Check that "ON" of the ignition mode is displayed on the information display and press the power switch shortly and firmly.
 4. Check that "ACC" or "ON" of the ignition mode on the information display is off.

NOTICE

To prevent 12-volt battery discharge, do not stop the hybrid system when the shift lever is in a position other than P. If the hybrid system is stopped in another shift lever position, the power switch will not be turned off and remained to ON. If the vehicle is left in ON, battery discharge may occur.

Emergency Stop


In case of emergency, you can stop the engine or the hybrid system by quickly pushing the engine switch or the power switch more than 3 times, or pushing and holding the engine switch or the power switch for more than 2 seconds while the vehicle is in motion.

NOTE:

- *Except in cases of emergency, do not stop the engine or the hybrid system while the vehicle is in motion. The steering and braking operation will require more effort when the engine or the hybrid system is stopped. Refer to "Braking" in this section.*
- *For the vehicle with the hybrid system: If the hybrid system has to be turned off while driving, power assist for the steering wheel will be lost, making the steering wheel heavier to turn. Decelerate as much as possible before turning off the hybrid system.*

If the Master Warning Indicator Light Blinks and the Engine or the Hybrid System cannot be Started

Your keyless push start system remote controller may not be sensed as being within the interior workable area (refer to the related explanation in this section). Try again after checking that you have the remote controller with you. If the engine or the hybrid system cannot be started, the battery of the remote controller may be discharged. To start the engine or the hybrid system, you must then use the following method:

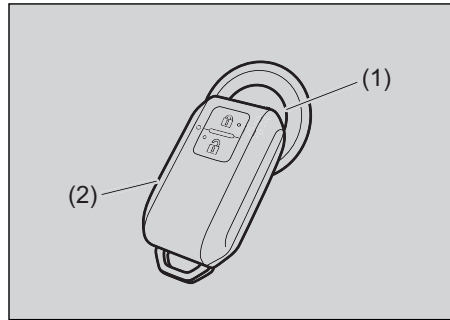

76TS50930

- 1) Check that the gearshift lever is in "P" (Park) position and keep depressing the brake pedal fully.



76TM05006

- 2) If the following message is shown on the information display in the instrument cluster, press the engine switch or the power switch (1).



76TM05007

- 3) Within about 10 seconds while the master warning indicator light blinks and the information display in the instrument cluster shows the following message, touch the engine switch or the power switch with the lock switch end of the remote controller (2) for about 2 seconds.

OPERATING YOUR VEHICLE


While the master warning indicator light blinks, the immobilizer/keyless push system warning light will come on for about 5 seconds.

If you still cannot start the engine or the hybrid system, there may be the other problem such as the discharged lead-acid battery. In this case, consult a Maruti Suzuki authorized workshop.

NOTE:

- You may customize the system to cause the interior buzzer to sound once for warning that remote controller is out of sensing range. For this customization, consult a Maruti Suzuki authorized workshop.

- If the battery of the remote controller is almost discharged, the information display in the instrument cluster shows the following message when you press the engine switch or the power switch to change the ignition mode to ON. Refer to "Information Display" in "INSTRUMENT CLUSTER" section for details. For details on replacing the battery, refer to "Keyless Push Start System Remote Controller" in "BEFORE DRIVING" section.

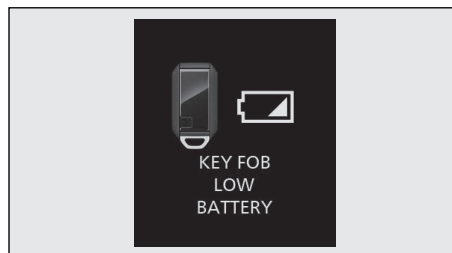

76TM05008

Returning Ignition Mode to LOCK (OFF)

Automatic transmission / e-CVT – To ensure safety, the ignition mode can be returned to LOCK (OFF) by pressing the engine switch or the power switch only when the gearshift lever is placed in "P" position without pressing the knob button.

NOTE:

In the case of an automatic transmission / a e-CVT, the ignition mode cannot be returned to LOCK (OFF) position if the gearshift lever is in any other position than "P".

Certain problems such as a fault in engine system or the hybrid system may prevent the engine switch or the power switch from going back to LOCK (OFF) mode. If this happens, have the vehicle inspected by a Maruti Suzuki authorized workshop after doing the following:

- Lock the doors using the key to prevent theft. (The request switches and the keyless push start system remote controller cannot be used to lock them.)
- Disconnect the negative cable from the lead-acid battery to prevent discharge.

LOCK (OFF) mode reminder buzzer

If the driver's door is opened without returning the ignition mode to LOCK (OFF) by pressing the engine switch or the power switch, a buzzer sounds to warn you of this condition.

- If you open the driver's door after pressing the engine switch or the power switch to change the ignition mode to ACC, the interior buzzer beeps intermittently.
- The buzzer will stop sounding if you then push the engine switch or the power switch twice, thus bringing it back the ignition mode to LOCK (OFF).


NOTE:

Whenever you leave the vehicle, check that you have returned the ignition mode to LOCK (OFF) using the engine switch or the power switch and then lock the doors. Without returning the ignition mode to LOCK (OFF), you cannot use a request switch or keyless push start system remote controller to lock the doors.

Steering lock warning buzzer

If the steering lock fails to engage due to a fault in the system when the ignition mode is turned to LOCK (OFF) by pressing the engine switch or the power switch and any door (including the tailgate) is opened or closed, the interior buzzer will warn you of this condition with repeated short beeps. If this happens, have the vehicle inspected by a Maruti Suzuki authorized workshop.

Parking Brake Lever (if equipped)

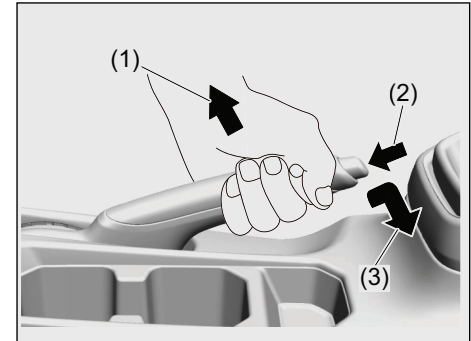

76TS50070

- (1) To set
- (2) To release
- (3) To release

The parking brake lever is located between the front seats. To set the parking brake, depress the brake pedal and pull the parking brake lever all the way up. To release the parking brake, depress the brake pedal and pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.

OPERATING YOUR VEHICLE

For automatic transmission vehicles / e-CVT vehicles, always set the parking brake before moving the gearshift lever to "P" (PARK) position. If you park on an incline and shift into "P" before setting the parking brake, the weight of the vehicle may make it difficult to shift out of "P" or a sound and a shock may occur when you are ready to drive the vehicle. These are not malfunctions.

When preparing to drive the vehicle, move the gearshift lever out of "P" position before releasing the parking brake.

WARNING

- **Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.**
- **If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected by a Maruti Suzuki authorized workshop.**

(Continued)

WARNING

(Continued)

- **Always set the parking brake fully before leaving your vehicle or it may move, causing injury or damage. When parking, check that the gearshift lever is in one of the following positions:**
 - 1st gear or "R" (Reverse) for manual transmission vehicles.
 - "P" (Park) for automatic transmission vehicles / e-CVT vehicles.

Remember, even though the transmission is in gear or in Park, you must set the parking brake fully.

- **When parking the vehicle in extremely cold weather, the following procedure should be used:**
 - 1) Set the parking brake.
 - 2) Manual transmission – turn off the engine, then shift into reverse or first gear.
Automatic transmission / e-CVT – shift into "P" (Park) and turn off the engine.
 - 3) Get out of the vehicle and put chocks under the wheels.
 - 4) Release the parking brake.**When you return to your vehicle, first set the parking brake, and then remove the wheel chocks.**

(Continued)

WARNING

(Continued)

- **Do not leave cigarette lighters, spray cans, soft drink cans or plastic articles (such as glasses, CD cases, etc.) in sun-heated vehicle. The temperature inside the vehicle may cause as follows:**
 - Gas may leak from a cigarette lighter or spray can and may lead to a fire.
 - The glasses, plastic cards or CD cases, etc. may deform or crack.
 - Soft drink cans may fracture.

NOTICE

When parking the vehicle on a slope, set the parking brake, shift the gearshift lever to P and make sure that the vehicle does not move, before you leave the vehicle.

Parking Brake Reminder Buzzer

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without fully releasing the parking brake. Check that the parking brake is fully released and the brake system warning light turns off.

Electric Parking Brake (if equipped)


The parking brake can be applied and released automatically or manually.

When the electric parking brake (EPB) is in auto mode, the parking brake is applied automatically according to the position of the transmission.

Additionally, you can manually apply or release the parking brake even in auto mode.

How To Operate

You can manually apply or release the parking brake.

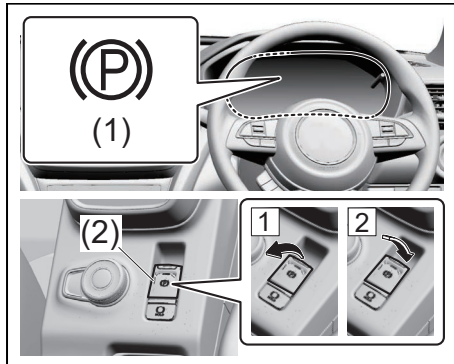

76TS051960

- (1) Electric parking brake operation indicator light
- (2) Electric parking brake switch

- 1) Pull the electric parking brake switch up gently and securely to apply the parking brake.
 - The electric parking brake operation indicator comes on. When you need to apply the parking brake while driving in emergency situation, pull the electric parking brake switch up continually.
- 2) Push the electric parking brake switch to release the parking brake.
 - Depress the brake pedal when you operate the switch.

Electric parking brake automatic releasing feature

- After releasing the electric parking brake, the electric parking brake operation indicator light turns off.
- When the electric parking brake operation indicator light blinks, push the electric parking brake switch again.

Setting Auto Mode to ON

Depress the brake pedal while parking and pull the electric parking brake switch until the buzzer sounds and the multi-information display shows the message to set the auto mode to ON.

When the auto mode is set to ON, the parking brake operates as follows:

- When you move the gearshift lever to P (Park) from any other position, the parking brake is applied and the electric parking brake operation indicator light comes on.
 - To operate the gearshift lever, depress the brake pedal while parking.
- To release the parking brake, push the electric parking brake switch.
 - Push the electric parking brake switch while depressing the brake pedal.

Setting Auto Mode to OFF

Depress the brake pedal while parking and press and hold the electric parking brake switch until the buzzer sounds and the multi-information display shows the message to set the auto mode to OFF.

NOTE:

Parking brake operation

- To release the parking brake, the ignition mode must be ON.
- To operate the auto mode, the ignition mode must be ON.
- It is normal that the brake pedal may move while the electric parking brake operation.

OPERATING YOUR VEHICLE

Automatically releasing feature

The parking brake can be released by depressing the accelerator pedal when the vehicle circumstances meets a certain condition as following:

- The driver's door is closed.
- The driver's seat belt is fastened.
- Engine warning lamp, brake warning lamp, and brake system warning lamp are off.
- The gearshift lever is in any position other than P (Park) or N (Neutral).

Depress the accelerator pedal gently.

When the parking brake is not released by depressing the accelerator pedal, release it manually.

If the message "FREQUENT OPERATION TEMPORARILY DISABLED" is shown;

The electric parking brake system may restrict its operation for overheating prevention if the system is operated repeatedly in a short time. Please avoid to operate the switch, and the system will be return to normal state shortly.

If the message, "PARKING BRAKE INSPECTION REQUIRED" or "PARKING BRAKE UNAVAILABLE" is shown;

Operate the electric parking brake switch. Even if the message is shown continually, there may be a problem with the system.

Have your vehicle inspected by a Maruti Suzuki authorised workshop immediately.

Parking brake operating noise

- When the electric parking brake is operated (to be applied or released), an operating noise like motor sound may be heard. This is normal.
- When you keep pulling the switch up during emergency, a noise may be heard from the engine compartment along with pedal vibration. This is normal.

About the electric parking brake operation indicator light

- When the parking brake is applied, according to the ignition switch mode, the indicator comes on as follows;
ON mode: the indicator continually comes on until the parking brake released.
Any Other mode than ON: the indicator comes on for about 15 seconds.
- When LOCK mode is selected by pressing the engine switch, the indicator stays to come on for about 15 seconds. This is normal.

When the electric parking brake switch malfunctions

The auto mode will be set to ON automatically.

Parking brake engaged warning buzzer

A buzzer sounds immediately and the message, "RELEASE PARKING BRAKE" is shown on display if you drive the vehicle without fully releasing parking brake. (with vehicle reached a speed of 5 km/h [3 mph]).

WARNING

The performance of the parking brake is limited. The following conditions can cause the vehicle to start moving unexpectedly, resulting in an accident, serious injury, or death. Do not park on the following condition.

- Parking on a steep slope.
- Parking on extremely slippery road.

For Electric Parking Brake Switch:

If the parking brake is unexpectedly released and the car starts moving, an accident, serious injury or death may result. Do not place objects near the switch. Also, do not let children operate the switch.

⚠ CAUTION

When the lead-acid battery is running out;

- You can not operate the electric parking brake.

When you can not release the parking brake because of the system malfunction or problems;

- Never drive your vehicle with the parking brake engaged. Doing so can reduce rear brake effectiveness due to overheating, shorten brake life, and potentially cause permanent brake damage.
- Have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.

NOTE:

When parking the vehicle;

Apply the parking brake, shift the gearshift lever to P and make sure that the vehicle does not move, before you leave the vehicle.

When malfunction occurs in the system;

Immediately stop in a safe place and check the warning indicators and messages.

When the brake system warning light (yellow color) turns on;

Refer "Brake System Warning Light (yellow color) (if equipped)" in "INSTRUMENT CLUSTER".

For instruction on using the electric parking brake in winter;

Refer "Parking Brake Precautions in Cold Weather" in "INSPECTION AND MAINTENANCE".


Brake Hold (if equipped)

When the gearshift lever is in D or N and the brake hold system is turned on, the system keeps the brake applied after releasing the brake pedal.

When the gearshift lever is in D, the system is released by depressing the accelerator pedal and you can start to drive the vehicle smoothly.

Turning on the system

When the system is turned on by pressing the brake hold switch (1), the brake hold standby system indicator light (2) comes on. The brake hold operation indicator light (3) turn on while the brake is being held.

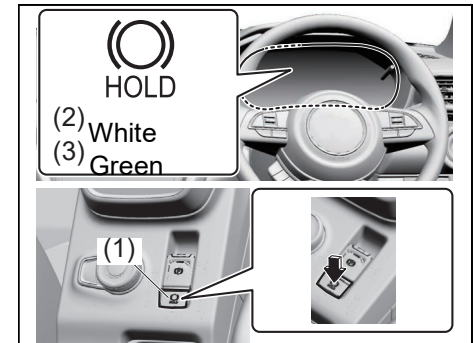

76TS051970

- (1) Brake hold switch
- (2) Brake hold standby indicator light (white color)
- (3) Brake hold operation indicator light (green color)

OPERATING YOUR VEHICLE

NOTE:

System activation conditions

You can not turn the system on in the certain conditions as following;

- The driver's door is not closed firmly.
- The driver's seat belt is unfastened.
- The messages, "PARKING BRAKE INSPECTION REQUIRED" and/or "BRAKE HOLD INSPECTION REQUIRED", are shown on the display.

When the brake hold system detects any of the situations listed above, the brake hold standby indicator light (white color) (2) goes off.

If any of the above conditions are detected while the brake hold system is active, the system will turn OFF, the brake hold operation indicator light (green color) (3) will go off and a message "PARKING BRAKE AUTO ACTIVATED" will be displayed on the multi-information display along with a warning buzzer sound, and the parking brake will be applied automatically.

About brake hold

- If the brake pedal is not depressed for about three minutes while the brake hold system is active, the parking brake is applied automatically and a message will be displayed along with a buzzer sound.
- When driving the vehicle on a slope, the brake hold system may not activate, and you will need to depress the brake pedal. At the same time, a message will

be displayed along with a warning buzzer sound. Follow the instructions shown on the display.

- To turn off the system while it is active, depress the brake pedal and press the brake hold switch again.

When the parking brake applied automatically while the system holding the brake;

Release the parking brake when starting the vehicle by performing one of the following operations:

- Move the gearshift lever into a position other than P or N with the driver's seat belt fasten, driver door closed and depress the accelerator pedal.
- Release the parking brake manually by pushing the electric parking brake switch while depressing the brake pedal.

After complete one of the procedures, make sure to check that the electric parking brake operation indicator goes off.

Refer to "Electric Parking Brake (if equipped)" in this section.

When your vehicle needs to be inspected at a Maruti Suzuki authorised workshop;

If the brake hold standby indicator light (2) does not come on by pressing the brake hold switch under the proper operating condition, there may be some problem with the system. Have your vehicle inspected by a Maruti Suzuki authorised workshop immediately.

If the message "BRAKE HOLD INSPECTION REQUIRED" is shown;

There may be some problem with the system. Have your vehicle inspected by a Maruti Suzuki authorised workshop immediately.

About the brake hold system operation

When you depress the brake pedal while the system holding the brake, you feel that the pedal is heavier than usual. This is normal.

Warning messages and buzzers

Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution. If a warning message is shown in the multi-information display, read the message and follow the instructions.

WARNING


- **Driving on a steep hill**
Be careful to use the brake hold system when you drive on a steep hill. The system may not be able to hold the brake on a steep hill so that the vehicle may start moving unexpectedly.
- **Driving on a slippery road**
The system can not keep holding the brake beyond the tyre grip performance limit. Avoid driving on a slippery road.
- **Parking the vehicle**
The brake hold system is not a feature for parking the vehicle for long time.
When you change the ignition mode to LOCK (OFF) while the system activating, the brake is released from the hold so that the vehicle may start moving unexpectedly.
When you change the ignition mode to LOCK (OFF), depress the brake pedal firmly, shift to "P" (Park), and apply the parking brake.

Precaution for Parking

Apply the parking brake firmly

When parking the vehicle on a flat place


- 1) For vehicles with the parking brake lever, depress the brake pedal and pull the parking brake lever (1) to securely apply the parking brake.

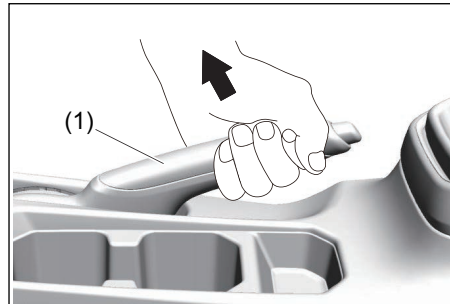

76TS50071

(1) Parking brake lever

For vehicles with the electric parking brake, depress the brake pedal and pull the electric parking brake switch (2) to apply the parking brake. Ensure the electric parking brake operation indicator light (3) comes on.

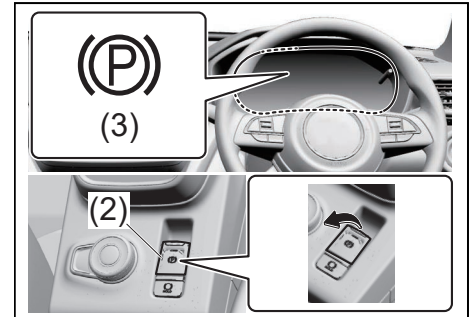

76TS051961

- (2) Electric parking brake switch
- (3) Electric parking brake operation indicator light

- 2) For vehicles with automatic transmission or e-CVT, move the gearshift lever into "P" (Park) position.
For vehicles with manual transmission, move the gearshift lever into "R" (Reverse) or 1st gear position.
 - Slowly release your foot from the brake pedal and check that the vehicle does not move.

OPERATING YOUR VEHICLE

⚠ CAUTION

If you are using the parking brake during cold weather, sometimes it might become frozen and impossible to release the parking brake. In this case, avoid parking on a slope and park in a flat place instead.

NOTE:

For vehicles with automatic transmission or e-CVT

Even when parking the vehicle for a short time in a flat place, shift the gearshift lever into "P" (Park) position.

When parking the vehicle on a slope

Perform step 1) and 2), which are written in "When parking the vehicle on a flat place".

- 3) Secure the vehicle by putting a commercially- available wheel chock or a rock, etc. under the tyres so that the vehicle does not move.

⚠ WARNING

Avoid parking on a steep slope.
There is a risk of the vehicle accidentally moving without a driver, leading to a potential accident.

When Moving the Vehicle

When moving the vehicle, start the engine.

⚠ WARNING

If you coast with the engine off, stronger force than normal is required when turning the steering wheel or depressing the brake pedal, resulting in an accident.
Do not coast on a downhill slope with the engine off.

When Taking a Nap in the Vehicle



69RHS172

Do not take a nap in the vehicle with the engine running.

⚠ WARNING

- Exhaust gases can enter the vehicle due to surrounding conditions and wind direction, possibly causing carbon monoxide poisoning.
- The gearshift lever could change unintentionally, or the accelerator pedal could be depressed accidentally, causing an accident.
- If you were to accidentally step on the accelerator pedal while you are asleep, the engine and the exhaust system could overheat, resulting in danger of fire.

With the Engine Running, the Cooling Fan (Radiator Fan) may Rotate Suddenly

The cooling fan (radiator fan) in the engine compartment may automatically stop and rotate depending on the conditions of the engine coolant temperature.

WARNING

- If you get close to a rotating cooling fan (radiator fan), your hands, hair and clothing may get caught in it, resulting in personal injury. With the engine running, even when the cooling fan (radiator fan) stops, it may automatically rotate. Therefore, do not get close to the cooling fan (radiator fan).
- For the vehicle with hybrid system: After the hybrid system has been turned off, check that the "READY" indicator is off. When the hybrid system is operating, the gasoline engine may automatically start, or the cooling fan may suddenly operate even if the gasoline engine stops. Do not touch or approach rotating parts such as the fan, which may lead to fingers or clothing (especially a tie, a scarf or a muffler) getting caught, resulting in serious injury.

Do not Park the Vehicle Near Flammable Materials




69RHS174

WARNING

If you park the vehicle near flammable materials, the exhaust pipes and exhaust gas will get hot, resulting in danger of fire. Do not park the vehicle near flammable materials such as dry grass, paper waste and plywood.

When Leaving the Vehicle, Stop the Engine and Lock Doors

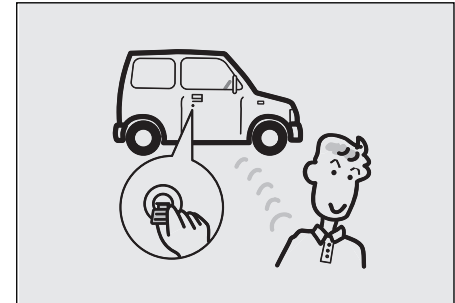

69RHS054

Even when leaving the vehicle for a short time, do not leave cash or valuables inside, as there is a risk of theft.

WARNING

If you leave the vehicle unattended with the engine running, problems such as fire or theft can occur. Do not leave the vehicle unattended with the engine running.

OPERATING YOUR VEHICLE

Do not Leave the Computer and the Mobile Phone in the Vehicle

There is the possibility of theft, or these items could become damaged due to moisture, humidity or temperature change.

Do not Leave Lighters and Eyeglasses in the Vehicle



69RHS175

WARNING


- As the inside of the vehicle becomes hotter when parking in areas where strong sunlight causes increased temperature, there is the danger of spontaneous ignition of lighters or spray cans, fire due to explosion, the deformation or cracking of eyeglasses, plastic cards or CD cases, or the rupture of carbonated beverage cans. When parking in those areas, do not leave lighters, spray cans, plastic products (eyeglasses, plastic cards, CD cases, etc.) or carbonated beverage cans in the vehicle.
- When items get pushed around or when the seats are moved, it is possible that gas could escape and lead to a fire. Do not place accessories such as lighters or spray cans with exposed operating parts in the glove box, in storage compartments, between the seats, on the floor, etc.

Using Transmission

⚠ WARNING

Do not hang any items on the gearshift lever and do not use the gearshift lever as a handrest. Otherwise, it could prevent proper operation of the gearshift lever and cause its malfunction, resulting in an accident.

Manual Transmission

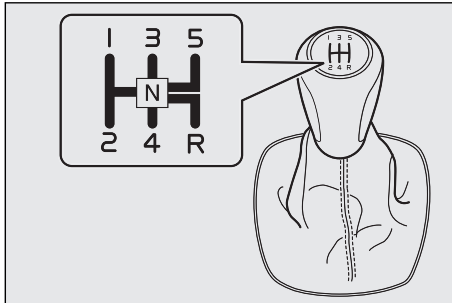

56RM03002

Starting off

To start off, depress the clutch pedal all the way to the floor and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine's sound, slowly press the accelerator while continuing to gradually release the clutch.

Shifting

All forward gears are synchronized and provide quiet and easy shifting. Always depress the clutch pedal all the way to the floor before shifting gears. Keep the engine speed from rising into the red zone of the tachometer.

Downshifting maximum allowable speeds

For K15C engine models (2WD)

Downshifting	km/h
2nd to 1st	20
3rd to 2nd	80
4th to 3rd	115
5th to 4th	150*

For K15C engine models (4WD)

Downshifting	km/h
2nd to 1st	20
3rd to 2nd	75
4th to 3rd	110
5th to 4th	150*

*NOTE

You may not accelerate to the maximum allowable speed because of the driving situation and/or the vehicle condition.

⚠ WARNING

- Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking. Avoid riding the brakes or they may overheat, resulting in brake failure.
- When driving on slippery roads, slow down before downshifting. Excessive and/or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.

OPERATING YOUR VEHICLE

NOTICE

- Do not downshift to a lower gear at the speed faster than the maximum allowable speeds for the next lower speed, or severe damage to engine and transmission can result.
- Check that the vehicle is completely stationary before you shift into reverse.
- To help avoid clutch damage, do not use the clutch pedal as a foot-rest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.
- When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and cause negative effect to smooth shifting.

NOTE:


If it is difficult to engage reverse gear [R], follow below procedure.

- Put gear lever in neutral [N] position.
- Release clutch pedal once.


Again depress the clutch pedal and shift from [N] to [R].

6-speed Automatic Transmission

Gearshift lever

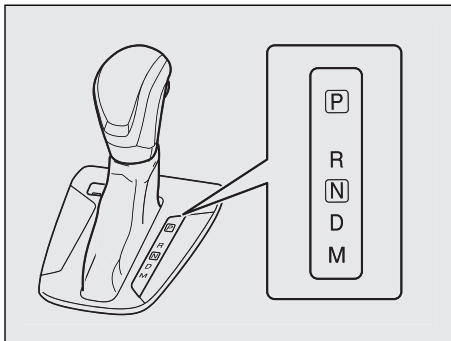

76TS50120

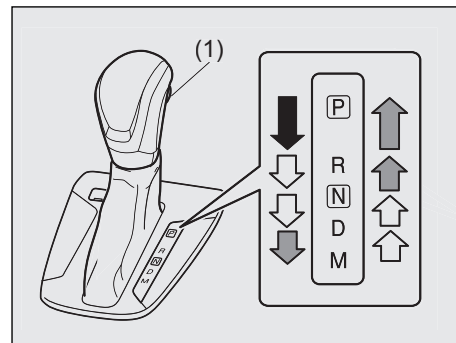

76TS50140

(1) Knob button

	Shift with the knob button (1) pushed in and the brake pedal depressed.
	Shift with the knob button (1) pushed in.
	Shift without the knob button (1) pushed in.

The gearshift lever is designed so that it cannot be shifted out of "P" position unless the ignition mode is ON and the brake pedal is depressed.

⚠ WARNING

Always depress the brake pedal before shifting from "P" (Park) (or "N" (Neutral) if the vehicle is stationary) to a forward or reverse gear, to help prevent the vehicle from moving unexpectedly when you shift.

The gearshift lever has a lock mechanism to help prevent accidental shifting. Shift the gearshift lever as follows:

NOTE:

- *Always shift the gearshift lever without pushing in the knob button (1) except when you shift from "P" to "R", from "D" to "M" or "L", from "N" to "R" or from "R" to "P". If you always push in the knob button (1) when shifting the gearshift lever, you could shift into "P", "R", "M" or "L" by mistake.*
- *If driver's or passenger's knee hits the gearshift lever while driving, the lever could move and the gear could be changed unexpectedly.*

Use the gearshift lever positions as described below:

P (Park)

Use this position to lock the transmission when the vehicle is parked or when starting the engine. Shift into Park only when the vehicle is completely stationary.

R (Reverse)

Use this position to reverse the vehicle from stop. Make sure that vehicle is completely stationary before shifting into Reverse.

NOTICE

Do not shift the gearshift lever into "R" while moving forward, or the transmission may be damaged. If you shift into "R" when the vehicle speed is over 10 km/h, the transmission will not shift into reverse.

N (Neutral)

Use this position for starting the engine if the engine stalls and you need to restart it while the vehicle is moving. You may also shift into Neutral and depress the brake pedal to hold the vehicle stationary during idling.

D (Drive)

Use this position for all normal driving.

With the gearshift lever in "D" range you can get an automatic downshift by pressing the accelerator pedal. The higher the vehicle speed is, the more you need to press the accelerator pedal to get a downshift.

M (manual mode)

(models with manual mode)

Use this position for driving in the manual mode. Refer to "Manual mode" later in this section for details on how to use the manual mode.

NOTE:

If you move the gearshift lever to a lower gear while driving faster than the maximum allowable speed for the lower gear, the transmission will not actually downshift until your speed drops below the maximum speed for the lower gear.

⚠ CAUTION

If you cannot press the engine switch firmly, the engine may not start.

Even if you shift the gearshift lever into "R" or "D" position without the engine running, the vehicle does not move.

If you try to move your vehicle under the above-mentioned condition, the vehicle may move in unexpected directions on a slope, etc. This may cause an accident. When starting the engine, press the engine switch firmly. Also, make sure that the engine is running by checking engine sound or warning and indicator lights.

OPERATING YOUR VEHICLE

NOTICE

Be sure to take the following precautions to help avoid damage to the automatic transmission:

- Make sure that the vehicle is completely stationary before shifting into “P” or “R”.
- Do not shift from “P” or “N” to “R”, “D” or “M” when the engine is running above idle speed.
- Do not rev the engine with the transmission in a drive position (“R”, “D” or “M”) and the front wheels not moving.
- Do not use the accelerator to hold the vehicle on a hill. Use the vehicle’s brakes.



NOTE:

When you shift the gearshift lever into “P” and stop the engine before depressing the parking brake pedal, if you try to restart the engine and shift the gearshift lever into the position other than “P”, it may reduce gearshift lever capability, or unusual sound and shock may occur. However, this is not abnormal.

Manual mode

The automatic transmission can shift gears automatically. When using the manual mode, you can shift gears in the same manner as conventional manual transmission.

To use the manual mode, shift the gearshift lever from “D” to “M”.

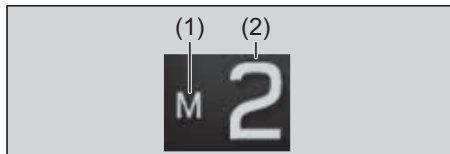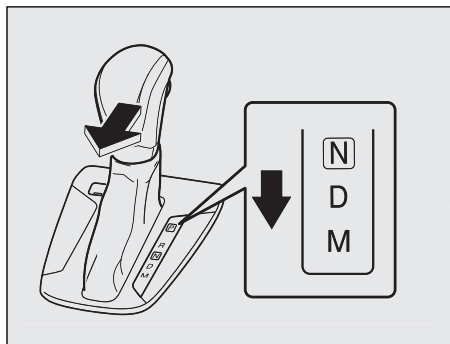

- (1) Manual mode indicator
(2) Gear position

The information display shows the manual mode indicator and the current gear position.

NOTE:

- The indicated gear position in the information display when you shift from “D” to “M” is the gear position that was selected automatically when the gearshift lever was in “D”.
- You can change to the manual mode temporarily by pulling the shift paddle on the steering wheel toward you when the gearshift lever is in “D”.

Shifting in the manual mode

You can shift gears from 1st to 6th depending on driving speed.


NOTE:

- When the engine is revved, the gear is shifted up automatically to prevent damage to the engine and the transmission.
- When the driving speed becomes slow, the gear shifts down automatically, and when the vehicle stops, the gear position will be in 1st gear without shifting the gearshift lever.
- If you depress the accelerator pedal a certain amount, the gear shifts down automatically even if the gearshift lever is in the manual mode.

NOTE:

When you change gear, sometimes the transmission may not shift to the desired gear but a buzzer sounds instead. This is to maintain good driveability and to protect the transmission.

Using the shift paddle

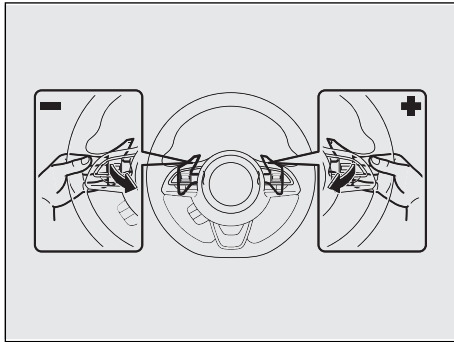

52RM30280

To shift up, pull “+” side shift paddle, located on right side of the steering wheel, toward you. When you release your finger from the switch, the switch will return to the original position.

To shift down, pull “-” side shift paddle, located on left side of the steering wheel, toward you. When you release your finger from the switch, the switch will return to the original position.

NOTE:


- To shift gears continuously, release your finger from the shift paddle, then pull the shift paddle again. You cannot shift gears continuously while holding the shift paddle toward you.
- When you pull the both “+” and “-” shift paddle simultaneously, the gear may not shift.

Canceling the manual mode

To cancel the manual mode, shift the gearshift lever from “M” to “D”.

Temporary manual mode

Pull the shift paddle toward you when driving with the gearshift lever in “D”. The information display shows the manual mode indicator and the current gear position.

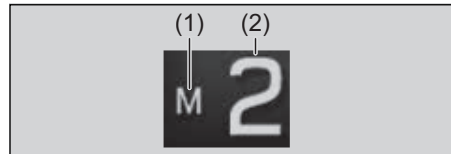

52RM30030


- (1) Manual mode indicator
- (2) Gear position

The temporary manual mode will be canceled automatically in the following situations.

- When you press and hold the accelerator pedal for a certain period of time without shifting gears.
- When driving speed becomes slow.

OPERATING YOUR VEHICLE

If you cannot Shift Automatic Transmission Gearshift Lever out of "P" (PARK)

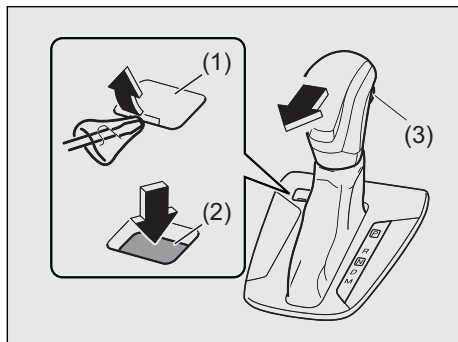

76TS50190

The automatic transmission vehicles have an electrically operated park-lock feature. If the vehicle's lead-acid battery is discharged, or there is some other electrical failure, the automatic transmission cannot be shifted out of Park in the normal way. Jump starting may correct the condition. If not, follow the procedure described below. This procedure will permit shifting the transmission out of Park.


- 1) Be sure the parking brake is firmly applied.
- 2) If the engine is running, stop the engine.
- 3) Make sure the ignition mode is ON or ACC.

- 4) Remove the cover (1) by using a flat-bladed screwdriver covered with a soft cloth as shown.
- 5) With the release button (2) pushed by the key or the flat end rod, push the knob button (3) and shift the gearshift lever to the desired position.

This procedure is for emergency use only. If repeated use of this procedure is necessary, or the procedure does not work as described, take the vehicle to a Maruti Suzuki authorized workshop.

Continuously Variable Transmission (e-CVT)

Gearshift lever

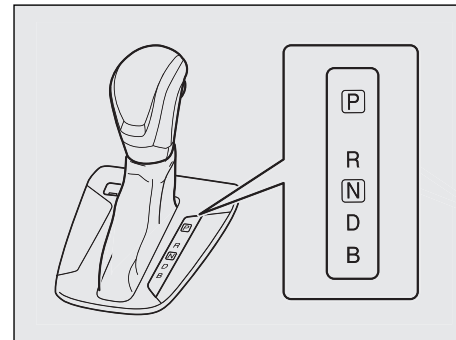


76TS50200

The gearshift lever is designed so that it cannot be shifted out of "P" position unless the ignition mode is ON and the brake pedal is depressed.

WARNING

Always depress the brake pedal before shifting from "P" (Park) (or "N" (Neutral) if the vehicle is stationary) to a forward or reverse gear, to help prevent the vehicle from moving unexpectedly when you shift.

The gearshift lever has a lock mechanism to help prevent accidental shifting. To shift the gearshift lever:

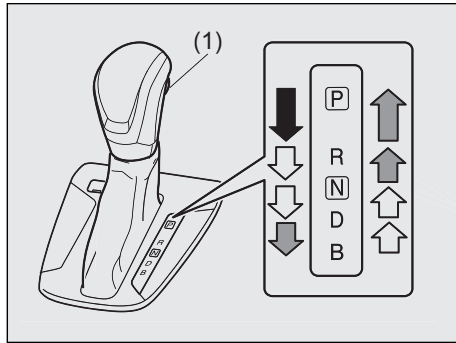

76TS50210

(1) Knob button

	Shift with the knob button (1) pushed in and the brake pedal depressed.
	Shift with the knob button (1) pushed in.
	Shift without the knob button (1) pushed in.

NOTE:

- Always shift the gearshift lever without pushing in the knob button (1) except when you shift from "P" to "R", from "D" to "B", from "N" to "R" or from "R" to "P". If you always push in the knob button (1) when shifting the gearshift lever, you could shift into "P", "R" or "B" by mistake.
- If driver's or passenger's knee hits the gearshift lever while driving, the lever could move and the gear could be changed unexpectedly.

Use the gearshift lever positions as described below:

P (Park)

Use this position to lock the transmission when the vehicle is parked or when starting the engine or the hybrid system. Shift into Park only when the vehicle is completely stationary.

R (Reverse)

Use this position to reverse the vehicle from stop. Make sure that vehicle is completely stationary before shifting into Reverse.

NOTICE

Do not shift the gearshift lever into "R" while moving forward, or the transmission may be damaged. If you shift into "R" when the vehicle speed is over 10 km/h, the transmission will not shift into reverse.

N (Neutral)

In this position, the power is not transmitted.

D (Drive)

Use this position for all normal driving.

B (Braking)

Use this position to provide engine braking when going down steep hills.

CAUTION

If you cannot press the power switch firmly, the hybrid system may not start.

Even if you shift the gearshift lever into "R" or "D" position without the hybrid system ready, the vehicle does not move.

If you try to move your vehicle under the above-mentioned condition, the vehicle may move in unexpected directions on a slope, etc. This may cause an accident. When starting the hybrid system, press the power switch firmly. Also, make sure that the hybrid system is ready to be activated by checking a short beep and the indicator light.

OPERATING YOUR VEHICLE

NOTICE


Be sure to take the following precautions to help avoid damage to the e-CVT:

- Make sure that the vehicle is completely stationary before shifting into "P" or "R".
- Do not shift from "P" or "N" to "R", "D" or "B" when the engine is running (the hybrid system is operating) above idle speed.
- Do not rev the engine with the transmission in a drive position ("R", "D" or "B") and the front wheels not moving.
- Do not use the accelerator to hold the vehicle on a hill. Use the vehicle's brakes.

NOTE:

- When you shift the gearshift lever into "P" and stop the engine before applying the parking brake, if you try to restart the engine and shift the gearshift lever into the position other than "P", it may reduce gearshift lever capability, or unusual sound and shock may occur. However, this is not abnormal.
- If the gearshift lever is in "N", the hybrid battery (traction battery) will not be charged even when the engine is running. Therefore, if the vehicle is left with the gearshift lever in "N" for a long period of time, the hybrid battery (traction battery) will discharge, and this may result in the vehicle not being able to start.
- The charge of the hybrid battery (traction battery) has become low due to the shift position being left in "N" for a long time.
 - As the hybrid battery (traction battery) cannot be charged with the "N" position selected, when stopping the vehicle for a long period of time, shift the gearshift position to "P".
 - If the "READY" indicator is not illuminated, shift the gearshift position to "P" and restart the hybrid system.

If You cannot Shift e-CVT Gearshift Lever out of "P" (PARK)

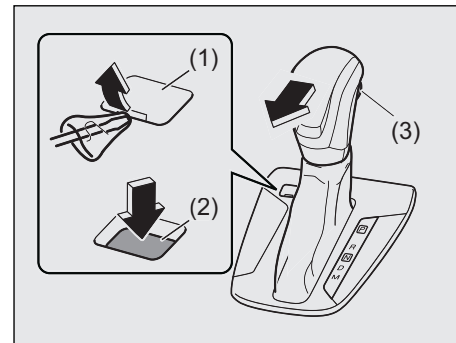

76TS50190


Vehicles with a e-CVT have an electrically operated park-lock feature. If the vehicle's lead-acid battery is discharged, or there is some other electrical failure, the e-CVT cannot be shifted out of Park in the normal way. Jump starting may correct the condition. If not, follow the procedure described below. This procedure will permit shifting the transmission out of Park.

- 1) Be sure the parking brake is firmly applied.
- 2) If the engine is running, stop the engine.
- 3) Make sure the ignition mode is ON or ACC.
- 4) Remove the cover (1) by using a flat-bladed screwdriver covered with a soft cloth as shown.

- 5) With the release button (2) pushed by the key or the flat end rod, push the knob button (3) and shift the gearshift lever to the desired position.

This procedure is for emergency use only. If repeated use of this procedure is necessary, or the procedure does not work as described, take your vehicle to a Maruti Suzuki authorized workshop for repair.

Gearshift Indicator (if equipped)

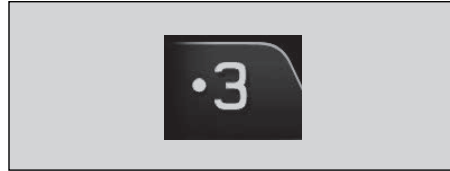

72RH4027

In the following cases, the gearshift indicator is indicated on the information display when the ignition mode is "ON".

- When the gearshift lever is in a position other than "N" (Neutral).
- For vehicles equipped with the cruise control, when the system is not in use.

The electronic control system monitors driving condition (such as vehicle speed and/or engine revolution), and it shows which gear position is optimal for your driving with the indication on the display.

If UP/DOWN arrow and the gear position other than currently selected are indicated on the display while driving, we recommend you to shift up or down the gear to indicated position. It is the optimal gear position for a driving condition that reduces the over revolution and stress to the engine, and improves fuel consumption.

For details on how to use the transmission, refer to "Using the Transmission" in this section.

WARNING

The gearshift indicator is designed to indicate optimal gear position for your driving, however, a driver will not be relieved from the duty of care of driving operation or gear change with this indicator.

To drive safe, do not gaze the gearshift indicator, pay attention to your driving situation and shift up or down if necessary.

NOTE:

- The gearshift indicator is not indicated when the gear position is in "N" (Neutral).
- If you depress the clutch pedal while UP/DOWN arrow is indicated, the indication will disappear.
- In ordinary driving, UP arrow will disappear when you release your foot from the accelerator pedal.
- The indication of gearshift indicator timing may differ depending on the vehicle condition and/or driving situation even in the same vehicle speed and engine revolution.
- If any of the electrical systems such as the ESP[®] is working, the gearshift indicator will disappear temporarily.

OPERATING YOUR VEHICLE

Example of the gearshift indicator

Indication	Description
	Lower gear position is selected for the vehicle speed and/or engine revolution. Changing to a higher gear position is recommended. • In this case, shifting up to 4th gear position is recommended.
	Current gear position is optimal for the vehicle speed and/or engine revolution. • In this case, 3rd gear position is the best.
	Higher gear position is selected for the vehicle speed and/or engine revolution. Changing to a lower gear position is recommended. • In this case, shifting down to 2nd gear position is recommended.

SHVS (Smart Hybrid Vehicle by Suzuki) (If Equipped)

SHVS has an Integrated Starter Generator (ISG) instead of conventional generator to get a better fuel consumption.

Integrated Starter Generator (ISG) is a generator which incorporates a motor function.

The ISG has the following 3 functions.


- Deceleration energy regenerating function
- Engine power assist function
- Starter motor function

WARNING

Dripping engine oil, brake fluid and coolant, etc. to the ISG may cause a fire or malfunction. Do not spill them when pouring.


Deceleration Energy Regenerating Function

Instrument cluster (Type A)

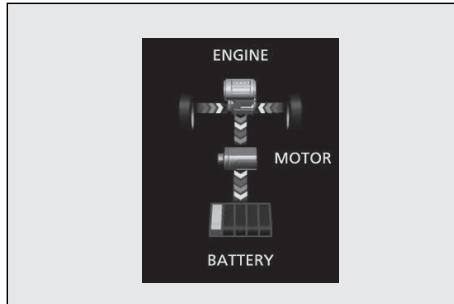

76TS50980

Instrument cluster (Type B)

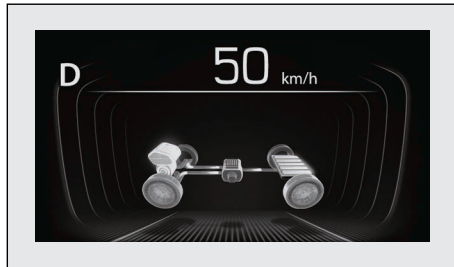

76TS50985

While decelerating your vehicle, the ISG generates electricity without engine power. This reduces engine loads and improves fuel consumption.

While decelerating your vehicle, deceleration energy regenerating function will be activated when the following conditions are satisfied.


- Gearshift lever is not in "N" (Neutral).
 - Clutch pedal is not depressed.
 - Inside temperature of lead-acid battery is in normal condition.
 - Lithium-ion battery is not fully charged and inside temperature is in normal condition.
- etc.

NOTE:

The deceleration energy regenerating function may not work depending on vehicle conditions.


Engine Power Assist Function

Instrument cluster (Type A)

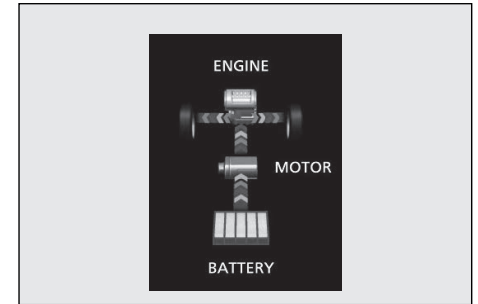

76TS50990

Instrument cluster (Type B)

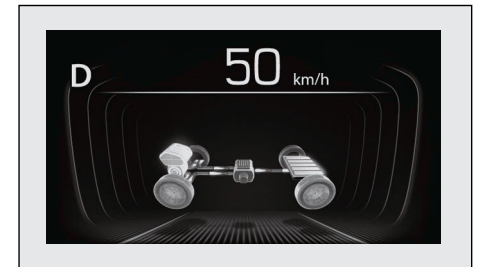

76TS50995

While the vehicle is running, ISG assists engine power as a motor in the following limited condition. This reduces engine loads and improves fuel consumption.

OPERATING YOUR VEHICLE

While the vehicle is running with the engine speed at approximately 3900 rpm or less, engine power assist function will be activated when all of the following conditions are satisfied.


- SHVS system and ENG A-STOP system are working properly. (ENG A-STOP OFF indicator light is not blinking.)
- Clutch pedal is not depressed.
- ESP[®] is not activated.
- Accelerator pedal is excessively depressed.
- Lead-acid battery and lithium-ion battery are fully charged and each inside temperature is in normal condition.
- Engine coolant temperature is in normal condition.
- ISG inside temperature is in normal condition.

NOTE:

The engine power assist function may not work depending on vehicle conditions.

Starter Motor Function

Instrument cluster (Type A)

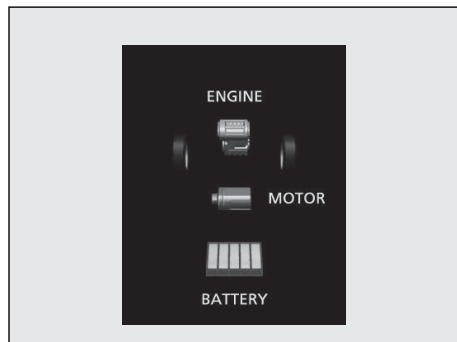

76TS51000

Instrument cluster (Type B)



76TS51005


After the engine auto stop by the ENG A-STOP system, the engine will be restarted using a cranking power of the ISG.

The starting with the ISG is quiet compared with starting by the conventional starter motor.

NOTE:

When you restart the engine by pushing the engine switch, the conventional starter motor is used and you will hear a gear engagement sound.

Lithium-ion Battery Indication

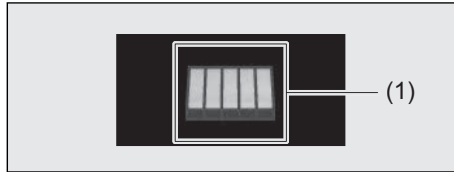


76TS51010

The segments in the lithium-ion battery indicator (1) give an approximate indication of the charge of the lithium-ion battery. The number of segments that appear in the indication increases or decreases with the charge of the lithium-ion battery.

NOTE:

The indicator gives an approximate indication. The indication may be delayed or differ from the actual charge of the lithium-ion battery under certain conditions, for example, when the outside temperature is low. Also, the minimum segment is 1 bar and the bar will never be 0. Even when 1 bar is shown, the battery level may be close to be flat.

Deceleration Energy Regenerating Indicator Light

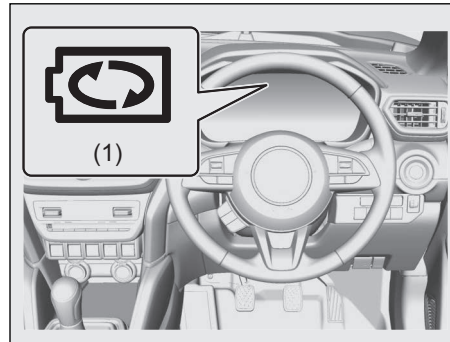


76TS50780

When the deceleration energy regenerating function is working, the deceleration energy regenerating indicator light (1) comes on.

NOTE:

If the gearshift lever is in the "N" (Neutral) position, this light does not come on.

ENG A-STOP OFF Light

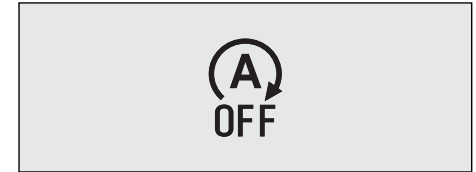

52RM30461

If this indicator blinks when driving, there may be something wrong with the ENG A-STOP system or the SHVS system. You should have the system inspected by a Maruti Suzuki authorized workshop.

OPERATING YOUR VEHICLE

Hybrid System (if equipped)


For details, refer to “Hybrid system features (if equipped)” in “FOR SAFE DRIVING” section.

Energy flow indicator

With the energy flow indicator in the instrument cluster, you can check the energy flow among the engine, the lithium-ion battery and the tyres.


Each color indicates the following information.

- Orange: Energy flow of the engine
- Blue: Energy flow between the tyres and the motor
- White: Energy flow between the battery and the motor:

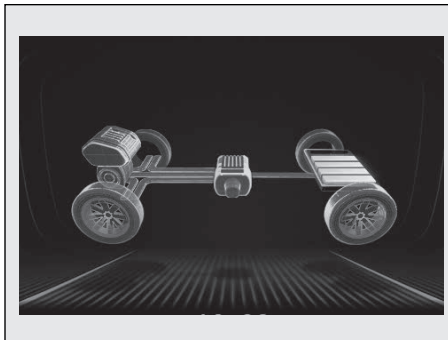


76TS51040

- There is no energy flow.

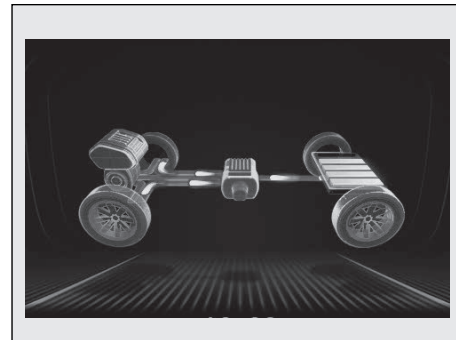


76TS51050

- The vehicle is running by the energy of the lithium-ion battery.
(Displayed by blue and white)

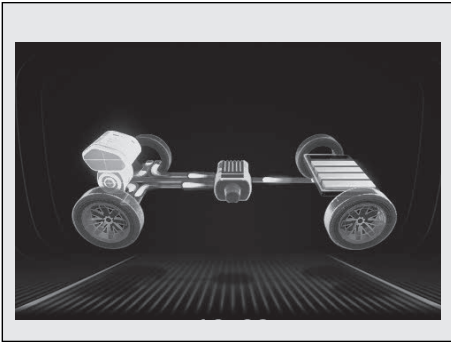


76TS51070

- The vehicle is running by the energy of both the engine and the lithium-ion battery. (Displayed by blue, orange and white)

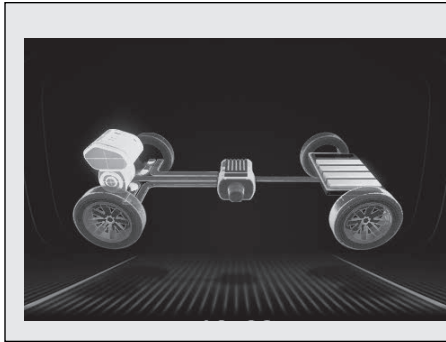

76TS51020


- The vehicle is running by the energy of the engine. (Displayed by orange)

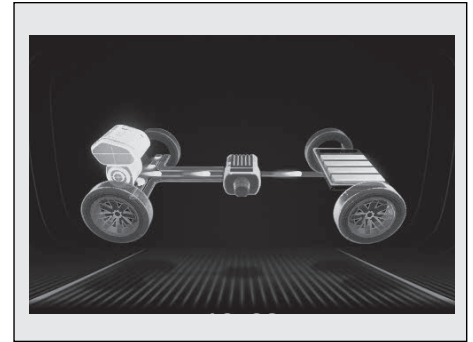

76TS51030


- The vehicle is running and the battery is charged by the energy of the engine. (Displayed by orange and white)

OPERATING YOUR VEHICLE

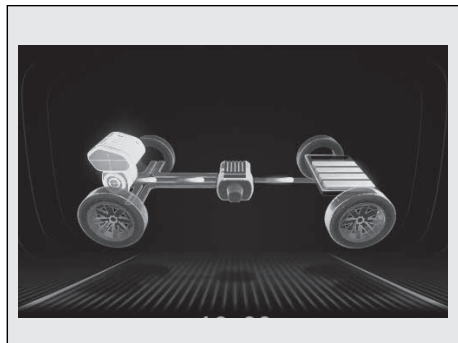

76TS51060


- The lithium-ion battery is charged by the energy of the engine.
(Displayed by orange and white)

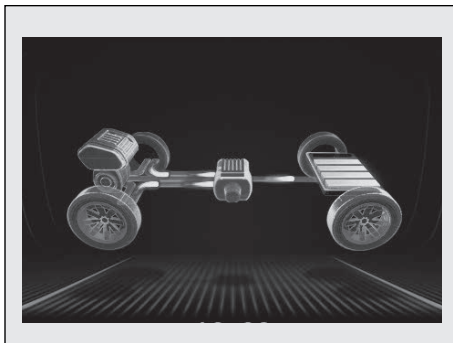

76TS51080

- The lithium-ion battery is charged by the deceleration energy regeneration function.
(Displayed by blue and white)

Battery indicator

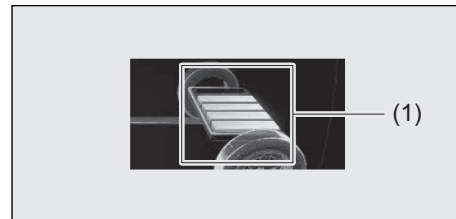

76TS51090

The segments in the battery indicator (1) give an approximate indication of the charge of the lithium-ion battery.

Acoustic Vehicle Alerting System (if equipped)


When the vehicle is driven using the electric motor (traction motor) at a speed of approximately 23 km/h or less, an alarm is sounded to alert those around the vehicle to its approach.

The alarm may be difficult for people around you to hear when there is a lot of noise around you, or when there is heavy rain or strong winds. Also, because the vehicle approach notification device is mounted in front of the vehicle, it may be difficult to hear the rear of the vehicle compared to the front of the vehicle. The alarm may also be heard in the vehicle while the vehicle is in motion, but this is not a malfunction because the sound is intended to inform people around the vehicle that it is approaching.

WARNING

Even if the alarm sounds, you may not notice the approach of the vehicle if the surrounding noise is loud, so drive carefully.

Acoustic Vehicle Alerting System Warning Light

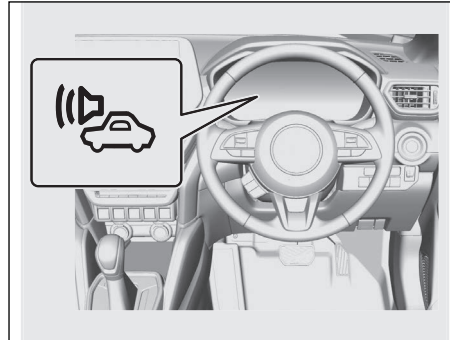

76TS05003

When the power switch is pressed to change the ignition mode to "ON", this light comes on briefly so you can check that the light is working.

If this light blinks, there may be something wrong with the acoustic vehicle alerting system.

ENG A-STOP System (Engine Auto Stop Start System) (if equipped)

The ENG A-STOP system (engine auto stop start system) automatically stops the engine while waiting briefly at a traffic light, etc., and automatically restarts the engine afterward. This system helps reduce emissions, improve fuel consumption and lower engine noise.

This system stops the engine temporarily under specific conditions. Before parking the vehicle for an extended period of time or leaving the vehicle, properly apply the parking brake and stop the engine with the engine switch.

Once the specific conditions are met, the engine will stop automatically after the vehicle has stopped. However, the engine will not be stopped automatically until confirmation of the system function is finished.

NOTE:

If your vehicle is equipped with the auto air conditioning system, you can change the automatic engine stop condition via the information display. Refer to "Information display" in "INSTRUMENT CLUSTER" section.

OPERATING YOUR VEHICLE

⚠ CAUTION


- Do not get out of the vehicle while the engine is automatically stopped by the ENG A-STOP system. Doing so may lead to an accident.
 - Manual transmission vehicle – If the driver's seat belt is unfastened or the driver's door is opened, the engine will restart.
 - Automatic transmission vehicle – If the driver's seat belt is unfastened, even if the brake pedal is pressed down, or the driver's door is opened, the engine will be restarted to warn you that the engine was stopped automatically by the ENG A-STOP system.
- If the engine does not restart automatically after having been stopped automatically by the ENG A-STOP system, push the engine switch to start the engine. Trying to move the vehicle when the engine has not yet restarted requires a strong force to turn the steering wheel or depress the brake pedal, potentially leading to an accident.

NOTICE

The vehicle equipped with this system uses a dedicated high-performance lead-acid battery that supports ENG A-STOP system. Accordingly, observe the instructions listed below. If these instructions are not observed, the system may not actuate properly or the lead-acid battery may die prematurely.

- When replacing the lead-acid battery, use a Maruti Suzuki GENUINE battery specified in the Specification.
- Do not draw power from the lead-acid battery terminals for electrical products.

Lithium-ion Battery

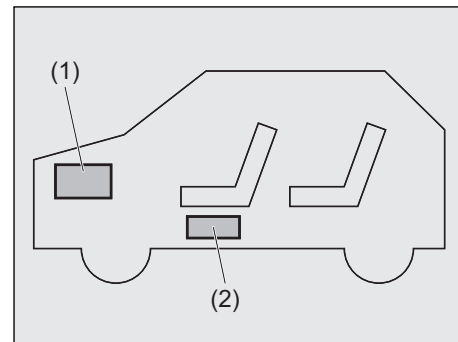

68PM00368

- (1) Battery (lead-acid battery)
(2) Lithium-ion battery

This lithium-ion battery is used exclusively for the vehicle equipped with SHVS, and located below the front left side seat.

- Just like a battery (lead-acid battery), the lithium-ion battery also discharges gradually.

To prevent the lithium-ion battery from dying, you must charge the lithium-ion battery by driving continuously for at least 30 minutes once a month.

- The lithium-ion battery is maintenance-free.
- To replace or dispose of the lithium-ion battery, consult a Maruti Suzuki authorized workshop.

WARNING


Wrong handling of the lithium-ion battery may result in fire, electric shock or system malfunction. Accordingly, observe the instructions listed below:

- Do not dismount or disassemble the lithium-ion battery.
- Do not let the lithium-ion battery come in contact with water or other liquids.
- Do not apply strong impact on the lithium-ion battery.
- Do not step on the lithium-ion battery or put articles on the lithium-ion battery.
- Do not disconnect the lithium-ion battery terminals or draw power from the terminals for electrical products.

Automatic Stopping/Restarting of the Engine

Manual transmission vehicles

- 1) With the brake pedal depressed, decelerate the vehicle.

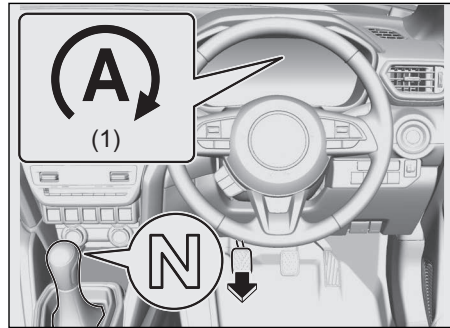

76TS0800

- 2) After the vehicle has stopped with the clutch pedal depressed and the gearshift lever shifted to "N", and then release the clutch pedal, the engine will stop automatically.

The ENG A-STOP indicator light (green) (1) will come on.

- The ENG A-STOP system will not stop the engine automatically if all the automatic engine stop conditions are not met.

For details, refer to the section, "Operating Conditions of ENG A-STOP System".

- During the automatic engine stop, the engine may shut down, accompanied by an interior buzzer or restarted, to ensure safety.

For details, refer to the section, "Precautions of When the Engine is Stopped Automatically".

NOTICE


During the automatic engine stop, do not shift the gearshift lever to a position other than "N" without depressing the clutch pedal. If the gearshift lever is in a position other than "N", the engine will not restart automatically even if the clutch pedal is depressed.

NOTE:

During the automatic engine stop, electric equipment will be in the following conditions:

- The audio and other electrical component can be used during the automatic engine stop, but the air conditioner will switch to the fan mode.
- If the vehicle is equipped with an auto air conditioner, the fan speed will be limited during the automatic engine stop (only in the auto control mode) to keep the cabin air-conditioned for a longer time.

OPERATING YOUR VEHICLE

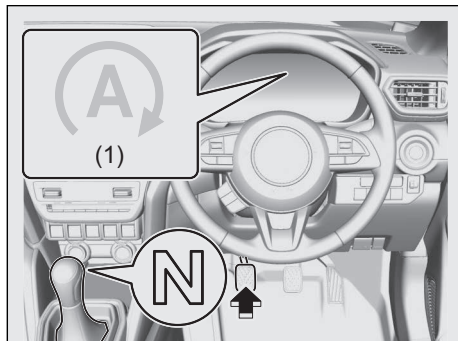

76TS50820

- 3) Regardless of whether the vehicle has stopped or not, depressing the clutch pedal will restart the engine and ENG A-STOP indicator light (green) (1) will go off.

While the engine is stopped automatically, depressing the clutch pedal will restart the engine consuming fuel. Therefore, for fuel economy, it is recommended to depress the clutch pedal just before the vehicle start.

- Without depressing the clutch pedal, the engine may restart automatically if the automatic engine restart conditions are met.

For details, refer to the section, "Automatic engine restart conditions".

- When restarting the engine, keeping brake force temporarily prevents the vehicle from moving forward by the creeping function. Also, this prevents the vehicle from rolling downward on a hill. For details, refer to the section "Hill Hold Control System".


NOTE:

When the engine is restarted automatically, the following conditions may be found as the hill hold control system is activated, but this is not a malfunction.

- *You may hear a sound from the engine room.*
- *As brake pedal becomes heavy, it may be difficult for you to depress it.*

Automatic transmission vehicles

- 1) Depress the brake pedal to decelerate while the gearshift lever is in the "D" position will automatically stop the engine before the vehicle is stopped (approximately 9 km/h or less). At the same time, the ENG A-STOP indicator light (green) will remain on.
- The engine is not stopped automatically if all of the conditions to stop the engine automatically are not met, even if the brake pedal is pressed down to decelerate. For details on the conditions for automatically stopping the engine, refer to "Conditions to Stop the Engine Automatically" in this section.
 - To ensure safety when the engine is stopped automatically, the interior buzzer may sound and the engine will stall, or the engine may be restarted.

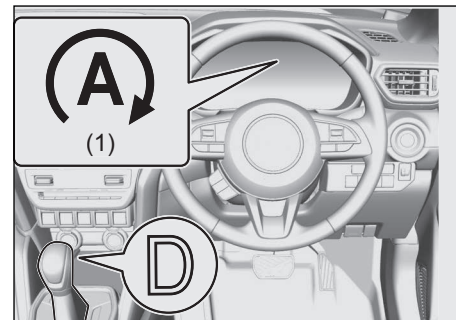

76TS50841


NOTE:

- The engine is not stopped automatically when decelerating without depressing the brake pedal, for example, by using engine braking.
- The engine may be stopped automatically when the vehicle is stopped, even if the engine is not stopped automatically before stopping the vehicle (approximately 9 km/h or less).
- Electrical components, such as the navigation system or audio system, can be used while the engine has been stopped automatically, however, the air conditioner switches to the ventilation position.
- For the automatic heating and air conditioning system, airflow is limited (only under automatic operation) when the engine is stopped automatically, in order to improve the cooling and heating performance.

- 2) When you remove your foot from the brake pedal, regardless of whether it is before or after stopping the vehicle, the engine is restarted and the ENG A-STOP indicator light (green) goes off.

- The engine is restarted automatically if the conditions to restart the engine automatically are met, even if the brake pedal is depressed.

For details on the conditions for automatically restarting the engine, refer to "Conditions to Restart the Engine Automatically" in this section.

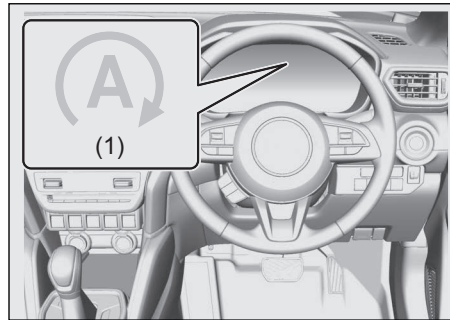

76TS50861

NOTE:

- The hill hold control system is activated when the engine is restarted automatically.
- When engine restarts automatically, the electric parking brake may engage or disengage and interrupt the restarting process, and that is normal operation.

OPERATING YOUR VEHICLE

Precautions of When the Engine is Stopped Automatically

WARNING

Do not perform any of the following operations while the engine has been stopped automatically. This may result in an accident.

	Operation/Vehicle Condition	Solution
Common	Engine hood opened • The interior buzzer sounds intermittently. • After the engine is stopped automatically, it stalls. • The ENG A-STOP indicator light (green) goes off.	To restart the engine, follow the procedure below. 1) Set the parking brake firmly, and then place the gearshift lever in the "N" position (for manual transmission) or "P" position (for automatic transmission). 2) Securely close the engine hood. 3) Press the engine switch to restart the engine.
Manual transmission	Driver's seat belt unfastened or driver's door opened • The engine is restarted automatically. • The ENG A-STOP indicator light (green) blinks 5 times, then goes off.	Fasten the driver's seat belt and/or close the driver's door.
	Gearshift lever shifted to a position other than "N" without depressing the clutch pedal, driver's seat belt unfastened and driver's door opened • The interior buzzer sounds intermittently. • After the engine is stopped automatically, it stalls. • The ENG A-STOP indicator light (green) goes off.	To restart the engine, follow the procedure below. 1) Set the parking brake firmly, and then place the gearshift lever in the "N" position. 2) Close the door and buckle the seat belt. 3) Press the engine switch to restart the engine.

	Operation/Vehicle Condition	Solution
Auto- matic transmis- sion	Driver's seat belt unfastened, or driver's door opened • The engine is restarted automatically. • The ENG A-STOP indicator light (green) blinks 5 times, then goes off.	Before driving, close the door and buckle the seat belt. In addition, before getting out of the vehicle, follow the procedure below. 1) Set the parking brake firmly, and then place the gearshift lever in the "P" position. 2) When the vehicle will be stopped for a long time or when you will leave the vehicle unattended, press the engine switch to stop the engine.

NOTE:

The following indicator lights in the instrument cluster do not come on when the engine is stopped automatically.

- *Malfunction indicator light, electric power steering light, oil pressure light, charging light*

OPERATING YOUR VEHICLE

Operating Conditions of ENG A-STOP System

Standby conditions

If all of the following conditions are met while driving, the automatic engine stop will be permitted.

When the engine is started		• The engine is started with the engine hood securely closed.
When driving	Common	• The ENG A-STOP system is not deactivated (OFF). • The battery is charged more than a certain amount, and the temperature inside the battery is within the specified range. (#1) • The engine coolant temperature is within the specified range. • The driver's seat belt is fastened. • The driver's door is securely closed. • The engine hood is securely closed. <Vehicle with automatic heating and air conditioning system> • The air from the outlets is sufficiently cooled while cooling or sufficiently warmed while heating. • The defroster is turned off.
	Manual transmission	• There is no signal to prevent stopping the engine from any electronic control systems other than the ENG A-STOP system. (#2)
	Automatic transmission	• The gearshift lever is in the "D" or "N" position. (#3) • The manual mode is not in use. • There is no signal to prevent stopping the engine from any electronic control systems other than the ENG A-STOP system.

#1: If the battery is discharged, for example, if the vehicle has not been used for a long time or electrical components, such as the navigation system or audio system, have not been used for a long time while the engine was stopped, it may take some time until the system can be in standby.

#2: If any of the warning and indicator lights affecting the ENG A-STOP system come on, the engine will not be stopped automatically.

#3: The system will be in standby even though the gearshift lever is in the "N" position, however, the engine will be stopped automatically when the vehicle is stopped, instead of when it is decelerating (approximately 9 km/h or less) before stopping.

Conditions to stop the engine automatically

If all of the following conditions are met while the standby conditions are met, the engine is stopped automatically when the vehicle is decelerating before stopping or when the vehicle is stopped.

When decelerating before stopping	Auto- matic transmis- sion	• The ABS or ESP[®] system has not been activated. • Brake booster vacuum pressure is normal. • The brake pedal is sufficiently depressed. (#) • The vehicle is decelerating to a speed of approximately 9 km/h or less. • The accelerator pedal is not depressed. • The vehicle is not being driven on a steep hill. • The brake is not applied abruptly.
When the vehicle is stopped	Manual transmis- sion	• The gearshift lever is in "N" position. • The clutch pedal is released.
	Auto- matic transmis- sion	• The ABS or ESP[®] system has not been activated. • Brake booster vacuum pressure is normal. • The brake was not applied abruptly before the vehicle was stopped. • The brake pedal is sufficiently depressed. (#) • The accelerator pedal is not depressed. • The vehicle is not stopped on a steep hill.

#: The engine may not be stopped automatically if the brake pedal was depressed lightly or strongly.

OPERATING YOUR VEHICLE

Conditions to restart the engine automatically


If any of the following vehicle conditions occur or operations are performed while the engine is stopped automatically, the engine is restarted automatically and the ENG A-STOP indicator light (green) goes off.

Common		• The ENG A-STOP system is deactivated (OFF). • The battery continues to be discharged. (#1) • A malfunction was detected in this system. (#2) • Brake booster vacuum pressure is low. (#1) • The temperature of the air from the outlets changes greatly, or the cooling and heating performance is insufficient. (#1) • The temperature selector was greatly set toward COOL while cooling or greatly set toward HOT while heating. (#1) • The defroster is turned on. (#1)
Manual transmission		• The clutch pedal is depressed.
Automatic transmission		• The foot is removed from the brake pedal. (#3) • The accelerator pedal is depressed. • The gearshift lever is placed in the "P", "R" or "M" position.
When decelerating (approximately 9 km/h [6 mph] or less for automatic transmission vehicles)	Common	• The engine hood was opened.
	Automatic transmission	• The gearshift lever is placed in the "N" position. • The slope of the road suddenly changes. (#1)
When the vehicle is stopped	Common	• The driver's seat belt is unfastened. (#1) • The driver's door is opened. (#1) • The vehicle is moving along a slope. (#1) • Some time (about 3 minutes) has passed since the engine was stopped automatically. (#1)
	Automatic transmission	• After the gearshift lever is placed in the "N" position, it is returned to the "D" position.

- #1: After the ENG A-STOP indicator light (green) blinks, it goes off. Also, the interior buzzer may sound at the same time.
- #2: Depending on the situations of malfunction, it is a normal restart or the restart as #1.
- #3: The engine may be restarted automatically when the brake pedal is depressed lightly. In this case, when the brake pedal is depressed again, the engine is stopped automatically and the ENG A-STOP indicator light (green) comes on again.

OPERATING YOUR VEHICLE

ENG A-STOP OFF Switch (If Equipped)

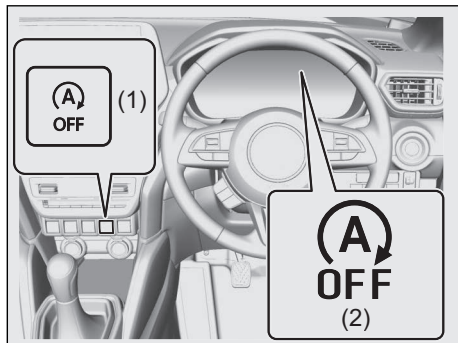

76TS50880

The ENG A-STOP system can be deactivated.

- To deactivate the system, press the ENG A-STOP OFF switch (1) to turn on ENG A-STOP OFF light (2).
- To activate the system once again, press the switch (1) again to turn off the indicator.
- Every time the engine is stopped manually, the system is enabled again and the ENG A-STOP OFF light (2) goes off.

NOTE:

Pressing the ENG A-STOP OFF switch (1) during the automatic engine stop will restart the engine automatically and the ENG A-STOP OFF light (2) will come on.

ENG A-STOP OFF Light (If Equipped)



52RM30461

This indicator comes on in the information display.


- This indicator comes on when the ENG A-STOP system is deactivated.
- The indicator blinks when the engine switch is pressed to change the ignition mode to ON, if one of the conditions listed below is met. The ENG A-STOP system or the SHVS system does not actuate correctly while the indicator is blinking. Have the system inspected by a Maruti Suzuki authorized workshop.
 - If there is something wrong with the ENG A-STOP system, SHVS system or the lithium-ion battery.
 - An engine component (ISG) or the lead-acid battery is due for replacement.

NOTE:



If the indicator blinks during the automatic engine stop, the engine may shut down.

Information Message

The information display shows the messages to let you know certain problems of the ENG A-STOP system.

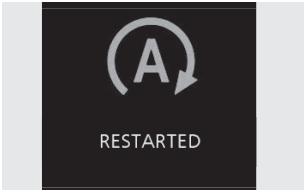Information message	Cause and remedy
 52RM30650	The ENG A-STOP system cannot stop the engine automatically because something of the actuation conditions is not met. For details, refer to "Operating Conditions of ENG A-STOP System" in this section.
 52RM30660	The engine is restarting automatically because one of the following automatic engine restart conditions is met. • The temperatures at air conditioner outlets have changed considerably after the automatic engine stop to the point of affecting the cooling/heating performance. • The lead-acid battery has discharged substantially. • Some time has elapsed after the start of the automatic engine stop.
 52RM30890	The engine restarted automatically because one of the following automatic engine restart conditions is met. • The negative pressure of the brake booster has dropped.


OPERATING YOUR VEHICLE

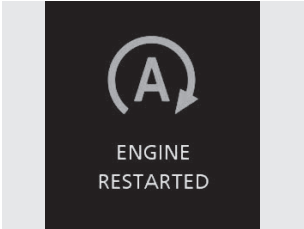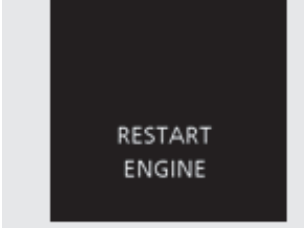Information message	Cause and remedy
 52RM30670	The engine restarted automatically because one of the following automatic engine restart conditions is met. • The defroster is turned on. • The driver's seat belt is released. • The driver's door is opened. • The vehicle is started to move on a slope, etc.
 52RM30680	The engine shut down because one of the following operations is performed during the automatic engine stop. • The hood is opened. • For Manual transmission vehicle, the driver's door is opened with the driver's seat belt is unfastened. Restart the engine by usual operation. Refer to "Starting / Stopping Engine or Hybrid System" in this section for details.
Manual transmission  52RM30690	The gearshift lever is shifted to a position other than "N" (Neutral) position without depressing the clutch pedal during the automatic engine stop. To restart the engine, place the gearshift lever in "N" (Neutral) position and depress the clutch pedal.

Driving Mode (if equipped)

The driving modes can be selected to suit driving condition.

Driving Mode Select Switch

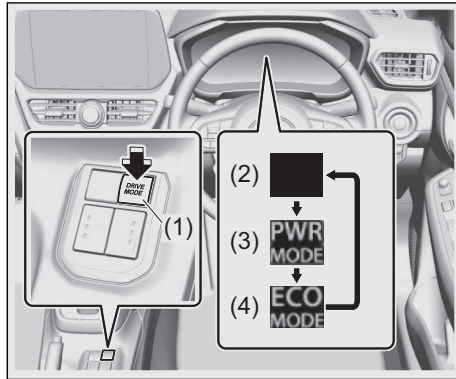

76TS50740

Each time the switch (1) is pressed, the system changes between normal mode, power mode and ECO drive mode

(2) Normal mode

This mode provides an optimal balance of fuel economy, quietness, and dynamic performance. This is suitable for normal driving.

(3) Power mode

This mode controls the hybrid system to provide quick, powerful acceleration. Also, this mode makes it suitable for when agile driving response is desired, such as when driving on roads with many curves.

When the Power mode is selected, Power mode indicator comes on.

(4) Eco drive mode

This mode helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling).

When the Eco drive mode is selected, Eco drive mode indicator comes on.

Operation of the air conditioning system in Eco drive mode

Eco drive mode controls the heating/cooling operations and fan speed of the air conditioning system to enhance fuel efficiency. To improve air conditioning performance, perform the following operations:

- Adjust the fan speed
- Turn off Eco drive mode

Automatic deactivation of Power mode

If the power switch is turned off after driving in power mode, the drive mode will be changed to normal mode.


EV Drive Mode Switch

In EV drive mode, electric power is supplied by the hybrid battery (traction battery), and only the electric motor (traction motor) is used to drive the vehicle.

This mode allows you to drive in residential areas early in the morning and late at night, or in indoor parking lots, etc., without concern for noises and gas emissions.

Operating instructions

Press EV drive mode switch to turn on the EV drive mode. Press the switch again to turn off this mode.

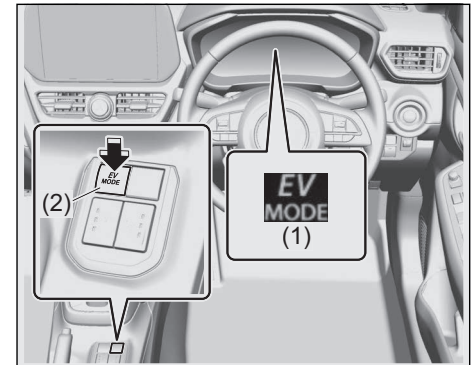

76TS50750

When EV drive mode is turned on, EV drive mode indicator (1) will come on. Pressing the switch (2) when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor).

OPERATING YOUR VEHICLE

Situations in which EV drive mode cannot be turned on

It may not be possible to turn EV drive mode on in the following situations. If it cannot be turned on, a message will be shown on the information display.

- The temperature of the hybrid system is high.
The vehicle has been left in the sun, driven on a hill, driven at high speeds, etc.
- The temperature of the hybrid system is low.
The vehicle has been left in temperatures lower than about 0°C (32°F) for a long period of time, etc.
- The gasoline engine is warming up.
- The hybrid battery (traction battery) is low.
The remaining battery level indicated in the information display is low.
- Vehicle speed is high.
- The accelerator pedal is depressed firmly or the vehicle is on a hill, etc.
- The windshield defogger is in use.

Switching to EV drive mode when the gasoline engine is cold

If the hybrid system is started while the gasoline engine is cold, the gasoline engine will start automatically after a short period of time in order to warm up. In this case, you will become unable to switch to EV drive mode.

After the hybrid system has started and the "READY" indicator has illuminated, press the EV drive mode switch before the gasoline engine starts to switch to EV drive mode.

Automatic cancellation of EV drive mode

When driving in EV drive mode, the gasoline engine may start automatically and the vehicle may be driven by the gasoline engine and electric motor (traction motor) in the following situations. When EV drive mode is canceled, a message will be displayed on the information display.

- The hybrid battery (traction battery) becomes low.
The remaining battery level indicated in the information display is low.
- Vehicle speed is high.
- The accelerator pedal is depressed firmly or the vehicle is on a hill, etc.

Possible driving distance when driving in EV drive mode

EV drive mode's possible driving distance ranges from a few hundred meters to approximately 1 km. However, depending on vehicle conditions, there are situations when EV drive mode cannot be used. (The distance that is possible depends on the hybrid battery [traction battery] level and driving conditions.)

Fuel economy

The hybrid system is designed to achieve the best possible fuel economy during normal driving (using the gasoline engine and electric motor [traction motor]). Driving in EV drive mode more than necessary may lower fuel economy.

If "EV MODE UNAVAILABLE" is shown on the information display

The EV drive mode is not available. Use the EV drive mode when it becomes available.


If "EV MODE CANCELED" is shown on the information display

The EV drive mode has been automatically canceled. Drive the vehicle for a while before attempting to turn on the EV drive mode again.

WARNING

When driving in EV drive mode, pay special attention to the area around the vehicle. Because there is no engine noise, pedestrians, people riding bicycles or other people and vehicles in the area may not be aware of the vehicle starting off or approaching them.

Four-mode 4WD System (if equipped)

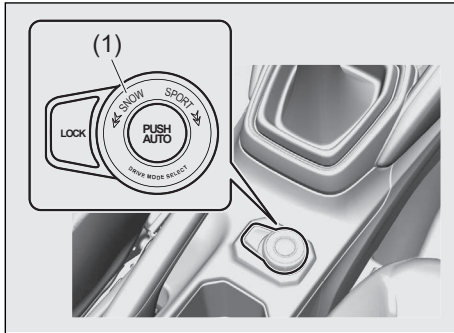

76TS50760

(1) Driving mode switch

The four-mode 4WD system enables you to select the driving mode according to driving conditions by operating the driving mode switch.

Driving Modes

AUTO

This mode prioritizes fuel economy in typical driving conditions. The system switches the driving mode to 4WD if it detects wheel spin.

SPORT

This mode is optimized for sporty driving. The system apportions torque to promote cornering performance.

- In the vehicle with automatic transmission, this mode optimizes the throttle/torque characteristics with small and moderate throttle openings to keep the engine speed high for good response.

SNOW

This mode is optimal for snowy, unpaved, and other slippery surfaces. This mode enhances traction during acceleration on slippery surfaces, and enables stable cornering on slippery surfaces.

LOCK


This mode is for extricating the car from snow, mud, or sand.

Driving Mode Switch Operation

Operate the driving mode switch according to the appropriate procedure described below.

How to turn on driving mode switch

The driving mode switch will activate when the ignition mode is ON.

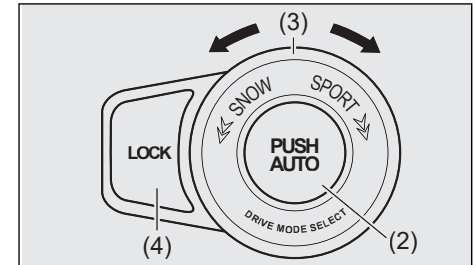

76TS51170

Selecting AUTO mode

Push the "PUSH AUTO" part (2) of the driving mode switch.

Selecting SPORT mode

Turn the dial (3) of the driving mode switch clockwise to the "SPORT" position.

Selecting SNOW mode

Turn the dial (3) of the driving mode switch counterclockwise to the "SNOW" position.

Selecting LOCK mode

When the vehicle speed is less than 60 km/h and the SNOW mode is selected, push the "LOCK" part (4) of the driving mode switch.

OPERATING YOUR VEHICLE


NOTE:

If the vehicle speed exceeds about 60 km/h in the LOCK mode, the driving mode changes to the SNOW mode automatically. Even when the vehicle speed reduces, on the other hand, the driving mode does not return to the LOCK mode automatically. You should select the LOCK mode according to the driving conditions.

NOTE:

- The information display shows current driving mode.
- When the engine switch is pressed to change the ignition mode to ON, the AUTO mode is selected automatically.
- The driving mode switch can be operated when the vehicle is either stopped or moving.
- Make sure that the front wheels are in the straight ahead position when operating the driving mode switch.
- While making turns or accelerating and decelerating, operating the driving mode switch, pressing the engine switch to change the ignition mode to ACC or LOCK may cause a shock, but this is not a system malfunction.
- When you operate your vehicle under conditions that involve wheel spin, such as driving off-road in the sand or water or when a wheel has run off the road, the difference in the amount of revolution between front wheels and rear wheels increases (wheels run idle). If this state continues, the oil temperature of the

driving system parts increases. The 4WD warning light warns of this condition by blinking. At the same time, the information display shows this message: "AWD SYSTEM HIGH TEMP AWD IS OFF".

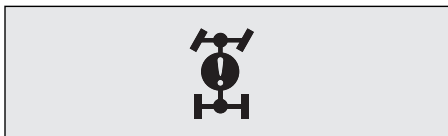

57L30042

When the 4WD warning light blinks, park the vehicle at a safe place and run the engine idle. After a while, the 4WD warning light will go out and the system will resume.

NOTICE

- Note that 4WD vehicles are not all-around vehicles. Be sure to observe the following instructions when driving your vehicle.
 - Do not drive through water such as by crossing a river.
 - Do not drive continuously in places such as sand and mud where front wheels tend to race.
 - When any wheel is in the air for such reason as running off the road, do not race it needlessly.

(Continued)

NOTICE

(Continued)

- If the 4WD warning light comes on or blinks when driving, there may be something wrong with the four-mode 4WD system. Have the system inspected by a Maruti Suzuki authorized workshop.

NOTICE

Unevenly worn tyres can cause problems with the 4WD system. Be sure to rotate the tires according to the maintenance schedule. Refer to "Tyres" and "Maintenance Schedule" in the "INSPECTION AND MAINTENANCE" section for proper tyre rotation procedures.



Warning and Indicator Messages



The information display shows the warning and indicator message when the four-mode 4WD system is operated, or has a problem.

Warning and indicator messages

Warning and Indicator Message	Master Warning Indicator Light	Sound	Cause and Remedy
 65T50770	Blinks 	Beep (one time from interior buzzer)	There may be a problem with the four-mode 4WD system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.
 65T50780	Blinks 	Beep (one time from interior buzzer)	Tyres of different sizes may be fitted or tyres may be insufficiently inflated. Have your vehicle inspected by a Maruti Suzuki authorized workshop.


OPERATING YOUR VEHICLE

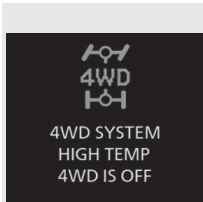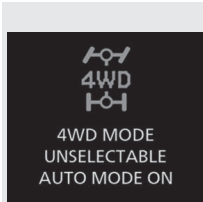Warning and Indicator Message	Master Warning Indicator Light	Sound	Cause and Remedy
 4WD SYSTEM HIGH TEMP 4WD IS OFF 65T50790	Blinks 	Beep (one time from interior buzzer)	Drive train components may be overheated. Stop in a safe place and allow the engine to idle.
 4WD MODE UNSELECTABLE AUTO MODE ON 65T50800	Blinks 	Beep (one time from interior buzzer)	If this message is displayed, have your vehicle inspected by a Maruti Suzuki authorized workshop.

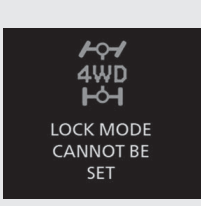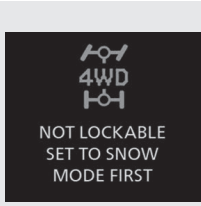Warning and Indicator Message	Master Warning Indicator Light	Sound	Cause and Remedy
 LOCK MODE CANNOT BE SET 65T50810	Blinks 	Beep (one time from interior buzzer)	The “LOCK” part of the driving mode switch is pushed when the vehicle speed is more than 60 km/h. (#1) Refer to “Selecting LOCK mode” in this section.
 NOT LOCKABLE SET TO SNOW MODE FIRST 65T50820	Blinks 	Beep (one time from interior buzzer)	The “LOCK” part of the driving mode switch is pushed without selecting the SNOW mode. (#1) Refer to “Selecting LOCK mode” in this section.

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

OPERATING YOUR VEHICLE

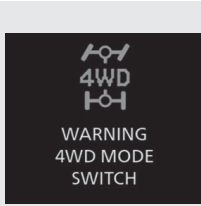Warning and Indicator Message	Master Warning Indicator Light	Sound	Cause and Remedy
 WARNING 4WD MODE SWITCH 65T50830	Blinks 	Beep (one time from interior buzzer)	There may be a problem with the driving mode switch. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

Cruise Control (if equipped)

The cruise control system allows you to maintain a steady speed without keeping your foot on the accelerator pedal. The controls for operating the cruise control system are on the steering wheel.

You can use the cruise control system under the following conditions:


- For manual transmission vehicle, the gear position is in 3rd, 4th or 5th. The vehicle speed is about 40 km/h or higher.
- For automatic transmission vehicle, the gearshift lever is in "D" position or the gear position is in 3rd, 4th, 5th or 6th in the manual mode. The vehicle speed is about 40 km/h or higher.
- For e-CVT vehicle, the gearshift lever is in "D" position. The vehicle speed is about 30 km/h or higher.

WARNING

To help avoid loss of vehicle control, do not use the cruise control system when driving in heavy traffic, on slippery or winding roads, or on steep downhills.


Setting Cruising Speed Cruise control switch

Vehicles without hybrid system

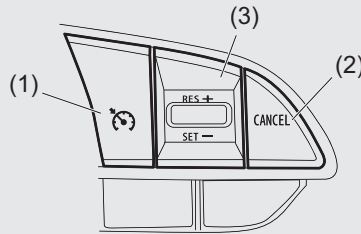

56RM03017


Vehicles with hybrid system

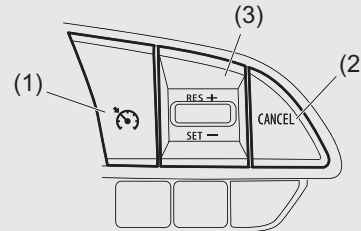

76TS50920


- (1) Cruise switch
- (2) "CANCEL" switch
- (3) "RES +/SET -" switch

Instrument cluster Type A

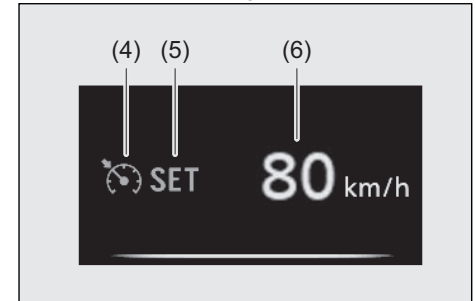

76TS51240

Instrument cluster Type B

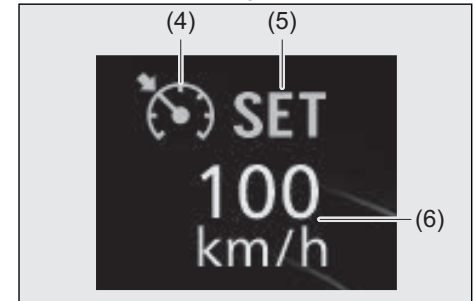

76TS51250

- (4) Cruise indicator
- (5) "SET" indicator
- (6) Set speed indication

OPERATING YOUR VEHICLE

- 1) Turn on the cruise control system by pushing cruise switch (1). When the cruise indicator (4) comes on, you can set cruising speed.
- 2) Accelerate or decelerate to the desired speed.
- 3) Push down the "RES +/SET -" switch (3) and then "SET" indicator (5) comes on. Also, set speed indication (6) comes on at the same time. Take your foot off the accelerator pedal and the set speed will be maintained.

WARNING

If the cruising speed is set by accident, you cannot decelerate or could lose control of the vehicle. This could lead to an accident, resulting in severe injury or death.

Turn off the cruise control system and check that the cruise indicator (4) is off when the system is not in use.

NOTE:

Established cruising speed may differ a little from the speed meter indication depending on the road conditions.

Changing Speed Temporarily

When the cruising speed is maintained, you can temporarily accelerate or decelerate.

To accelerate, depress the accelerator pedal. When you take your foot off the pedal, your vehicle will return to the set speed.

To decelerate, depress the brake pedal. The set speed will be canceled and "SET" indicator (5) will go off.

For manual transmission vehicle and automatic transmission vehicle, to resume the previously set speed, push up the "RES +/SET -" switch (3) and turn on "SET" indicator (5) again when vehicle speed is above 40 km/h. The vehicle will accelerate to the previously set speed and maintain its speed.

For e-CVT vehicle, to resume the previously set speed, push the "RES +" side of the "RES +/SET -" switch (3) and turn on "SET" indicator (5) again when vehicle speed is above 30 km/h. The vehicle will accelerate to the previously set speed and maintain its speed.

NOTE:

For automatic transmission vehicle, when the cruising speed is maintained, you cannot decelerate by using the engine brake even if you downshift from higher gear to 3rd in the manual mode.

To decelerate while the cruise control is on, depress the brake pedal or push down the "RES +/SET -" switch (3).

Changing Cruising Speed

Using the accelerator pedal

To reset at a faster cruising speed, accelerate to the desired speed using the accelerator pedal and push down the “RES +/SET –” switch (3). The new speed will be maintained.

Using the brake pedal

To reset at a slower cruising speed, decelerate to the desired speed using the brake pedal and push down the “RES +/SET –” switch (3). The new speed will be maintained.

NOTE:

When the brake pedal is depressed, “SET” indicator (5) will go off until you reset the cruising speed.

Using “RES +/SET –” switch

To reset at a faster cruising speed, press repeatedly or hold push up the “RES +/SET –” switch (3). Vehicle speed will steadily increase. When you release the switch, the new speed will be maintained.

To reset at a slower cruising speed, press repeatedly or hold push down the “RES +/SET –” switch (3) until the vehicle has slowed to the desired speed, and then release the switch. The new speed will be maintained.

NOTE:

- *You can adjust the set speed by approximately 1 km/h by pushing “RES +/SET –” switch quickly.*
- *For manual transmission vehicle and automatic transmission vehicle, when the current vehicle speed is about 10 km/h or more faster than the previously set speed, the cruising speed cannot be decreased even if the “RES +/SET –” switch (3) is pushed down.*
- *For manual transmission vehicle and automatic transmission vehicle, when the current vehicle speed is about 10 km/h or more slower than the previously set speed, the cruising speed cannot be increased even if the “RES +/SET –” switch (3) is pushed up.*
- *For e-CVT vehicle, when the current vehicle speed is about 5 km/h or more faster than the previously set speed, the cruising speed cannot be decreased even if the “RES +/SET –” switch (3) is pushed down.*
- *For e-CVT vehicle, when the current vehicle speed is about 5 km/h or more slower than the previously set speed, the cruising speed cannot be increased even if the “RES +/SET –” switch (3) is pushed up.*

Canceling Cruise Control

“SET” indicator (5) will go off and the cruise control will be canceled temporarily with the following conditions:

- Push “CANCEL” switch (2).
- Depress the brake pedal.
- For manual transmission, depress the clutch pedal.
- For automatic transmission vehicle, downshift from 3rd to 2nd in the manual mode.
- For manual transmission vehicle and automatic transmission vehicle, the vehicle speed falls more than about 20 percent from the set speed.
- For manual transmission vehicle and automatic transmission vehicle, any time the vehicle speed falls below 40 km/h.
- For manual transmission vehicle and automatic transmission vehicle, when the vehicle skids and ESP® is activated.
- For e-CVT vehicle, the current vehicle speed becomes below 30 km/h.
- For e-CVT vehicle, the current vehicle speed falls more than 16 km/h, compared with the set speed.
- For e-CVT vehicle, when ESP® is activated.
- For e-CVT vehicle, when TRC is activated for a certain period of time.

OPERATING YOUR VEHICLE

For manual transmission vehicle and automatic transmission vehicle, to resume the previously set speed, push up the “RES +/SET –” switch (3) to turn on “SET” indicator (5). The vehicle speed must be above 40 km/h when the vehicle is not under the above conditions.

For e-CVT vehicle, to resume the previously set speed, push the “RES +” side of the “RES +/SET –” switch (3) to turn on “SET” indicator (5). The vehicle speed must be above 30 km/h when the vehicle is not under the above conditions.

To turn off the cruise control system, push cruise switch (1) and check that the cruise indicator (4) is off.

Also, if the malfunction indicator light in the instrument cluster comes on or blinks, the cruise control system will be turned off.


NOTE:

If you turn off the cruise control system, the previously set speed in the memory is cleared. Reset your cruising speed again.

SUZUKI SAFETY SUPPORT (if equipped)

Head-up Display

Head-up display (HUD) will show the information such as the current vehicle speed and the gear position in the driver's front vision.

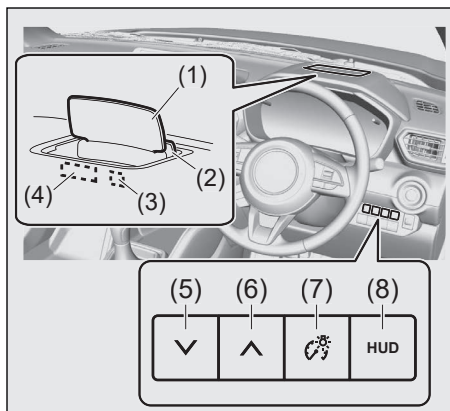

76TS50230

- (1) Display
- (2) Cover
- (3) Light-received surface
- (4) Mirror
- (5) Down switch
- (6) Up switch
- (7) Brightness control switch
- (8) HUD (Head-up display) switch

⚠ WARNING

- Do not continue to look at the head-up display while driving. Otherwise, you may not find the vehicle, pedestrians or obstacles in front of you. This could result in an accident.
- Adjust the display brightness and position to your preference not to obstruct a safe driving. If adjustment is not performed properly, it could result in an accident.
- Operate the head-up display while the vehicle is stopped. If you attempt to operate the display while driving, you may not look ahead carefully. This could result in an accident.
- If the hybrid system is operating while changing certain settings on the settings display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

CAUTION

When the head-up display is moving, do not put your hands closer to it. Your hands may get caught in it and get injured.

NOTICE

- Performing the following points may prevent the proper operations of the head-up display and result in its malfunction. Observe these points.
 - Do not adjust the display angle by your hands. Do not open or close the cover by your hands.
 - Do not place any object or drink on the cover, its peripheral part and the light-received surface.
 - Do not place stickers, etc. to the display, the inside of the cover and the light-received surface.
 - Do not shine a strong light on the light-received surface.
- If you drop any object inside the cover, carefully pick it up not to injure the part such as the mirror.
- Ask your Maruti Suzuki authorized workshop, if you drop any object inside the place where the head-up display is stored and you cannot pick up the object or the head-up display is stuck inside.
- Do not wipe the HUD cover forcefully. When you wipe it off, use a soft cloth.
- To prevent 12-volt battery discharge, ensure that the hybrid system is operating while changing the settings of the head-up display.

NOTE:


- If you wear your sunglasses, you may have trouble seeing the displayed information. In this case, adjust the brightness or take your sunglasses off.
- You may have trouble seeing the displayed information in the following cases.
 - On a rainy day or a day with strong sunlight
 - When driving on snowy roads or when a wet road is shining after the rain
 - When the headlights from your vehicle is reflected to the vehicle in front of you at night
 - When the position of the vehicle in front of you and the displayed information get overlapped
 - Depending on the driving posture
- Under the very cold condition, the vehicle speed on the speedometer and the one on the head-up display may differ a little.
- When the head-up display gets hot, such as after parking the vehicle under the blazing sun, the displayed information may temporarily become dark for its protection. When the head-up display gets hotter, the displayed information will temporarily disappear and the message will be shown on the information display of the instrument cluster.
 - When the temperature becomes low, the above condition will be canceled. However, if the above condition is kept, ask your Maruti Suzuki authorized workshop

OPERATING YOUR VEHICLE

- You can turn off the message on the information display in high temperature by changing the setting (customization). For details, refer to “Setting Mode” in “INSTRUMENT CLUSTER” section.

Activation of the head-up display

When you press the engine switch to ON mode and the engine starts, the head-up display will automatically appear and the following information will be displayed as necessary.

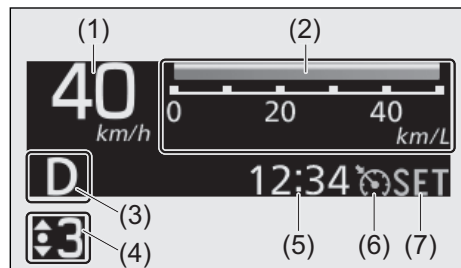

- (1) Vehicle speed
- (2) Standard display
- (3) Gear position (for Automatic Transmission vehicles / e-CVT vehicles) (if equipped)
- (4) Gearshift indicator (for Manual Transmission vehicles) (if equipped)
- (5) Clock
- (6) Cruise indicator (if equipped)
- (7) “SET” indicator (if equipped)

When you press the engine switch to ACC or LOCK (OFF) mode, the head-up display will be automatically stored.


NOTE:

- Even if you stop the engine, the display setting will be stored.
- The vehicle speed on the head-up display and the one on the speedometer may differ a little.
- You can turn off a part of the information by changing the setting (customization).
- You can see either of UP arrow, a circle or DOWN arrow on the left side of the gearshift indicator (4).

Operation of the head-up display

Operate the head-up display while the vehicle is stopped. You cannot adjust the brightness and the displayed position while driving.

Head-up display operation switch

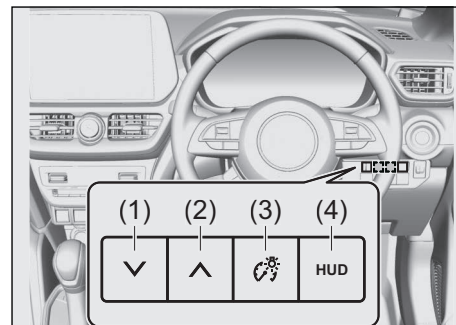

- (1) Down switch
- (2) Up switch
- (3) Brightness control switch
- (4) HUD (Head-up display) switch


ON / OFF operation of the head-up display

If you press and hold the HUD (Head-up display) switch (4) with the engine on, you can make the head-up display appear or store.

NOTE:

If you store the head-up display inside by operating the HUD (Head-up display) switch and stop the engine, the head-up display will not appear automatically on the next engine start.

ON / OFF operation of the intersection guidance display (When using Android Auto™*1 or Apple CarPlay*2 on infotainment system)

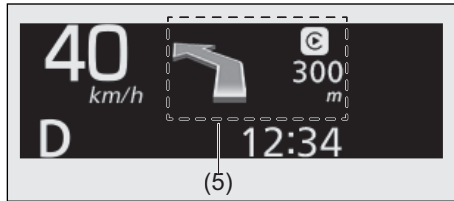

55T050760

(5) The intersection guidance display (The above image is an example of Apple CarPlay.)

NOTE:

- For ON / OFF operation of the intersection guidance display, you need to change the setting on the information display. For details, refer to "Setting

Mode" in "INSTRUMENT CLUSTER" section.

- The intersection guidance display on the head-up display and the one on the navigation system may differ a little.

*1: Android Auto™ may not be available in your country or region.

For details about Android Auto™, refer to <http://support.google.com/androidauto>


*2: Apple CarPlay may not be available in your country or region.

For details about Apple CarPlay, refer to <https://www.apple.com/ios/carplay/>

Brightness control

Brightness of the display will be automatically adjusted depending on the surrounding conditions. You can adjust the brightness to your preference by the following steps.

- Press the brightness control switch (3).
- To make the display brighter, press "∧" of the up switch (2). To make the display darker, press "∨" of the down switch (1).

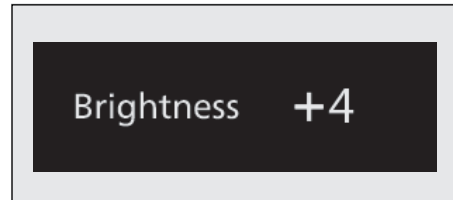


55T050770

NOTE:

- You can adjust brightness of the display from -10 to +10 (21 levels) by the brightness control switch.
- Depending on brightness which was automatically adjusted, you may not be able to make the display brighter or darker.
- Regardless of the driver's seat conditions, brightness may be automatically changed in the following conditions.
 - When driving in a tunnel or around its gateway
 - When driving on a road where there is a structural object over your head

Adjustment of the displayed position

Press the down switch (1) or up switch (2) to adjust the displayed position of the head-up display.

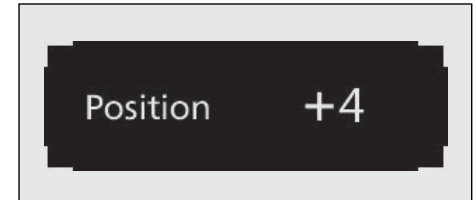

76TS50270

NOTE:


- You can adjust the displayed position of the head-up display from -12 to +12 (25 levels) by the up/down switch.

OPERATING YOUR VEHICLE

Displayed information of the head-up display

Activation / ending of the head-up display

When you press the engine switch to ON mode, the head-up display will automatically activate and the following images will be displayed by turns.

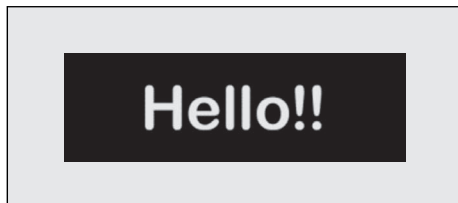


55T050790

Standard display of the head-up display

Every time you press the HUD (Head-up display) switch, the displayed information will be changed as follows.

- The following images are typical examples; they depend on the vehicle type.

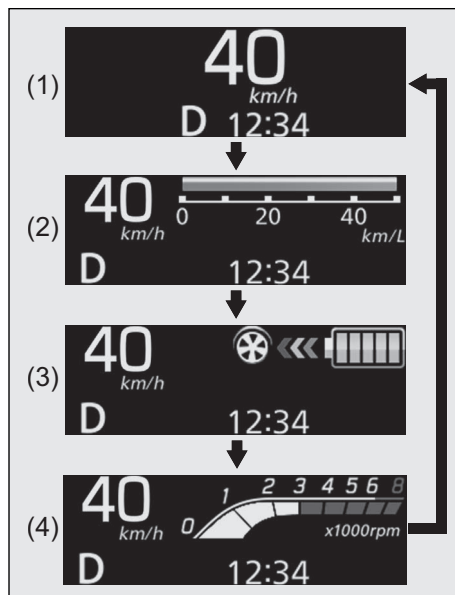

83S05801


- (1) Vehicle speed
- (2) Instantaneous fuel consumption
- (3) Energy flow
- (4) Tachometer

NOTE:

- Even if you stop the engine, the display setting will be stored.
- The vehicle speed on the head-up display and the one on the speedometer may differ a little.


When operating the air conditioner

If you operate the air conditioner with instantaneous fuel consumption, tachometer displayed, the following images will be displayed.

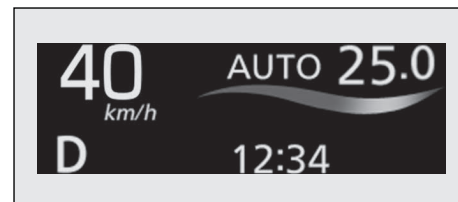


83S0581

When you press "AUTO" switch, "AUTO" and the set temperature will be displayed for a certain time.

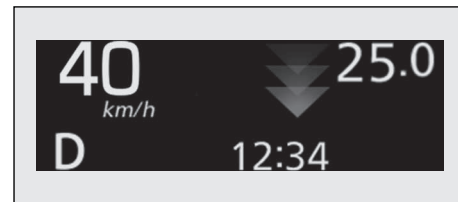

83S05821

When you operate the temperature selector, the set temperature will be displayed for a certain time.

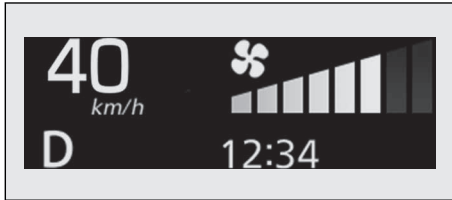

83S05830

When you operate the blower speed selector, the blower speed will be displayed for a certain time.

NOTE:



- When the vehicle speed is displayed in standard display of the head-up display, the air conditioner setting will not be displayed.
- You can hide the information of air conditioner by the setting mode on the information display. For details, refer to "Setting Mode" in "INSTRUMENT CLUSTER" section.

OPERATING YOUR VEHICLE



Interrupt display

When there is the information to tell you and you press the engine switch to ON mode, the following interrupt display will appear. Depending on the type of the display, a buzzer may sound at the same time.

- The following images are typical examples; they depend on the vehicle type.

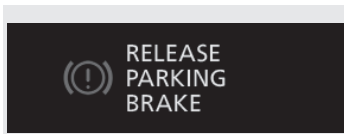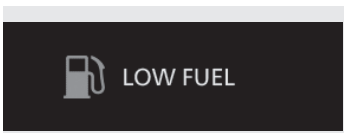Display	Buzzer	Description
 76TS50280	Chime (Once) (Only when one of the doors is not completely closed)	When one of doors, the bonnet or the fuel lid is not completely closed, the interrupt display will appear. For the vehicles with the power sliding door, if you are driving your vehicle, stop the vehicle in a safe place and close the door completely.
 55T050820	3 beeps repeating at short intervals	When the parking brake is not released while driving, the interrupt display will appear. Stop the vehicle in a safe place and release the parking brake.
 55T050830	Chime (Once)	When the fuel level is low, the interrupt display will appear. Refill the fuel tank as soon as possible.

 OPERATING YOUR VEHICLE

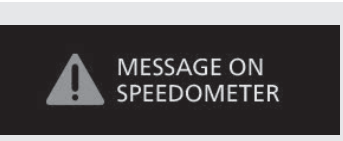Display	Buzzer	Description
 55T050840	Beeping at short intervals	The driver does not wear his/her seat belt. Stop the vehicle in a safe place and wear your seat belt. The front passenger does not wear his/her seat belt. Wear the seat belt.
 55T050850	—	When outside temperature nears freezing, this interrupt display will appear.
 55T051030	Off	The intersection guidance is displayed. (When using Android Auto™ or Apple CarPlay on infotainment system) For details, refer to “ON / OFF operation of the intersection guidance display” in this section.
 76TS50290	3 beeps repeating at short intervals or continuous short beeps	The warning message is displayed on the speedometer. Check the message on the speedometer. Consult a Maruti Suzuki authorized workshop if necessary.

NOTE:

To turn off the intersection guidance display (When using Android Auto or Apple CarPlay on infotainment system), you can change the setting on the information display. For details, refer to “Setting Mode” in “INSTRUMENT CLUSTER” section.

OPERATING YOUR VEHICLE


360 View Camera (if equipped)

The 360 view camera is the function which shows visual image for the surrounding of your vehicle on the infotainment system screen, using the front camera, the side camera (left and right) and the back camera. This helps the driver improve visibility when the driver tries to park your vehicle, go by an oncoming vehicle in a narrow road or start the vehicle with poor visibility for left and right sides of the vehicle.

NOTE:

- Use the infotainment system which corresponds with the 360 view camera.
- For detailed information on the functions and operation of the navigation system, please refer to the navigation manual.

Camera positions

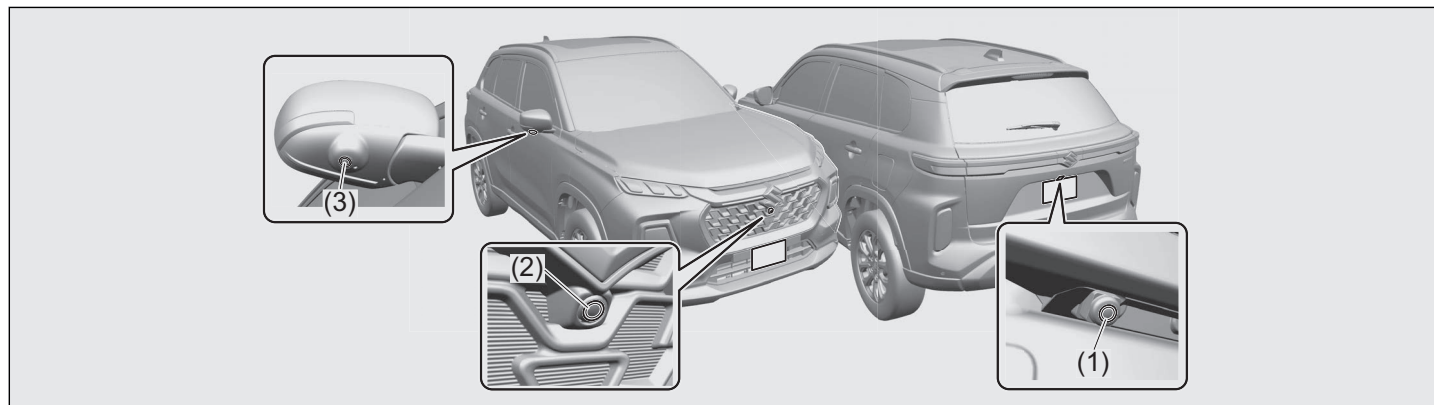

76TS50300

- (1) Back camera
- (2) Front camera
- (3) Side camera (under left and right outside rearview mirrors)

- Each camera in the above figure is a typical example; the actual equipment depends on the vehicle type.

WARNING

- The 360 view camera cannot reduce the driver's duty of care for driving operation. Use the 360 view camera only to provide driving assistance.
- The 360 view camera has limits and it may not show a person or an obstacle. Drive your vehicle slowly confirming the safety of the backward and the surrounding conditions by directly checking with your eyes and mirrors. If you drive your vehicle only by checking the 360 view camera, an accident may occur.
- The cameras are precision instruments. Do not apply excessive force to the cameras, disassemble them and modify them. Also, do not pour hot water to the cameras and poke them with a stick to remove mud or frozen snow on the cameras. Doing so may damage the cameras and cause a fire and malfunction.
- Do not use the 360 view camera, when the outside rearview mirrors are folded and any of front doors and the tailgate is not closed. The image of the surrounding area may not be displayed properly and an accident may occur.
- The guide line for the vehicle width are displayed as being wider than actual vehicle width. While driving, check directly that the area around the vehicle is safe.

NOTICE

If you use the 360 view camera for a long period of time with the engine stopped, the lead-acid battery could run out. Do not use the 360 view camera for a long period of time with the engine stopped.

NOTE:

Rough indication lines of vehicle width will be displayed more widely, compared with an actual vehicle width. Drive your vehicle by directly checking the safety of the surrounding conditions.


OPERATING YOUR VEHICLE

How to use the 360 view camera

3D view mode function

The 360 view camera will display the image of the surroundings with a view from the outside or the inside of the vehicle.

- 1) Press the engine switch to change the ignition mode to ON.
- 2) After the opening image was displayed, 3D view mode will be automatically displayed on the screen.

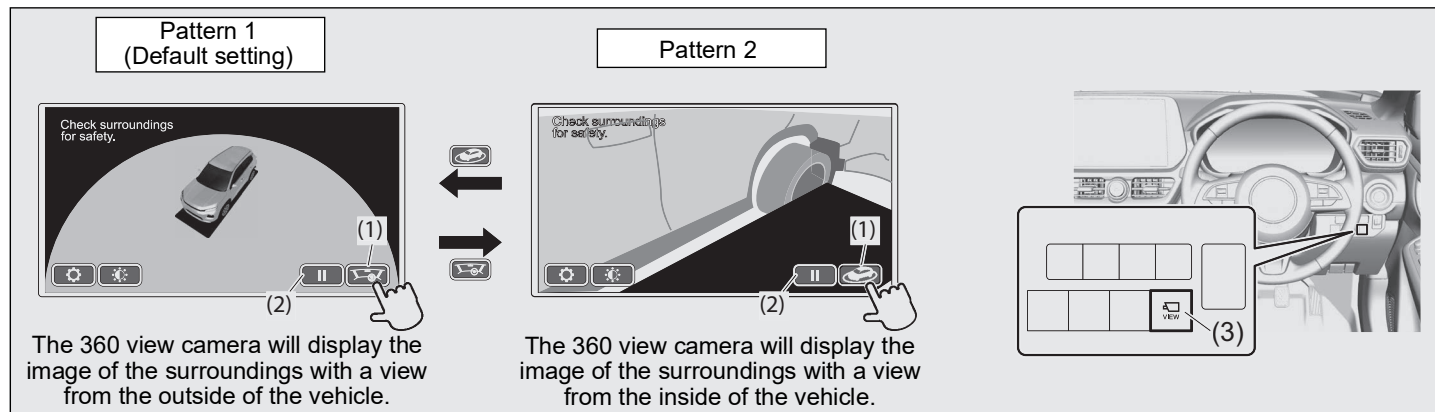

76TS50320

- 3) For switching the current image to the image with a different view, touch the image switching button (1) on the screen. For temporarily stopping the rotation of 3D view mode, touch the temporary stop or replay button (2). For restarting the rotation of 3D view mode, touch the button (2) again.


NOTE:

- *For automatic transmission vehicle or e-CVT vehicle, when you press the camera switch (3) with the gearshift lever in "P", you can display 3D view mode.*
- *For manual transmission vehicle, if you press the camera switch (3) when the gearshift lever is in other than "R", parking brake is applied and the vehicle is stopped, you can display 3D view mode.*
- *You can change the display screen of 3D view mode by changing the setting.*
- *When you press the camera switch while the opening image is displayed, 3D view mode will end. If you display 3D view mode, follow the procedure below.*
3D view mode → Press the camera switch → Change the mode of display → Press the camera switch → End of 3D view mode
- *When the ignition mode is in ACC, 3D view mode will not be displayed on the screen.*

OPERATING YOUR VEHICLE


Displaying the forward of the vehicle

- 1) Press the engine switch to change the ignition mode to ON.
- 2) Manual transmission vehicle:
Shift the gearshift lever into a position other than "R" while the parking brake is released or the vehicle is in motion.
Automatic transmission vehicle / e-CVT vehicle:
Shift the gearshift lever into a position other than "P" or "R".
- 3) Press the camera switch (1). "Top image and forward image" (default setting) will be displayed.

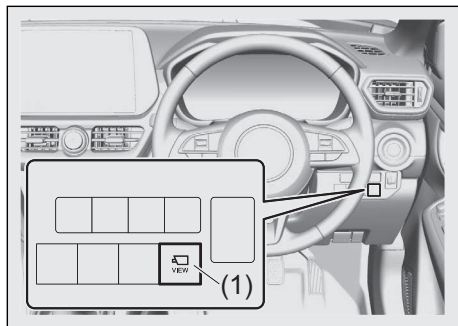

76TS50340

- 4) Every time you touch the image switching button (2), the image will be changed as follows:

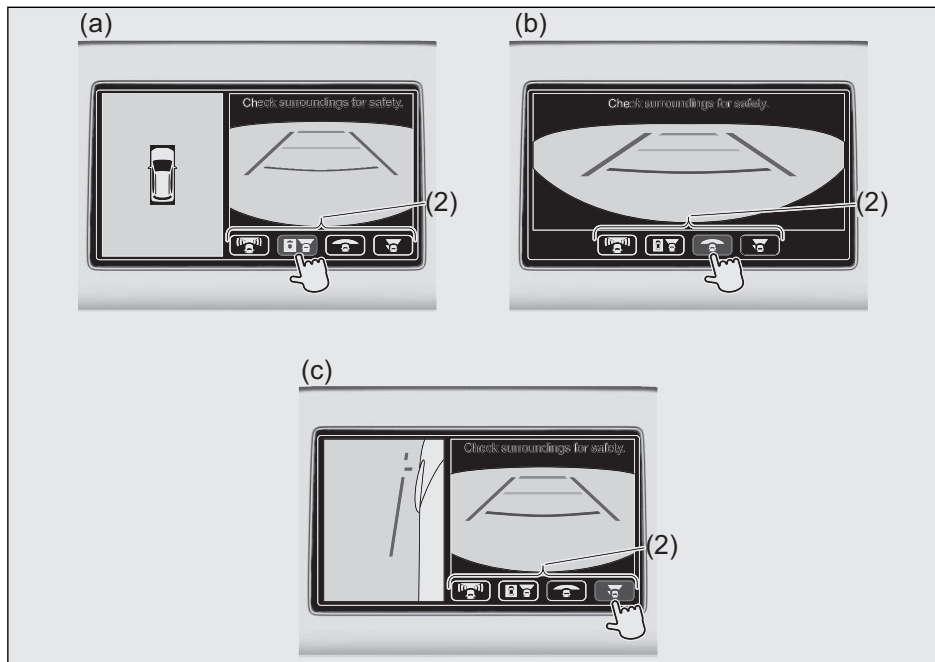

55T050360

(a)Top image and forward image (Default setting)

The 360 view camera will display the surrounding image and the forward image.

(b)Forward wide image

The 360 view camera will display the forward image widely.

(c)Side image and forward image


The 360 view camera will display the lower left image outside the front passenger's seat and the forward image.

- When you press the camera switch, it toggles in the following order.
 - 1) Navigation screen (if equipped)
 - 2) Top image and forward image (Default setting)
 - 3) Forward wide image
 - 4) Side image and forward image
 - 5) Navigation screen (if equipped)

If any screen is selected, it switches as follows.

Example: If the forward wide image is selected.

- 1) Forward wide image
 - 2) Side image and forward image
 - 3) Top image and forward image
 - 4) Navigation screen (if equipped)
- Even when you do not press the camera switch, the current image will be changed to the previous image by the following methods:
 - When 3 minutes passed after you press the camera switch
 - When you operate the infotainment system
 - When the vehicle speed becomes over about 10 km/h
 - When the vehicle speed becomes over about 10 km/h (6 mph) and you press the camera switch, you can display the side image on the screen. When the vehicle speed becomes about 10 km/h or less, the forward image will be displayed on the screen.

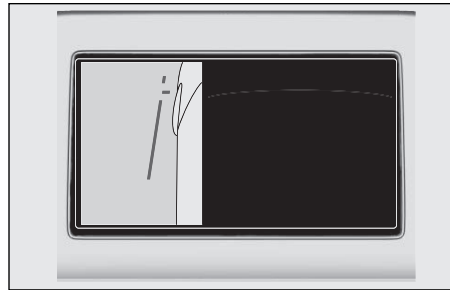

76TS51220

NOTE:

- For automatic transmission vehicle or e-CVT vehicle, for adjusting the image quality and setting up the initial display image, shift the gearshift lever into "P".
- For manual transmission vehicle, you can adjust the image quality and set up the initial display image when the gearshift lever is in other than "R", parking brake is applied, and the vehicle is stopped.
- When the ignition mode is in ACC, the camera image will not be displayed.

OPERATING YOUR VEHICLE

Displaying the backward of the vehicle


- 1) Press the engine switch to change the ignition mode to ON.
- 2) Shift the gearshift lever into "R" (Reverse). "Top image and backward image" (default setting) will be automatically displayed.

Selecting the image type with the camera switch:

- 3) Press the camera switch, and the displayed image will change in the order of (a), (b), and (c).

Selecting the image type with the image switching buttons:

- 3) Touch one of the image switching buttons (1), and the displayed image will change to the selected one.

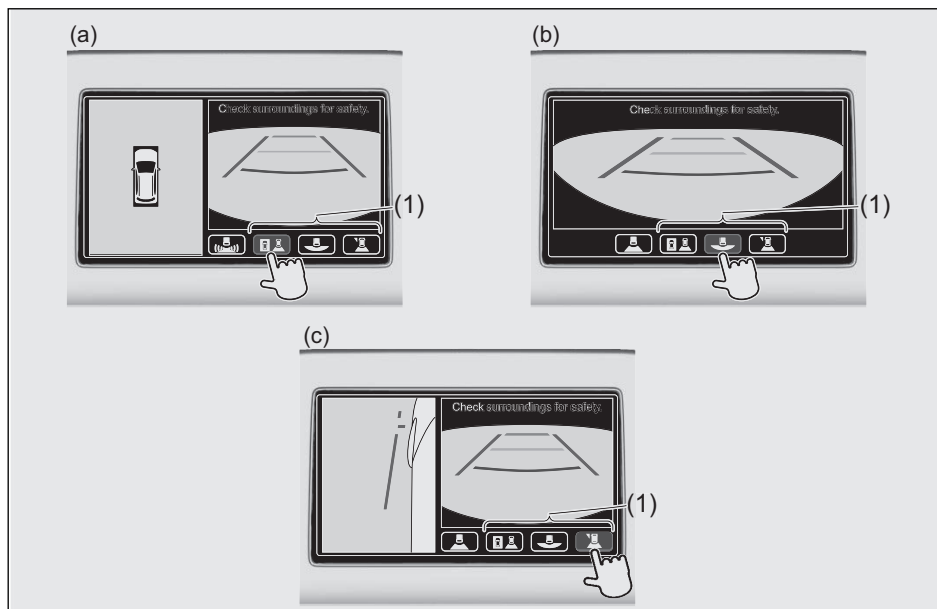

55T050371

(a)Top image and backward image (Default setting)

The 360 view camera will display the surrounding image and the backward image.

(b)Backward wide image

The 360 view camera will display the backward image widely.

(c)Side image and backward image

The 360 view camera will display the lower left image outside the front passenger's seat and the backward image.

Shifting to any position other than "R" returns the screen to what it was displaying immediately prior to entering "R". (When the front screen automatic display function is set to "ON", the image changes to that from the forward camera)

When you shift the gearshift lever from "R" to "P", the center display will be displayed.


NOTE:

- The backward image of the 360 view camera is displayed as the top priority out of all the images. However, when the infotainment system itself is being activated, the backward image will not be displayed.
- For automatic transmission vehicle or e-CVT vehicle, for adjusting the image quality and setting up the initial display image, shift the gearshift lever into "P".
- For manual transmission vehicle, you can adjust the image quality and set up the initial display image when the gearshift lever is in other than "R", parking brake is applied and the vehicle is stopped.
- When the ignition mode is in ACC, the camera image will not be displayed.

Error display on the screen

When there is an abnormality in the camera system, the following mark will be displayed on the screen.

Consult a Maruti Suzuki authorized workshop to have the camera system inspected.

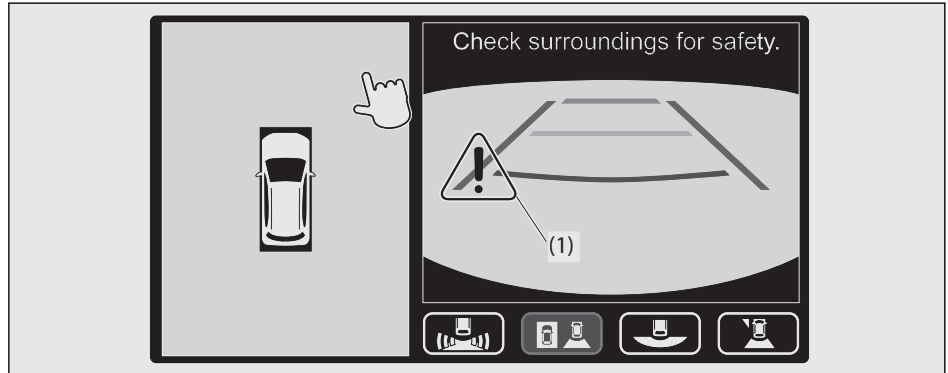


55T050380

(1) Error mark of camera system

OPERATING YOUR VEHICLE

Front and rear traffic alert

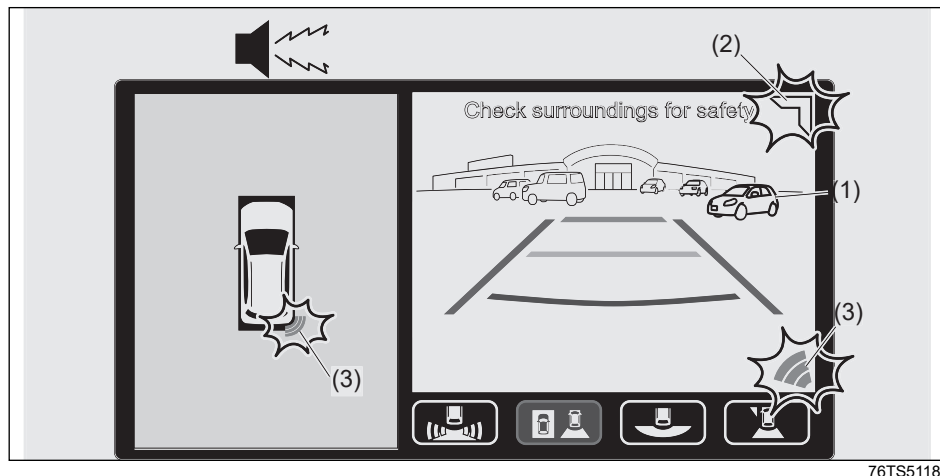

(1) Detected vehicle

While you park the vehicle in a parking lot or drive the vehicle at a very low speed, if a person or a vehicle moves from the outside to the center in the detection area of the 360 view camera, the buzzer of detection (the default setting is in OFF state) from the speaker will sound and the support indicator (2) for checking left and right directions will come on. This function informs the driver of necessity to confirm safety and evasive action such as depressing the brake pedal.

When you reverse the vehicle, the information (3) which is detected by the rear parking sensors will be displayed as well as the interior buzzer of detection sounds and the support indicator (2) for checking left and right directions comes on.


WARNING

The front and rear traffic alert cannot detect all the moving objects. Directly check safety of the surroundings with your eyes.

NOTE:

You can change the setting of the front and rear traffic alert.

Examples which the front and rear traffic alert does not activate

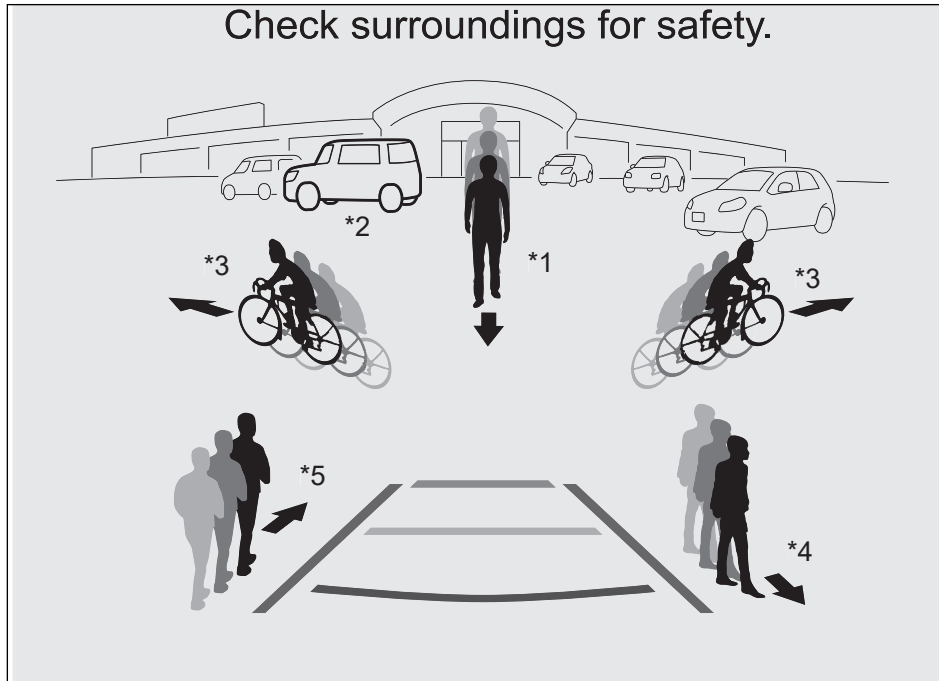

59RN05471


Situations where the front and rear traffic alert does not activate

- When a person or a vehicle approaches from front or straight behind of your vehicle *1
- When a person or a vehicle does not move *2
- When a person or a vehicle move from the center to the outside on the screen *3
- When you do not park the vehicle in a parking lot or you do not drive the vehicle at a very low speed
- When there is a long distance between a person or a vehicle to your vehicle
- When a moving object is not displayed on the screen
- When the detected target object overlap with strong light of sunshine and headlights
- When there is a big difference of camera image between a bright place and a dark place on the screen

OPERATING YOUR VEHICLE


Situations where the front and rear traffic alert may not activate

- When a person or a vehicle approaches parallel to your vehicle⁴

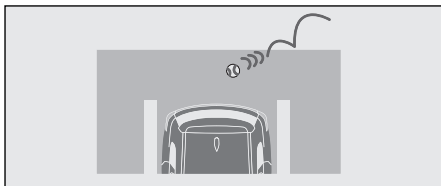


76TS50360

- When a small object such as a ball is moving
- When a moving object such as a bicycle gets across at a high speed
- When a camera lens is dirty by spider's web or mud
- When a camera lens is misted

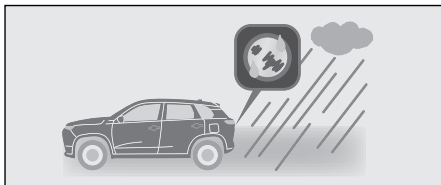


76TS50370

- When visibility is poor due to snow, rain or fog
- When a camera lens is directly exposed to light from the sun or headlights

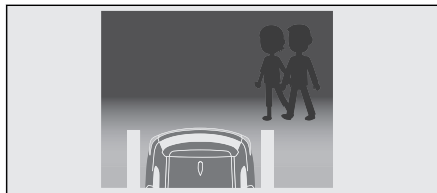

76TS50380

- When it is difficult to detect a person or a vehicle which gets across at night, because there is no street lamp
- When the body color of a vehicle or the cloths of a person that gets across is similar to the background

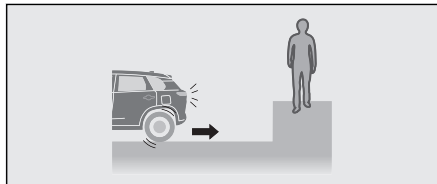

76TS50900

- When a person or a vehicle moves at a higher place than the space which you try to park your vehicle
- When a tailgate is opened
- When a strong impact is applied to a camera and its peripheral part and the installed position of the camera is misaligned
- When the detection area is misaligned by inclination on the road


Situations where the front and rear traffic alert may activate by chance

- When a person or a vehicle steps away parallel from your vehicle⁵
- When a labarum outside of a convenience store or a street tree swings in the wind
- When there is a wall or a shutter which has running wavy pattern, fences, white lines, a metal lid such as a grating cover
- When the lights from signs, the turn signal lights or the reversing lights of a vehicle or your vehicle are flashing nearby
- When waterdrop or white smoke runs on a camera lens
- When the road is wet and shiny or there are puddles after the rain
- When the brightness is changed by shadow of trees or buildings
- When your vehicle is severely inclined
- When a strong impact is applied to a camera and its peripheral part and the installed position of the camera is misaligned
- When the detection area is misaligned by inclination on the road

How to understand the displayed items on the screen

The following guide lines and buttons will be displayed on the screen.

The guide lines would provide a rough indication for your driving operations.

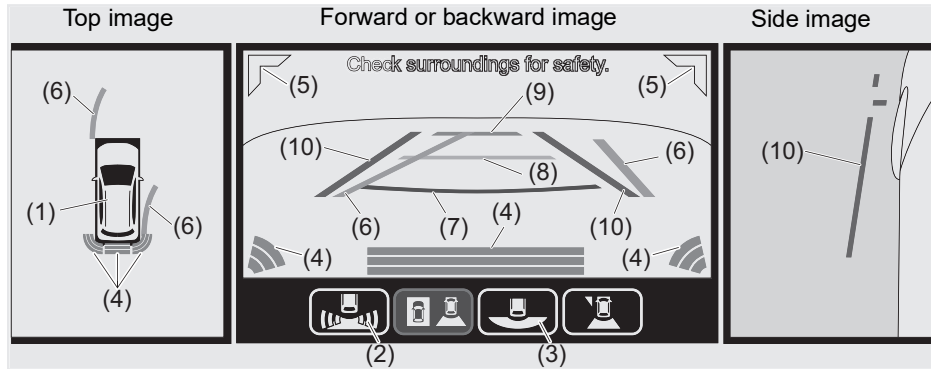

55T050511

- Each displayed item in the above figure is a typical example; it depends on the vehicle type.

No.	Displayed item	Contents
(1)		This shows the position of your vehicle.

OPERATING YOUR VEHICLE

No.	Displayed item	Contents		
(2)		This shows that the forward of your vehicle is displayed and the front and rear traffic alert is activated.	By touching the button, you can change ON/ OFF of front and rear traffic alert.	
		This shows that the backward of your vehicle is displayed and the front and rear traffic alert is activated.		
		This shows that the front and rear traffic alert is not activated.		
				
		This shows that you increases the vehicle speed and the front and rear traffic alert is not activated.		
				

No.	Displayed item	Contents
(2)		This shows that there is abnormality in the front and rear traffic alert. Consult a Maruti Suzuki authorized workshop to have the function inspected.
		
(3)		This shows that the top image and forward image are displayed.
		This shows that the top image and backward image are displayed.
		This shows that the forward wide image is displayed.
		This shows that the backward wide image is displayed.

OPERATING YOUR VEHICLE

No.	Displayed item	Contents
(3)		This shows that the side image and forward image are displayed.
		This shows that the side image and backward image are displayed.

No.	Displayed color	Item name	Contents
(4)	Green or yellow or red	Indication detected from the rear parking sensors	When the vehicle is reversing and the rear parking sensors detect a wall or an obstacle, this icon is displayed.
(5)	Yellow	Indication of front and rear traffic alert	When a person or a vehicle moves from the outside to the center in the detection area of a camera, this icon is displayed.
(6)	Green	Guide line for the course	In conjunction with your operations of the steering wheel, this shows the guide line of predicted course when your vehicle moves forward or backward. *

*: When the steering wheel is in straight position, the top image and the guide line for the course of forward/backward movement will not be displayed. When forward, the guide line for the course for Traveling Inside will not be displayed.

No.	Displayed color	Item name	Contents
(7)	Red	Guide line for the distance	This shows the guide line of the position about 0.5 m (1.6 ft) forward or backward from the center of bumper front-end or bumper back-end
(8)	Yellow		This shows the guide line of the position about 1 m (3.3 ft) forward or backward from the center of bumper front-end or bumper back-end.
(9)	Light blue		This shows the guide line of the position about 2 m (6.6 ft) forward or backward from the center of bumper front-end or bumper back-end.
(10)	Purple	Guide line for the vehicle width (vertical line)	This shows the guide line of the position slightly outside of the vehicle width (including the width of outside rearview mirrors).
		Guide line for the vehicle width (horizontal line)	This shows the guide line of the position the most front-end of the vehicle.

- As each guide line is displayed towards road surface, the distance from your vehicle to an obstacle such as the parked vehicle near your vehicle is not accurately displayed. Also, as the top image is displayed by processing the image based on a flat road surface, the position of an obstacle (such as the bumper of the other vehicle) where is higher than the road surface is not accurately displayed.
- Trapezoidal guide lines for the distance and the vehicle width which are displayed on the screen are rough indications and they depend on the actual distance and vehicle width.
- If you modify suspensions or replace a tyre by undesignated tyre, the guide lines and the top image will not be accurately displayed.

CAUTION

- The top image is the quasi-image which combines and processes several images from the cameras on the outside rear-view mirrors, the forward of your vehicle and the backward of your vehicle. Therefore, the top image may be displayed as follows:
 - A steric object is displayed as if it is fell down.
 - If the position of a steric object is higher than the road surface, the object is displayed farther away or it is invisible.
 - A part of the steric object is not displayed inside the screen frame or its position is misaligned.
- A steric object on the forward image or the backward image may not be displayed on the top image.
- On the top image, the lines on the road may be misaligned on the frame of screen or these lines may look bended. The farther distance from your vehicle there is, the much misalignment the lines have.
- When the position of a camera is misaligned, the images or the guide lines may be misaligned. Ask your Maruti Suzuki authorized workshop to have the camera inspected.
- On a snowy road or a slippery road surface, the guide line for the course and the actual course may be different.
- As the icon of vehicle on the top image is displayed by a computer graphics, it is different from color, shape and size of the actual vehicle. Therefore, the position between your vehicle and the road surface or obstacles may be different from the actual position.
- On the top image, the brightness of the image from each camera may vary depending on brightness conditions.
- After an image is switched to the other image, it may be displayed late. Until the 360 view camera is completely displayed, the image may be temporarily distorted.
- The camera of the 360 view camera uses a special lens. Therefore, the displayed distance and the actual distance may look different and the target object may be displayed as a distorted image. The farther distance from your vehicle there is, the much tendency these situations have.
- As the wide image displays a large range, it displays a significantly-distorted image. Also, the distance on the wide image looks different from the actual distance.

NOTE:

When you activate the infotainment system or there is abnormality on the touch panel, you cannot operate the buttons. In this case, wait for a while. Or, press the camera switch to go back to the original displayed screen, press the camera switch again and operate the buttons while the screen is displayed.

If you cannot operate the buttons to perform the above procedure, consult a Maruti Suzuki authorized workshop.


Difference between the camera image and the actual road surface

The position and distance which the guide lines on the screen shows vary depending on the number of passengers, the load capacity, the inclination and situation on the road surface. Directly check safety of the surroundings with your eyes.

When there is the uphill slope on your movement direction

You will see the guide line for the distance in front of the actual distance.

Backward image (Example):

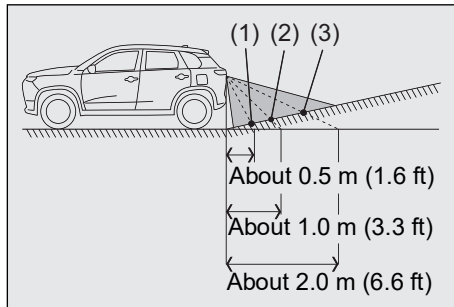

76TS50390


- (1) Red, the point which the guide line for the distance (about 0.5 m [1.6 ft]) shows
- (2) Yellow, the point which the guide line for the distance (about 1.0 m [3.3 ft]) shows

- (3) Light blue, the point which the guide line for the distance (about 2.0 m [6.6 ft]) shows

When there is the downhill slope on your movement direction

You will see the guide line for the distance in the back of the actual distance.

Backward image (Example):

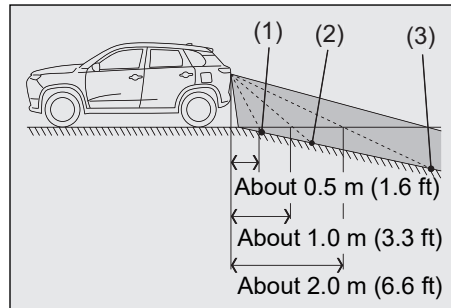


76TS50400

- (1) Red, the point which the guide line for the distance (about 0.5 m [1.6 ft]) shows
- (2) Yellow, the point which the guide line for the distance (about 1.0 m [3.3 ft]) shows
- (3) Light blue, the point which the guide line for the distance (about 2.0 m [6.6 ft]) shows

When there is the steric object near your vehicle

In this case, the distance from your vehicle to the steric object may be different from the actual distance.

Example 1:

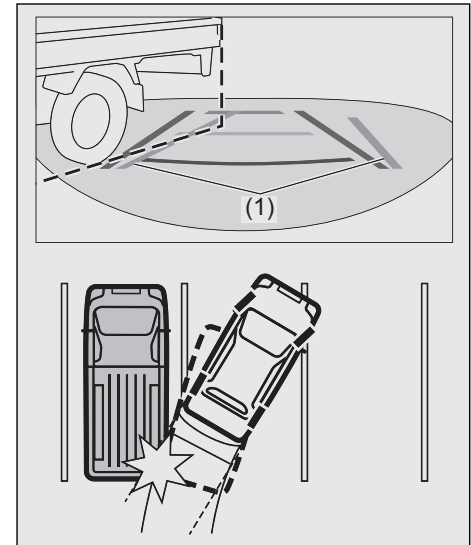


76TS51190

In the illustration, the guide line for the course (1) does not touch the body of the displayed truck. However, if the body of this truck protrudes on the actual course to which your vehicle will go, a collision may occur.

OPERATING YOUR VEHICLE

Example 2:

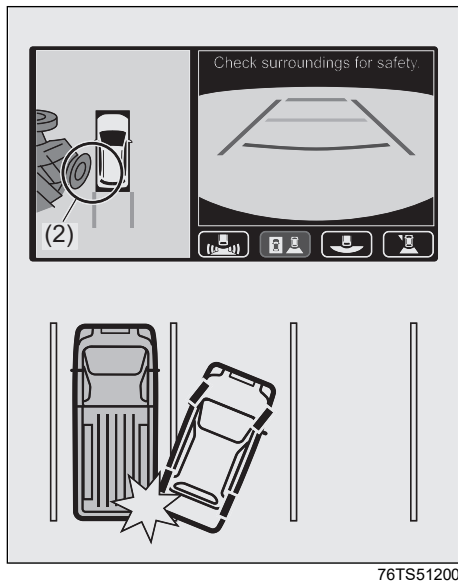

In the illustration, the top image (2) shows that there is a little distance between your vehicle and the body of the displayed truck. However, the actual distance is shorter than the displayed distance and a collision may occur.


Displayed areas on the screen

- As for the displayed areas on the screen, refer to the illustrations in “The image of view area by the 360 view camera”. However, the areas around and under the front bumper and the rear bumper will not be displayed.
- The areas above a camera will not be displayed. If an obstacle is high or the upper part of an obstacle protrudes, such as a sign, the upper part will not be displayed on the screen.
- A feeling of distance on the image of the 360 view camera is different from the actual distance.
- If there is an obstacle such as the parked vehicle on the areas which are displayed on the screen, it may be displayed different from the actual distance.
- The backward image may be inverted on the screen, which is the same as you see the image on the inside rearview mirror or the outside rearview mirrors.
- As the front camera and the back camera are installed on the places which are a little misaligned from the center of your vehicle, the forward image and the backward image will be displayed with a little misaligned positions.

The image of view area by the 360 view camera


CAUTION

The specified areas will become blind spots which will not be displayed on the screen. Make sure to directly check the safety with your eyes.

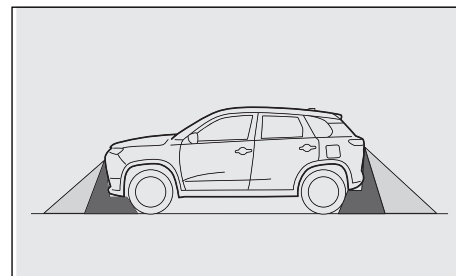

76TS50410

- The areas under the front bumper and the rear bumper or the ground surface which is indicated in the below illustration may not be displayed on the screen.

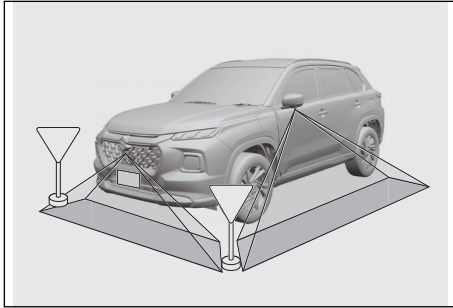

76TS50421

- On the top image, an object near the edge of areas which a camera displays and an object which is higher than the road surface may not be displayed on the screen.

NOTE:

- The image of the 360 view camera may be a little different from the actual color.
- If a moving object is displayed on the screen, its residual image may be displayed as well.

- Under the following situations, it may be difficult for the driver to see the image of the 360 view camera. However, it is not malfunction.

- At night, on a rainy day or at a dark place
- When the area around a camera is hot or cold under the blazing sun or the cold condition, or when humidity is high on a rainy day (A camera lens may be fogged)
- When strong light directly streams to a camera (White vertical lines may be displayed on the image)
- Under the lights such as the fluorescent light (The image on the screen may flicker)
- When the outside air temperature is low (The screen may get dark)
- When you park your vehicle for a long time with the engine on (Noise may be displayed on the image)
- When a camera lens is dirty or when snow or waterdrop is attached to a camera lens

Change of setting

You can adjust the image quality or change the setting of the 360 view camera and the front and rear traffic alert.

⚠ WARNING

If you do not change the setting in a safe place where there is nothing around your vehicle, an accident may occur.

Change the setting in a safe place where there is nothing around your vehicle.

NOTICE

If you change the setting for a long time with the engine off, the lead-acid battery may run out.


Change the setting with the engine on.

OPERATING YOUR VEHICLE

Adjusting the image quality

When you adjust the image quality, perform the following procedure:

- 1) Set the parking brake firmly.
- 2) Press the engine switch to change the ignition mode to ON.

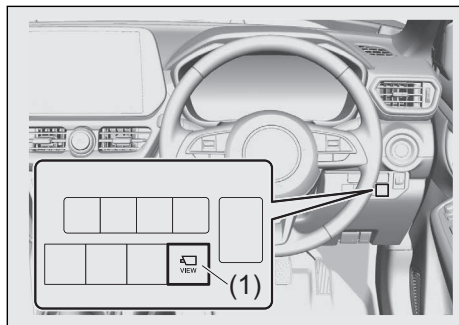

76TS50340

- 3) After the opening image is finished, press the camera switch (1)



76TS50430

- 4) 3D view mode image will be displayed. Press the button (2) for adjusting the image quality.
- 5) Adjust brightness and contrast of the image to your preference.
- 6) When the button (2) is pressed, transition from 3D view to 2D view happens on the display screen.


NOTE:

- The figure of the set brightness varies depending on ON/OFF condition of the light.
- Refer to the owner's manual of infotainment system for details.

Setting of the 360 view camera and the front and rear traffic alert

When you change the setting, perform the following procedure:

- 1) Set the parking brake firmly.
- 2) Press the engine switch to change the ignition mode to ON.

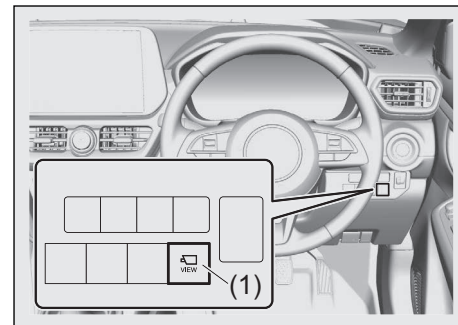


76TS50340

- 3) After the opening image is finished, press the camera switch (1).



76TS50440

- 4) 3D view mode image will be displayed. Press the button (3) for the setting.

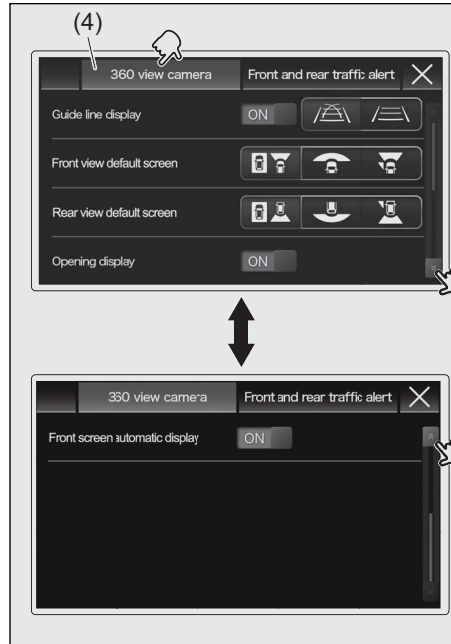



76TS50451

- 5) Touch the indication (4) to perform the setting of the 360 view camera. Change the setting to your preference. To switch to the different page, press  or .

OPERATING YOUR VEHICLE

 - The image in the above figure is a typical example; it depends on the vehicle type.

Indication	Function
 59RN05500	You can select one of the following guide lines: - Hiding guide lines - Displaying guide lines which operate simultaneously with the steering angle - Displaying fixed guide lines
 76TS50460	As the image to check the forward area of your vehicle, you can select one of the following images: - Top image and forward image (default setting) - Forward wide image - Side image and forward image
 76TS50470	As the image to check the backward area of your vehicle, you can select one of the following images: - Top image and backward image (default setting) - Backward wide image - Side image and backward image
 59RN05530	You can display or hide 3D view mode which is automatically displayed on activation.
 76TS51210	When you shift the gearshift lever from “R” to the other position than “P”, you can display or hide the camera image which is automatically displayed.

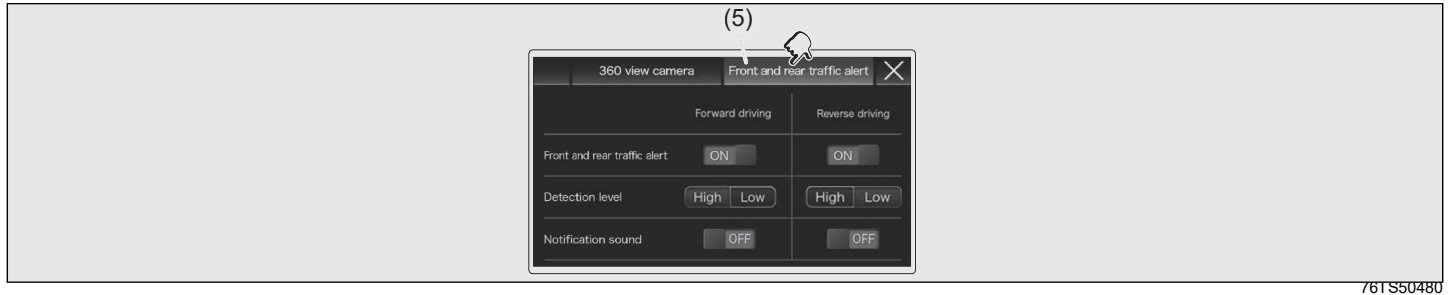

761S50480

- 6) Touch the indication (5) to perform the setting of the front and rear traffic alert. Change the setting to your preference.
- The image in the above figure is a typical example; it depends on the vehicle type.

Indication	Function	
Front and rear traffic alert 59RN05550	You can select ON/OFF condition of the front and rear traffic alert.	
Detection level 59RN05560	You can select one of the following detecting levels.	
	High: High level	Low: Low level
Notification sound 59RN05570	You can select ON/OFF condition of sound (buzzer) for the above-mentioned function. (The default setting is in OFF state.)	

OPERATING YOUR VEHICLE

Handling a camera

When applying wax, be careful not to apply any to the camera.

WARNING

- Refer “Washing by a high-pressure cleaner” in “APPEARANCE CARE”.
- As the camera is a precision device, do not subject it to strong impacts. Do not poke with a stick or other similar object to remove mud or frozen snow that has adhered to the camera. Doing so may damage the camera or cause fire or malfunction.

CAUTION

- When you strike a camera or its periphery, the image may not be displayed properly. Ask your Maruti Suzuki authorized workshop to have the camera inspected.
- When you replace a camera with new one, adjustment is necessary. Ask your Maruti Suzuki authorized workshop for adjustment.
- Do not attach any object which prevents the camera's activation to the camera and its periphery. You cannot attach the backlit license plate.

NOTICE

- **Disassembling the camera may cause damage such as loss of water resistance.**
Do not remove, disassemble or modify the camera.
- Refer to “Caring for Cameras” in “APPEARANCE CARE”.

When you doubt malfunction of camera

When the error mark of camera system is displayed on the screen

When the error mark  is displayed on the screen, there is abnormality in the camera system.

- If the error mark does not disappear, ask your Maruti Suzuki authorized workshop to have the camera system inspected.

When the image quality on the 360 view camera is poor

- When a camera lens is dirty, you may have difficulty to see the image. If water-drop, snow or dirt is attached to the camera lens, wash it with water and wipe it off with a soft cloth. If the camera lens is heavily dirty or wax is attached to the camera lens, use a mild detergent.

- When reflected light from strong sun or strong headlights from the vehicle behind your vehicle streams directly to a camera, white lines may be displayed on the image and you may have difficulty to see the image. However, this is not malfunction.

When the image and the guide lines are misaligned

In the following case, the image and the guide lines will be misaligned. However, this is not malfunction.

- Your vehicle is tilted due to the number of passengers and baggage.
- Vehicle height has changed due to alterations such as fitting tire chains or changing the tire pressure.
- Using the 360 view camera on a sloping area of road.
- When the front door or the tailgate is open.
- In cases other than those listed above, the camera may be out of position. Have the vehicle inspected by your Maruti Suzuki authorized workshop.

When the steering wheel is straight but the course guide line is curved

This could be due to a malfunction in the camera system. Have the vehicle inspected by your Maruti Suzuki authorized workshop.

License Information

The software in the 360 view camera includes open software. The license information is as follows:

[T-Kernel]

This Product uses the Source Code of T-Kernel under T-License granted by the T-Engine Forum (www.tron.org).

[OpenGL ES]

SGI FREE SOFTWARE LICENSE B (Version 2.0, Sept. 18, 2008)

Copyright (C) [dates of first publication] Silicon Graphics, Inc. All Rights Reserved. Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:


The above copyright notice including the dates of first publication and either this permission notice or a reference to <http://oss.sgi.com/projects/FreeB/> shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL SILICON GRAPHICS, INC. BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of Silicon Graphics, Inc. shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization from Silicon Graphics, Inc.

OPERATING YOUR VEHICLE

Parking Sensors

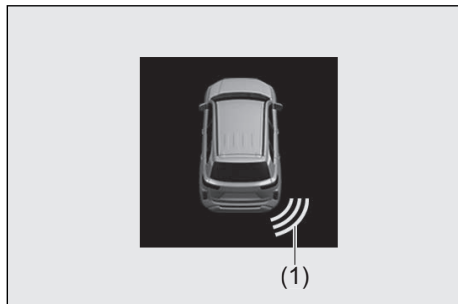

76TS51100

(1) Symbol representing an obstacle detected by parking sensor*

* This symbol shows that an obstacle is located on the right rear of vehicle.

- The parking sensor system uses ultrasonic sensors to detect obstacles near the rear bumper. If obstacles are sensed while you are parking or moving the vehicle slowly, the system warns you by sounding a buzzer and displaying symbols representing the obstacles on the information display in the instrument cluster.
- The system emits an ultrasonic wave and the relevant sensor detects the return of the wave reflected by an obstacle. The system measures the time taken by the ultrasonic wave to reach the

obstacle and return from it, from which it determines the obstacle's position.

- The parking sensor function can be used when the engine switch is pressed to change the ignition mode to ON, the gearshift lever is in the "R" position and the parking sensor switch is in "ON" position. This function is helpful in the following cases: pulling over to the curb; parallel-parking the vehicle; steering the vehicle into a garage; driving along an alley; and moving slowly in a place with obstacles.

NOTICE

Parking sensors are only for driver's assistance.

NOTE:


When the gearshift lever is shifted to the "R" position, a buzzer will sound once.



WARNING

- **The parking sensor warns you of obstacles with buzzers and by showing you the location of the obstacles on the information display. However, you must still pay full attention yourself while driving.**
- **The sensors can detect obstacles only within a limited area and only when the vehicle is moving within a limited speed range. So, in tricky areas, you must move the vehicle slowly while checking around it using your direct vision or rearview mirrors. There is increased risk of an accident if you control the vehicle relying only on the parking sensor.**

Sensor Locations

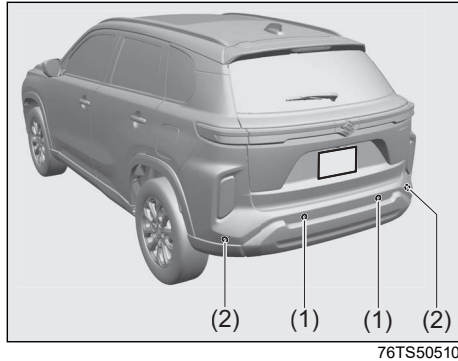

- (1) Rear center sensors (2 places)
- (2) Rear corner sensors (2 places)

NOTICE

- Avoid hitting the sensor areas or directing the nozzle of a high-pressure car washer onto the sensor areas. Otherwise, the sensors may be damaged.
- If the bumper hits a hard object, the sensors on it may not work properly. If this occurs, have the sensors inspected by a Maruti Suzuki authorized workshop.


Working sensors

The sensors work depending on the gearshift lever position as follows:

Gearshift lever position		Manual transmission		Automatic transmission / e-CVT		Parking brake
		R	N, 1st – 5th	R	N or D	
Rear sensors	Center	On	Off	On	Off	No relation
	Corner	On	Off	On	Off	No relation

OPERATING YOUR VEHICLE

Approximate areas where obstacles can be detected

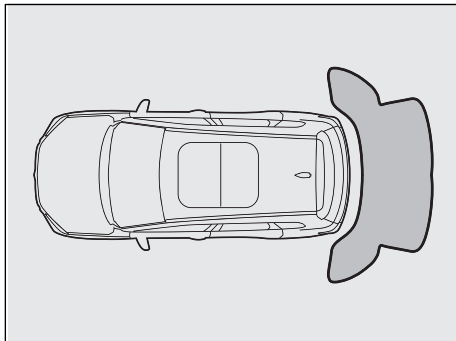

76TS50520

- An obstacle within about 20 cm (8 in) from a sensor or just below a sensor is not detectable.
- The sensors can detect obstacles such as a wall up to about 1.5 m (5 ft) from the rear of vehicle.

WARNING

- Under the following conditions, the parking sensor system may not work normally because the sensors cannot detect obstacles correctly.
 - Sensors are covered with mud, ice or other materials (Such materials must be removed for normal operation).
 - Sensors are wet from water splashes or heavy rain.
 - Sensors are covered by a hand, sticker, accessory, etc.
 - There is an accessory or other object attached within the sensor's sensing area.
 - Items such as tow hooks, commercially available corner poles, radio antenna, etc. are installed on the bumper.
 - The height of the bumper is changed due to alteration to the suspension or other causes.
 - The sensor areas are extremely hot from direct sunlight or cold due to freezing weather.
 - The vehicle is on a rough surface, slope, gravel road or grass field.
 - The vehicle is at a steep angle.

(Continued)

WARNING


(Continued)

- Sensors have intercepted ultrasonic noise from another vehicle's horn, engine, air braking system (large vehicles), or parking sensor.
- Obstacles are too close to the sensors.
- Sensors are at an angle to a highly reflective object such as glass (Ultrasonic waves are not reflected back from the obstacle).
- Sensors may not be able to correctly detect the following types of obstacles:
 - Objects made of a thin material like wire netting and ropes.
 - Square-shaped curbstones or other objects with sharp edges.
 - Tall objects with a large upper part like a road sign.
 - Low-profile objects such as curbstones.
 - Sound-absorbing objects such as cotton and snow.

NOTE:

- *Thin poles or obstacles lower than the sensors may become undetectable as the vehicle moves closer to them even if they have been detected from longer distances.*
- *The system may calculate the distance to a road sign or similar obstacle to be shorter than the actual distance.*

Obstacle Indication by Parking Sensor

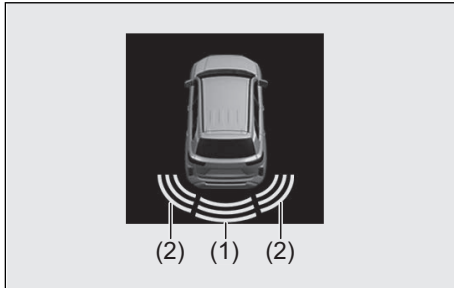

76TS51110

- (1) Obstacle detected by rear center sensors
- (2) Obstacle detected by rear corner sensors

- Upon detecting an obstacle, the parking sensor causes an interior buzzer to sound and a symbol representing the obstacle appears on the information display in the instrument cluster.
- A different symbol is displayed depending on the direction and distance of the obstacle.
 - A buzzer located behind the rear seat sounds when a sensor at the rear detects an obstacle.
 - Warnings when obstacles are detected by rear sensors

Distance (approx.)		Buzzer	Symbol
Center sensors	60–150 cm (24–59 in)	Short beeps at long intervals	Three lines
45–60 cm (18–24 in)		Short beeps at short intervals	
35–45 cm (14–18 in)		Short beeps at very short intervals	Two lines
Less than 35 cm (14 in)		Continuous beep	One line

NOTE:

- *Symbols are displayed with a short delay after the detection of obstacles.*
- *If the system detects multiple obstacles simultaneously, the display shows all of their positions using the corresponding symbols. However, the buzzers will sound only for the nearest obstacles.*

OPERATING YOUR VEHICLE

Warning and Indicator Messages

If there is a problem or warning regarding the parking sensor system, a message is displayed on the information display in the instrument cluster, and a symbol blinks and the buzzer sounds. If a message is displayed, follow its instruction.

The buzzer sounds intermittently. The indicated sensor is contaminated. Wipe it clean with a soft cloth. If the buzzer does not stop after wiping, there may be problem with the parking sensor system.

Have your vehicle inspected by a Maruti Suzuki authorized workshop.

Message	Symbol	Probable cause and remedy
Instrument Cluster (Type A)		
	Two blinking lines in a sensor location	There may be a problem with the parking sensor system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.
	One blinking line in a sensor location	The indicated sensor is contaminated. Wipe it clean with a soft cloth.

Message	Symbol	Probable cause and remedy
Instrument Cluster (Type B)		
	Two blinking lines in a sensor location	There may be a problem with the parking sensor system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.
	One blinking line in a sensor location	The indicated sensor is contaminated. Wipe it clean with a soft cloth.

Rearview Camera (if equipped)

When the gearshift lever is shifted to “R” position while the ignition mode is ON, the rearview camera system automatically shows the view behind the vehicle on the display.

WARNING

The distance viewed in the rearview camera may differ from the actual distance according to the condition of road or the load the vehicle is carrying. Since the camera display area is also limited, backing up by only looking at the display may cause an accident or a crash with an object.

The rearview camera cannot replace the driver’s attention. The driver alone is responsible for parking and similar driving maneuvers.


- Use the rearview camera only to provide driving assistance.
- Always drive carefully confirming the safety of the rear and the surrounding conditions by looking directly with your eyes and using the rear view mirror.
- Check that the trunk lid is securely closed when backing up.

OPERATING YOUR VEHICLE

NOTICE

If you use the rearview camera for a long time when the ignition mode is ON, but the engine is not running, the battery may discharge.
Do not leave the ignition mode to ON for a long time when the engine is not running.

Rearview Camera Location

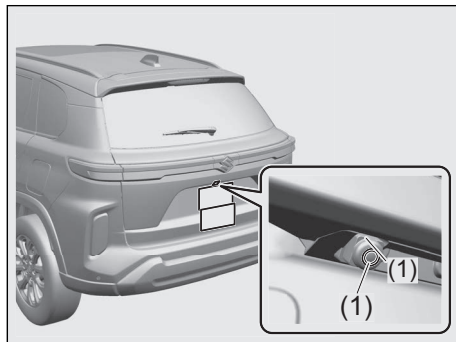

76TS50550

(1) Rearview camera

The rearview camera is installed on the tailgate.

NOTICE

The rearview camera is a precision instrument. If you strike the camera, it may be broken and cause damage resulting in a catch fire or a malfunction.

- Do not strike the camera.
- Do not remove snow or mud on the camera lens with a stick.

NOTICE

If water enters the rearview camera, it may cause a malfunction or catch fire.

Do not use high pressure water around the camera.

NOTICE

This lens is hard coated to prevent damage or discoloration. Damage or discoloration of lens may obscure the image.

- Do not use a brush to clean lens.
- Do not use alcohol, benzene or thinner to clean the lens.
- Do not use wax on the camera lens.

NOTE:

If body wax gets on the camera lens, wipe off the wax with a clean cloth dampened with mild detergent diluted with water, and then wipe the lens with a dry cloth.

How to use rearview camera

- 1) Press the engine switch to change the ignition mode to ON.
- 2) Shift the gearshift lever in "R" position.
 - The display automatically shows the view behind the vehicle.
 - When the gearshift lever is shifted from "R" to another gearshift lever position, the display returns to the previous display.


NOTE:

The rearview camera display has first priority in any display mode. However, the rearview camera display does not show the rear view while the system is initializing.


Display Range of Rearview Camera

The rearview camera display shows the area behind the rear end of the bumper. The display cannot show objects which are close to the bumper or under the bumper. The rearview camera display cannot show obstacles which are higher than the camera. Upper parts of tall objects such as road signs cannot be viewed on the display.

Display range of rearview camera

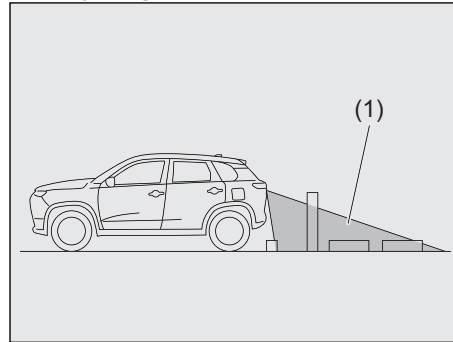

76TS50560

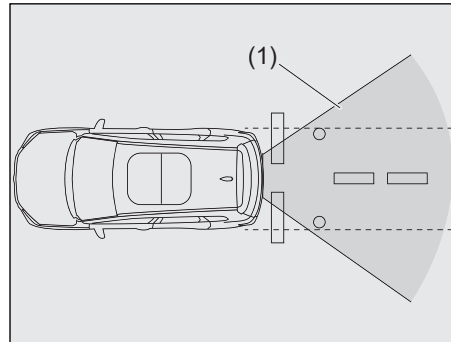

76TS50570

(1) Display range

NOTE:


- Images shown on the display from the rearview camera are reversed images (mirror images).
- The colors of objects on the rearview camera may differ from the actual object colors.
- The rearview camera display may be difficult to see under the following conditions, but this is not a system malfunction.
 - In dark areas, on a rainy day or at night.
 - When the temperature around the lens is too high/low, or the camera is wet such as on a rainy day or during periods of high humidity (dew condensation may occur on the camera lens).
 - When a foreign object such as mud or a drop of water is stuck around the camera lens.
 - When strong light directly enters the camera (vertical lines may be seen on the display).
 - Under fluorescent light (The display may flicker).
 - When the outside temperature is low (the image on the display may be darkened).

Rearview camera screen indication

The distance viewed in the rearview camera may differ from the actual distance according to the condition of the road or the load the vehicle is carrying.

OPERATING YOUR VEHICLE


Uphill incline behind the vehicle

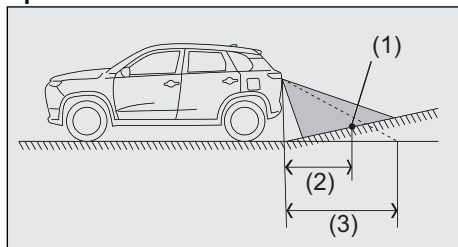

- (1) Object
- (2) Actual distance
- (3) Distance on the display

When there is an uphill incline behind the vehicle, the object shown on the display appears farther away than the actual distance.

Downhill incline behind the vehicle

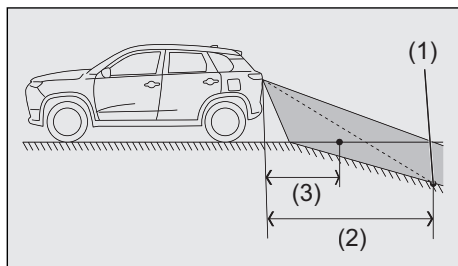

- (1) Object
- (2) Actual distance
- (3) Distance on the display

When there is a downhill incline behind the vehicle, the object shown on the display appears closer than the actual distance.

If the rear view from the rearview camera is not shown or there is a poor image

- If the rear view from the rearview camera is not shown.
 - Check that the ignition mode is ON.
 - Check that the gearshift lever is shifted to “R” position.
- If the image from the rearview camera is poor.
 - Check that the camera lens is not dirty.
 - Check that light from the sun or the beam of the headlights from the vehicle behind is not shining directly into the lens.

If the rearview camera system is still not working properly after checking the above, have the system inspected by a Maruti Suzuki authorized workshop as soon as possible.

Electronic Stability Program (ESP®)

ESP® is a registered trademark of Mercedes-Benz Group AG.

The Electronic Stability Program (ESP®) helps to control the vehicle during cornering if front wheels or rear wheels skid. It also assists you in maintaining traction while accelerating on loose or slippery road surfaces. It does this by regulating the engine's or the hybrid system's output, and by selectively applying the brakes. In addition, ESP® helps to avoid skidding by controlling braking pressure.

⚠ WARNING

The ESP® cannot enhance the vehicle's driving stability in all situations and does not control your vehicle's entire braking system. The ESP® cannot prevent accidents, including those resulting from excessive speed in turns, or hydroplaning. Only safe and attentive drive can prevent accidents.

The capabilities of an ESP®-equipped vehicle must never be used as a substitute for careful driving.

The ESP® has the following systems:

Anti-lock Brake System (ABS)

Refer to “Anti-lock Brake System (ABS)” in this section.

Brake Assist System

Refer to “Brake Assist System” in this section.

Traction Control System

The traction control system automatically helps prevent the spinning of wheels when the vehicle is started or accelerated on slippery road surfaces. The system operates only if it senses that some of the wheels are spinning or beginning to lose traction. When this happens, the system operates the front or rear brakes and reduces the engine power or the hybrid system power to limit wheel spin.

Stability Control System

The vehicle stability control system helps provide integrated control of systems such as anti-lock brakes, traction control, engine control, etc. This system automatically controls the brakes and the engine or the hybrid system to help prevent the vehicle from skidding when cornering on a slippery road surface or when turning the steering wheel abruptly.

WARNING

Always check the surrounding conditions and drive the vehicle in a safe manner, as controlling the vehicle by ESP® has limits and ESP® may not function properly depending on the surrounding conditions.

CAUTION

- **Observe the following points. Otherwise, ESP® may not operate properly or it may result in a malfunction.**
 - **Adjust the tyre pressure as specified.**
 - **When replacing tyres, use the same tyres with the size, type, and tread patterns.**
 - **Do not use the tyres which have excessively worn conditions.**
 - **Do not modify the suspension or the brake and do not change vehicle height or suspension hardness.**
 - **Do not drive the vehicle with suspension or brake excessively deteriorated.**
 - **Do not modify the engine or the muffler.**
 - **Do not install LSD (limited slip differential).**
- **When you install the snow chains, ESP® may not operate properly.**

OPERATING YOUR VEHICLE

NOTE:

- If you perform the following operations, you may hear an operation sound or a clicking sound. This means that the ESP[®] system is in the self-check mode and this does not indicate a malfunction.
 - When pressing the engine switch / the power switch to change the ignition mode to ON
 - When releasing your foot from the brake pedal, after the ignition mode is ON with the brake pedal depressed
 - When starting the engine or the hybrid system
 - When starting the vehicle after starting the engine or the hybrid system
 - When engine revolutions is high and ESP[®] operates, you may feel the change of engine revolutions or vibration of vehicle body. However, this is normal.

ESP[®] Warning Light



76TS50600

- If there is a problem in the ESP[®] system with the engine switch / the power switch in ON mode, this light will come on. While this light comes on, the following situations will occur. In this case, ask your Maruti Suzuki authorized workshop for inspection.
 - The following functions will not work:
 - Traction control system
 - Stability control system
 - Hill hold control system may not work.
 - ABS will work.
 - Depending on the malfunction condition, brake assist system may not work.

- If any of the following situations occurs, this light will blink at very short intervals of 0.2 seconds.
 - Traction control system is activated when starting or accelerating the vehicle
 - Stability control system is activated when making a sharp turn or whirling round
 - For the vehicle with the hybrid system, when the ABS is activated
- If the system is in normal condition, when you press the engine switch / the power switch to change the ignition mode to ON, this light will come on for about 2 seconds and then come off.


CAUTION

If this light blinks at very short intervals, there is high possibility that the vehicle will be stuck or skid on a slippery road surface. In this case, drive the vehicle very carefully.

NOTE:

While this light comes on, traction control system and stability control system will not be activated. However, you can use ABS.

ESP® OFF Switch

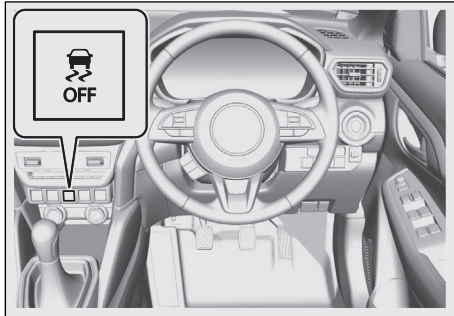


76TS50620

- In the following situations, keep pressing the ESP® OFF switch until the ESP® OFF indicator light in the instrument cluster comes on. Traction control system and stability control system will not work.
 - When placing the vehicle on the tester for automobile inspection, traction control system and stability control system needs to be deactivated.
 - If your vehicle is stuck and you try to get out of the stuck condition, traction control system may not be suitable.
- If you perform the following operations, the ESP® OFF indicator light will come off. Also, traction control system and stability control system will return to be in the activated condition.
 - Pressing the ESP® OFF switch again
 - Stopping the engine / the hybrid system and then restarting the engine / the hybrid system
- If you would like to perform normal driving after escaping from the stuck condition, press the ESP® OFF switch again. This will allow the ESP® OFF indicator light to come off and the vehicle will return to the original condition. Traction control system and stability control system will not be activated automatically. (except when stopping the engine / the hybrid system and then restarting the engine / the hybrid system)

NOTE:

For safety reasons, even if you press the ESP® OFF switch, ABS and brake assist system will not be deactivated.


- For the vehicle with the hybrid system, you can disable the traction control system. If the vehicle gets stuck in mud, dirt or snow, the traction control system may reduce power from the hybrid system to the wheels. Press the ESP® OFF switch to turn the system off to make it easier for you to rock the vehicle in order to free it. To turn off the traction control system, quickly press and release the ESP® OFF switch. The message “TRACTION CONTROL TURNED OFF” will be shown on the information display. Press the ESP® OFF switch again to turn the system back on.

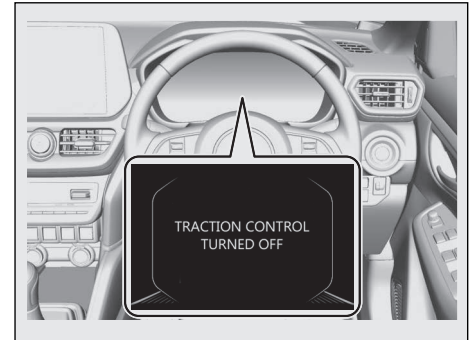

76TS51290

OPERATING YOUR VEHICLE

ESP® OFF Indicator Light

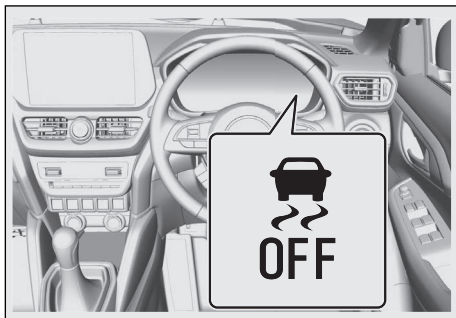


76TS50640

- If you press and hold the ESP® OFF switch with the ignition mode ON, this light will come on.
 - While this light comes on, traction control system and stability control system will not work.
- If the system is in normal condition, when you press the engine switch / the power switch to change the ignition mode to ON, this light will come on for about 2 seconds and then come off.

Hill Hold Control System

The hill hold control system is designed to assist you in starting to move up hills. When you start to move up a hill, the system helps to prevent the vehicle from rolling downward (for approximately 2 seconds) while you move your foot from the brake pedal to the accelerator pedal.

- The hill hold control system is not designed to stop the vehicle on a hill.

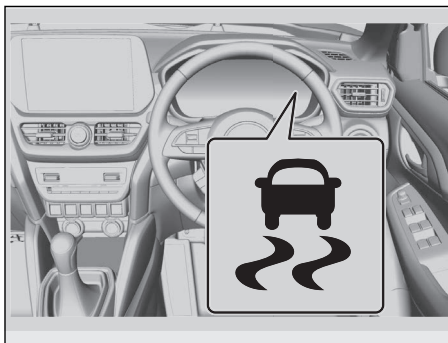

76TS50600

⚠ WARNING

- Always check the surrounding conditions and drive the vehicle in a safe manner by depressing the brake pedal as necessary, as controlling the vehicle by the hill hold control system has limits and the system may not function properly depending on the surrounding conditions.
- If you do not depress the brake pedal firmly enough, the hill hold control system may not work.
- If you release your foot from the brake pedal for more than 2 seconds, the hill hold control system will be canceled. If so, the vehicle may roll downward, which can result in an accident depending on the degree of a slope. Also, the engine may stall and the power assist for the steering and brakes will not work so steering and braking will be much harder than usual which can result in an accident or vehicle damage. After you release your foot from the brake pedal, accelerate the vehicle to move up immediately.

NOTE:

- If there is a problem with the hill hold control system, the ESP[®] warning light in the instrument cluster may come on and the hill hold control system may not work. In this case, consult a Maruti Suzuki authorized workshop.
- If you move up an excessively sharp slope, a frozen road or a mud track, or depending on laden weight, the vehicle may roll downward when you start the vehicle.
- If you move up an excessively sharp slope, a frozen road or a mud track and the hill hold control system activates, the tyres may be locked and the vehicle may not be controlled properly.

Activation conditions for the hill hold control system

The hill hold control system activates to prevent the vehicle from rolling downward for about 2 seconds if your foot is moved from the brake pedal when the following conditions are all met.

- The gearshift lever is in the forward gear or reverse position.
- The parking brake is released.
- The vehicle is on an upward slope.
- The brake pedal is depressed firmly.

NOTE:

When the hill hold control system is activated, you may hear a sound coming from the engine room, or you may feel hardness of the brake pedal. These are normal and do not indicate a malfunction.

Hill Descent Control System


The hill descent control system is designed to reduce the driver's workload when going down steep, rough and/or slippery hills where the vehicle cannot decelerate enough by engine braking alone. The hill descent control system helps to control vehicle speed by automatically engaging the vehicle's brakes, as needed, so you can concentrate on steering the vehicle.

⚠ WARNING

Do not rely excessively on the hill descent control system. The hill descent control system may not control the vehicle speed on a hill under all load or road conditions. Always be prepared to control vehicle speed by applying the brakes. Failure to pay attention and control vehicle speed using the brakes when necessary may result in loss of control or an accident.

OPERATING YOUR VEHICLE

Hill descent control switch

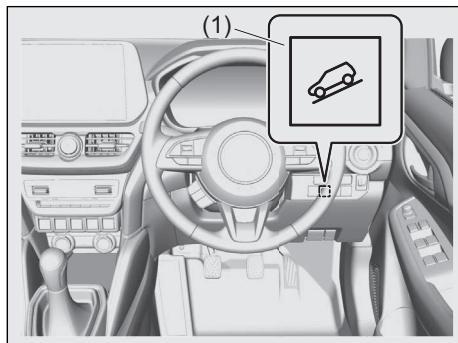

76TS50700

(1) Hill descent control switch

To activate the hill descent control system:

- 1) Turn the driving mode switch (if equipped) to "LOCK" position.
- 2) Shift the gearshift lever into a forward gear or reverse gear.
- 3) Push the hill descent control switch (1) when the vehicle speed is under 25 km/h. The hill descent control indicator on the instrument cluster will come on and the hill descent control system will be activated.

If the driving mode switch (if equipped) is in "LOCK" position, vehicle speed is maintained at approximately 10 km/h when going down a hill.

The brake/tail lights come on and the ESP® warning light blinks while the hill descent control system applies the brakes to maintain the vehicle speed.

If the accelerator or brake pedal is depressed while the hill descent control system is activated, the system will stop working temporarily. As soon as the accelerator or brake pedal is released, the hill descent control system begins to function again if the hill descent control operating conditions are fulfilled. However, when the vehicle speed exceeds 35 km/h, the hill descent control system will be deactivated automatically.

When the vehicle speed becomes under 25 km/h, the hill descent control indicator will come on and the hill descent control system will be ready to be activated.

To deactivate the hill descent control system, push the hill descent control switch again.

⚠ WARNING


- When the hill descent control system is used continuously for a long time, the temperature of the brake system may increase and the hill descent control system may be deactivated temporarily to protect the device of the brake system. The hill descent control indicator blinks to let you know the system is deactivated. Depress the brake pedal and stop the vehicle in a safe place. When the temperature of the brake system goes down, the hill descent control indicator will come on and the system is activated again.
- The hill descent control system may be activated when the gearshift lever is in "N" (Neutral) position, but engine braking will not work. Always use the hill descent control system with the gearshift lever in a forward gear or reverse gear.
- When using the hill descent control system, push the hill descent control switch and make sure that the hill descent control indicator light comes on and no warning message is indicated on the information display.

NOTE:

You may hear a sound coming from the engine room when the hill descent control system is activated. This sound is normal and does not indicate a malfunction.

To turn off the hill descent control system, push the hill descent control switch and turn off the hill descent control indicator light.

Hill descent control indicator light

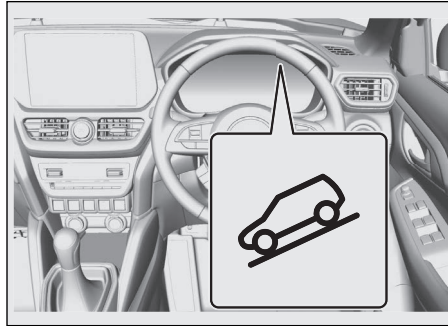

76TS50720

When the ignition mode is in "ON" position, this light comes on briefly so you can check that the light is working.

When you push the hill descent control switch and the hill descent control operating conditions are fulfilled, the hill descent control indicator comes on. If the hill descent control indicator blinks, the hill descent control will not be activated.

If hill descent control indicator light comes on or blinks, while not operating the hill descent control switch, there is a problem in this system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

If the hill descent control indicator blinks when you push the hill descent control switch, the following conditions may not be fulfilled.

- The driving mode switch (if equipped) is in "LOCK" position
- The gearshift lever is in a forward gear or reverse gear
- The vehicle speed is under 25 km/h
- The brake system is under normal operating temperature

NOTE:

If any of the following conditions occur, there may be a problem with the hill descent control system or the ESP[®] system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

- The hill descent control indicator does not come on or blink when you push the hill descent control switch.
- The hill descent control indicator stays on when driving without pushing the hill descent control switch.




75RM224

If the message shown in the above illustration appears on the information display, master warning indicator light blinks and the interior buzzer beeps, there may be a problem with the hill descent control system and the hill hold control system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

You cannot activate the hill descent control system while this message is displayed.

Braking

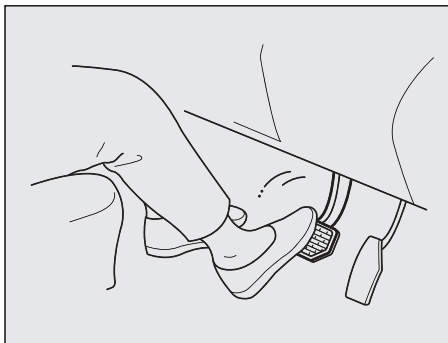

59RN05770

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h will be approximately 4 times greater than the braking distance needed at 30 km/h. Start to depress the brake pedal when there is plenty of distance between your vehicle and the stopping point, and slow down gradually.

WARNING

If water gets into the brake devices, brake performance may become poor and unpredictable. After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Power-assisted Brakes

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the pedal.

WARNING

Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.

Brake Assist System

When you slam the brakes on, the brake assist system determines it to be an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

NOTE:

- *If you quickly and forcefully depress the brakes, you may hear clicking sound by the brake assist system operation. This is normal and indicates that the brake assist system is activated properly.*
- *For the vehicle with the hybrid system, operating sound from the brake system may be heard in the following cases as well, but it does not indicate that a malfunction has occurred.*
 - *Operating sound heard from the engine compartment when the brake pedal is operated.*
 - *Motor sound of the brake system heard from the front part of the vehicle when the driver's door is opened.*
 - *Operating sound heard from the engine compartment when one or two minutes passed after the stop of the hybrid system.*

Anti-lock Brake System (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.

The ABS works automatically, so you do not need any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that the wheels are locking up. You may feel the brake pedal move a little while the ABS is operating.

WARNING

- **Always check the surrounding conditions and drive the vehicle in a safe manner, as controlling the vehicle by ABS has limits and the system may not function properly depending on the surrounding conditions.**
- **If tyre grip performance is over the limit or hydroplaning occurs, ABS cannot work properly.**

OPERATING YOUR VEHICLE

NOTE:

- If the ABS system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.
- You may hear an operation sound when you start the engine / the hybrid system or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.
- For the vehicle with the hybrid system, the ESP[®] indicator light in the instrument cluster will blink while the ABS is operating.

Braking Distance

ABS is not designed to shorten the stopping distance.

WARNING

- In the following situations, the braking distance required for a vehicle with ABS may be slightly greater than the one required for a vehicle without ABS, resulting in an accident. Drive the vehicle slowly and maintain ample distance between your vehicle and the vehicle in front of you.
 - When driving on rough roads such as unpaved or stone-paved roads
 - When driving on gravel roads or fresh snow roads
 - When driving over bumps on the roads such as joint seams
 - When passing over metal plates such as manholes
 - When snow chains are installed

NOTE:

- When applying sudden brake or applying brake on slippery roads, the braking distance required for a vehicle with ABS is almost the same as the one required for a vehicle without ABS.
- If you would like to suddenly apply brake, just push the brake pedal down firmly without pumping. Otherwise, the longer braking distance will be required.
- The ABS will not work if vehicle speed is under about 9 km/h. This depends on the road conditions.

Vibration and Sound during ABS Operation

When strongly depressing the brake pedal, you might feel vibration of the brake pedal, the steering wheel, and the vehicle body. This is due to ABS operation, and does not indicate a malfunction; continue strongly depressing the brake pedal at this time.

NOTE:

Immediately after starting the engine / the hybrid system and beginning to drive, you might temporarily hear a motor sound. This means that the systems are in self-check mode. This sound does not indicate a malfunction.


Tyres

WARNING

ABS detects each wheel rotation speed via a sensor. If tyres or wheels other than those specified in the owner's manual are used for size, type, tread pattern, or if worn conditions of tyres are different, the correct wheel rotation speed cannot be detected and ABS will not work properly. This may result in an accident. When replacing tyres, use the tyres with the size, type, and tread patterns which are specified in this owner's manual. Also, do not use the tyres which are excessively worn.


Situations where ABS may Activate by Chance when Applying Brake

- When driving on slippery roads

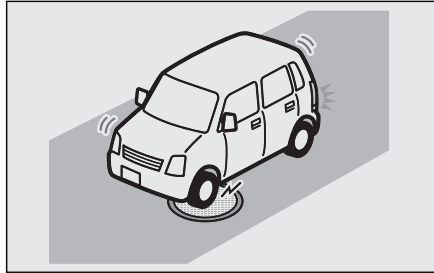


69RHS150

- Manholes

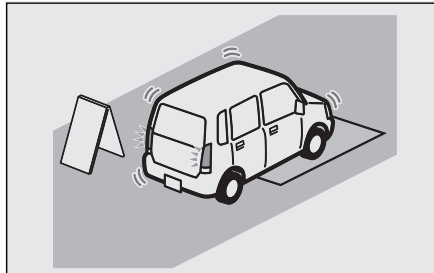

69RHS151

- Metal plates in construction zones

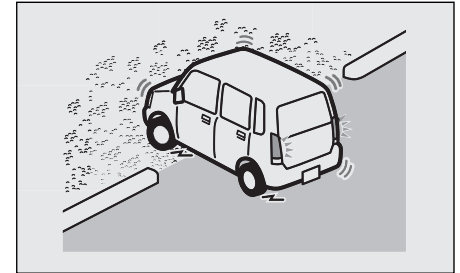


69RHS152

- Gravel roads


OPERATING YOUR VEHICLE

- When driving over joints in roads and other height differences

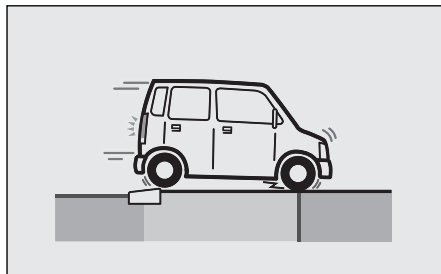

69RHS153

- Joints in roads

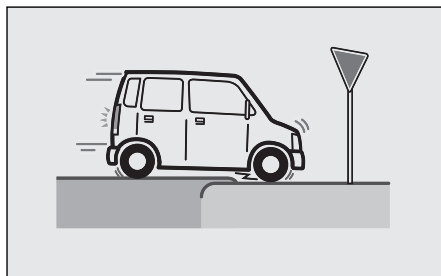

69RHS154


- Height differences in roads

- When driving on rough roads



69RHS155

- Bumpy roads

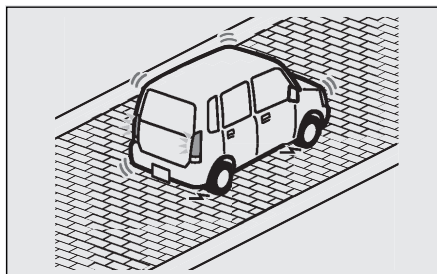

69RHS156

- Cobblestone

ABS Warning Light



76TS50660

If there is a problem in the ABS system with the engine switch in ON mode, this light will come on.

Braking Assist

This function assists you in applying more force when operating the brake. When sudden braking is applied, the time until the ABS comes into full effect is shortened.

- If you do not depress the brake pedal firmly, braking assist will not operate.
- Brake assist is not a device that provides control beyond the original braking performance.

Tyre Pressure Monitoring System (TPMS) (if equipped)

The tyre pressure monitoring system is designed to alert you when one or more of the tyres on your vehicle is significantly under-inflated. The tyre pressure monitoring system (TPMS) sensor containing a unique identification code is mounted on each wheel. The TPMS sensors transmit tyre pressure signals to the receiver of the tyre pressure monitoring system controller. When the inflation pressure of one or more tyres indicates significant under-inflation, the low tyre pressure warning light comes on.

Low Tyre Pressure Warning Light



52D305

Each tyre should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tyre pressure label. (If your vehicle has tyres of a different size than the size indicated on the vehicle placard or tyre pressure label, you should determine the proper tyre pressure for those tyres.)

As an added fuel efficiency feature, your vehicle has been equipped with a tyre pressure monitoring system (TPMS) that illuminates a low tyre pressure warning light when one or more of your tyres is significantly under-inflated.

Accordingly, when the low tyre pressure warning light illuminates, you should stop and check your tyres as soon as possible, and inflate them to the proper pressure.

Driving on a significantly under-inflated tyre causes the tyre to overheat and can lead to tyre failure. Under-inflation also reduces fuel efficiency and tyre tread life, and may affect the vehicle's handling and stopping ability.

OPERATING YOUR VEHICLE

Please note that the TPMS is not a substitute for proper tyre maintenance, and it is the driver's responsibility to maintain correct tyre pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tyre pressure warning light.

WARNING

Relying only on the tyre pressure monitoring system to determine when it is necessary to add air to the tyres can result in loss of control or an accident.

Check tyre pressures monthly when the tyres are cold. If necessary, adjust them to the recommended inflation pressure as specified on the vehicle's tyre information placard and in this owner's manual. Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section.

WARNING

Failure to take corrective action when the low tyre pressure warning light is not working or when it comes on and blinks while driving can lead to an accident.

If the low tyre pressure warning light does not come on for 2 seconds after the engine switch is pressed to change the ignition mode to ON, or comes on and blinks while driving, have your vehicle inspected by a Maruti Suzuki authorized workshop. Even if the light turns off after blinking, indicating that the monitoring system has recovered, you should still have the system checked by a Maruti Suzuki authorized workshop.

WARNING

The load-carrying capacity of your tyres is reduced at lower inflation pressures. If your tyres are even moderately under-inflated, the load on the tyres may exceed the load-carrying capacity of the tyres, which could lead to tyre failure. The low tyre pressure warning light will not alert you to this condition, because it only comes on when one or more of your tyres becomes significantly under-inflated. Check and adjust your tyre pressure at least once a month. Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section.

⚠ WARNING

Continuing to drive with the low tyre pressure warning light on can lead to an accident, resulting in severe injury or death.

If the low tyre pressure warning light comes on and stays on, reduce your speed and avoid abrupt steering and braking. Be aware that driving on a significantly under-inflated tyre can cause the tyre to overheat and can lead to tyre failure, and may affect steering control and brake effectiveness. Stop in a safe place as soon as possible and check your tyres.

- If you have a flat tyre, replace it with the spare tyre (optional). Refer to “Jacking instructions” in “EMERGENCY SERVICE” section for the tyre replacement method. Also refer to “Replacing tyres and/or wheels” for instructions on how to restore normal operation of the TPMS after you have had a flat tyre.

(Continued)

⚠ WARNING

(Continued)

- If one or more of your tyres is under-inflated, adjust the inflation pressure in all of your tyres to the recommended inflation pressure as soon as possible.

The low tyre pressure warning light can come on due to normal causes such as natural air leakage and pressure changes caused by changes in temperature or atmospheric pressure. Adjusting the air pressure in the tyres to the pressure shown on the tyre information placard should cause the low tyre pressure warning light to turn off.

To make the low tyre pressure warning light go off, adjust the tyre pressures when the tyres are cold, and drive the vehicle for about 10 minutes.


When the adjusted tyre pressure is recognized, the low tyre pressure warning light will go off and the information display shows the current tyre pressure (if you select the TPMS monitor (if equipped)).

NOTICE

If the low tyre pressure warning light does not go off even when you drive for more than 10 minutes after adjusting the cold tyre pressure, there may be a problem with the TPMS. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

If the light turns on again shortly after adjusting the pressure in your tyres, you may have a flat tyre. If you have a flat tyre, replace it with the spare tyre (optional). Refer to “Jacking instructions” in “EMERGENCY SERVICE” section. Refer to “Replacing tyres and/or wheels” for instructions on how to restore normal operation of the tyre pressure monitoring system after you have had a flat tyre.

OPERATING YOUR VEHICLE

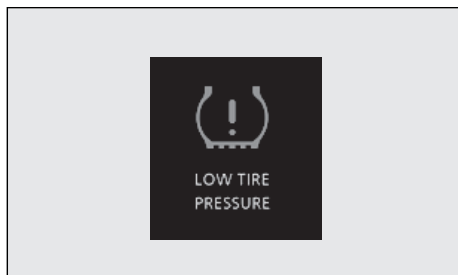

80SS109

NOTE:

- For a certain type of instrument cluster only, the information display shows the above warning and indicator message when this light comes on.
- When the tyre pressure is adjusted in high altitude areas, the low tyre pressure warning light may not turn off even after tyre pressure adjustment. In this case, adjust the inflation pressure to a slightly higher pressure than the one shown on the tyre information placard.
- The low tyre pressure warning light may turn off temporarily after coming on. This could be due to increase of surface temperature after long distance driving or traveling to a high temperature area. Even if the low tyre pressure warning light turns off after coming on, check the inflation pressure of all tyres.
- To reduce the chance that the low tyre pressure warning light will come on due to normal changes in temperature and

atmospheric pressure, it is important to check and adjust the tyre pressures when the tyres are cold. If you check tyres after driving, they are warm. Even if the tyre pressure seems to be good in this condition, it could fall below the specified pressure when tyres cool down. Also, if tyres are inflated to the specified pressure in a warm garage, the tyre pressure could fall below the specified one when you drive the vehicle outside in very cold temperature. If you adjust the tyre pressure in a garage that is warmer than the outside temperature, you should add 1 kPa to the recommended cold tyre pressure for every 0.8°C difference between garage temperature and outside temperature.

TPMS Malfunction Indicator

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly.

The TPMS malfunction indicator is combined with the low tyre pressure warning light. When the system detects a malfunction, the low tyre pressure warning light will flash for about 75 seconds and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

The TPMS malfunction indicator is not reset even after the engine is turned off; it remains in the ON state until the normal conditions are restored.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tyre pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tyres or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the low tyre pressure warning light after replacing one or more tyres or wheels on your vehicle to ensure the replacement or alternation of tyres and wheels to allow the TPMS to continue to function properly.

NOTICE


The tyre pressure sensors can be damaged if you do not take proper precautions.

- We highly recommend that you have tyres repaired or replaced by a Maruti Suzuki authorized workshop. The tyre pressure sensors can be damaged by installation or removal of tyres.

NOTICE

If the low tyre pressure warning light comes on frequently, there may be something wrong with one or more of the tyres, tyre pressure sensors or the monitoring system.

If the low tyre pressure warning light comes on frequently, have your vehicle inspected by a Maruti Suzuki authorized workshop.

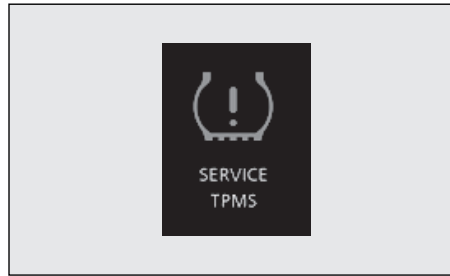

80SS110

NOTE:

For a certain type of instrument cluster only, the information display shows the above warning and indicator message when this light comes on.

TPMS Limitations


The tyre pressure monitoring system may not function properly under certain circumstances. In the following situations, the low tyre pressure warning light may come on and remain on or may blink.

- When you replace a flat tyre with the spare tyre.
- When you include a spare tyre during a tyre rotation.
- When the TPMS sensor is damaged during a tyre replacement or liquid sealants are used to repair a flat tyre.
- When the electronic signal of TPMS sensor is disturbed in one of the following ways:
 - Electric devices or facilities using similar radio wave frequencies are nearby.
 - A metallic film that may cause radio wave interference is attached on the window.
 - A lot of snow or ice covers the vehicle, in particular, around the wheels or wheel housings.
 - Snow tyres that are not installed with genuine TPMS sensors or snow chains are used.
- When you use non-genuine Maruti Suzuki wheels or tyres.
- When the pressure of any tyre is too high.
- When there is a problem with the receiver of the TPMS controller.

OPERATING YOUR VEHICLE


To Check the Current Tyre Inflation Pressure (For instrument cluster - Type A)

You can check the current tyre pressure on the information display.

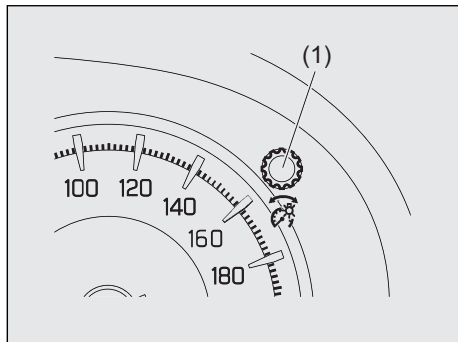

76TS51120

- 1) When the ignition mode is ON and the vehicle is stationary, push and hold the indicator selector knob (1) on the instrument cluster for more than 3 seconds to change the information display to the setting mode.

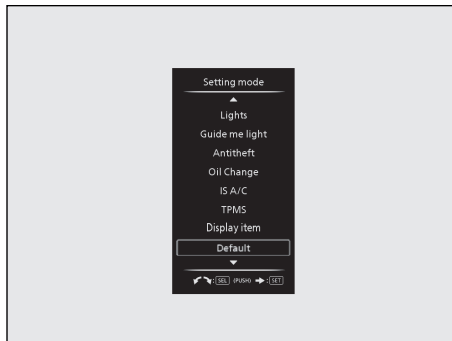


52RM30840

- 2) Turn the indicator selector knob (1) left or right to select "TPMS" and push the indicator selector knob.


NOTE:

If you exit the setting mode, select "Back" and push the indicator selector knob (1).

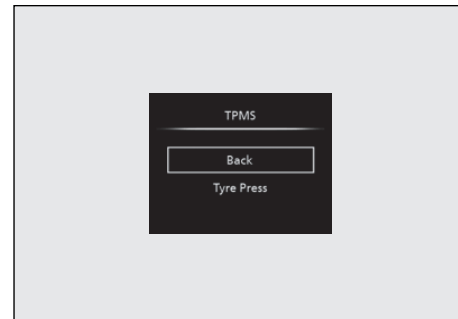

55T050950

- 3) Turn the indicator selector knob (1) left or right to select "Tyre Press" and push the indicator selector knob.

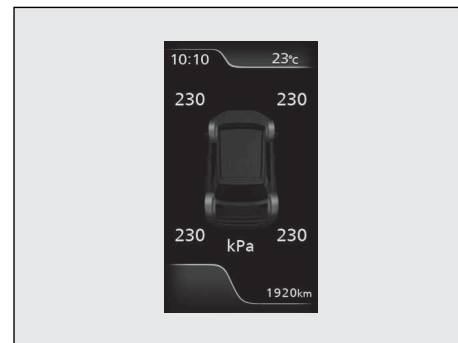

76TS51260


- 4) The display shows current tyre inflation pressure.

NOTE:

- If the low tyre pressure warning light comes on, the information display will be switched to "Tyre Press" display and the corresponding tyre pressure indication blinks to alert you which tyre(s) is(are) low pressure.
- The display may not show the tyre pressure for about 10 minutes after the vehicle begins to move. This is because the TPMS system learns the tyre pressure within this 10 minutes. The display will show the tyre pressure after 10 minutes pass.
- If you stop the vehicle and change the ignition mode to LOCK (OFF), and leave it for 20 minutes or more, tyre pressure will be reset and will be indicated as 0 kPa when the engine is restarted. In this case, the current tyre pressure indication will recover after driving for a while. However, if any of tyre pressures has been detected as low pressure before stopping the engine, the tyre pressure indication may not recover and may be indicated as "---".


To Check the Current Tyre Inflation Pressure (For instrument cluster - Type B)

You can check the current tyre pressure on the information display.

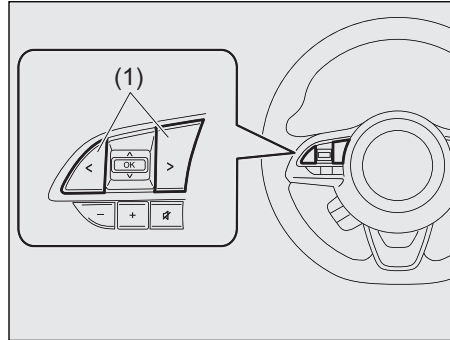

76TS51130

- 1) When the ignition mode is ON and the vehicle is stationary, push the left/right selector switch (1) to change the information display to the setting mode.

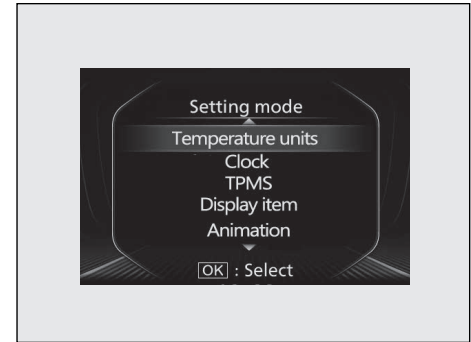


76TS51140

- 2) Select "TPMS" and press the OK switch quickly.

NOTE:


If you exit the setting mode, press the left/right selector switch (1).

OPERATING YOUR VEHICLE

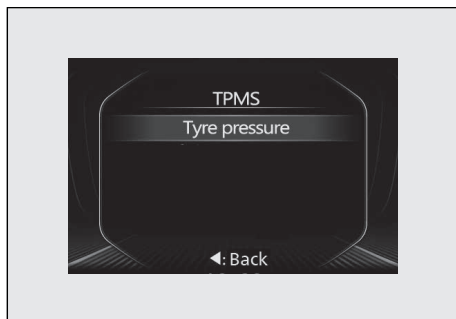

76TS51150

- 3) Press the OK switch quickly to select "Tyre pressure".

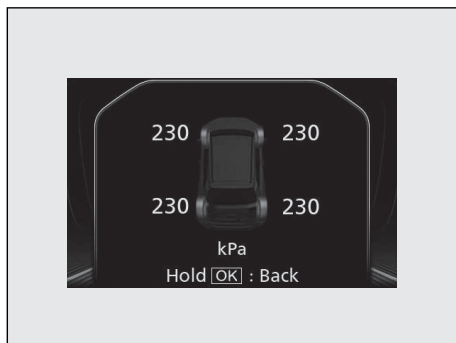

76TS51160

- 4) The display shows current tyre inflation pressure.

NOTE:

- If the low tyre pressure warning light comes on, the information display will be switched to "Tyre pressure" display and the corresponding tyre pressure indication blinks to alert you which tyre(s) is(are) low pressure.
- The display may not show the tyre pressure for about 10 minutes after the vehicle begins to move. This is because the TPMS system learns the tyre pressure within this 10 minutes. The display will show the tyre pressure after 10 minutes pass.
- If you stop the vehicle and change the ignition mode to LOCK (OFF), and leave it for 20 minutes or more, tyre pressure will be reset and will be indicated as 0 kPa when the engine is restarted. In this case, the current tyre pressure indication will recover after driving for a while. However, if any of tyre pressures has been detected as low pressure before stopping the engine, the tyre pressure indication may not recover and may be indicated as "---".

Replacing Tyres and/or Wheels

If you got a flat tyre and replaced it with the spare tyre (optional), Maruti Suzuki recommends that you have a Maruti Suzuki authorized workshop mount a new tyre on the wheel that had the flat tyre. The TPMS is already set up to recognize the ID code of the original wheel, and normal TPMS operation will be restored.

If you need to replace any wheels on your vehicle, a Maruti Suzuki authorized workshop must check that TPMS sensors are installed in the new wheels and must set up the TPMS to recognize the new sensors.

NOTE:


A TPMS sensor is not installed in the spare tyre. You should use the spare tyre only in an emergency situation, and should replace the spare tyre as soon as possible to restore normal TPMS operation.

⚠ WARNING

Use of tyres or wheels not recommended by Maruti Suzuki can result in failure of the TPMS.

When replacing tyres and wheels, use only tyres and wheels recommended by Maruti Suzuki as standard or optional equipment for your vehicle. Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section for additional information.

ADVICE FOR YOUR DRIVING

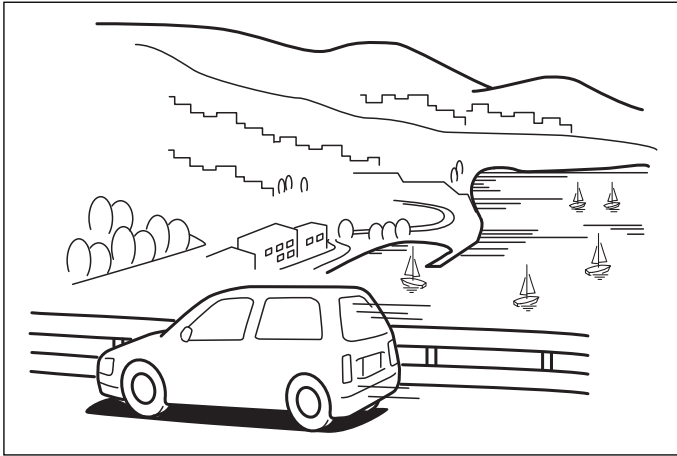


60G409

When Driving	6-1
Off-road Driving	6-8
Improving Fuel Economy	6-9
Stuck Vehicle	6-10
Precaution for Handling Vehicle	6-11
Running-in	6-15
Catalytic Converter	6-15
When Driving Hybrid Vehicle	6-16

ADVICE FOR YOUR DRIVING

When Driving

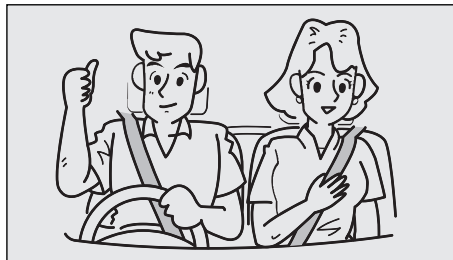


59RN02300

WARNING

- **Wear your seat belts at all times.** Even though airbags are equipped at the front seating positions, the driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to “Seat belts and child restraint systems” section for instructions on proper use of the seat belts.
- **Never drive under the influence of alcohol or other drugs.** Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to yourself and others. You should also avoid driving when you are tired, sick, irritated or under stress.

Start Driving after Carefully Checking the Surrounding Circumstances

Be sure to always fully check the safety of the surrounding circumstances before beginning to drive.

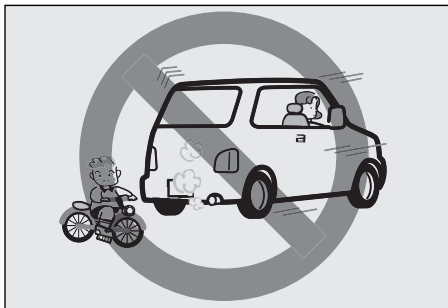

69RHS176

CAUTION

You cannot check the safety of the surrounding circumstances enough only by the 360 view camera, the rear parking sensors and the inside mirror. When moving the vehicle forward or backward, check the safety of the surrounding circumstances by directly checking with your eyes.

Do not Race the Engine, and Do not Avoid Fast Starts and Rapid Acceleration Just after Engine Start

Refer to “Avoid Fast Starts, Rapid Acceleration and Hard Braking” and “Do not Race the Engine” in the “Improving Fuel Economy” section.

Do not Concentrate on a Mobile Phone or Navigation System



55T060050

WARNING

- Do not operate a mobile phone, etc. while driving. Being distracted by phone operation could lead to an accident.
- Do not operate navigation/audio equipment, etc. while driving. Otherwise, there is the danger of an accident due to being distracted.

Do not Reach Through the Steering Wheel



69RHS178

WARNING

Reaching through the steering wheel could interfere with steering wheel operation and result in an accident.

Do not Drive with Your Foot on the Brake Pedal

CAUTION

Driving with your foot resting on the brake pedal could cause brake parts to become worn out more quickly than normal or cause brake components to overheat, making them less effective.


When Depressing the Accelerator Pedal and the Brake Pedal Simultaneously

NOTE:

If you depress both the accelerator pedal and the brake pedal simultaneously while driving, the engine power or the hybrid system output may be suppressed.

ADVICE FOR YOUR DRIVING

Do not Shift the Gearshift Lever into "N" (Neutral) while Driving

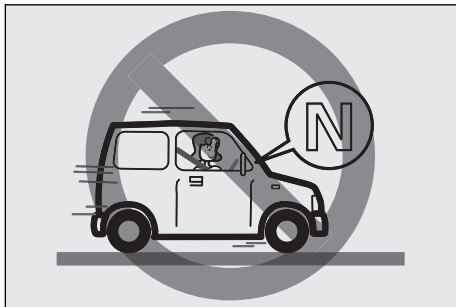

69RHS180

CAUTION

Do not put the gearshift lever into the "N" (Neutral) position while driving, except in times of emergency, as this disengages engine braking, which could result in an accident.

What Should You Do in Case of Malfunction or Emergency?

- **Warning light turns on**

Stop immediately in a safe place and take corrective action. For details, refer to "Warning Lights and Indicators" in the "QUICK GUIDE" section or "Warning and indicator messages" in the "INSTRUMENT CLUSTER".

- **You feel strong shock from under the floor**

Immediately stop in a safe place and check whether there is brake fluid leakage or fuel leakage, and also check whether there is any abnormality in the exhaust pipe, etc. If any abnormality is found, consult a Maruti Suzuki authorized workshop.

- **Sudden tyre puncture**

Grasp the steering wheel firmly, carefully apply the brake, slowly reduce speed, and stop in a safe place.

- **You feel that the brake pedal is heavy to use**

Via engine vacuum pressure, the vehicle utilizes a brake booster to reduce the force necessary for depressing the brake pedal. If this engine vacuum pressure decreases, you may feel as if the brakes require more force than usual to depress, but this is not abnormal. Depress the brake pedal as strongly as you need to.

- **Metallic screeching sound is heard from the brakes**

Promptly consult a Maruti Suzuki authorized workshop. The disk brake pads (Maruti Suzuki genuine parts) are designed to emit a creaking/screeching sound as a function to warn the wear, as they have almost reached usage limit and replacement timing.


WARNING

The brakes could be losing their ability to function normally, which could result in an accident. If you hear a metallic creaking/screeching sound, do not continue driving.

Use Engine Brake on a Long Downhill Slope

Use engine braking(*) in tandem with regular braking when driving on a long downhill slope. Release the accelerator pedal and shift down according to vehicle speed, release the accelerator pedal and shift down according to vehicle speed.


Manual transmission vehicles

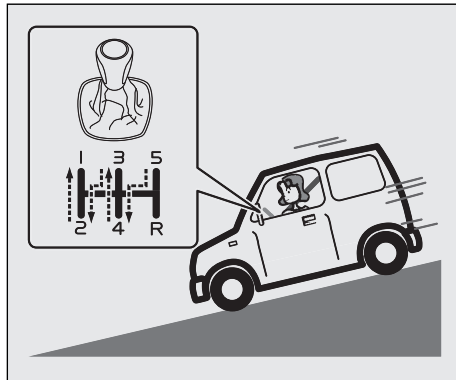

55T060010

For manual transmission vehicle, shift down to a lower gear one by one.


6-Speed Automatic transmission vehicles

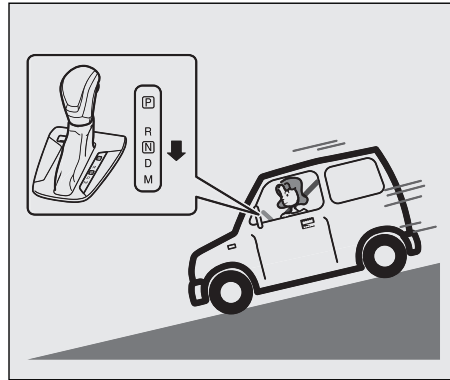

76TS60010

For 6-Speed automatic transmission vehicle, shift the gearshift lever into "M" (manual mode) first. Then, pull "-" side of the shift paddle to shift down to an appropriate gear position.

e-CVT vehicles

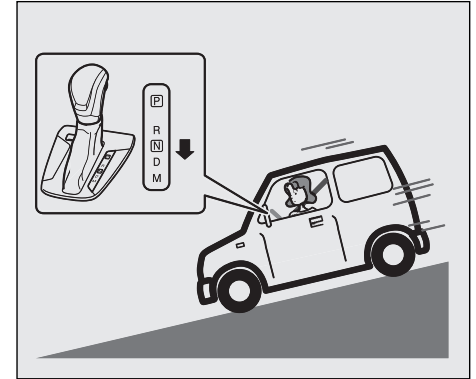

76TS60010

For e-CVT vehicle, shift the gearshift lever into "B".


*: Engine braking is a braking effect that occurs when you release your foot from the accelerator pedal while driving. The lower the gear, the greater the effect of engine braking becomes.

WARNING

Continuously depressing the brake pedal could cause the brakes to overheat, possibly rendering them ineffective.


ADVICE FOR YOUR DRIVING

When Side Wind Is Strong

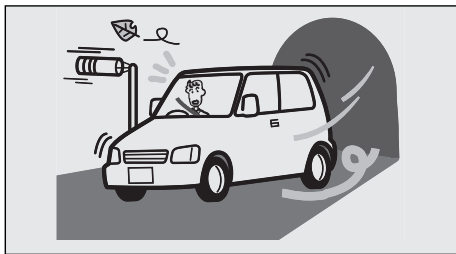

At a tunnel exit, on a bridge, or when a large truck passes you, your vehicle might be blown slightly sideways by side wind. Do not panic. Firmly grasp the steering wheel, gradually reduce speed, and regain your intended course.


Drive Slowly on a Slippery Road Surface

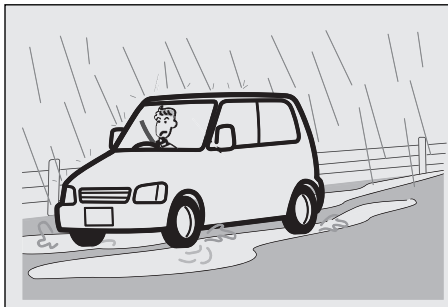

CAUTION

When driving on wet, icy, or snowy roads, etc., refrain from sudden movements, such as sudden starting, acceleration, braking, turning or abrupt engine braking. Otherwise, there is the danger of an accident due to loss of traction.


Do not Drive on Puddles at High Speed

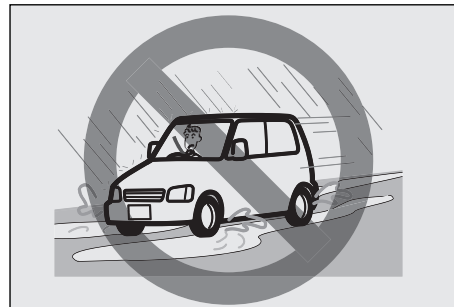

CAUTION

When driving on puddles or on wet road surfaces at high speed, a thin surface of water is built between the wheels and the road surface, and the wheels may float. This is called as hydroplaning, which leads to a loss of control in the steering wheel and the brakes and possibly results in an accident.

Check Brake Effectiveness after Driving on Puddles or Washing a Vehicle

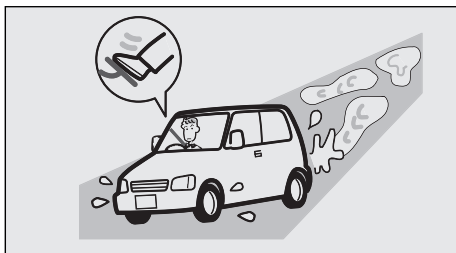

72J20360

- After verifying the safety of the surroundings, depress the brake pedal several times at low speed and check the brake effectiveness.
- If the brake effectiveness is still poor, depress the brake pedal at low speed gently and repeatedly until the brake effectiveness is fully recovered, to dry the brake equipment.

When Encountering a Flooded Area



61M0075

Avoid driving in a flooded area or a deep puddle. If driving in a flooded area is unavoidable, go slowly in the lowest gear. In case that you have driven in a flooded area, stop the vehicle in a safe and non flooded place while checking the brake effectiveness. Then, ask a Maruti Suzuki authorized workshop to check the following inspection items.

- Function of brake
- Function of electrical components
- Changes of oil level and quality for engine, transmission and differential. In case that the oil is turbid whitely, water has been mixed in the oil and an oil change is required.
- Lubricant condition of the bearings, suspension joints, etc.

NOTICE

Avoid driving in a flooded area or a deep puddle. It may cause an engine stall, short in electrical components, engine, hybrid system and transmission damages, etc.


ADVICE FOR YOUR DRIVING

Highway Driving

When driving at highway speeds, pay attention to the following:


- Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping point to allow for the extra stopping distance.
- On rainy days, hydroplaning can occur. Hydroplaning is the loss of direct contact between the road surface and the vehicle's tyres due to a water film forming between them. Steering or braking the vehicle during hydroplaning can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.

Driving on Hills Manual transmission vehicles

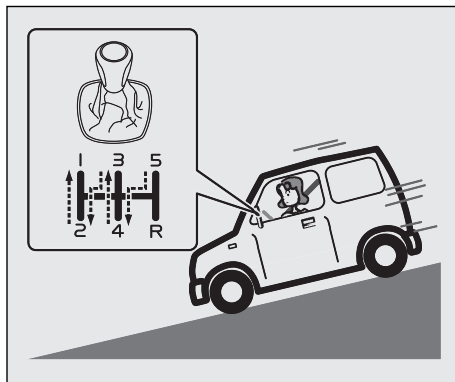


55T060010

6-Speed Automatic transmission vehicles

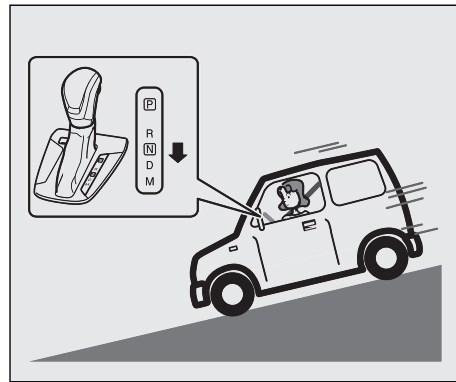

76TS60010

e-CVT vehicles

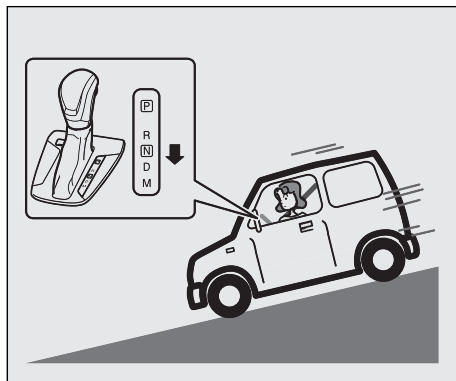

76TS60010

- When driving on steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine or the hybrid system will again be activating in its higher power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine or the hybrid system should be used for braking by shifting to the next lower gear.

WARNING

Do not hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.

NOTICE

When descending a downhill, Never turn the ignition key to "LOCK" position or press the engine switch or the power switch to change the ignition mode to LOCK (OFF). Emission control system and automatic transmission damage may result.

Off-road Driving

Do not Drive in the Field Covered with Grown Grass



69RHS181

Do not drive in the field covered with grown grass. If you drive in the field covered with grass, it may cause accident or fire or vehicle damage by getting caught in grown grass.

WARNING

If loose grass, etc. becomes entangled in drive train parts or exhaust pipes, drive train components might become damaged or fire may result.

ADVICE FOR YOUR DRIVING

Improving Fuel Economy

NOTE:

Fuel economy (mileage) of the vehicle may vary due to several factors i.e. driving habits- gear change pattern, usage of A.C, Air pressure in the tyres, wind speed, traffic conditions, fuel quality-non adulterated standard fuel, maintenance of vehicle, road conditions, braking etc.

The following instructions will help you improve fuel economy.

Keep Tyre Pressures Correct

Under-inflation of the tyres can waste fuel due to increased running resistance of the tyres. Keep your tyres inflated to the correct pressure shown on the label on the driver's side door or the driver's door lock pillar.

Keep Weight to a Minimum

The heavier the load is, the more fuel the vehicle consumes. Unload any unnecessary luggage or cargo.

Avoid Excessive idling

If you park your vehicle for more than one minute, stop the engine or the hybrid system and start it again later. When warming up a cold engine or the hybrid system, do not allow the engine to idle, the hybrid system to activate or apply full throttle until the engine or the hybrid system has reached operating temperature. Allow the engine or the hybrid system to warm up by driving.

Avoid Fast Starts, Rapid Acceleration and Hard Braking

Avoid fast starts

Fast starts away from lights or stop signs will consume fuel unnecessarily and shorten engine or the hybrid system life. Start off slowly.


Avoid unnecessary stops

Avoid unnecessary deceleration and stopping. Try to maintain a moderate, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.

Keep a steady cruising speed

Drive at a constant speed that road and traffic conditions will permit.

Do not Race the Engine

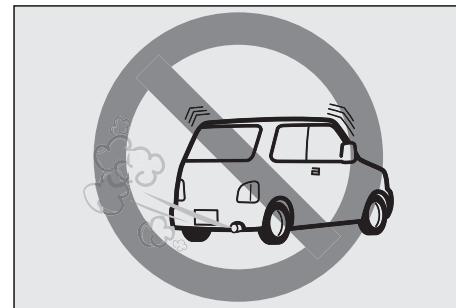

69RHS060

Revvng the engine only consumes extra fuel and has no benefit.


NOTICE

Immediately after starting, the engine or the hybrid system is often not yet fully warmed up. Therefore, revving the engine, starting to drive suddenly, or rapid acceleration can cause engine or the hybrid system failure.

Drive with an Appropriate Gear for Vehicle Speed

Running the vehicle at a high engine rotation speed by using a low-speed gear will result in poor fuel economy. Use the correct gear according to the vehicle speed.

Keep the Air Cleaner Clean

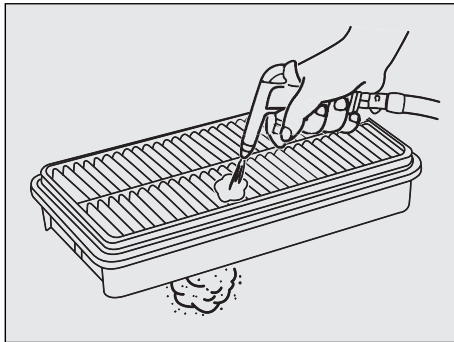

59RN06050

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

Since special procedures are required, ask a Maruti Suzuki authorized workshop for this job.

Stuck Vehicle

If your vehicle gets stuck in snow, mud or sand, follow the directions below:

- 1) Shift the transmission back and forth between a "D" (drive) (or first gear for manual transmission) and reverse. This will create a rocking motion which may give you enough momentum to free the vehicle. Press gently on the accelerator to keep wheel spinning to a minimum wheel rpm. Remove your foot from the accelerator while shifting. Do not race the engine or the hybrid system. Excessive wheel spin will cause the tyres to dig deeper, making it more difficult to free the vehicle.


NOTE:

You may have to turn the ESP® system off in order to allow spinning the wheels.

- 2) If your vehicle remains stuck after a few minutes of rocking, we recommend you to consult a Maruti Suzuki authorized workshop or a roadside assistance service. If a towing service is not available in an emergency, your vehicle may be temporarily towed by a towing cable or chain secured to the towing eye either on the front or rear of the vehicle. Refer to "Towing by Using Towing Eye" in the "EMERGENCY SERVICE" section.

⚠ WARNING

- Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h on the speedometer. Personal injury and/or vehicle damage may result from spinning the wheels too fast.

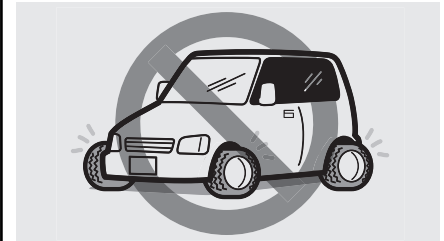

55T060070

- In addition to following the driving tips in this section, it is important to observe the following precautions.
 - Check that your tyres are in good condition and always maintain the specified tyre pressure. Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section for details.

(Continued)

ADVICE FOR YOUR DRIVING

WARNING

(Continued)

- Do not use tyres other than those specified by Maruti Suzuki. Never use different sizes or types of tyres on the front and rear wheels. For information regarding the specified tyres, refer to the tyre information label located on the driver's door lock pillar.
- Never use oversized tyres or special shock absorbers and springs to raise (jack up) your vehicle. This will change the handling characteristics. Oversized tyres may also rub against the fender over bumps, causing vehicle damage or tyre failure.
- After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

NOTICE

Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating or transmission damage.

Precaution for Handling Vehicle

Do not Apply Strong Force to Exterior Parts

NOTICE

Do not apply strong force to the body panel, spoiler, front and rear bumper, side skirts, etc. These forces can cause damage to these exterior parts.

Be Careful of Uneven Road Surface

NOTICE

In the following cases, the bumper or the lower part of the vehicle could get damaged. Ensure proper care.

- Entering the areas where there is uneven road surface, such as road shoulder
- Driving on roads with grooves, bumps or potholes

Do not Modify Your Vehicle Illegally



69RHS184

WARNING

- If you modify your vehicle illegally, there is a danger of a fire or an accident. Illegal modifications might adversely affect handling, performance or durability. Also, this could even violate laws and ordinances.
Do not install unsuitable parts to your vehicle or do not make your own adjustments or wiring.

(Continued)

WARNING

(Continued)

- Do not use wheels or wheel nuts other than specified Maruti Suzuki genuine products. Doing so could lead to accidents, such as nuts loosening and the wheel coming off while driving. Also, fuel consumption and driving stability could worsen, or it could result in other malfunctions.

NOTICE

- When installing or removing electrical equipment such as radio equipment, navigation, audio equipment or electronic toll control equipment, consult a Maruti Suzuki authorized workshop. Also, do not operate electrical equipment directly from the battery terminals or connect ground wires directly. Otherwise, there is a danger of hindering the functioning of electronic components, causing fire, malfunction, battery runout, etc.

(Continued)

NOTICE

(Continued)

- Only a troubleshooting device designed for inspection and maintenance for this model can be connected to the vehicle's onboard diagnostics system. Connecting a device other than that specified could hinder the functioning of electronic components and cause battery runout, etc.

When Installing, Removing and Repairing Parts

WARNING

The SRS airbag system and the seat belt pretensioner system could activate unexpectedly or could be rendered ineffective if the parts that affect their functions are adjusted or arranged. In the following cases, these systems will be adversely affected. Consult a Maruti Suzuki authorized workshop beforehand.

- When removing the steering wheel and conducting repairs around the steering wheel, etc.
- When conducting repairs around the center console, around the instrument cluster, under the front seats or to electrical wiring
- When installing audio equipment, etc.
- When conducting sheet metal painting or repairs around the dashboard
- When replacing the front seats or conducting repairs around the seats
- Repairs around the front pillar, the back pillar or the roof side
- When conducting repairs around the center pillar

ADVICE FOR YOUR DRIVING

Be Careful When Placing Accessories



69RHS185

WARNING

Do not attach accessories to the window glasses. Accessories and suction cups could hinder vision, or a suction cup could act as a lens and cause a fire. Also, if an airbag is activated, such accessories could be ejected outward within the vehicle, possibly resulting in injury.

When Spilling Drinks or Liquids

WARNING

Do not allow liquids to spill, splash or spray inside the vehicle. The following items could malfunction, or fire could result. In the case of spilling drinks, etc., promptly consult a Maruti Suzuki authorized workshop.

- SRS airbag system
- Audio equipment
- Electrical parts such as switches and wiring
- Movable parts such as the gearshift lever or seat belt buckles

NOTICE


The sensor of the seat belt reminder is built into the front passenger's seat cushion.

If you spill liquid such as soft drinks or juice, the sensor of the seat belt reminder may be damaged.

If you spill any liquid on the seat cushion, immediately wipe it with a soft cloth.

When Replacing Engine Oil

Replace engine oil regularly

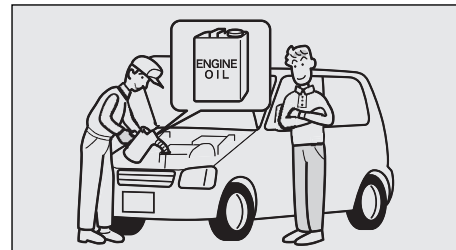

54M3143

- If the vehicle is normally used, replace the engine oil and filter every 10,000 km or every 12 months, whichever is earlier.
- When the vehicle is used under severe driving conditions, the engine oil and filter replacement is required earlier than the case that the vehicle is normally used.

NOTICE

Observe the periods designed for the engine oil and filter replacement. Degraded oil or clogged filters can cause engine malfunction or abnormal noise. For replacement, consult a Maruti Suzuki authorized workshop.

Specification and viscosity of engine oil

As performance factors such as fuel consumption depend on the engine oil used, use oil that satisfies the specifications in the following Table 1 and Table 2. Using Maruti Suzuki genuine oil is recommended.

Table 1

 
Specification		Oil quality
API(*1) / ILSAC(*2)	SP / GF-6	
	SN / GF-5	
	SM / GF-4	
	SL / GF-3	

Table 2
For K15C engine - For India

Specification	All vehicles
Viscosity: SAE(*3)	0W-16

For K15C engine - Except for India

Specification	All vehicles
Viscosity: SAE(*3)	0W-16, 0W-20, 5W-30

For M15D engine

Specification	All vehicles
Viscosity: API(*1) SN, SN PLUS, SP or ILSAC(*2) GF-6B	0W-16
Viscosity: API(*1) SL, SM, SN, SN PLUS, SP or ILSAC(*2) GF-6A	0W-20, 5W-30, 10W-30

*1: The API standard is determined by the American Petroleum Institute and represents the quality grade of engine oil.

*2: The ILSAC standard is an engine oil standard for automobiles, established by the International Lubricant Specification Advisory Committee, and is based on the API standard while indicating even higher performance specifications such as for fuel conservation and durability.

*3: SAE viscosity is a standard that determines the viscosity of lubricating oil. The number on the left side (the number with a "W") means the viscosity at low temperature. The smaller this figure is, the stronger the oil resistance to

coldness is and the better the engine start capability is. The number on the right side means the viscosity at high temperature. The larger this figure is, the stronger the oil resistance to heat is and the better the engine protection performance is.


Running-in

NOTICE

The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the first 960 km of vehicle operation.

- After starting, do not race the engine. Warm it up gradually.
- Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.
- Start off from a stop slowly. Avoid full throttle starts.
- Avoid hard braking, especially during the first 320 km of driving.
- Do not drive slowly with the transmission in a high gear.
- Drive the vehicle at moderate engine speeds.
- Do not tow a trailer during the first 960 km of vehicle operation.

Catalytic Converter

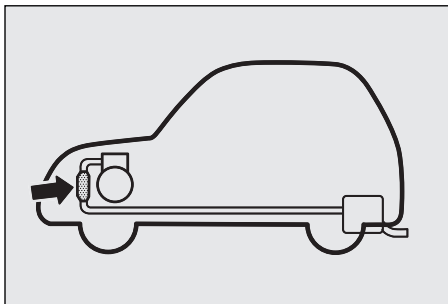

80G106

The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However, it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalytic converter. This may result in permanent heat damage to the catalytic converter and other vehicle components.

NOTICE

To minimize the possibility of catalytic converter or other vehicle damage:

- Maintain the engine in the proper operating condition.
- In the event of an engine malfunction, particularly one involving engine misfire or other apparent loss of performance, have the vehicle serviced promptly.
- Do not turn off the engine or interrupt the ignition when the transmission is in gear and the vehicle is in motion.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.
- Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.
- Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.
- Do not allow the fuel tank to get near the empty level.



59RN06060

⚠ WARNING

Be careful where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

When Driving Hybrid Vehicle

For economical and ecological driving, pay attention to the following points:

Shift lever operation

Shift the shift lever to D when stopped at a traffic light, or driving in heavy traffic etc. Shift the shift lever to P when parking.

When using the N, there is no positive effect on fuel consumption.

In the N, the gasoline engine operates but electricity cannot be generated.

Also, when using the air conditioning system, etc., the hybrid battery (traction battery) power is consumed.


Accelerator pedal/brake pedal operation

- Drive your vehicle smoothly. Avoid abrupt acceleration and deceleration. Gradual acceleration and deceleration will make more effective use of the electric motor (traction motor) without having to use gasoline engine power.
- Avoid repeated acceleration. Repeated acceleration consumes hybrid battery (traction battery) power, resulting in poor fuel consumption. Battery power can be restored by driving with the accelerator pedal slightly released.

Warming up before driving

Since the gasoline engine starts up and cuts out automatically when cold, warming up the engine is unnecessary. Moreover, frequently driving short distances will cause the engine to repeatedly warm up, which can lead to excess fuel consumption.

ADVICE FOR YOUR DRIVING

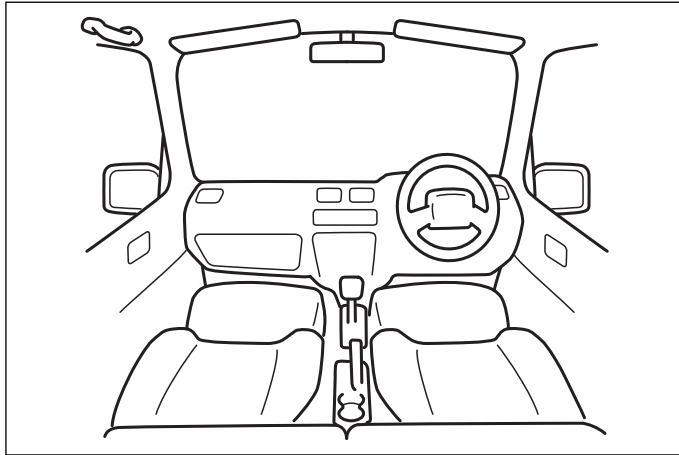

60G407

OTHER CONTROLS AND EQUIPMENT

Fuel Filler Opening	7-1
Refueling	7-2
Hood	7-4
Sun Visor	7-6
Interior Light	7-8
Accessory Socket	7-13
Drink Holder	7-14
Storage Area	7-17
Sunroof (if equipped)	7-19
Assist Grips	7-21
Overhead Console (if equipped)	7-22
Footrest	7-23
Door Pocket	7-23
USB Socket (if equipped)	7-24
USB Charging Sockets (if equipped)	7-24
Wireless Charger (if equipped)	7-25
Front Seatback Pocket (if equipped)	7-31
Luggage Compartment Hook	7-31
Luggage Compartment Cover (if equipped)	7-32
Luggage Compartment Board	7-32
Roof Rails (if equipped)	7-33
Heating and Air Conditioning System	7-35
Automatic Heating and Air Conditioning System (Climate Control)	7-37
Ventilated Seats (if equipped)	7-44
Installation of Radio Frequency Transmitters	7-46
Audio Function	7-46
Remote Audio Controls (if equipped)	7-46
Suzuki Connect (if equipped).....	7-48

OTHER CONTROLS AND EQUIPMENT

Fuel Filler Opening


Make sure to read “Refueling” in this section.

WARNING

Be sure to observe the following points when refueling. Otherwise, gasoline may catch a fire from fuel and it may cause a fire.

- Always stop the engine first.
- Close all the doors and windows when refueling.
- As gasoline is highly flammable, open sparks such as lit cigarettes are strictly prohibited.


Fuel Filler Door

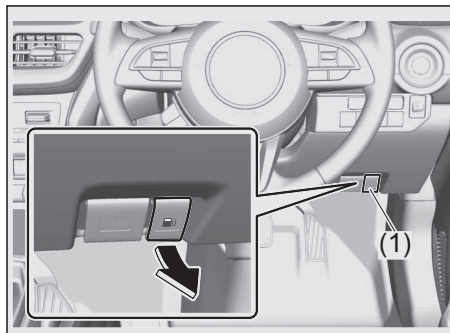

76TS70030


A fuel filler door is located on the left rear side of the vehicle. The fuel filler door can be unlocked by pulling up the opener lever (1) located on the outboard lower side of the driver's seat and locked by simply closing the door.

Fuel Filler Cap

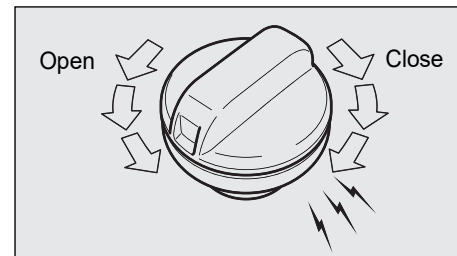

57L51093

- To open the fuel filler cap, turn it counter-clockwise.
- To close the fuel filler cap, turn it clockwise until you hear more than 2 clicks.

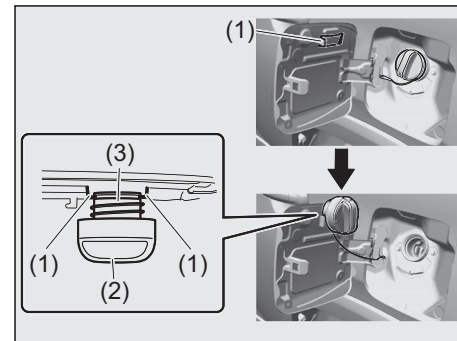

76TS70050

NOTE:

The cap holder (1) holds the fuel filler cap (2) by hooking the groove (3) when refueling.

⚠ WARNING

- If you open the fuel filler cap suddenly, fuel may be under pressure and may spray out. Loosen the fuel filler cap slowly. After air deflating sound stops, open the fuel filler cap.
- If fuel spills out, an accident such as a fire may occur. Also, if you leave spilled fuel as it is, it may cause paint staining, discoloration or cracking. Be careful not to spill out fuel. If you spill it out, wipe it off with a soft cloth.
- If the fuel filler cap is not closed securely, it may cause fuel leakage or a fire. After refueling, close the fuel filler cap until you hear more than 2 clicks.
- If you use the fuel cap other than a genuine Maruti Suzuki cap, it may cause fuel leakage. Do not use the fuel cap other than a genuine Maruti Suzuki cap.

Refueling

Watch Out for Fire



69RHS186

⚠ WARNING

- Be sure to observe the following points when refueling. Otherwise, gasoline may catch a fire from fuel and it may cause a fire.
- Always stop the engine first.
 - Close all the doors and windows when refueling.
 - As gasoline is highly flammable, open sparks such as lit cigarettes are strictly prohibited.

When Refueling at a Self-service Gas Station

⚠ WARNING

When refueling at a self-service gas station, be sure to observe the following points.

- If substantial static electricity is accumulated within your body, a spark could ignite fuel vapors and possibly cause burns. Before opening the fuel filler cap, discharge any static electricity* that might have accumulated in your body, by touching a metal part of the vehicle body or the gas pump machine. In addition, do not re-enter the vehicle while refueling, as static electricity could be charged to your body again.
- Do not allow others who have not discharged their static electricity to come close to the fuel filler opening.

*Take special care when air is dry, as this can cause your body to become charged with static electricity more easily. In addition, wearing layers of clothing can generate static electricity due to the friction of the fibers.

(Continued)

OTHER CONTROLS AND EQUIPMENT

WARNING


(Continued)

- If you open the fuel filler cap suddenly, fuel may be under pressure and may spray out. Loosen the fuel filler cap slowly. After air deflating sound stops, open the fuel filler cap.
- If you do not insert the fuel filler nozzle securely into the fuel filler opening, fuel may spill out. Insert the fuel filler nozzle securely into the fuel filler opening until it stops.
- Pull the gas pump filler nozzle lever until it stops.

(Continued)

WARNING

(Continued)

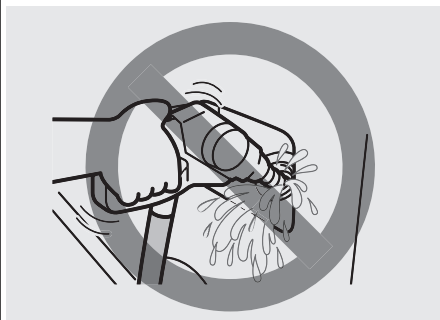

69RHS070

- If you continue to refuel after the automatic stop to top up the tank, fuel could overflow. When the automatic stop function of gas pump filler nozzle is activated, stop refueling.

*Depending on the type of gas pump machine being used, the automatic stop function could activate early and refueling might not be possible. Please follow the instructions of the employees at the gas station.

(Continued)

WARNING

(Continued)

- If fuel spills out, an accident such as a fire may occur. Also, if you leave spilled fuel as it is, it may cause paint staining, discoloration or cracking. Be careful not to spill out fuel. If you spill it out, wipe it off with a soft cloth.
- If the fuel filler cap is not closed securely, it may cause fuel leakage or a fire. After refueling, return the fuel filler nozzle to its original position and close the fuel filler cap until you hear more than 2 clicks.
- Fuel contains substances harmful to the human body. Do not breathe in vaporized fuel.
- In addition, be sure to observe all the warnings posted at the gas station.

Use Unleaded Gasoline Only

NOTICE

Using leaded gasoline, low-quality gasoline or other types of fuel (such as alcohol and diesel oil) can cause harmful effects to the engine and fuel delivery system.

Do not use fuel other than unleaded gasoline.

Hood


⚠ WARNING

- As the hood is heavy, if a child tries to open or close it, the child may get injured. Do not allow a child to open or close the hood.
- As the engine compartment becomes hot, it may cause burns. When opening the hood, do not allow a child to come close to the hood.
- If you leave any tool or cloth in the engine compartment, it may cause a malfunction. Also, as the engine compartment becomes hot, it may result in vehicle fire. Do not leave any tool or cloth for inspection or cleaning in the engine compartment.

⚠ CAUTION


If you come close to a running drive belt or a cooling fan (radiator fan), hands, hair, clothing, etc. may be caught and you may get injured. When the engine is running, keep away from the drive belt or the cooling fan (radiator fan).

Opening the Hood

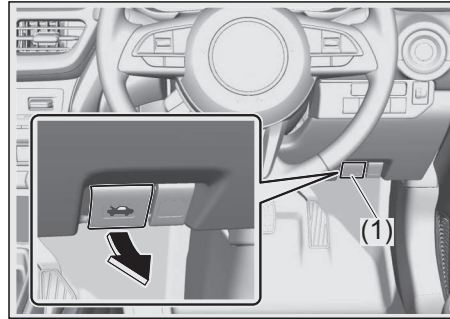

76TS70630

- 1) Pull up the hood release lever (1) located under the driver's side instrument panel in the outboard position. This will disengage the hood lock halfway.

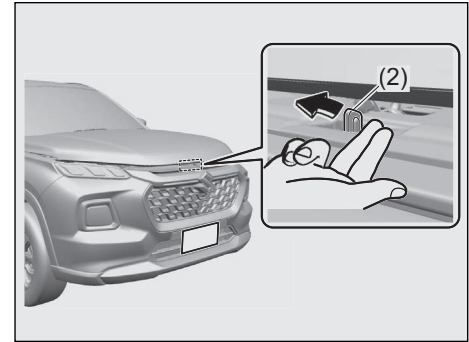

76TS70650

- 2) Push the under-hood release lever (2) sideways with your finger, as shown in the illustration. While pushing the lever, lift up the hood.

⚠ CAUTION


The under-hood release lever can be hot enough to burn your finger while the engine is running or right after the engine stopped.

If you try to open the hood while the engine is running or right after the engine stopped, touch the under-hood release lever after it becomes cool enough.

OTHER CONTROLS AND EQUIPMENT

NOTICE

If you lift up the hood with the wiper arms raised, the wiper arms and the hood may get damaged. Do not lift up the hood with the wiper arms raised.

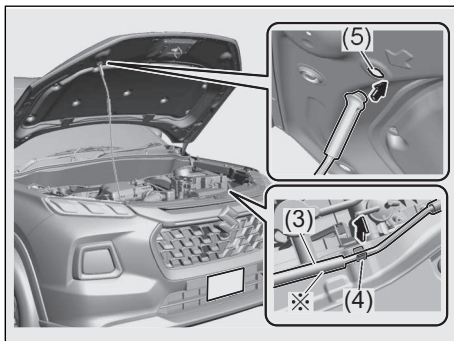

76TS70660

- 3) While holding the hood, pull the prop rod (3) out from the holding clip (4), and then insert the end of the rod into the designated hole (5).


CAUTION

- The prop rod can be hot enough to burn your finger while the engine is running or right after the engine stopped. If you would like to use the prop rod while the engine is running or right after the engine stopped, touch the prop rod after it becomes cool enough.
- If the prop rod slips out, you may get caught in the closing hood. Insert the end of the prop rod into the hole securely.
- The prop rod may slip out when the hood is blown by wind. If this occurs, you may get caught in the closing hood. Be very careful when you open the hood on a windy day.

NOTE:

When you pull out the prop rod from the holding clip, hold the ※ part.

Closing the Hood

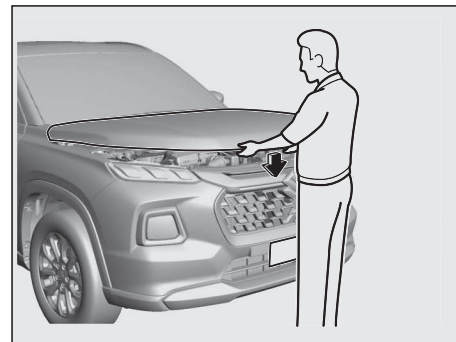

76TS70670

- 1) Lift up the hood slightly and remove the prop rod from the hole. Put the prop rod back into the holding clip.
- 2) Lower the hood to about 20 cm above the hood latch, and then let it drop down. Check that the hood is securely latched after closing.


WARNING

If the hood is not fully closed, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident. Check that the hood is fully closed and latched before driving.

⚠ CAUTION


When closing the hood, the occupant's body such as hands may get caught in the hood and get injured. Also, pushing on the hood from the top may damage it.

When closing the hood, check that no part of the occupant's body such as hands is in the path of the hood.

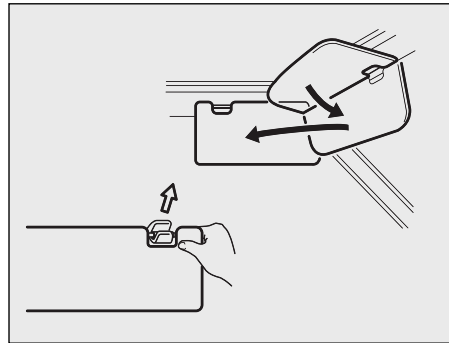Sun Visor

79J161

The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.

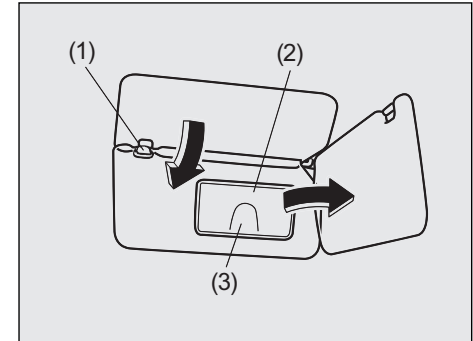Card Holder (if equipped)

72M2058

- (1) Hook
- (2) Mirror cover
- (3) Card holder


You can put a card in the card holder (3) on the back of the sun visor.

NOTICE

If you park your vehicle outdoors in direct sunlight in hot weather, the inside of the vehicle will become hot. The heat may distort or crack a card. When you park your vehicle outdoors in direct sunlight or in hot weather, do not leave plastic cards in the card holder.

OTHER CONTROLS AND EQUIPMENT

Vanity Mirror (if equipped)

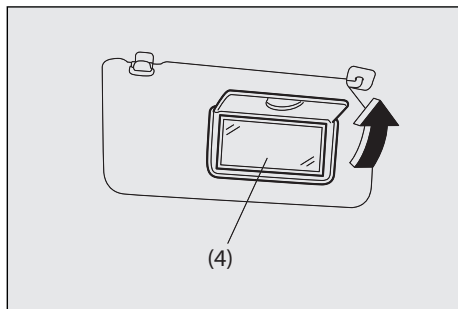

70K178


(4) Vanity mirror

To use the vanity mirror (4) on the back of the sun visor, pull up the mirror cover (2).

WARNING

- If you use the vanity mirror while driving, you may lose control of the vehicle, resulting in an accident. Do not use the vanity mirror while driving.
- Do not place any object on the location where an airbag is stored or come close to the location where an airbag is stored, when using a vanity mirror. Doing so may cause the airbag to deploy and cause serious injury due to the impact of airbag.

Roller Sunshade (if equipped)

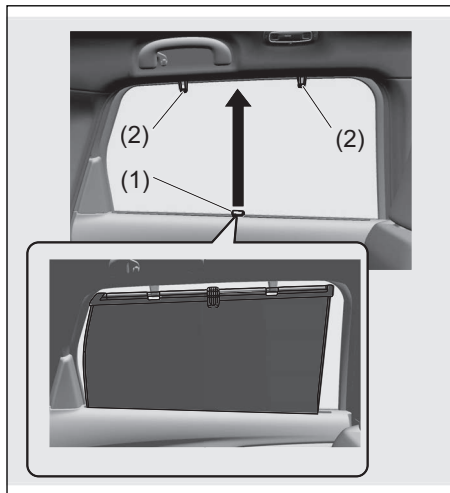

76T07071

The roller sunshades are installed in both sides of the rear doors, and these can be used to shield from the sun.

- To use the roller sunshade, pull up the tab (1) slowly and put both holes into hooks (2).
- To store the roller sunshade, pull up the tab a little to unhook from the hooks, then put back slowly.

WARNING

Do not lean on the roller sunshade which is used. Otherwise, the roller sunshade may be damaged. Also, if the window is open, a rear passenger may put his/her hand out a window and it could result in an accident.


CAUTION

- When using the roller sunshade, make sure two holes are securely hooked. If only one hole is hooked, the roller sunshade could drop off because of vehicle jolting and could hit rear passenger's body.
- Hold the tab firmly to operate the roller sunshade. If the rear passenger releases the tab while operating the roller sunshade, it may be rolled back unexpectedly. If this happens, the rear passenger may get injured by pinching his/her fingers.

NOTICE


Do not pull out the roller sunshade in the direction other than an upward direction and do not pull it out swiftly. Otherwise, the roller sunshade may be damaged. Also, pull it back straight in a downward direction for storing it. If it is tilted, it cannot be stored properly or it may get wrinkles.

Interior Light

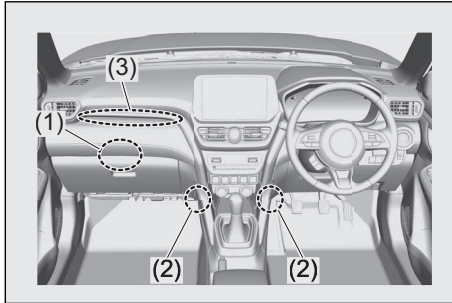

76TS70060

- (1) Glove box light (if equipped)
- (2) Footwell lights (if equipped)
- (3) Instrument panel assistant ornament light (if equipped)

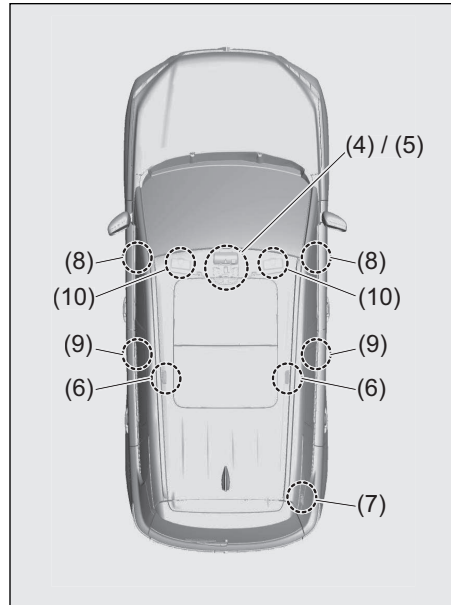


76TS70080

- (4) Front (without overhead console)
- (5) Front (with overhead console)
- (6) Center
- (7) Luggage compartment (if equipped)
- (8) Front door ambient light (if equipped)
- (9) Rear door ambient light (if equipped)
- (10) Vanity mirror light (if equipped)

Glove Box Light (if equipped) (1)

Refer to "Glove box" in this section.

Footwell Lights (if equipped) (2)

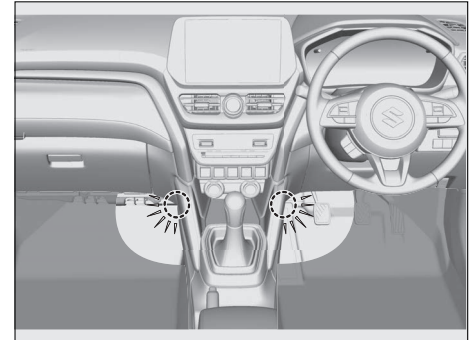

76TS70100


A footwell light is provided in the leg space in front of each front seat. The light comes on when the door is opened. After closing all doors, the light will remain on for about 15 seconds and then fade out. If you press the engine switch / the power switch to change the ignition mode to ACC or ON during this time, the light will start to fade out immediately. After you press the engine switch / the power switch to change the ignition mode to LOCK (OFF), the light will turn on for about 15 seconds and then fade out.

OTHER CONTROLS AND EQUIPMENT

NOTE:

When the ignition mode is LOCK (OFF) and if you leave any door open, the light will automatically turn off after about 15 minutes to prevent from discharging the lead-acid battery.

Instrument Panel Assistant Ornament Light (if equipped) (3)

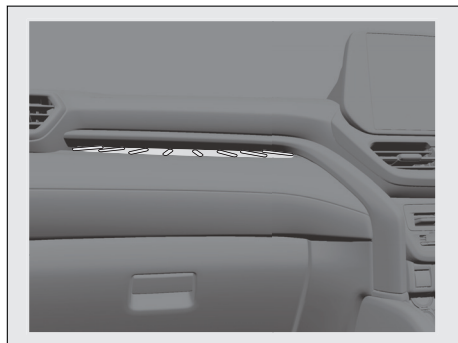

76TS70770

An instrument panel assistant ornament light is provided for illuminating a part of the instrument panel on each front passenger's seat side.

When you unlock the door, the light will come on for 15 seconds.

When you open the door, the light will remain on for 15 minutes.

With the ignition mode "LOCK" (OFF), if you close the door, the light will turn on for 15 seconds and then fade out.


The instrument panel assistant ornament light will come on with 100% brightness when all doors are closed, the ignition mode is ON and the exterior lights turn off. The brightness of the instrument panel assistant ornament light can be adjusted when all doors are closed, the ignition mode is ON and the exterior lights come on.

When the ignition mode is ON, you can completely turn off the instrument panel assistant ornament light.

NOTE:


- You can change the instrument panel assistant ornament light operation via the information display. Refer to "Information Display" in the "INSTRUMENT CLUSTER" section. Also, you can change the instrument panel assistant ornament light operation in the user settings mode on the Infotainment/Head Unit. For more details, refer to the manual of the Infotainment/Head Unit.
- When the ignition mode is LOCK (OFF) and if you leave any door open, the light will automatically turn off after about 15 minutes to prevent from discharging the lead-acid battery.

Front (without Overhead Console) (4)

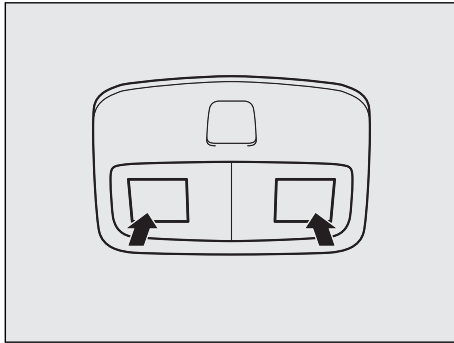


Push the switch to turn on the light and push it again to turn off the light.

Front (with Overhead Console) (5)

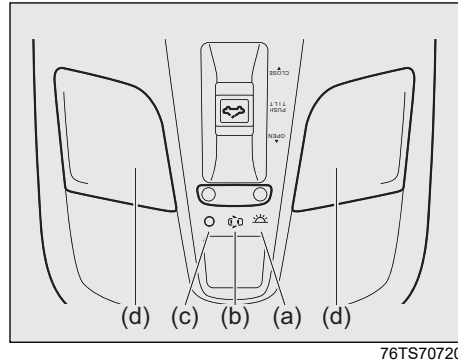

Center (6)

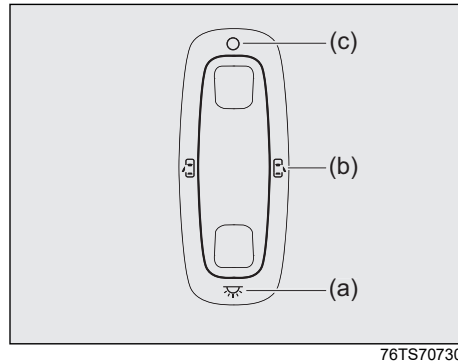

These light switches have three or four positions which function as described below:

ON (a)

The light comes on and stays on regardless of whether the door is open or closed.

NOTE:

- The light will turn off after a period of time when the light remains illuminated to prevent the lead-acid battery from discharging.
- The light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:
 - The ignition mode is LOCK (OFF).
 - The hazard warning lights, the position lights and the headlights are off.
 - 15 minutes passed after the light is turned on.
- For a short while after pressing the engine switch / the power switch to change the ignition mode to LOCK (OFF), there is an occasion that the light will not turn on even if the light switch is turned on. This is also a normal light control to prevent the lead-acid battery from discharging.
- For the vehicle with hybrid system: To prevent 12-volt battery discharge, do not leave the lights on longer than necessary when the hybrid system is off.

OTHER CONTROLS AND EQUIPMENT

DOOR (b)

The light comes on when the door is opened. After closing all doors, the light will remain on for about 15 seconds and then fade out. If you press the engine switch / the power switch to change the ignition mode to ACC or ON during this time, the light will start to fade out immediately. After you press the engine switch / the power switch to change the ignition mode to LOCK (OFF), the light will turn on for about 15 seconds and then fade out.

NOTE:

When the ignition mode is LOCK (OFF) and if you leave any door open, the light will automatically turn off after about 15 minutes to prevent from discharging the lead-acid battery.


OFF (c)

The light remains off even when the door is opened.

Spot light (d)

When the light switch is in "DOOR" or "OFF" position, push the switch to turn on the light and push it again to turn off the light.


Luggage Compartment Light (if equipped) (7)

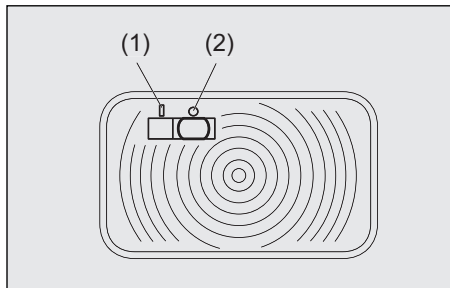

68PM00510

When you open the tailgate with the luggage compartment light switch in the "ON" position (1), the light comes on for about 15 minutes.

When the luggage compartment light switch is in the "OFF" position (2), the light remains off regardless of whether the tailgate is open or close.

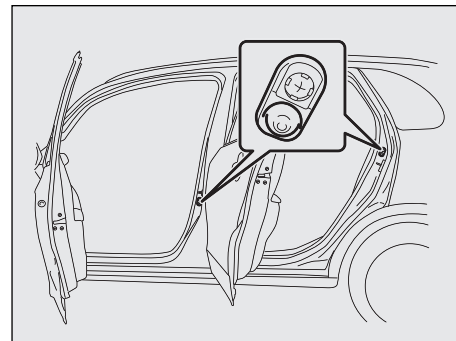


68PM00511

NOTE:

The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber protrusion) at the door opening as shown, the door is involved in the lighting operation. The tailgate is also involved in this operation even without the rubber protrusion.

Front / Rear Door Ambient Light (if equipped) (8) (9) Front (Driver's seat side)

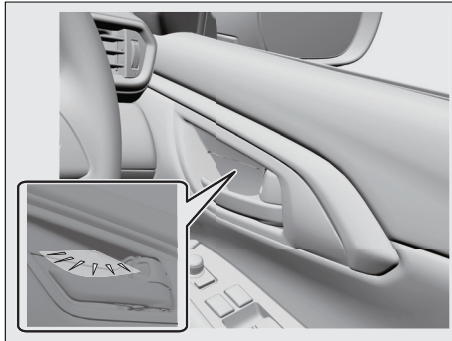


76TS70790

Front (Passenger's seat side)



76TS70800

Rear

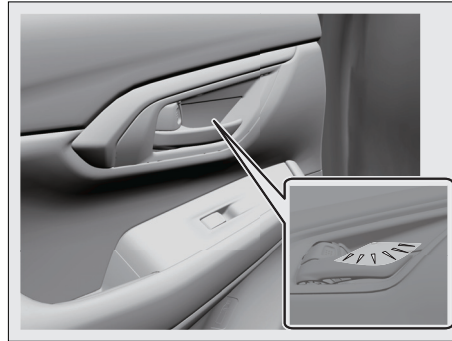


76TS70830

A door ambient light is provided for illuminating the door handle inside the vehicle. When you unlock the door with the remote controller or the request switch, the light will come on for 15 seconds. When you open the door, the light will remain on for 15 minutes. If you close the door, the light will turn on for 15 seconds and then fade out. While driving, the brightness of the door ambient light will be adjusted depending on the brightness of the surroundings.

NOTE:

You can change the door ambient light operation via the information display. Refer to "Information Display" in the "INSTRUMENT CLUSTER" section.

Vanity Mirror Light (10) (if equipped)

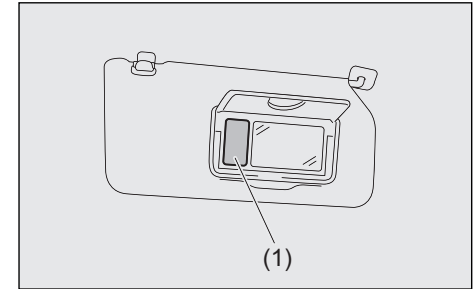

55T070040


The vanity mirror light (1) comes on when the mirror cover is opened.

NOTE:

For the vehicle with hybrid system: To prevent the 12-volt battery from being discharged, do not leave the vanity mirror lights on for extended periods while the hybrid system is off.

OTHER CONTROLS AND EQUIPMENT

Courtesy Lights (if equipped)

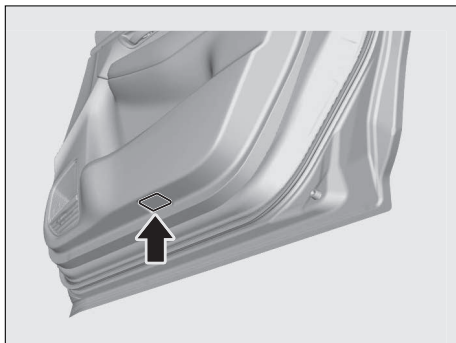


76TS70090

Each front door has a courtesy light on its inside bottom. It lights automatically when the door is opened.

NOTE:


If you leave any door open, the light will automatically be turned off after about 15 minutes to prevent the battery from discharging.

Accessory Socket Center Console

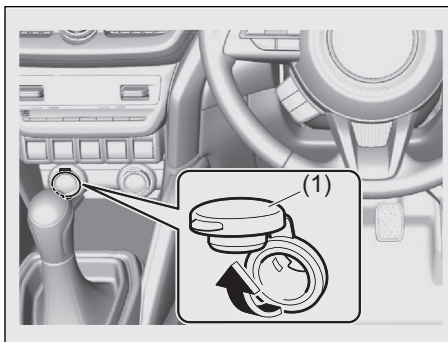

76TS70120

Luggage Compartment

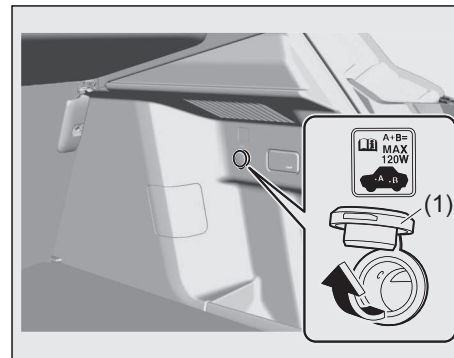

76TS70140

The accessory socket will work when the engine switch or the power switch is in ACC or ON mode.

When using the accessory socket, open the rubber cap (1).

⚠ WARNING

When the accessory socket is not in use, close the rubber cap. If any foreign material enters the accessory socket, it may cause a malfunction or short circuit.

NOTICE


- To prevent the fuse from being blown, when using sockets at the same time, do not exceed the total combined power capacity of 12 volt / 120 watt / 10 ampere.
- Use of inappropriate electrical accessories can cause damage to your vehicle's electrical system. Check that any electrical accessories you use are designed to plug into this type of socket.
- Check that the cap remains on the socket when the socket is not in use.
- When the ignition mode is LOCK (OFF) during using the accessory socket, the following accidents may occur;
 - the audio or navigation system does not turn off.
 - the keyless entry system does not work, etc.
 If they occur, disconnect the item from the accessory socket and check whether the electrical equipments work properly.
 If the problem persists, ask your Maruti Suzuki authorized workshop to have the system inspected.

NOTE:

For the vehicle with hybrid system:

- *When stopping the hybrid system, disconnect electrical devices with charging functions, such as mobile battery packs. If such devices are left connected, the hybrid system may not stop normally.*
- *To prevent 12-volt battery discharged, do not use the accessory socket longer than necessary when the hybrid system is off.*

Drink Holder Floor Console

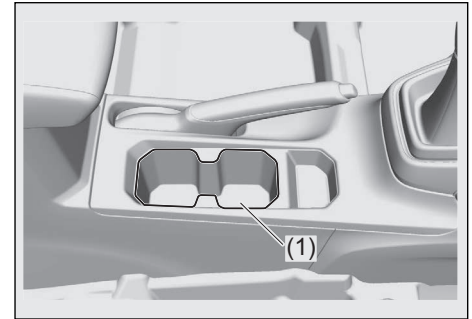


76TS70150

(1) Floor console drink holder

OTHER CONTROLS AND EQUIPMENT

Rear Seat Armrest

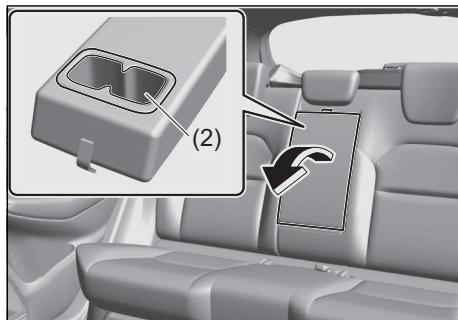

76TS70160

(2) Rear seat armrest drink holder

The rear armrest is stowed in the center of the seatback. Tilt it down forward to use.

⚠ WARNING


- If the seat belt is obstructed by any part of the armrest when fastened, it cannot provide the intended protection. After fastening the seat belt, always check that the armrest is not interfering with the belt.
- In an accident or sudden stop, the rear armrest could fall forward. If there is a child in a rearward facing child restraint in the rear center seating position, the falling armrest could injure the child. Do not install a rearward facing child restraint in the rear center seating position.

NOTICE

To avoid damage to the armrest, do not lean on it or allow a child to sit on it.


Door

Front

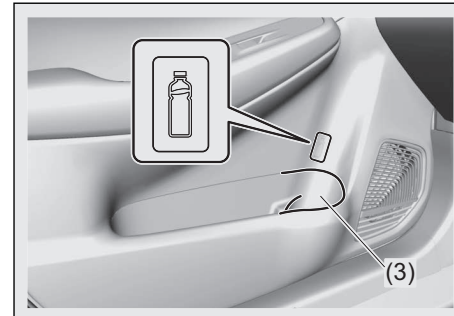

76TS70400

Rear

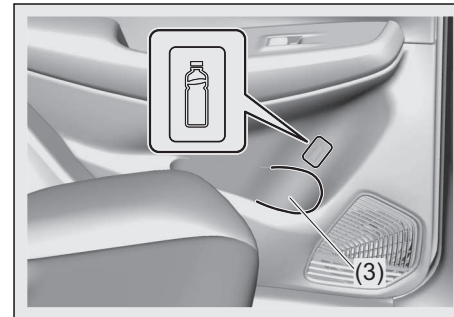

76TS70410

(3) Bottle holder

NOTE:

Maruti Suzuki recommends to use maximum 1 liter capacity of bottle.

 WARNING


- Be careful and use a lid for a drink not to spill out liquid. Spilling out hot liquid can cause burn injury. In addition, if liquid spills out on the following parts, it may cause a fire or a malfunction and an airbag system may not work properly.
 - Navigation system, audio system or the relevant switches
 - Wiring or electrical components under the floor
 - Moving part of the gearshift lever or the seatbelt buckle
- The lithium-ion battery is located under the front left side seat. Spilling liquids on the lithium-ion battery in models equipped with SHVS may cause a fire or electric shock or damage to the battery.
- If you place a long drink container, sharp-edged, hard or breakable objects in the drink holders, these objects may be thrown out, resulting in personal injury and hindering your view. In the driver's side drink holder or the front passenger's side drink holder, you can place a can, a cup or a plastic bottle.
- Do not place a long drink container in the driver's side drink holder. The container may hinder your view, resulting in an accident.

NOTE:

- *If you place the keyless remote controller in a drink holder or a bottle holder, it may not be detected.*
- *If you spill or drop liquid accidentally, have your vehicle inspected by a Maruti Suzuki authorized workshop.*

OTHER CONTROLS AND EQUIPMENT

Storage Area

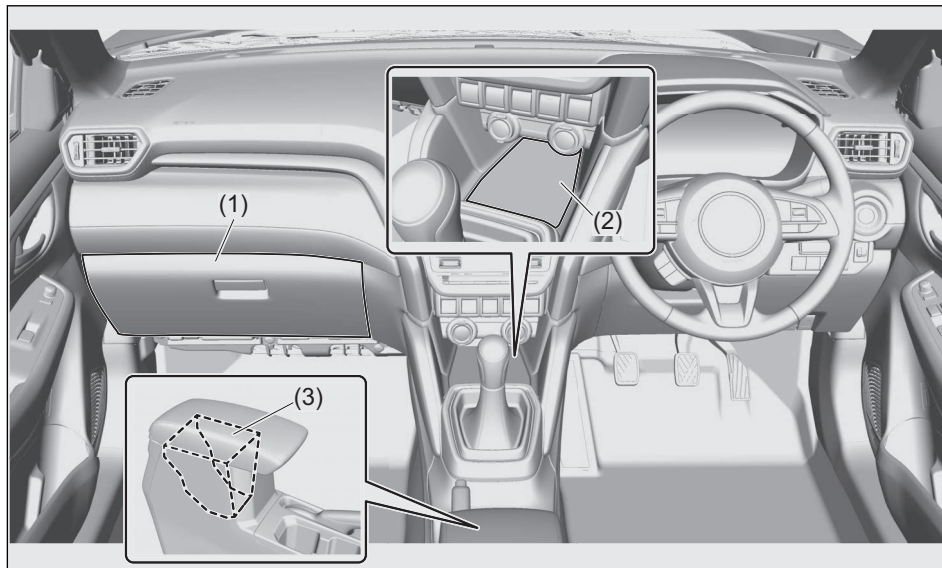

76TS70190

- (1) Glove box
- (2) Floor console tray (if equipped)
- (3) Front armrest with console box

- Each item in the figure is a typical example; the actual equipment depends on the vehicle type.

WARNING

- If any object gets caught in the brake pedal or the accelerator pedal, you may not operate the pedal properly, resulting in an accident. If you use a storage area without a lid, do not place the object which may fall out while driving.
- If there is any object within the area where the front passenger's airbag could inflate, the object may be thrown out or the front passenger's airbag may not inflate properly. Do not place a big object on the instrument panel tray.

CAUTION


If you use a storage area with a lid, do not drive the vehicle with the lid open. In acceleration, a sudden braking or an collision, your body may be hit by the lid or the object which falls out from the storage area.

NOTE:

If you place the keyless remote controller in any of storage areas, it may not be detected.

Using Storage Area with a Lid

Glove box

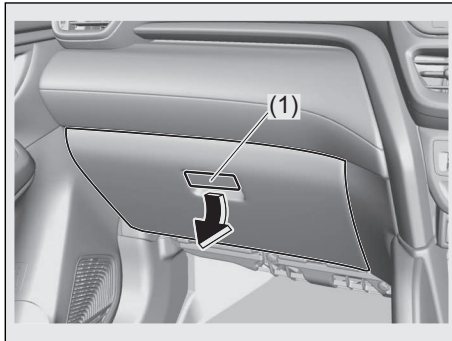


76TS70210

- To open the glove box, pull the latch lever (1).
- To close it, push the lid until it is latched securely.

WARNING

- **Never drive with the glove box lid open. It could cause injury if an accident occurs.**
- **Do not leave cigarette lighters or spray cans in the glove box. If a cigarette lighter or spray can is in a place such as the glove box, it may light accidentally when luggage is loaded, causing a fire.**

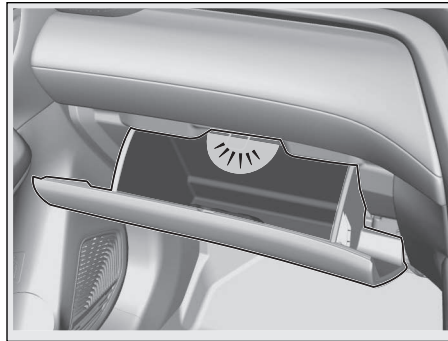


76TS70230

The glove box light (if equipped) stays on while the lid is open.

Front armrest with console box (if equipped)

NOTICE

To avoid damage to the armrest, do not lean on it or allow a child to sit on it.

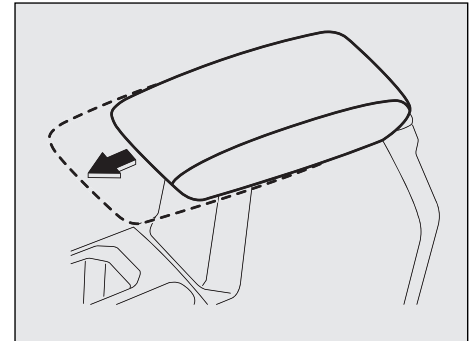


76TS70250

The armrest can be slid forward.

OTHER CONTROLS AND EQUIPMENT

Console box

Use this stowage for keeping small items. Open the compartment by raising the top lid while keeping the lever (1) up.

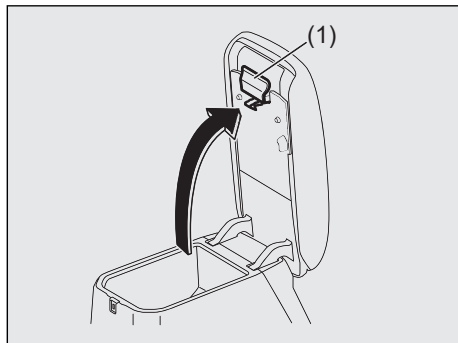


76TS70260

NOTE:

Always close the lid after you put something into or take something out of the box.

Sunroof (if equipped)

You can tilt or slide the sunroof by operating the sunroof switch after pressing the engine switch or the power switch to change the ignition mode to ON.

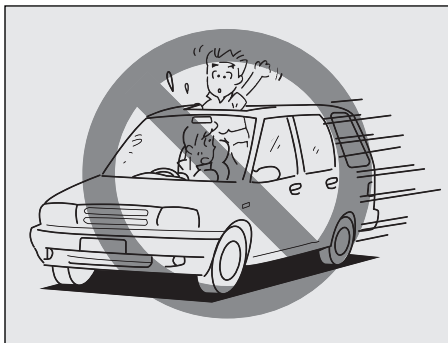

76TS70270

⚠ WARNING

- Never allow any part of your body such as hands or head to get out of the sunroof opening while the vehicle is moving.
- Fasten your seat belts and use child restraints at all times. In an accident, you could be thrown from the vehicle through an open sunroof.
- Check that there are no hands or other obstructions in the path of the sunroof when you close the sunroof.
- Always take the keyless push start system remote controller with you when leaving the vehicle even if only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could use the sunroof switches and get trapped by the sunroof.


NOTICE

- Do not put your body weight on the roof around the sunroof such as by sitting on it.
- Remove water drops, snow, ice or sand from the sunroof before opening.
- Close the sunroof when you leave the vehicle unattended.
- Periodically inspect the guide rail for dirt and clean it if any dirt has accumulated.

NOTE:

You may hear a loud sound when you drive with the sunroof fully opened. This sound is caused by the fluctuation of air pressure around the sunroof and it is not due to any part disorder. The sunroof is designed to stop at a position before it is fully opened to avoid this sound. If you observe such sound while driving with the sunroof fully opened, close the sunroof slightly to reduce the sound.

To Tilt the Sunroof

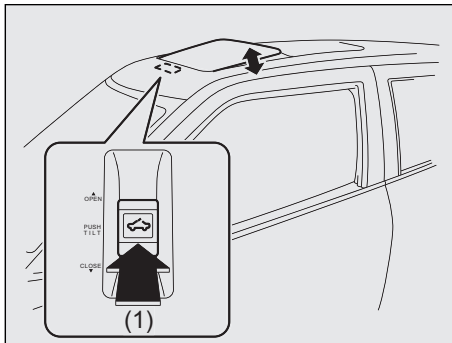

76TS70010


To tilt the sunroof up from fully closed position, push "PUSH TILT" part (1) of the sunroof switch. The sunroof will tilt up fully.

NOTE:

If the sun shade is closed when tilting up, the sun shade will open automatically.

To tilt the sunroof down from tilted up position, push "PUSH TILT" part (1) of the sunroof switch again. The sunroof will tilt down. If you keep holding "PUSH TILT" part (1) of the sunroof switch for more than 1 second, the sunroof and sun shade will be completely closed.

To Open the Sunroof

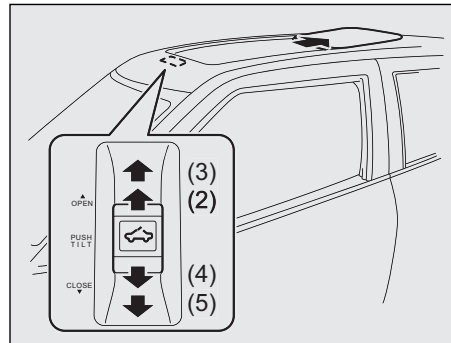

76TS70020

You can open the sunroof manually by sliding the sunroof switch to position (2) in "OPEN" direction. The sun shade will open and then the sunroof will open.

When you slide the sunroof switch to position (3) in "OPEN" direction once, the sunshade will open fully. When you slide the

sunroof switch to position (3) in "OPEN" direction again for the second time, the sunroof will open and stop before the full-open position.

When you slide the sunroof switch to position (3) in "OPEN" direction again for the third time, the sunroof will open fully. When you slide and hold the sunroof switch at position (3) in "OPEN" direction for more than 1 second, the sunshade will open fully and then the sunroof will open and stop before the full-open position. When you slide the sunroof switch to position (3) in "OPEN" direction again, the sunroof will open fully.

To stop the sunshade or sunroof during the operation, press or slide the switch in any direction briefly.

OTHER CONTROLS AND EQUIPMENT

To Close the Sunroof

You can close the sunroof manually by sliding the sunroof switch to position (4) in "CLOSE" direction. The sunroof will close and then the sunshade will close.

When you slide the sunroof switch to position (5) in "CLOSE" direction once, the sunroof will close fully. When you slide the sunroof switch to position (5) in "CLOSE" direction again for the second time, the sunshade will close fully.

When you slide and hold the sunroof switch at position (5) in "CLOSE" direction for more than 1 second, the sunroof will close fully and then the sunshade will close fully.

To stop the sunroof or sunshade during the operation, press or slide the switch in any direction briefly.

There is a system to prevent being pinched by the sunroof.

When the system senses that something is pinched when the sunroof is sliding forward or tilting down, the sunroof will automatically reverse direction and slide back or tilt up. This system will operate when the sunroof is closing or tilting down automatically.

Check that there are no hands or other obstructions in the path of the sunroof when you close the sunroof even though there is a system to prevent being pinched by the sunroof.

WARNING


The system to prevent being pinched by the sunroof may not work if the lead-acid battery is not sufficiently charged.

CAUTION

The system to prevent being pinched by the sunroof does not work in the area where the sunroof is almost completely closed.

If the system to prevent being pinched by the sunroof does not operate properly, close the sunroof fully by using the sunroof switch and ask your dealer to have the system inspected.

Assist Grips

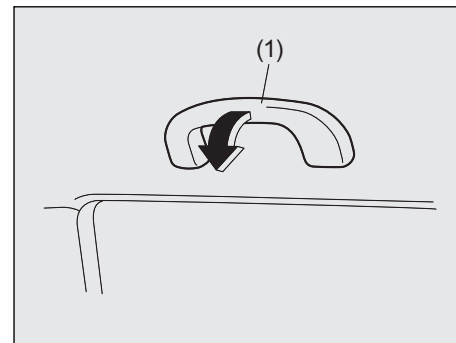


80J1233

Assist grips are provided for convenience. Pull the assist grip (1) towards you.

NOTICE

To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.

Coat Hooks

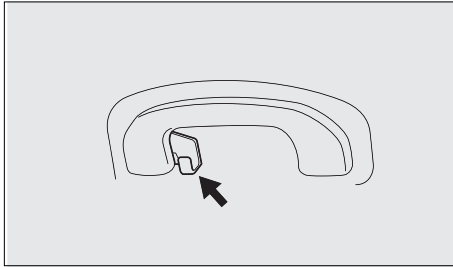

55T070060


You can hang clothing on the coat hooks. These hooks are not designed for large or heavy items and are located with rear right assist grip.

⚠ WARNING

If your vehicle is equipped with side curtain airbags, do not hang sharp items like a hanger on the coat hook. When hanging the clothes, hang them on the hook without using a hanger.

NOTICE

To avoid breaking the hook, do not hang items heavier than the following weight.
Coat hook: 2 kg

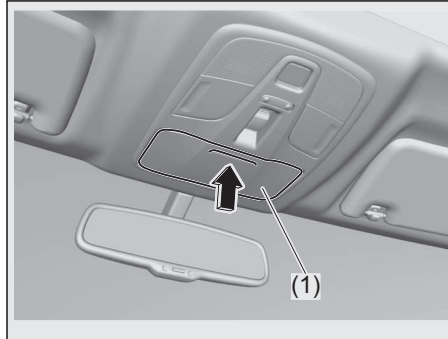Overhead Console
(if equipped)

76TS70280

Use this stowage to keep small articles. You can open the lid (1) by pressing the raised portion on it.

⚠ WARNING

- Do not drive with the overhead console lid open, or the articles stowed inside could fall down during braking, acceleration or in the event of a collision. Always close the lid after putting something into or taking something out of the console.
- If you park your vehicle outdoors in direct sunlight or in hot weather, the overhead console can get very hot since it is close to the roof. So, when parking in such conditions:
 - Do not leave eyeglasses and plastic cards etc. in the overhead console. The heat may distort plastic lenses or frames.
 - Do not place flammable items, such as a lighter, in the overhead console. The heat may cause a fire.

⚠ CAUTION


Use this stowage to keep small articles. If you store heavy or large articles, the lid may open due to the impact during driving, the contents may pop out, and the console may be damaged.

OTHER CONTROLS AND EQUIPMENT

NOTICE

- Do not apply undue force to the lid when closing it. Doing so could break the lid and articles inside.
- Place glasses in a case when stowing them in the overhead console, or the lenses may be damaged.

Footrest

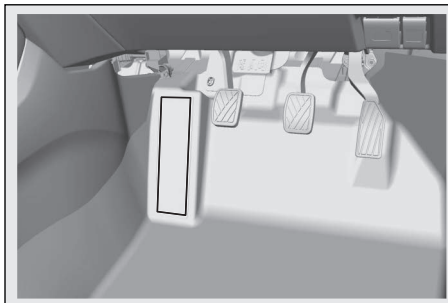

76TS70290

Use the footrest as a support for your left foot only.

Door Pocket

Front



76TS70420

Rear



76TS70430

Each pocket is provided for holding light and soft things such as gloves, newspapers or magazines.


⚠ CAUTION

- If an accident occurs, objects such as bottles, cans, etc. in the door pocket can injure the occupants. Do not put hard or breakable objects in the door pocket.
- If you grab and pull the door pocket, it may be broken, resulting in personal injury. When closing a door, do not grab and pull the door pocket.

NOTE:

If you place the keyless remote controller in a door pocket, it may not be detected.

USB Socket (if equipped)

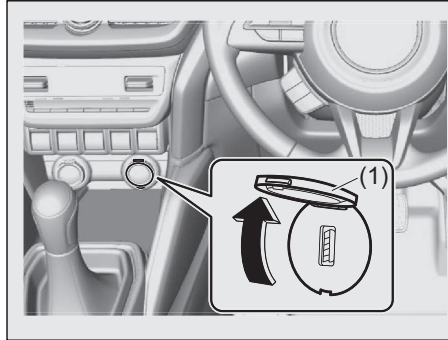

76TS70310

Open the cover (1), and then connect your portable digital music player, etc. to this socket to enjoy music through the vehicle's audio system. Refer to the supplementary manual for details.

⚠ WARNING

If foreign material enters the USB socket, a malfunction or a short circuit may occur. Always close the cover when the USB socket is not in use.

USB Charging Sockets (if equipped)

When the ignition mode is ACC or ON, you can charge your mobile device such as your smart phone by using the connecting cable (commercial item) connected to the two Type-C charging sockets.

The total maximum output capacity of two sockets is 60 W.

The capacity of the first connected socket:

15 V / 3.0 A (45 W)*

The capacity of the subsequently connected socket:

5 V / 3.0 A (15 W)

* The maximum output capacity of the first connected socket is 45W, and the output capacity is automatically adjusted depending on the connected device.



76TS70331

OTHER CONTROLS AND EQUIPMENT

NOTICE

Do not charge your mobile device for a long period of time, while the engine is stopped. Otherwise, the lead-acid battery may run out.

NOTE:

- The priority of the socket's output capacity varies depending on the supported voltage of the connected device and the vehicle conditions.
- The USB charging socket should be used only for charging.
- For some models, charging may pause. However, this is not a malfunction.
- Depending on the vehicle conditions such as the following examples, charging may temporarily pause.
 - When the inside temperature of the vehicle is high after parking the vehicle under the blazing sun
 - When the engine is started

Wireless Charger (if equipped)

Smart phone equipped with wireless charging function, can be charged by placing it on the charging area, provided the device is Qi certified as per Wireless Power Consortium. Wireless Charger can support only one smart phone at a time.

The wireless charger cannot be used with a smart phone that is larger than the charging area. Additionally, depending on the smart phone, the wireless charger may not operate properly. Refer to the operation manual of the smart phone.


Wireless charger uses inductive charging technology to charge the smart phones. Inductive charging system are less efficient than conventional charging through cable. As a result, user may experience higher device temperature during charging.

The “Qi” Symbol



76TS70360

The “Qi” symbol is a trademark of the Wireless Power Consortium.

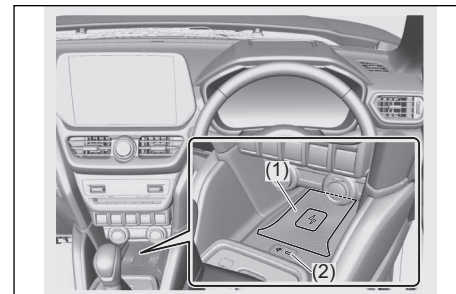

76TS70340

- (1) Wireless charger
- (2) Indicator light

⚠ WARNING

Caution while driving

- When charging a smart phone while driving, for safety reasons, the driver should not operate the portable device.

Caution regarding interference with Electronic Devices

- People with implantable cardiac pacemakers, cardiac resynchronization therapy pacemakers or implantable cardioverter defibrillators, as well as any other electrical medical device, should consult their physician about the usage of the wireless charger. Operations of the wireless charger may have an affect on medical devices.

(Continued)

⚠ WARNING

(Continued)

To prevent damage or burns

- Observe the following precautions. Failure to do so may result in the possibility of fire, equipment failure or damage, or burns due to heat.
- Do not put any metallic objects between the charging area and the portable device while charging.
- Do not attach metallic objects, such as aluminum stickers, to the charging area.
- Do not cover the wireless charger with a cloth or other object while charging.
- Do not attempt to charge portable devices which are not compatible with the Qi wireless charging standard.
- Do not disassemble, modify or remove the wireless charger.
- Do not apply force or impact to the wireless charger.
- Do not spill liquid such as water, drinks, etc. over the wireless charger or the smart phone.

⚠ CAUTION

Phones which are having magnetic array (for alignment / to fix with chargers) may have different charging performance / may get heat up depending upon the type of phones.

NOTICE

Conditions in which the wireless charger may not operate correctly

In the following situations, the wireless charger may not operate correctly:

- When a smart phone is fully charged
- When there is a foreign object such as metal objects between the charging area and a smart phone
- When dust and other debris are on the charging pad
- When a smart phone becomes hot while charging
- When a smart phone is placed on the wireless area with its charging surface facing up
- When a smart phone is not centered on the charging area
- When the vehicle is near a TV tower, electric power plant, gas station, radio station, large display, air-port or other facility that generates strong radio waves or electrical noise

(Continued)

OTHER CONTROLS AND EQUIPMENT

NOTICE

(Continued)

•When the smart phone is in contact with, or is covered by any of the following metallic objects:

- Any object such as cards, cigarette boxes etc. that contains aluminum foil
- Metallic wallets or bags
- Coins
- Metal hand warmers
- Media such as CDs and DVDs

•When wireless keys (that emit radio waves) other than those of your vehicle are being used nearby.

•Vehicle Smart Key FOB operation might be impacted due to wireless charging function. Keep the Key FOB away from the wireless charger to avoid situation where vehicle is unable to detect the Key FOB.

•If in situations other than above the wireless charger does not operate properly wireless charger may be malfunctioning. In this case, please refer Error/Malfunction table.

(Continued)

NOTICE


(Continued)

To prevent failure or damage to data Do not bring magnetic cards, such as a credit card, or magnetic recording media, close to the Wireless Charger while charging. Otherwise, data may be erased due to the influence of magnetism.

Additionally, do not bring precision instruments such as wrist watches, close to the Wireless Charger, as such objects may malfunction.

To prevent Vehicle battery discharge Do not use the wireless charger for a long period of time with engine stopped. Prolong charging may impact the vehicle battery health.

Using the Wireless Charger

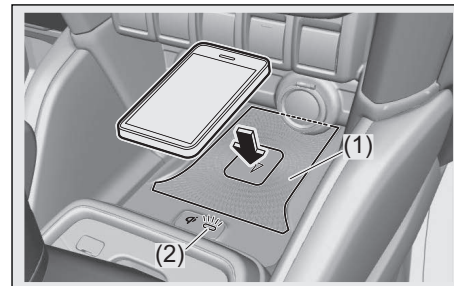

76TS70380

This wireless charger is Qi version 1.2.4 certified. To check the Qi version of your smartphone, please refer to the official Product List on the Wireless Power Consortium website.

To start wireless charging, place a smart phone equipped with wireless charging function at the center of wireless charger. Firmly close all the doors (including the tailgate) and press the engine switch to change the ignition mode to ON or ACC.. If the ignition mode is LOCK (OFF), wireless charging is not possible.

Place a smart phone on the wireless charger (1) with its charging surface facing down.

While charging, the indicator light (2) (blue) will be illuminated.

If charging does not begin, place the smart phone at the center of the charging area.

When charging is complete, the operation indicator light (2) (green) will illuminate.

NOTE:

- *You can choose to turn the wireless charging function ON or OFF in the user settings mode on the Infotainment/Head Unit. For more details, refer to the manual of the Infotainment/Head Unit.*
- *Charging might take few seconds to initiate depending on a portable device or a smart phone.*
- *If a certain amount of time has elapsed since charging completed and the portable device has not been moved, the wireless charger will restart charging.*
- *If the portable device is moved within the charging area, charging will stop temporarily and then restart.*
- *Non-compatible /Non Qi certified smart phone may generate FOD/Error alerts.*
- *The charging performance may vary or phone may get heated up depending upon the type of phone and its specifications.*

The surface of the portable device or smart phone may slightly heat up during charging process which is normal.

OTHER CONTROLS AND EQUIPMENT

Wireless charger indicator light status

Indicator light*	Description
Off	Wireless charger OFF
Amber	Wireless charger activated and ready to charge
Blue	Charging in progress
Green**	Charging completed

*: Indicator light intensity may vary depending on the vehicle/ weather condition.

**: Depending on the smart phone, the indicator light may not turn green even after charging completion.

Error / malfunction status

Indicator light	Description**	Measure
Red blinking	Presence of any foreign object (metallic object) or the mobile is displaced from the charging area.	Remove the foreign object including phone cover (having metallic content). Align the phone at the center.
	Smart phone temperature is too high.	Turn off the wireless charger, remove the phone and wait for sometime for get it cool.
	Wireless charger temperature is too high.	Turn off the wireless charger and wait for sometime for get it cool.
	Wireless charger is not able to communicate with the vehicle.	Contact your nearest Maruti Suzuki authorized workshop if error persists
Red continuous	1) Non compatible device/ an object having high metallic content placed on Wireless Charger 2) Non-recoverable failure might have occurred.	1) Remove the object or device and restart the vehicle. 2) Contact your nearest SUZUKI authorized workshop if error persists.

**: Go to wireless charger screen in the Infotainment system to see the details of error / malfunction.

NOTE:

- If there is communication loss between Infotainment System & Wireless Charger, Wireless Charger screen may not be visible. In this case contact your nearest SUZUKI authorized workshop. Indicator Unit may indicate Red Blinking/ Red Continuous alert based on the communication between the Smart phone and Wireless Charger.
- Indicator Unit may indicate Red Blinking/ Red Continuous alert based on the communication between the Smart phone and Wireless Charger.

The wireless charger can be operated when

The vehicle is in ACC or ON mode.

Smart Phones that can be charged

Smart Phones compatible with the Qi wireless charging standard can be charged by the wireless charger. However, compatibility with all devices which meet the Qi wireless charging standard is not guaranteed.

If a cover or accessory is attached to the portable device

Do not charge a Smart Phone if a cover or accessory which is not Qi compatible is attached. Depending on the type of cover and/or accessory attached (e.g. if a cover is very thick or has metal ring attached to the cover), it may not be possible to charge the smart phone. If the smart phone is placed on the charging area and does not

charge, remove the cover and/or accessories.

If interference is heard in AM radio broadcasts while charging

Some noise may be heard while using the wireless charger.

The wireless charging function gets interrupted when any of the following condition is encountered

- Vehicle is in ACC off mode.
- When vehicle battery is too low.
- When the engine switch / the power switch is pressed or the brake / the clutch is pressed during cranking of the vehicle. Charging will be re-initiated once the vehicle is successfully cranked or the brake / the clutch is released
- If in situation other than the above, Wireless Charger will not operate till the key search event is happening.
- Depending on the vehicle drive mode condition, charging might be impacted.
- When any of the vehicle door (including the tailgate) is opened or the Key Fob is taken out of the vehicle. Charging will be initiated once all doors are closed and the Key Fob is inside the vehicle
- The wireless charger is turned off in the user settings screen on the Infotainment
- When temperature increases abnormally inside the wireless Charger or the smart phone gets overheated.
- When interior temperature of Wireless Charger goes beyond the set temperature, charging will stop. Once the tem-

perature comes within the operating range, charging function will resume.

- When the smart phone is displaced during vehicle running condition, charging may be impacted.
- The vehicle is parked at a place where there is strong electromagnetic waves or noises such as FM/AM station, TV station, electric power plant or gas station etc.
- For certain smart phones, wireless charging speed may vary and charging may stop due to their own protection mechanisms defined by smart phone manufacturer.
- For certain smart phones charging stop alert may be displayed depending on smart phone manufacturer and it should not be considered as a malfunction of the Wireless Charger
- User may face intermittent /No charging issue based on the smart phone size/ position and it should not be considered as malfunction of the Wireless Charger.
- Forceful insertion of smart phone may damage the Wireless Charger.

When the smart phone placed on wireless charger is connected to USB cable

It charges by means as defined by the smart phone manufacturer. Based on the above indicator LED status will get change and user may get different Malfunction/ Error alerts

OTHER CONTROLS AND EQUIPMENT


Cleaning the wireless charger

WARNING

Do not let the wireless charger get wet. Failure to do so may cause the charger to become hot and cause burns or could cause electric shock resulting in death or serious injury.

- Do not use oil, grease, alcohol, benzene or thinner for cleaning the charging pad.
- Do not cover the charging pad with towels, clothing, or other objects while charging etc.
- Do not spray aerosols which may come in contact with the charging pad surface.

Front Seatback Pocket (if equipped)

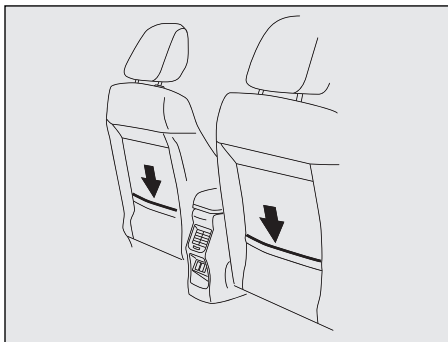


76TS70390

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

CAUTION

- If an accident occurs, objects such as bottles, cans, etc. can injure the occupants in the rear seat. Do not put hard or breakable objects in the pocket.
- If you put sharp or heavy objects in the pocket, the seat may be damaged. Do not put sharp or heavy objects in the pocket.

Luggage Compartment Hook

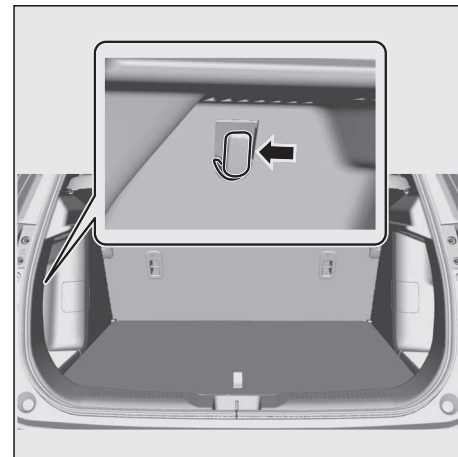

76TS70680


You can hang the shopping bag or other suitable objects on the hook. This hook is not designed for large or heavy items.

NOTICE

To avoid breaking the hook, do not hang items heavier than the following weight.

Shopping hook: 1 kg

Luggage Compartment Cover (if equipped)

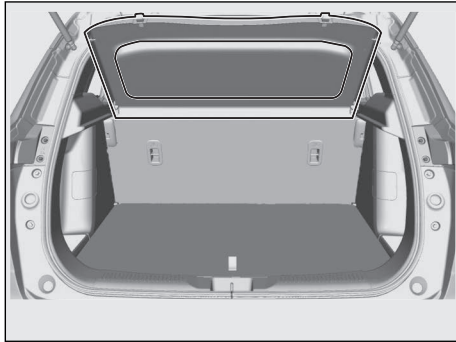

76TS70690

Luggage or other cargo placed in the luggage compartment is hidden from view by a luggage compartment cover.

WARNING

Do not carry items on top of the luggage compartment cover, even if they are small and light. Objects on top of the cover could be thrown about in an accident, causing injury, or could obstruct the driver's rear view.

Luggage Compartment Board

Your vehicle is equipped with the luggage compartment board in the luggage compartment. You can place luggage or other cargoes on the board or under the board. You can also place tall luggage by removing the board from the luggage compartment.


WARNING

The luggage areas do not feature a structure that can accommodate people. Do not allow a child to ride in such areas. Otherwise, there is the danger of accidents due to sudden braking, etc. Do not let a child play in luggage areas even while the vehicle is stopped on the road.


CAUTION

If you are not careful when handling the luggage board, you could be injured. Handle the luggage board carefully when removing or installing it.

M15D model

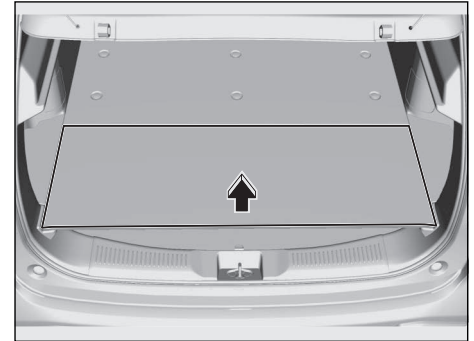

76TS70700

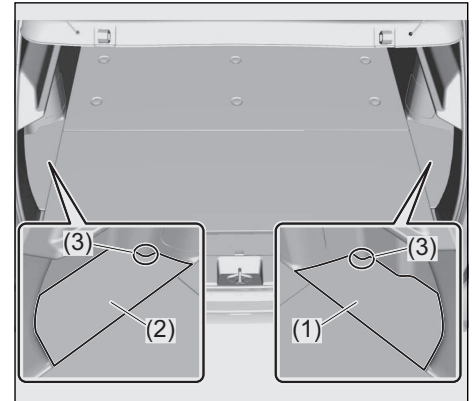


76TS70840


OTHER CONTROLS AND EQUIPMENT

You can remove the luggage compartment board (right side) (1) and luggage compartment board (left side) (2) by hooking your fingers into these spaces (3) and pulling them.

K15C model

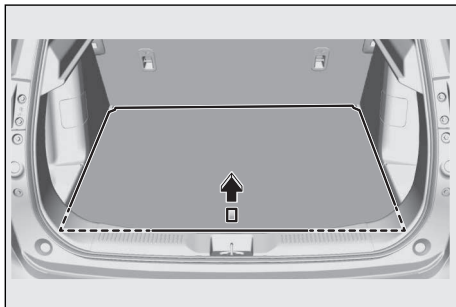

76TS70860

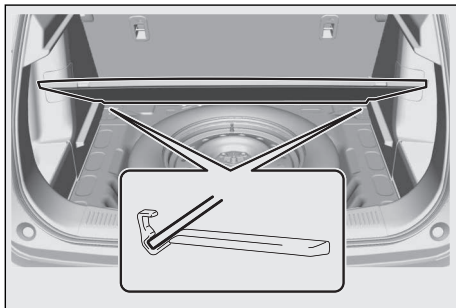


76TS70850

The luggage compartment board can be held open as shown in the illustration.

NOTICE

- If the luggage compartment board is held open while driving, it can be damaged. Do not hold open the board while driving.
- When the luggage compartment board rests against the protruding part, do not slide the rear seat rearward or do not recline the rear seat-back rearward. The luggage compartment board, the peripheral parts or the stored objects may be damaged.

Roof Rails (if equipped)

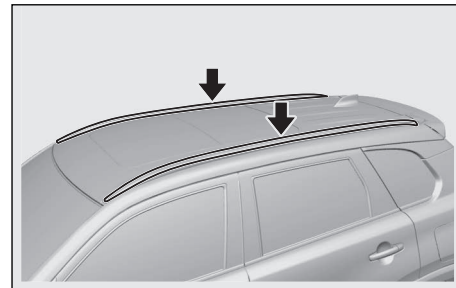

76TS70710

You can use the roof rails to attach the optional roof rack which is available at your Maruti Suzuki authorized workshop. If you use a roof rack, observe the instructions and precautions in this section and provided with the roof rack.

- Check that the roof rack is securely installed.
- To mount various types of cargo (such as skis, bicycles, etc.) properly, use suitable attachments which are available at your Maruti Suzuki authorized workshop. Install the attachments properly and securely according to the instructions provided. Do not mount cargo directly on the roof panel. The cargo can damage the roof panel.

- The gross weight of the roof rack plus cargo must not exceed the loading capacity.
 - Roof rails: 75 kgAlso, do not let the gross vehicle weight (fully loaded vehicle including driver, passengers, cargo, roof load and trailer tongue weight) exceed the Gross Vehicle Weight Rating (GVWR) listed in the "SPECIFICATIONS" section.
- Mount and secure the cargo onto the roof rack properly according to the instructions provided. Stow the heaviest items at the bottom and distribute the cargo as evenly as possible.
- Do not carry large items that hang over the bumpers or the sides of the vehicle. Otherwise, these items could block your view.
- Secure the front and rear ends of long items such as wood panels and surfboards, to both the front and rear of the vehicle. You should protect the painted surfaces of the vehicle from scuffing caused by tie-down ropes.
- Check periodically that the roof rack is securely installed and free from damage.


**WARNING**

- **Abrupt maneuvers or failure to properly secure cargo can allow the cargo to fly off the vehicle and hit others, causing personal injury or property damage.**
- **Mount cargo securely and avoid abrupt maneuvers such as jackrabbit starts, sharp turns, fast cornering and sudden braking. Check periodically that cargo is securely fastened.**
- **Large, bulky, long or flat items can affect vehicle aerodynamics or be caught by the wind, and can reduce vehicle control resulting in an accident and personal injury. Drive cautiously at a safely reduced speed when carrying this type of cargo.**

OTHER CONTROLS AND EQUIPMENT

Heating and Air Conditioning System


Air Outlet

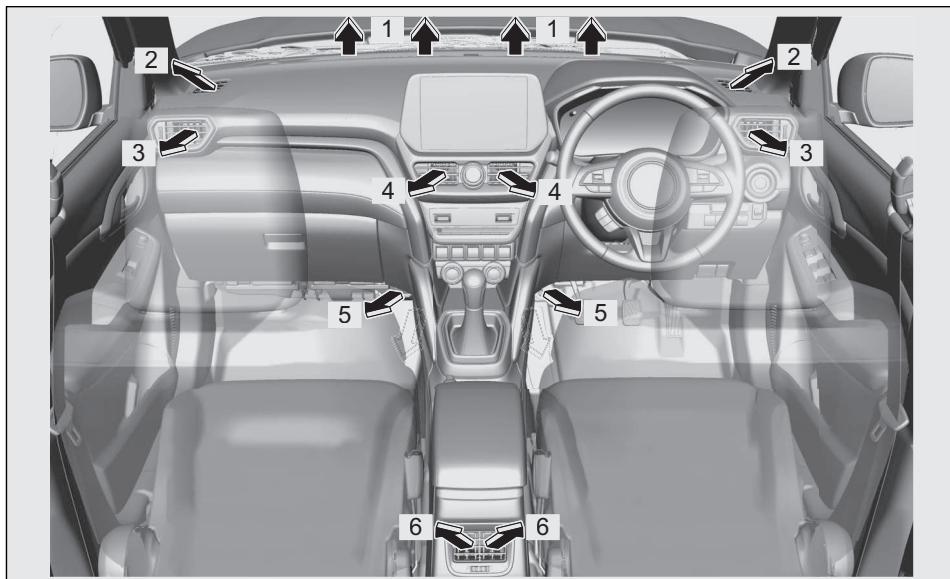

76TS70450

1. Windshield defroster outlet
2. Side defroster outlet
3. Side outlet
4. Center outlet
5. Floor outlet
6. Rear outlet

Center outlet

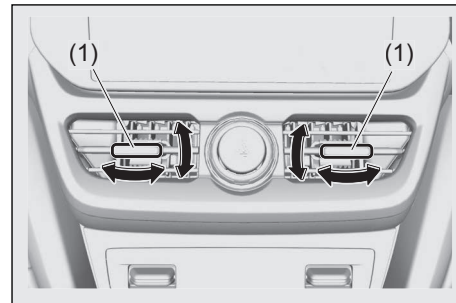


76TS70460

Move the knob (1) vertically or horizontally to adjust the direction of airflow as desired.

CAUTION

Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.

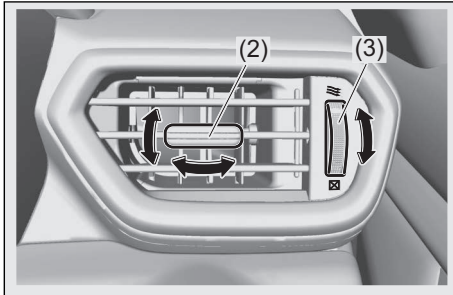Side outlet and rear outlet

76TS70470



55T070120

When open, air comes out regardless of the air flow selector position. Move the knob (2) vertically or horizontally, to adjust the direction of airflow as desired. The side outlet opens when you turn the dial (3) upward and closes when you turn it downward. The rear outlet opens when you move the dial (3) to the right and closes when you move it to the left.

⚠ CAUTION

Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.


NOTE:

- For side outlet, if the front door windows are fogged, adjust to direct wind from the side outlets towards the front door windows. This will allow you to remove fog more quickly.
- The airflow from the rear outlet can be increased by fully moving the center outlet knob (1) to the inner side.

OTHER CONTROLS AND EQUIPMENT


Automatic Heating and Air Conditioning System (Climate Control)

Description of Controls

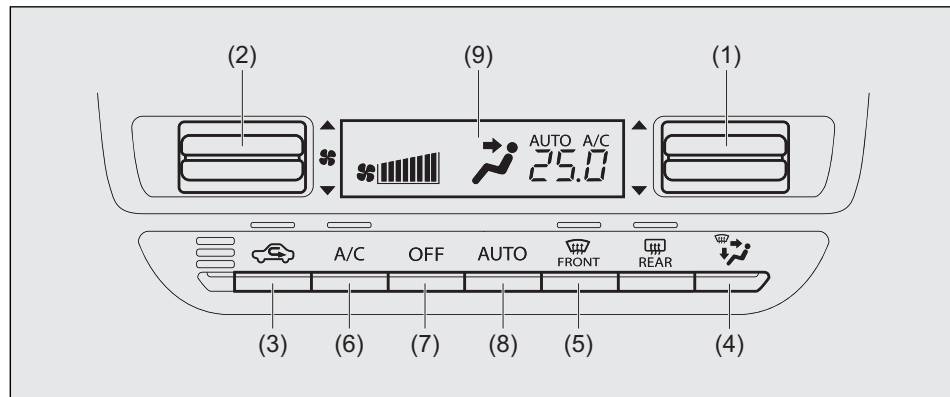

- (1) Temperature selector
- (2) Blower speed selector
- (3) Air intake selector
- (4) Air flow selector
- (5) Defrost switch
- (6) Air conditioning switch
- (7) "OFF" switch
- (8) "AUTO" switch
- (9) Display

Temperature selector (1)

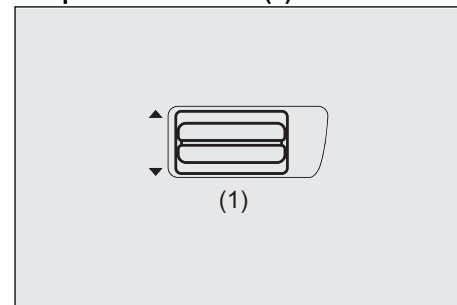


Push upper part or lower part of the temperature selector (1) to adjust the temperature. The display (9) shows the selected temperature.

NOTE:

If you push the temperature selector (1) until "HI" or "LO" appears on the display, the climate control system will operate at maximum heating or cooling. The temperature of the air from the outlets may change suddenly while "LO" or "HI" is displayed, but this is normal.

Blower speed selector (2)

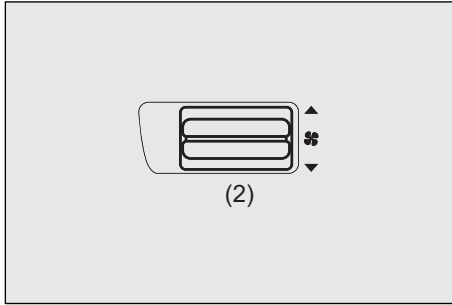


55T070150

The blower speed selector (2) is used to turn on the blower and to select blower speed.

If the "AUTO" switch (8) is pushed, the blower speed will vary automatically as the climate control system maintains the selected temperature.

Air intake selector (3)

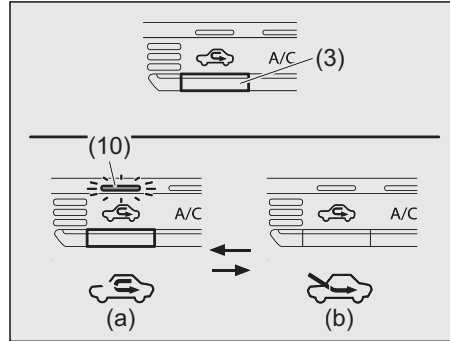

55T070160

Push the air intake selector (3) to change between the following modes.

If the "AUTO" switch (8) is pushed, the air intake will vary automatically as the climate control system maintains the selected temperature.

NOTE:

When you select the recirculated air mode, the automatic operation system is deactivated if you push the "AUTO" switch (8).

RECIRCULATED AIR (a)

When this mode is selected, inside air is recirculated. At the same time, the indicator light (10) will turn on. This mode is suitable when driving through an area with polluted air such as a tunnel, or when attempting to quickly cool down the vehicle or to reduce unwanted odor from entering the vehicle.

FRESH AIR (b)

When this mode is selected, outside air is introduced. At the same time, the indicator light (10) will turn off.


The fresh air position (b) and recirculated air position (a) are selected alternately each time the air intake selector is pushed.

NOTE:

If you select the recirculated air position (a) for an extended period of time, the air in the vehicle may become contaminated. Therefore, you should occasionally select the fresh air position (b).

OTHER CONTROLS AND EQUIPMENT


Air flow selector (4)

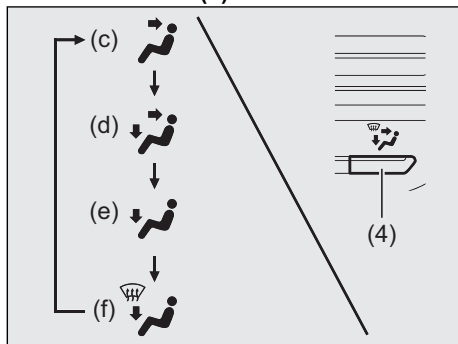

Push the air flow selector (4) to change among the following functions. The indication of the selected mode appears on the display.


If the “AUTO” switch (8) is pushed, the air flow will vary automatically as the climate control system maintains the selected temperature.

Ventilation (c)

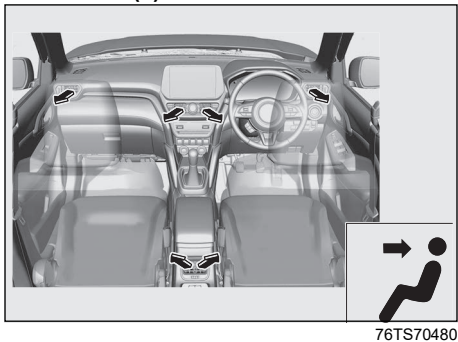


Temperature-controlled air comes out of the center, side and rear outlets.

Bi-level (d)

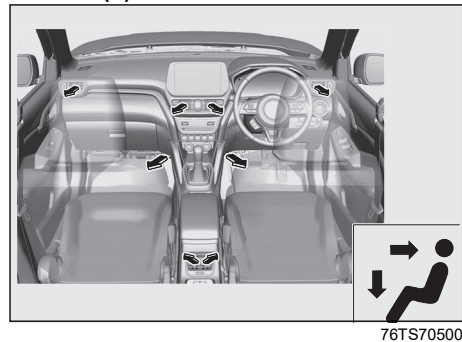


Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center, side and rear outlets. When the temperature selector (1) is in the fully COLD position or fully HOT position, however, the air from the floor outlets and the air from the center, side and rear (if equipped) outlets will be the same temperature.

Heat (e)

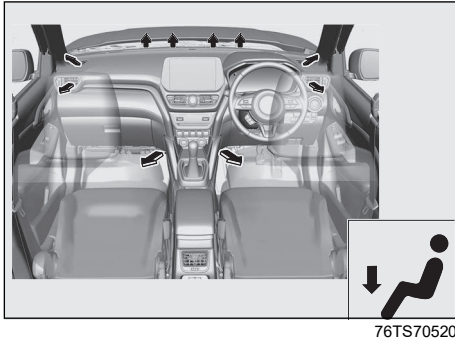


Temperature-controlled air comes out of the floor outlets and the side outlets, also comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.

Heat and defrost (f)

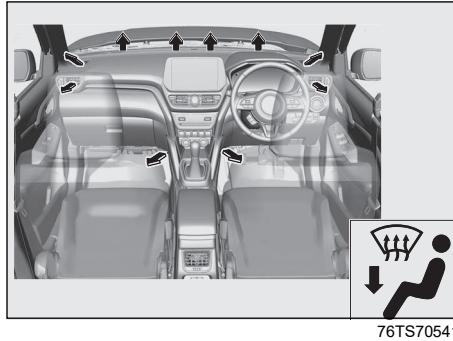


Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.

Defrost switch (5)

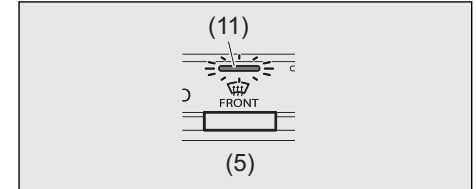

Push the defrost switch (5) to turn on the defroster. At the same time, the indicator light (11) will turn on.

Defrost

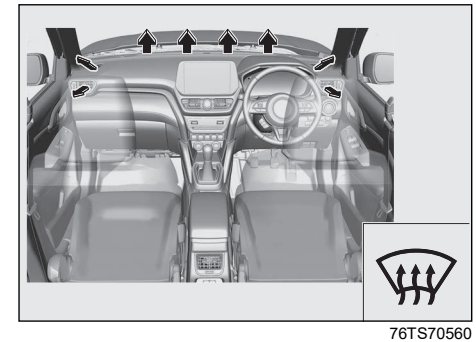


Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

OTHER CONTROLS AND EQUIPMENT

NOTE:

When the defrost switch (5) is pushed to turn on the defroster, the air conditioning system will come on and the fresh air position (b) will be selected automatically. In very cold weather, however, the air conditioning system will not turn on.

Air conditioning switch (6)

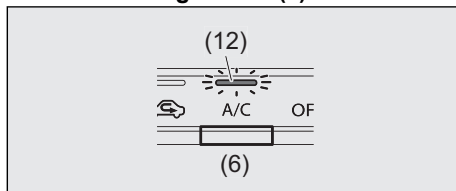

59RN07190

The air conditioning switch (6) is used to turn on and off the air conditioning system only when the blower is on. Push in the switch to turn on the air conditioning system. At the same time, "A/C" will appear on the display and the indicator light (12) will turn on.

Push in the switch again to turn off the air conditioning system. At the same time, "A/C" will go off and the indicator light (12) will turn off.

Models with idling stop system


When the engine is stopped automatically, the air conditioner switches to the ventilation position (a).

NOTE:

- If the cooling and heating performance is insufficient when the engine is stopped automatically, push the idling stop system OFF switch to deactivate the idling stop system. (The engine is restarted automatically, and the cooling and heating performance is restored.)
- If the windshield and/or front door windows are fogged, push the defrost switch. (When the defrost switch is pushed, the engine is restarted automatically and the defroster is turned on.)

System Operating Instructions

Automatic operation

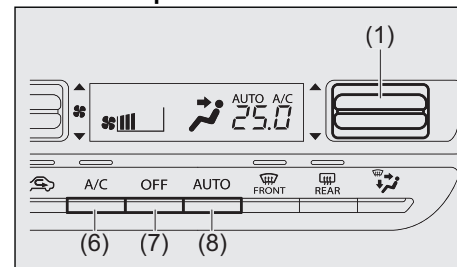

55T070180

You can let the climate control system work automatically. To set the system for fully-automatic operation, follow the procedure below.

- 1) Start the engine.
- 2) Push the "AUTO" switch (8).
- 3) Set the desired temperature by pushing the temperature selector (1).
- 4) Push air conditioning switch (6). You can use the air conditioning switch (6) to manually turn the air conditioner on or off according to your preference. When you turn the air conditioning switch off, the climate control system cannot lower the inside temperature below outside temperature.

The blower speed, air intake and air flow are controlled automatically to maintain the set temperature. However, the air flow is not changed to the defrost position automatically.

NOTE:

When you select the recirculated air mode, the automatic operation system is deactivated if you push the "AUTO" switch (8).

You can use the air conditioning switch (6) to manually turn the air conditioner on or off according to your preference. When you turn the air conditioning switch off, the climate control system cannot lower the inside temperature below outside temperature.


To turn the climate control system off, push the "OFF" switch (7).

NOTE:


If the "AUTO" on the display blinks, there is a problem in the heating system and/or air conditioning system. You should have the system inspected by a Maruti Suzuki authorized workshop

NOTE:

- To find the temperature at which you are most comfortable, start with the 25°C (75°F) setting.
- If you push the temperature selector (1) until "HI" or "LO" appears on the display, the climate control system will operate at maximum heating or cooling and the blower will run at full speed.
- To avoid blowing cold air in cold weather or hot air in hot weather, the system will delay turning on the blower until warmed or chilled air is available.
- If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly.
- Even under the automatic operation, you can set individual selectors to the manual mode. The manually selected functions are maintained, and the other functions remain under automatic operation.
- If the windshield and/or the front door windows are fogged, push the defrost switch (5) to turn on the defroster, or push the air flow selector (4) to change the air flow to the heat and defrost position (f) to defog the windows.
- To return the blower speed selector (2), air intake selector (3), and air flow selector (4) to automatic operation, push the "AUTO" switch (8).

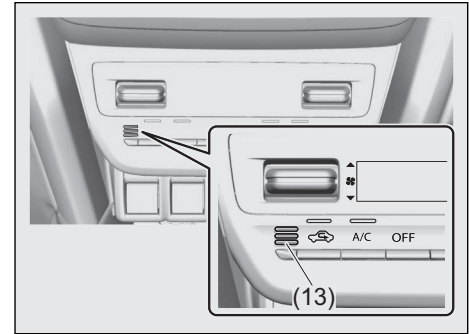

76TS70600

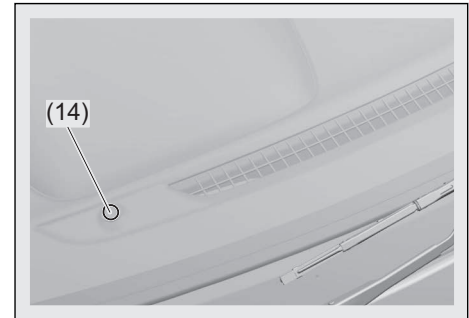


76TS70610

Be careful not to cover the interior temperature sensor (13) located on the climate control panel, or the solar sensor (14) located at the top of the driver's side dashboard. These sensors are used by the automatic system to regulate temperature.

OTHER CONTROLS AND EQUIPMENT

Manual Operation

You can manually control the climate control system. Set the selectors to the desired positions.

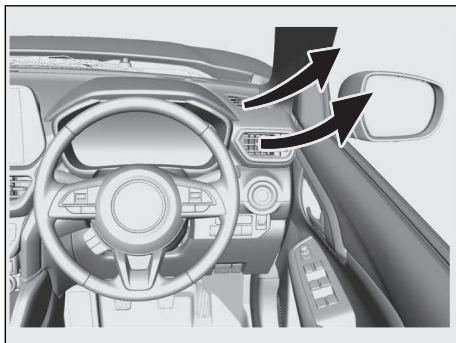

76TS70580

NOTE:

If you need maximum defrosting, take the following procedure:

- 1) Push the defrost switch (5) to turn on the defroster (the air conditioning system will come on and the fresh air position (b) will be selected automatically).
- 2) Set the blower speed selector to HIGH.
- 3) Adjust the temperature selector to the "HI" indication on the display.
- 4) Adjust the side outlets so the air blows on the side windows.

Auto Purify (if equipped)

You can reduce the concentration of the particulate matter like PM2.5 in the air inside of the vehicle by using the Auto Purify feature.

While the Auto Purify feature is in operation, the climate control system may automatically switch to internal air circulation and control blower speed.

For details on how to use this feature, refer to the owner's manual of infotainment system.

For the display contents, refer to the table below.

PM2.5 concentration range ($\mu\text{g}/\text{m}^3$)	Color name	Level
0-29	Green	Good
30-59	Light Green	Satisfactory
60-89	Yellow	Moderate
90-119	Orange	Poor
120-249	Red	Very Poor
250-999	Dark red	Severe

NOTE:

- The PM2.5 concentration displayed is the value of the air in the vehicle at the particular instant and differs from the one published by govt agencies, 3rd parties and by other external devices. It may be used as an indicative guide for PM2.5 inside the vehicle.
- Using recommended Maruti Suzuki genuine Air conditioner filter capable of filtering PM2.5 and following the maintenance schedule ensures correct functioning of Auto Purify.
- If the outside temperature is low, the air conditioner is not operating, the defroster is operating, this feature may not be available or may turned off even when functioning.
- When using the following switches of the climate control system, Auto Purify will turn OFF to give preference to USER request
 - Blower speed selector
 - Air intake selector
 - Air conditioning switch
 - "OFF" switch
 - "AUTO" switch
 - Defrost switch

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

Your air conditioner is equipped with air filters. Clean or replace them as specified in "Maintenance Schedule" in the "INSPECTION AND MAINTENANCE" section. Have this job done by a Maruti Suzuki authorized workshop as the lower glove box must be lowered for this job.

NOTE:

Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called R-134a. R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

NOTE:

*For the vehicle with hybrid system:
Do not leave the air conditioning system on longer than necessary when the hybrid system is off.*

How to Use Air Conditioning System Effectively


Parking under the blazing sun

After parking for a long time under the blazing sun, the interior temperature can become very high. Use the air conditioning system, with the windows or doors opened to ventilate the interior.

Ventilated Seats (if equipped)

The fans for ventilated seats breathe air and ventilate the seat surface through small vent holes on the surface of the seat cushions and seatbacks.

You can use the seat ventilation when you want to get a cool feeling and reduce a stuffy feeling.

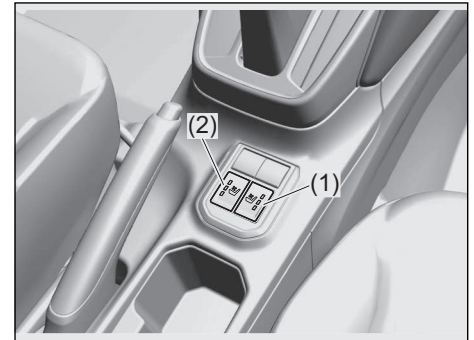


76TS70740

- (1) Air ventilation switch (right side)
- (2) Air ventilation switch (left side)

OTHER CONTROLS AND EQUIPMENT

Each time you press the switch, the airflow will change as follows:

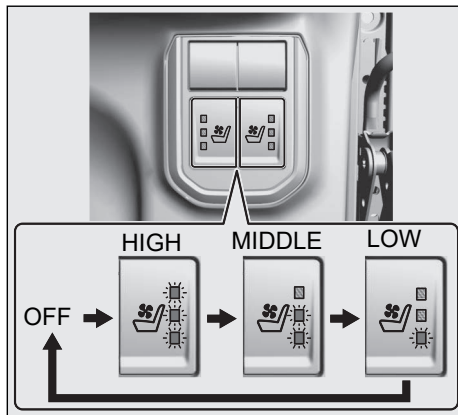

76TS70750

- The ventilated seat defaults to the OFF position whenever the ignition is turned ON.
- Depending on the airflow of the ventilated seat, the operating sound of the fan motor will vary. Adjust the airflow for both the air conditioner and the ventilated seat to your preference.
- If you use the air conditioner and the ventilated seat at the same time, they will inhale cool air around the driver and/or the front passenger. So that, you can effectively feel coolness.

⚠ CAUTION

- Never use a solvent such as paint thinner, benzene, alcohol or gasoline to clean the seats.
- Do not use the ventilated seat in the following situations:
 - The seat is not occupied.
 - There are objects on the seat, such as a child seat, newspapers, plastic bags.
- For the ventilated seat, do not use the objects which cover the seat surface, such as the seat cover and the seat cushion.
- If you spill any liquid, wipe it off immediately. Do not use the air ventilation function until the seat becomes dry. Contact of liquid with the seat ventilation system may impact its functionality.
- Do not place any sharp or heavy object on the passenger seat which can penetrate through seat upholstery and can cause damage to the ventilation system.
- If there is any problem with the seat ventilation system, visit a Maruti Suzuki authorized workshop for further assistance.

(Continued)

⚠ CAUTION

(Continued)

- The battery can be discharged if the seat ventilation system is used for a long time with the ignition mode ON and without engine running.
- If small vent holes on the surface of the seat cushions and seatbacks are clogged with dust and dirt, the air suction force for the ventilated seat may weaken. In this case, clean the seat surface by the vacuum cleaner.
- For lubrication of the motor rotating part, the ventilated seat will operate for a short period of time with the ignition mode ON.

Installation of Radio Frequency Transmitters

We recommend that you always ask an authorized Maruti Suzuki workshop about frequency band, max output power, antenna position of vehicle and specific conditions for installation and/or use before installing a radio transmitter in your vehicle. Such equipments may cause the electronic control system to malfunction if they are incorrectly installed or they are not suited for the vehicle.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios or any other wireless transmitters may cause electronic interference with your vehicle's ignition system or any other electrical systems resulting in vehicle performance problems. Consult a Maruti Suzuki authorized workshop for advice.

Audio Function

When Using Audio System with Appropriate Volume not to Disturb Safe Driving

- When playing music or other audio, if a mobile phone is used inside or nearby the vehicle, noise may be heard from the speakers. This does not indicate a malfunction.
- Navigation and audio equipment may not function properly if they are interfered with unauthorized radio waves.
- For further information about the features of the navigation or audio equipment, refer to the instruction manuals.

⚠ WARNING

If you operate the navigation or audio equipment, you may be distracted by them, resulting in an accident. Do not operate the navigation or audio equipment while driving.

NOTICE

While the engine is stopped, using the navigation or audio equipment for a long period of time may cause the lead-acid battery to run out. Do not use the navigation or audio equipment for a long period of time while the engine is stopped.


Remote Audio Controls (if equipped)

Controlling basic functions of the audio system is available using the switches on the steering wheel.

The remote audio switches are available when the engine switch / the power switch is in ACC or ON mode.


- For operation of an audio system or a navigation system, refer to the supplementary manual, provided along with it.
- The operating procedure may be different depending on an audio system or a navigation system.

Vehicles without hybrid system

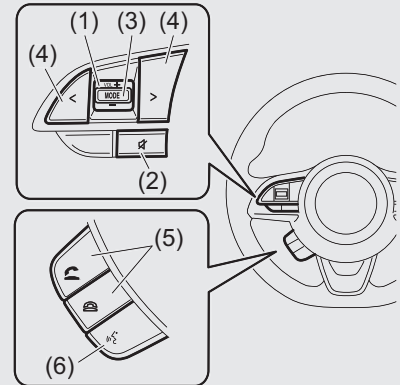

55T070400

OTHER CONTROLS AND EQUIPMENT

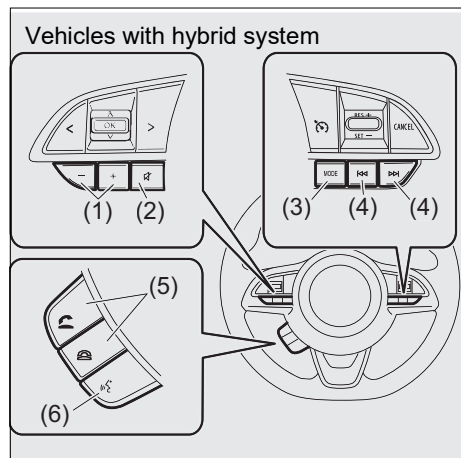

- (1) Volume switch
- (2) Mute switch
- (3) "MODE" switch
- (4) Select switch
- (5) Hands-free switch
- (6) Voice recognition switch

Volume Switch (1)

You can adjust volume with this switch.

- To increase the volume, press "+" side.
- To decrease the volume, press "-" side.
- The volume will continue to increase or decrease until this switch is released.

Mute Switch (2)

To mute this sound, press the switch (2).

"MODE" Switch (3)

Every time you press this switch, the audio modes such as radio, etc. will be switched in order.

Depending on a navigation system or an audio systems, you can turn on the system by pressing this switch, even when the equipment itself is turned off.

Select Switch (4)

Every time you press this switch, you can select broadcast station or music according to your preference, along with the currently selected mode.

Hands-free Switch (5)

You can use this switch for the equipment which has the hands-free function. To use the function, you need to set up for the equipment. Refer to the supplementary manual for details.

Voice Recognition Switch (6)*

You can use this switch for the equipment which has the voice recognition function. To use the function, you need to set up for the equipment. Refer to the supplementary manual for details.

*: When using Apple CarPlay or Android Auto™ on infotainment system

Apple CarPlay may not be available in your country or region.

For details about Apple CarPlay, visit the following site:
<http://www.apple.com/ios/carplay>

Android Auto™ may not be available in your country or region.

For details about Android Auto, please refer to the Google support site:
<http://support.google.com/androidauto>

Suzuki Connect (if equipped)

Suzuki Connect is an advanced Telematics solution that offers Connected car features related to Vehicle Alerts & Notifications, Safety & Security, Trips & Location & Remote Vehicle Operation.

Refer to *MARUTI SUZUKI* website for below details:

1. Feature & Vehicle applicability
2. Terms & Conditions
3. FAQs
4. Suzuki Connect App Manual
5. Help & Contact us
6. Suzuki Connect Alexa Skill Manual

Remote AC (if equipped)

Allows you to set cabin temperature remotely to desired level (18 - 32 Celsius degree) for 10 minutes while starting Vehicle Engine. You can remotely stop Remote AC anytime within 10 minutes of Remote AC ON Request success. Additionally, you can set Defroster & Rear Defogger ON/OFF. This remote request shall be authenticated through preset mPIN (Mobile PIN) after consent is given by customer.

Modes of operation

This feature can be operated from three modes:

- Suzuki Connect Application
- Smart Watch
- Suzuki Connect skill for Amazon Alexa

Operating conditions

Remote AC ON request shall be processed when all of following operational conditions are met:

- Ignition is OFF
- Parking brake is engaged
- All doors are locked properly
- Hood is closed properly
- Brake Pedal is not depressed
- Gearshift lever is in "P" (Park) position
- Key FOB is not detected in the vehicle
- Steering lock is engaged
- Vehicle is parked in good cellular network area
- It has been less than 9 days since last ignition OFF
- No Malfunction present in vehicle before ignition OFF

Terminating conditions

Remote AC ON request shall be terminated when any of following conditions is met:

- Telematics device is unable to communicate with vehicle (No network location)
- Battery voltage is low
- Any Doors, hood, or trunk is opened
- Key FOB is detected inside the vehicle
- When the vehicle is in motion or in IG-ON/EG-ON status
- When the brake is applied
- Gearshift is in position other than "P" Park position.
- When there is a problem with the air conditioner (malfunction of AC) or any

- Pressing the engine switch
- When the engine is stalled

⚠ WARNING

- **Accumulation of poisonous exhaust gases in enclosed area may lead to serious health issues and death in worst cases, Kindly ensure that**
 - There are no passengers in the vehicle before usage of this feature
 - Park Vehicle in the areas where you can safely use this feature
 - Avoid usage in enclosed places like garage, multi-level car parking, etc.
 - Make sure that the ventilation opening and muffler are not blocked before use
- **There is high risk of fire accident due to high temperature exhaust gases when flammable materials are surrounded by car. Kindly ensure that no flammable material (such as oil or dry leaves) are nearby the vehicle and Vehicle is not covered with body cover.**

(Continued)

OTHER CONTROLS AND EQUIPMENT

WARNING

(Continued)

- **Never use this function when there are passengers in the car. Remote AC ON creates anxiety, panic or discomfort in passengers inside car, due to sudden Engine ON/OFF & change in cabin temperature.**
- **Never use this feature while the vehicle is under inspection or maintenance at service center or at a gas station. Sudden start of engine during maintenance can be a safety hazard for the technician working on the vehicle or for you**

CAUTION

- **Following operations may get activated due to Remote AC ON feature:**
 - **Wipers get activated if left in ON condition**
 - **Audio may turn on**
- **Desired temperature may not be achieved when any of windows is opened.**

NOTICE

- **Do not use this function on public roads.**
- **Depending on where you live, idling may be prohibited or restricted by an ordinance, so please check it before use.**
- **Use the feature only when essential and ready to board on your journey for effective fuel efficiency.**

NOTE:

- *Application services are subject to change. It is recommended to install the latest updates from Google Play/Apple App store for optimal experience.*
- *Application functioning is subject to network availability & also depends on Smartphone hardware & OS performance.*
- *Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.*

The communication device equipped with your vehicle includes free/open source software.

The license information and/or source code for free/open source software is available at the following URL:

<https://www.denso-ten.com/support/source/oem/sg1/>

VEHICLE LOADING AND TOWING

Vehicle Loading	8-1
Trailer Towing	8-1



54G215

VEHICLE LOADING AND TOWING

Vehicle Loading

Your vehicle was designed for specific weight capacities. The weight capacities of your vehicle are indicated by the Gross Vehicle Weight Rating (GVWR) and the Permissible maximum Axle Weight (PAW, front and rear). The GVWR and PAW (front and rear) are listed in the "SPECIFICATIONS" section.

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).

PAW – (Front and Rear) Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle. Compare these weights to the GVWR and PAW (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.


WARNING

- **Never overload your vehicle. The gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories, cargo plus trailer nose weight if towing a trailer) must never exceed the Gross Vehicle Weight Rating (GVWR). In addition, never distribute a load so that the weight on either the front or rear axle exceeds the Permissible maximum Axle Weight (PAW).**
- **Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.**

Trailer Towing

Your vehicle was originally designed to carry people and a normal amount of cargo, not to tow a trailer.


INSPECTION AND MAINTENANCE

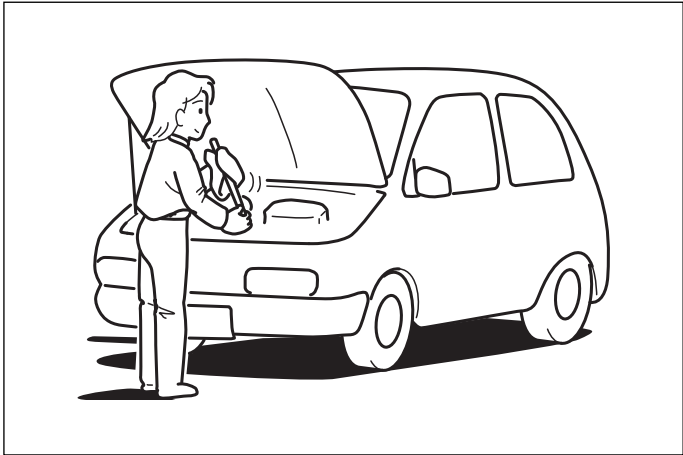

60G410

Maintenance Schedule	9-2
Periodic Maintenance Schedule	
- For K15C engine model	9-2
Periodic Maintenance Schedule - M15D engine model ...	9-7
Drive Belt	9-11
Engine Oil and Filter	9-11
Engine Coolant	9-13
Air Cleaner	9-15
Spark Plugs	9-15
Automatic Transmission Fluid (if equipped)	9-16
Gear Oil	9-16
Clutch	9-17
Brakes	9-18
Steering Wheel	9-21
Tyres	9-22
Battery	9-25
Fuses	9-27
Headlight Aiming	9-33
Bulb Replacement	9-34
Wiper Blades	9-43
Windshield Washer Fluid	9-47
Air Conditioning System	9-47
Cleaning the Hybrid Battery Air Intake Vent and Filter (M15D Engine Model)	9-48
Preparation Before Winter Season	9-49

INSPECTION AND MAINTENANCE

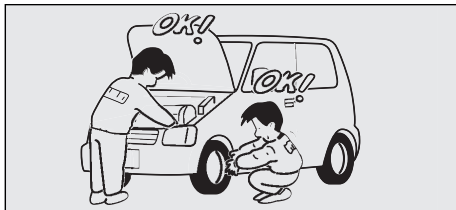

59RN05750

⚠ WARNING

Take extreme care when working on your vehicle to prevent accidental injury. Carefully observe the following precautions:

- To prevent damage or unintended activation of the airbag system or seat belt pretensioner system, check that the lead-acid battery is disconnected and the ignition switch has been in "LOCK" position or the ignition mode has been in LOCK (OFF) position for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle. Do not touch airbag system components, seat belt pretensioner system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.
- Do not leave the engine running in garages or other confined areas.

(Continued)

⚠ WARNING

(Continued)

- When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.
- When it is necessary to perform service work with the engine running, check that the parking brake is set fully and the transmission is in Neutral (for manual transmission vehicles) or Park (for automatic transmission vehicles).
- Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.
- Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.
- Do not allow smoking, sparks, or flames around fuel or the battery. Flammable fumes are present.

(Continued)

⚠ WARNING

(Continued)

- Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.
- Be careful not to cause accidental short circuits between the positive and negative battery terminals.
- Keep used oil, coolant, and other fluids away from children and pets. Dispose of used fluids properly; never pour them on the ground, into sewers, etc.

Maintenance Schedule

The following table shows the times when you should perform regular maintenance on your vehicle. This table shows in kilometers and months when you should perform inspections, adjustments, lubrication and other services.



WARNING

MARUTI SUZUKI recommends that maintenance on your Maruti Suzuki vehicle should be performed by a Maruti Suzuki authorized workshop.

Periodic Maintenance Schedule - For K15C Engine Model

NOTICE

Whenever it becomes necessary to replace parts on your vehicle, it is recommended that you use genuine SUZUKI replacement parts or their equivalent.

“C”: Clean

“R”: Replace or Change

“I”: Inspect, clean, adjust, lubricate or replace as necessary

“L”: Lubricate

“T”: Tighten to Specified Torque

“O”: Rotate

NOTE:

This table includes services as scheduled up to 80,000 km mileage. Beyond 80,000 km, carry out the same services at the same intervals respectively.

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		FREE INSPECTION				PERIODIC MAINTENANCE AT COST						
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
ENGINE												
1-1.	Engine accessory drive belt (Wear)		–	–	I	I	R	I	I	R	I	I
1-2.	Water pump drive belt (Wear)		–	–	I	I	I	I	I	I	I	R
1-3.	Engine Coolant (Level, Leakage)	First time:	Replace at 160000km or 96 months									
		Second time and after:	Replace at 80000 km or 48 months									
1-4.	Engine oil, engine oil filter and drain plug gasket (Level, Leakage)		I	I	R	R	R	R	R	R	R	R
1-5.	Cooling system hoses and connections (Leakage and Damage)		I	I	I	I	I	I	I	I	I	I
1-6.	Engine Mounting & manifold fixing (Loose, Damage)		–	–	I	–	I	–	I	–	I	–
1-7.	Exhaust System (Noise, Leakage etc.)		–	I	–	I	–	I	–	I	–	I
1-8.	Positive Crank Case Ventilation System (Hoses, Connections and Valve)		–	I	–	I	–	I	–	I	–	I
IGNITION												
2-1.	Ignition wire (Damage, Deterioration)		–	–	–	I	–	I	–	I	–	I
2-2.	Spark Plug	Petrol	Replace after every 1,00,000 KM or 84 months whichever comes first.									
		CNG	Replace every 50,000 KM or 48 months whichever comes first									
FUEL												
3-1.	Air cleaner filter element	Paved-road	Clean after every 5,000 KM. Replace after every 40,000 KM.									
		Dusty Condition	Clean after every 2,500 KM or as required. Replace after every 40,000 KM.									
3-2.	Fuel tank cap, fuel lines and connections (Leakage and Damage)		–	I	–	–	–	I	–	–	–	I
3-3.	Fuel Filter		Replace after every 1,00,000 Kms or 120 months whichever comes first.									
3-4.	Fuel Tank		–	–	–	–	–	I	–	–	–	I
CLUTCH AND TRANSMISSION												
4-1.	Clutch fluid (Level, Leakage)		I	I	I	I	I	I	I	I	I	I
			Replace every 40000 km or 24 months whichever comes first									
4-2.	Clutch slipping (Dragging or Excess Damage)		I	I	I	I	I	I	I	I	I	I

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		FREE INSPECTION			PERIODIC MAINTENANCE AT COST							
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
4-3.	Manual Transmission Oil (Level, Leakage)											
4-4.	Automatic Transaxle Fluid (Leakage)		–	–	–		–		–		–	
4-5.	Transfer Oil (4WD) (Level, Leakage)											
			Replace every 150000 km or 120months whichever comes first									
4-6.	Rear Differential Oil (4WD) (Level, Leakage)											
			Replace every 150000 km or 120months whichever comes first									
4-7.	Hose, Automatic Transaxle Cooler (Leakage & Damage)											
4-8.	Gear shifter (Operation)											
DRIVE SHAFT												
5-1.	Drive shaft noise											
5-2.	Drive shaft boot / Propeller shafts (boot damage)		–									
BRAKE												
6-1.	Brake Fluid (Level, Leakage)											
			Replace every 40000 km or 24 months whichever comes first									
6-2.	Brake pedal (Pedal - wall clearance)											
6-3.	Parking brake lever and cable (Play, Damage)											
6-4.	Brake disc and pad (Wear)		–									
6-6.	Brake hoses and pipes (Fluid leakage, Damage)											
6-7.	Master cylinder, wheel cylinder and caliper piston (Fluid leakage, boot/seal damage)											
WHEEL												
7-1.	Tires (Air pressure, Abnormal wear, Crack and Rotation)			I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O
7-2.	Wheels (Damage)											
7-3.	Front/Rear wheel bearing (Loose, Damage)											

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		FREE INSPECTION			PERIODIC MAINTENANCE AT COST							
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
FRONT / REAR SUSPENSION												
8-1.	Suspension strut (Oil leakage, Damage)											
8-2.	Suspension arms / Knuckle support and Torsion rods (Loose, Damage)	–										
8-3.	Rear spring (Damage)											
8-4.	Shock absorbers (Oil leakage, Damage)											
8-5.	All bolts and nuts (Loose)	–	T	T	T	T	T	T	T	T	T	
STEERING												
9-1.	Steering wheel (Play, Loose)											
9-2.	All rods and arms (Loose, Damage, Wear)											
9-3.	Tilt & Telescopic Steering (Operation)											
ELECTRICAL												
10-1.	Battery - electrolyte (Level, leakage) and voltage											
10-2.	Wiring harness connection (Loose, Damage)	–										
10-3.	Lighting system (Operation, Stains, Damage)											
10-4.	Wiper (Operation, Stains, Damage)											
10-5.	Horn (Operation)											
10-6.	USB and accessory socket (Operation)	–										
10-7.	Sunroof (Operation)											
10-8.	Wireless charger											

WARNING

The shock absorbers are filled with high pressure gas. Never attempt to disassemble them or throw them into a fire. Avoid storing them near a heater or heating device. When scrapping the absorber, the gas must be released from the absorber safely. Ask Maruti Suzuki authorised workshop for assistance.

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.	km (x1000)	FREE INSPECTION			PERIODIC MAINTENANCE AT COST						
		1	5	10	20	30	40	50	60	70	80
		1	6	12	24	36	48	60	72	84	96
BODY											
11-1.	All chassis bolts and nuts (Tighten)	–	T	T	T	T	T	T	T	T	T
11-2.	All latches, hinges and locks (Function)	I	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L
ROAD TEST											
12-1.	Operation of Brakes, gear shifting and speedometer	I	I	I	I	I	I	I	I	I	I
12-2.	Body and chassis noise	I	I	I	I	I	I	I	I	I	I
AIR CONDITIONER											
13-1.	Tighten compressor mounting bolt	–	T	T	T	T	T	T	T	T	T
13-2.	All hose joint (Check, Tighten)	I	I	I	I	I	I	I	I	I	I
13-3.	Check functioning of Recirculating flap	I	I	I	I	I	I	I	I	I	I
13-4.	Clean condenser with low pressure water	–	C	C	C	C	C	C	C	C	C
13-5.	Check all mounting bolts	I	I	I	I	I	I	I	I	I	I
13-6.	Air conditioner filter element (PM 2.5 filter)	–	–	R	R	R	R	R	R	R	R

Periodic Maintenance Schedule - M15D engine model

“C”: Clean

“R”: Replace or Change

“I”: Inspect, clean, adjust, lubricate or
replace as necessary

“L”: Lubricate

“T”: Tighten to Specified Torque

“O”: Rotate

NOTE:

This table includes services as scheduled up to 80,000 km mileage. Beyond 80,000 km, carry out the same services at the same intervals respectively.

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		FREE INSPECTION			PERIODIC MAINTENANCE AT COST							
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
ENGINE												
1-1.	Engine Coolant (Level, Leakage)	First time:	Replace at 160000km or 96 months									
		Second time and after:	Replace at 80000 km or 48 months									
1-2.	Engine oil, engine oil filter and drain plug gasket (Level, Leakage)	–	–	R	R	R	R	R	R	R	R	
1-3.	Cooling system hoses and connections (Leakage and Damage)	–	–	I	I	I	I	I	I	I	I	
1-4.	Engine Mounting & manifold fixing (Loose, Damage)	–	–	I	–	I	–	I	–	I	–	
1-5.	Exhaust System (Noise, Leakage etc.)	–	–	–	I	–	I	–	I	–	I	
1-6.	Inverter coolant (Level, Leakage)	First time:	Replace at 160000km or 96 months									
		Second time and after:	Replace at 80000 km or 48 months									
IGNITION												
2-1.	Ignition wire (Damage, Deterioration)	–	–	–	I	–	I	–	I	–	I	
2-2.	Spark Plug	Replace after every 1,00,000 KM or 84 months whichever comes first.										
FUEL												
3-1.	Air cleaner filter element	Paved-road	–	–	I	I	R	I	I	R	I	I
		Dusty Condition	Clean after every 2,500 KM or as required. Replace after every 30,000 KM.									
3-2.	Fuel tank cap, fuel lines and connections (Leakage and Damage)	–	–	–	I	–	I	–	I	–	I	
3-3.	Fuel Filter	Replace after every 1,00,000 Kms or 120 months whichever comes first.										
3-4.	Fuel Tank	–	–	–	–	–	I	–	–	–	I	
TRANSMISSION												
4-1.	Transaxle Oil (Leakage)	–	–	–	–	–	I	–	–	–	I	
4-2.	Fluid Hose	–	–	–	–	–	I	–	–	–	I	
4-3.	Gear shifter (Operation)	I	I	I	I	I	I	I	I	I	I	

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		FREE INSPECTION			PERIODIC MAINTENANCE AT COST							
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
DRIVE SHAFT												
5-1.	Drive shaft noise	I	I	I	I	I	I	I	I	I	I	
5-2.	Drive shaft boot (boot damage)	–	I	I	I	I	I	I	I	I	I	
BRAKE												
6-1.	Brake Fluid (Level, Leakage)	I	I	I	I	I	I	I	I	I	I	
		Replace every 40000 km or 24 months whichever comes first										
6-2.	Brake pedal (Pedal - wall clearance)	I	I	I	I	I	I	I	I	I	I	
6-3.	Parking brake lever and cable (Play, Damage)	I	I	I	I	I	I	I	I	I	I	
6-4.	Brake disc and pad (Wear)	–	I	I	I	I	I	I	I	I	I	
6-6.	Brake hoses and pipes (Fluid leakage, Damage)	I	I	I	I	I	I	I	I	I	I	
6-7.	Master cylinder, wheel cylinder and caliper piston (Fluid leakage, boot/seal damage)	I	I	I	I	I	I	I	I	I	I	
WHEEL												
7-1.	Tires (Air pressure, Abnormal wear, Crack and Rotation)	I	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	
7-2.	Wheels (Damage)	I	I	I	I	I	I	I	I	I	I	
7-3.	Front/Rear wheel bearing (Loose, Damage)	I	I	I	I	I	I	I	I	I	I	
FRONT / REAR SUSPENSION												
8-1.	Suspension strut (Oil leakage, Damage)	I	I	I	I	I	I	I	I	I	I	
8-2.	Suspension arms / Knuckle support and Torsion rods (Loose, Damage)	–	I	I	I	I	I	I	I	I	I	
8-3.	Rear spring (Damage)	I	I	I	I	I	I	I	I	I	I	
8-4.	Shock absorbers (Oil leakage, Damage)	I	I	I	I	I	I	I	I	I	I	
8-5.	All bolts and nuts (Loose)	–	T	T	T	T	T	T	T	T	T	

WARNING

The shock absorbers are filled with high pressure gas. Never attempt to disassemble them or throw them into a fire. Avoid storing them near a heater or heating device. When scrapping the absorber, the gas must be released from the absorber safely. Ask Maruti Suzuki authorized workshop for assistance.

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		FREE INSPECTION			PERIODIC MAINTENANCE AT COST							
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
STEERING												
9-1.	Steering wheel (Play, Loose)		I	I	I	I	I	I	I	I	I	I
9-2.	All rods and arms (Loose, Damage, Wear)		I	I	I	I	I	I	I	I	I	I
9-3.	Tilt & Telescopic Steering (Operation)		I	I	I	I	I	I	I	I	I	I
ELECTRICAL												
10-1.	Battery - electrolyte (Level, leakage) and voltage		I	I	I	I	I	I	I	I	I	I
10-2.	Wiring harness connection (Loose, Damage)		–	I	I	I	I	I	I	I	I	I
10-3.	Lighting system (Operation, Stains, Damage)		I	I	I	I	I	I	I	I	I	I
10-4.	Wiper (Operation, Stains, Damage)		I	I	I	I	I	I	I	I	I	I
10-5.	Horn (Operation)		I	I	I	I	I	I	I	I	I	I
10-6.	USB and accessory socket (Operation)		–	I	I	I	I	I	I	I	I	I
10-7.	Sunroof (Operation)		I	I	I	I	I	I	I	I	I	I
10-8.	Wireless charger		I	I	I	I	I	I	I	I	I	I
BODY												
11-1.	All chassis bolts and nuts (Tighten)		–	T	T	T	T	T	T	T	T	T
11-2.	All latches, hinges and locks (Function)		I	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L
11-3.	Hybrid battery cooling intake filter		–	–	I	I	I	I	I	I	I	I
ROAD TEST												
12-1.	Operation of Brakes, gear shifting and speedometer		I	I	I	I	I	I	I	I	I	I
12-2.	Body and chassis noise		I	I	I	I	I	I	I	I	I	I
AIR CONDITIONER												
13-1.	Tighten compressor mounting bolt		–	T	T	T	T	T	T	T	T	T
13-2.	All hose joint (Check, Tighten)		I	I	I	I	I	I	I	I	I	I
13-3.	Check functioning of Recirculating flap		I	I	I	I	I	I	I	I	I	I
13-4.	Clean condenser with low pressure water		–	C	C	C	C	C	C	C	C	C
13-5.	Check all mounting bolts		I	I	I	I	I	I	I	I	I	I
13-6.	Air conditioner filter element (PM 2.5 filter)		–	–	R	R	R	R	R	R	R	R

INSPECTION AND MAINTENANCE

Drive Belt


WARNING

When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.

Since special procedures are required, ask your Maruti Suzuki authorized workshop.


Engine Oil and Filter

Specified Oil For India - K15C engine model

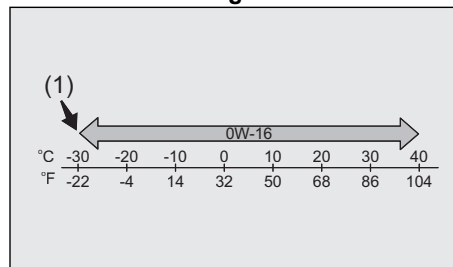

56RM07013

Except for India - K15C engine model

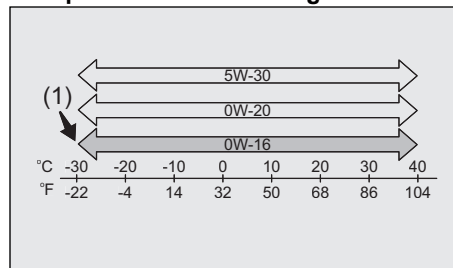

76TS90780

(1) Preferred

For India, check that the engine oil you use comes under the quality classification of API SN, SP. Select the appropriate oil viscosity according to the above chart.

Except for India, be sure that the engine oil you use comes under the quality classification as listed below.


- API SL, SM, SN, SP
- ILSAC GF-6

SAE 0W-16 (1) is the best choice for good fuel economy, and good starting in cold weather.

NOTE:

We recommend that you use Maruti Suzuki genuine oil. To purchase it, see a Maruti Suzuki authorized workshop.

M15D engine model

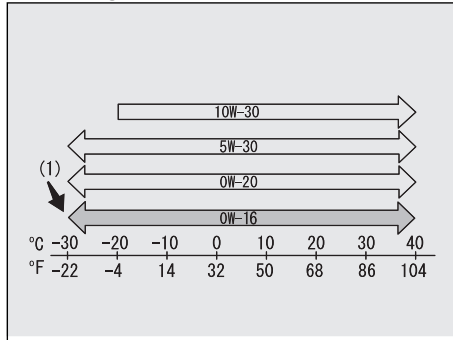

76TS90710

Be sure that the engine oil you use comes under the quality classification as listed below.

- API SL, SM, SP, SN, SN PLUS
- ILSAC GF-6A, 6B

Select the appropriate oil viscosity according to the above chart.


SAE 0W-16 (1) is the best choice for good fuel economy, and good starting in cold weather.

NOTE:

We recommend that you use Maruti Suzuki genuine oil. To purchase it, see a Maruti Suzuki authorized workshop.


Oil Level Check

K15C engine model

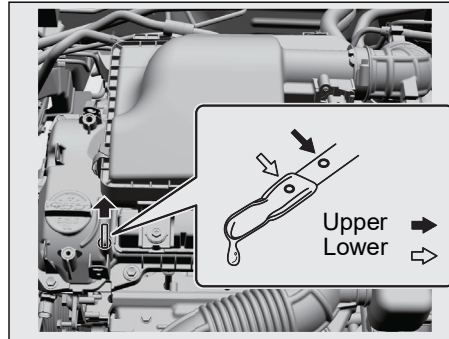

76TS90140

M15D engine model

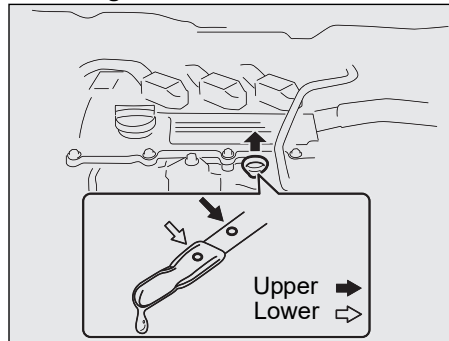

76TS90650

It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or hybrid system, or at least 5 minutes after stopping the engine or hybrid system.

Pull out the oil dipstick, wipe the oil off with a clean cloth, insert the dipstick all the way into the engine, and then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower limit, add enough oil to raise the level to the upper limit.

NOTICE

Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

Refilling

Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

Changing Engine Oil

Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

INSPECTION AND MAINTENANCE

Oil Filter Replacement

Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

Refilling with Oil and Oil Leakage Check

Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

Engine Coolant

Selection of Coolant

To maintain optimum performance and durability of your engine, use Maruti Suzuki genuine coolant or equivalent.

This type of coolant is the best for cooling system for the following reasons:

- The coolant helps maintain proper engine temperature.
- It gives proper protection against freezing and boiling.
- It gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system. Your Maruti Suzuki authorized workshop can help you select the proper coolant.

NOTICE

To avoid damaging your cooling system:

- Check that the proper mix is 50/50 coolant to distilled water and in no case higher than 50/50. Concentrations greater than 50/50 coolant to distilled water will cause overheating conditions.
- Do not use straight coolant nor plain water.
- Do not add extra inhibitors or additives. They may not be compatible with your cooling system.
- Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/or the possibility of severe overheating and extensive engine/automatic transmission damage.

Coolant Level Check

Check the coolant level at the reservoir tank, not at the radiator. With the engine and hybrid system cool, the coolant level should be between "FULL" and "LOW" marks.

Adding Coolant

⚠ WARNING


Swallowing engine coolant and inverter coolant can cause severe injury or death. Inhaling coolant mist or vapors or getting coolant in your eyes could result in severe injury.

- Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician.
- Avoid inhaling coolant mist or hot vapors. If inhaled, remove to a fresh air area.
- If coolant gets in the eyes, flush with water and seek medical attention.
- Wash thoroughly after handling coolant.
- Keep engine coolant out of the reach of children and pets.

NOTICE


This coolant is already diluted to the proper percentage. Do not dilute with distilled water additionally. Doing so may result in the possibility of freezing and/or overheating coolant.

Engine coolant K15C engine model

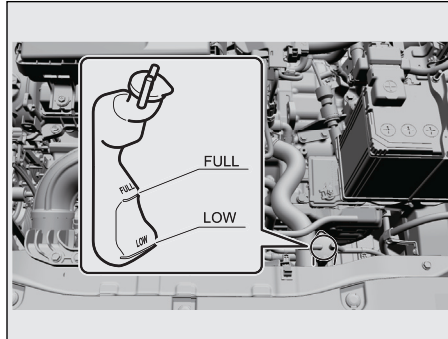

76TS90050

M15D engine model

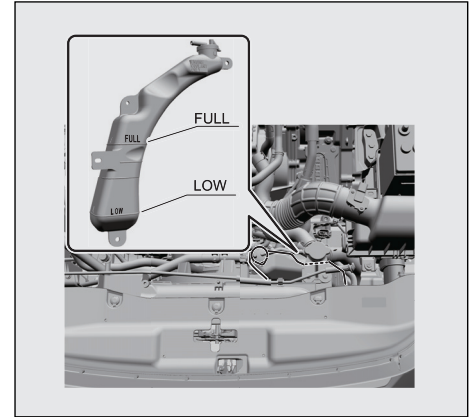


76TS90680

If the engine coolant level is below "LOW" mark, coolant should be added. While the engine is cool, remove the reservoir tank cap and add coolant until the reservoir tank level reaches "FULL" mark. Never fill the reservoir tank above "FULL" mark.

INSPECTION AND MAINTENANCE

Inverter coolant

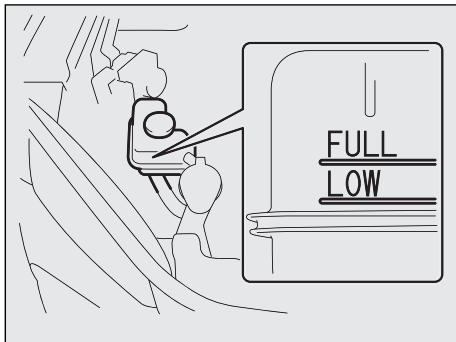

76TS90440

If the inverter coolant level is below “LOW” mark, coolant should be added. While the hybrid system is cool, remove the reservoir tank cap and add coolant until the reservoir tank level reaches “FULL” mark. Never fill the reservoir tank above “FULL” mark.

NOTICE

When putting the cap on the reservoir tank, line up the mark on the cap and the mark on the tank. Failure to follow this can result in coolant leakage.

Coolant Replacement

Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

Air Cleaner

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

Spark Plugs

Spark Plug Replacement and Inspection

Since special procedures, materials and tools are required, it is recommended that you trust this job to a Maruti Suzuki authorized workshop.

Automatic Transmission Fluid (if equipped)

Specified Fluid

6AT model

Use an automatic transmission fluid SUZUKI AT OIL AW-1.

e-CVT model

Use an automatic transmission fluid AUTO FLUID WS.

Fluid Level Check

6AT model

Since special procedures, materials, and tools are required to change the automatic transmission oil, ask a Maruti Suzuki authorized workshop for this job.

e-CVT model

Since special procedures, materials, and tools are required to change the automatic transmission oil, ask your Maruti Suzuki authorized workshop for this job.

Changing Oil

Since special procedures, materials, and tools are required to change the automatic transmission oil, ask your Maruti Suzuki authorized workshop for this job.


Gear Oil

Manual Transmission Oil / Transfer Oil (4WD) / Rear Differential Oil (4WD)

When adding gear oil, use gear oil with the appropriate viscosity and grade as shown in the chart below.

We highly recommend you use "MARUTI GENUINE GEAR OIL 75W" for manual transmission oil.

Manual transmission oil

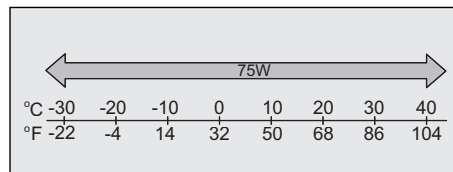


56RM07006

We highly recommend you use "SUZUKI GEAR OIL 75W-85" for transfer oil (4WD) and rear differential oil (4WD).

Transfer oil (4WD)

Rear differential oil (4WD)

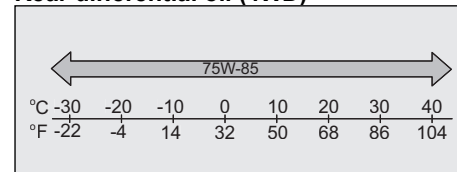

71LMT0701


Gear Oil Level Check and Change

Since special procedures, materials and tools are required, ask your Maruti Suzuki authorized workshop for this job.

INSPECTION AND MAINTENANCE

Clutch

Clutch Pedal

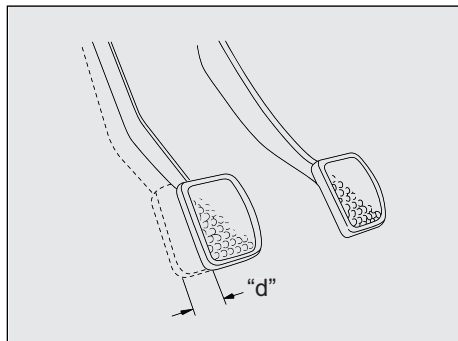


54G274

Clutch pedal play "d": MAX 10 mm

Measure the clutch pedal play by moving the clutch pedal with your hand and measuring the distance it moves until you feel slight resistance. The play in the clutch pedal should be less than the specified values. If the play is more than the above, or clutch dragging is felt with the pedal fully depressed, have the clutch inspected by a Maruti Suzuki authorized workshop.

Clutch Fluid

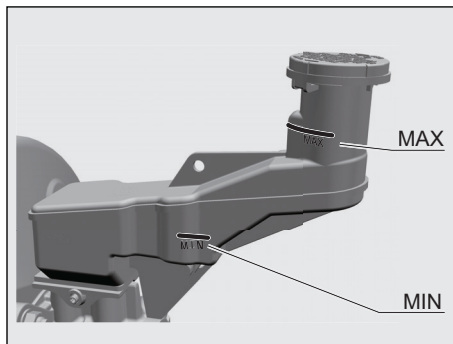

76TS90380

Check the clutch pedal for smooth operation and clutch fluid level from time to time. If clutch dragging is felt with the pedal fully depressed, have the clutch inspected by a Maruti Suzuki authorized workshop. If the clutch fluid level is near "MIN" line, fill it up to "MAX" line with "Brake Fluid DOT3".


NOTICE

Clutch fluid is supplied from brake fluid reservoir. If your clutch fluid level is increased or near the "MIN" line, there is a possibility of clutch or brake fluid leakage or abnormal wear of clutch.

Have your vehicle inspected immediately by a Maruti Suzuki authorized workshop.


Brakes

Brake Fluid K15C engine model

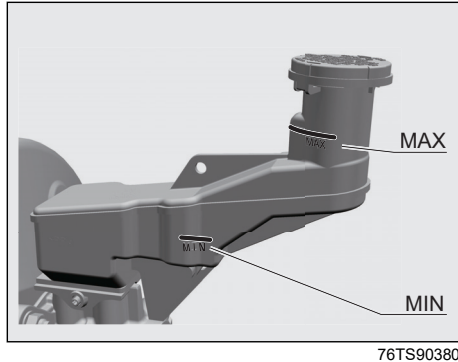

76TS90380

M15D engine model

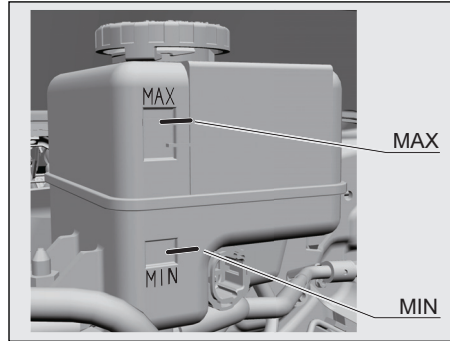

76TS90670

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between "MAX" and "MIN" lines.

WARNING

- Failure to follow the guidelines below can result in personal injury or serious trouble in the brake system.
 - If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument cluster will come on (the engine must be running with the parking brake fully disengaged). Should the light come on, immediately ask a Maruti Suzuki authorized workshop to inspect the brake system.
 - A rapid fluid loss indicates leakage in the brake system. In this case, immediately ask a Maruti Suzuki authorized workshop to inspect the brake system.
 - We highly recommend to use "Brake fluid DOT3". Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.

(Continued)

INSPECTION AND MAINTENANCE

WARNING

(Continued)

- **Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of reach of children and animals.**

NOTICE


- If your brake fluid level is near the “MIN” line, there is a possibility of brake pad and/or shoe wear and brake fluid leakage. In this case, ask a Maruti Suzuki authorized workshop to inspect the brake system.
- Brake fluid can damage painted surfaces. Be careful when refilling the reservoir.

NOTE:

- *The fluid level can be expected to gradually fall as the brake pad and/or shoe wear.*
- *Brake fluid absorbs water over time and brake fluid with high water content may cause vapor lock or brake system malfunction.*
Replace the brake fluid according to the maintenance schedule in this owner's manual.

Brake Pedal

Check brake pedal stroke. If the stroke is so large, have the brake system inspected by a Maruti Suzuki authorized workshop. If you doubt the brake pedal is at its normal height, check it as follows:

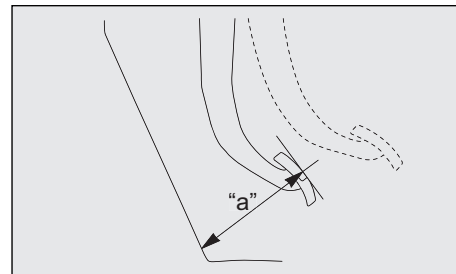

55T090060


Minimum distance between brake pedal and floor carpet “a”

For K15C engine	52 mm
For M15D engine	68 mm

With the engine running or the hybrid system activating, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg of force. The minimum distance required is as specified. Since your vehicle's brake system is self-adjusting, there is no need for pedal adjustment. If the pedal to floor carpet distance as measured above is less than the minimum distance required, have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

- When measuring the distance between the brake pedal and floor wall, be sure not to include the floor mat or rubber on the floor carpet in your measurement.
- Measure the distance at the brake pedal's side facing toward the driver's door.

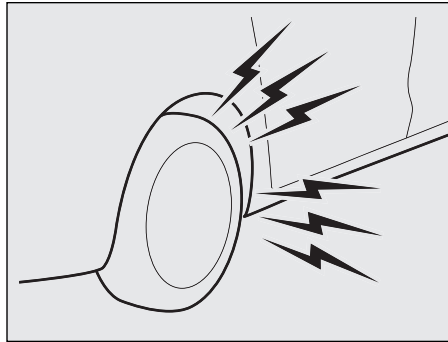

52RM70500

⚠ WARNING

If the brake pad lining becomes worn and it has reached its minimum thickness, squealing noise sounds during braking.

If you hear this noise, have the vehicle inspected immediately by a Maruti Suzuki authorized workshop. Continued driving with this condition can cause an accident.


⚠ CAUTION

If you experience any of the following problems with your vehicle's brake system, have the vehicle inspected immediately by a Maruti Suzuki authorized workshop.

- Poor braking performance
- Uneven braking (brakes not working uniformly on all wheels)
- Excessive pedal travel
- Brake dragging

INSPECTION AND MAINTENANCE


Parking Brake Lever (if equipped)

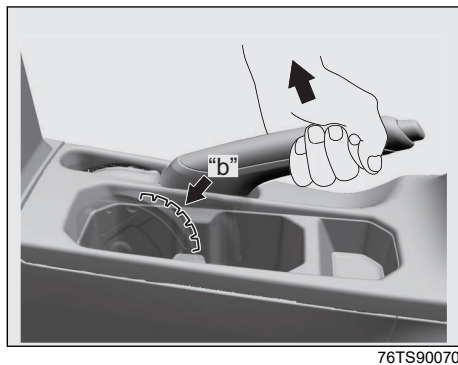

Ratchet tooth specification "b":
4th – 9th
Lever pull force:
200 N (20 kg)

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag is suspected even after the lever has been fully released, have the parking brake inspected and/or adjusted by a Maruti Suzuki authorized workshop.


Brake Discs

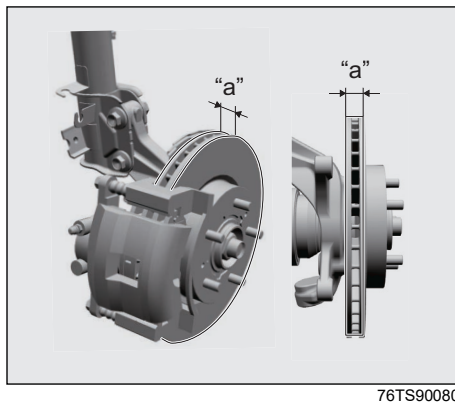

Brake location	Minimum thickness "a"
Front wheels	20.0 mm
Rear wheels	8.0 mm

If the measured thickness or inner diameter of the most worn part falls below or exceeds the value indicated above, the parts should be replaced with a new one. The measurement involves disassembling each brake and requires the use of a micrometer or caliper, which must be done according to the instructions described in the relevant service manual or available from the relevant repair information site.

Steering Wheel

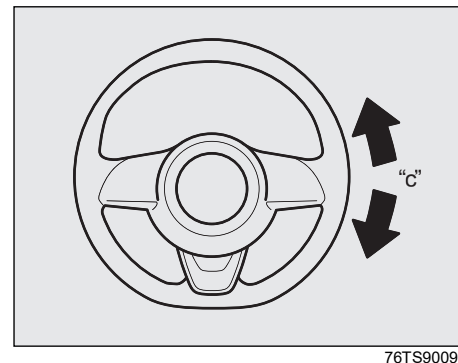


Steering wheel play "c":
0–30 mm

Check the free play of the steering wheel by gently turning it from left to right and measuring the distance that it moves before you feel slight resistance. The play should be between the specified values.

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is not as specified or you find anything else to be wrong, an inspection must be performed by a Maruti Suzuki authorized workshop.

Tyres

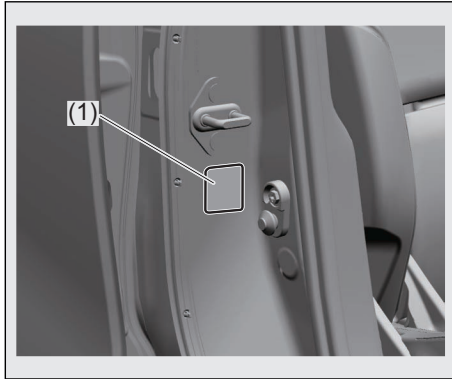

76TS90100

The front and rear tyres pressure specifications are listed in the tyre information label (1). Both front and rear tyres should have the specified tyre pressure.

Note that the value does not apply to the compact spare tyre, if equipped.

NOTE:

The tyre pressure will change due to changes in atmospheric pressure, temperature or tyre temperature when driving. To reduce the chance that the low tyre pressure warning light (if equipped) will come on due to normal changes in temperature and atmospheric pressure, it is important to check and adjust the tyre pressures when the tyres are cold. If you check tyres after driving, they are warm. Even if the tyre pressure seems to be good in this condition, it could fall below the specified pressure when tyres cool down. Also, tyres that are inflated to the specified pressure in a warm garage may have pressure below the specification when the vehicle is driven outside in very cold temperature. If you adjust the tyre pressure in a garage that is warmer than the outside temperature, you should add 1 kPa to the recommended cold tyre pressure for every 0.8 °C difference between garage temperature and outside temperature.

Tyre Inspection


Inspect your vehicle's tyres at least once a month or before long trip by performing the following checks:

- 1) Measure the air pressure with a tyre gauge. Adjust the pressure if necessary.

WARNING

- Air pressures should be checked when the tyres are cold or you may get inaccurate readings.
- Check the tyre pressure from time to time while inflating the tyre gradually, until the specified pressure is obtained.
- Never under-inflate or over-inflate the tyres. Under-inflation can cause unusual handling characteristics or can cause the rim to slip on the tyre bead, resulting in an accident or damage to the tyre or rim. Over-inflation can cause the tyre to burst, resulting in personal injury. Over-inflation can also cause unusual handling characteristics which may result in an accident.

INSPECTION AND MAINTENANCE

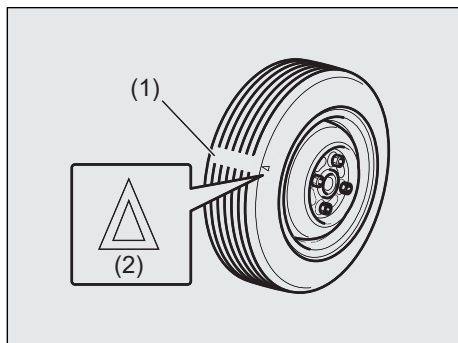

76TS90690

- (1) Tread wear indicator
(2) Indicator location mark
- 2) Check that the depth of the tread groove is more than 1.6 mm. To help you check this, the tyres have molded-in tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is 1.6 mm or less and the tyre should be replaced.
 - 3) Check for abnormal wear, cracks and damage. Any tyres with cracks or other damage should be replaced. If any tyres show abnormal wear, have them inspected by a Maruti Suzuki authorized workshop.

⚠ CAUTION

Hitting curbs and running over rocks can damage tyres and affect wheel alignment. Have tyres and wheel alignment checked periodically by a Maruti Suzuki authorized workshop.

- 4) Check for loose wheel nuts.
- 5) Check that there are no nails, stones or other objects sticking into the tyres.

⚠ WARNING

- Your Maruti Suzuki vehicle is equipped with tyres which are all the same type and size. This is important to ensure proper steering and handling of the vehicle. Never mix tyres of different size or type on the four wheels of your vehicle. The size and type of tyres used should be only those approved by Maruti Suzuki as standard or optional equipment for your vehicle.

(Continued)

⚠ WARNING

(Continued)


- Replacing the wheels and tyres equipped on your vehicle with certain combinations of aftermarket wheels and tyres can significantly change the steering and handling characteristics of your vehicle.
- Therefore, use only those wheel and tyre combinations approved by Maruti Suzuki as standard or optional equipment for your vehicle.

NOTICE

- Replacing the original tyres with tyres of a different size may result in false speedometer or odometer readings. Check with a Maruti Suzuki authorized workshop before purchasing replacement tyres that differ in size from the original tyres.
- Replacing a tyre with one of a different size, or using different brands among the four tyres can result in damage to the drive train.


Tyre Rotation

4-tyre rotation

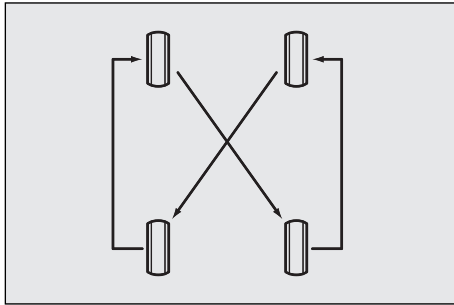

65D459

5-tyre rotation

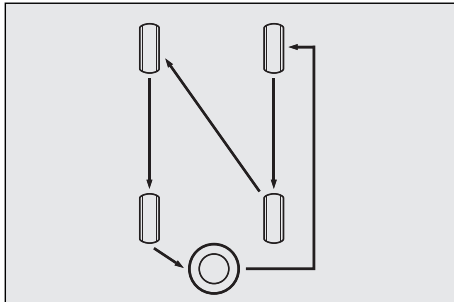

55T090680

To avoid uneven wear of your tyres and to prolong their life, rotate the tyres as illustrated. Tyres should be rotated every 10000 km. After rotation, adjust front and rear tyre pressures to the specification listed on your vehicle's Tyre Information Label.

Wheel Balancing

If the vehicle vibrates abnormally on smooth road, have the wheel balanced at a Maruti Suzuki authorized workshop.

Wheel Alignment

In case of abnormal tyre wear or pulling towards one side, have the wheel aligned at a Maruti Suzuki authorized workshop.

Tubeless Tyres

The vehicle is equipped with Tubeless Tyres. In tubeless tyre, a thin layer of butyl rubber is used for lining the inside of the tubeless tyre. This layer is to prevent air loss and fulfilling the purpose of tube. The air pressure is maintained by the sealing between tyre bead and wheel rim. Tubeless tyres are having advantage of slow air loss and preventing sudden deflation while driving.


Care and maintenance tips for tubeless tyres

- 1) Always maintain recommended inflation pressure. Driving continuously at low inflation pressure can lead to tyre damage.
- 2) In case any leakage is found, check for any nail penetration/valve core damage or rim bent. Damaged wheel must not be used.
- 3) In case tyre has run at low pressure, it must be inspected for any defect.
- 4) Whenever new tyre is fitted, replace the valve.
- 5) If continuous high speed driving is required, increase tyres pressure by 5 psi over recommended inflation pressure.
- 6) Never run the tyre beyond TWI (Tread wear indicator). The tyre is recommended to be replaced when the remaining tread has worn to this point. The indicators are spaced across the tread around the tyre marked by a triangular symbol (TWI).
- 7) Always prefer tubeless tyre mounting machine. In case of manual mounting-tyre/wheel rim damage may occur.
- 8) In case of any problem, please get in touch with a Maruti Suzuki authorized workshop.

Battery

⚠ WARNING

- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.
- When checking or servicing the battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the battery posts and the vehicle at the same time.
- To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions in "EMERGENCY SERVICE" section if it is necessary to jump-start your vehicle.
- Diluted sulfuric acid spilled from battery can cause blindness or severe burns. Use proper eye protection and gloves. Flush eyes or body with ample water and get medical care immediately if suffered. Keep batteries out of reach of children.

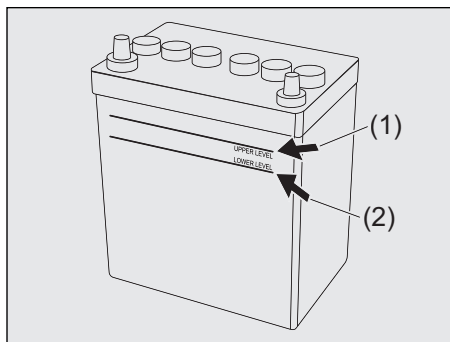

59RN09430

For maintenance-free battery (cap-less type), you need not add water. For traditional type battery, which has water filler caps, the level of the battery solution must be kept between the upper level line "MAX" (1) and the lower level line "MIN" (2) at all times. You should periodically check the battery, battery terminals, and battery hold-down bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.

The lead-acid battery and lithium-ion battery (if equipped) discharge gradually. In order to avoid a flat battery, drive the vehicle once a month for at least 30 minutes to recharge the battery.

If your vehicle is not going to be driven for a month or longer, disconnect the cable

from the negative terminal of the battery to help prevent discharge.

⚠ WARNING

If the battery is used with battery level being less than the lower level line "MIN" (2), it may cause reduced battery life, an exothermic heat, or an explosion by hydrogen gas occurring from the battery. Do not use the battery with battery level being less than the lower level line "MIN" (2).

NOTICE

- If the battery liquid is added more than the upper level line "MAX" (1), liquid may leak by vibrations during driving or liquid may spray out in some case depending on the condition of battery charging. These may cause damage to the parts near the battery. If the battery liquid overflows, immediately wash away with water. Do not add the battery liquid more than the upper level line "MAX" (1).

(Continued)

NOTICE


(Continued)

- If your vehicle is equipped with the ENG A-STOP system and the battery which is exclusive for the ENG A-STOP system is used, only use the specified type of battery for ENG A-STOP system. Refer to "SPECIFICATIONS" section for details. Otherwise, you could damage your vehicle, and the ENG A-STOP system could not be available. If a vehicle battery has to be replaced, consult a Maruti Suzuki authorized workshop.

NOTE:

The battery liquid is consumed when the battery is used. If the level is found to be less than the center of upper level "MAX" (1) and lower level "MIN" (2), add distilled water till it reaches the upper level line "MAX" (1).

Replacement of the Battery

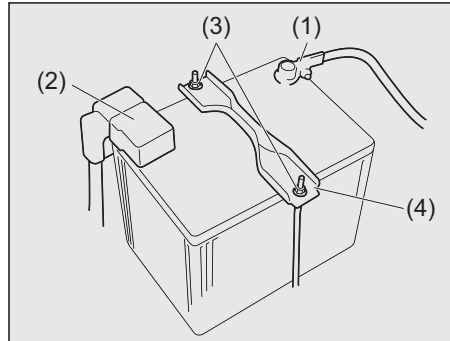

68PM00711

To remove the battery:

- 1) Disconnect the negative cable (1).
- 2) Disconnect the positive cable (2).
- 3) Remove the retainer nuts (3) and remove the retainer (4).

To install the battery:

- 1) Install the battery in the reverse order of removal.
- 2) Tighten the bracket bolt and battery cables securely.

NOTE:

- When the battery is disconnected, some of the vehicle's functions will be initialized and/or deactivated. These functions must be required to reset after the battery is reconnected.
- Do not disconnect the battery terminals for at least one minute after the ignition switch is turned to "LOCK" position, or the engine switch or the power switch is pressed to change the ignition mode to "LOCK" (OFF).


⚠ WARNING

Batteries contain toxic substances including sulfuric acid and lead. They could have potential negative consequences for the environment and human health. Used batteries must be disposed of or recycled according to applicable rules or regulations and must not be disposed of with ordinary household trash. Make sure not to tip over the battery when you remove it from the vehicle. Otherwise, sulfuric acid could run out and you might get injury.

NOTICE

After stopping the engine, controller and system are operated for a while. Therefore, before removing the battery, wait for more than one minute after turning the ignition switch to "OFF" or changing the ignition mode to "LOCK" (OFF).

(Battery label)

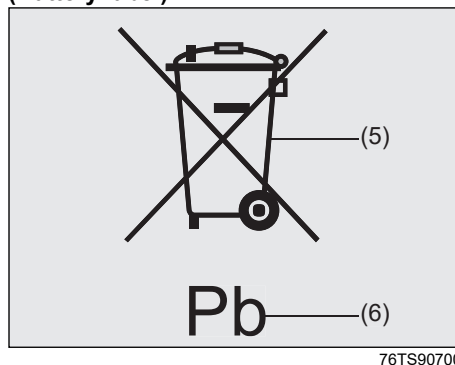

76TS90700

(5) Crossed-out wheeled bin symbol

(6) Chemical symbol of "Pb"

The crossed-out wheeled bin symbol (5) located on the battery label indicates that the used battery should be collected separately from ordinary household trash. The chemical symbol of "Pb" (6) indicates the battery contains more than 0.004% lead.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate trash handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult a Maruti Suzuki authorized workshop.

Fuses

Your vehicle has three types of fuses, as described below:

Main fuse

The main fuse takes current directly from the lead-acid battery.


Primary fuses

These fuses are between the main fuse and individual fuses, and are for electrical load groups.

Individual fuses


These fuses are for individual electrical circuits.

To remove a fuse, use the fuse puller provided in the fuse box.

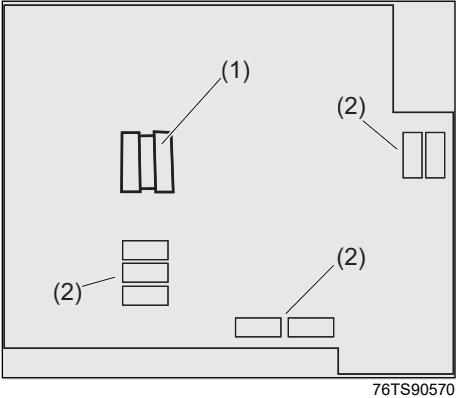


- (1) Fuse puller
- (2) Spare fuse

Fuses in Engine Compartment

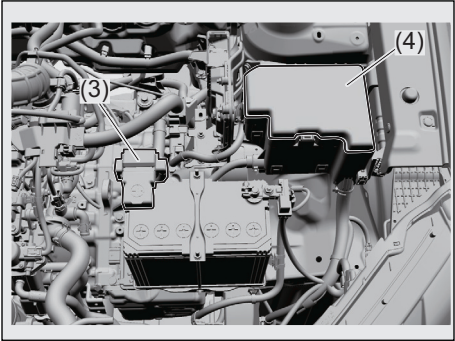


- (3) Main fuse box
- (4) Relay box

Main fuse box_K15C model

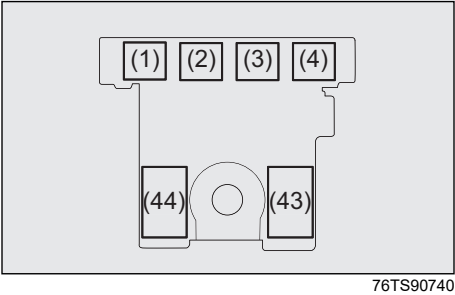

Relay box K15C engine model

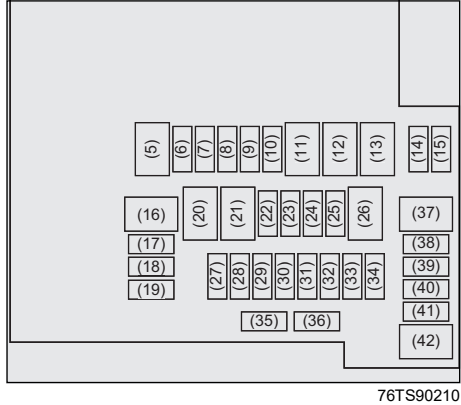


INSPECTION AND MAINTENANCE

MAIN FUSE / PRIMARY FUSE		
(1)	100 A	FL2
(2)	80 A	FL3
(3)	100 A	FL4
(4)	50 A	FL5
(5)	30 A	S/V
(6)	–	Blank
(7)	15 A	Headlight (Right)
(8)	20 A	FI
(9)	20 A	S/R
(10)	30 A	B/U
(11)	30 A	PWR S DR2
(12)	30 A	PWR S DR
(13)	40 A	Blower fan
(14)	5 A	SPARE
(15)	7.5 A	SPARE
(16)	50 A	Ignition switch 2
(17)	20 A	SPARE
(18)	25 A	SPARE
(19)	30 A	SPARE
(20)	40 A	ABS motor

(21)	30 A	RDTR
(22)	25 A	ABS SOL
(23)	10 A	CPRSR
(24)	15 A	Transmission
(25)	7.5 A	CNG VLV
(26)	30 A	Starting motor
(27)	7.5 A	CNG
(28)	5 A	CNG IG1
(29)	5 A	Starting Signal
(30)	10 A	Headlight HI (Left)
(31)	10 A	Headlight HI (Right)
(32)	20 A	FI 2
(33)	10 A	CPRSR 2
(34)	15 A	Transmission 2


(35)	15 A	SPARE
(36)	10 A	SPARE
(37)	40 A	Ignition switch 11
(38)	20 A	Headlight HI
(39)	15 A	4WD
(40)	–	Blank
(41)	15 A	Headlight (Left)
(42)	–	Blank
(43)	200 A	FL6
(44)	–	Blank

Main fuse box_M15D engine model

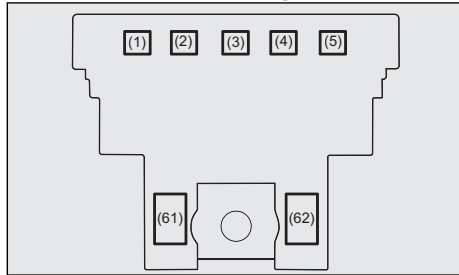

76TS90750

Relay box M15D engine model

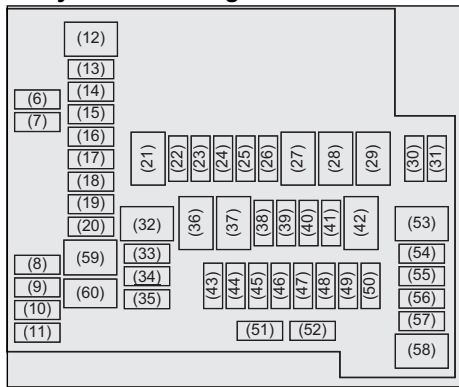

76TS90220

MAIN FUSE / PRIMARY FUSE

(1)	100 A	FL3
(2)	80 A	FL4
(3)	100 A	FL5
(4)	60 A	FL6
(5)	100 A	FL7
(6)	10 A	IG1 SIG4
(7)	10 A	ABS 2
(8)	10 A	CPRSR
(9)	10 A	Ignition coil
(10)	10 A	Battery fan
(11)	10 A	Inverter water pump
(12)	30 A	ABS motor 3
(13)	20 A	Ignition switch 12
(14)	30 A	HEV main2
(15)	15 A	S/V
(16)	25 A	HEV main
(17)	10 A	ICU
(18)	10 A	ABS 4
(19)	10 A	Cont 2
(20)	10 A	ECM


(21)	–	Blank
(22)	–	Blank
(23)	10A	O2 Heater
(24)	20 A	FI main
(25)	20 A	S/R
(26)	30 A	B/U
(27)	30 A	PWR S DR2
(28)	30 A	PWR S DR
(29)	40 A	Blower fan
(30)	5 A	SPARE
(31)	7.5A	SPARE
(32)	50 A	Ignition switch 2
(33)	20 A	SPARE
(34)	25 A	SPARE
(35)	30 A	SPARE
(36)	30 A	ABS motor 2
(37)	30 A	ABS control module
(38)	10 A	ABS 3
(39)	25 A	FI main 2
(40)	15 A	Headlight (Right)
(41)	–	Blank
(42)	30 A	ABS motor

INSPECTION AND MAINTENANCE

(43)	10 A	FI 2
(44)	10 A	FI 3
(45)	10 A	FI
(46)	10 A	Headlight HI (Left)
(47)	10 A	Headlight HI (Right)
(48)	10 A	HEV 2
(49)	10 A	HEV 3
(50)	10 A	HEV
(51)	15 A	SPARE
(52)	10 A	SPARE
(53)	40 A	Ignition switch 11
(54)	20 A	Headlight HI
(55)	–	Blank
(56)	–	Blank
(57)	15 A	Headlight (Left)
(58)	30 A	Water pump
(59)	60 A	Radiator fan
(60)	–	Blank
(61)	175 A	FL1
(62)	120 A	FL2

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a genuine Maruti Suzuki replacement.

To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in the back of the fuse box cover.

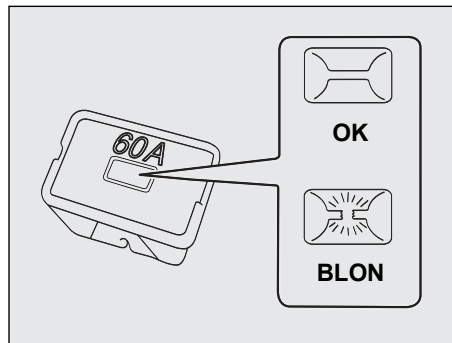

55T090620

⚠ WARNING

If the main fuse or a primary fuse blows, have your vehicle inspected by a Maruti Suzuki authorized workshop. Always use a genuine Maruti Suzuki replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.


NOTE:

Check that the fuse box always carries spare fuses.

Fuses Under Dashboard



76TS90130

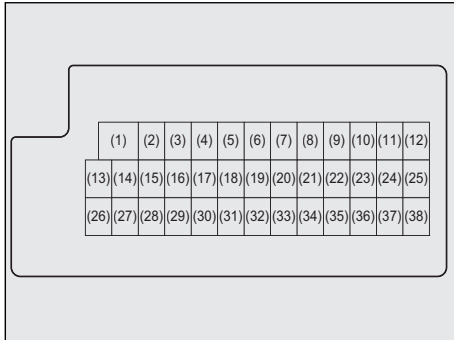


55T090590

PRIMARY FUSE

(1)	30 A	Power window
(2)	10 A	Meter
(3)	15A	Ignition coil
(4)	5A	Ignition-1 signal 2
(5)	20 A	Shift lever*
(6)	10 A	CHG
(7)	10 A	STL2
(8)	20 A	Door
(9)	15 A	Steering lock
(10)	10 A	Hazard
(11)	5A	A-STOP controller
(12)	10A	Rear fog lamp
(13)	5 A	ABS / ESP® control module
(14)	15A	Seat heater*
(15)	5A	Ignition-1 signal 3
(16)	10 A	Dome light-2
(17)	5 A	Dome light
(18)	15 A	Radio
(19)	5 A	CONT
(20)	5 A	Key-2*

(21)	20 A	Power window timer
(22)	5 A	Key*
(23)	15 A	Horn
(24)	5 A	Tail light (Left)
(25)	10 A	Tail light
(26)	10 A	Air bag
(27)	10 A	Ignition-1 signal
(28)	10 A	Back up light
(29)	5 A	ACC-3*
(30)	20 A	Rear defogger
(31)	10 A	Heated mirror*
(32)	15 A	ACC-2
(33)	5 A	ACC
(34)	10 A	Wiper
(35)	5 A	Ignition-2 signal
(36)	15 A	Washer
(37)	25 A	Front wiper
(38)	10 A	Stop light

* Feature not available in the vehicle

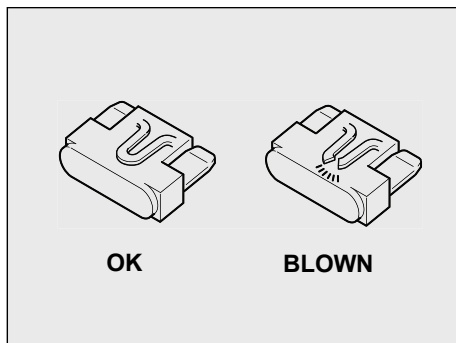

55T090630


Headlight Aiming

Since special procedures are required, ask a Maruti Suzuki authorized workshop for this job.

WARNING

- Always replace a blown fuse with a fuse of the same amperage and the same size which is equipped with your vehicle. Never use other objects than specified above to replace a blown fuse. Otherwise, wiring may burn out and it may cause a fire.
- If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected immediately by a Maruti Suzuki authorized workshop.

Bulb Replacement

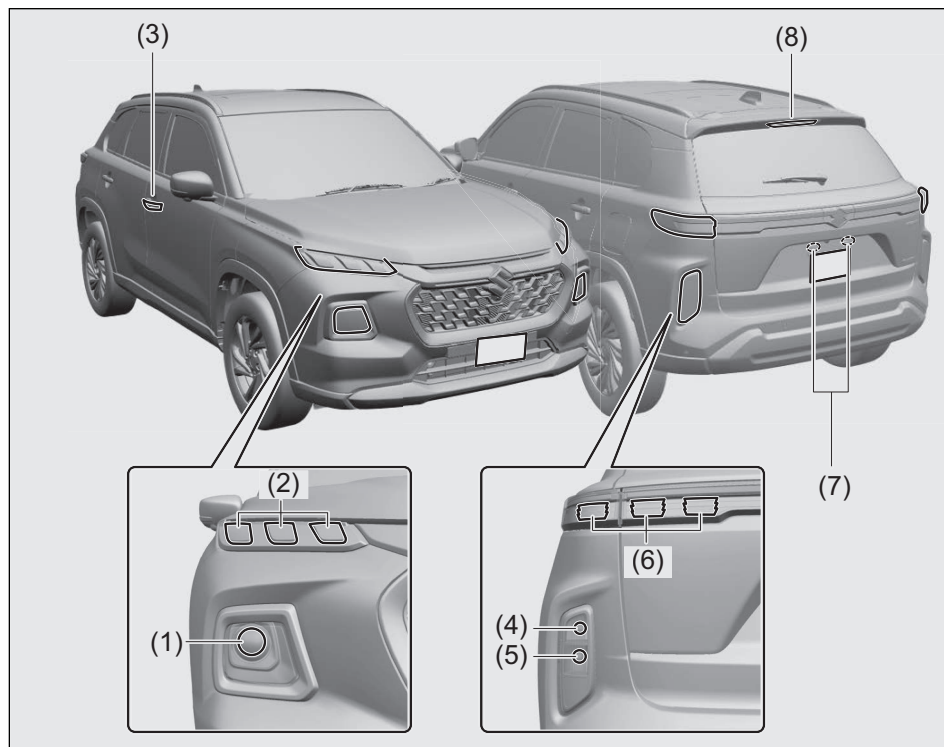

76TS90581

No.	ITEM: Lights	WATT-AGE	BULB No.
(1)	Headlight	12V55W	HIR2
	Headlight* ¹	LED	—
(2)	Front turn signal light, position light and daytime running light (D.R.L.)* ¹	LED	—
(3)	Side turn signal light* ¹	LED	—
(4)	Rear turn signal light	12V 21W	PY21W
(5)	Reversing light	12V21W	P21W
(6)	Brake light and tail light* ¹	LED	—
(7)	License plate light	12V5W	W5W
(8)	High mount stop light* ¹	LED	—

If you need to replace the following bulbs indicated in the above table, consult a Maruti Suzuki authorized workshop.

*1: Since the lights are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any bulb is defective.

⚠ CAUTION

- Light bulbs can be hot enough to burn your finger right after turning off lights. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.
- The headlight bulbs are filled with pressurized halogen gas. They can burst and injure you if they are hit or dropped. Handle them carefully.
- To avoid injury by sharp-edged parts of the body, wear gloves and a long-sleeved shirt when replacing light bulbs.

NOTICE

- The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.
- Frequent bulb replacement indicates the need for an inspection of the electrical system. This should be carried out by a Maruti Suzuki authorized workshop.
- During bulb replacement always use same bulb number as used in vehicle which is imprinted on the said bulb/unit and/or mentioned in this section.

NOTE:

The inner surface of lens such as the headlights or the rear combination lights may be clouded or dew condensation may occur by driving on a rainy day or washing the vehicle. This is a temporary phenomenon caused by temperature difference between the inside and the outside of the lights. (This is the same phenomenon as the windows are clouded on a rainy day.) Also, it sometimes seems that water gets into the lights because of waterdrop on the edge of the lens. This is a temporary phenomenon caused by water adherence to the outside of the lights. The above-mentioned phenomena are not vehicle malfunction.

However, if water is piled up in the lights or large waterdrop adheres to the inner surface of lens, have your vehicle inspected by a Maruti Suzuki authorized workshop.

Non-disassembled Type Lights

Since the lights shown below are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any bulb is defective.

If you need to replace the assembly, ask a Maruti Suzuki authorized workshop.

- Headlight (LED type) (if equipped)
- Front turn signal light, position light and daytime running light
- Tail/brake light
- Side turn signal light/hazard warning light on outside rearview mirrors
- High mount stop light

Headlights

LED headlights


Since special procedures are required, we recommend you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

Halogen headlights



76TS90240

(1) Headlight (high/low beam)

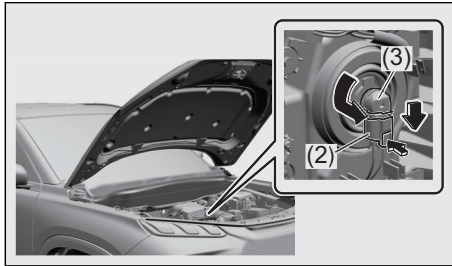

76TS90250

Disconnect the coupler (2) by pushing the lock release. Turn the bulb (3) counterclockwise and remove it.


Side Turn Signal Light On Outside Rearview Mirrors

LED module is used. Since special procedures are required, we recommend you take your vehicle to a Maruti Suzuki authorized workshop for LED module replacement.

Front Turn Signal Light, Position Light and Daytime Running Light (D.R.L.)


Since special procedures are required, it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

Rear Combination Light

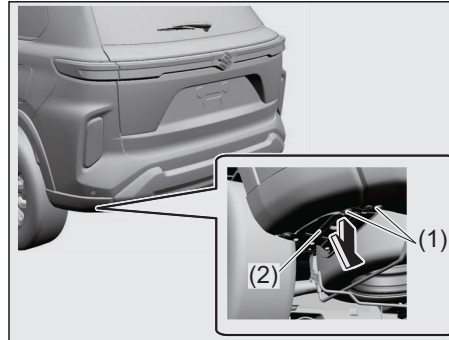

76TS90260


- 1) Remove the clips (1) and move the lining (2).

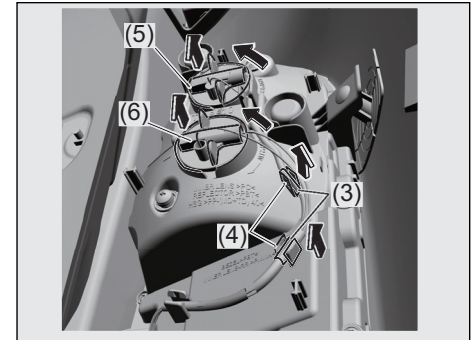

76TS90270

- 2) Remove the wire (3) from a clamp (4).
- 3) To remove the bulb holder of the rear turn signal light (5) or the reversing light (6) from the light housing, turn the holder counterclockwise and pull it out.

INSPECTION AND MAINTENANCE

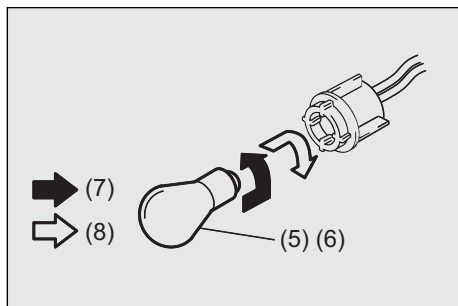

76TS90630


- (7) Removal
- (8) Installation

- 4) To remove the bulb of the rear turn signal light (5) or reversing light (6) from the bulb holder, push in the bulb and turn it counterclockwise. To install a new bulb, push it in and turn it clockwise.

Tail Light / Brake Light


Since special procedures are required, it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

License Plate Light

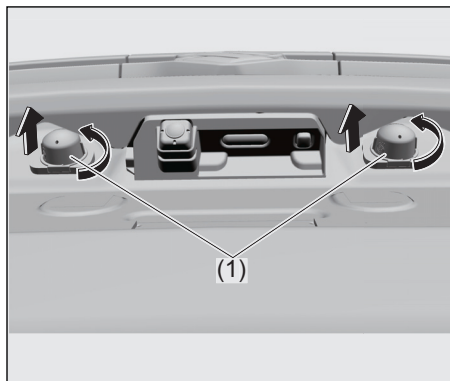

76TS90280

- 1) Turn the cover (1) counterclockwise to remove it.

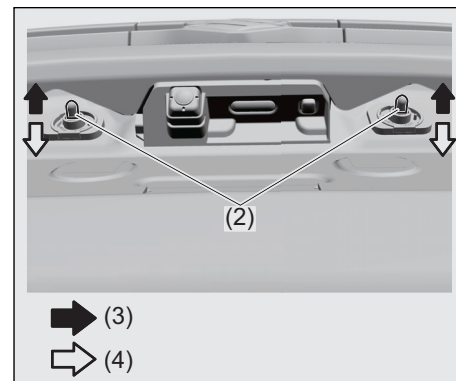


76TS90290

- (3) Removal
- (4) Installation

- 2) To remove and install the bulb of the license plate light (2), simply pull out or push in the bulb.


High Mount Stop Light

Since special procedures are required, it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

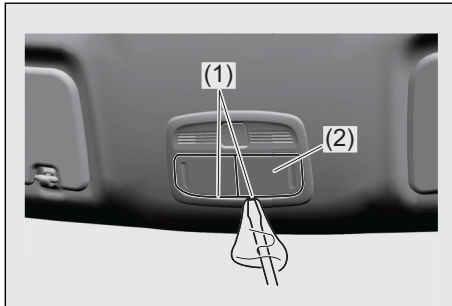Interior Light**Front (without overhead console)**


76TS90300

- 1) To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth into the notch (1), and then remove the lens (2).

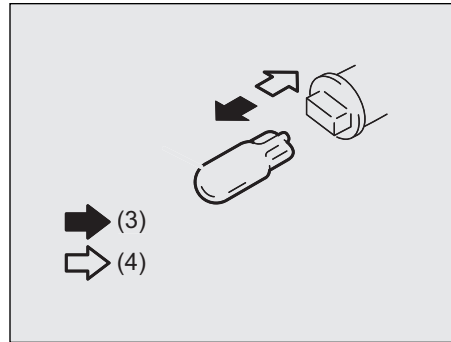

55T090040


- (3) Removal
- (4) Install
- 2) Pull the bulb out and then insert a new one.
- 3) After replacing the bulb, install the front interior light lens in the reverse order of removal.

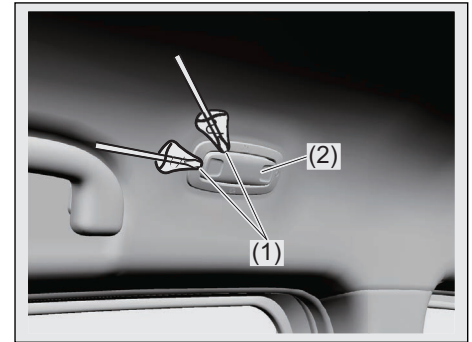Center

76TS90330

- 1) To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth into the notch (1), and then remove the lens (2).


INSPECTION AND MAINTENANCE

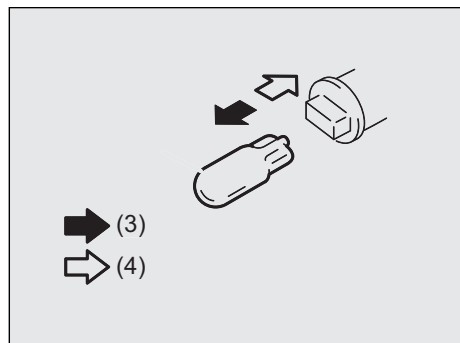

55T090040


- (3) Removal
- (4) Installation
- 2) Pull the bulb out and then insert a new one.
- 3) After replacing the bulb, install the center interior light lens in the reverse order of removal.

Luggage compartment (if equipped)

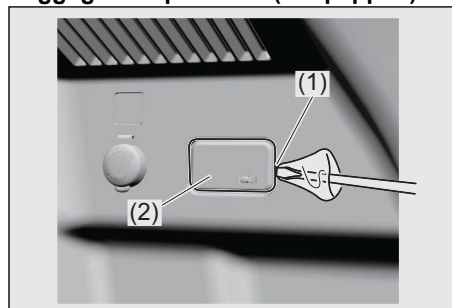

76TS90340


- 1) To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth into the notch (1), and then remove the lens (2).

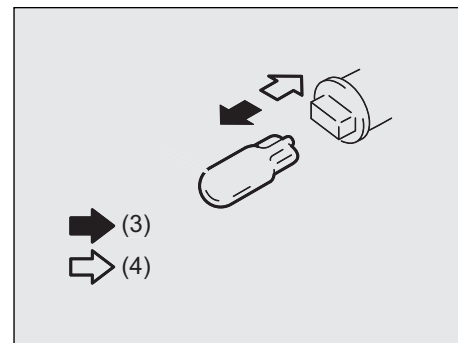


55T090040

- (3) Removal
- (4) Install
- 2) Pull the bulb out and then insert a new one.
- 3) After replacing the bulb, install the luggage compartment light lens in the reverse order of removal.

Courtesy light (if equipped)

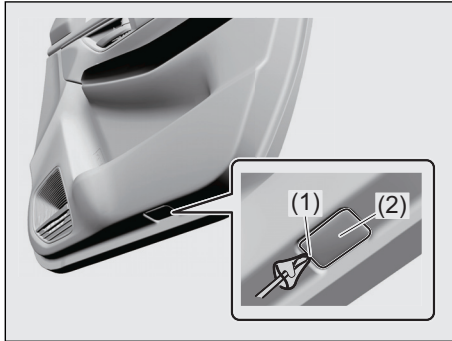


- 1) To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth into the notch (1), and then remove the lens (2).

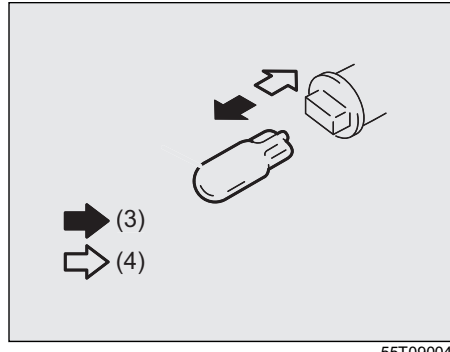


- (3) Removal
 - (4) Install
- 2) Pull the bulb out and then insert a new one.
 - 3) After replacing the bulb, install the courtesy light lens in the reverse order of removal.

Vanity mirror light (if equipped)

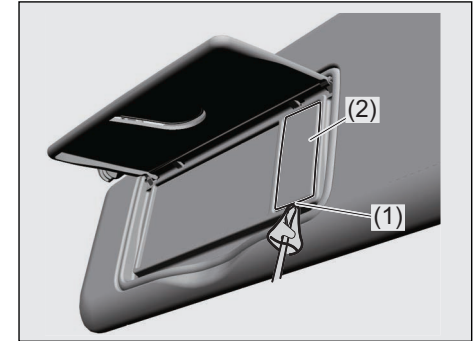

- 1) To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth into the notch (1), and then remove the lens (2).

INSPECTION AND MAINTENANCE

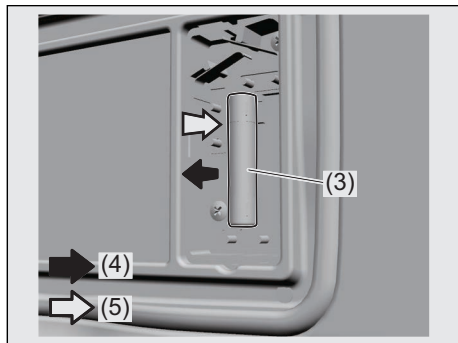

76TS90730


(4) Removal

(5) Install

2) Pull the bulb (3) out and then insert a new one.


After replacing the bulb, install the vanity mirror light lens in the reverse order of removal.

Glove box light (if equipped)

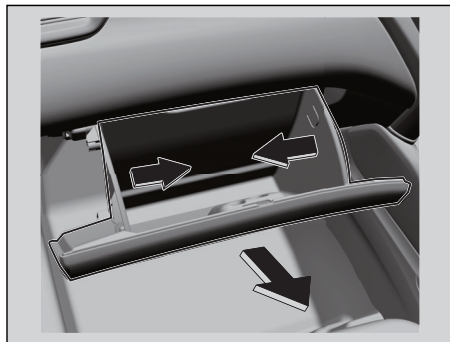


76TS90420

1) Press inward on both sides of the glove box and pull frontward and then unclamp it.

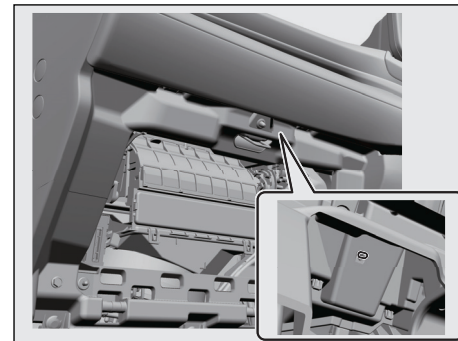

76TS90450

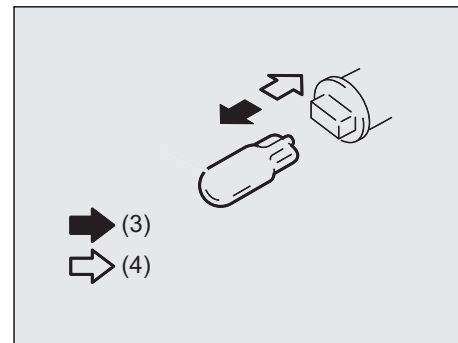

55T090040


(3) Removal

(4) Install

- 2) Pull the bulb out and then insert a new one.
- 3) After replacing the bulb, install the courtesy light lens in the reverse order of removal.

Front footwell lights (if equipped)

Driver side

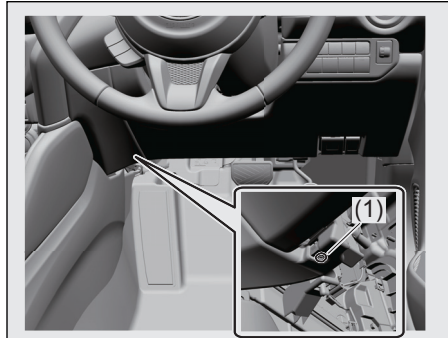

76TS90460

Passenger side




76TS90470

(1) Front footwell light

Since special procedures are required, we recommend you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

Instrument panel assistant ornament light (if equipped)

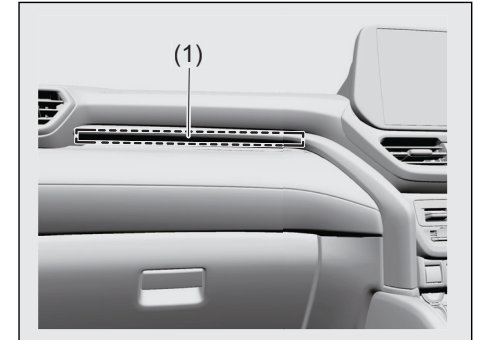

76TS90500


(1) Instrument panel assistant ornament light

Since special procedures are required, we recommend you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

INSPECTION AND MAINTENANCE


Front / Rear door ambient light (if equipped)

Front (Driver's seat side)

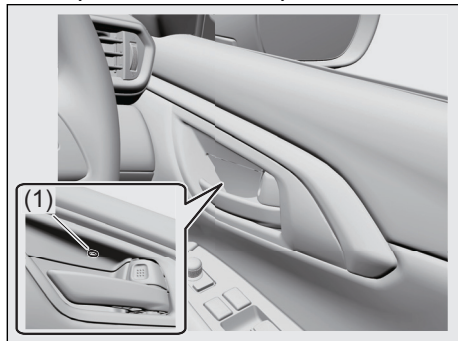

76TS90520


Front (Passenger's seat side)

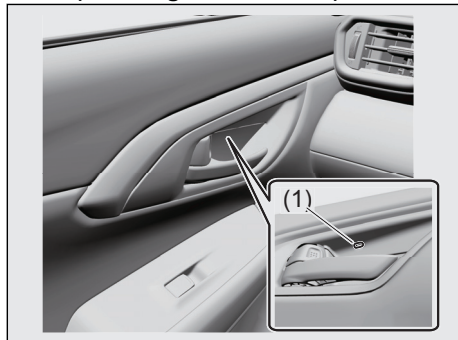

76TS90530

(1) Front door ambient light

Rear

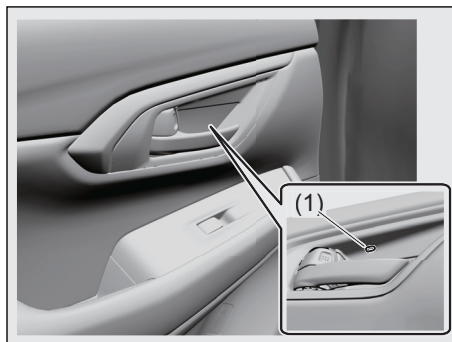


76TS90560

(1) Rear door ambient light

Since special procedures are required, we recommend you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

Wiper Blades

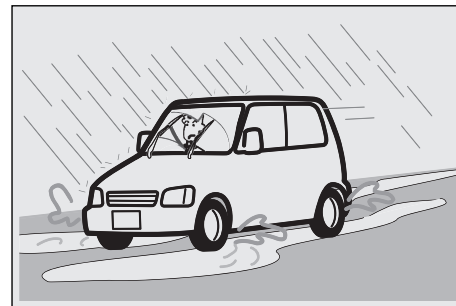

59RN09450

If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blades, follow the procedures below.

NOTICE

To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.

NOTE:


Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult a Maruti Suzuki authorized workshop for proper replacement method.

For Windshield Wipers




76TS90360

- 1) Hold the wiper arm away from the window.

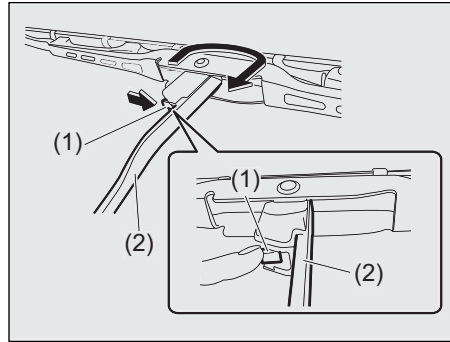

59RN09240


- 2) Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.

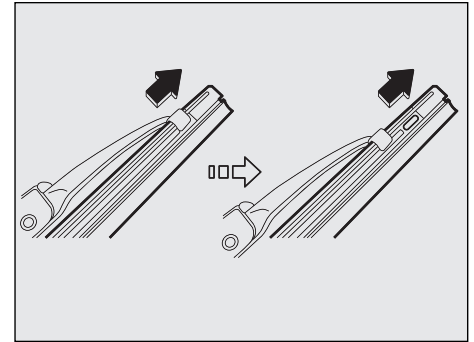

59RN09250

- 3) Unlock the lock end of the wiper blade and slide the blade out as shown.


INSPECTION AND MAINTENANCE

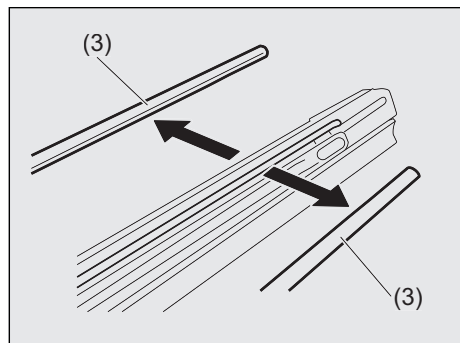

59RN09260

(3) Retainer

- 4) If the new blade is provided without the two metal retainers, move them from the old blade to the new one.

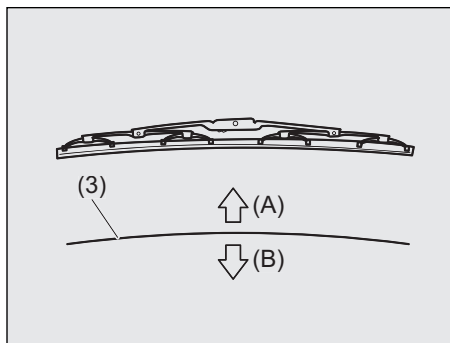


59RN09270

(A) Up

(B) Down

NOTE:

When you install the metal retainers (3), make sure the direction of metal retainers as shown in the above illustration.

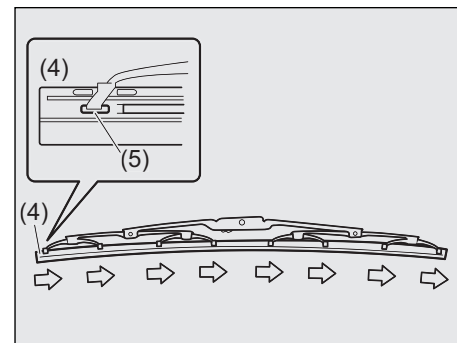

55T090710


(4) Locked end

- 5) Install the new blade in the reverse order of removal, with the locked end positioned toward the wiper arm. Make sure the blade is properly retained by all the hooks. Lock the blade end into place.
- 6) Reinstall wiper frame to arm, making sure that the lock lever is snapped securely into the arm.


NOTICE

Fit the stopper side (5) of the wiper blade rubber in the driver's seat side. Otherwise, the wiper blade rubber may be misaligned while the wiper operates.

For Rear Windshield Wiper (if equipped)

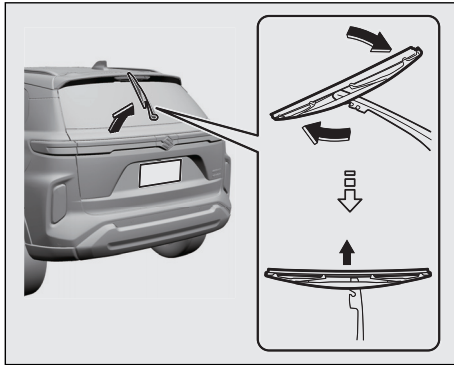


- 1) Hold the wiper arm away from the window.
- 2) Remove the wiper frame from the arm as shown.

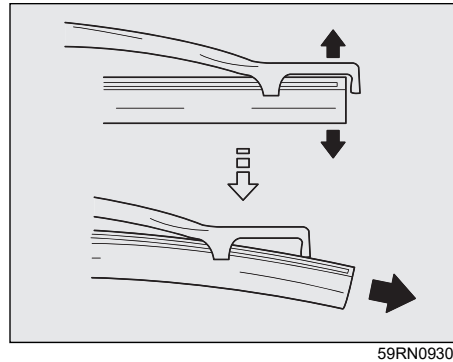

- 3) Slide the blade out as shown.

NOTE:


Do not flex the wiper blade frame end more than necessary. If you do, it can break off.

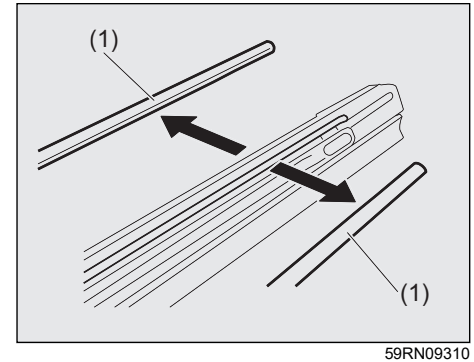

- (1) Retainer

- 4) If the new blade is provided without the two metal retainers, move them from the old blade to the new one.
- 5) Install the new blade in the reverse order of removal. Make sure the blade is properly retained by all the hooks.
- 6) Reinstall wiper frame to arm in the reverse order of removal.

Windshield Washer Fluid

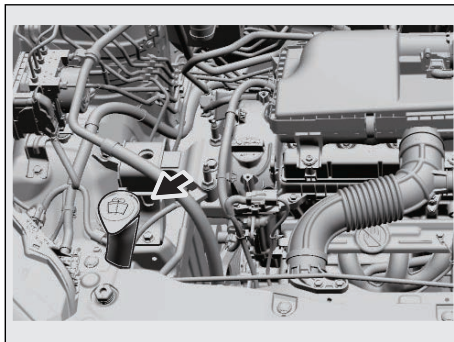

76TS90390

Check that there is washer fluid in the tank. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

WARNING

- Do not use radiator antifreeze in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also can damage your vehicle's paint.
- Do not add washer fluid when the engine and hybrid system is hot or operating as washer fluid contains alcohol and may catch fire if spilled on the engine, etc.

NOTICE


Damage may result if the washer motor is operated with no fluid in the washer tank.

Air Conditioning System

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.


Air Conditioner Filter Replacement

Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

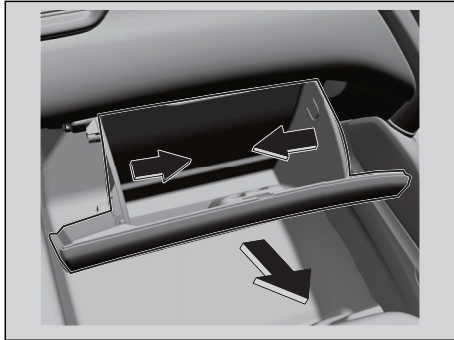

76TS90420

- 1) To approach the air conditioner filter, remove the glove box by pressing both sides of the glove box inward and pulling it out.

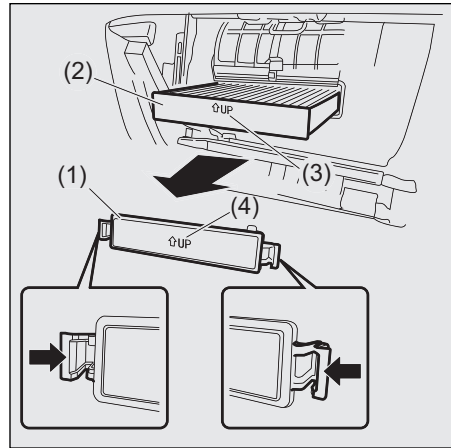

76TS90760

- 2) Remove the cover (1) and pull out the air conditioner filter (2).

NOTE:

- When you install a new filter, check that the UP mark (3) faces upward.
- When you install the cover, check that the UP mark (4) faces upward.

Cleaning the Hybrid Battery Air Intake Vent and Filter (M15D Engine Model)

To prevent the fuel economy from being affected, visually inspect the hybrid battery air intake vent periodically for dust and clogs.

If there is a problem or "DRIVE BATTERY COOLING PARTS MALFUNCTION SEE OWNER'S MANUAL" is shown on the multi-information display, it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for hybrid battery air intake vent and filter replacement.

INSPECTION AND MAINTENANCE

Preparation Before Winter Season

Windshield Washer Fluid

To prevent windshield washer fluid from freezing, dilute it by the ratio according to outside temperature.

Lead-acid Battery

Check the liquid measure and the specific gravity of lead-acid battery. When it becomes cold, the battery performance gets worse. Also, it becomes difficult to start the engine by the weak battery. Refer to "Battery" in the "INSPECTION AND MAINTENANCE" section.


Engine Coolant

To prevent the inside of engine from corroding and freezing, use the designated engine coolant. Refer to "Specifications" in the "SPECIFICATIONS" section.

NOTE:

To check the concentration of engine coolant or replace it, ask a Maruti Suzuki authorized workshop.

Winter Tyres and Chocks

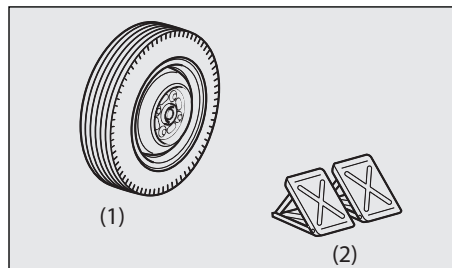

55T090670

- (1) Winter tyre
- (2) Chock

Winter tyres and chocks are necessary to drive on the snow roads or the frozen roads.


Before Your Driving Snow on the Roof



80J308

Remove snow on the roof before your driving. If you do not remove it, snow may fall during your driving and it may hinder your view.


Frozen Wiper Blades

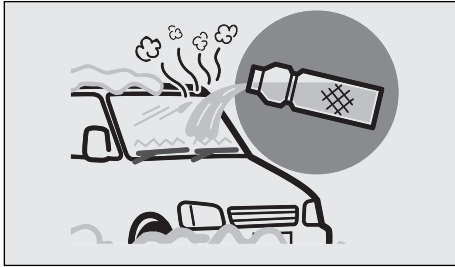

65P60060

Melt ice by pouring lukewarm water. After melting it, wipe off water to prevent refreezing. If you operate the wiper blades forcedly when ice stays freezing, the wiper rubbers may be damaged and the wiper blades may be broken.


Snow and Frost on the Window Glasses

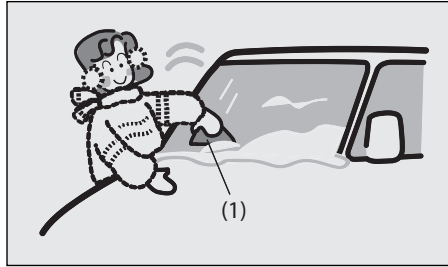

82K261

Use the plastic board (1). You can remove snow and frost not to damage the window glasses.

Frozen Outside Rearview Mirrors

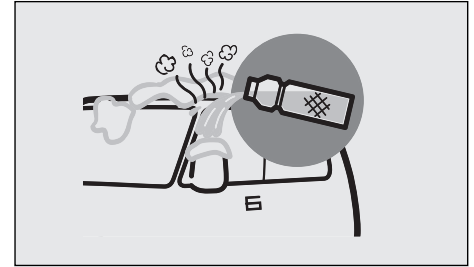


65P60070

Melt ice by pouring lukewarm water. After melting it, wipe off water to prevent refreezing. If you operate the outside rearview mirrors forcedly when ice stays freezing, the outside rearview mirrors may be broken.

NOTICE

- For the outside rearview mirror folding switch, check if you can move the mirrors by your hands first. Then, operate the switch. If you repeat to operate the switch when ice stays freezing, the mirrors may be broken.
- For the remote folding mirrors, deactivate the function of the remote folding mirrors in the cold condition where the outside rearview mirrors are frozen. If you repeat to operate them when ice stays freezing, the mirrors may be broken.

Frozen Doors

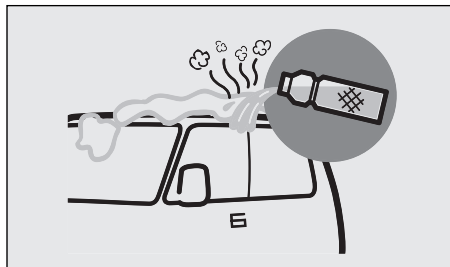

65P60080

Pour lukewarm water except the keyhole on the door. After opening the door, wipe off water. If you open the door forcibly when ice stays freezing, the rubbers around the door may be come off and broken.

Snow Attaching to Shoes



80J312

Remove snow attaching to shoes before getting in your vehicle. If you do not remove it, you may slip when operating the pedals and the window glasses may mist easily because of high humidity inside the vehicle.

When Parking the Vehicle Outside



80J315

NOTICE

- If you park the vehicle under eaves or trees, the roof of the vehicle may be dented by accumulated snow or fallen snow. When it is snowing, do not park the vehicle under eaves or trees.
- If you park the vehicle outside when it is snowing, the wiper arms may be deformed or the wiper blades may be frozen on the windshield by snow weight. Raise the wiper arms away from the windshield when parking the vehicle.

Parking Brake Precautions in Cold Weather

If the parking brake system freezes, the parking brake may not be released.

Vehicles with the parking brake lever

When parking for an extended period, use wheel chocks (commercially available) instead of applying the parking brake.


For vehicles with automatic transmission or e-CVT, move the gearshift into "P" (Park) position.

For vehicles with manual transmission, move the gearshift into "R" (Reverse) or 1st gear position.

Vehicles with the electric parking brake

- Turn off the auto mode of the electric parking brake. There is a risk that the electric parking brake may activate automatically, causing the brake system to freeze and making it impossible to release. Also, avoid using the brake hold system. Even if the auto mode of the electric parking is OFF, the electric parking brake may still activate automatically.
- If the electric parking brake is applied, the brake system may freeze, and this makes releasing the system difficult. Use wheel chocks (commercial available) instead of applying the electric parking brake. Failure to do so may cause the vehicle to move unintentionally, leading to an unexpected accident.

- When the auto mode of the electric parking brake, move the gearshift into "P" position, then release the electric parking brake.
- When electric parking brake is in auto mode, move the gearshift to "P" position then release the electric parking brake.
- If the vehicle is parked with wet brake components in cold weather, they may freeze.

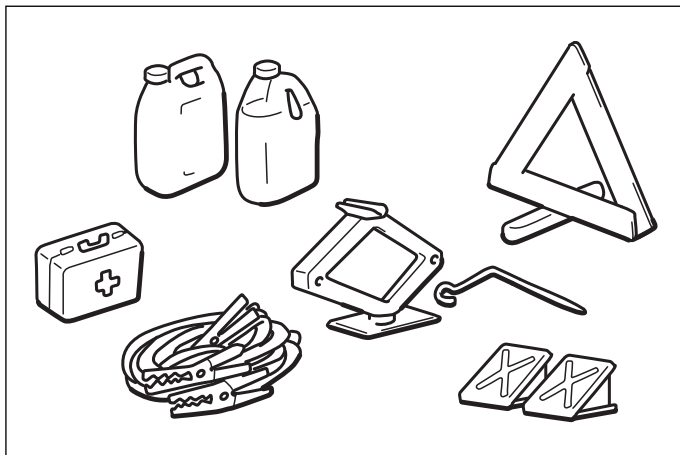

60G411

EMERGENCY SERVICE

Towing by Tow Truck	10-1
Towing by Using Towing Eye	10-3
Tyre Changing Tool	10-7
Jacking Instructions	10-9
Flat Tyre Repair Kit	10-15
Jump-starting Instructions	10-18
Running Out of Battery	10-20
If You Get a Flat Tyre While Driving	10-20
Engine Trouble: Starter Does not Operate	10-21
Engine Trouble: Does not Start	10-21
Engine Trouble: Overheating	10-21
Hybrid System Trouble: Does not Start	10-22
Hybrid System Trouble: Overheating	10-23
Warning Triangle	10-24

EMERGENCY SERVICE

Towing by Tow Truck

If you need to have your vehicle towed, contact a professional service. A Maruti Suzuki authorized workshop can provide you with detailed towing instructions.

NOTICE

To help avoid damage to your vehicle during towing, proper equipment and towing procedures must be used.

The following may indicate a problem with your transmission. Contact your Maruti Suzuki authorized workshop or commercial towing service before towing.

- For the vehicle with M15D engine, the hybrid system warning message is shown on the multi-information display and the vehicle does not move.
- The vehicle makes an abnormal sound.

For vehicles with the electric parking brake

If the electric parking brake malfunctions and cannot be released, the vehicle must be towed as follows.

- With all four wheels on a flat-bed truck.
- With the front or rear wheels lifted and a dolly under the other wheels.


⚠ WARNING

Make sure that the auto mode is turned off as necessary to prevent the parking brake from being applied automatically.

2-wheel Drive (2WD) Manual Transmission

Manual transmission vehicles may be towed using either of the following methods.

- Being towed from the front:
Lift the front wheels and keep the rear wheels on the ground. Before the vehicle is towed, make sure that the parking brake is released.
- Being towed from the rear:
Lifted and the front wheels on the ground, provided the steering and drive-train are in operational condition. Before towing, check that transmission is in neutral, the steering wheel is unlocked (the ignition mode is ACC), and the steering wheel is secured with a clamping device designed for towing service.

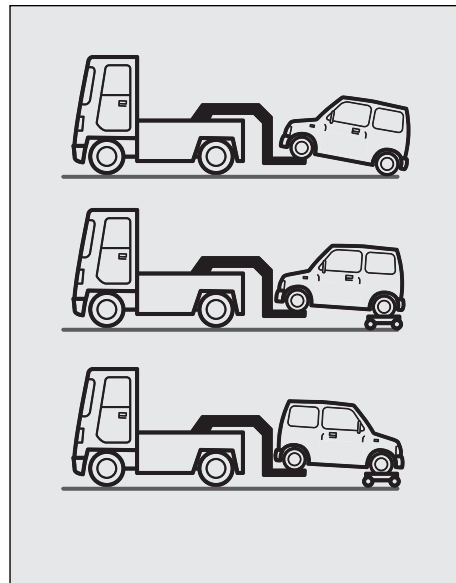

67T00160


NOTICE

The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.

2-Wheel Drive (2WD) Automatic Transmission or e-CVT

Automatic transmission or e-CVT vehicles may be towed using either of the following methods.

- Being towed from the front:
Lift the front wheels and keep the rear wheels on the ground. Before the vehicle is towed, make sure that the parking brake is released.
- Being towed from the rear:
Lift the rear wheels and place a dolly under the front wheels.

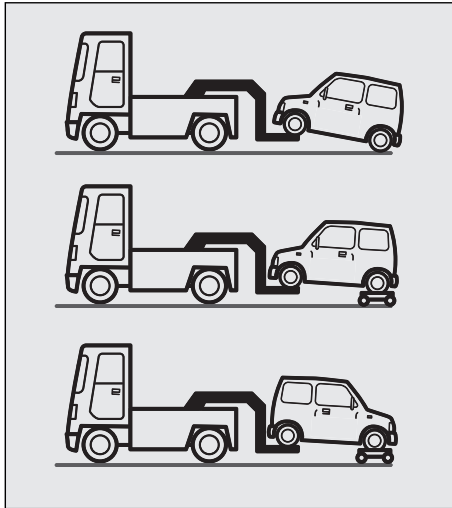

67T00160

⚠ WARNING

For e-CVT model, do so with the front wheels raised. If the wheels connected to the electric motor (traction motor) are on the ground when towing, the motor may continue to generate electricity. This may cause a fire.


NOTICE

If your vehicle is towed with the front wheels on the ground, it can result in damage to the automatic transmission or e-CVT.

4-Wheel Drive (4WD)

Your vehicle should be towed under one of the following conditions:

- With all four wheels on a flat-bed truck.
- With the front or rear wheels lifted and a dolly under the other wheels.

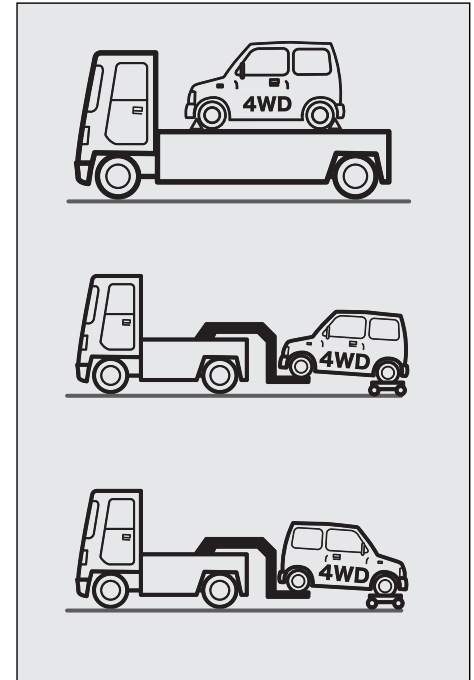

76TS100010


EMERGENCY SERVICE

NOTICE

Towing the 4WD vehicle with four wheels on the ground can result in damage to the manual transmission, automatic transmission and/or the 4WD system.

Towing by Using Towing Eye Hanging Point of a Towing Cable

Hang a towing cable on a towing eye. The towing eye is provided on the front of the vehicle for use in emergency situations or sea shipping purposes.

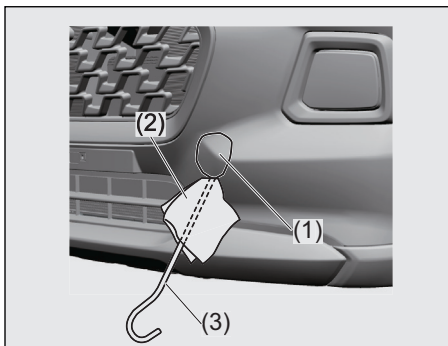

76TS100020


- 1) Remove the cover (1) by using a jack handle (2) covered with a soft cloth (3) as shown in the illustration.

NOTICE

Do not apply excessive force as it may damage the cover strap.


NOTE:

We recommend that you fasten the cover with tape to prevent damage during towing.

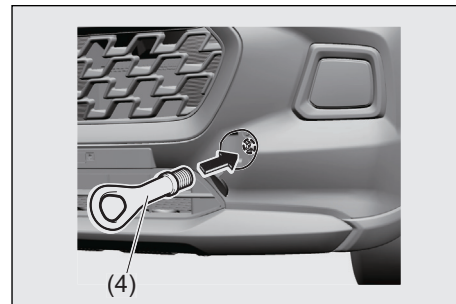

76TS100030

- 2) Install the towing eye (4) by hand.

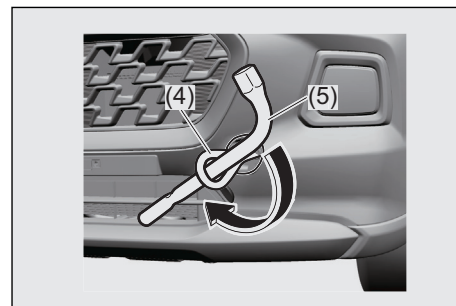


76TS100040

- 3) To tighten the towing eye (4), turn it clockwise by using a wheel brace (5) until the towing eye (4) is securely installed.

NOTICE


- Observe the following instructions when using the towing eye (4). Otherwise, the towing eye or the vehicle body may break and cause serious injury or damage:
 - Avoid pulling the vehicle to get out of severe snowy, muddy or sandy conditions.
 - Avoid sudden starts or erratic driver performance which could cause excessive stress on the towing eye.
 In such cases, we recommend that you contact a professional service.
- Do not use the towing eye (4) for towing another vehicle or transporting your vehicle by a car carrier trailer, etc.

K15C engine model

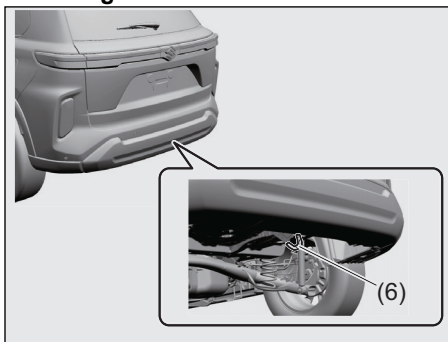

55T100071

M15D engine model

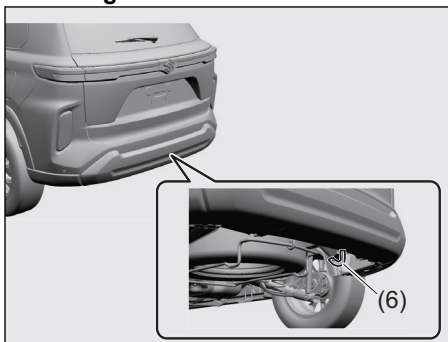


76TS100210

NOTICE

- Your vehicle was originally designed to carry people and a normal amount of cargo, not to tow a trailer.
- The frame hook (6) is provided on the rear of the vehicle for use in emergency situations and sea shipping purposes only. Do not use the frame hook for towing another vehicle, being towed by another vehicle or transporting your vehicle by a car carrier trailer, etc. Otherwise, the frame hook or the vehicle body may break and cause serious injury or damage.

EMERGENCY SERVICE

Other Holes

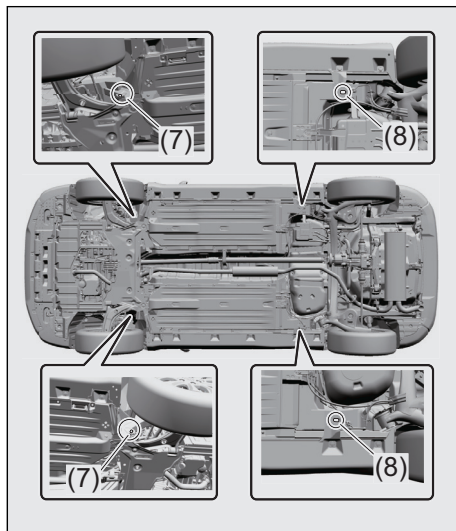

76TS100220

The frame holes (7) and (8) are provided only for transporting by a car carrier trailer.

⚠ WARNING

Do not use the frame holes (7) and (8) for towing purpose. These holes may break and cause serious injury or damage.

Towing by Using a Rope

- 1) Hang a towing cable on a towing eye horizontally, so that the hanging side would be the same for the towing vehicle and the towed vehicle if possible.
- 2) Keep the engine running or the hybrid system activating.
 - When you cannot start the engine or the hybrid system, press the engine switch or the power switch to change the ignition mode to the position other than LOCK (OFF).
 - Turn the steering wheel to left and right to check that the steering lock is released.

⚠ WARNING

If you drive the vehicle without the engine running and the hybrid system starting, it may cause an accident.

When your vehicle is towed by using a rope, observe the following instructions.

- **Do not press the engine switch or the power switch to change the ignition mode to LOCK (OFF). Otherwise, the steering wheel will be locked and not be turned.**

(Continued)

⚠ WARNING

(Continued)

- **Depress the brake pedal more firmly than usual, as the brake booster does not work.**
- **Operate the steering wheel with more force, as the power steering system does not work.**

NOTICE

If you cannot release the steering lock, you cannot operate the steering wheel and it may cause an accident. If you cannot release the steering lock because of malfunction and running out of the lead-acid battery, do not perform towing by using a rope.

- 3) Shift the gearshift lever into "N".

NOTE:

If you cannot shift the gearshift lever into "N", towing by using a towing cable is not possible. Consult a Maruti Suzuki authorized workshop.

- 4) During towing, make sure that a towing cable is not slack. To avoid a collision, carefully drive your vehicle checking the brake lights of the front vehicle.
 - To warn the driver of a following vehicle, turn on the hazard warning lights of the towed vehicle.

 WARNING

If you continuously depress the brake pedal on a long or steep downhill slope, the brakes could overheat and become ineffective. When there is a long or steep downhill slope, do not perform towing by a rope. Make a request of a tow truck.

NOTICE

- If a strong impact is applied to a towing eye or a towing cable by sudden starting etc., the towing eye or the vehicle body may be damaged.
When the vehicle needs to be towed, do not apply a strong impact to a towing eye or a towing cable by sudden starting etc. Do not accelerate suddenly.
- If the vehicle unavoidably needs to be towed by a rope, tow your vehicle on the roads. Do not exceed the vehicle speed of 30 km/h and do not drive the vehicle for longer than 30 km to protect the transmission.
- To avoid damaging engine system components, tow the vehicle in the forward direction when using a rope.

EMERGENCY SERVICE

Tyre Changing Tool

The tyre changing tools are stowed in the luggage compartment.


K15C engine petrol model

Remove the luggage compartment board (7), then remove the tyre changing tools.

- (1) Tool boxes
- (2) Jack
- (3) Flat tyre repair kit
- (4) Wheel wrench
- (5) Towing eye
- (6) Jack handle
- (7) Luggage Compartment Board
- (8) Warning Triangle

NOTE:


- For vehicle fitted with CNG fuel system, refer to the supplementary owner's manual.
- To remove the luggage compartment board easily, lift the board from the hole provided on the board and pull it out.
- When using the jack, check that there is no deformation or damage on the jack.
- Check that there is no dirt on the screw part and grease is applied on it.

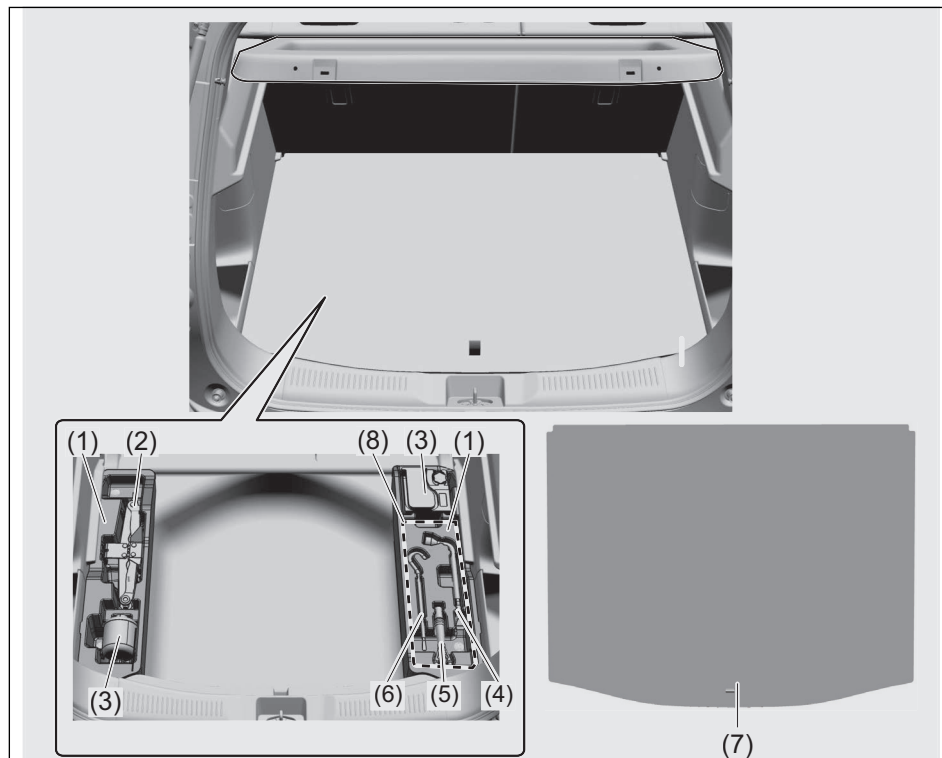

76TS10192

M15D engine model

Remove the luggage floor carpet (1).

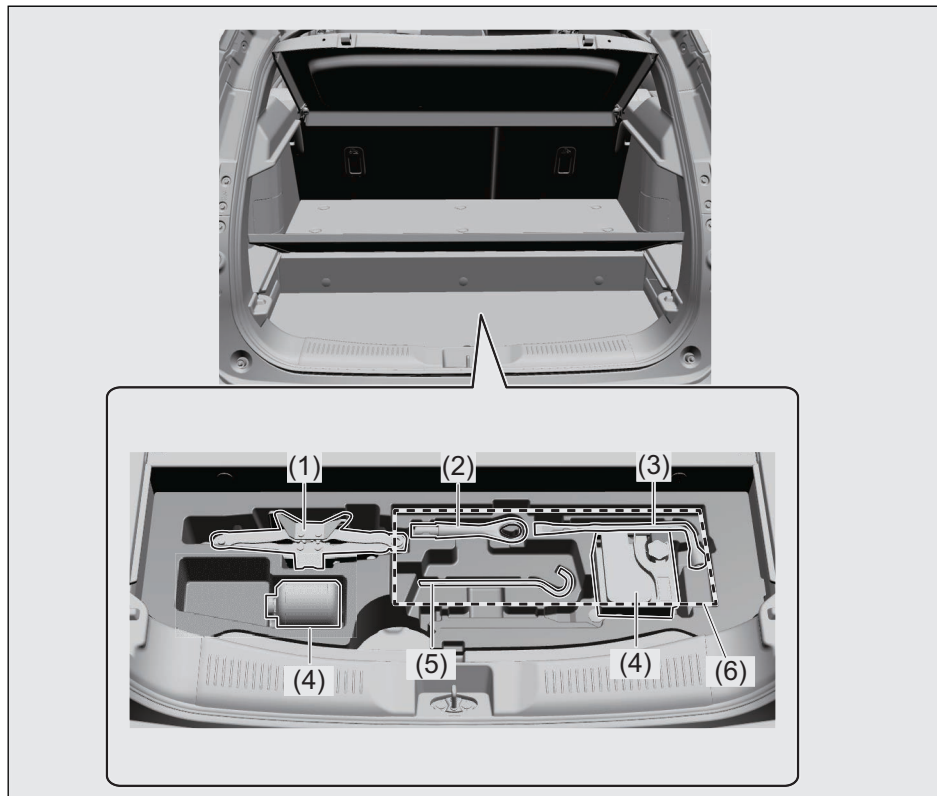

76TS100151

- (1) Jack
- (2) Towing eye
- (3) Wheel wrench
- (4) Flat tyre repair kit
- (5) Jack handle
- (6) Warning Triangle

The tyre changing tools are stowed in the luggage compartment.
Refer to “Luggage Compartment” in “QUICK GUIDE” section.

EMERGENCY SERVICE

WARNING


After using the tyre changing tools, be sure to stow them securely or they can cause injury if an accident occurs.

CAUTION

The jack should be used only to change wheels. It is important to read the jacking instructions in this section before attempting to use the jack.

NOTICE

To avoid damaging the storage bracket, do not expand the jack excessively.

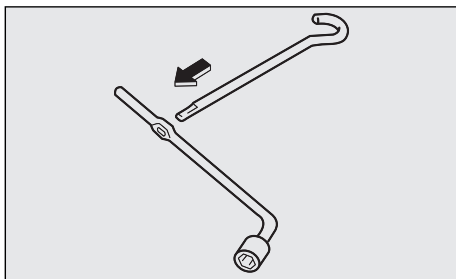

59RN10120


Jacking Instructions

- 1) Place the vehicle on level, hard ground.
- 2) Set the parking brake firmly and shift into "P" (Park) if your vehicle has an automatic transmission or e-CVT, or shift into "R" (Reverse) if your vehicle has a manual transmission.

WARNING


- Shift into "P" (Park) when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.

- 3) Stop the engine or hybrid system..
- 4) Turn on the hazard warning switch if your vehicle is near traffic.

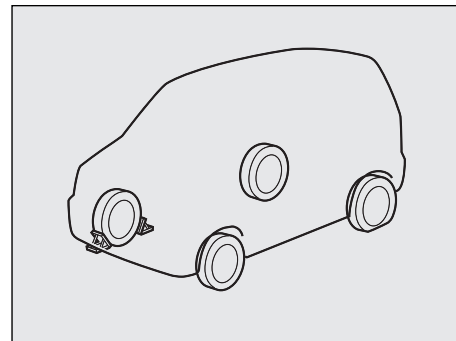


59RN10010

- 5) Block the front and rear of the wheel diagonally opposite to the wheel being lifted.

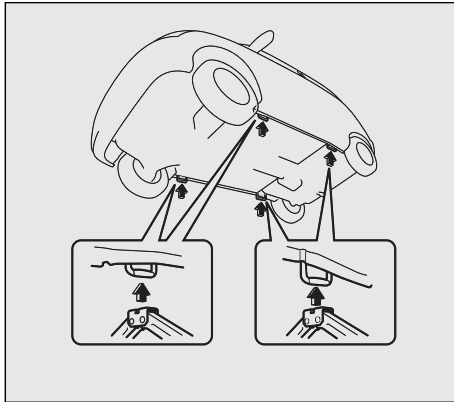

63J100

- 6) Position the jack at an angle as shown in the illustration and raise the jack by turning the jack handle clockwise until the jack-head groove fits around the jacking bar beneath the vehicle body.

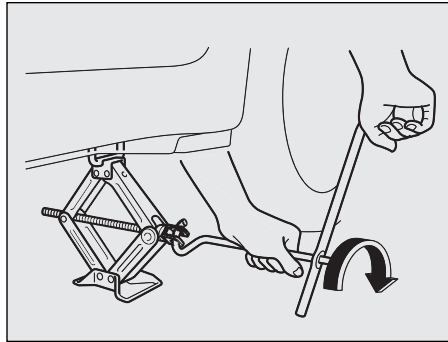

63J101

- 7) Continue to raise the jack slowly and smoothly until the tyre clears the ground. Do not raise the vehicle more than necessary.

⚠ WARNING

- Use the jack only to change wheels on level, hard ground.
- Never jack up the vehicle on an inclined surface.
- Never raise the vehicle with the jack in a location other than between the frame bosses near the wheel to be changed.
- Make sure that the jack is raised at least 25 mm before it contacts the boss. Use of the jack when it is within 25 mm of being fully collapsed may result in failure of the jack.
- Do not use wooden blocks or similar objects as a jack underlay.
- No person should place any portion of their body under a vehicle that is supported by a jack. Never place your hands or feet under the raised vehicle when it is supported by a jack.
- Never run the engine and activate the hybrid system when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.

EMERGENCY SERVICE

Raising Vehicle with Garage Jack

- Apply the garage jack to one of the points indicated below.
- Always support the raised vehicle with jack stands (commercially available) at the points indicated below.


- (1) Front
- (2) Rear
- (3) Jack stand
- (4) Garage jack
- (5) Jacking point for garage jack

WARNING

As the vehicle may get damaged or an accident may occur, observe the following points.



- Observe the designated points shown in the illustrations.
- When holding the lifted vehicle, use the rigid rack.
- When jacking up the front side or the rear side only, place a chock (commercially-available product) on front and back of the grounded tyre.

K15C engine model

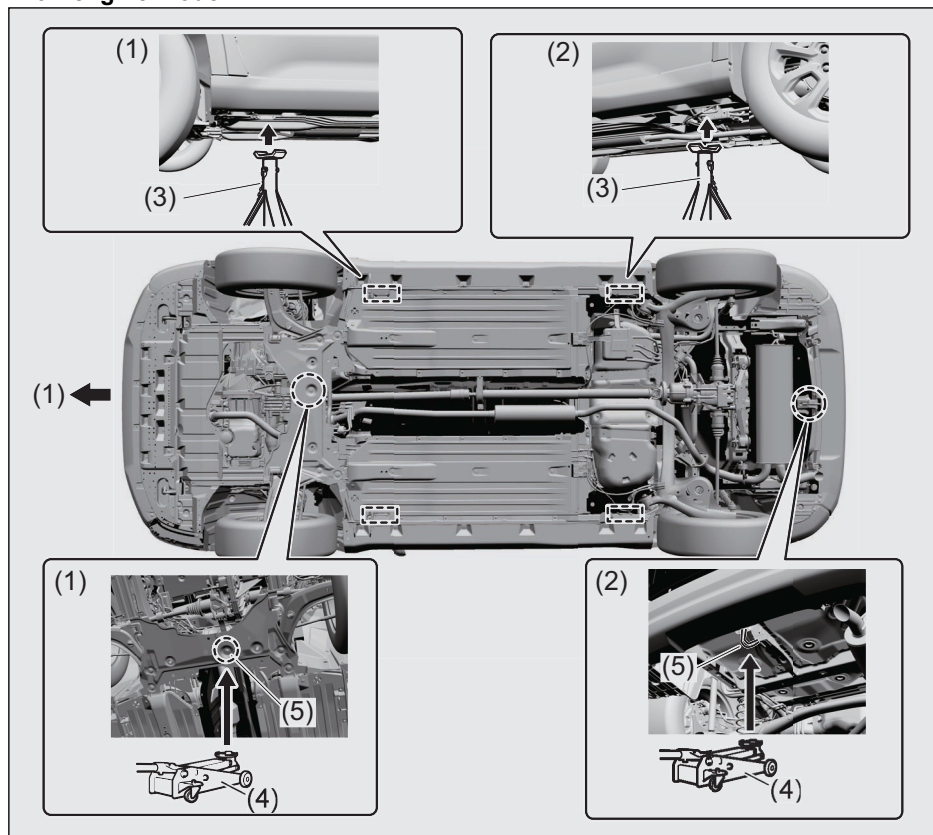

76TS100070

M15D engine model

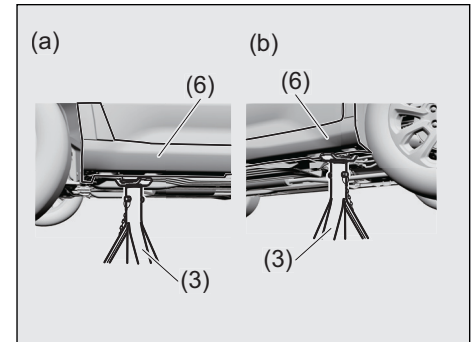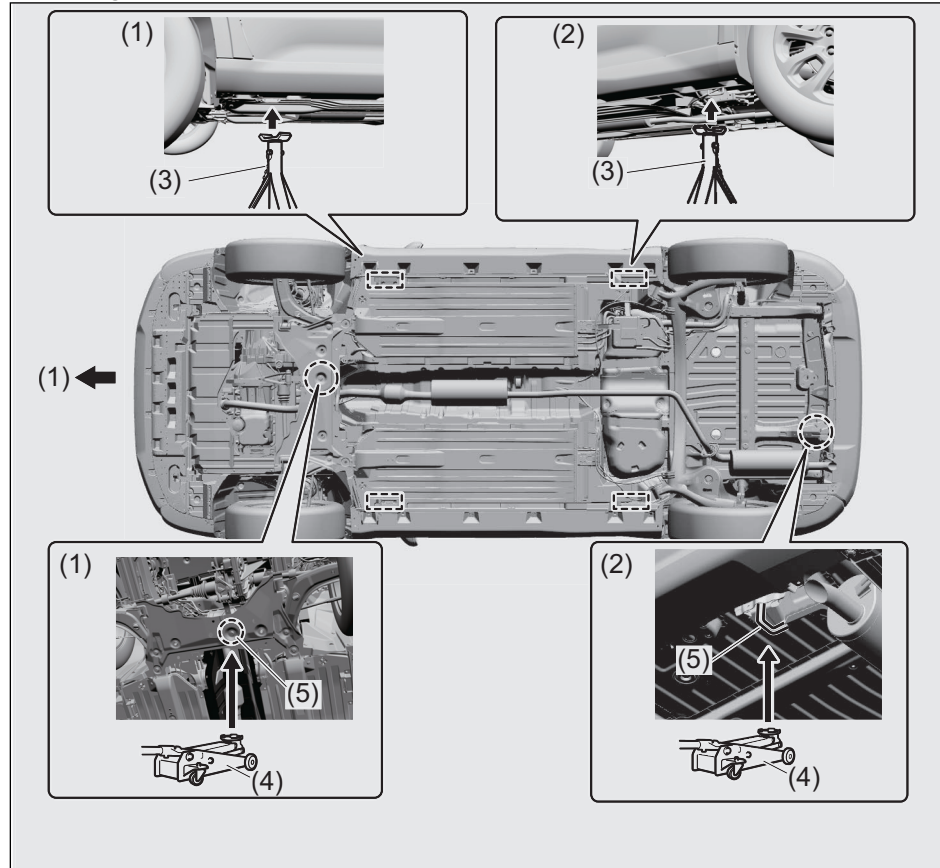

76TS100140

- (a) Specified position of jack stand for the front side
- (b) Specified position of jack stand for the rear side

NOTICE

If you use the jack stand (3) in the condition that it touches the side skirt (6), the side skirt may be broken or damaged. When using the jack stand, make sure that it does not touch the side skirt.

NOTE:

For more details, consult a Maruti Suzuki authorized workshop.

EMERGENCY SERVICE

Changing Wheels

WARNING

Never change a wheel in traffic lane. Always move the vehicle off the road on level, hard ground away from traffic for changing a wheel. For any further assistance contact your nearest Maruti Suzuki authorized workshop.

To change a wheel, use the following procedure:


- 1) Prepare the jack and tools.
- 2) Loosen, but do not remove the wheel nuts.
- 3) Jack up the vehicle (follow the jacking instructions in this section).
- 4) Remove the wheel nuts and wheel.

WARNING

- Shift into “P” (Park) for an automatic transmission or e-CVT, or into “R” (Reverse) for a manual transmission vehicle when you jack up the vehicle.
- Never jack up the vehicle with the transmission in “N” (Neutral). Otherwise, unstable jack may cause an accident.


CAUTION

Immediately after the vehicle has been driven, the wheels, the wheel nuts and the area around the brakes might be extremely hot. Touching these areas may cause burn injury. Do not touch these areas, immediately after the vehicle has been driven.

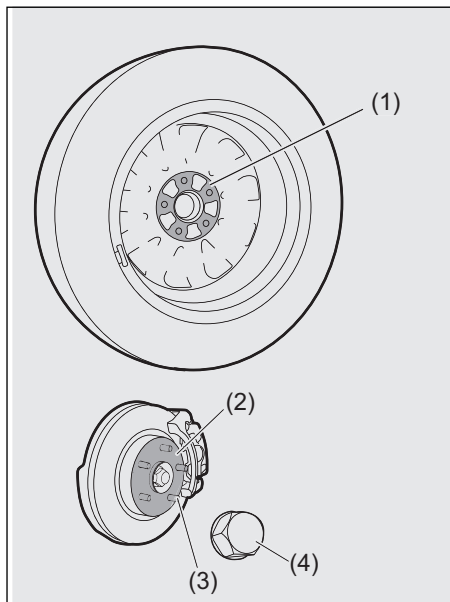

76TS100180

- 5) Clean any mud or dirt off from the surface of the wheel (1), hub (2), thread part (3) and surface of the wheel nuts (4) with a clean cloth. Clean the hub carefully; it may be hot from driving.
- 6) Install the new wheel and replace the wheel nuts with their cone shaped end facing the wheel. Tighten each nut snugly by hand until the wheel is securely seated on the hub.

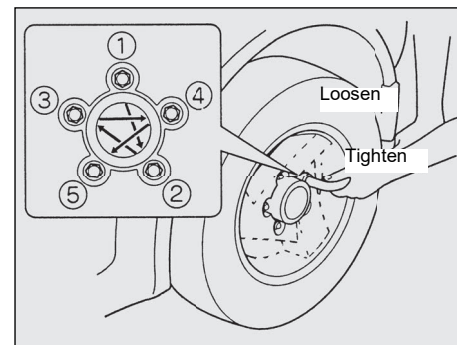


81A057

Tightening torque for wheel nuts
100 Nm (10.2 kg-m)

- 7) Lower the jack and fully tighten the nuts with a wrench in numerical order as shown in the illustration.

⚠ WARNING

Use genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident. If you do not have a torque wrench, have the wheel nut torque checked by a Maruti Suzuki authorized workshop.

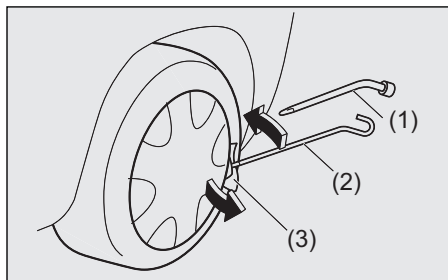
Full Wheel Cover (if equipped)

68PM08011

(1) or (2) Flat end tool

Your vehicle includes two tools, a wheel wrench and a jack crank, one of which has a flat end.

Use the tool with the flat end with soft cloth (3) to remove the full wheel cover, as shown above.

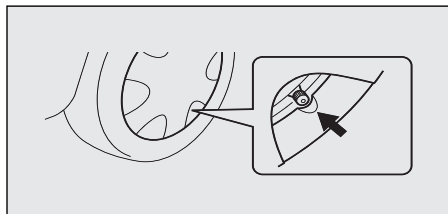

68PM08012

When installing the cover, make sure that it is positioned so that it does not cover or foul the air valve.

EMERGENCY SERVICE

Flat tyre repair kit

The flat tyre repair kit is stowed in the luggage compartment.

Refer to “Luggage Compartment” in “QUICK GUIDE” section.

WARNING

Failure to follow the instructions in this section for using the flat tyre repair kit can result in an increased risk of loss of control and an accident.

Carefully read and follow the instructions in this section.

NOTICE


The flat tyre repair kit cannot be used in the following cases. Consult a Maruti Suzuki authorized workshop or a roadside assistance service.

- Cuts or piercing in the tyre tread larger than approx. 4 mm (0.15 in.).
- Cuts in the tyre side wall.
- Tyre damage caused by driving with considerably reduced tyre pressure or even with deflated tyre.
- The tyre bead completely unseated outside of the rim.
- The rim damaged.

Small punctures in the tyre tread, caused by a nail or a screw, can be sealed with the flat tyre repair kit.

Do not remove nails or screws from the tyre during an emergency repair.

Flat tyre repair kit contents

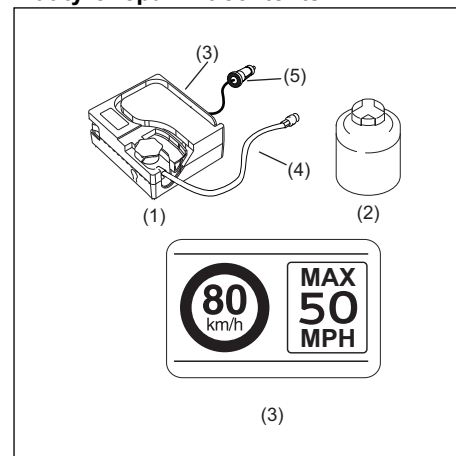

76TS0A090

- (1) Air compressor
- (2) Sealant bottle
- (3) Speed restriction sticker (with air compressor)
- (4) Air hose
- (5) Power plug

⚠ WARNING


Flat tyre repair kit sealant is harmful if swallowed, or if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Give plenty of water (if possible charcoal slurry) and seek medical attention immediately. If sealant gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of the reach of children and animals.

NOTICE

Replace the sealant before expiry date indicated on the label of the sealant bottle. To purchase new sealant, see your Maruti Suzuki authorized workshop.

Emergency repair

- 1) Place the vehicle on level, hard ground. Set the parking brake firmly and shift into "P" (Park) if your vehicle has an automatic transmission, or shift into "R" (Reverse) if your vehicle has a manual transmission. Turn on the hazard warning flasher if your vehicle is near traffic. Block the front and rear of the wheel diagonally opposite of the wheel being repaired.
- 2) Take out the sealant bottle and the compressor.
- 3) At the top of the compressor, remove the cap that covers the socket for the sealant bottle, and then screw the bottle into the socket.
- 4) Unscrew the valve cap from the tyre valve.
- 5) Connect the air hose of the air compressor to the tyre valve.
- 6) Connect the power plug of the compressor to the accessory socket. For a manual transmission vehicle, shift from "R" (Reverse) into "N" (Neutral). Start the engine. Switch on the compressor. Inflate the tyre to the required air pressure.

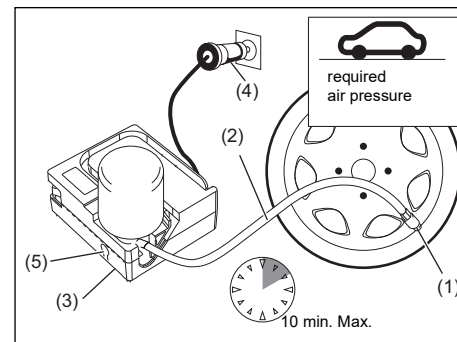

76TS0A091

- (1) Tyre valve
- (2) Air hose
- (3) Compressor
- (4) Power plug
- (5) Deflation valve

NOTICE

Do not operate the compressor for longer than 10 minutes. It can cause overheating of the compressor.

If the tyre cannot be inflated to the required air pressure within 5 minutes, move the vehicle a few meters back and forth to spread the sealant over the entire tyre. Then, inflate the tyre again.

EMERGENCY SERVICE

If the tyre still cannot be inflated to the required air pressure, the tyre may be severely damaged. In this case, the flat tyre repair kit cannot provide the necessary seal. Consult a Maruti Suzuki authorized workshop or a roadside assistance service.

NOTE:

If the tyre is over-inflated, deflate air by pushing the deflation valve (5) of the filler hose.

- 7) Affix the speed restriction label from the air compressor in the driver's field of view.
- 8) Make a short drive immediately after inflating the tyre to the required air pressure. Drive carefully with a maximum speed of 80 km/h (50 mph).
- 9) Carry on driving carefully to the nearest Maruti Suzuki authorized workshop or a tyre repair shop.

WARNING

Do not affix the speed restriction label to the airbag. Also do not affix it to the warning light indicator or to the speedometer.

- 10) After 10 km (6 mile) running, check the tyre pressure with the pressure gauge of the compressor. If the air pressure indicates more than 220 kPa (2.2 bar), the emergency repair is completed. But, if the air pressure indicates less

than the required air pressure, correct the tyre pressure to the required air pressure. If the tyre pressure has dropped below 130 kPa (1.3 bar), the flat tyre repair kit cannot provide the necessary seal. Do not use the tyre and consult a Maruti Suzuki authorized workshop or a roadside assistance service.

WARNING

Check the tyre pressure and confirm the completion of the emergency repair after 10 km (6 mile) of running.

NOTICE

Have the tyre renewed at the nearest Maruti Suzuki authorized workshop. When reusing the sealed tyre, consult a tyre repair shop.

The wheel can be reused after wiping sealant off completely with cloth in order to prevent rust, but the tyre valve and tyre pressure monitoring system (TPMS) sensor must be renewed.

Dispose of the sealant bottle and the air hose at a Maruti Suzuki authorized workshop or in accordance with your regional codes and practices.

After using the sealant bottle and the air hose, replace it with a new ones from your Maruti Suzuki authorized workshop.

Using compressor to inflate a tyre

- 1) Place the vehicle on level, hard ground. Set the parking brake firmly and shift into "P" (Park) if your vehicle has an automatic transmission, or shift into "R" (Reverse) if your vehicle has a manual transmission.
- 2) Take out the compressor.
- 3) Unscrew the valve cap from the tyre valve.
- 4) Connect the air hose of the compressor to the tyre valve.
- 5) Connect the power plug of the compressor to the accessory socket. For a manual transmission vehicle, shift from "R" (Reverse) into "N" (Neutral). Start the engine. Switch on the compressor. Inflate the tyre to the required air pressure.

NOTICE

Do not operate the compressor for longer than 10 minutes. It can cause overheating of the compressor.

Jump-starting Instructions

⚠ WARNING


- Never attempt to jump-start your vehicle if the lead-acid battery appears to be frozen. Batteries in this condition may explode.
 - When making jump lead connections, check that your hands and the jump leads remain clear from pulleys, belts or fans.
 - Lead-acid batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.
 - If the booster battery you use for jump-starting is installed in another vehicle, check that the two vehicles are not touching each other.
 - If your lead-acid battery discharges repeatedly, for no apparent reason, have your vehicle inspected by a Maruti Suzuki authorized workshop.
 - To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions below.
- If you are in doubt, call for qualified road service.

NOTICE

- Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter. Use jump leads to start a vehicle with a weak or flat battery.
- Never charge the 12-volt battery while the hybrid system is activating. Also, be sure all accessories are turned off.
- For M15D engine model, the vehicle cannot be used to jump start another vehicle.

- 1) Use only a 12-volt lead-acid battery to jump-start your vehicle. Position the good 12-volt lead-acid battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, check that two vehicles do not touch each other. Set the parking brakes fully on both vehicles.
- 2) Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).


K15C model

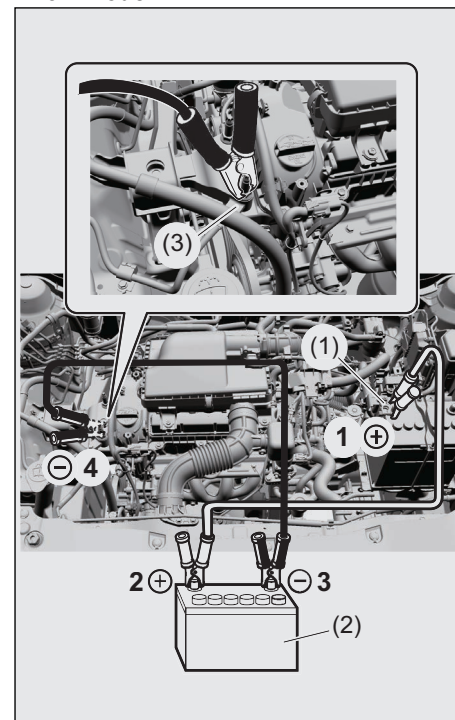

76TS100060

EMERGENCY SERVICE

M15D model

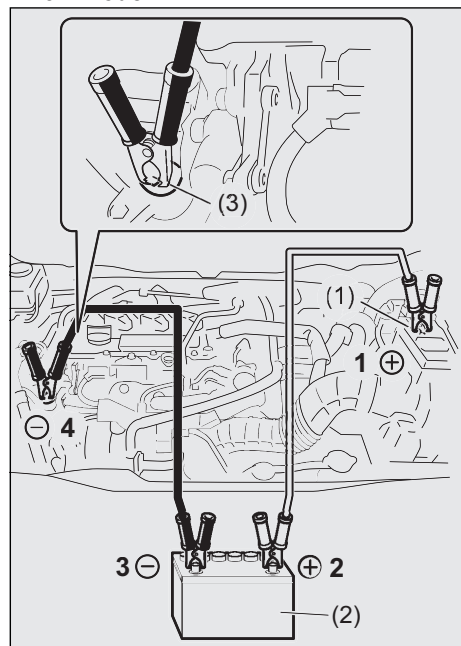


76TS100170

3) Connect jump leads as follows:

1. Connect one end of the first jump lead to the positive (+) terminal of the discharged battery (1).

⚠ WARNING

- Never try to jump-start the vehicle beyond fuse terminal.
- Don't try to remove battery terminal cover (4) connection.
- Connect position of the positive (+) terminal (5) of the discharged battery.

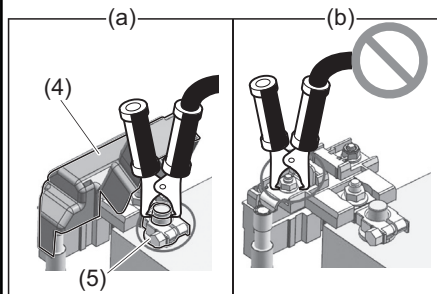

76TS100171

- (a) Correct
(b) Wrong

2. Connect the other end to the positive (+) terminal of the booster battery (2).
3. Connect one end of the second jump lead to the negative (-) terminal of the booster battery (2).

4. Make the final connection to an unpainted, heavy metal part (i.e. engine mount bolt (3)) of engine cylinder head in the vehicle with the discharged battery (1).

⚠ WARNING

Never connect the jump lead directly to the negative (-) terminal of the discharged battery, or an explosion may occur.

⚠ CAUTION

Connect the jump lead to the engine mount bolt securely. If the jump lead disconnects from the engine mount bolt because of vibration at the start of the engine, the jump lead could be caught in the drive belts.

- 4) If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
- 5) Start the engine or the hybrid system of the vehicle with the discharged battery.
- 6) Remove the jump leads in the exact reverse order in which you connected them.

NOTE:

- *For M15D engine model, the hybrid system may not start with the power switch turned off after charging the 12-volt lead-acid battery. However, the hybrid system will operate normally from the second attempt.*
- *For M15D engine model, after the 12-volt battery has discharged or when the terminal has been removed and installed during exchange, the gasoline engine may not stop even if the vehicle is being driven by the hybrid battery (traction battery). If this continues for a few days, consult a Maruti Suzuki authorized workshop.*

Running Out of Battery

In the following cases, the lead-acid battery is running out.

- The starter does not engage when attempting to turn on the engine. Or, the starter rotation is too weak to make the engine or the hybrid system start.
- The headlight illumination is extremely low or the horn volume is low.

If You Get a Flat Tyre While Driving

Firmly hold the steering wheel and carefully apply the brakes to slow down the vehicle and stop it in a safe place.

Engine Trouble: Starter Does not Operate

- 1) Try turning the ignition mode to START with the headlights turned on to determine the lead-acid battery condition. If the headlights go excessively dim or go off, it usually means that either the lead-acid battery is discharged or the battery terminal contact is poor. Recharge the lead-acid battery or correct battery terminal contact as necessary.
- 2) If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by a Maruti Suzuki authorized workshop.

Engine Trouble: Does not Start

Make sure that your vehicle has enough fuel and battery.

If the engine does not start under very cold condition, press the accelerator pedal all the way to the floor and hold it while cranking the engine.

Refer to "Starting / Stopping Engine or Hybrid System" in "OPERATING YOUR VEHICLE" section.

If the engine still does not start have your vehicle inspected at a Maruti Suzuki authorized workshop.

- Do not operate the starter motor for more than 12 seconds.

NOTE:

If the engine refuses to start, the starter motor automatically stops after a certain period of time. After the starter motor has automatically stopped or if there is anything abnormal in the engine starting system, the starter motor runs only while the engine switch is held pressed.

Engine Trouble: Overheating

The engine could overheat temporarily under severe driving conditions. If the high engine coolant temperature warning light comes on as overheating or the engine coolant temperature gauge indicates overheating during driving:

- 1) Turn off the air conditioner.
- 2) Take the vehicle to a safe place and park.
- 3) Run the engine at a normal idle speed for a few minutes until the high engine coolant temperature warning light goes off or the indicator is within the normal, acceptable temperature range between "H" and "C".

WARNING

If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to cool it. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.

If the high engine coolant temperature warning light does not go off or the temperature indication does not come down to within the normal, acceptable range:

- 1) Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.
- 2) Check the coolant level in the reservoir. If it is found to be lower than "LOW" line, check radiator, water pump, radiator hoses and heater hoses for leakage. If leakage that may cause overheating is found, do not run the engine until these problems have been corrected.
- 3) If leakage is not found, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to "Engine coolant" in "INSPECTION AND MAINTENANCE" section.)

NOTE:

If engine overheats and you are not sure what to do, contact a Maruti Suzuki authorized workshop.



79J007

⚠ WARNING

- It is hazardous to remove the radiator cap when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.
- To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan and air-conditioner fan. These electric fans can automatically turn on without warning.

Hybrid System Trouble: Does not Start

Reasons for the hybrid system not starting vary depending on the situation. Check the following and perform the appropriate procedure:

Contact your a Maruti Suzuki authorized workshop if the problem cannot be repaired, or if repair procedures are unknown.

EMERGENCY SERVICE

Hybrid System will not Start even though the Correct Starting Procedure is Being Followed

One of the following may be the cause of the problem:

- The shift lever may not be in P.
- When you press the power switch, you may not press the brake pedal firmly.
- The remote controller may not be functioning properly.
- The remote controller may not be in a detectable location in the car.
- The 12-volt battery may be discharged.
- There may not be sufficient fuel in the vehicle's tank. Refuel the vehicle.
- There may be a malfunction in the immobilizer system.
- There may be a malfunction in the steering lock system.
- The hybrid system may be malfunctioning due to an electrical problem such as remote controller battery depletion or a blown fuse. However, depending on the type of malfunction, an interim measure is available to start the hybrid system.
- The temperature of the hybrid battery (traction battery) may be extremely low (below approximately -15°C [5°F]).

Interior Lights and Headlights are Dim, or the Horn does not Sound or Sounds at a Low Volume

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged.
- The 12-volt battery terminal connections may be loose or corroded.

Interior Lights and Headlights do not Turn on, or the Horn does not Sound

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged.
- One or both of the 12-volt battery terminals may be disconnected.

Hybrid System Trouble: Overheating

The following may indicate that the hybrid system of your vehicle is overheating.

- A loss of hybrid system power is experienced. (For example, the vehicle speed does not increase.)
- "HYBRID SYSTEM HIGH TEMPERATURE HYBRID DRIVE RESTRICTED" is shown on the multi-information display.

Correction Procedures

If "HYBRID SYSTEM HIGH TEMPERATURE HYBRID DRIVE RESTRICTED" is shown on the multi-information display

- 1) Stop the vehicle in a safe place.
- 2) Stop the hybrid system and carefully lift the hood.
- 3) After the hybrid system has cooled down, inspect the hoses and radiator core (radiator) for any leaks.

If a large amount of coolant leaks, immediately contact your Maruti Suzuki authorized workshop.


- 4) The inverter coolant level is satisfactory if it is between the "FUEL" and "LOW" lines on the reservoir.
- 5) Add coolant if necessary. If water was added in an emergency, have the vehicle inspected at your Maruti Suzuki authorized workshop as soon as possible.
- 6) After stopping the hybrid system and waiting for 5 minutes or more, start the hybrid system again and check for the multi-information display.

If the message does not disappear: Stop the hybrid system and contact your Maruti Suzuki authorized workshop.

If the message is not displayed: The hybrid system temperature has dropped and the vehicle may be driven normally.


However, if the message appears again frequently, contact your Maruti Suzuki authorized workshop.

Warning Triangle

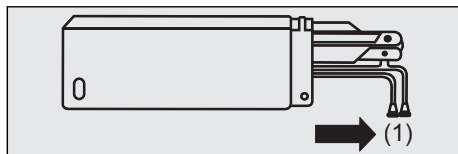


55T100010

In case of vehicle break-down or during emergency stopping, where, your vehicle could become a potential traffic hazard, keep the warning triangle, provided with your vehicle, on the road free from any obstacles behind your vehicle so as to warn the approaching traffic, at an approximate distance of 50-100 m. The reflecting side of the triangle should face the oncoming traffic. Please activate the hazard warning lamps before alighting the vehicle to keep the warning triangle.

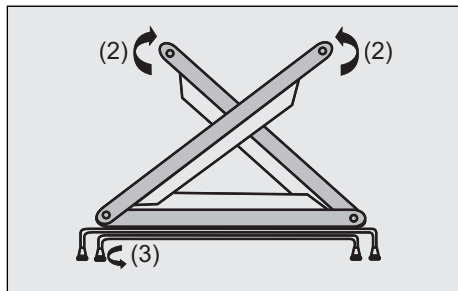

55T100020


- Remove the warning triangle carefully from the cover as shown by arrow (1).
- Open both the reflector arms as shown by arrow (2) and lock the arms with each other with the clip provided in the right arm. Open the bottom stand in counter clock-wise direction as shown by arrow (3). Position the warning triangle behind the vehicle on a plain surface.
- Reverse the removal procedure for keeping inside the cover.

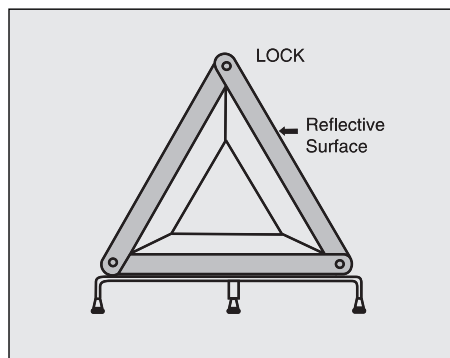

55T100030

APPEARANCE CARE

Corrosion Prevention	11-1
Cleaning Exterior	11-2
Cleaning Interior	11-7

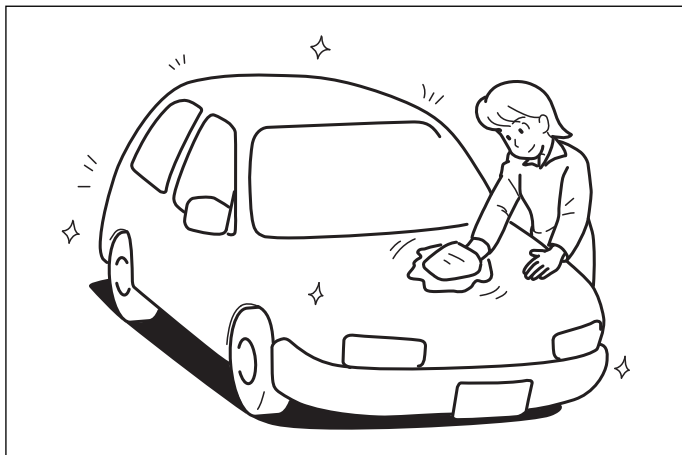

76TM11003

APPEARANCE CARE

Corrosion Prevention

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

Important Information about Corrosion

Common causes of corrosion

- 1) Accumulation of road salt, dirt, moisture or chemicals in hard-to-reach areas of the vehicle underbody or frame.
- 2) Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.
- 3) Any or all of the below mentioned points:
 - Continuous exposure to sunlight.
 - Hard water & sea water coming in contact with vehicle.
 - Foot rubbing (skirting).

Environmental conditions which accelerate corrosion

- 1) Road salt, dust control chemicals, sea breeze or industrial pollution will all accelerate the corrosion of metal.
- 2) High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.

- 3) Moisture in certain areas of a vehicle for an extended period of time may promote corrosion even when other body sections are completely dry.
- 4) High temperatures will cause an accelerated rate of corrosion to parts of the vehicle which are not well-ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

How to Help Prevent Corrosion

Wash your vehicle frequently

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing. Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underside, as clean and dry as possible. If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the year.

For washing instructions, refer to "Cleaning Exterior" section.

Remove foreign material deposits

Foreign materials such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Check that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer's directions when using these special cleaners.

Repair finish damage

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a qualified body shop make the repair.

Keep passenger and luggage compartments clean

Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion. Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used for off-road driving or in wet weather.

Certain cargos such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If they are spilled or leaked, clean and dry the area immediately.

Park your vehicle in a dry, well-ventilated area

Park your vehicle to save it from continuous exposure to direct sunlight. Do not park your vehicle in a damp, poorly-ventilated area. If you often wash your vehicle in the garage and place it there in wet condition, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.

WARNING

Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter and the exhaust pipes. It may catch a fire if the undercoating substance becomes overheated.

Cleaning Exterior

For Keeping the Paintwork Beautiful

To keep your vehicle's beautiful appearance for a long term, daily care is important.

- For parking and storing the vehicle, we recommend garages with good ventilation and locations with roofs.
- The following situations may cause rusting and discoloration of the paint. Wash your vehicle promptly.
 - When driving in coastal areas or on roads sprayed with antifreeze agent (Wash the underside of the vehicle and around the wheel wells especially)
 - When bird droppings, dead insects, sap, iron dust, soot or smoke residue, coal tar, etc., adhere to the paint or when the vehicle gets wet with acid rain
 - When the vehicle is dirty with dust or mud
- Give the vehicle a wax about once a month or whenever the water-repelling ability of the painted surfaces has declined. Follow all instructions on the package of the wax (sold separately).

NOTE:

Do not use wax on plastic parts that are not coated. Waxing these surfaces could result in a whitened or uneven appearance.



80J302

- Chips from flying rocks, scratches, etc. can cause rust. Repair these areas as soon as possible.

NOTICE

- **When repairing scratches on painted surfaces, consult a Maruti Suzuki authorized workshop. Using an inappropriate material for repair could cause damage to the paint.**
- **It is important that your vehicle be kept clean and free from dirt. Failure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.**

APPEARANCE CARE

Washing

WARNING

- Never attempt to wash and wax your vehicle with the engine running or the hybrid system activating.
- When cleaning the underside of the body and fender, where there may be sharp-edged parts, wear gloves and a long-sleeved shirt to protect your hands and arms from being cut.
- After washing your vehicle, carefully test the brakes before driving to check that they have maintained their normal effectiveness.
- Do not splash or spill liquid in the vehicle, such as on the floor, in the hybrid battery (traction battery) air intake vent, and in the luggage compartment. Doing so may cause the hybrid battery, electrical components, etc. to malfunction or catch fire.

NOTICE



84S09240

- When washing or waxing the vehicle, do not lean on the vehicle body or do not push it hard. This might cause it to deform.
(Continued)

NOTICE


(Continued)



55T110010

- When washing or waxing the vehicle, do not put your foot on the door opening. This might cause it to damage.

Washing by hand

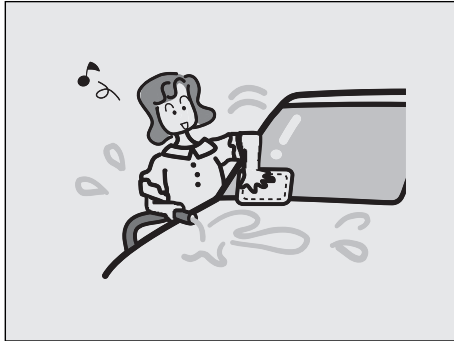

80J303

When washing the vehicle, park it in the place where direct sunlight does not fall on it as much as possible and follow the instructions below:

- 1) Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.


NOTICE

When washing the vehicle:

- Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.
- For K15C engine model, to avoid damaging engine components, do not use pressurized water in the engine compartment.

NOTICE

- For M15D engine model, to avoid damaging the hybrid system components, do not apply water in the engine components.

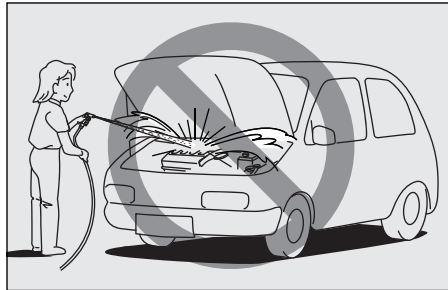

76TM11001

- 2) Rinse the body to loosen the dirt. Remove dirt and mud from the body exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

NOTICE

To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Follow the above procedure.

- 3) Wash the entire exterior with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.

NOTICE

When using a commercial car wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.

- 4) Once the dirt has been completely removed, rinse off the detergent with running water.
- 5) Wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.
- 6) Check carefully for damage to painted surfaces. If there is any damage, touch up the damage following the procedure below:
 1. Clean all damaged spots and allow them to dry.
 2. Stir the paint and touch up the damaged spots lightly using a small brush.
 3. Allow the paint to dry completely.

APPEARANCE CARE

Washing by an automatic car wash

NOTICE

- If you use an automatic car wash, check that your vehicle's body parts, such as antenna and spoilers, cannot be damaged. If you are in doubt, consult the car wash operator for advice.
- Do not wash a car with a roof end spoiler in an automatic car wash. It may get caught in the car wash and damage the spoiler.

Washing by a high-pressure cleaner

NOTICE

- If you use a high-pressure cleaner, keep away the nozzle from your vehicle sufficiently.
- Pointing the nozzle to the surrounding parts of camera can allow water to enter the camera. This may cause a fire, malfunction, dew condensation, etc.
 - For vehicle with 360 view camera or rear view camera, do not point to the nozzle to the camera.
 - Bringing the nozzle to your vehicle too close or pointing the nozzle to the opening of front grill or bumper etc. can cause damage and malfunction of the vehicle body and parts.
 - Pointing the nozzle to door glasses and door frames can allow water to enter the cabin.

Caring for the Windshield

If an oil film, etc. adheres to the windshield and the windshield wipers cannot clean it, use a glass cleaner (sold separately) to clean the windshield by hand.

Caring for Lights

Wash the lens part of light and wipe it off with a soft cloth.

NOTICE

- Do not use the detergent including organic solvent on the lens surface of the light. The lens surface may be cracked. If you use the detergent including organic solvent, rinse it off with ample water.
- Do not wipe the lens surface by wax or a hard brush. This may damage the lens or hasten its deterioration.

Caring for Cameras

Wash the lens part of camera and wipe it off with a soft cloth. If the lens part is very dirty, use a mild detergent.

NOTICE

- Using alcohol, benzine, thinner etc. to wipe the camera may cause discoloration.
When you wipe the camera, do not use alcohol, benzine, thinner etc.
- Hard coating is used for the lens of camera not to be easily scratched. However, if you use the brush for a vehicle, it may be difficult for you to see the image on the 360 view camera.
Be very careful not to scratch the lens.
- The resin cover of the camera may be damaged if an organic solvent adheres to the camera. Do not let organic solvent, body wax, oil film remover, or glass coating agent adhere to the product.
- If the camera is subjected to a sudden temperature change, it may be damaged.
Do not expose the camera to sudden temperature changes such as melting frozen snow with hot water.

Caring for Aluminum Wheels

NOTE:

- Do not use an acidic or alkaline detergent, or a cleaner containing petroleum solvent to wash aluminum wheels. These types of cleaners will cause permanent spots, discoloration and cracks on the finished surface and damage to the center cap.
- Do not use a bristle brush and a soap containing an abrasive material. These will damage the finished surface.

Waxing



60G412

After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.

- Only use waxes and polishes of good quality.
- When using waxes and polishes, observe the precautions specified by the manufacturers.

Cleaning Interior

- Clean out any dirt, sand, etc. using a vacuum cleaner, or wipe off the surfaces using a soft cloth moistened with cold or lukewarm water. If the interior is left dirty, scratches can occur.
- Quickly clean off any liquids such as those from air fresheners or spilled beverages by using tissue paper or a soft cloth. Leaving spilled liquids can cause staining, discoloration or cracking.

WARNING

- Do not spray the interior with water or other liquids. If the navigation equipment, audio components, switches, wiring under the floor, or other electrical parts become wet, there is a risk of fire or malfunction, and the SRS airbag system could fail to function normally. If you pour water or spill a drink in the vehicle, consult a Maruti Suzuki authorized workshop as soon as possible for inspection.

NOTICE

- Do not use chemical products containing the following ingredients. Doing so may cause staining, discoloration, deformation, or a deterioration in strength, etc.
 - Solvents such as benzine, gasoline, thinner, or sticker peeling agents
 - Acidic or alkaline detergents
 - Bleaches or dyes
- Do not use chemical products that include silicone for cleaning the areas around the air conditioner, electronic equipment such as the audio or navigation systems or switches. Contact with silicone may cause them to malfunction.
- Do not leave colored leather goods, furs, vinyl articles, etc. in your vehicle for long periods. Doing so could cause discoloration or deformation of the interior.

NOTE:

To prevent liquid-based air fresheners from spilling, it is recommended to fix their containers in place, or use solid-type air fresheners instead.

Vinyl Upholstery

Prepare a solution of soap or mild detergent dissolved in warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.

Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.

Fabric Upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

Leather Upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap or saddle soap solution, wipe dirt off with a clean damp soft cloth. To remove soap, wipe the areas again with a soft cloth dampened with water. Wipe the areas dry with a soft dry cloth. Repeat this until the dirt or stain is removed, or use a commercial leather cleaner for tougher dirt or stains. If you use a leather cleaner, carefully follow the manufacturer's instructions and precautions. Do not use solvent type cleaners or abrasive cleaners.

NOTE:

- *In order to keep the leather upholstery looking good, it should be cleaned at least twice a year.*
- *If the leather upholstery becomes wet, immediately wipe it dry with a tissue paper or a soft cloth. Water may cause the leather to harden and shrink if it is not wiped off.*
- *When parking on sunny days, select a shady place or use a sunshade. If the leather upholstery is exposed to the direct sunlight for a long time, it may discolor and shrink.*
- *As is common with natural materials, leather is inherently irregular in grain and cowhide has spots in its natural state. These do not affect the performance of the leather in any way.*

Seat Belts

Clean seat belts with mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric of the belts.

Vinyl Floor Mats

Ordinary dirt can be removed from vinyl with water or the mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.

Carpets


Remove the dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.

Instrument Panel and Console

Remove loose dirt with a vacuum cleaner. Gently wipe dirt off with a tightly squeezed damp clean cloth. Repeat this until the dirt is removed.

NOTICE

- **Do not use chemical products that contain silicon to wipe electrical components such as the air conditioning system, audio, navigation system, or other switches. These will cause damage to the components.**
- **Liquids such as liquid aromatics, soft drinks or juice may cause discoloration, wrinkles, and cracking to resin-based parts and textiles. Immediately wipe it dry with tissue paper or a soft cloth.**
- **Do not leave leather products with color, fur or vinyl products, etc. in your vehicle for long periods. It may cause discoloration or deterioration of interior.**

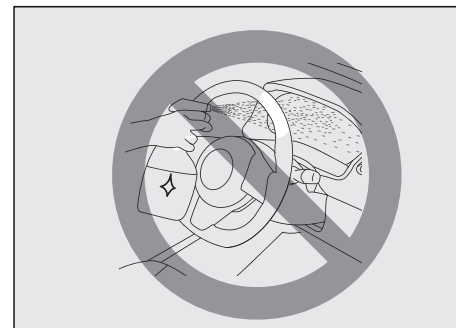

76TM11002

APPEARANCE CARE

Inside of the Tailgate Window

NOTE:

Wipe the window along the antenna wires or heat wires by a soft cloth dampened with water to avoid damaging these wires.


Head-up Display

The surface of the display is coated, so please wipe off the dirt with a soft cloth like an eyeglass wipe.

NOTICE
• Do not use a hard cloth or detergent as it may damage the display or the surface coating. • Do not apply too much force when wiping the display or mirror, as it may damage it.

SPECIFICATIONS

Vehicle Identification	12-1
FASTag (if equipped)	12-2
High Security Registration Plate (HSRP) (if applicable) ..	12-3
Fuel Recommendation	12-4
Specifications	12-6

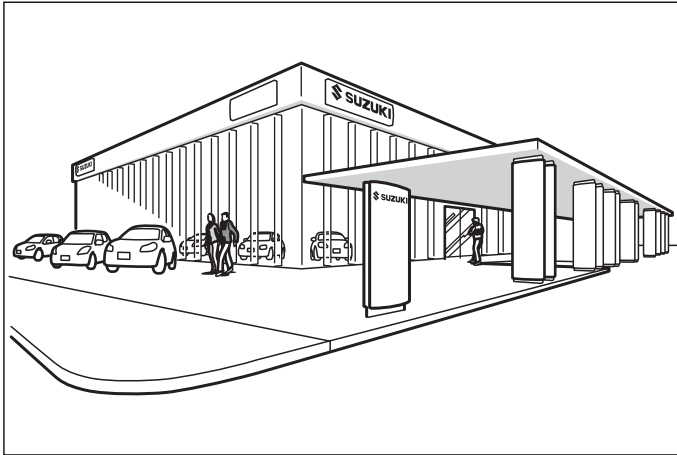


84MM01001


SPECIFICATIONS

Vehicle Identification


Chassis Serial Number

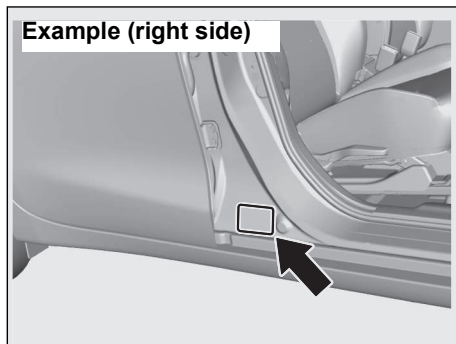

55T120020

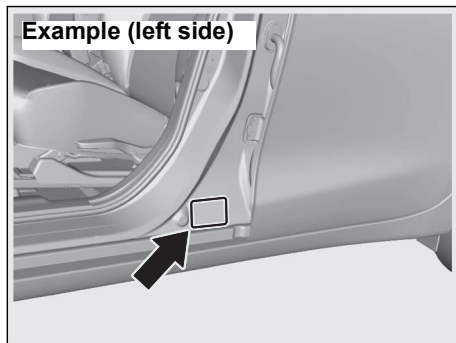

55T120030

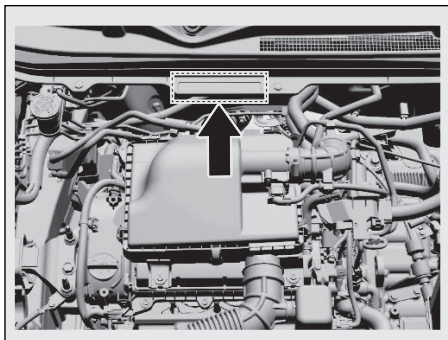


76TS120030

The chassis and/or engine serial numbers are used to register the vehicle. They are also used to assist a Maruti Suzuki authorized workshop when ordering or referring to special service information. Whenever you have occasion to consult a Maruti Suzuki authorized workshop, remember to identify your vehicle with this number. Should you find the number difficult to read, you will also find it on the identification plate.

FASTag (if equipped)


As per Ministry of Road Transport and Highways, the FASTag (1) is mandatory for each vehicle for the purpose of electronic toll collection or any other purpose as may be defined by the Government of India.

In case of any damage to FASTag or replacement of front windscreen, please contact your nearest Maruti Suzuki authorized workshop.

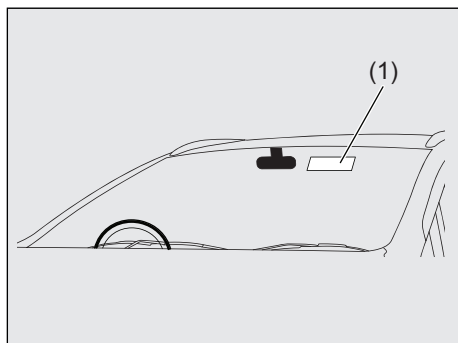

76TM12001

As seen from inside of the vehicle

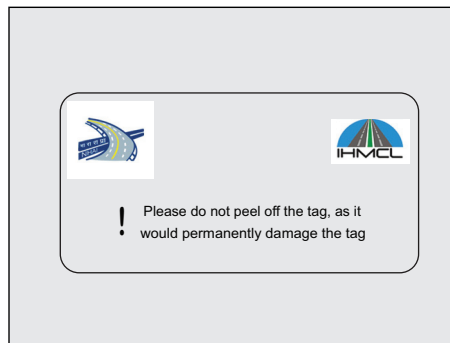

76TM12002

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

As seen from outside of the vehicle



76TM12003

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

NOTE:

- Any attempt to remove the tag from the windscreen will result in permanent damage to the tag.
- Use of chemical cleaners to clean the windscreen area where the tag is mounted can damage the tag.
- Use of any sharp objects on the tag can damage the tag.

SPECIFICATIONS


High Security Registration Plate (HSRP) (if applicable)

As per Ministry of Road Transport and Highways, every new vehicle must have HSRP.

HSRP contains;

- Front and rear HSRP, which will be fitted with 2 snap-locks each on number plate area.
- Third license plate on front windshield.


Third License Plate

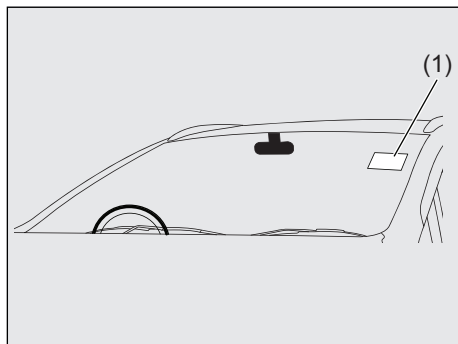

76TM12004

(1) Third license plate

Third license plate - As seen from outside of the vehicle

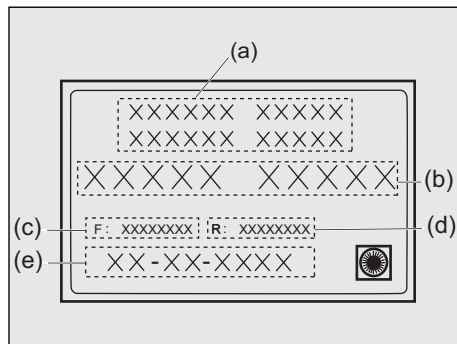

76TM12005

- (a) HSRP issuing authority name
- (b) Vehicle registration number
- (c) Unique laser number - Front plate
- (d) Unique laser number - Rear plate
- (e) Date of 1st registration (in DD-MM-YYYY format)
- (f) Green strips (BS6 vehicle)

NOTE:


The picture shown is for indicative purpose only. Internal structure of actual label mounted on vehicle may be different.

NOTE:

- Any attempt to remove the third license plate from the windshield will result in permanent damage to the label.

- Use of chemical cleaners to clean the windscreen area where the label is mounted can damage the same.
- Use of any sharp objects on the label can damage the label.
- In the event of any replacement of the third license plate, may please contact the approved authority.

Third license plate - As seen from inside of the vehicle

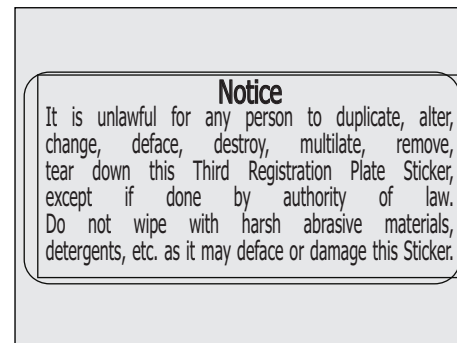

76TM12006

NOTE:


The picture shown is for indicative purpose only.

NOTE:

Color of third license plate (back) is as per HSRP regulation as defined by Ministry of Road Transport and highways.


Engine Serial Number

K15C Engine

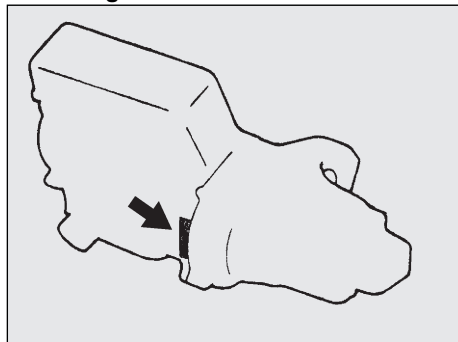

60G128

M15D Engine

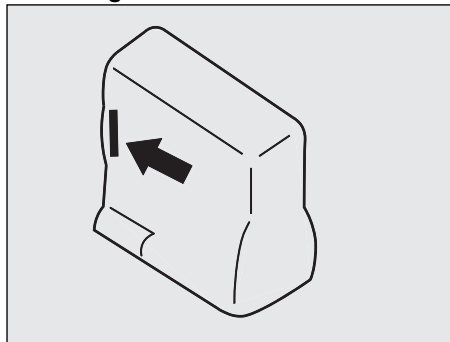


76TS120050

The engine serial number is stamped on the cylinder block as shown in the illustration.

Fuel Recommendation

Petrol Engine

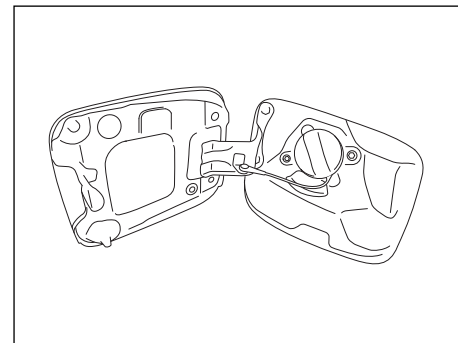

76TS120061

K15C engine model

To avoid damaging catalytic converter, you must use unleaded gasoline with an octan number (RON) of 91 or higher.

M15D engine model

To avoid damaging catalytic converter, you must use unleaded gasoline with an octan number (RON) of 95 or higher.

SPECIFICATIONS

Gasoline/Ethanol blends

Blends of unleaded gasoline and ethanol, also known as gasohol, are commercially available in the country and can vary with location. Gasoline Ethanol blend up to E20 can be used as fuel for this vehicle.

Gasoline containing MTBE

Unleaded gasoline containing MTBE (methyl tertiary butyl ether) may be used in your vehicle if the MTBE content is not greater than 15%. This oxygenated fuel does not contain alcohol.



CAUTION

Use of spurious, low quality, adulterated fuel can cause damage to the engine and engine auxiliaries, affect functioning of engine and degrade engine performance including but not limited to engine seizure.

NOTICE

- The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative non-automatic system.
- Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

Specifications

NOTE:

Specifications are subject to change without notice.

M/T: Manual transmission

A/T: Automatic transmission

e-CVT: e-CVT transmission

ITEM: Dimensions		UNIT: mm
Overall length		4345
Overall width		1795
Overall height		1645
Wheelbase		2600
Track	Front	1530
	Rear	1535

SPECIFICATIONS

ITEM: Mass (weight)			UNIT: kg
Curb mass (weight)	K15C M/T 2WD		1140—1185
	K15C M/T 4WD		1270—1285
	K15C A/T		1180—1215
	M15D e-CVT		1250—1285
Gross vehicle mass (weight) rating	K15C M/T 2WD		1645
	K15C M/T 4WD		1745
	K15C A/T		1675
	M15D e-CVT		1745
Permissible maximum Axle Weight	Front	K15C M/T 2WD	845
		K15C M/T 4WD	900
		K15C A/T	875
		M15D e-CVT	905
	Rear	K15C M/T 2WD	840
		K15C M/T 4WD	875
		K15C A/T	835
		M15D e-CVT	875

SPECIFICATIONS

ITEM: Engine		
Type	K15C	M15D
Number of cylinders	4	3
Bore	74.0 mm	80.5 mm
Stroke	85.0 mm	97.6 mm
Piston displacement	1462cm ³ (1462 cc)	1490 cm ³ (1490 cc)
Compression ratio	12.0 : 1	14.0: 1

SPECIFICATIONS

ITEM: Electrical			
Engine type		K15C	M15D
Standard spark plug		NGK ILZKR6Q11	DENSO FC16HR-Q8
Lead-acid battery	Petrol	N55 20HR 45Ah CCA 480A (JIS) ^{*1}	34B19L 20HR 33Ah CCA 240A (JIS)
	CNG	34B19L 20HR 33Ah CCA 240A (JIS)	–
Lithium-ion battery		Maintenance free ^{*2}	Maintenance free ^{*2}
Fuses		See “INSPECTION AND MAINTENANCE” section.	

*1: Your vehicle is equipped with a lead-acid battery for exclusive use of the ENG A-STOP system. When replacing the lead-acid battery, make sure to select the specified type for ENG A-STOP system. consult a Maruti Suzuki authorized workshop for replacing the lead-acid battery.

*2: If the lithium-ion battery or high voltage battery is completely discharged, the battery cannot be recharged. When replacing or disposing the lithium-ion battery or high voltage battery, consult a Maruti Suzuki authorized workshop.

ITEM: Lights			WATTAGE	BULB No.
Headlight	Low / High beam	Halogen type	12V 55W	HIR2
		LED type ^{*1}	LED	—
Position light ^{*1}			LED	—
Front turn signal light ^{*1}			LED	—
Daytime running light ^{*1}			LED	—
Tail/brake light ^{*1}			LED	—
Rear turn signal light			12V 21W	PY21W
Rear reversing light			12V 21W	P21W
High mount stop light ^{*1}			LED	—
License plate light			12V 5W	W5W
Side turn signal light ^{*1}			LED	—

If you need to replace the following bulbs indicated in the above table, consult a Maruti Suzuki authorized workshop.

^{*1}: Since the lights are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any light is defective.

SPECIFICATIONS

ITEM: Lights		WATTAGE	BULB No.
Interior light	Front (without overhead console)	12V 5W	W5W
	Front (with overhead console)* ¹	LED	–
	Vanity mirror light (if equipped)	12V 3W	–
	Luggage compartment (if equipped)	12V 5W	W5W
	Instrument panel assistant side ornament light* ¹ (if equipped)	LED	–
	Courtesy light (if equipped)	12V 5W	W5W
	Glove box light (if equipped)	12V 1.4 W	T5
	Front footwell light* ¹ (if equipped)	LED	–
	Rear roof light	12V 5W	W5W
		LED*1	–
	Front / Rear door ambient light* ¹ (if equipped)	LED	–

If you need to replace the following bulbs indicated in the above table, consult a Maruti Suzuki authorized workshop.

*1: Since the lights are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any light is defective.

ITEM: Wheels and tyres		
Tyre size, front and rear	215/60R17 96H ^{*1}	
Rim size	with steel wheels	17X6 1/2J
	with aluminum wheels	17X6 1/2J
Tyre pressures	For the specified tyre pressure, see the tyre information label located on the driver's door lock pillar.	
Recommended snow chain	Radial thickness: 10 mm, axial thickness: 10 mm	
Recommended snow tyre	215/60R17 ^{*2}	

*1: If you cannot prepare tyres with the specified load index rate and speed symbol, prepare tyres with higher load index rate and speed symbol.

*2: If you prepare snow tyres;

- Check that they are tyres of the same size, structure and load capacity as the originally installed tyres.
- Mount the snow tyres on all four wheels.
- Understand that the maximum permissible speed of snow tyres is generally less than the originally installed tyres.

SPECIFICATIONS

The capacities listed below are approximate guide. The actual amount when replacing may differ.

ITEM: Recommended fuel / lubricants and capacities (approx.)				
Fuel		See “FUEL RECOMMENDATION” section.		45 L
Engine oil	K15C Engine		Classification: API SN or SP ILSAC GF-6 Viscosity: SAE 0W-16	3.3 L (replacement with oil filter)
	M15D Engine		Classification: API SN, SN PLUS or SP ILSAC GF-6B Viscosity: SAE 0W-16	3.4 L (replacement with oil filter)
Engine coolant	K15C M/T		(Genuine) “SUPER LONG LIFE COOLANT (PINK)”	4.2 L (including reservoir tank)
	K15C A/T			4.4 L (including reservoir tank)
	M15D e-CVT			4.8 L (including reservoir tank)
Inverter coolant	M15D		(Genuine) “SUPER LONG LIFE COOLANT (PINK)”	1.9 L
Manual transmission oil			“MARUTI GENUINE GEAR OIL 75W ”	2.6 L
Automatic transmission oil		A/T	“SUZUKI AT OIL AW-1”	5.8 L
		e-CVT	AUTO FLUID WS	2.6 L
Transfer oil	4WD	A/T	“SUZUKI GEAR OIL 75W-85”	0.85 L
Rear differential oil	4WD		“SUZUKI GEAR OIL 75W-85”	0.73 L
Brake fluid / Clutch fluid			“Brake Fluid DOT3”	–
Windshield washer fluid			–	2.5 L

SERVICE NETWORK (AS ON 31.01.2026)

- MARUTI SUZUKI AUTHORISED DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS
- MARUTI SUZUKI NEXA DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS
- MARUTI SERVICE MASTER (MSM) : SERVICE, WARRANTY & SPARE PARTS
- MARUTI SERVICE ZONE (MSZ) : SERVICE, WARRANTY & SPARE PARTS
- MARUTI AUTHORISED SERVICE STATIONS (MASSs) : 'A' CATEGORY MASSs (**MARKED)
Free & paid Service, Major repairs & Accidental repairs
- 'B' CATEGORY MASSs (* MARKED)
Free & paid Service & Major repairs
- 'C' CATEGORY MASSs (##MARKED)
Free & paid Service & Minor repairs
- 'D' CATEGORY MASSs (#MARKED)
Free Service & Minor repairs

NOTE:

Certain MASSs are not authorised to undertake Warranty jobs. Customers are requested to approach only Maruti Suzuki Authorised Dealer Workshop / Maruti Suzuki Nexa Dealer Workshop / Maruti Service Master / Maruti Service Zone for Warranty jobs.

The charges and services may vary depending upon service network and location.

For latest Service Network details kindly visit www.marutisuzuki.com or contact our regional office / area office as mentioned below.

REGIONAL OFFICE	AREA COVERED
REGIONAL OFFICE (NORTH-I) MARUTI SUZUKI INDIA LIMITED 2nd FLOOR, 157 DIVINE , RAJPUR ROAD, DEHRADUN, UTTARAKHAND - 248001 PH:- 0135-2738549	UTTARAKHAND AND PART OF U.P.
REGIONAL OFFICE (NORTH-II) MARUTI SUZUKI INDIA LIMITED SCO: 39-40, SECTOR 8C, MADHYA MARG, CHANDIGARH - 160009 PH. NO.- 0172-2780056	PUNJAB, CHANDIGARH, PANCHKULA, ZIRAKPUR, MOHALI, JAMMU AND KASHMIR & LADAKH
REGIONAL OFFICE (NORTH-III) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, SUMMIT, PLOT NO. TCG 3/3, VIBHUTI KHAND, GOMTI NAGAR – LUCKNOW - 226010	PART OF U.P.
REGIONAL OFFICE (NORTH-IV) MARUTI SUZUKI INDIA LIMITED S.C.O. 81, FIRST FLOOR, SECTOR 5, PANCHKULA (HARYANA)-134109 PH : (0172) 2590056, 2580056	PART OF HARYANA AND HIMACHAL PRADESH
REGIONAL OFFICE (EAST-I) MARUTI SUZUKI INDIA LIMITED PLOT NO 11/15, ACTION AREA 11D, NEW TOWN KOLKATA-700156	WEST BENGAL, SIKKIM, ANDAMAN & NICOBAR
REGIONAL OFFICE (EAST-II) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, ROHINI, OPP. HOTEL APSARA, 56, CIRCULAR ROAD, LALPUR RANCHI - 834001, JHARKHAND PH.: - 0651-2563931/61	BIHAR, JHARKHAND
REGIONAL OFFICE (EAST-III) MARUTI SUZUKI INDIA LIMITED 5A, 5TH FLOOR, PEACE ENCLAVE 724, ULUBARI, G.S.ROAD, GUWAHATI-781007 (ASSAM) TELE: 0361-2734308/10/11/12	ARUNACHAL PRADESH, ASSAM, MANIPUR, MEGHALYA, MIZORAM, NAGALAND, TRIPURA

SERVICE NETWORK (AS ON 31.01.2026)

REGIONAL OFFICE (WEST-I) MARUTI SUZUKI INDIA LIMITED Plot No-GEN 25 + 25 B/2,TTC INDUSTRIAL AREA,PAWANE VILLAGE,THANE BELAPUR ROAD,NAVI MUMBAI- 400705 PH NO-022 45042300	PART OF MAHARASHTRA AND GOA
REGIONAL OFFICE (WEST-II) MARUTI SUZUKI INDIA LIMITED SACRED WORLD, 7TH FLOOR, NORTH BLOCK, UNIT NUMBER 708-715; JAGTAP CHOWK, WANAWADI, PUNE – 411 040 (MAHARASHTRA) PH. (020) 26856037 / 38 / 39	PART OF MAHARASHTRA
REGIONAL OFFICE (WEST-III) MARUTI SUZUKI INDIA LIMITED 211-213, 2ND FLOOR, ISCON MALL, ABOVE STAR INDIA BAZAR, SATELLITE, AHMEDABAD - 380015 PH NO - 079 – 40036660	GUJARAT, DADRA & NAGAR HAVELI, DAMAN AND DIU
REGIONAL OFFICE (SOUTH-I) MARUTI SUZUKI INDIA LIMITED 10th Floor, Block A, Global Infocity Park, No.40, Anna Nedunchalai, Kandanchavadi, Perungudi, Chennai, Tamil Nadu – 600096 PH. - 044 - 28233050 – 53	TAMILNADU AND PONDICHERY
REGIONAL OFFICE (SOUTH-II) MARUTI SUZUKI INDIA LIMITED #204, 2ND FLOOR, EMBASSY CLASSIC BUILDING,VITTAL MALLYA ROAD,BANGALORE- 560001, KARNATAKA. PH: (080) 41120018	KARNATAKA
REGIONAL OFFICE (SOUTH-III) MARUTI SUZUKI INDIA LIMITED 2ND FLOOR, TUTUS TOWERS, 32/1787 NH47- BYE PASS, PADIVATTOM, COCHIN- 682024	KERALA
REGIONAL OFFICE (SOUTH EAST-I) MARUTI SUZUKI INDIA LIMITED 101-102 FIRST FLOOR MAHAVIR CHAMBERS, LIBERTY SQUARE STANZA, HIMAYATH NAGAR, HYDERABAD-500029, TELANGANA CONTACT NO: 040-667299999	ANDHRA PRADESH, TELANGANA
REGIONAL OFFICE (SOUTH EAST-II) MARUTI SUZUKI INDIA LIMITED UTKAL SIGNATURE, UNIT NO. 605 & 606 (6TH FLOOR) NH-5, PAHAL, CUTTACK-BHUBANESWAR ROAD, BHUBANESWAR-752101, ODISHA PH. 0674-2914129, 0674-2914139 & 0674-2914229	ODISHA AND CHHATTISGARH
REGIONAL OFFICE (CENTRAL-I & II) MARUTI SUZUKI INDIA LIMITED Nelson Mandela Marg,Vasant Kunj II, Vasant Kunj, New Delhi, Delhi - 110070	DELHI
REGIONAL OFFICE (CENTRAL-III) MARUTI SUZUKI INDIA LIMITED 7TH POOJA TOWER, 3 GOPALPURA BYEPASS, TONK ROAD JAIPUR (RAJASTHAN)- 302018, CONTACT NO.: 0141-2550888	RAJASTHAN
REGIONAL OFFICE (CENTRAL-IV) MARUTI SUZUKI INDIA LIMITED 3RD FLOOR, COMMERCE HOUSE, 7 RACE COURSE ROAD INDORE (M.P) PIN CODE: 452001 CONTACT NO.: 07314069481/852/385.	MADHYA PRADESH

SERVICE NETWORK (AS ON 31.01.2026)

DETAILS OF AREA OFFICES	
Area Office Location	Area Office Address
Agra	Maruti Suzuki India Limited, 7th Floor, B-15/8, Shri Vrindavan Tower, Sanjay Place, Agra-282001 Ph:-0562-4052646/47
Bhopal	Maruti Suzuki India Limited, 522, 5th Floor Corporate Zone, Ashima Mall, Hoshangabad Road, Bhopal (M.P) Pin Code: 462 026 Contact : 0755 6051555
Calicut	Maruti Suzuki India Limited, Ground Floor, Aarpees Arcade, YMCA Cross Road, Opp. Indusind Bank, Kozhikode, Kerala -PIN 673001 Phone:- 0495-2723151
Coimbatore	Maruti Suzuki India Limited, Srivari Gokul Towers, First floor, (East wing), No.108/3, Race course, Coimbatore - 641018 Ph.- 0422-2221091
Hubli	Maruti Suzuki India Limited, Shiva Avenue, 2nd Floor, Gokul Road, Hubli - 580030, Ph: 0836-4259447
Jammu	Maruti Suzuki India Limited, Hall no: 315, A2,3rd Floor, South Block, Bahu Plaza, Jammu-180012 M: 9622066444/9622524343
Ludhiana	Maruti Suzuki India Limited, SCO No. 16/17, 4Th Floor, Fortune Chambers, Feroze Gandhi Market, Ludhiana-141001, Ph: 0161-4649764
Madurai	Maruti Suzuki India Limited, 3rd floor, ADR towers, Kalavasal, Theni Bye pass road, Madurai-625016 Ph. - 0452-4200203
Mangalore	Maruti Suzuki India Limited, F - 4,5,6, 1st Floor, Classic Gateway, Mahaveer Circle Pumpwell Mangalore – 575002 Ph. 0824 - 4112111

SERVICE NETWORK (AS ON 31.01.2026)

DETAILS OF AREA OFFICES	
Area Office Location	Area Office Address
Nagpur	Maruti Suzuki India Limited, Plot No.244, 1st Floor, Narayani House, Hill Road, Dharampeth Extension, Nagpur - 440010 (Maharashtra) Ph. (0712) 2225808
Nashik	Maruti Suzuki India Limited, Plot No.202, Rushiraj Towers, Jehan Circle, Gangapur Road, Nashik - 422 005 (Maharashtra) Ph. (0253) 6698551
Patna	Maruti Suzuki India Limited, 307-308, Vasundhara Metro Mall, Rajapur Pul, East Boring Canal Road, Patna - 800001, Bihar Phone - 0612-2559145
Raipur	Maruti Suzuki India Limited, 629-630, Magneto Offizo,Magneto The Mall, Labhandi, Raipur, Chhattisgarh, Pin - 492001 Ph.- 0771-4039643
Siliguri	Maruti Suzuki India Limited, Unit 401, 4th Floor, Quantum Siliguri, Parivahan Nagar, Matigara Siliguri - 734010 West Bengal
Surat	Maruti Suzuki India Limited, 304, Shivalik Western, Above TGB Restaurant, L.P. Savani Road, Adajan Surat - 395009
Trivandrum	Maruti Suzuki India Limited, 8th Floor, KEK Tower, Opp. Police Head Quarters, Vazhuthacadu, Trivandrum - 695010, Phone:- 0471-2322366
Udaipur	Maruti Suzuki India Limited, 302 & 303, 3rd Floor. Manglam's Fun Square, Durga Nursery Road. Udaipur, (Rajasthan) 313001
Vijayawada	Maruti Suzuki India Limited, Vaishinavi Complex, 4th Floor, Unit 2, Opposite Executive Club, Vijayawada, -530002,
Visakhapatnam	Maruti Suzuki India Limited, Door No. 10-50-58/1, 3rd Floor, Waltair Main Road, Ramnagar, Above westside store, RK Estates, Visakhapatnam-530002, Andhra Pradesh Contact No: 0891 2745299

ANDHRA PRADESH

ANANTAPUR

1. JAYALAKSHMI AUTOMOTIVES PVT LTD
(1BNB-1B-01), SY. NO. 239 - 2CIA, KAKALAPALLI,
ANANTAPUR

CHITTOOR

2. BHARGAVI AUTOMOBILES PVT. LTD.
(1CNA-1C-01), #30/205-1-1-2, DR. JYOTHI REDDY
NAGAR, CK PALLI, CHITTOR, PIN-517001

CUDDAPAH

3. ADARSHA AUTO WORLD PVT LTD
(1DNA-1D-01), #30/205-1-1-2, REVENUE WARD
31,DUVUNI KA, #30/205-1-1-2, REVENUE WARD
31,DUVUNI KA

GUDIVADA

4. VARUN MOTORS PVT LTD (CLNA-CL-01),
SY.NO.75/2 & 75/3,BANTUMILI
ROAD,GUDIVADA,,AP

GUNTUR

5. JAYALAKSHMI AUTOMOTIVES PVT LTD
(G5NA-G5-01), D-NO:199/2, OPP.AUTONAGAR,
NH 16, VJA - GNT SERVICE ROAD, GUNTUR,
ANDHRA PRADESH - 522001
PH :9959844644.
6. JAYALAKSHMI AUTOMOTIVES PVT LTD
(G5NA-G5-02), SURVEY NO 110 , AMRAVATHI
ROAD , INNER RING ROAD , GUNTUR

KAKINADA

7. VARUN MOTORS PVT LTD (W7NA-W7-01),
BHASKARA GARDENS JAGANDHAPURAM
,KAKINADA - 533016

KURNOOL

8. MSA MOTORS (C2NA-C2-01), PLOT NO. 1, 1A, 2,
2A, WARD NO. 96, NH 44, AUTO NAGAR,
KURNOOL, ANDHRA PRADESH 518003 - 518003

NANDYAL

9. MSA MOTORS (CKBN-CKB-01), SURVEY NO.
144, PYKI, UDUMALAPURAM(V), NEAR
VENKATESWARAPURAM, NANDYAL

NARASARAOPET

10. JAYALAKSHMI AUTOMOTIVES PVT LTD
(JTNA-JT-01), NH 167A, SRINIVASA NAGAR,
NARASARAOPETA, ANDHRA PRADESH 522801

NARSIPATNAM

11. JAYABHERI AUTOMOTIVES (WTNA-WT-01), SY
NO 133/1, PEDA BODDEPALLE,
NARSIPATNAM,ANDHRA PRADESH - 531116

NELLORE

12. BHARGAVI AUTOMOBILES PVT LTD
(A8NA-A8-01), SURVEY NO 245B,
CHEMUDUGUNTA VILLAGE, NH-16, ADJACENT
TO SRIDS KALYANA MANDAPAM, NELLORE,
ANDHRA PRADESH - 524002
PH :8886682222.

ONGOLE

13. JAYALAKSHMI AUTOMOTIVES PVT LTD
(8YNA-8Y-01), SURVEY NO:194/2, BESIDE NH 5,
MUKTHINUTHALAPADU, ONGOLE, ANDHRA
PRADESH - 523225 - 523225
PH :9492133433.

PENDURTHI

14. VARUN MOTORS PVT LTD (BAPN-BAP-01),
Y.NO.204/2 D.NO-6-36/1,OPP AYYAPA SWAMY
TEMPLE,PENDURTHI,VISHAKHAPATNAM.AP

RAJAHMUNDY

15. SB MOTOR CORP (CSNA-C5-01), D.NO-84-1-12,
PADMAVATI NAGAR, BESIDE ONGC BASE
COMPLEX, NH-45, RAJAHMUNDY,
ANDRAPRADESH-533106. - 533016
PH :9248727888.

SRIKAKULAM

16. VARUN MOTORS PVT LTD (W6NA-W6-01),
PEDDAPADU ROAD, ARASAVALLI POST,
SRIKAKULAM DISTRICT, ANDHRA PRADESH -
532401
PH :9885317344.
17. VARUN MOTORS PVT LTD (W6NA-W6-S1) - 0

TIRUPATI

18. BHARGAVI AUTOMOBILES PVT LTD
(N9NA-N9-01), D NO-9-91/1, BANGLORE BY
PASS ROAD, DHAMINEDU VILLAGE, TIRUPATI
RURAL, ANDHRA PRADESH - 517503
19. VISHNU CARS PVT LTD (N9NB-N9-01), 150,
TIRUPATI BYPASS ROAD, NEAR SOUTHERN
SPICE HOTEL, TIRUPATI

VIJAYAWADA

20. VARUN MOTORS PVT LTD (26NA-26-01), OPP
TO PRIYA PICKLES, BANDAR ROAD, PORANKI,
VIJAYAWADA, ANDRAPRADESH-521137. -
521137
PH :6309855655.
21. VARUN MOTORS PVT LTD (26NA-26-02), DOOR
NO-1-153,REVENUE WARD NO.1,BLOCK
NO3,VIDHYADARAPURAM,VIJAYAWADA - 0
22. SANTOSH AUTOMOTORS PRIVATE LIMITED
(26NC-26-01), TCR COLONY, KCP COLONY,
PORANKI, VIJAYAWADA, ANDHRA PRADESH
521137 - 521137

VISHAKHAPATNAM

23. VARUN MOTORS PVT LTD (46NA-46-S1) - 0

24. VARUN MOTORS PVT LTD (46NA-46-01), DOOR
NO 38-22-27, SURVEY NO 39, KAPARADA
VILLAGE, INDUSTRIAL ESTATE,
VISHAKHAPATNAM - 533016
25. VARUN MOTORS PVT LTD (46NA-46-02),
NO.88/B, D BLOCK, VARUN AUTO PARK,
SRINAGAR, OLD GAJUWAKA,
VISA KHAPATNAM-530026. A.P - 530026

VIZAG

26. JAYABHERI AUTOMOTIVES PVT LTD
(46NB-46-01), D.NO:8-238; SY NO:7/1A,
GOPALAPATNAM; VISA KHAPATNAM (AP) -
530027

VIZIANAGARAM

27. JAYABHERI AUTOMOTIVES PVT LTD
(N8NA-N8-01), OPPOSITE RELIANCE MART,
BALAJI JUNCTION, 100 FEET RING ROAD ,
VIZIANAGARAM - 535002

VSKP (ADAVIVARAM)

28. VARUN MOTORS PVT LTD (46NA-46-3), PLOT
NO 47, BANGARUTHALLI NAGAR, DARA PALEM,
ADAVIVARAM VISA KHAPATNAM. - 530028 -
530028

ASSAM

AIZWAL

29. GIG MOTORS (91NA-91-01), ITI WORLD BANK
ROAD, AIZAWL, MIZORAM - 796005

BAIHATA CHAIRILI

30. PALLAVI MOTORS PVT LTD (BNLN-BNL-01), DAG
NO. 187, PATTNA NO.138,
MAUZA-BAR-BANGSHAR, VILLAGE KSHUDRA
PALAHA, BAIHATA CHARIALI, ASSAM - 781381

BARPETA TOWN

31. PODDAR CAR WORLD PVT LTD (SQTN-SQT-01),
DEWRIKUCHI,HOWLY BARPETA ROAD,
BIJOYNAGAR

32. PODDAR CAR WORLD PVT LTD (09NA-IA-03),
DAG NO. 1093/1598 PATTNA NO 709, BARTEZPUR
PO KUKURMARA PS PALASHBARI , DIST
KAMRUP

BISWANATH CHARALI

33. R D MOTORS (RAMLAL DURGADUTT MOTORS
PVT LTD) (BXIN-BXI-01), BRAHMAPUTRA
CHAPORI, NEAR POWER GRID OFFICE,

BAGHMARI, BISWANATH CHARALI, ASSAM
784176

BONGAIGAON

34. BHARATI MOTORS PVT LTD (7NNA-7N-01),
CHAPAGURI RD, NEAR POST OFFICE, NORTH
BONGAIGAON, AMGURI, BONGAIGAON, ASSAM
783380 - 783380
PH :7002350887.

CHANGSARI

35. PODDAR CAR WORLD PVT LTD (09NA-TED-04),
DAG NO 640 K P PATTNA NO. 464 VILLAGE -
CHANGSARI MOUZA - SILA SENDURI KAMRUP
RURAL

DIBRUGARH

36. VISHAL CAR WORLD PVT LTD (C1NA-C1-01),
MOHPUALIMORA GOHAN GAON, A.T ROAD,
DIBRUGARH, ASSAM - 786008
PH :8009000008.

GOLAGHAT

37. R D MOTORS (RAMLAL DURGADUTT MOTORS
PVT LTD) (J3NA-J3-01), DAG NO-308,PATTA
NO-53, VILLAGE RANGAJAN BAGAN GAON,
MARANGI, MOUZA, MARANGI REVENUE
CIRCLE, GOLAGHAT - 785702

GUWAHATI

38. BIMAL AUTO AGENCY (09NB-09-01),
DREAMLAND APPARTMENT,NAHRANI PATH,
DISPUR LAST GATE, GUWAHATI - 781006
(ASSAM)
PH :9864074525.
39. PALLAVI MOTORS PVT LTD (09NC-09-01),
NARENGI, KALITAKUCHI, SATGAON,
GUWAHATI, ASSAM - 781026
40. PODDAR CAR WORLD PVT LTD (09NA-09-01),
AT ROAD, KAMAKHYA GATE , GUWHATI
,KAMRUP-781009 - 781009
PH :8085957586.

HOJAI

41. RD MOTORS (ARAN-ARA-01), DAG
NO-665,PATTA NO-467,VILLAGE DIMAPUR,
DISTRICT HOJAI ASSAM- 782435

JORHAT

42. R D MOTORS (RAMLAL DURGADUTT MOTORS
PVT LTD) (G9NB-G9-01), M/S R D MOTORS PVT
LTD. ,DHAPKATA, NEAR TINALI, JORHAT
-785006 - 785006
PH :7002099547.

MANGALDOI

43. PODDAR CAR WORLD PVT LTD (09NA-YW-02),
WARD NO 2 NH - 15, MANGALDOI TOWN,
DARRANG - ASSAM

NAGAON

44. R D MOTORS (RAMLAL DURGADUTT MOTORS
PVT LTD) (7JNA-7J-S1) - 0

NALBARI

45. BIMAL AUTO AGENCY (92NA-92-01), BIMAL
AUTO AGENCY NALBARI HAJO ROAD
AMAYAPUR, ASSAM - 781334 - 781334

NORTH LAKHIMPUR

46. SAIKIA (7PNA-7P-01), NH - 15, CHARAIMORIA,
NORTH LAKHIMPUR, ASSAM 787032

SIBSAGAR

47. JAINCO AUTOTECH PRIVATE LIMITED (L9NA-L9-01), DAG NO. 531 OF P.P. NO. 4, OF VILLAGE CHANGMAI GAON, MOUZA BETBARI, SIVASAGAR REVENUE CIRCLE, SIVASAGAR

SILCHAR

48. JAIN UDYOG (J2NA-J2-01), R.S. PATTA NO.149, DAG NO.579, MOUZA RONGPUR, SILCHAR, ASSAM - 788009 PH :9436121557.

SONARI

49. JAINCO AUTOTECH PRIVATE LIMITED (BFCN-BFC-01), NAMRUP SAFEKHATI ROAD, WARD NO-6, SONARI - 785690 - 785690

TEZPUR

50. R D MOTORS (RAMLAL DURGADUTT MOTORS PVT LTD) (T1NA-T1-01), SOLAGAN VILLAGE , GOROIMARI , SONABEEL, BEFORE MAA KALYANI PETROL PUMP, TEZPUR -784105 PH :9836872710.

TINSUKIA

51. VISHAL CAR WORLD PVT LTD (J4NA-J4-01), NEXA SHOWROOM (BESIDE VISHAL BIKER'S WORLD),A.T. ROAD, LAIPULI,TINSUKIA, ASSAM -786183 PH :9864211022.

BIHAR

BEGUSARAI

52. GS MOTORS PVT LTD (1UNA-UU-01), NALA ROAD, BEGUSARAI, PIN-851101, BIHAR - 851101

BHAGALPUR

53. SEEMANCHAL MOTORS (G8NA-G8-S1)

DARBHANGA

54. RAJKRISHNA MOTORS LLP (1VNA-1V-S1) - 0
55. RAJKRISHNA (1VNA-1V-01), MADHPUR, KHATA NO. 28, KHASRA NO 107, 108 NH 57 – DARBHANGA (BIHAR)

GAYA

56. KARLO AUTOMOBILES PRIVATE LIMITED (Y6NA-Y6-01), GAYA DOBHI MAIN ROAD, NEAR DOMUHAN, BODHGAYA, PIN -824231, BIHAR.

PATNA

57. ALANKAR AUTO SALES & SERVICE PVT LTD (15NA-15-01), OPP RUPASPUR THANA, BAILEY ROAD NEAR GOLA ROAD, PATNA - 800002 PH :9262899356
58. REESHAV AUTOMOBILES PVT LTD (15NB-15-01), MUKDUMPUR,DIGHA,90 NO GATE, PATNA - 800012 PH :7369944132.

59. SHREE GOPAL AUTO PVT LTD (15NC-15-01), BIKHACHAK ANISHABAD NEW BYPASS ROAD, OPPOSITE SITA RAM COMMUNITY HALL, PATNA, BIHAR - 800002 - 800002 PH :9262853333
60. REESHAV AUTOMOBILES PVT LTD (15NB-15-02), MAULANA AZAD NAGAR, F.C.I MORE PHULWARISHARIF PATNA – BIHAR

PURNEA

61. SEEMANCHAL MOTORS PVT LTD (6VNA-6V-01), DAMKA CHOWK,KISHANGANJ ROAD, NH-31, GUALBBAGH,PURNEA,BIHAR - 854326 PH :9334710055.

SIWAN

62. SHREE GOPAL AUTO PVT LTD (05NA-05-01), KHATA NO 410, SURVEY NO 464 JASAUJI PAKULI CHHAPRA SIWAN ROAD NH 85, SIWAN BIHAR 841241 - 841241

SUPAUL

63. GS MOTORS PVT LTD (SKUN-SKU-01), KHATA NO. 216,218, KHESA NO. 500-504, PIPRA ROAD, SUPAUL

CHANDIGARH

64. AUTOPACE NETWORK PVT LTD (07NA-07-01), PLOT NO. 37, INDUSTRIAL AREA – PHASE 1, CHANDIGARH - 160002 PH :7087119796
65. AUTOVOGUE PVT LTD (07NC-07-S1) - 0
66. AUTOVOGUE PVT LTD (07NC-07-02), PLOT NO - 29/4 INDUSTRIAL AREA PHASE -2, CHANDIGARH - 160002 PH :8725099835
67. NAVDESH AUTOS LLP (07NE-07-01), PLOT NO 182/11, INDUSTRIAL AREA PHASE 1, CHANDIGARH - 160002 PH :8827057534.

CHHATTISGARH

AMBIKAPUR

68. MAHAMAYA AUTOCARS PRIVATE LIMITED (AENA-AE-01), AJAB NAGAR,MAHATHMA GANDHI ROAD,AMBIKAPUR - 497001 PH :9516609632.

BALODABAZAAR

69. SKY AUTOMOBILES (GJNA-GJ-01), AMBEDKAR CHOWK, RAIPUR RD, BALODA BAZAR, CHHATTISGARH 493332 - 493332

BEMETARA

70. CHOUHAN AUTOMOBILES LLP (CBCN-CBC-01), NEAR AK MULTISPECIALTY HOSPITAL, KRISHNA VIHAR, RAIPUR ROAD, BEMETRA, BEMETRA DISTRICT, CHHATTISGARH

BHILAI

71. SPARSH AUTOMOBILES PVT LTD (83NB-83-S1) - 0
BILASPUR-CG

72. SATYA AUTO PVT LTD (C3NB-C3-01), PLOT NO 53, SECTOR C, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHHATTISGARH - 495001 PH :6372803057.

DURG

73. CHOUHAN AUTOMOBILES LLP (7WNA-7W-01), KH NO 215/2, PLOT NO 6 BESIDES D MART DURG BY PASS PIN - 490020 - 490020

JAGDALPUR

74. SKY AUTOMOBILES (ECNA-EC-01), NEAR BR COLD STORAGE, GEEDAM ROAD, JAGDALPUR. (3S)

JANJGIR

75. SATYA AUTOMOBILES (9NNA-9N-01), NEAR KHOKSA RLY CROSSING, CHAMPA RD, JANJGIR, CHHATTISGARH - 496668

KAWARDHA

76. CHOUHAN AUTOMOBILES LLP (DINA-DI-01), KHASRA NO. 37/10, VILLAGE CHHIRAHA CHOWK,KAWARDHA, DISTRICT KABEERDHA

KORBA

77. SATYA AUTO PVT LTD (U7NB-U7-01), SHED NO 10, PART OF KHASRA NO 885, INDUSTRIAL AREA, RAJGAMAR ROAD, KORBA (C.G)

MUNGELI

78. SATYA AUTO PVT LTD (C3NB-BLE-02), BILASPUR ROAD , GIDHA , CHHATTISGARH - 495334

RAIGARH

79. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTOCORP PRIVATE LIMITED) (Y7NA-Y7-01), BESIDE MSQUARE NEXA SHOWROOM,KOTRA ROAD BYPASS,RAIGARH,CHATTISGARH,496001(C OPY OF LAYOUT ATTACHED AS ANNEXURE)

RAIPUR

80. SKY AUTOMOBILES (50NB-50-01), NEXA MAGNETO, LABHANDHI , G. E. ROAD, RAIPUR SPARSH AUTOMOBILES PVT LTD (50NA-50-01), NEAR TCI GODOWN, NH-6, CHANDANDIH, TATIBANDH, RAIPUR, CHATTISGARH - 492029 PH :9926626662
82. VISHWABHARTI AUTOMOBILES PVT LTD (50NC-50-01), SADOU RD, DALDAL SEONI, RAIPUR,CHHATTISGARH - 492001
83. VISHWABHARTI AUTOMOBILES PVT LTD (50NC-50-S1) - 492010
84. VISHWABHARTI AUTOMOBILES PVT LTD (50NC-50-02), MAIN ROAD DEOPURI, RAIPUR-DHAMTARI ROAD, 492001

RAJNANDGAON

85. SPARSH AUTOMOBILES (LQNA-LQ-01), MUMBAI - KOLKATA HWY, ATAL VIHAR COLONY, RAJNANDGAON, CHHATTISGARH - 491441

DELHI

DELHI

86. AAA VEHICLEADES PVT LTD (08NW-08-01), BLOCK C, NAJAFGARH ROAD INDUSTRIAL AREA, NEW DELHI, DELHI 110015 - 110015 PH :8750611111
87. COMPETENT AUTOMOBILES COMPANY LIMITED (08NF-08-01), PLOT NO-34,RAJASTHAN UDYOG NAGAR, GT AKRNL ROAD ,DELHI - 110033 PH :9932049425.
88. JAGMOHAN AUTOMOTIVES PVT LTD (08NX-08-01), C133-136(PART, PHASE I, INDUSTRIAL AREA, MANGOLPURI S BLOCK, NEW DELHI, DELHI 110083 - 110083 PH :9812259000.
89. MAGIC AUTO PVT LTD (A UNIT OF MAGIC LEASING & FINANCE PVT LTD) (08NA-08-01), CISF GATE NO 1, D-21, CORPORATE PARK, NEAR DWARKA SEC-8 METRO STATION, NEW DELHI - 110075 PH :9873052000.
90. MAGIC AUTO PVT LTD (A UNIT OF MAGIC LEASING & FINANCE PVT LTD) (08NA-08-S1) - 110075
91. PLATINUM MOTOCORP LLP (08NQ-08-01), PLOT NO-H4,BLOCK-B1,MOHAN CO-OPERATIVE INDEX,MATHURA ROAD,PIN-110044 - 110044
92. RANA MOTORS PVT LTD (08NE-08-01), B-242, OKHLA INDUSTRIAL AREA PHASE 1, OKHLA, NEW DELHI
93. SHREYASH AUTOMOTIVES PVT LTD (08ND-08-S1), B-91, PHASE 1, MAYAPURI , DELHI - 110064
94. SHREYASH AUTOMOTIVES PVT LTD (08NA-08-01), B-91, MAYAPURI PHASE-1, NEW DELHI
95. TR SAWHNEY AUTOMOBILES PVT LTD (08NN-08-01), C-46, OKHLA INDUSTRIAL AREA PHASE 2, OKHLA NEW DELHI PH :9953350008.

GOA

(TISWADI) GOA

96. SAI POINT (34NC-34-01), SR NO 183/13, MORGADO VADDO ROAD, NEAR INDIAN OIL PETROL PUMP, GOA VELHA, TISWADI, GOA - 403108

BICHOLIM

97. SAI SERVICE (BHNN-BHN-01), H. NO. 192, SURVEY NO. 103/1, ASHWAMED HEIGHTS, CARAPUR SARVANA VILLAGE, BICHOLIM, GOA - 403505 - 403505

GOA

98. CHOWGULE INDUSTRIES PVT LTD (34NB-34-S1) - 0
99. CHOWGULE INDUSTRIES PVT LTD (34NB-34-01), SY. NO. 267/1, NEXT TO ARLEM RTO, ARLEM, RAIA, SALCETE - (GOA) - 403720. - 403720
PH :9850966950.
100. SAI POINT CARS PVT LTD (34NC-34-S1) - 0

MAPUSA

101. SAI SERVICE PVT LTD (34NA-34-02), PLOT NO 41, TIVIM INDUSTRIAL ESTATE, KARASWADA, MAPUSA BARDEZ GOA
102. CHOWGULE INDUSTRIES PVT LTD (34NB-34-02), PLOT NO 23, TIVIM INDUSTRIAL ESTATE, KARASWADA, MAPUSA GOA 403517. - 403517

PANAJI

103. SAI SERVICE PVT LTD (34NA-34-01), EMPRESSA INDUSTRIAL CHODANKAR, SURVEY NO. 114/2, SALVADOR DO MUNDO, PORVORIM, BARADEX, GOA - 403521

GUJARAT

AHMEDABAD

104. PEGASUS (A UNIT OF VISUAL MOTORS PVT LTD) (01NG-01-01), PLOT NO 9, OPP RABARI COLONY BRIS STOP, CTM, NAROL - NARODA HIGHWAY, NH-8, AHMEDABAD, GUJARAT. - 380026
PH :9909203000.
105. POPULAR WHEELERS (INDIA) PVT LTD (01NC-01-01), T P 20, F P 78, OPPOSITE SUN SQUARE COMPLEX OFF. C G ROAD, NEAR HL COLLEGE, NAVRANGPURA GULBAI TEKRA, AHMEDABAD, GUJARAT - 380009
PH :9925203344.
106. STARLINE CARS PVT LTD (01NE-01-01), PLOT NO 236, GIDC, NARODA, AHMEDABAD, GUJARAT. 382 330 - 382330
PH :743603235.
107. PEGASUS (A UNIT OF VISUAL MOTORS PVT LTD) (01NG-01-02), SURVEY NO. 407/1, F.P NO. 308/1, VIP ROAD, SHELA, SOUTH BOPAL, AHMEDABAD
108. KATARIA AUTOMOBILES PRIVATE LIMITED (01NF-01-01), PLOT NO. 14-23, T.P SCHEME NO. 1, BOPAL, AHMEDABAD-380058. - 380058
109. KIRAN MOTORS LIMITED (01NB-01-01), RAJTHAL BANQUET, -SHILAJ ROAD,

ANAND

110. AMAR CARS PVT LTD (F7NA-F7-01), SURVEY NO 158/3, PLOT NO 144, NEAR GANESH CROSSING, ANAND SOJITRA ROAD, ANAND, GUJARAT - 388001
PH :9925407666.

ANKLESHWAR

111. RAVIRATNA MOTORS PVT LTD (P9NA-P9-01), S. NO. 449 & 455, PLOT NO. 4 & 5, MAHAVIR TURNING POINT, ANKLESHWAR, GUJARAT - 393001 - 393001

BHARUCH

112. RAVIRATNA MOTORS PVT LTD (F8NA-F8-01), SURVEY NO 185/3, NH8, ZARDESHWAR, BHARUCH, GUJARAT. - 392001
PH :9727700823.

BHAVNAGAR

113. KIRAN MOTORS LIMITED (C9NB-C9-01), RAMDEV SOCIETY, CHITRA GIDC, BHAVNAGAR - GUJARAT

BHUJ

114. K D MOTORS (P5NA-P5-01), 33, UMA PARK, BEHIND MARUTI SUZUKI SHOWROOM, MIRZAPAR HIGHWAY, BHUJ - 370040
PH :9879898799.

BOTAD

115. KATARIA AUTOMOBILES PRIVATE LIMITED (APNA-AP-01), PLOT NO. 30/2, PALIYAD ROAD, BOTAD, GJ

DABHOI

116. KATARIA AUTOMOBILES PRIVATE LIMITED (UUNA-UU-01), SATYAM COMPLEX, NEAR VEGA BRIDGE, VEGA CHOKDI, DABHOI

DAHOD

117. R B CARS PVT LTD (2CNA-PL-02), PLOT NO. 142, BAPUNAGAR, DAHOD-INDOR HIGHWAY ROAD, DAHOD.

DEHGAM

118. NANDA AUTOMOBILES PVT LTD (NRNA-NR-01), SURVEY NO. 4536/2, BESIDES SHREENATH SOCIETY, OPP. SABARMATI GAS STATION, DEHGAM, GUJARAT-382305.

GANDHIDHAM

119. B M AUTOMOLINK (77NA-77-01), SURVEY NO 129/26, GALPADAR - ANJAR HIGHWAY, AIRPORT ROAD, GANDHIDHAM, KUTCH, GUJARAT - 370201
PH :7211120014.

GANDHINAGAR

120. NANDA AUTOMOBILES PVT LTD (2BNA-2B-01), BLOCK NO 403, NR SANGATH GATEWAY, OPP RAISAN PETROL PUMP, KUDASAN, GANDHINAGAR, GUJARAT. - 382421
PH :9687641974.

GODHRA

121. R B CARS PVT LTD (2CNA-2C-01), SURVEY NO. 38/2, PAIKE 1 PAIKE 2, LUNAWADA ROAD, OPP. GIDC, GODHRA - 389001 - 389001
PH :9925051444.

HALOL

122. RB CARS (BKCNC-BKC-01), SURVEY NO. 1684, PLOT NO124/5-7, HALOL BYPASS, DISTRICT PANCHMAHAL, HALOL, GUJARAT - 389350 - 389350

HALVAD

123. DREAM VEHICLES PVT LTD (GXNA-GX-01), NEAR JANTA FOOD MALL, HALAVAD-DHRANGADHRA HIGHWAY, HALVAD-36300. DISTRICT MORBI - 363330

HIMATNAGAR

124. KIRAN MOTORS LIMITED (P6NA-P6-01), SURVEY NO. 114, OPP. SABAR DAIRY, BORIYA KHURD, HIMMATNAGAR, DIST. SABARKANTHA (GUJARAT).

JUNAGADH

125. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (K8NA-K8-01), GIDC 2, RAJKOT HIGHWAY, JUNAGARH - 362037
PH :9909022619.

KADI

126. STARLINE CARS PVT LTD (URNA-UR-01), CHHALTRAL KADI HIGHWAY, IRANA ROAD, MONJE BUDASAN, TALUKA KADI, DIST MEHSANA - 382715

MANDVI

127. KIRAN MOTORS LIMITED (UYNA-UY-01), SR. NO. 62, MANDVI ZANKHVAV ROAD, AT & PO RUPAN, TALUKA MANDVI, DISTT. SURAT.

MEHSANA

128. STARLINE CARS PVT LTD (D1NA-D1-01), REVENUE SURVEY NO. 342, PLOT NO.1, 4, 5 AND 6 TO 12, VILLAGE NAGALPUR, DISTRICT MEHSANA, GUJARAT - 384002

MORBI

129. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (X5NA-X5-01), RAJKOT MORBI HIGHWAY, VILLAGE SANALA, MORBI - GUJARAT (363641) - 363641

NADIAD

130. KIRAN MOTORS LIMITED (P7NA-P7-01), SURVEY NO. PAKI 1253/1, 2, 3, 4 NEAR BHAVAN SCHOOL, BEHIND MC DOWNLOAD, NADIAD, UTTARASANDA ROAD, NADIAD (GUJARAT).

NAVASARI

131. KATARIA AUTOMOBILES PRIVATE LIMITED (Q7NA-Q7-01), BLOCK NO 1064 AT VILLAGE GANESH SISODARA, TALAND DISTRICT NAVSARI

PALANPUR

132. TANU MOTORS PVT LTD (Q8NA-Q8-01), NR. MARUTI SUZUKI COMMERCIAL SHOWROOM, PALANPUR - DEESA HIGHWAY, PALANPUR-385001 - 385001

PATAN

133. STARLINE CARS PVT LTD (Q9NA-Q9-01), ADJACENT ARENA SET UP, PATAN UNIHA ROAD, PATAN (GUJARAT) - 382465 - 382465
PH :9909043244.

RAJKOT

134. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (55NB-55-01), PLOT NO. 110, 111, 127 & 128, KOTHARIYA, NEAR PERFECT HOUSE, GONDAL ROAD, RAJKOT - 360004
PH :9512035501.

RAJPIPLA

135. RAVIRATNA MOTORS PVT LTD (9XNA-9X-01), S.NO. 779, RAJPIPLA VADODARA HIGHWAY, RAJPIPLA, DISTRICT NARMADA

SURAT

136. AMAR CARS PVT LTD (40ND-40-01), SURVEY NO 139,BLOCK NO-218"VA,OPPOSITE TO AWADH ARENA MALL,V.I.P ROAD ,BHARTHAMA,SURAT,GUJRAT - 395007
PH :9871389795.
137. KATARIA AUTOMOBILES PRIVATE LIMITED (40NA-40-01), OPP. KAMNATH MAHADEV TEMPLE, NEAR SOHAM CIRCLE, ALTHAN CANAL ROAD, ALTHAN, SURAT. GUJARAT - 395017 - 395017
138. KIRAN MOTORS LIMITED (40NB-40-01), BLOCK NO 443, FP NO 26 MOJE PALGAM, ADAJAN, SURAT, GUJARAT -395009 - 395009
PH :7020569426.
139. PEGASUS (A UNIT OF VISUAL MOTORS PVT LTD) (40NE-40-01), TP NO.6,FP NO.380,CS NO.1207,DHAMANWALA COMPOUND,NEAR GAYWALA CHAMBERS, CANAL ROAD, KHATODARA UDHANA

SURENDRANAGAR

140. DREAM VEHICLES PVT LTD (LCNA-LC-01), PLOT NO. 302, GIDC AREA, WADHWAN CITY, SURENDRANAGAR, GUJARAT. - 363035
PH :8511104644.

VADODARA

141. AMAR CARS PVT LTD (22NB-22-01), SHED NO. 56, SARDAR INDUSTRIAL ESTATE, AJWA ROAD, VADODARA - 390019 - 390019
142. KATARIA AUTOMOBILES PRIVATE LIMITED (22NA-22-01), WARD NO 11 CIRCLE SAINATH ROAD, HARINAGAR-VASNA ROAD VADODARA - 390007
PH :9824701590.

VAPI

143. KATARIA AUTOMOBILES PRIVATE LIMITED
(97NA-97-01), NEAR CROMA OUTLET, RATHOD
CHAMBERS, DAMAN ROAD, CHALA VAPI -
396191
PH :9714799985.

HARYANA

AMBALA

144. EAKANSH WHEELS (18NA-18-01),
AMBALA-CHANDIGARH HIGHWAY ADJOINING
AAJ SAMAJ VILLAGE-SADDOPUR, AMBALA
PH :8395903111.

ASSANDH

145. KARNAL MOTORS PVT LTD (CSNA-CS-01),
KAITHAL BYE-PASS, BEHIND CAR CREW
CENTER, ASSANDH

ATELI

146. PLATINUM MOTOCORP LLP (9QNA-9Q-02),
ANARKAUR HOSPITAL, WARD NO.-11, KANINA
ROAD, ATELI (HR)

BHIWANI

147. PASCO AUTOMOBILES (X3NA-X3-01), NEAR
HUNNAMAL PIAYU, ROHTAK ROAD, BHIWANI-
HARYANA-127021 - 127021
PH :9289192582.

CHARKHI DADRI

148. JAGMOHAN MOTORS PVT LTD (A6NA-CT-02),
PLOT NUMBER 1142, KHATAUNI NUMBER 1206,
CHARKHI DADRI, HARYANA

FARIDABAD

149. BVA AUTO PRIVATE LIMITED (58NC-58-01),
2J/53-54, NH-2, NIT FARIDABAD, HARYANA
PH :9911259288.

150. PASCO AUTOMOBILES (58NB-58-S1) - 0

151. PASCO AUTOMOBILES (58NB-58-01), 14/4,
MATHURA ROAD, FARIDABAD, HARYANA -
121003
PH :9999790229.

152. VIPUL MOTORS PVT LTD (58NA-58-01), SUB
DIVISION NO.-33, INDUSTRIAL PLOT NO. -34,
N.I.T. FARIDABAD HARYANA - 121001
PH :8562019252.

FARIDABBAD

153. AUTONATION (58NC-58-E1) - 121006

FARRUKHNAGAR

154. PLATINUM MOTOCORP LLP (KENA-KE-01),
KHEWAT NO. 4/21/8 & 21/6 PTAUDI ROAD,
FARRUKHNAGAR, HARYANA

GOHANA

155. JAGMOHAN AUTOMOTIVES PVT LTD
(CUNA-CU-01), KILLA NO 36/16/2-25, KHEWAT
NO 35/30 BAROTA VILLAGE SONIPAT ROAD,
GOHANA, SONIPAT, 131301

GURGAON

156. PASCO AUTOMOBILES (95NA-95-01), SEC 17-18
DIVIDING ROAD, GURGAON- HARYANA, 122015
- 122015

157. PREM MOTORS PVT LTD (95ND-95-01), PLOT
NO. 5, IDC, SECTOR-16, GURGAON, HARYANA -
122001
PH :1292565666.

158. TR SAWHNEY AUTOMOBILES PVT LTD
(95NB-95-01), CRPF CAMP ROAD, VILLAGE
ULLAWAS, NR. PIONEER PARK SECTOR-62,
GURGAON, HARYANA - 122001
PH :1274254441.

159. PLATINUM MOTOCORP LLP (2LNA-95-02),
KHEWAT NO 406, KHATONI NO 411, ALMORA
CHOWK, SPR RD, SEC 75 A GURGAON - 122012

HISAR

160. SARAOGI AUTOMOBILES PRIVATE LIMITED
(76NB-76-01), PLOT NO -180, SECTOR 27-28,
SATROD INDUSTRIAL AREA, HISAR - 125001

JHAJJAR

161. COMPETENT AUTOMOBILES COMPANY
LIMITED (08NA-08-01), PLOT NO - 309,
OFFICER COLONY, BADLI ROAD, NEAR ANAJ
MANDI, JHAJJAR, HARYANA

JIND

162. EAKANSH MOTORS PVT LTD (2KNA-2K-01),
KHEWAT NO. - 155, KHASRA NO. - 142,
MURRABA NO. - 210 OPP. HP LPG BOTTLING
PLANT, ROHTAK-JIND ROAD, JIND. PIN - 126102.
- 126102

KAITHAL

163. EAKANSH MOTORS PVT LTD (U8NA-U8-01),
NH-65, OPP RKM FARM, AMBALA ROAD,
KAITHAL - 136027

164. EAKANSH MOTORS PVT LTD (U8NA-U8-02),
KHEWAT NO -458, KHATONI - 563, KITTAAS -
20/87K 01M ADJOINING NEXA SHOWROOM,
AMBALA HISAR ROAD, KAITHAL - 136027
PH :8813038777.

KARNAL

165. KARNAL MOTORS PVT LTD (89NA-89-01),
118-119 KM MILESTONE, G.T. ROAD, KARNAL,
HARYANA - 132001

KHARKODA

166. JAGMOHAN AUTOMOTIVES PVT LTD
(BUNA-BU-01), KHEWAT NO 885, KHATA NO
1151-53, KILA NO 153/16/2/24-11, SERVICE
ROAD, KHARKHODA BYPASS, KHARKHODA
SONIPAT.

KOSLI

167. DINCO 4 WHEELS LLP (AUTO VIBES)
(CANN-CAN-01), KHEWAT NO. - 8578 900, RECT.
NO-75/2/2, KOSLI, DIST.-REWARI (HARYANA).

KURUKSHETRA

168. KARNAL MOTORS PVT LTD (U6NA-U6-01),
155-200 MILESTONE GT ROAD KURUKSHETRA -
136038

MANESAR

169. PLATINUM MOTOCORP LLP (2LNA-2L-S1) - 0

NARAINGARH

170. EAKANSH WHEELS (CVNA-CV-01), KHEWAT
NUMBER 118, W. NO. 5, NAHAN ROAD,
NARAINGARH

NARNAUL

171. PLATINUM MOTOCORP LLP (9QNA-9Q-01),
KAILASH NAGAR, REWARI ROAD, NARNAUL,
HARYANA - 123001

NARWANA

172. EAKANSH MOTORS PVT LTD (CWNA-CW-01),
KHEWAT & KHATA NO 441/626, OPPOSITE
MAHINDRA SHOWROOM, HISSAR UKLANA
ROAD, NARWANA, HARYANA.

NUH

173. PASCO AUTOMOBILES (7LNA-7L-01), KHATAUNI
NO. 550, KILA NO. 14/1, SADDIK NAGAR, ALWAR
ROAD, NUH (HARYANA).

PALWAL

174. AUTONATION (A UNIT OF TAYAL INDIA
MOTORS PVT LTD) (EENA-EE-01), KILA NO.-15/2
& 16/1, 57 MILESTONE, NEAR ECHS HOSPITAL,
MATHURA ROAD, PALWAL

PANIPAT

175. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES
PVT LTD) (D3NB-D3-01), NANGAL KHERI, NEAR
BBMP POWER HOUSE, OPP. SEC-29, PANIPAT,
HARYANA - 132103
PH :9812615000.

PATAUDI

176. PLATINUM MOTOCORP LLP (BYNB-BY-01), 422/2
MITTAL & SONS, HAILYMANDI, WARD NO. 4
KULANA ROAD, PATAUDI

REWARI

177. DINCO 4 WHEELS LLP (AUTO VIBES)
(U1NA-U1-01), OPP. TULARAM STADIUM, DELHI
ROAD, REWARI - 123401

ROHTAK

178. JAGMOHAN MOTORS PVT LTD (A6NA-A6-01),
NORTHERN BYEPASS, SUKHPURA CHOWK,
JIND ROAD, ROHTAK, HARYANA
PH :8754045446.

SIRSA

179. SHAKTI MOTORS PVT LTD (E4NA-E4-01), OPP.
DELHI PUBLIC SCHOOL, NH-09, HISSAR ROAD,
SIRSA - 125055

SONEPAT

180. JAGMOHAN AUTOMOTIVES PVT LTD
(J5NB-J5-01), SONIPAT MURTHAL ROAD,
OPPOSITE ASR CNG PUMP, SONIPAT - 131001
YAMUNANAGAR

181. PANDIT AUTOMOBILES PVT LTD (D2NA-D2-S1) -
0

HIMACHAL PRADESH

BADDI

182. GOYAL MOTORS PVT LTD (CIFN-CIF-01),
KHASRA NO. 968/800, OPP. HOTEL APEX,
BHUD, BADDI, DISTRICT SOLAN, HIMACHAL
PRADESH - 173205

BILASPUR-HP

183. COMPETENT AUTOMOBILES COMPANY
LIMITED (6YNA-6Y-01), KHASRA NO. 259/76 &
261/77 KHATONI : 18, VILLAGE BEHAL PO
BAMTA TEHSIL SADAR

CHAMBA

184. PATHANKOT VEHICLELEADS PVT LTD
(JFFA-JF-01), KHASRA NO. 780/370/2, GHOTI,
PO- SAROL, TEH AND DISTT- CHAMBA,
HIMACHAL PRADESH

HAMIRPUR

185. COMPETENT AUTOMOBILES COMPANY
LIMITED (W9NA-W9-01), KHEWAT 13 MIN,
KHATUANI 13 MIN, KHASRA NO. - 492,493,
MOHAL CHATTER MOUZA, UGIALTA TEH, DIST.
HAMIRPUR.

NAGROTA

186. KANGRA VEHICLELEADS (A UNIT OF
PATHANKOT VEHICLELEADS PVT LTD)
(D9NA-D9-01), VILL. HATWAS, PATHANKOT -
MANDI HIGHWAY, NAGROTA BAGWAN DISTT.
KANGRA - 176047
PH :7018145653.

PALAMPUR

187. KANGRA VEHICLELEADS (2TNA-2T-01), VPO
BHATTU SAMULA, SUB. TEHSIL SULAH
(PALAMPUR), DISTT. - KANGRA, HIMACHAL
PRADESH - 176064 - 176064

PAONTA SAHIB

188. GOYAL MOTORS PVT LTD (8GNA-8G-01),
SHAMSHERPUR, NH-72, PAONTA SAHIB,
HIMACHAL PRADESH.

RAMPUR (HP)

189. GOYAL MOTORS PVT LTD (CEZN-CEZ-01),
VILLAGE NIRSU, PO DUTT NAGAR, NEAR NEW
RELANCE PETROL PUMP, RAMPUR BUSHAHR,
HP - 172001

ROHRU

190. GOYAL MOTORS PVT LTD (JZNA-JZ-01),
VILLAGE MEHENDLI, ROHRU - SHIMLA ROAD,
ROHRU, HIMACHAL PRADESH - 171207

SHIMLA

191. MODERN AUTOMOBILES (A9NA-A9-S1) - 0
192. GOYAL MOTORS PVT LTD (A9NB-A9-01),
RANJEET NAGAR , BHATTAKUFER , NEAR
APPLE MARKET , SHIMLA - 171010

SOLAN

193. GOYAL MOTORS PVT LTD (7DNA-7D-S1) - 0
194. GOYAL MOTORS PVT LTD (7DNA-7D-01),
DEONGHAT , SOLAN, HIMACHAL PRADESH

UNA

195. COMPETENT AUTOMOBILES CO LTD
(ODNA-QD-01), VILLAGE LAL SINGHI (OPPOSITE
PRAKASH HONDA), NH 503, UNA, HIMACHAL
PRADESH.

JAMMU AND KASHMIR**AKHNOOR**

196. JAMMU MOTORS PVT LTD (2XNA-2X-01),
KHASRA NO 680 MIN/52 KHEWAT NO 5/34
KHATA NO 90/203 MIN/204 MIN, BANGTI
DASKAL, AKHNOOR, JAMMU

BARAMULLA

197. JAMKASH VEHICLEADES (KASHMIR) PVT LTD
(8CNA-8C-01), KHUSHAL PORA, CHANAD,
SANGRAMA, BARAMULLA, PIN-193202, JAMMU
& KASHMIR - 193202

JAMMU

198. JAMKASH VEHICLEADES PVT LTD (33NB-33-01),
NH-1A BYE PASS OPPOSITE CHANNI HIMMAT,
JAMMU (J&K)
199. JAMMU MOTORS PVT LTD (33ND-33-01),
KHASRA NO. 421, TOPE SHERKHANIA,
AKHNOOR ROAD, OPPOSITE BEST PRICE,
JAMMU, JAMMU & KASHMIR - 180016

KATHUA

200. JAMMU MOTORS PVT LTD (3BNA-3B-01),
KHASRA NO 406/213/73, KHATA NO 1, KHEWAT
NO 1, NATIONAL HIGHWAY, KALIBARI CHOWK,
JAMMU AND KASHMIR

RAJOURI

201. JAMKASH VEHICLEADES PVT LTD (A1NA-A1-01),
449/1, MAIN CHOWK MURADPUR - TEHSIL,
RAJOURI

SRINAGAR

202. PEAKS AUTO PVT LTD (12NA-12-01), DR. ALI
JAN ROAD, SOURA, SRINAGAR PIN - 190001 -
190001
PH : 7006285604.
203. JAMKASH VEHICLEADES (KASHMIR) PVT LTD
(12NB-12-S1) - 190001
204. COMPETENT KASHMIR AUTOMOBILES PVT LTD
(12NC-12-01), KHASRA NO. 2745/1593/638 ,
KHEWAT NO. 352, MOUJA, BATAMALOO,
SRINAGAR, J&K

JHARKHAND**BOKARO**

205. HINDUSTAN AUTO AGENCY (B5NA-B5-01),
KHATA NO. 752, PLOT NO. 7792, NH-32, CHAS,
BOKARO - 827013
PH :9304807318.

CHATRA

206. HINDUSTAN AUTO AGENCY (B5NA-B5-02), PLOT
NO - 1110, 1111, 1112 ; KHATA NO 112,163,22
THANA - CHATRA, DIST - CHATRA JHARKHAND

CHIRKUNDA

207. RELIABLE INDUSTRIES (52NA-CQT-02), NEHRU
ROAD , CHIRKUNDA - 828202

DALTONGANG

208. PREMSONS MOTOR UDYOG PVT LTD
(MPNA-MP-01), RANCHI ROAD, NORTH REDMA
MEDININAGAR PS DALTONGANG, DIST PALAMU
- 822102

DEOGHAR

209. PREMSONS MOTOR UDYOG PVT LTD
(SGWN-SGW-01), PLOT NO 318/319 UNDER
THANA NO 583, MAHESHMARA MOUJA
,DEOGHAR - 814112
PH :9835507004.

DHANBAD

210. RELIABLE INDUSTRIES (52NA-52-01), RELIABLE
INDUSTRIES NEXA WORKSHOP AMAGHTA, BY
PASS ROAD SUGADIHPIN -828109 - 828109
PH :7992470853.

DUMKA

211. RELIABLE INDUSTRIES (L7NA-L7-01), TATA
CHOWK,

GIRIDIH

212. RELIABLE INDUSTRIES (3DNA-3D-01), KHATA
NO-51,PLOT NO-596,598 & 599, PO -
PACHAMBA, GIRIDIH , JHARKHAND-815316

HAZARIBAGH

213. PREMSONS MOTOR UDYOG PVT LTD
(Y9NA-Y9-01), PREMSON MOTOR UDYOG PVT
LTD ,NEXA SHOWROOM NEXT TO GST
OFFICE ARYA
NAGAR,HURHURU,HAZARIBAGH,JHARKHAND
825301 - 825301
PH :9835507004.

JAMSHEDPUR

214. MOTOR WORLD (A UNIT OF KALIMATI MOTORS
PVT LTD) (31NB-31-01), NS-6, 2ND PHASE,
ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR -
831013
215. PEBCO MOTORS LTD (31NA-31-01), KANDRA
ROAD, ADITYAPUR INDUSTRIAL AREA,
JAMSHEDPUR - 831013
PH :9334183260.

RAMGARH

216. HINDUSTAN AUTO AGENCY (AVNA-AV-01),
KHATA NO -01, PLOT NO 195 MURRAMKALAN
NEAR RAMGARH BAZAAR , RAMGARH
JHARKHAND

RANCHI

217. PREMSONS MOTOR UDYOG PVT LTD
(51NC-51-01), PLOT NO 2651/2652, KHATA NO
239, MAUJA,
VILLAGE BARAGAI , BARIATU MAIN ROAD,
RANCHI, JHARKHAND - 834009
PH :9334811248.
218. HILLTOP MOTORS (A UNIT OF HIRALAL
MOTORS PRIVATE LIMITED) (51ND-51-01), PLOT
NO. 967, 972, 973, 974, 975, BIRSA CHOWK,
VILLAGE HINOO, RANCHI
219. HILLTOP MOTORS (A UNIT OF HIRALAL
MOTORS PRIVATE LIMITED) (51ND-51-02),
KATHALMORE, OPP. MANER DHABA, RANCHI -
834005

KARNATAKA**ANEKAL**

220. PRATHAM MOTORS PVT LTD (FANA-FA-01),
SY NO.36/5,KAVALA
HOSAHALLI,ANEKAL-CHANDAPURA MAIN
ROAD,SIDHIOSAKOTE POST,ANEKAL
TALUK,ANEKAL-562106 - 562106

BANGALORE

221. BIMAL AUTO AGENCY INDIA PVT LTD
(02NL-02-01), NO.1, 3RD BLOCK, 2ND STAGE,
NAGARABHAVI, OUTER RING ROAD,
BANGALORE - 560072 - 560072
222. BIMAL AUTO AGENCY INDIA PVT LTD
(02NC-02-01), SY.NO.9/04, NEAR
KATAMANALLUR GATE, KANNAMANGALA,
KADUGODI MAIN ROAD, BANGALORE - 560067
PH :9742289137.
223. BIMAL AUTO AGENCY INDIA PVT LTD
(02NC-2-03), SY NO. 2/2, MARATHAHALLI TO KR
PURAM OUTER RING ROAD, MAHADEVAPURA,
K R PURAM HOBLI, BANGALORE
224. KALYANI MOTORS PVT LTD (02NI-02-01),
SURVEY NO.1772, KENCHENAHALLI VILLAGE,
RAJARAJESHWARI NAGAR, MYSORE
ROAD BANGALORE, KARNATAKA - 560032
PH :9845049626
225. KALYANI MOTORS PVT LTD (02NN-02-01), 152/7,
OUTER RING ROAD, DODDA BANASWADI,
HORAMANGU, KR PURAM HOBLI, BANGALORE
-560043 - 560043
PH :990020454.
226. MANDVI MOTORS PVT LTD (02NJ-02-01),
SURVEY NO.33/2,ALLALASANDRA, YELAHANKA
NORTH, BANGALORE, KARNATAKA - 560064
PH :9513729888.

227. PRATHAM MOTORS PVT LTD (02NK-02-01),
120,SARJAPUR MAIN ROAD,DODDAKANAHALLI,
VARTHUR HOBLI, BANGALORE EAST,
KARNATAKA- 560035 - 560035
PH :8884000579.
228. SURAKSHAA CAR CARE PVT LTD (02NF-02-01),
2/6, BERTEN AGRAHARA, OPP TO METRO
CASH & CARRY, HOSUR MAIN ROAD,
ELECTRONIC CITY, BANGALORE, KARNATAKA -
560100
PH :9845047393.
229. VARUN MOTORS PVT LTD (02NG-02-01),
NO.23/A, INDUSTRIAL SUBURB, 2ND STAGE,
TUMKUR ROAD, YESHWANTPUR, BANGALORE,
KARNATAKA- 560022 - 560022
PH :8971888885.
230. VARUN MOTORS PVT LTD (02NN-02-01), 37/56
NAGAVARA VILLAGE,HEBBAL RING ROAD
BANGALORE - 560024
PH :9513394753.
231. KALYANI MOTORS PVT LTD (02NA-02-01),
MUNICIPAL NO 1, EVEREST TALKIES, NEW
WARD NO 78, PID NO 91-4-1,KENCHAPPA
ROAD, FAZER TOWN, BANGALORE - 560005
232. SURAKSHAA CAR CARE PVT LTD (02NP-02-01),
SY NO 16/3, THALAGHATTAPURA VILLAGE,
UTTARAHALLI HOBLI, BANGALORE,
KARNATAKA
233. SURAKSHAA CAR CARE PVT LTD (02NP-02-02),
#47/2, 80FT ROAD, BANASHANKARI 6TH STAGE,
4TH BLOCK, TURAHALLI, BANGALORE -56006 -
56006
234. VARUN MOTORS PVT LTD (02NO-02-01), OPP
TO SOUTH EAST ASIAN TRUST, AYAPPA
NAGAR,HOODI, KR PURAM,BANGALORE
235. KALYANI MOTORS PVT LTD (02NQ-02-01),
SURVEY NO. 23/6,CHIKKABIDARAKALU
VILLAGE, ANCHAPALYA,
DASANAPURA-HOBLI,BANGALORE NORTH
TALUK BANGALORE - 560073,KARNATAKA.

BANGARPET

236. SURAKSHA (ORNA-OR-01), OPP TO SUGAR
FACTORY, AMARAVATHI LAYOUT BUS STOP,
KGF MAIN ROAD, BANGARPET - 563114

BELGAUM

237. SHANTESHA MOTORS PVT LTD (E8NA-E8-01),
PLOT NO. 6/B, R.S NO. 34, BOUXIDE ROAD,
KANGRALI B K, BELGAUM, KARNATAKA-590010.
- 590010
PH :9538195381.

BELLARY

238. KPF PVT LTD (G2NA-G2-01), DOOR NO. 14&15,
1ST CROSS, GANDHI NAGAR, BELLARY- 583103
- 583103

BIJAPUR

239. CHAVAN MOTORS (KTK) PRIVATE LIMITED
(T7NA-T7-S1) - 586109

240. CHAVAN MOTORS (KTK) PRIVATE LIMITED (77NA-T7-01), R SY NO. 28/D1, KASABA VIJAYAPURA, BYE PASS CROSS, NH50 HIGHWAY ROAD, VIJAYAPURA (BIJAPUR) - 586109
PH :879957100.
- CHICKBALLAPUR**
241. BIMAL AUTO AGENCY INDIA PVT LTD (KJNA-KJ-01), R SY NO. 158 & 159, KANDAVARA KERE KASABA HOBLI, - 503224
- CHITRADURGA**
242. SAKETH AUTOMOBILES (ALNA-AL-01), SITE NO.4181/4024/10782/2, SAROJABHAI KALYANA MATAPA, NH-04 SERVICE ROAD, CHITRADURGA - 577501. - 577501
- DAVANGERE**
243. SHRUTI MOTORS PRIVATE LIMITED (S1NB-S1-01), AVARAGERE ROAD, OLD, PB RD, DAVANGERE, KARNATAKA 577003 - 577003
- DEVANHALLI**
244. BIMAL AUTO AGENCY INDIA PVT LTD (02NL-VH-02), SURVEY NO 113,113/A, HISREMANIKERE VILLAGE, KASABA HOBLI, DEVANHALLI, BANGALORE RURAL DISTRICT - 562110
- DHARWAD**
245. RNS MOTORS PRIVATE LIMITED (BIXN-BIX-01), CTS NO. 29A/1, 29A/2, 29A/3, ASHOK NAGAR, GOA ROAD OPPOSITE PAVAN PARK, DODDANAYAKANA KOPPA DHARWAD - 580021
- GADAG**
246. RNS MOTORS PRIVATE LIMITED (RKNA-RK-01), SY NO. 48, BINKADAKATTI VILLAGE, GADAG, KARNATAKA.
- GOKAK**
247. SHANTESHA MOTORS PVT LTD (IRNA-IR-01), SY NO 106/3D/2 GOKAK- BELGAUM HIGHWAY
- GULBARGA**
248. LAHOTI MOTORS PVT LTD (E9NA-E9-01), #7-1211/A, OPP GUNJI BUS STAND HUMNABAD ROAD, GULBARGA - 585104
- HASSAN**
249. VENKAT MOTORS (C8NA-C8-01), KHATA NO 200-201, DM HALLY, BANGALORE - MANGALORE ROAD, HASSAN, KARNATAKA - 0
- HOSKOTE**
250. BIMAL AUTO AGENCY INDIA PVT LTD (SMNA-SM-01), SY NO. 102, NO.56, HOSAKOTE SANTE GATE FLYOVER, KAMMAVARI PETE, HOSKOTE, KARNATAKA - 562114
- HOSPET**

251. MUNEEER ENTERPRISE PRIVATE LIMITED (MUNEER NEXA) (N7NA-N7-01), TTH WARD, A.S. GUDI, HAMPI ROAD, HOSPET ROAD, HOSPET, KARNATAKA
- HUBLI**
252. RNS MOTORS PRIVATE LIMITED (73NC-73-01), SITE NO. 415/2A, P.B. UNKAL ROAD, HUBLI, KARNATAKA
- KOLAR**
253. MANDОВI MOTORS PVT LTD (02NJ-QU-02), KATHA NO2790,2790/1,PETECHAMANAHAHAI,KASABA HOBLI,KOLAR, KARNATAKA.
- MANGALORE**
254. MANDОВI MOTORS PVT LTD (45NA-45-01), SUMIT APARTMENT BUILDING, AIRPORT ROAD, MARY HILL, MANGLORE - 574142
PH :9845133077.
255. BHARATH AUTOCARS PVT LTD (45NB-45-01), GODOWN 17-106/P, V S KUDVA ROAD,MAROLI, MANGALORE - 575005
- MOODBIDRI**
256. BHARATH AUTO CARS PVT LTD (HNNA-HN-01), BHARATH BEEDI COMPOUND, NEAR ALVA'S HOSPITAL, MOODBIDRI, KARNATAKA.
- MYSORE**
257. KALYANI MOTORS PVT LTD (25NC-25-01), PLOT NO.262, HEBBAL INDUSTRIAL AREA, MYSORE, KARNATAKA- 570016. - 570016
258. MANDОВI MOTORS PVT LTD (25NA-25-01), SURVEY NO. 90/7, RT NAGAR, RING ROAD, DATTAGALLY, MYSORE, KARNATAKA-570023 - 570023
- NEELAMANGALA**
259. RNS MOTORS PVT LTD (BBHN-BBH-01), SY NO. 216/9, KASABA HOBLI, KUNIGAL BYPASS ROAD, NEELAMANGALA TALUK,BANGALORE RURAL DISTRICT. - 562123
- PUTTUR**
260. BHARATH AUTOCARS PVT LTD (CZNA-CZ-01), PLOT NO. 5-28/4, NEAR GOWDA SAMAJ HALL, BYEPASS ROAD, TENKLA, PUTTUR -574201.
- SAGARA**
261. SHRUTI MOTORS PRIVATE LIMITED (WFNA-WF-01), NEAR INDIAN OIL PETROL BUNK,BASAVANA HOLE, JAMBAGARU, SAGARA, KARNATAKA - 577401
- SHIMOGA**
262. SHRUTI MOTORS PRIVATE LIMITED (B7NB-B7-01), 217/215/91/79/1, OPP TO FOREST OFFICE, SHANTI NAAGARA, HONNALI ROAD, SHIMOGA,KARNATAKA - 577201
- SIRSI**

263. RNS MOTORS PVT LTD (MQNA-MQ-01), SY NO.260/A5, SHIVA COMPLEX,NEJJUR COMPO, BANAVASI ROAD, TALUK SIRSI, KARNATAKA
- UDUPI**
264. ABHARAN MOTORS PVT LTD (G6NA-G6-01), SY NO. : 94/35 & 94/18B, UPPOR VILLAGE, UDUPI, KARNATAKA - 576105
- KERALA**
- ALLEPPEY**
265. POPULAR VEHICLES & SERVICES LTD (ESNB-E5-01), 12/287A, PARAVOOR, ALLEPPEY - 0
- CALICUT**
266. A M MOTORS (47NA-47-01), 18/1472, OPP TO COMTRUST EYE HOSPITAL,SRAMBIKKAL PARAMBA,MINI BYPASS JAIL ROAD, JUNCTION,PUTHIYARA POST,CALICUT, KERELA-673004. - 673004
PH :7708833966.
267. POPULAR VEHICLES & SERVICES LTD (47NB-47-01), BYPASS SERVICE ROAD, BEHIND JAYA ARCADE, THONDAYADU, CALICUT, KERALA - 673017
PH :9946104660.
268. BIMAL AUTO AGENCY INDIA PVT LTD (47NC-47-01), KTC NAGAR (OLD FORD SHOWROOM), CALICUT ROAD, MEENCHANDA, KOZHIKOD, KERALA 673018
- COCHIN**
269. INDUS MOTOR COMPANY PVT LTD (27NC-27-01), NH 47,THAIKATTUKARA PO,THAIKAVU, ALUVA, COCHIN - 683106 - 683106
PH :9747508822.
270. SAI SERVICE PVT LTD (27NA-27-01), 723/7, 6,18,OPP TO HOTEL AARYAS, SEAPORT-AIRPORT, POOJARY VALAVU, KANAYANNOOR TALUK, THIRRAKKARA NORTH, COCHIN-682021. - 682021
PH :9645106193.
271. GEORGE MAJO AUTOMOBILES PVT LTD (27ND-27-01), 32/1219,THIRAKKAKARA MUNICIPALITY, CIVIL LINE ROAD,VAZHAKALA JUNCTION, COCHIN
272. POPULAR VEHICLES AND SERVICES (27NB-27-01), MANAKKAPPADY JN, IRUPANAM, COCHIN
- KAIPAMANGLAM**
273. SAI SERVICE PRIVATE LIMITED (RPNA-RP-01), EDAMUTTOM, EDAMUTTOM, P.O, KAIPAMANGALAM RD, THRISSUR
- KANNUR**

274. KVR AUTO MALL PVT LTD (K1NA-K1-01), SURVEY NO. 54/2, BYE PASS ROAD KANNUR-KOZHIODE, ELAYAVOOR VILLAGE, KUZHUTHALY DESAM, KANNUR TALUK
- KASARGOD**
275. INDUS MOTOR COMPANY PVT LTD (3LNA-3L-01), SURVEY NO.384/3C,10, MUTTATHODY VILLAGE, INDIRA NAGAR, CHENGALA POST, KASARGODE, KERALA- 671541 - 671541
- KATTAPPANA**
276. BIMAL AUTO (Z2NA-ZN-01), SERIAL NO. 53/14, OPP. VELLAYAMKUDI POST OFFICE, THODUPUZA - PULIYANMALA ROAD, VELLAYAMKUDI, KATTAPPANA, KERALA - 685515
- KAYAKULAM**
277. SAI SERVICE PVT LTD (8LNA-8L-01), SAI SERVICE PVT LTD, WEST OF RAILWAY BRIDGE, K P ROAD, KAYAMKULAM, PIN : 690502 - 690502
PH :9280242222.
- KODANGALLUR**
278. SAI SERVICE PVT LTD (8KNA-8K-01), SURVEY NO. 506/3-2, KODUNGALLUR, THRISSUR
- KOLLAM**
279. SARATHY CARS PVT LTD (C7NA-C7-01), NH-47 BYE PASS ROAD, AYATHIL P.O KOLLAM DIST, KERALA STATE PIN 691021 - 691021
PH :9848659456.
- KOTTAYAM**
280. AVG MOTORS LTD (B8NA-B8-01), SY. NO. 182/3,182/4, WARD NO. 10, PEROOR VILLAGE, ETTUMANOOR MUNICIPALITY, KOTTAYAM - 686630
281. SAI SERVICE PVT LTD (B8NB-B8-01), SY. NO. 341/11, 341/12, PERUR VILLAGE, MC ROAD, THELLAKOM, KOTTAYAM - 686630
- MUVATTUPUZA**
282. INDUS MOTOR COMPANY PVT LTD (7ENA-7E-01), NELLIPILLIL HOUSE, ADOOPARAMBU, MUVATTUPUZA P.O., ERNAKULAM. - 686661
- PALA**
283. AVG MOTORS LTD (GNNA-GN-01), SURVEY NO 11/37,BLOCK NO -80, PULIYANNOOR VILLAGE, PALA MUNICIPALITY, KOTTAYAM DISTRICT, KERALA.
- PALAKKAD**
284. INDUS MOTORS (Y2NA-Y2-01), SURVEY NO. 133,135, NEARBY MOYANS SCHOOL, PALAKKAD CITY, KERALA.
- TALIPARAMBA**

285. POPULAR VEHICLES & SERVICES LTD
(9WNA-9W-01), SY NO. 34/196 & 34/207, NH-66,
TALIPARAMB, KERALA - 670141

THIRUVANANTHAPURAM

286. INDUS MOTOR COMPANY PVT LTD
(16NB-16-01), OPPOSITE EVM ASHOK
LEYLAND ALUMOOD JN. NH 47, KANNIYAPURAM,
TRIVANDRUM - 695301. - 695301
PH : 9656685678.

287. POPULAR VEHICLES & SERVICES LTD
(16NC-16-01), SURVEY NO 39,40,59 & 75, NEAR
LOURDE FORANE CHURCH, NEAR PMG JN,
TRIVANDRUM - 695004

THRISSUR

288. BRD CARWORLD LIMITED (A4NA-A4-S1) - 0

289. POPULAR VEHICLES & SERVICES LTD
(A4NB-A4-01), SURVEY NO 62/P,
CHUNGAM,OLLARI, KANJANI ROAD,
ARANATTUKARA VILLAGE, THRISSUR - 680618 -
680618

290. BRD CARWORLD LIMITED (A4NA-A4-01),
CHIYYARAM VILLAGE , VILLAGE THRISSUR

MADHYA PRADESH

ASHOK NAGAR

291. PREM MOTORS PVT LTD (DSNA-DS-01), WARD
NO 1 , KHASRA NO 67/2/3 , NEAR RAJMATA
CHAURAH , GUNA BYPASS ROAD ,
AKSHARDHAM COLONY , ASHONAGAR

BHOPAL

292. JEEWAN MOTORS PVT LTD (03NB-03-S1) - 0

293. OCEAN MOTORS PVT LTD (03ND-03-S1) - 0

294. OCEAN MOTORS PVT LTD (03ND-03ND-01),
PLOT NO-54 & 55, SECTOR-A, GOVINDPURA
INDUSTRIAL AREA, JK ROAD, BHOPAL

295. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ
MOTORS PVT LTD) (03NC-03-01), 42, 6 ,BLOCK,
BHEL INDUSTRIAL ESTATE, HABIBGANJ,
HOSHANGABAD ROAD, BHOPAL (M.P.)

296. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ
MOTORS PVT LTD) (03NC-03-S2)

297. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ
MOTORS PVT LTD) (03NC-03-S1) - 0

BIAORA

298. UNITARA (OFNA-OF-01), 38/9/3, GRAM
PADONIYA, OLD A.B.ROAD, BIAORA (M.P.) . -
465674

CHHINDWARA

299. KAMTHI MOTORS LLP (U5NA-U5-01), WARD
NO.16, MAHATMA GANDHI WARD, SEONI PRAN
MOTI, SEONI ROAD, CHHINDWARA (M.P.) -
480001

DAMOH

300. ADINATH CARS PVT LTD (RDNA-RD-01),
KHASRA NO. 39/11/2/2, GRAM HIRDAYPURA,
SAGAR NAKA, DAMOH, MADHYA PRADESH -
470661 - 470661

DATIA

301. PREM MOTORS (WENA-WE-01), NEAR TATA
COMMERCIAL SERVICE STATION, JHANSI
ROAD, DATIA (MADHYA PRADESH) - 475861

DEPALPUR

302. OCEAN MOTORS PVT LTD (WBNA-WB-01),
SURVEY NO. 27/1 TAKIPURA, BETMA ROAD,
DEPALPUR, INDORE, MADHYA PRADESH -
453115

DEWAS

303. UNITARA MOTORS PVT LTD (3QNB-3Q-01), 3,
YAMUNA NAGAR, AB ROAD, DEWAS 455001 -
455001

304. UNITARA MOTORS PVT LTD (3QNB-3Q-S1)

DHAR

305. RUKMANI MOTORS PVT LTD (LMNA-LM-01),
SURVEY NO.-472/2/1, VILLAGE JETPURA, DHAR
(M.P.)

GUNA

306. PREM MOTORS PVT LTD (S3NA-S3-01), SURVEY
NO. 352, KASHONDA, AB ROAD, GUNA (M.P.)

GWALIOR

307. NIKUNJ MOTORS (A UNIT OF RSKS
AUTOMOTIVES PVT. LTD.) (30NB-30-01),
MAHARANA PRATAP CHOWRAHA, GOLE KA
MANDIR, GWALIOR, MADHYA PRADESH. -
474005

308. PREM MOTORS PVT LTD (30NA-30-S1) - 0

309. PREM MOTORS PVT LTD (30NA-30-01), SURVEY
NO 442/2 , JHANSI ROAD , MAHAGAON ,
GWALIOR

INDORE

310. OCEAN MOTORS PVT LTD (53NB-53-01),
BICHOLI MARDANA NEAR SAMPATH PALACE
OPP HOTEL PRIDE - 452001

311. PATEL MOTORS (INDORE) PVT LTD
(53NA-S3-01), 1105/1528/5/2, MIN-1 AND
1105/1528/4/5, GRAM: KHAJURANA, DISTRICT:
INDORE, KANADIA ROAD, INDORE (M.P.) -
452016
PH : 7771002581.

312. RANA MOTORS PVT LTD (53ND-53-01), LASUDIA
MORI, DEWAS NAKA, INDORE, PIN CODE
452010 - 452010
PH : 9933055539.

313. RUKMANI MOTORS PVT LTD (53NC-53-01),
RUKMANI MOTORS NEXA SERVICE,FOOTHI
OTHI SQUARE,OPP.DASTOOR
GARDEN,INDORE - 452002
PH :9755512100.

314. RUKMANI MOTORS PVT LTD (53NC-53-S1) - 0

315. RUKMANI MOTORS PVT LTD (53NC-53-02),
3701/5/2P, IN FRONT OF BHARAT PETROL
PUMP, NEMAWAR ROAD, PALDA, INDORE
(M.P.)

JABALPUR

316. SHUBH VEHICLES LLP (54ND-54-S1) - 0

317. SHUBH VEHICLES LLP (54ND-54-01), 297/1 4
MILE LAL BUNGLOW TILHARI JABALPUR -
482020

318. STANDARD MOTOCORP PVT LTD (54NC-54-01),
KHARSA NO-529/1/1, NEAR TRIPURI CHOWK
GARHA JABALPUR M. P - 482003
PH :9773543358.

319. STANDARD MOTOCORP PVT LTD (54NC-54-03),
UKHARI TIRAH, OPPOSITE TO
RAMESHWARAM WATER TANK, MR-4 ROAD,
VIJAY NAGAR, JABALPUR (M.P.)

KATNI

320. SHUBH VEHICLES LLP (FKNA-FKN-01),
KHASARA NUMBER 24/2, 25/1 PANNA MOD,
MAIHAR ROAD, NEAR JOHN DEER REACTOR
AGENCY, KATNI (MP)

KHARGONE

321. NIMAR MOTORS PRIVATE LIMITED (NEXA
DIVISION) (AUNA-AU-01), SANAWAD ROAD
,JETAPUR KHARGONE - 451001

KUKSHI

322. OCEAN MOTORS PVT LTD (BION-BI-01), PLOT
NO 464 , VINAYAK COMPLEX INDORE KUKSHI
ROAD

MANDLA

323. STANDARD AUTO (WDNA-WD-01), KHASRA
NO-44/1, BINJHIA, JABALPUR ROAD, MANDLA,
MADHYA PRADESH-481661.

MANDSAUR

324. PATEL MOTORS (INDORE) PVT LTD
(WCNA-WC-01), SURVEY NO 362/6, OPP KRISHI
UPAJ MANDI, MHOW NEEMUCH ROAD,
MANDSAUR (MP).

MORENA

325. PREM MOTORS PVT LTD (RGNA-RG-01), OPP.
SHREE BAURANG DHARAMKANTA, A B ROAD,
MORENA, MP - 476001

NEEMUCH

326. PATEL MOTORS (INDORE) PVT LTD
(3TNA-3T-01), KHASRA NO -1973/1&1975/2,
MHOW - NEEMUCH ROAD, NEEMUCH -
MADHYA PRADESH - 458441

SAGAR

327. ADINATH CARS PVT LTD (G1NA-G1-01),
KHASRA NO 155, P H NO - 77, BAHERIA
GADGAD,
SAGAR JABALPUR ROAD, SAGAR - 470004,
MADHYA PRADESH, INDIA - 470004
PH :9752447690.

SANWER

328. RANA MOTORS PVT LTD (CWXX-CW-01),
SURVEY NO. 217, KUDANA ROAD BYPASS,
SANWER (MP).

SATNA

329. CITY CARS (A UNIT OF AGARWAL WHEELS PVT
LTD) (D7NA-D7-01), BEHIND NEXA SHOWROOM,
666/2, AMOUDHA, PANNA ROAD, SATNA,
MADHYA PRADESH - 485001
PH :6262230999.

SHAHOL

330. STANDARD MOTOCORP PVT LTD
(SFAN-SAF-01), KHASRA NO-459, VILLAGE
JAMUI NEAR BAGHEL DHABA, BUDHAR ROAD,
SHAHOL (M.P.)

SINGRAULI

331. CITY CARS (A UNIT OF AGARWAL WHEELS PVT
LTD) (JUNA-JJ-01), KHASRA NO - 3055,
NAUGARD THESLI, SINGRAULI (MP)

UJJAIN

332. YUG CARS (A UNIT RUKMARANI MOTORS PVT
LTD) (3WNA-3W-01), 59/1, DEWAS ROAD,
ADARSH NAGAR, NAGZIRI, UJJAIN - 456664
PH :9755512100.

333. YUG CARS (A UNIT RUKMARANI MOTORS PVT
LTD) (3WNA-3W-02), 1/2/3, UJJAIN DEWAS
ROAD, UJJAIN, MADHYA PRADESH. - 456001

VIDISHA

334. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ
MOTORS PVT LTD) (AYNA-AY-01), PLOT
NO.349-3 (RG.NO.239/1, 240,242), AHMADPUR
CHAURAH, WARD NO. 29, VIDISHA (MP)

MAHARASHTRA

AHMEDNAGAR

335. KANKARIYA AUTOMOBILES PVT LTD
(ASNA-A5-01), SH-60,NEWASA ROAD
,NAGARDEOLE,AHEMDANAGAR,MAHARASTRA -
414601
PH :9403961522.

AKOLA

336. ASPA BANDSONS AUTO PVT LTD (F1NA-F1-01),
SHIVANI AIRPORT AREA, AKOLA -
MAHARASHTRA (444001) - 444001

ALANDI

337. MY CAR (PUNE) PVT LTD (GJPN-GJP-01),
SURVEY NO 214/1, PUNE ALANDI ROAD, KALE
WASTI , VILLAGE CHARHOLI BURDUK , ALANDI
- 412105

ALIBAG	INDAPUR	361. MY CAR (PUNE) PVT LTD (05NK-05-01), PLOT NO- GEN-25 & GEN-25 B/1, TTC INDUSTRIAL AREA, PAWANE, NAVI MUMBAI, MAHARASHTRA (400709) - 0	376. SAI SERVICE PVT LTD (TENA-TE-01), MAHAVIR NIRMAN, RAILWAY STATION ROAD, PALGHAR.
338. SIMRAN MOTORS PVT LTD (3XNA-3X-01), 31/1/B MOUJE VESHWI , GRAM PANCHAYAT VESHWI, TALUKA ALIBAUG, DISTT RAIGAD	349. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD (NQNA-NQ-01), GAT NO 212/1/B, PUNE SOLAPUR ROAD , INDAPUR, DISTRICT PUNE	362. MY CAR (PUNE) PVT LTD (05NK-05-S1) - 0	PANDARPUR
AMRAVATI	JALGAON	363. MY CAR (PUNE) PVT LTD (05NL-05-01), PLOT NO. B-21 & B-24/1, THANE INDUSTRIAL AREA, THANE, MAHARASHTRA - 400804	377. CHAVAN MOTORS DIVISION INDIA PVT LTD (0HNA-0H-01), GAT NO. 94/1/42 & 94/1/43, ISBAVI, WAKHARI ROAD, PANDHARPUR, DISTRICT SOLAPUR, MAHARASHTRA - 413304 - 413304
339. ASPA BANDSONS AUTO PVT LTD (F2NA-F2-01), F32/1 MIDC , AURANGABAD NAGPUR EXPRESS HIGHWAY, AMRAVATI, MAHARASHTRA - 444807 PH :9130041513.	350. MANRAJ AUTOMOBILES PVT LTD (C4NB-C4-01), P 93, MIDC, R L CHOWK, AJANTA ROAD, JALGAON, MAHARASHTRA - 425003 - 425003	364. SAI SERVICE PVT LTD (05NB- 05-01), JOSEPH CARDUN TECHNICAL SCHOOL , KHASHABA JADHAV MARG , OFF DR. AMBEDKAR ROAD , DADAR (EAST) MUMBAI, MAHARASHTRA. - 400014	PARBHANI
AURANGABAD	JALNA	365. SHIVAM AUTOZONE INDIA PVT LTD (05ND-05-S1) - 0	378. PAGARIYA AUTO PVT LTD (LNNA-LN-01), PLOT NO. 857, OPPOSITE IOC PUMP, BASMAT ROAD, PARBHANI
340. AUTOMOTIVE MANUFACTURERS PVT LTD (21NB-21-01), PLOT NO -L- 3 / 1 , BETWEEN GARWARE & WOCKHARDT LTD, JALGAON ROAD, MIDC CHIKALTHANA,AURANGABAD PIN : - 431006, MAHARASHTRA - 431006 PH :9970499273	KALYAN	366. SHIVAM AUTOZONE INDIA PVT LTD (05NE-05-01), PLOT NO. 1 & 2, RAMCHANDRA LANE EXTN , KANCHPAD, OFF LINK ROAD, MALAD-WEST. - 400064	PHALTAN
341. PAGARIYA AUTO PVT LTD (21NA-21-01), OPP AIRPORT, NEXT TO INDIAN OIL PETROL PUMP, JALNA ROAD, AURANGABAD, MAHARASHTRA - 431006 PH :8888859502.	KHARGHAR	367. SHIVAM AUTOZONE INDIA PVT LTD (05ND-05-01), PLOT NO SILVER HOUSE, 110 MIDC, ROAD NO 13, MAROL, ANDHERI (EAST), MUMBAI, MAHARASHTRA - 400069	PUNE
BADLAPUR	353. SIMRAN MOTORS PVT LTD (AACN-AAC-01), 60/72, JAWAHAR COOPERATIVE INDUSTRIAL ESTATE, KALAMBOLI, KHARGHAR, MUMBAI, MAHARASHTRA. - 410209	NAGPUR	380. EXCELL AUTOVISTA PVT LTD (19NG-19-01), SURVEY NO 98/2A/P, NEW PUNE - MUMBAI HIGHWAY, NEAR BALEWADI STADIUM, BANER TALUKA, PUNE - 411045
342. AHER AUTOPRIME LLP (90NA-90-01), MUKTA AUTOMOBILES, BHARAT COLONY, NEAR SHANTI NAGAR, WATER TANK ROAD, BADLAPUR WEST 421503 - 421503	KOLHAPUR	368. BARBATE AUTOMOTIVE (INDIA) PVT LTD (20NA-20-01), 37/2, MANISH NAGAR, BESA T POINT, BESA ROAD NAGPUR 440025 - 440025	381. KOTHARI AUTO WHEELS PRIVATE LIMITED (19NJ-19-01), GATE NO 1605, OLD 1099, KESNAND ROAD, WAGHOLI, TAL-HAVELI, DISTRICT - PUNE, MAHARASHTRA - 412207
BARAMATI	355. SAI SERVICE PVT LTD (38NA-38-02), PLOT NO. C-6, SHIROLI MIDC, KOLHAPUR, MAHARASHTRA.	369. BARBATE AUTOMOTIVE (INDIA) PVT LTD (20NA-20-02), C-48/1, MIDC HINGNA MAIN ROAD, WADI, NAGPUR, PIN-440028, MAHARASHTRA. - 440028	382. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD (19NI-19-01), NEAR SADGURU PETROL PUMP, PUNE NASHIK HIGHWAY, AT KURALI, KHED TALUKA, CHAKAN, PUNE - 410501 PH :9923589214.
343. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD (7RNA-7R-01), BHIGWAN ROAD, SHIV NAGAR, BARAMATI (MAHARASHTRA) PH :9850994014.	LATUR	370. ARUN MOTORS PRIVATE LIMITED (20ND-20-01), PATNI ARCADE , C-48/1, MIDC HINGNA MAIN ROAD , NAGPUR - 440028	383. MY CAR (PUNE) PVT LTD (19NA-19-S1) - 0
CHANDRAPUR	356. AUTOMOTIVE MANUFACTURERS PVT LTD (V8NA-V8-01), C-4/1319/1, SURVEY NO. 89/C, RING ROAD BETWEEN BABHAGAON CHOWK AND GARUD CHOWK, PO & DIST LATUR, MAHARASHTRA - 413512 - 413512	NANDED	384. SAI SERVICE PVT LTD (19NC-19-01), SINHAGAD ROAD, NEAR NANDED CITY, VADGAON KHURD, PUNE.(MAHARASHTRA) PH :9923308333.
344. BARBATE AUTOMOTIVE (INDIA) PVT LTD (H3NA-H3-01), PLOT NO 15-18, OUT OF SURVEY NO 14/4, 15/5, MAUZA BADOLI, NAGPUR CHANDRAPUR HIGHWAY, CHANDRAPUR, MAHARASHTRA - 440025 PH :838087666	LONAVALA	371. SEVA AUTOMOTIVE PRIVATE LIMITED (68NA-68-01), AIRPORT ROAD,SANGVI - 431605 PH :7065026520.	385. SEHGAL AUTORIDERS PVT LTD (19NE-19-01), SURVEY NO 63/2, SHEWALEWADI, MANJARI BUDRUK, PUNE SOLAPUR HIGHWAY, PUNE, MAHARASHTRA - 412307 PH :9158000049.
345. BARBATE AUTOMOTIVE (INDIA) PVT LTD (H3NA-H3-S1) - 0	357. SEHGAL AUTORIDERS PVT LTD (CGAN-CG-01), GALI NO. 735/1, WAKSAI,LONAVALA, TALUKA MAVAL, DISTRICT PUNE , MAHARASHTRA-410405 - 410405	NARAYANGAON	386. WONDER CARS PVT LTD (19ND-19-S1) - 0
CHIKHLI	MANGAON	372. KOTHARI AUTO WHEELS PRIVATE LIMITED (FVNA-FY-01), WARULWADI, NH-50, NARAYANGAON -410504	387. WONDER CARS PVT LTD (19ND-19-01), PLOT NO 52/1 BLOCK F2, MIDC PIMPRI, PUNE - 411019 PH :9850094151.
346. KATARIA AUTOMOBILES (BCBN-BCB-01), SURVEY NO. 678/5 AND 7, NEAR SHIV KRUPA HOTEL, NH 48 HIGHWAY, THALA, CHIKHLI, GUJARAT - 396521 - 396521	358. MY CAR (PUNE) PVT LTD (BAMN-BA-01), SHOP NO 17,18,19,20, SURVEY NO 55/1 , 55/2 MUMBAI GAO HIGHWAY, TAHSIL MANGAON, DISTRICT RAIGAD	NASHIK	388. CHOWGULE INDUSTRIES PVT LTD (19NH-19-01), 43/1, OFF KARVE ROAD, KOTHRUD, OPPOSITE LILAVATI APARTMENT, PUNE - 111045
DHULE	MUMBAI	374. SHAAN CARS PVT LTD (37NB-37-01), PLOT E-2, MIDC SATPUR, NASHIK, MAHARASHTRA - 422010	PUNE (AMBEGAON)
347. SEVA AUTOMOTIVE PRIVATE LIMITED (P3NA-P3-01), PLOT NO. F-1, ADDITIONAL DHULE INDUSTRIAL AREA, DHULE, MAHARASHTRA - 424006	359. FORTPOINT AUTOMOTIVE (CARS) PVT LTD (05NJ-05-S1) - 0	375. AUTOMOTIVE MANUFACTURERS LIMITED (37NC-37-01), PLOT NO P/1/2 , MIDC , AMBAD ,NASHIK - 422010	389. MY CAR (PUNE) PVT LTD (19NM-19-01)
GONDIA	360. KTS AUTOMOTORS PVT LTD (05NH-05-01), UNIT NO A1, PANNALAL COMPOUND, LBS KANTILAL MAGANLAL ESTATE, L.B.S MARG, BHANDUP (W), MUMBAI - 400078	PALGHAR	RATNAGIRI
348. BARBATE AUTOMOTIVE (INDIA) PVT LTD (20NA-4C-03), HIMGIRI LAYOUT , KAWLEWADA ROAD , GONDIA - 795140			

390. JAGRUT MOTORS PVT LTD (G3NA-G3-01), 410/6/1B, SALVI STOP, SHIVAJI NAGAR MAIN ROAD RATNAGIRI, MAHARASHTRA - 415612 PH :9820039626.
- SANGAMNER**
391. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD (HENA-HE-01), AHMADNAGAR
- SANGLI**
392. CHOWGULE INDUSTRIES PVT LTD (J1NA-J1-01), 118/2/1 KUBERA CHAMBERS, MAHAVIRNAGAR, SANGLI (MAHARASHTRA) - 416416
393. CHOWGULE INDUSTRIES PVT LTD (J1NA-J1-S1) - 0
- SASWAD**
394. CHOWGULE INDUSTRIES PVT LTD (PHNA-PH-01), SURVEY NO. 611/1, NEAR INDIAN OIL PETROL PUMP, VILLAGE SASWAD, PUNE, MAHARASHTRA - 412301
- SATARA**
395. CHOWGULE INDUSTRIES PVT LTD (F3NA-F3-01), GATE NO 158/1/5/6, PROPERTY NO.823, NEAR VIGHANHARTA SOCIETY COLONY B, MEDHA ROAD, AT/POST-KONDAVE, TALUKA-SATARA
- SHIKRAPUR**
396. KOTHARI AUTO WHEELS PRIVATE LIMITED (GKJN-GKJ-01), GAT NO. 1491/1B, PUNE NAGAR ROAD, SHIKRAPUR, TALUKA SHIRUR, PUNE - 412208 - 412208
- SHILPHATA**
397. VELOX MOTORS PRIVATE LIMITED (SGJN-SGJ-01), PLOT NO. 99, KALYAN SHIL ROAD, SHILPHATA - 410203
- SINNAR**
398. SHAAN CARS PVT LTD (FUNA-FU-01), SURVEY NO 932/2, NEAR UDYOG BHAVAN, SINNAR, MAHARASHTRA - 422103 - 422103
- SOLAPUR**
399. CHAVAN MOTORS DIVISION INDIA PVT LTD (B1NA-B1-01), SURVEY NO. 534/4, BALE PUNE ROAD, SOLAPUR, MAHARASHTRA - 413224 - 413224 PH :8888881314.
- TALEGAON DABHADE**
400. MY CAR (PUNE) PVT LTD (4KNA-4K-01), SR. NO. 408/8, OLD MUMBAI PUNE HIGHWAY, LIMB PHATA, TALEGAON DABHADE, TAL - MAVAL, DIST. - PUNE
- THANE**
401. AUTOMOTIVE MANUFACTURERS PVT LTD (39NB-39-01), NERUL, MUMBAI PUNE HIGHWAY, NAVI MUMBAI - 400706 PH :9769206120.

402. AUTOMOTIVE MANUFACTURERS PVT LTD (39NB-39-S1) - 400706
403. EXCELL AUTOVISTA PVT LTD (39NA-39-01), MOHAN MILL COMPOUND, GHODBUNDER ROAD, THANE, MAHARASHTRA - 400607 PH :9967331726.
404. EXCELL AUTOVISTA PVT LTD (39NA-39-02), NEAR ARIHANT COMPOUND, KALHER, BHIWANDI, THANE - 400607 PH :9967331726.
405. KIRAN MOTORS MAHARASHTRA (A DIVISION OF KIRAN MOTOS LIMITED) (39ND-39-01), BHOIR COMPOUND, FOUNTAIN JUNCTION, OFF NATIONAL HIGHWAY 8, VILLAGE - VARSOVA, GHODBUNDER, DISTRICT - THANE (MAHARASHTRA) 401104 - 401104
406. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (39NE-39-01)
- WADA**
407. SHIVAM AUTOZONE INDIA PVT LTD (BXDN-BXD-01), NO. 417/15, NEAR SNEH GARDEN, VILLAGE GANDHARE, WADA KUDUS BHIWANDI ROAD, WADA, DISTRICT PALGHAR, MAHARASHTRA - 421303
- YAVATMAL**
408. HIMALAYA CARS (4MNA-4M-01), PLOT NO. 14, MIDC, YAVATMAL INDUSTRIAL AREA, YAVATMAL

MANIPUR

- IMPHAL**
409. EASTERN MOTORS (74NA-74-01), NEW PATTI NO 30, DAG NO. 99, ASIAN HIGHWAY 1 (NH 102) , IMPHAL. - 795140

NAGALAND

- DIMAPUR**
410. PROGRESSIVE MOTORS (32NA-32-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, - 797115 PH :7669223736.
- KOHIMA**
411. SEYIE AUTO (4NNB-4N-01), NEAR IG STADIUM, MARIEMA, KOHIMA, NAGALAND - 797001

ODISHA

- BALASORE**
412. JYOTE MOTORS (BALASORE) PVT LTD (LSNA-L5-01), PLOT NO. 385, GANESHWARPUR, REMUNA, JANUGANJ,BALASORE, ODISHA 756019 - 756019
- BARIPADA**
413. JYOTE MOTORS PRIVATE LIMITED (RQNA-RQ-01), KARTABASHA , WARD NO 32 BALASORE JHARPOKRIA ROAD , BAGDIHA , BARIPADA - 757001

- BERHAMPUR**
414. SKY AUTOMOBILES (E2NA-E2-01), PLOT NO 373/2229 & 373/1204, AMABAPUA MOUZA, BRAHMAPUR (ODISHA) - 760007
- BHUBANESHWAR**
415. JYOTE MOTORS PVT LTD (04NA-04-S1) - 0
416. NARAYANI MOTORS PVT LTD (04NC-04-01), PLOT NO 140/2004, KHATA NO -1152/364, UNIT-20, JAGAMARA, KHANDGIRI, CHAWAK, BHUBANESHWAR - 0
417. NARAYANI MOTORS PVT LTD (04NC-04-S1) - 0
418. SKY AUTOMOBILES (04NB-04-01), BAPUJI NAGAR, SHREE VIHAR CHANDRASEKHARPUR ROAD, BHUBANESWAR - 751017 - 751017
- BHUBANESWAR**
419. TUSHI MOTORS PRIVATE LIMITED (04ND-04-01), IDCO SHED NO : B/18, UNIT NO : 12, BOMIKHAL, PS : RASULGARGH - 751010
- JEYPORE**
420. LEGEND CARS PRIVATE LIMITED (SWNA-SW-01), NH26, OPPOSITE HOTEL HELLO, INDUSTRIAL ESTATE, JEYPORE, ODISHA
- JHARSUGUDA**
421. ODYSSEY MOTORS PVT LTD (D4NA-BJU-02), POWER HOUSE ROAD, SARBAHAL,JHARSUGUDA-768201 (ODISHA) - 768201
- PARADEEP**
422. NARAYANI MOTORS PVT LTD (OENA-OE-01), DO-CHHAKI, PARADEEP - CHANDIKHOL RD, PARADEEP, ODISHA 754141
- ROURKELA**
423. ORBIT MOTORS PVT LTD (87NA-87-01), PLOT NO 5G/3, VED VYAS, SUNDARGARH, ROURKELA - 769041 PH :9165071234.
- SAMBHALPUR**
424. ODYSSEY MOTORS PVT LTD (D4NA-D4-01), SAMBALPUR, CHOWK, REMED, ODISHA 768006 - 768006

ORISSA

- JAJPUR**
425. SKY AUTOMOBILES (RZNA-RZ-01), PANIKOILI JAJPUR ROAD,JAJPUR
- PUDUCHERRY**
- KARAIKAL**
426. SHENBAKA CARS (CCFN-CC-01), RESY. NO. 38/16-A, POOVAM VILLAGE, KARAIKAL, PUDUCHERRY. - 609609

PUNJAB

- AMRITSAR**
427. JAYCEE MOTORS PRIVATE LIMITED (17NC-17-01), JAYCEE MOTORS, VERKA BYE PASS, OUTSIDE ASHBERY HOMES, VILLAGE VALLAH, AMRITSAR, PUNJAB - 143501
- BATALA**
428. PATHANKOT VEHICLEADES PVT LTD (V5NA-V5-01), HARDO JANDE , GT ROAD, BATALA
- BHATHINDA**
429. TARA AUTOMOBILES (70NA-70-01), KHASRA NO. 3534, NEAR ITI CHOWK, MANSA ROAD, BHATHINDA, PUNJAB - 151001 PH :8437019666.
- GURDASPUR**
430. PATHANKOT VEHICLEADES (4XNA-4X-01), KHASRA NO. 24/1, 24/2, 25/1, KHEWAT NO. 54/55, SITUATED AT BABRI NATIONAL HIGHWAY, GURDASPUR, PUNJAB.
- HOSHIARPUR**
431. HOSHIARPUR AUTOMOBILES (H4NA-H4-S1) - 0
432. HOSHIARPUR AUTOMOBILES (H4NA-H4-01), SHED NO 11 A & 12 A, INDUSTRIAL ESTATE JALANDHAR ROAD HOSHIARPUR, 14602 - 14602
- JALANDHAR**
433. LOVELY AUTOS (35NA-35-01), NH 1 GT ROAD, PRAGPUR, JALANDHAR PUNJAB
434. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT LTD) (35NC-35-01), KHASRA NO - 16450, SITUATED AT RAJA GARDEN, KAPURTHALA ROAD, JALANDHAR CITY. - 144003 PH :9915944600.
- KAPURTHALA**
435. LOVELY AUTOS (4ZNA-4Z-01), KEVAT KHATA NO. 1140/1400, KHASRA NO. 2362/273-19, OPPOSITE NEW SABJI MANDI, SULTANPUR ROAD, KAPURTHALA CITY, PUNJAB
- KHANNA**
436. HOSHIARPUR AUTOMOBILES (N3NA-N3-01), H B NO. 221, KHAWAT NO. 231, ALOUR, KHANNA LUDHIANA
437. GULZAR MOTORS PVT LTD (62NE-62-01), PLOT NO 2662 NEAR SILVER ARC MALL, AARTI CHOWK, LUDHIANA, PUNJAB - 141003 PH :9814839777.
438. HOSHIARPUR AUTOMOBILES (62NG-62-01), S-46/1616/1, G.T. ROAD, DHOLEWAL CHOWK, LUDHIANA, PUNJAB - 141003 PH :8872501234.
439. LOVELY AUTOS (62NF-62-01), 287/1, MOTI NAGAR, SHERPUR BYPASS, GT ROAD, LUDHIANA - 141010 PH :9875999161.

440. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT LTD) (62NH-62-01), OPP. MEDWAYS HOSPITAL, FEROZPUR ROAD, LUDHIANA - 141015
PH :8872000357.

MANSA

441. TARA AUTOMOBILES (TLNA-TL-01), NEAR TEENKONI, SIRSA MANSA FLY OVER , MANSA, PUNJAB.

MOGA

442. REMIRA MOTORS PVT LTD (H6NA-H6-S1) - 0

MOHALI

443. CM AUTOSALES PRIVATE LIMITED (L1NA-L1-01), C-155, INDUSTRIAL AREA, PHASE-7, MOHALI

NABHA

444. DIVINE AUTOWORLD LLP (UFNA-UF-01), RADHA SWAMI BYPASS ROAD, ADJOINING PUNJAB FURNITURE PALACE, NABHA, DIST. PATIALA, PUNJAB - 147201

NAKODAR

445. LOVELY AUTOS (35NA-5B-02), KHASRA NO. 46/26 SHOWROOM NO. 1, NEAR ST. JUDE'S CONVENT SCHOOL, OPP. THE PALM, NAKODAR, JALANDHAR - 144040

NAWANSHAHR

446. LOVELY AUTOS (J7NA-J7-01), VILL. LANGROYA, CHANDIGARH-NAWANSHAHR ROAD, DIST. NAWANSHAHR (S.B.S. NAGAR) - 144516
PH :9915026862.

PATHANKOT

447. PATHANKOT VEHICLELEADS PVT LTD (A7NA-A7-01), PLOT NO.-C-30, INDUSTRIAL GROWTH CENTRE, VILL. CHACELI, PATHANKOT - 145023
PH :7527006800.

RAJPURA

448. DIVINE AUTOWORLD LLP (HKNA-HK-01), VILLAGE BHADAK, RAJPURA -PATIALA HIGHWAY, RAJPURA, PATIALA

SANGRUR

449. MAX AUTOMOBILES (G4NB-G4-01), VILL. BHINDRAN, PATIALA ROAD, SANGRUR PIN - 148001 - 148002

TARN TARAN

450. JAYCEE MOTORS PRIVATE LIMITED (BLPN-BL-01), KHASRA NO 222/2(1-6), 22/9(3-4) 22/15(1/11-8) 22/12(9-8) 22/15(12(3-0) 22/17(0-16) SARHALL, AMRITSAR ROAD, NEAR MAJHA PUBLIC SCHOOL, TARN TARAN, PUNJAB

RAJASTHAN

AJMER

451. NAVNEET MOTORS (B2NA-B2-01), PLOT NO7 -8,RIICO INDUTRAIL ESTATE MAKHAPURA NASIRBAD ROAD,AJMER(RAJASTHAN)-PIN CODE-305002 - 305002
PH :9414149149.

ALWAR

452. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (F9NA-F9-01), 6TH MILESTONE VILLAGE JATIYANA,OPP. PETROL BEHROR ROAD ALWAR - 301001
PH :9982341741.

ANGUL

453. ODYSSEY MOTORS PVT LTD (W1NA-W1-01), NH 55, KANDASAR, NALCO NAGAR, ANGUL, ODISHA, 759145

BAGRU

454. PREM MOTORS PVT LTD (USNA-US-01), KHASRA NO. 64/1104, NH-8, AJMER ROAD, NEAR SANSKAR COLLAGE, BAGRU (RAJASTHAN)

BARAN

455. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (PMNA-CTG-01), ATRU ROAD, BARAN, RAJASTHAN. - 325205

BARMER

456. LMJ SERVICES LTD (SHNA-SH-01), KHASRA NO. -1665/4/2, NH-88, OPP. CHOWDHARY PETROL PUMP, BARMER, RAJASTHAN.

BHARATPUR

457. TM MOTORS PVT LTD (S5NA-S5-S1) - 0

BHILWARA

458. CHAMPION CARS (A UNIT OF PREM CARS PVT LTD) (E3NA-E3-01), NEXA SUKHADIA CIRCLE, CHAMPION CARS, AJMER ROAD, BHILWARA - 311001
PH :9001027933.

BHIWADI

459. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9HNA-9H-01), KHASRA NO 990/1329 VILLAGE KHIJURIWAS, OPP MATILA POLICE CHOWKI, BHIWADI (RJ) - 301019

BIKANER

460. AURIC MOTORS PRIVATE LIMITED (71NA-71-01), PLOT NO. F-189, SRI GANAGANAGAR ROAD, OPPOSITE RAC-3RD , BICHHWAL INDUSTRIAL AREA, BIKANER 334001 - 334001
PH :9887222786.

461. VIPUL MOTORS (71NB-71-01), E-62, PHASE -1, BICHHWAL INDUSTRIAL AREA, BIKANER (RJ) - 334001

CHAKSU

462. KTL AUTOMOBILE (JMNA-JM-01), KHASRA NO. 2937, TONK ROAD CHAKSU, JAIPUR - 303901

CHIRAWA

463. AURIC MOTORS PRIVATE LIMITED (SYNA-SY-01), WARD NO.-15, NEAR DOBI, CHIRAWA (RAJASTHAN)

CHITTORGARH

464. TECHNOY MOTORS INDIA PVT LTD (K9NA-K9-01), PLOT NO-28, OLD RIICO INDUSTRIAL AREA, CHITTORGARH, RAJASTHAN - 312001

465. TECHNOY MOTORS INDIA PVT LTD (K9NA-03-S1) - 0

DAUSA

466. VIPUL MOTORS PVT LTD (FMNA-FM-01), 1365, RAJPOOT COLONY, JAIPUR ROAD, DAUSA

HINDAUN

467. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (S0NA-S0-01), (KHASRA NO 771.772, SH 1 , ROAD WAYS BUS STAND , PHULWARA , HNDDAUN CITY , KARAUJI

JAIPUR

468. KP AUTOMOTIVES PVT LTD (11NB-11-01), PLOT NO 3-4,MANGLAM RIICO INDUSTRIAL AREA,NEAR KANAKPURA RAILWAY STATION,SIRSI ROAD - 302034
PH :7412059823.

469. PREM MOTORS PVT LTD (11NC-11-01), PLOT NO- 12,13,14, SUDARSHANPURA INDUSTRIAL AREA, NEAR 22 GODAM, JAIPUR

470. PREM MOTORS PVT LTD (11NC-11-S1) - 0

471. SATNAM MOTOCORP PVT LTD (11ND-11-S1) - 0

472. SATNAM MOTOCORP PVT LTD (11ND-11-01), D-27, K/LM, ROAD NO-3,SIKAR ROAD, VISHWAKARMA INDUSTRIAL AREA ,JAIPUR, RAJASTHAN-302023. - 302023
PH :9649373311.

473. VIPUL MOTORS PVT LTD (11NA-11-S1) - 0

474. KTL AUTOMOBILE PVT LTD (11NF-11-01), PLOT NO.- F-131, RIICO, MALVIYA NAGAR, JAIPUR (RAJ) - 302034

475. SATNAM MOTOCORP PVT LTD (11ND-11-02), E-50, ROAD NO.3, SIKAR ROAD, VKIA, JAIPUR, PIN-302013

JHALAWAR

476. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (RVNA-RV-01), NEAR RAILWAY BRIDGE, GINDORE, TALUKA JHALARAPATAN, JHALAWAR, RAJASTHAN

JHUNJHUNU

477. AURIC MOTORS PRIVATE LIMITED (FNNA-FN-01), NEAR TVS TWO WHEELER SHOWROOM ROAD NO 3 GUDHA MOD, RAJASTHAN 333001 - 333001
PH :7970006402.

JODHPUR

478. AURIC MOTORS PRIVATE LIMITED (65NA-65-01), 14 A, HEAVY INDUSTRIAL AREA, ITI CIRCLE, SARASH DAIRY ROAD, JODHPUR - 334001
PH :7300077394.

479. LMJ SERVICES LTD (65NB-65-01), B-8, C-9,10, MIA, BASNI, PHASE-1
JODHPUR - 342009
PH :7412087320.

480. LMJ SERVICES LTD (65NB-65-02), PLOT NO.-61, GERU MARKET, BHADWASIYA FRUIT MANDI, JODHPUR, RAJASTHAN - 342001
PH :8094011126.

481. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (61NA-61-01), G-11A, AUTOMOBILE ZONE, IPJA, NEAR DAKANIYA RAILWAY STATION, KOTA - 324005
PH :8094011126.

KOTA

481. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (61NA-61-01), G-11A, AUTOMOBILE ZONE, IPJA, NEAR DAKANIYA RAILWAY STATION, KOTA - 324005
PH :8094011126.

NAGAU

482. SHRI MANGLAM AUTO PVT LTD (HLNA-HL-S1) - 0

PALI

483. LMJ SERVICES LTD (J9NA-J9-01), PLOT NO. 21, SUMERPUR ROAD, PALI, RAJASTHAN. - 306401

RAJSAMAND

484. TECHNOY MOTORS INDIA PVT LTD (X2NA-X2-01), P.NO. F-28,29,30, RICCO INDUSTRIAL AREA, DHOINDA, RAJSAMAND (RAJ)

SAWAI MADHOPUR

485. PREM MOTORS PVT LTD (FYNA-FY-01), PLOT NO 9 & 10 , RAMNAGAR VANJYAK YOJNA, OPPOSITE INDIAN PETROL PUMP , KHERDA , JEENAPUR,SAWAI MADHOPUR

SHAHUPURA

486. K.P. AUTOMOTIVES PVT LTD (NHNA-NH-01), 1876/715, DHANI HANUMAN SAGAR, WARD NO. -23, NH-48, SHAHPURA (RAJASTHAN).

SIKAR

487. JAMU AUTOMOBILES PVT LTD (K7NA-K7-01), THAR PETROL PUMP,JAIPUR ROAD,SIKAR - 332001
PH :9414037515.

SUJANGARH

488. AURIC MOTORS PRIVATE LIMITED (BRBN-BRB-01), NEAR AABKAN THANA, CHAPPAR ROAD, SUJANGARH

SURATGARH

489. AURIC MOTORS PVT LTD (LGNA-LG-01), PLOT NO. S-6, VRINDAVAN VIHAR, IN FRONT SURATGARH PG COLLEGE, OPP. GSS, MAIN GANGA NAGAR ROAD, SURATGARH, RAJASTHAN

TONK

490. KP AUTOMOTIVES PVT LTD (GMNA-GM-01), PLOT NO - 36-39 , NEAR KAMDHENU CIRCLE , JAIPUR ROAD , TONK

UDAIPUR

491. TECHNOCY MOTORS INDIA PVT LTD (49NB-49-01), OPP. NAND BHAWAN, GOVERDHAN VILLAS , UDAIPUR
492. NAVNEET MOTORS (49NA-49-01), NEAR MEGNUS HOSPITAL, BHUVANA, UDAIPUR (RAJASTHAN)- 31

TAMIL NADU

ATTUR

493. SM CAR PVT LTD (QTNA-QT-01), APPAMASAMUDRAM, ATTUR MAIN ROAD, TAMIL NADU. - 636010

CHENGALPET

494. AIE CARS PRIVATE LIMIED (BBSX-BBS-01), NO. 1/7-A, GST ROAD, CHENGALPET – 603001 - 603001

CHENNAI

495. ABT LIMITED (14NJ-14-01), NO123, KANNIGAPURAM, VELACHERY MAIN ROAD, BEHIND RACE COURSE, GUINDY, CHENNAI, TAMIL NADU - 600032
PH :9994444303.
496. KHIVRAJ MOTORS PVT LTD (14NA-14-01), PLOT NO.21, AMBIT IT PARK ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI-600058. - 600058
PH :9626099999.
497. KHIVRAJ MOTORS PVT LTD (14NA-14-02), OLD S.NO. 11/1 & 2, NEW S.NO.11/2 - B, NO.100, NERKUNDRAM VILLAGE, SAIDAPET TALUK, CHENNAI - 600107
498. PILLAI & SONS MOTOR COMPANY (14NC-14-01), DOOR NO.46, MEDAVAKKAM MAIN ROAD, KEELAKATTALAI, CHENNAI, TAMILNADU - 600117
PH :9994950505.
499. POPULAR VEHICLES & SERVICES LTD (14NB-14-01), 69/A & 69/B, SAMAYAPURAM MAIN ROAD, PORUR, CHENNAI, TAMILNADU- 600116 - 600116
PH :9842389111.
500. VISHNU CARS PVT LTD (14NG-14-01), SURVEY NO 219, ADJOINING HP PETROL PUMP, POONAMALLE HIGH ROAD, KATTUPAKKAM, CHENNAI, TAMIL NDU - 600056
PH :7339359111.

501. VISHNU CARS PVT LTD (14NG-14-02), POONAMALLE HIGH ROAD, ARUMBAKKAM, KOYAMBEDU, CHENNAI, TAMIL NADU. - 600056
PH :7550333622.

502. CRESO (A UNIT OF NEXGEN VENTURES PVT LTD), (14NK-14-01), SY NO. 56/2, PERIYAR E.V.R SALAI (POONAMALLEE HIGH ROAD), PERIYAMET, CHENNAI-600003.

503. KALYANI MOTORS PVT LTD (14NM-14-S1)

CHIDAMBARAM

504. VISHNU CARS PVT LTD (CPKN-CPK-01), TS NO: 1375/5A & 5B, RAJALAKSHMI NAGAR, CHIDAMBARAM BY-PASS LINK ROAD, CHIDAMBARAM -608001.

COIMBATORE

505. AADHI CARS PRIVATE LIMITED (41NB-41-01), PLOT NO.50-55, ASHOK NAGAR, C-COLONY, TAKKAL PURAM, TRIVANDRUM ROAD, KOKKARAKULAM VILLAGE, PALAYAMKOTTAI, TIRUNELVELI, TAMILNADU - 627007
PH :9003977577.
506. ABT LIMITED (41NC-41-S1) - 0

507. ABT LIMITED (41NC-41-01), 56, BHARATHI NAGAR, SATHY MAIN ROAD, GANAPATHY, COIMBATORE - 641006

508. JAKRISHNAA AUTOSALES PVT LTD (41ND-41-01), NO. 656, TRICHY ROAD, NEAR ORTHO ONE HOSPITAL, COIMBATORE, TAMIL NADU- 641012 - 641012
509. SREE SARADHAMBAL AUTOMOBILES PVT LTD (41NA-41-01), 18/1472, S.N.R COLLEGE ROAD, NAVA INDIA, COIMBATORE, AND TAMILNADU-641004. - 641004
PH :9790004271.

CUDDALORE

510. VISHNU CARS PVT LTD (5QNA-5Q-01), SY NO. 1898 & 1909/4, WARD NO.5, BLOCK NO. 50, RAMAKRISHNA AVENUE, CUDDALORE - 607002

DHARMAPURI

511. SRI AMMAN CARS INDIA PVT LTD (5RNA-5R-01), SY NO. 5/1 & 11/2, KRISHNAGIRI MAIN ROAD, DHARMAPURI, TAMILNADU.

DINDIGUL

512. PL A MOTORS FIRM (S4NA-S4-01), SEELAPADI, TRICHY HIGHWAY, DINDIGUL, TAMIL NADU - 624001

ERODE

513. SREE SARADHAMBAL AUTOMOBILES ERODE PVT LTD (H7NA-H7-01), NO.75, NEAR SURABI NURSERY, PERUNDURAI ROAD, ERODE, TAMILNADU-638011. - 638011
PH :9786022272.

GUDUVANCHERRY

514. VISHNU CARS PVT LTD (BADN-BAD-01), SY NO. 5/2B & 6/3, GST ROAD, POTHERI, GUDUVANCHERRY, CHENGALPATTU DISTRICT, TAMIL NADU

HOSUR

515. SRI AMMAN CARS INDIA PVT LTD (7QNA-7Q-01), NEAR CATER PILLAR WARE HOUSE, SEETHA RAMNAGAR, NH-44, OPP TO ANAND ELECTRONICS, HOSUR, KRISHNAGIRI DISTRICT, TAMILNADU - 635109
PH :9841033464.

KARAIKUDI

516. MEENAKSHI AUTO ZONE PRIVATE LIMITED (HXNA-HX-01), T S NO 624/1, DOOR NO. 5, 1ST STREET, SUBRAMANIPURAM, KARAIKUDI, TAMIL NADU - 630001
PH :9940094881.

KARUR

517. AADHI CARS PRIVATE LIMITED (K4NA-K4-01), SE NO. 364, SALEM BYPASS, KARUR, TAMIL NADU - 639006

KATPADI

518. GANESH CARS PVT LTD (C6NA-C6-3), SYNO 613/5A3, CHENNAI ROAD, KATPADI, VELLORE
KRISHNAGIRI

519. AMMAN CARS (QLNA-QL-01), SY NO.410/5, 410/3B1, CHENNAI BYEPASS ROAD, BOGANAPALLI, KRISHNAGIRI. - 635001

KUMBAKUNAM

520. PILLAI & SONS MOTOR COMPANY (M4NA-M4-01), 3133/A, CRESANT NAGAR, CHENNAI BYPASS ROAD, KORANATTU KARUPPUR, KUMBAKONAM – 612501. - 612501

MADURAI

521. ASIR AUTOMOBILES PVT LTD (42NA-42-01), 176, MAIN ROAD, KAMARAJAR ROAD, MADURAI, TAMIL NADU – 625001 - 625001

522. SIVA AUTOMOTIVE TRADING PVT LTD (42NB-42-01), 4-113/H.RING ROAD, UTHANGUDI, MADURAI, TAMILNADU

MAYILADUTHURAI

523. PILLAI & SONS (AGNA-AG-01), NO.46, VALLALAGARAM, SS NALLUR POST, SIRKALI MAIN ROAD, MAYILADUTHURAI. - 609118

NAGERCOIL

524. ATHEN CARS (S5NA-S5-01), NO. G. 3/9, NO. 1197, NELSON COMPOUND, KP ROAD, PARVATHIPURAM, NAGERCOIL, TAMILNADU - 629003
PH :9751196436.

NAMAKKAL

525. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (X4NA-X4-01), SURVEY NO. A. 96/5, SALEM - NAMAKKAL ROAD, NAMAKKAL, TAMIL NADU 637001 - 637001

OOTY

526. SREE SARADHAMBAL AUTOMOBILES PVT LTD (41NA-Y1-02), DOOR NO 155/A IN ASSESSMENT NO 60466, UDHAGAMDALAM(OOTY), TAMIL NADU

PONDICHERY

527. SHENBAKA CARS PVT LTD (96NA-96-01), RS NO 50/5A, PONDICHERY CUDDLORE MAIN ROAD ,KIRUMBAMBAKKAM, BAHOR COMMUNE,PONDICHERY - 607402
PH :7338322220.

RAJAPALAYAM

528. ABT (5VNA-5V-01), NO.490/3, OPPOSITE TO N.A MANJAMMAL POLYTECHNIC COLLEGE, IDYANKULAM PANCHAYAT, RAJAPALAYAM MAIN ROAD, MAMSAAPURAM, RAJAPALAYAM – 626110. - 626110

SALEM

529. SM CAR PVT LTD (A2NB-A2-01), S NO 131/1A, BYPASS ROAD, NEAR INDIAN OIL ASSOCIATION, PETROL BUNK, KONDALAMPATTY, SALEM - 636010
PH :7094440010.

530. THRIVENI CAR COMPANY PVT LTD (A2NA-A2-01), 2/6, KANDHAMPATTY, BYE PASS ROAD, SALEM, TAMILNADU - 636005
PH :9786022272.

SRIPERUMBADUR

531. VISHNU CARS PVT LTD (7BNA-7B-01), SURVEY NO 147/2A, NEW SR. NO : 147/10, CHENNAI -BANGALORE HIGHWAY, SRIPERUMBUDUR, TAMIL NADU 602105. - 602105

SULUR

532. AADHI CARS PRIVATE LIMITED (TKNA-TK-01), 3/147-4C, ASHWINI MAHAL COMPLEX, TRICHY MAIN ROAD, SULUR, 641401

TENKASI

533. AADHI CARS PRIVATE LIMITED (BXRN-BXR-01), D.NO. 166/4 & 166/5, KUTHUKKALVALASAI, TENKASI

THANJAVUR

534. PILLAI & SONS MOTOR COMPANY (E7NA-E7-01), SURVEY NO 237/1, NEELAGIRI THAKUR THOTTAM, VALLAM ROAD, THANJAVUR, TAMIL NADU - 613403
PH :9443264165.

THENI

535. MEENAKSHI AUTO ZONE PRIVATE LIMITED (9UNA-9U-01), SURVEY NO. 120, EAST RATHINAM NAGAR, PERIYAKULAM MAIN ROAD, THENI-625531
- TIRUNELVELI**
536. AADHI CARS PRIVATE LIMITED (A3NA-A3-01), PLOT NO.50-55, ASHOK NAGAR, C-COLONY, TAKKALPURAM, TRIVANDRUM ROAD, C1 KOKKARAKULAM
- TIRUPUR**
537. SHASHTI CAR PVT LTD (Y7NA-Y7-01), 16A-1,SHREE PADMINI GARDENS, KANGAYAM RD, TIRUPPUR, TAMIL NADU - 641604 PH :9942903310.
- TIRUVALLUR**
538. KHIVRAJ MOTORS PVT LTD (HHNA-HH-01), 173 A, POONAMALLEE HIGH ROAD, VENGATHUR, TIRUVALLUR - 602002
- TIRUVANNAMALI**
539. GANESH CARS PVT LTD (C6NA-LX-02), SURVEY NO. 63/1A, VENGIKKAL, VELLORE MAIN ROAD, TIRUVANNAMALAI, PIN-606604, TAMILNADU - -606604
- TRICHY**
540. PLA MOTORS (23NA-23-01), TS NO.29P,31P & 32P,36P, NEW WARD "E", NEW BLOCK NO.27, ANNA NAGAR, TRICHY, TAMILNADU - 620017. - 620017 PH :8110099991.
- TUTICORIN**
541. ASIR AUTOMOBILES PVT LTD (S6NA-S6-S1) - 0
- VELLORE**
542. GANESH CARS PVT LTD (C6NA-C6-01), 96/6, CHENNAI-BANGALORE HIGHWAY, NH-46, PERUMUGAI,VELLORE, TAMILNADU - 632009 PH :9884722126.
- VILUPPURAM**
543. ABT LIMITED (QQNA-QQ-01), NO. 526, 1, MAMBALAPATTU ROAD, NEAR ES SCHOOL, MOOVENDAR NAGAR, VILUPPURAM, TAMILNADU. - 605602

TELANGANA

ARMUR

544. VARUN MOTORS PVT LTD (1HNA-BBN-03), CHIKKABALLAPUR, KARNATAKA - 562101.
- ATTAPUR (HYDERABAD)**
545. ADARSHA AUTO (10NM-10-03), H.NO 13-6-434/C/1,PILLAR NO 85,ATTAPUR,HYDERABAD - 500048
- BODUPAL (SECUNDRABAD)**

546. VARUN MOTORS PVT LTD (K6NA-K6-02), SURVEY NO 63, PEERZADIGUDA, BODUPPAL, MEDCHAL MALKAGIRI DISTRICT, HYDERABAD
- HYDERABAD**
547. ADARSHA AUTO WORLD PVT LTD (10NG-10-01), PLOT NO 6/P, 54, SURVEY NO. 204, PRAGATI NAGAR, BALANAGAR, KUKATPALLY, HYDERABAD - 500072
548. ADARSHA AUTO WORLD PVT LTD (10NG-10-02), SHAMSHABAD, NH44, HYDERABAD, TELANGANA - 501218 - 501218 PH :9297116633.
549. ADARSHA AUTO WORLD PVT LTD (10NG-10-S1) - 0
550. ADARSHA AUTO WORLD PVT LTD (10NM-10-01), SY NO 382 TO 385, RAMAPALLY, HYDERABAD - 500051
551. GEM MOTORS (INDIA) PVT LTD (10NH-10-01), D.NO.8-96, SURVEY NO.128/2 & 129, TYAGARAYANANAGAR COLONY, KOTHAPET, HYDERABAD, TELANGANA. - 500084 PH :9912345899.
552. JAYABHERI AUTOMOTIVES PVT LTD (10ND-10-01), HNO 2-40/64, SURVEY NO 23 TO 28, JUBILEE GARDENS, KOTHAGUDA, HYDERABAD, TELANGANA-500032 - 500032
553. JAYABHERI AUTOMOTIVES PVT LTD (10NN-10-01), STALL NO MI-1, MIYAPUR, HYDERABAD -500049 - 500049
554. KALYANI MOTORS PVT LTD (10NE-10-01), SURVEY NO.184, KARMAGHAT VILLAGE, BESIDE KHRAMGHAT HANUMAN TEMPLE, R.R DISTRICT, HYDERABAD, TELANGANA - 500079 PH :9347121212.
555. THE MITHRA AGENCIES (10NK-10-01), USHA MAYURI THEATER, OPP TO SPENCERS MARKET, MUSHEERABAD, SECUNDRABAD, ANDHRA PRADESH-500020 - 500020
556. POPULAR VEHICLES & SERVICES LTD (10NO-10-S1) - 0
557. POPULAR VEHICLES & SERVICES LTD (10NO-10-01), KOMPALLY,BASHIRABAD, JEEDIMETLA, SECUNDRABAD, TELANGANA 500010 - 500014
558. POPULAR VEHICLES & SERVICES LTD (10NO-10-02), PLOT NO 8 MINI INDUSTRIAL ESTATE,SERILINGAMPALLY, HAFEEZPET, HYDERABAD - 500050
559. SAI SERVICE PVT LTD (10NC-10-01), SURVEY NO 78, ADJACENT TO HP PETROL PUMP, GOPANAPALLY, GACHIBOWLI, HYDERABAD -500046 - 500046 PH :9966377888.
560. VARUN MOTORS PVT LTD (10NB-10-01), B-54, CO.INDUTRIAL ESTATE, BALANAGAR, HYDERABAD, TELENGANA - 500037

561. VARUN MOTORS PVT LTD (10NB-10-02), H.NO. 8-2-120/117A/2, PLOT NO. 83,83A,83B, ROAD NO. 2, BESIDES SBI BANK, BANJARA HILLS, HYDERABAD - TELANGANA - 500033 PH :9885610555.
562. KALYANI MOTORS PVT LTD (10NE-10-02), NO.611 PEDDA AMBERPET MUNICIPALITY, PEDDA AMBERPET, TELANGANA, HYDERABAD - 501505
- IBRAHIMPATNAM-TL**
563. KALYANI MOTORS PRIVATE LIMITED (CSFN-CSF-01), PLOT NO. 3, 4, 11 & 12, SHERIGUDA, IBRAHIMPATNAM, TELANGANA
- JANGAON**
564. ADARSHA AUTO WORLD PVT LTD (KINA-KI-01), SY NO.289,HYDERABAD ROAD,JANGOAN
- KAMAREDDY**
565. VARUN MOTORS PVT LTD (1HNA-KX-02), BESIDES SK FUNCTION HALL, KAMAREDDY - 507125
- KARIMNAGAR**
566. ADARSHA AUTO WORLD PVT LTD (N6NA-N6-01), 8-6-301, BY PASS ROAD, AUTO NAGAR, KARIMNAGAR, TELANGANA - 505001 PH :9847073265.
567. ADARSHA AUTO WORLD PVT LTD (N6NA-N6-02), PADMANAGAR, SIRICILLA ROAD, KARIMNAGAR - 505001
- KHAMMAM**
568. PARAMASHIVA MOTORS PVT LTD (1GNA-1G-01), SY NO. 507,VELUGUMATLA, VILLAGE, KHAMMAM, TELANGAN
- KOTHAGUEDEM**
569. VARUN MOTORS PVT LTD (26NA-HF-03), TALLADA - KOTHAGUEDEM RD, BABUCAMP, KOTHAGUEDEM, TELANGANA 507125 - 507125
- MAHBUBNAGAR**
570. SRI JAYARAMA MOTORS PRIVATE LIMITED (WPNA-WP-01), CHRISTIANPALLY, BHOOTPOOR ROAD, MAHBUBNAGAR, TELANGANA - 509001 PH :8096990074.
- MANCHERIAL**
571. ADARSHA AUTO WORLD PVT LTD (CMNA-CM-01), SURVEY NO-417,BELLAMPALLI MANCHERIAL ROAD ,MANCHERIAL,TELANGANA - 504208 PH :9133329709.
- MEDAK**
572. VARUN MOTORS PVT LTD (KHfNA-KF-01), PLOT NO 74,SY NO 248/3, NEAR CWHC GODOWNS,MEDAK
- MEDCHAL**

573. AUTOFIN LIMITED (CIDN-CID-01), OPP BHARATH PETROLEUM HYDERBAD-KAMREDDY HIGHWAY,MEDCHAL
- NIRMAL**
574. ADARSHA AUTO WORLD PVT LTD (10NG-AA-03), SY 79.80,83/A,KADTHAL VILLAGE,M/O SOAN,NIRMAL
- NIZAMABAD**
575. VARUN MOTORS PVT LTD (1HNA-1H-01), 1-51/41/D4 MADAHAVA NAGAR,HYDERABAD ROAD,NIZAMABAD,TELANGANA,503230 - 503230 PH :9542222486.
- SANGAREDDY**
576. SAI SERVICE (OINA-OI-01), SY NO 772/A,HYDERABAD TO MUMBAI HIGHWAY, SANGAREDDY
- SECUNDRABAD**
577. AUTOFIN LIMITED (K6NB-K6-01), PLOT NO.6, SURVEY NO.267/1 & 267/2, BOWENPALLY, BALANAGAR MAIN ROAD, SECUNDRABAD, TELANGANA - 500011 PH :8866144551.
578. VARUN MOTORS PVT LTD (K6NC-K6-01), VARUN MOTORS,2ND CROSS ROAD,SAINIKPURI,SECUNDRABAD PH :779960094.
- SHADNAGAR**
579. SRI JAYARAMA MOTORS PRIVATE LIMITED (WSNA-WS-01), SY.NO 204,BESIDE VIVA HOSPITALS,SHADNAGAR
- SIDDIPET**
580. ADARSHA AUTO WORLD PVT LTD (10NM-CAL-02), SY.NO.194/4, PONNALA CROSS, BESIDE HP PETROL, SIDDIPET - 502375
- WARRANGAL**
581. ADARSHA AUTO WORLD PVT LTD (DSNA-D5-01), H.NO: 23-6-132, HUNTER ROAD, OPP TO CITIZENS CLUB, WARANGAL, TELANGANA - 506007 PH :8978944414.
- ZAHEERABAD**
582. JAYABHERI AUTOMOTIVES PVT LTD (BATN-BAT-01), SITE AT SY NO. 271 & 275, MAIN ROAD, ZAHIRABAD
- UTTAR PRADESH**
- AGRA**
583. KTL PVT LTD (66NC-66-01), KHASRA NO - 246/1, 249/1, 251, KUBERPUR, AGRA. - 282006
584. PREM MOTORS PVT LTD (66NB-66-S1) - 0
585. PREM MOTORS PVT LTD (66NB-66-01), KHASRA NO.-655, VILL ARTONI, DELHI-AGRA HIGHWAY, AGRA - 282007

586. MERAK VEHICLES LLP (66NE-66-01), 30, MUNRO ROAD, SADAR BAZAAR, AGRA CANTT, 282001. - 282001	599. SHAKUMBARI AUTOWHEELS PVT LTD (6DNA-6D-01), 4TH KM. MILESTONE, BIJNOR - NAJIBABAD RD, NEAR DPS SCHOOL, BIJNOR, UTTAR PRADESH 246701 - 246701	GORAKHPUR	625. SUMITRA DS MOTORS PVT. LTD. (M3NA-M3-01), KHASRA NO - PLOT NO. 706, VILLAGE BHANDSARIYA, SH 730, LAKHIMPUR KHERI, UTTAR PRADESH
AKBARPUR	BULANDSHAHR	614. SMARTWHEELS PVT LTD (72NA-72-01), ARAZI NO. 623, 624 & 625, GULHARIA BAZAR, MEDICAL COLLEGE ROAD, GORAKHPUR, UTTAR PRADESH - 273009 PH :8222002147.	LUCKNOW
587. KTL PVT LTD (LHNA-LH-01), GRAM BARA TEHSIL AKBARPUR, NEAR PRABHAT ENGINEERING COLLEGE. KANPUR DEHAT, (UTTAR PRADESH)	600. SKUNIVERSE AUTOMOBILES PVT LTD (MSNA-M5-01), 578M, DELHI ROAD, TRANSPORT NAGAR, BULANDSHAHR-203001 - 203001	615. ARBIT AUTOMOBILES PVT LTD (72NB-72-01), PLOT NO - A & B, BUDDH VIHAR YOUNA, PART-B, TARAMANDAL ROAD, GORAKHPUR - 273009	626. KTL AUTOMOBILE PVT LTD (13ND-13-S1) - 0
AKBARPUR-A NAGAR	ECOTECH (NOIDA)	GREATER NOIDA	627. KTL AUTOMOBILE PVT LTD (13ND-13-S2) - 0
588. SMARTWHEELS (BINA-BI-01), PLOT NO 486 MI MAUJA BAIRAMPUR BARWAN , AKBARPUR DISTT, AMBEDKAR NAGAR, UTTAR PRADESH	601. J J IMPEX (MSM) (T283-T2-S1) - 421503	616. MSM (JJ IMPEX) (T283-T2-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NO 02, ECOTECH 12, GREATER NOIDA, GAUTAM BUDDHA NAGAR, UTTAR PRADESH - 201009	628. KTL AUTOMOBILE PVT LTD (13ND-13-01), PLOT NO - 513, VILL HARIHARPUR BIJNAUR, OPP ANSAL API, AMAR SHAHEED PATH, LUCKNOW - 227105 PH :7311190503.
ALIGARH	ETAH	617. RANA MOTORS PVT LTD (T2NB-T2-01), PLOT NO.26, SECTOR ECOTECH-12, GREATER NOIDA, GAUTAM BUDDH NAGAR, GREATER NOIDA, PIN-201310, UTTAR PRADESH	629. KTL AUTOMOBILE PVT LTD (13ND-13-02), GODAWARI ESTATE, SITAPUR ROAD, LUCKNOW
589. ANIL MOTORS (A UNIT OF CLML VEHICLES PVT LTD) (B6NA-B6-01), PLOT NO. 5/129, GT ROAD, RAM NAGAR COLONY, SARSOL, ALIGARH, UTTAR PRADESH. - 202002 PH :9639775522.	602. DEV MOTORS PVT LTD (XGNA-XG-01), GATA NO.164, VIRAMPUR, ETAH DELHI G.T ROAD, IN FRONT OF MAHINDRA SHOWROOM, ETAH, UTTAR PRADESH, PIN CODE - 207001 - 207001	HARDOI	630. KULDEEP MOTORS (LUCKNOW) PVT LTD (13NE-13-S1) - 0
590. ANIL MOTORS (A UNIT OF CLML VEHICLES PVT LTD) (B6NA-B6-02), VILL KARSUA, PALWAL-DELHI ROAD, ALIGARH PIN 202140 - 202140 PH :9358373099.	ETAWAH	618. CONCEPT CARS LIMITED (QENA-QE-01), PLOT NO. 1609 & 1605, GUNBAX PURVA, BILGRAM RD, HARDOI, UTTAR PRADESH - 241001 PH :7607696666.	631. MEGA MOTORS (A UNIT OF AKM MOTORS PRIVATE LIMITED) (13NF-13-01), B-107, SECTOR-C, MAHANAGAR, LUCKNOW - 226006
591. ANIL MOTORS (A UNIT OF CLML VEHICLES PVT LTD) (B6NA-B6-S1)	FATEHPUR	HATHRAS	632. ANAND MOTOR AGENCIES LTD (13NC-13-01), GATA NO. 1062 PARGANA RAJA BIJLI PASI VILLAGE AURANGABAD, SHAHEED PATH (OPPOSITE TO RAMABAI AMBEDKAR MAIDAN), LUCKNOW, UTTAR PRADESH - 226012
ALLAHABAD	603. KULDEEP MOTORS PVT LTD (BENA-6E-01), PILKHAR, KANPUR-ETAWAH ROAD, ETAWAH. - 206001	619. DEV MOTORS PVT LTD (LPNA-LP-01), NAGLA UMMED, NEAR COCA COLA FACTORY, BANNA DEVI, ALIGARH ROAD, HATHRAS	633. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-S2)
592. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (29NC-29-01), PLOT NO. C-23, INDUSTRIAL AREA - NAINI, PRAYAGRAJ - 211009	FIROZABAD	JHANSI	634. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-S1) - 0
593. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (29NC-29-S1) - 0	605. DEV MOTORS PVT LTD (DFNA-DF-01), DHOLPURA, NEAR ST. JOHNS CHAURAHA, AGRA ROAD, FIROZABAD - 283203	620. SURI AUTOMOBILES (60NA-60-01), SHIVPURI - JHANSI ROAD, OPPOSITE HANSRAJ MODERN SCHOOL, JHANSI, UTTAR PRADESH - 284003 PH :7705000558.	635. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-01), PLOT NO - D10, SAROJINI NAGAR INDUSTRIAL AREA, LUCKNOW. PIN - 226008 - 226008
594. AMITDEEP MOTORS (29NA-29-S1)	GAJRAULA	621. BASERA VELOCITY CARS (A UNIT OF BASERA HOTELS AND RESORTS LLP) (60NB-60-01), 329, BUDHA, BADAGAON, GWALIOR ROAD, JHANSI	636. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-02), KHASRA NO. 197, 198, 200, 201, 202 SEMRA, FAIZABAD ROAD, LUCKNOW.
ALMORA	GHAZIABAD	KANNAUJ	637. ONEUP MOTORS INDIA PRIVATE LIMITED (13NG-13-01), KHASRA NO. 1040, MUBARAKPUR, LUCKNOW, UTTAR PRADESH 226201 - 226201
595. NAINITAL MOTORS PVT LTD (SQNA-SQ-01), NH109, PALTAN BAZAR, DHARANLAULA, ALMORA, UTTARAKHAND	607. MOTORCRAFT SALES PVT LTD (59NB-59-S1) - 0	622. KTL PVT LTD (EMNA-EM-01), ARAZI GATA NO. 1247, NEAR MAA GAYATRI FILLING STATION, ASHOK NAGAR, SARAMEERA, KANNAUJ, UTTAR PRADESH	MAHARAJGANJ
AMROHA	608. MSM (JJ IMPEX) (5982-59-N1), PLOT NO C, J J IMPEX (DELHI) LIMITED, 224, SITE-1, INDUSTRIAL AREA, BULANDSHAHR ROAD INDUSTRIAL AREA, GHAZIABAD, UTTAR PRADESH 201003 - 201003	KANPUR	638. ARBIT AUTOMOBILES PVT LTD (EINA-EI-01), 120, VILL RAMPUR, TEHSIL SADAR, MAHARAJGANJ, UTTAR PRADESH.
596. AKANKSHA MBD (AONA-AO-01), GATA NO. 2993, MOHALLA SARAI KOHNA, BIJNOR ROAD, AMROHA - 244221	609. REGENT AUTOLINKS PVT LTD (59NC-59-01), A-10/32, 33.34, MEERUT ROAD INDUSTRIAL AREA, GHAZIABAD - 201002	623. KTL PVT LTD (28NB-28-01), ARAZI NO. 352, SINGHPUR KACHHAR, BITHOOR ROAD, NORTHERN RAILWAY COLONY, KANPUR, UTTAR PRADESH. - 208017 PH :7408409312.	MAHOBA
BAREILLY	610. ROHAN MOTORS LTD (59NA-59-S1) - 0	KHURJA	639. VELOCITY CARS (RMNA-RM-01), 12/1, SHOP AT CHARKHARI, BYPASS ROAD, NEAR PARMANAND CHOWK, MAHOBA, UTTAR PRADESH
597. CORAL MOTORS PVT LTD (56NA-56-01), DELHI RAMPUR ROAD, IN FRONT OF MINI BYPASS, CB GANJ, BAREILLY, UP - 243001 PH :9359101010.	611. ROHAN MOTORS LTD (59NA-59-01), KHASRA NO 46, DELHI MEERUT ROAD MEERUT ROAD INDUSTRIAL AREA, MORTA, GHAZIABAD, UTTAR PRADESH 245101 - 245101 PH :8178839830.	LAKHIMPUR KHERI	MAINPURI
BARHALGANJ	612. TR SAWHNEY AUTOMOBILES PVT LTD (59ND-59-01), A-8 AMBEDKAR ROAD, GHAZIABAD UP - 201001	624. SKUNIVERSE AUTOMOBILES PVT LTD (SKPN-SKP-01), 206, V-TAINA GOSPUR, KHURJA JEWAR ROAD, KHURJA,	640. KULDEEP MOTORS PVT LTD (SGNA-SG-01), KHASRA NO. 1457, NAGAR PALIKA CHATRA, MAINPURI, 205001
598. ARBIT AUTOMOBILES PVT LTD (72NB-SHK-02), AARAZI NO -395 & 395 SINDHUAPUR TEHSIL GOLA DIST GORAKHPUR	613. MOTORCRAFT SALES PVT LTD (59NB-T2-02), D-40, SITE IV, GREATER NOIDA (U.P.)		MATHURA
BIJNOR			

641. UMA MOTORS PVT LTD (H8NA-H8-01), PLOT NO 222, MAHOLI, NEAR KIRAN HOSPITAL, MATHURA - 281004
PH :9987359999.

MEERUT

642. RADHAGOVIND WHEELS INDIA PRIVATE LIMITED (48NC-48-S1) - 0

643. TR SAWHNEY AUTOMOBILES PVT LTD (48NB-48-01), 1183/17 RITHANI, ZONE - A, SECTOR 4 NEAR PETROL PUMP, MEERUT, UTTAR PRADESH - 250103
PH :18002704142

644. TANYA AUTOMOBILES PVT LTD (48ND-48-01), KHASRA NO. 150, VILLAGE RALI CHAUHAN, MEERUT.

MIRZAPUR

645. VARANASI MOTORS PVT LTD (6KNA-6K-01), PURJAGIR, MIRZAPUR BHADOHI ROAD, MIRZAPUR

MODINAGAR

646. SNV AUTOMOBILES PVT LTD (M7NA-M7-01), KHASRA ANO- 564, SIKARI KALAN, MEERUT ROAD, MODINAGAR - 201204

MORADABAD

647. AKANKSHA AUTOMOBILES PVT LTD (B4NA-B4-01), RTO ROAD, LAKRI FAZALPUR, NEAR RAJAN OVERSEAS, MORADABAD - 244001

648. AKANKSHA AUTOMOBILES PVT LTD (B4NA-B4-S1) - 0

NAUGARH

649. SMARTWHEELS (QGNA-QG-01), GATA NO. 110, 111, 112 & 113, GRAM-PIPAR, POST- CHAURI MAHULANI, NEAR PAKDI CHAURAH, TEHSIL-NAUGARH DIST. SIDDHARTH NAGAR, UTTAR PRADESH, 272153 - 272153

NOIDA

650. FAIR DEAL PREMIUM WHEELS PRIVATE LIMITED (A1ND-A1-01), A-107, SECTOR-5. NOIDA - 201301

651. MOTORCRAFT SALES PVT LTD (59NB-59-01), C 42 SECTOR 57, NOIDA, UTTAR PRADESH - 201301

652. VIPUL MOTORS PVT LTD (A1NB-A1-S1) - 0

653. VIPUL MOTORS PVT LTD (A1NB-A1-01), C1 SECTOR 57, NOIDA - 201301 - 201301

654. MAGIC AUTO PVT LTD (A UNIT OF MAGIC LEASING & FINANCE PVT LTD) (A1NE-A1-01), B-51, HOSEIERY COMPLEX, NOIDA (U.P.) - 110025

PRATAPGARH

655. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (NKNA-NK-01), GATA NO 287, VILLAGE GOPALPUR, SADAR, PRATAPGARH, UTTAR PRADESH.

PRAYAGRAJ

656. SARASWATI (29ND-29-01), KHASRA NO. 638, ANDHAWA, TEHSIL PHOOLPUR, PRAYAGRAJ.

RAEBARELI

657. KTL AUTOMOBILE PVT LTD (HSNA-HS-01), 1481, NEAR KATHWARA BUS STAND, LUCKNOW
RAIBARELI HIGHWAY, HARCHANDPUR, RAIBARELI - 229303
PH :7311190503.

RAMPUR

658. AKANKSHA AUTOMOBILES PVT LTD (6LNA-6L-01), PLOT NO 95, ADJACENT HONDA BIKE SHOWROOM, VILLAGE- TASHKA, NEAR RAMPUR HOSPITAL, NAINITAL ROAD, RAMPUR, UTTAR PRADESH

SAHARANPUR

659. TANYA AUTOMOBILES PVT LTD (S2NA-S2-01), OPP. PHULWARI GARDEN, DELHI ROAD, SAHARANPUR PIN - 247001 - 247001

SAHIBABAD

660. MSM (JJ IMPEX) (M983-M9-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NUMBER 58/4, SITE 4, SAHIBABAD INDUSTRIAL AREA - 201010
PH :9711474930.

SHAHJAHANPUR

661. SUMITRA DS MOTORS PVT LTD (W2NA-W2-01), SH25, RETI ROAD SHAHJAHANPUR

SIKANDRABAD

662. SKUNIVERSE AUTOMOBILE PVT LTD (CWQN-CWQ-01), 2328, OPP. AGRASEN INTER COLLEGE, DANKAUR ROAD, SIKANDRABAD, DIST.-BULANDSHAHR (UTTAR PRADESH). - 203205

SITAPUR

663. CONCEPT CARS LIMITED (6MNA-6M-01), PLOT NO 279, CANIT STATION

SRINAGAR (UK)

664. SHAKUMBARI AUTOWHEELS PVT LTD (ANAN-AN-01), KHATA NO 26/339, KHET NO 221, KATULASYUN, SRINAGAR, PAURI

VARANASI

665. AGR AUTOMOBILES PVT LTD (84NA-84-01), ARAZI NO - 285,286 LUCCHERPUR, PARGANA-ATHGAWA TEHSIL, HARIHUA, VARANASI - 221105

666. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (84NB-84-01), HARDATTIPUR, MOHANSARAI, VARANASI-ALLAHABAD ROAD, VARANASI - 221001

UTTARAKHAND

DEHRADUN

667. ROHAN MOTORS LTD (57NA-57-S1) - 0

668. SHAKUMBARI AUTOWHEELS PVT LTD (57ND-57-01), KHASRA NO.-15-ANA, MOHABBEWALA, SAHARANPUR ROAD, DEHRADUN-248001 - 248001

669. SHAKUMBARI AUTOWHEELS PVT LTD (57ND-57-S1) - 0

670. TANYA AUTOMOBILES PVT LTD (57NF-57-01), MOHBEWALA CHOWK, SAHARANPUR ROAD, DEHRADUN PIN 248002 - 248002

671. PREM MOTORS (57NG-57-S1)

HALDWANI

672. NAINITAL MOTORS PVT LTD (J6NA-J6-01), 5TH KM RAMPUR ROAD, JEETPUR NEGI, NEAR AMAR UJALA PRINTING PRESS, HALDWANI, UTTARAKHAND - 263139

RAJASAMAND

673. TECHNOY MOTORS INDIA PVT LTD (X2NA-X2-S1)

RISHIKESH

674. SHAKUMBARI AUTOMOBILES (AASN-AAS-01), GURUDEV PLAZA, 279/1, HARIDWAR ROAD, OPPOSITE GOVERNMENT P.G. COLLEGE, RISHIKESH, DISTRICT DEHRADUN

ROORKEE

675. SHAKUMBARI AUTOWHEELS PVT LTD (H2NA-H2-01), 5 KM MILESTONE NH-58 ROORKEE-DELHI ROAD, NEAR HOTEL GODWARI,ROORKEE, UTTARAKHAND - 247667

RUDRAPUR

676. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (U4NB-U4-01), KASHIPUR ROAD, OPPOSITE GREEN PARK COLONY, VILLAGE DIBDIBA, TEHSIL BILASPUR, RAMPUR, UTTARAKHAND - 244901

VIKASNAGAR

677. ROHAN MOTORS LTD (RINA-RI-01), KHASRA NO 5587, C/O BHARAT NEGI, NEAR SVM INTER COLLEGE, BABU GHAR, VIKASNAGAR, DEHRADUN WARD NO 6, UTTARAKHAND

UTTRAKHAND

RUDRAPRAYAG

678. ROHAN MOTORS (IKNA-IK-01), KHASRA NO. 149, 150, 151, KHATA NO. 7, RAINOLI PUNAR, NEAR BATALION 10 HOTEL, BADRINATH ROAD, RUDRAPRAYAG

ASANSOL

679. BEEKAY AUTO PVT LTD (F6NA-F6-01), NH-2 ,CHANDA MORE ,POST KALI PAHARDI, JAMMURIA DISTRICT WEST BARDHAMAN - 713339
PH :9932049425.

BANKURA

680. BHANDARI AUTOMOBILES PVT LTD (G7NA-GQ-02), VILLAGE KAMRAR MATH , CINEMA ROAD , MOUZA BIKNA

COOCHBEHAR

681. SEVOKO MOTORS PVT LTD (BWZN-BWZ-01), NEXA COOCH BEHAR CENTRAL VILL & P.O. - MAHISHBATHAN P.S. - KOTWALI, NH - 31 COOCHBEHAR,W.B. - 734617 - 734617

DARJEELING

682. BEEKAY AUTO (6UNA-6U-01), BATASIA HILL CART ROAD, PO GHOOM, PS - JOREBUNGLOW, DARJEELING - 734102 WEST BENGAL - 734102

GANGTOK

683. ENTEL AUTOS (B9NA-B9-S1)

HOWRAH

684. MACHINO TECHNO SALES LTD (X7NA-X7-01), 109, 1, UPPER FORESHORE RD, CHOURA BUSTEE, SHIBPUR, HOWRAH, WEST BENGAL 711102 - 711102
PH :9830081632.

JALPAIGURI

685. PODDAR CAR WORLD PVT LTD (XYNA-XY-01), ASSAM MORE BUS STOP, SH12A, JALPAIGURI, WEST BENGAL 735102 - 735102
PH :8945533002.

JHARGRAM

686. BHANDARI AUTOMOBILES PVT LTD (BUGN-BUG-01), PLOT NO 200, KHAITAN NO 502 JL NO 370, MOUZA - JHAMDA PS JHARGRAM, DIST - JHARGRAM - WEST BENGAL

KHARAGPUR

687. BHANDARI AUTOMOBILES PVT LTD (G7NA-G7-01), CHOWRANGEE, PLOT NO-138 & 139, O T ROAD, KHARAGPUR - 721301
PH :7603076061.

KOLKATA

688. JYOTE MOTORS (BENGAL) PVT LTD (06ND-06-01), MIRANIA ROAD, ARUPOTA ON BASANTI HIGHWAY, - 700105
PH :9074158220.

689. MACHINO TECHNO SALES LTD (06NG-06-01), 98/A/2 BT ROAD,P.S - BARANAGAR, P.O. - ISI BT ROAD, KOLKATA, WEST BENGAL - 700090.

690. PREMIER CARWORLD PVT LTD (06NB-06-C1), PLOT NO 123,MICHAEL NAGAR, BESIDE NATIONAL MODEL HIGH SCHOOL, NEAR HP GYANI PETROL PUMP, KOLKATA , WEST BENGAL - 700133 - 700133

691. DEWARS GARAGE LIMITED (06NH-6-01), 1696/A,
LASKARAHAT, NAZIRABAD, P.S. - SONARPUR,
KOLKATA - 700150 - 700150

692. ONE AUTO (06NI-06-01), LR DAG NO
273,274,275,276 JL NO 20, RS NO 36 LR
KHAITAN NO 217, PS THAKURPUKUR DIST -
SOUTH 24 PARGANAS PIN 700104 - 700104

KOLKATA (TARATALA)

693. BHANDARI AUTOMOBILES (06NA-06-01), 1/NEW,
TARATALA ROAD, KOLKATA, WEST BENGAL -
700088

RANAGHAT

694. STARBUST MOTORS PVT LTD (BBTN-BBW-02),
NH 34 RANAGHAT, NEAR BEGOPARA,
CATHOLIC CHURCH NADIA WEST BENGAL -
741232 - 741232

SILIGURI

695. SEVOKE MOTORS PVT LTD (43NA-43-01), WARD
NO 42, 3RD MILE, NEXA, SEVOKE RD, NEAR
SONA PETROL PUMP, CHAYAN PARA,
SALUGARA, SILIGURI, WEST BENGAL - 734008

SREERAMPORE

696. STARBUST MOTORS PVT LTD (BBTN-BBT-01),
NEAR ALLAHABAD BANK, MOLLARBER,
SERAMPORE.

ANDAMAN AND NICOBAR ISLANDS

DIGLIPUR

1. AGENCY HOUSE (A & N ISLANDS) PVT LTD (-0B), MADHUPUR VILLAGE, TEHSIL DIGLIPUR, NORTH ANDAMAN - 744202

PORT BLAIR

2. AGENCY HOUSE (A & N ISLANDS) PVT LTD (-01), GARACHRAMA, PORT BLAIR - 744105
3. AGENCY HOUSE (A & N ISLANDS) PVT LTD (-04), NAYAGEN, PORTBLAIR - 744101

RANGAT

4. AGENCY HOUSE (A & N ISLANDS) PVT LTD (-03), NIMBUTULLA, PO RANGAT, DIST. MIDDLE ANDMAN, - 744201
PH :211546.

ANDHRA PRADESH

ADONI

5. MSA MOTORS (-01), BESIDE HP GAS YEMMIGANUR ROAD ADONI - 518301

AMALAPURAM

6. SB MOTOR CORPORATION (-01), #241/2B, BESIDE: BAPUJI PRIMARY SCHOOL, MAIN ROAD, OPP. RRR NAGAR, BANDARULANKA, AMALAPURAM, EAST GODAVARI (DIST) - 533201
PH :8374303303.

AMARAVATI

7. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO. 29, TOWNSHIP-16, SECTOR-137, COLONY-539, BLOCK-2029, PLOT NO. 1, SUB-DIVISION-L40, MALKAPURAM LIMITS, MANDAL - THULLURU, AMARAVATI-CITY, DIST. -GUNTUR, ANDHRA PRADESH. - 522237

ANAKAPALLE

8. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO.822/1 & 2, NH-5 ROAD, ANAKAPALLE, DISTT. VISHAKHAPATNAM. - 531001
PH :7093575555.

ANANTAPUR

9. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO 146-3, SRI NAGAR COLONY, ANANTAPUR, ANDHRA PRADESH
10. NIVYA AUTOMOBILES PRIVATE LIMITED (-01), NH 44 RAJEEV COLONY NEAR SILPARAMAM - 515001

ANNAVARAM

11. VARUN MOTORS PVT LTD (-01), DO-NO : 5/116, SURVEY NO - 59, CHALAMAYYA NAGAR, RAILWAY STATION ROAD, NEAR SMP BAJAJ SHOWROOM, ANNAVARAM, EAST GODAVARI DISTRICT, ANDHRA PRADESH. - 533406
PH :9885288339.

ARAKU

12. VARUN MOTORS PVT LTD (-01), SURVEY NO 33-9/A, RAVULAGADDA VILLAGE, BESIDE GOVT DEGGRE COLLEGE, ARAKU, VISHAKHAPATNAM, ANDHRAPR ADESH - 531151
PH :9885317344.

ATMAKUR

13. BHARGAVI AUTOMOBILES PVT LTD (-01), D.NO. 524, NELLORE PALEM, ATMAKUR, BESIDE HERO SHOWROOM, KURNOL - 524322

BHIANSA

14. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO 448A/1, BASAR ROAD, BHAINSA, NIRMAL DISTRICT, TELANGANA - 504103
PH :8886092222.

BHIMAVARAM

15. NOVELTY REDDY AND REDDY MOTORS PVT LTD (-01), NEAR BYEPASS ROAD, UNDI ROAD, BHIMAVARAM - 534202
PH :7799771177.

BOBBILI

16. VARUN MOTORS PVT LTD (-01), D. NO. 4-64, SURVEY NO. 219/8, VILLAGE - MALLAMAPETA, BESIDE GROWTH CENTRE, BOBBILI, DISTRICT - VIZIANAGARAM, ANDHRA PRADESH. - 535558

CHANDRAGUNDA

17. VARUN MOTORS PVT LTD (-01), CHANDRUGONDA GRAM PANCHAYAT RECORD SURVEY NO. 81/4, OPP.SAI KRISHNA PETROL BUNK - 507166

CHEPURAPALLI

18. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), 4-284, CHEEUPRAPALLI, VIZIANAGARAM, ANDHRA PRADESH

CHILKALURIPET

19. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), M/S JAYALAKSHMI AUTO, SURVEY NO 457/C3, CHILKALURIPET, NADENLA MANDAL, GUNTUR, ANDHRA PRADESH - 522616
PH :9899144344.

CHINTALAPUDI

20. REDDY & REDDY MOTORS (-01), RS NO.698/2, MARUTTI NAGAR COURT CENTRE, ELURU-CHINTALAPUDI HIGHWAY, CHINTALAPUDI MANDAL, ANDHRA PRADESH - 534460

CHIRALA

21. JAYALAKSHMI AUTOMOTIVES PVT LTD (-04), 9-1-92, CHURCH ROAD, CHIRALA, - 523157
PH :7331151661.

CHITTOOR

22. BHARGAVI AUTOMOBILES PVT LTD (-03), 22-241/A, KATTAMANCHI TIRUPATI ROAD, CHITTOOR, - 517001
PH :8463955558.

CHODAVARAM

23. VARUN MOTORS PVT LTD (-01), SURVEY NO: 108-2-A, 108-3-A & 108-4, GOVCHODAVARAM, DIST. VISHAKHAPATNAM, - 531036
PH :9885317344.

CUDDAPAH

24. MSA MOTORS (-03), K.T. BYE PASS ROAD, CUDDAPPAAH, ANDHRA PRADESH. - 516001
PH :7396685628.

DARSI

25. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO 1025/1, DARSI, PRAKASHAM DISTRICT, ANDHRA PRADESH - 523247

DHARMAVARAM

26. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), BESIDE SIVALAYAM TEMPLE, B.C. COLONY, POTHIKUNTA, DHARMAVARAM - 515671

DRAKSHARAMMAM

27. VARUN MOTORS PVT LTD (-01), D.NO.19-2-9/1, PITTAVARI STREET , DRAKSHARAMAM, RAMACHANDRAPURAM MANDAL, EAST GODAVARI DISTRICT , ANDHRA PRADESH- - 533255

ELURU

28. REDDY & REDDY MOTORS (-01), OLD NH-5 ROAD, BESIDES C R REDDY WOMEN'S COLLEGE OLD NH-5, ELURU, - 534001
PH :9705311566.

GAJAPATINAGARAM

29. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO 50-14, D.NO 3-1/C, BONDAPALLI MANDALAM, GAJAPATHINAGARAM, ANDHRA PRADESH. - 535270
PH :9100818111.

GAMBHEERAM

30. JAYABHERI AUTOMOTIVES PRIVATE LTD (-02), PLOT NO. 40-45 & 48, GREEN INDUSTRIAL PARK, GAMBHERAM, ANANDPURAM, VISHAKHAPATNAM. - 530052
PH :9642496789.

GAMPALAGUDEM

31. VARUN MOTORS PVT LTD (-01), R.S.NO. 11/2A, AT PEDAKOMIRA PANCHAYAT, THIRUVURU SUB DIVISION, GAMPALAGUDEM MANDAL, N.T.R DISTRICT - 521403

GIDDALURU

32. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), S NO 716, BESIDE PADMAVATI GARDENS, GIDDALUR - 523357

GUDIVADA

33. VARUN MOTORS PVT LTD (2603-02), D NO. 1-621, AUTONAGER 1ST LANE, GUDIVADA - 521301
PH :9885651383.

GUDUR

34. BHARGAVI AUTOMOBILES PVT LTD (-01), SURVEY NO.1619/3A, GUDUR BYPASS, GUDUR RURAL, GUDUR DISTT. NELLORE, A.P. - 524101
PH :9652984999.

GUNTUR

35. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), D-N-8-24-31, MANGALAGIRI ROAD, GUNTUR - 522001
36. JAYALAKSHMI AUTOMOTIVES PVT LTD (-05), AT 1-14-114, OPP. HINDU COLLEGE, BANDLAMUDI GARDENS, AMARAVATI ROAD, GUNTUR-522003, AP - 522203
37. JAYALAKSHMI AUTOMOTIVES PVT LTD (-06), SURVEY NO 509, D.NO 25-11-50 TOWN, WARD NO 22, OPPOSITE ITC BUILDING, R AGRAHARAM, NAGARAPALAM ROAD, GUNTUR, - 522004
PH :8374847777.
38. VARUN MOTORS PVT LTD (-01), DOOR NO. 25-16-176, IN D.NO. 169/C1 & 2, ANKIREDDYPALEM, GUNTUR CHIALAKALURIPET R - 522007

HANUMAN JUNCTION

39. SANTOSH AUTOMOTORS PVT LTD (-01), SY NO. 569/1 BESIDES NH5, VELURU VILLAGE, BAPULAPADU MANDAL, HANUMAN JUNCTION KRISHNA DISTRICT PIN 521105 - 521115
PH :9703633755.

HINDUPUR

40. JAYALAKSHMI AUTOMOTIVES PVT LTD (3602-36-01), PLOT NO.83, BYPASS ROAD, BESIDE AR HOSPITAL, C COLONY, CHAITANYANAGAR, HINDUPUR - 515201

ICHAPURAM

41. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO. 105/3 , 105/4 AND 2297, ICHAPURAM, BALAKRISHNAPURAM PANCHAYAT, MUNIBHADRA VILLAGE, ANDHRA PRADESH. - 532312

JAGGAIAHPETA

42. VARUN MOTORS PVT LTD (2603-05), DOOR NO. 2-20, MUTHYALAMMA GUDI STREET JAGGAIAHPET TOWN, JAGGAIAHPET, KRISHNA DISTT. - 521175

JAGGAMPET

43. SB MOTOR CORPORATION (-01), M/S D.NO 10-37, JAGGAMPETA, EAST GODAVARI DISTRICT, ANDHRA PRADESH - 533435 PH :8886677759.
- JAMMALAMADUGU
44. ADARSHA AUTOMOTIVES PVT LTD (-01), 21/570/A, TADIPATRI ROAD, JAMMALAMADUGU, KADAPA - 516434
- JANGAREDDYGUDEM
45. REDDY & REDDY MOTORS (-02), NEAR R&B GUEST HOUSE, ELURU ROAD, JANGAREDDYGUDEM, - 534447 PH :9912563666.
- K. KOTAPUDU
46. VARUN MOTORS PVT LTD (-01), NEAR SAMPATH MOTORS, S.H. 142,K.KOTAPADU (VILLAGE & MANDAL),VISAKHAPATNAM - DIST. PIN- 531034 A.P - 531034
- KAIKALURU
47. SANTOSH AUTOMOTORS PVT LTD (-01), SY. NO. 127/7 89, OPP. NAIDU COMPLEX, AATAPAKA, KAIKALURU MANDAL, DIST. KRISHNA - 521333
- KAKINADA
48. SB MOTOR CORPORATION (-01), D. NO. 52-10-36/3, NEAR AMAR GHATI CENTER, KARAPA ROAD, KAKINADA - 533001 PH :9885119888.
- KALYANADURGAM
49. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO. 328-B, DODAGATTA ROAD, NEAR NAGULA DHINNE, KALYANADURGAM - 515761
- KANCHIKACHERLA
50. VARUN MOTORS PVT LTD (-01), SURVEY NO. 510/5, DOOR NO. 13-144, 146, 13TH WARD, KANCHIKACHERLA VILLAGE AND MANDAL, KRISHNA DIST., ANDHRA PRADESH. - 521180
- KANDUKURU
51. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO. 414, MAHADEVAPURAM VILLAGE, O. V. ROAD, KANDUKURU MANDAL, DISTRICT - PRAKASHAM, ANDHRA PRADESH. - 523105
- KANIGIRI
52. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO 793, PLOT NO 11,12 , KANIGIRI, PRAKASHAM DISTRICT, ANDHRA PRADESH - 523230
- KAVALI
53. BHARGAVI AUTOMOBILES PVT LTD (-05), OPP. VENKATESWAR SWAMI TEMPLE, AUTO NAGAR MAIN ROAD KAVALI, DISTT. NELLORE - 524201 PH :9248702567.

- KHAMMAM
54. VARUN MOTORS PVT LTD (2603-09), D.NO-15-19-48/3, PLOT NO.119, KHANAPURAM INDUSTRIAL AREA - 521108
- KORUKONDA
55. VARUN MOTORS PVT LTD (-01), D. NO:1-220, NEAR INDIAN OIL PETROL BUNK, JUMBUPATNAM KORUKONDA, EAST GODAVARI- 533289. - 533289
- KURNOOL
56. MSA MOTORS (-01), AUTO NAGAR, INDUSTRIAL ESTATE, NH-7, KURNOOL - 518004 PH :9912826662.
57. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO 105, DINNEDEVARAPADU VILLAGE, KURNOOL, ANDHRA PRADESH - 518001 PH :9160182222.
- KURUPUM
58. VARUN MOTORS PVT LTD (-01), SY. NO: 76/2B1, RAVADA ROAD, KURUPAM - 535524
- MACHERLA
59. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), D.NO. 343/7, 343/5-3, 15-2-3, MACHERLA, MACHERLA MUNICIPALITY. - 522426
- MADANAPALLI
60. BHARGAVI AUTOMOBILES PVT LTD (-01), SURVEY NO.762, BASIKONDA VILLAGE, MADANAPALLI, CHITTOOR DISTT. ANDHRA PRADESH - 524101 PH :9959893434.
- MADHURAWADA
61. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SY. NO. 180/2B, PARADESIPALEM, MADHURAWADA, ANDHRA PRADESH - 530048 PH :8886669985.
- MAKPIPURAM
62. VARUN MOTORS PVT LTD (-01), SURVEY NO 49/6A, MALKIPURAM VILLAGE AND MANDAL, EAST GODAVARI DISTRICT, ANDHRA PRADESH - 533250 PH :9885317344.
- MANDAPETA
63. SB MOTOR CORPORATION (-01), BLOCK NO. 4, D. NO. 4-1-64, MANDAPETA, DISTRICT - EAST GODAVARI, ANDHRA PRADESH. - 533308 PH :8886664090.
- MARKHAPURAM
64. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), D. NO 4/515, RAILWAY STATION ROAD, MARKAPURAM, DIST: PRAKASHAM, ANDHRA PRADESH-523316 - 523316

- MOVVA
65. VARUN MOTORS PVT LTD (-01), D NO-4-64, KODALI ROAD, MOVVA POST AND MANDAL, KRISHNA DISTRICT, ANDHRA PRADESH-521135 - 521135
- MYLAVARAM
66. VARUN MOTORS PVT LTD (-01), D. NO. 2-176/2, MAIN ROAD, MYLAVARAM, KRISHNA DISTRICT, PIN-521230, ANDHRA PRADESH - 521230
- NAGARI
67. VISHNU CARS PVT LTD (-01), SURVEY NO 213/5, 1A& 1B, BALAJI GOLDEN CITY, NAGARI, DIST- CHITTOOR, ANDHRA PRADESH - 517590
- NAIDUPET
68. SB MOTOR CORPORATION (-01), M/S SURVEY NO 11-2, JUVALAPALEM VILLAGE, NAIDUPETA, ANDHRA PRADESH STATE: - 524126 PH :9248747777.
- NAKKAPALLI
69. VARUN MOTORS PVT LTD (-01), SURVEY NO 202/3, 203/4, PEDGUMMULURU GRAM PANCHAYAT, RAYAVARAM MANDAL, NAKKAPALLI, VISAKHAPATNAM, ANDHRA PRADESH - 531081 PH :9885317344.
- NANDIGAMA
70. VARUN MOTORS PVT LTD (-01), RE SURVEY NO. 8011/1B, NH-9 ROAD, NANDIGAMA, DIST. -KRISHNA, ANDHRA PRADESH. - 521185
- NANDYAL
71. MSA MOTORS (-01), SURVEY NO. 333, VUDUMALPURAM, MANDAL - NANDYAL, OPP. AUTO NAGAR, NANDYAL, DISTRICT - KURNOOL - 518501 PH :9490666616.
- NARASARAO PET
72. JAYALAKSHMI AUTOMOTIVES PVT LTD (-03), P.NO 267/A1, CHILAKALURIPETA ROAD, NARSARAO PET, GUNTUR, ANDHRA PRADESH NEAR RELIANCE PETROL PUMP BUNK, VINUKONDA ROAD, NARASARAO PET, GUNTUR. - 522603
- NARSAPURAM
73. NOVELTY REDDY AND REDDY MOTORS PVT LTD (-01), SY NO. 98/7, NARSAPURAM, CHINCHINDA BYPASS ROAD, NARSAPURAM, PALAKOLU MANDAL, WEST GODAVARI DISTRICT, ANDHRA PRADESH - 534206 PH :9703900011.
- NARSIPATNAM

74. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), OPP. RDO BUNGLOW, BANK COLONY, VISAKHAPATNAM ROAD, NARSIPATNAM - 531116 PH :7702333513.
- NELLORE
75. BHARGAVI AUTOMOBILES PVT LTD (-01), D.NO.251/97 INDUSTRIAL ESTATE, A.K. NAGAR, P.B.NO.18, NELLORE(A.P.) - 524004 PH :9248742225.
76. BHARGAVI AUTOMOBILES PVT LTD (-04), A2, INDUSTRIAL ESTATE, A.K. NAGAR, NELLORE, - 524004 PH :9248727888.
77. VISHNU CARS PVT LTD (-01), FIELD NO. 628 /SURVEY NO. 877, 878/A/4 AND 883/A/1A, NELLORE BIT-II, BESIDES GSR GARDENS, BALAJI NAGAR, NH-16, NELLORE CITY. - 542002 PH :7337340778.
78. BHARGAVI AUTOMOBILES PVT LTD (-07), PLOT NO 11, WOOD COMPLEX, VEDAYAPALEM, NELLORE - 524004
- NIDDAVOHOLU
79. NOVELTY REDDY AND REDDY MOTORS PVT LTD (-01), D.NO 479/5, SAMIRAGUDEM, NIDDAVOLU, WEST GODAVARI, ANDHRA PRADESH - 534301
- NUZVID
80. VARUN MOTORS PVT LTD (2603-03), BESIDE R T C BUS DEPOT, OLD D M OFFICE, VIJAYAWADA ROAD, NIZVID - 521201
- ONGOLE
81. JAYALAKSHMI AUTOMOTIVES PVT LTD (-02), THROVAGUNTA COMPANY CENTRE, NH-5, GUNTUR ROAD, ONGOLE, PRAKASHAM DISTRICT. - 523003 PH :9701055955.
- PADERU
82. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), DOOR NO.5-73, BESIDE MODHAKONDAMMA TEMPLE, NEAR OLD BUS STAND, G. MADUGULA ROAD - 524341
- PALAKONDA
83. VARUN MOTORS PVT LTD (-01), SURVEY NO. 8, ANAVARAM GRAMAM, PALAKONDA, SRIKAKULAM DISTRICT, ANDHRA PRADESH. - 532440
- PALASA
84. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO. 63 OF VILLAGE - PURUSHOTTAPURAM, PALASA MANDAL, KASIBUGGA MUNICIPALITY, DISTRICT - SRIKAKULAM, ANDHRA PRADESH. - 532221
- PALMANERU

Dealer Workshop (AS ON 31.01.2026)

85. VISHNU CARS PVT LTD (-01), SURVEY NO. 184/3, PALAMANERU VILLAGE, GANGAVARAM MANDALAM, DIST. CHITTOR, PIN-517408, ANDHRA PRADESH - 517408 PARVATHIPURAM	96. SB MOTOR CORPORATION (-01), OPP.FCI GOWDOWN,JAILROAD,LALACHERUVJI,RAJAMU NDRY - 533101 97. SB MOTOR CORPORATION (-03), D. NO. 3-243, NH-5, ROAD, HUKUMPETA, RAJAHMUNDURY. - 533107	SRIKAKULAM 107. VARUN MOTORS PVT LTD (4603-09), PEDDA PADDU ROAD,ARASAVILLI (P.O.),SRIKAKULAM, - 532001 PH :9985477155.	117. BHARGAVI AUTOMOBILES PVT LTD (-06), DOOR NO: 22-9-57/5G, REVENUE WARD NO-22, THIMMINAIDU PALEM, RENIGUNTA ROAD, TIRUPATI - 517501 - 517501 PH :7997969919.
86. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SY.NO. 195-1A, NEAR TBR THEATRE, NARSIPURAM, PARVATHIPURAM MANDAL, DISTRICT - VIZIANAGARAM, ANDHRA PRADESH, PINCODE - 535522 - 535522 PH :9100818111.	98. VARUN MOTORS PVT LTD (-01), SURVEY NO. 660, PALACHERLA VILLAGE OF RANJANAGRAM MANDAL, RAJAHMUNDURY, EAST GODAVARI DSIT. - 533102 PH:9642225289.	108. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606-04), SURVEY NO 22/2P, 22/8 AND SURVEY NO 29/12, 16, 17, BALAGA RURAL, SRIKAKULAM CITY, DISTRICT: SRIKAKULAM - 532001 PH :9100818111.	118. VISHNU CARS PVT LTD (-01), SURVEY NO. 192/3A2A, 200' CHENNAI - TIRUPATI HIGHWAY, KOTRAMANGALAM, RENIGUNTA MANDAL, TIRUPATI - 517520 PH :9154971551.
PATHAPATNAM	RAJAM	SULURUPETA	TIRUVURU
87. VARUN MOTORS PVT LTD (-01), D.NO 4-245, SURVEY NO 264/1A, PATHAPATNAM, SRIKAKULAM, ANDHRA PRADESH - 532213 PH :9885317344.	99. VARUN MOTORS PVT LTD (-01), SURVEY NO 44, SARATHI VILLAGE, RAJAM, SRIKAKULAM, ANDHRA PRADESH. PLOT NO. 44, SARATHI NAGAR, RAJAMNAGAR PANCHAYAT, RAJAM, DISTRICT - SRIKAKULAM, ANDHRA PRADESH - 532127 PH :7799666998.	109. BHARGAVI AUTOMOBILES PVT LTD (-01), S.K.S KALYANA MANDAPAM, OPPOSITE KOTAPOLLUR RD, SULLURUPETA 524121 - 524121	119. SANTOSH AUTOMOTORS PVT LTD (-01), D. NO. 23-1/5, OPP. AYYAPA SWAMY TEMPLE, MAIN ROAD, TIRUVURU. - 521235
PEDDAPURAM	RAMPACHODAVARAM	TADA	TUNI
88. VARUN MOTORS PVT LTD (-01), S. NO: 19-1-4122, SUDHA COLONY, REVENUE WARD NO-15, PEDDAPURAM- 533 437. KAKINADA DIST. A.P. - 533437	100. VARUN MOTORS PVT LTD (-01), SURVEY NO 14/1, IRLAPALLY VILLAGE, RAMPACHODAVARAM, ANDHRA PRADESH - 533288 PH :9885288339.	110. VISHNU CARS PVT LTD (-01), SURVEY NO 58/3, TADA, NELLORE DISTRICT - 524401 PH :9840434242.	120. SB MOTOR CORPORATION (-01), D. NO. 65-31-15/1, OPP. FCI GODOWNS, NARAYANAPURAM, TUNI, EAST GODAVARI, ANDHRA PRADESH - 533401 PH :7661893888.
PENDURTHI	RAYACHOTY	TANUKU	VENKATAGIRIKOTA
89. VARUN MOTORS PVT LTD (-01), SURVEY NO. 107/1B, VELAMPETA, ANAKAPALLI TO PENDURTHI HIGHWAY, NEAR BRIDGE, PENDURTHI DISTT: VISAKAPATNAM - 530047 PH :9885438455.	101. ADARSHA AUTOMOTIVES PVT LTD (-01), #38/105-8-8, CHITTOOR ROAD, REVENUE WARD NO 88, RAYACHOTY - 516269	111. NOVELTY REDDY AND REDDY MOTORS PVT LTD (-01), NH-5 ROAD, NEAR WOMEN'S COLLEGE, BESIDE IOC PETROL PUMP, TANUKU, DISTT: WEST GODAVARI (ANDHRA PRADESH) - 534211 PH :9912341624.	121. BHARGAVI AUTOMOBILES PVT LTD (-01), M/S BHARGAVI AUTOMOBILES, BESIDE INDIAL OIL BUNK, GMR FUNTION HALL, DARASALLA, PALLIKUPPAM, KUPPAM ROAD, V KOTA - 517242
90. VARUN MOTORS PVT LTD (-02), SURVEY NO 240/1,2 & 241, PENDURTHI, VIZAG - 531173 PH :9703843737.	REPALLE	TATIPAKA	VENKATAPIGIRI
PIDUGURALLA	102. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), D.NO 430, BESIDE ESAR PETROL BUNK, REPALLE, DISTRICT: GUNTUR, ANDHRA PRADESH - 522265 PH :8374847777.	112. VARUN MOTORS PVT LTD (-01), D-2-96/2, NAGARAM VILLAGE, TATIPAKA, EAST GODAVARI DT, ANDHRA PRADESH -	122. BHARGAVI AUTOMOBILES PVT LTD (-01), SURVEY NO 166, 169/1, 169/2, RTC COLONY, VENKATAGIRI, NELLORE, ANDHRA PRADESH - 524132 PH :9248747777.
91. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO. 897/16, PIDUGURALLA, DISTRICT - GUNTUR, ANDHRA PRADESH. - 522413	S KOTA	TEKKALI	VIJAYAWADA
PITHAPURAM	103. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO 113/3, MALLIPUDI MADHURA VENKATARAMANAPETA, SRUNGAVARAPUKOTA, VIZIANAGARAM, ANDHRA PRADESH - 535145 PH :9100818111.	113. VARUN MOTORS PVT LTD (-01), SURVEY NO 497-4, RAGHUNADHAPURAM, TEKKALI MAIN RD, TEKKALI, ANDHRA PRADESH - 532201	123. VARUN MOTORS PVT LTD (2603-26-01), 48-17-4/1, RING ROAD, VIJAYAWADA - 520008 PH :9885576602.
92. SB MOTOR CORPORATION (-01), NO. 11-2-114, 11TH WARD, KAKINADA-KATHIPUDI ROAD, PITHAPURAM, EAST GODAVRI DIST., ANDHRA PRADESH. - 533450	SALUR	TENALI	124. VARUN MOTORS PVT LTD (2603-26-06), SURVEY NO.561/1, 562/5 & 561/3, 562/6 KESARAPALLY, VIJAYAWADA, KRISHNA DISTRICT, A.P. - 521102 PH :8297241177.
PONNUR	104. VARUN MOTORS PVT LTD (-01), D. NO:139, NH-43, KOTTAKKI (VIL), RAMABADRA PURAM, SALUR-535579, MANYAM - 535579	THAGARAPUVALASA	125. SANTOSH AUTOMOTORS PVT LTD (2607-01), SURVEY NO. 223/5, D. NO. 11-61/2, KANURU PANCHAYAT, PENAMALURU MANDAL, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH - 520010
93. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), PLOT NO. 4, D.NO. 213-1, VAISHNAVI NAGAR, PONNUR, GUNTUR, ANDHRA PRADESH. - 522124	SHAHABAD	115. VARUN MOTORS PVT LTD (-01), SURVEY NO. 11/2B, 11/3, NAGARAMPALEM VILLAGE, NH-16, NAGARAMPALEM GRAMA PANCHAYAT LIMITS, THAGARAPUVALASA, BHEEMUNIPATNAM MANDAL, VISHAKAPATNAM. - 531162	126. VARUN MOTORS PVT LTD (2603-07), DOOR NO. 1-4-208 AND 1-4-208(1), IN R.S. NO. 33/3A, BHAVANIPURAM, VIJAYAWADA, MUNICIPAL CORPORATION, VIJAYAWADA, ANDHRA PRADESH. - 520012 PH :9642225291.
PRODUTHUR	105. GEM MOTORS (INDIA) PVT LTD (-01), SURVEY NO 467/1, SHABAD, RANGA REDDY - 509217	TIRUPATI	127. SANTOSH AUTOMOTORS PVT LTD (-02), D. NO. 77-42-16A, OPP. NUNNA FIRE STATION, PRAKASH NAGAR, INNER RING ROAD, VIJAYAWADA - 520015 PH :7997987932.
94. ADARSHA AUTOMOTIVES PVT LTD (-02), 11/301, BESIDE-DMART MYDURUR ROAD - 516360	SOMPETA	116. BHARGAVI AUTOMOBILES PVT LTD (-02), 11/66/1, TIRUPATI RENIGUNTA ROAD, TIRUPATI, - 517507 PH :7997969946.	
PUSAPTIRAGA	106. VARUN MOTORS PVT LTD (-01), KHATA NO 406, 407, 408 DENOTED IN SURVEY NO 241/1, MOGILIKOTURU VILLAGE, SOMPETA, SRIKAKULAM, ANDHRA PRADESH - 532284		
95. VARUN MOTORS PVT LTD (4603-11), SY. NO: 16/21, CHODAMMA AGRAHARAM - 535002 RAJAHMUNDRY			

128. VARUN MOTORS PVT LTD (2603-26-08), SURVEY NO 207/7, 207/8B2, 207/15B, D-NO 8-103, NEAR SHIVALAYAM TEMPLE, ENIKEPADU, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH - 521108
PH :9885576602.
- VIJAYAWADA**
129. JAYABHERI AUTOMOTIVES PVT LTD ((-05), D.NO.40/17-192/1H, LABBIPET, VIJAYAWADA - 520002
- VINUKONDA**
130. JAYALAKSHMI AUTOMOTIVES PVT LTD ((-01), SURVEY NO 239/3A,237/3, VINUKONDA, PALNADU DISTRICT, ANDHRA PRADESH - 522647
PH :8374847777.
- VISHAKHAPATNAM**
131. VARUN MOTORS PVT LTD (4603-46-0E), PLOT NO 88,BESIDES POLICE STATION,SRINAGAR,GAJUWAKA - 530026
PH :9703843737.
132. VARUN MOTORS PVT LTD (4603-46-08), DOOR NO. 58/2,BLOCK NO. 5,BALAJI NAGAR, OPP. ANDHRA UNIVERSITY, SIRIPURAM - 580003
133. VARUN MOTORS PVT LTD (4603-46-0F), D-25, INDUSTRIAL ESTATE, MARRIPALLEM, BESIDES COLA MANCHU KONDA GARDENS, VISAKHAPATNAM., - 530007
PH :8885511911.
134. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606-46-01), PLOT NO. A-9, INDUSTRIAL ESTATE, VISHAKHAPATNAM, ANDHRA PRADESH - 530018
PH :8886332209.
135. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606-02), D.NO:51-17-2, NH-5, KRANTHINAGAR, VISAKHAPATNAM,(ANDHRA PRADESH). - 530013
136. VARUN MOTORS PVT LTD (4607-46-01), S. NO. 8, KAPPARADA VILLAGE, BESIDE IOCL PETROL BUNK, MANCHUKONDA GARDENS, MURALI NAGAR, NATIONAL HIGHWAY, VISHAKHAPATNAM. - 530007
PH :7799124243.
137. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606-03), SURVEY NO. 119/6, KURMANNAPALEM, GAJUWAKA MANDAL, VIZAG, ANDHRA PRADESH. - 530046
PH :8897541234.
138. VARUN MOTORS PVT LTD (4603--0K), SURVEY NO. 394 & 395, PLOT NO. 7 AT VILLAGE - DUPPITURU, MANDAL - ACHUTAPURAM, DISTRICT - VISHAKHAPATNAM, ANDHRA PRADESH. - 531011
PH :9966877133.

139. VARUN MOTORS PVT LTD (4603-46-0L), SURVEY NO. 408/1 OF MADHURAWADA VILLAGE, RUSHIKONDA ITI SEZ, VISHAKHAPATNAM RURAL MANDAL, VISHAKHAPATNAM DISTRICT, ANDHRA PRADESH. - 530045
PH :9885315344.
140. VARUN MOTORS PVT LTD (4603-46-1B), SURVEY NO. 2/A, SECTOR XI, MVP COLONY, VISHAKHAPATNAM. - 530017
141. VARUN MOTORS PVT LTD (4603-46-10), SURVEY NO 228/224, WARD NO 19, AGNAMPUDI,VIZAG - 533053
PH :9885317344.
142. VARUN MOTORS PVT LTD (4603-46-13), D.NO: 3-83, NH-16 ROAD, BESIDE ARCHIAN GRANITES, YENDADA - 530045
- VISSANNAPETA**
143. VARUN MOTORS PVT LTD ((-01), RS NO. 434/10, WARD NO. 10, VISSANNAPETA, KRISHNA DISTRICT, ANDHRA PRADESH - 521215
PH :9885576602.
- VIZIANAGARAM**
144. VARUN MOTORS PVT LTD (4603--0C), OPPOSITE SUN SCHOOL, 100 FEET RING ROAD, VIZIANAGARAM, VIZIANAGARAM - 535001
PH :8886721213.
145. JAYABHERI AUTOMOTIVES PRIVATE LTD ((-01), SY NO: 108/12B & 109/2A, PLOT NO B2, B3 & B4, VT AGRAHARAM, VIZIANAGARAM, 535004 - 535001
PH :7702333514.
- YANAM**
146. SB MOTOR CORPORATION ((-01), SURVEY NO 82-2,TALLAREVU MANDAL,YANAM, EAST GODAVARI DISTRICT - 533463
PH :8886677759.
- YELAMANCHILI**
147. JAYABHERI AUTOMOTIVES PRIVATE LTD ((-01), SURVEY NO. 19-1, 2, 3, 45/1, 45/2&3, KOKIRAPALLI, YELAMANCHILI, NARSIPATNAM, VIZAG DIST., ANDHRA PRADESH. - 531055
- YELESWARAM**
148. VARUN MOTORS PVT LTD ((-01), VARUN MOTORS P LTD.DC-NO - 2-4-41,BESIDE GOLLAJI GARU BUNK,YERRAVARAM ROAD,YELESWARAM - 533429 - 533429
PH :8885511911.
- ARUNACHAL PRADESH**
- BHALUKPONG**
149. D Y MOTORS ((-01), NEAR SBI UPPER MARKET, BHALUKPONG, WEST KAMENG , ARUNACHAL PRADESH - 790114
PH :8415075164.

ITANAGAR

150. D Y MOTORS (-75-01), LPC NO - DC/ICC/LPC, BORUM VILLAGE, PO/PS- NAHARLAGUN, PAPUM PARE DIST, ARUNACHAL PRADESH - 791100
PH :8415075164.

NAMSAI

151. D Y MOTORS ((-01), 2 MILES, NH 52, NH15, NAMSAL, ARUNACHAL PRADESH 792103 - 792103

PASSIGHAT

152. D Y MOTORS ((-01), OPPOSITE TO DANGARIA MANDIR NANAGHAT PASIGHAT - 791102

ROING

153. D Y MOTORS ((-01), P.O/P.S-RAYAND, ROING ROAD,ROING, 792110, ARUNACHAL PRADESH - 792110

RUKSIN

154. D Y MOTORS ((-01), RUKSIN IN EAST SIANG DISTRICT, ARUNACHAL PRADESH - 787060
PH :8415075164.

ASSAM

BADARPUR

155. JAIN UDYOG ((-01), NH-37,SILCHAR KARIMGANJ ROAD,PO UMARPUR,PART-1,BADARPUR, - 788803

BAGHA BAZAR

156. JAIN UDYOG ((-01), OPPOSITE TOBAM IDDGHAH, VILL BONGRAM,BAGHA BAZAR - 788120

BAHARI

157. PODDAR CAR WORLD PVT LTD ((-01), DAG NO 738, 739, UNDER MOUZA CHENGA, BARPETA DISTRICT - 781302

BAIHATA CHARIALI

158. PALLAVI MOTORS PVT LTD ((-01), DAG NO. 1042, PATTAN NO. 17, MOUZA - BORBANKHAR, P.S. - BAIHATA CHARIALI, DISTRICT - KAMRUP, ASSAM - 781381
PH :9864052488.

BANGALIPARA

159. MITTAL AUTOZONE ((-01), BANGALIPARA, BANGALI PARA, - 781364

BARAMA

160. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) ((-01), VILLAGE - BARJAR, PO & PS - BARAMA, ASSAM -781346 - 781346
PH :8638487401.

BARPETA

161. BHARATI MOTORS PVT LTD ((-02), SIMULGURI,NH-31,DISTRICT-BARPETA, ASSAM - 781313
PH :7002819523.
162. PODDAR CAR WORLD PVT LTD ((-01), WARD NO. 1, BILHORTARIHATI, NEAR EMPLOYEE EXCHANGE OFFICE., BARPETA TOWN, PH-781301, ASSAM, - 781301

BIJOYNAGAR

163. PODDAR CAR WORLD PVT LTD ((-01), AT/PO - BIJOYNAGAR, INDIAN OIL PETROL PUMP, KAMRUP DIST, BIJOYNAGAR - 781125
PH :9864209733.

BISWANATH CHAIRALI

164. RAMLAL DURGADUTT MOTORS PVT LTD ((-01), DAG NO- 7,8,9 PERIODIC PATTAN NO - 24, REVENUE VILLAGE, BRAHMAPUTRA CHAPORI, MOUZA - BAGHMORA - 784176
PH :8724087940.

BOKAKHAT

165. RAMLAL DURGADUTT MOTORS PVT LTD ((-01), NORA GAON ROAD, BENGENAKHOWA, ASSAM 785601 - 785601

BONGAIGAON

166. BHARATI MOTORS PVT LTD ((-01), CHAPAGURI ROAD, BONGAIGAON - 783830

CHAMATA

167. PALLAVI MOTORS PVT LTD ((-01), DAG NO.1137, PATTAN NO.376, MOUZA - DAHRAMPUR, CHAMATA DISTT. NALBARI, ASSAM - 781306

CHAYGAON

168. PALLAVI MOTORS PVT LTD ((-01), CHAYGAON OUGURI CHOWIK, NEAR BHARAT PETROL PUMP - 443301

DAYANGMUKH

169. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) ((-01), KHERONI,DAYANMUKH,DIST WEST KARBI ANGLONG - 782448

DHEKIAJULI

170. RAMLAL DURGADUTT MOTORS PVT LTD ((-01), DAG NO.242, K.P. PATTAN NO.88, VILLAGE-BHAKUMARI, MOUZA-BORCHOLA, BESIDES-NH15, DHEKIAJULI, DISTT. SONITPUR, ASSAM. - 784110
PH :9706568722.

DHEMAJI

171. SAKIA AUTO PVT LTD ((-02), NALANIPAM KONCH GAON,NH-52,DHEMAJI (ASSAM) - 787057
PH :8638725209.

DHING

Dealer Workshop (AS ON 31.01.2026)

172. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), DHING TOWN, MOIZABARI ROAD - 782123

DIBRUGARH

173. JAYBEE AUTO AGENCIES PVT LTD (-01), CHIRING CHAPARI, T.R. PHUKAN ROAD, P.O. DIBRUGARH (ASSAM) - 786001 PH :9954799273.

174. BIMAL AUTO AGENCY (-01), DAG NO. 104, GHARBANDICHUK JARUA GAON, MOUZA - MANKHATTA KANIKA, DIST.-DIBRUGARH, ASSAM. - 786004

DIGBOI

175. VISHAL CAR WORLD PVT LTD (-01), BORBIL NO. 1, NEAR LIONS CLUB, NH-38, P.O. - DIGBOI, DISTRICT - TINSUKIA, ASSAM. - 786171

DIMA KUCHI

176. PALLAVI MOTORS PVT LTD (-01), DIMAKUCHI TOWN, DIMAKUCHI UDALGURI ROAD, NEAR SBI DIMAKUCHI BRANCH, DIST.-UDALGURI - 781352

DIPHU

177. RAMLAL DURGADUTT MOTORS PVT LTD (-01), MANJA ROAD, DILLAJI, DIPHU, KARBI ANGLONG, ASSAM - - 782460 PH :9707556868.

DOBOKA

178. RAMLAL DURGADUTT MOTORS PVT LTD (-01), WARD NO. 4 DABOKA TOWN - 782440

DULIAJAN

179. JAYBEE AUTO AGENCIES PVT LTD (-01), JAYBEE AUTO AGENCIES, TIPLING TINIALI, DULIAJAN DIST. DIBRUGARH - 786602 PH :7002722358.

GOALPARA

180. BHARATI MOTORS PVT LTD (-01), P.O. KALYANPUR, VILLAGE: SOLMARI, P/S: AGIA, NH: 37, DISTRICT: GOALPARA, ASSAM - 781301 PH :9101940372.

GOLAGHAT

181. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO. - 718, 684 & 706, PATTI NO 213, NEAR & 192, KURUKA GAON, P.O - MORANGI, P.S - GOLAGHAT, DIST: GOLAGHAT, ASSAM PIN-785702 - 785702 PH :7002099547.

GORAIMARI

182. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), DAG NO- 3, KP PATTI NO - 11, VILLAGE- CHALABASTI, MOUZA- GORAIMARI - 783390 PH :7002729100.

GUWAHATI

183. BIMAL AUTO AGENCY (-01), JHALUKBARI, GUWAHATI. - 781014

184. PALLAVI MOTORS PVT LTD (-01), DAG NO. 1&2 NEXT TO DEPTT. OF FAMILY WELFARE, SIX MILE. KHANAPARA G.S. ROAD, GUWAHATI - 781022

185. PODDAR CAR WORLD PVT LTD (-01), HENGARABARI, VIP ROAD, GUWAHATI - 781036

186. BIMAL AUTO AGENCY (-01), CHANDMARI, BAMUNI MAIDAN, OPP SBI NEW GUWAHATI BRANCH, GUWAHATI - 781021

187. BIMAL AUTO AGENCY (-02), BEHARBARI, BEHIND DHOOM RESTAURANT, NH-37, GUWAHATI - 781028

188. PODDAR CAR WORLD PVT LTD (-01), NH-37, NEAR, GORCHUK CHAIRALI, GUWAHATI (ASSAM). - 781029

189. BIMAL AUTO AGENCY (-03), BESIDE NRL PETROL PUMP, RGB ROAD, ZOO ROAD, GUWAHATI, ASSAM - 781005

190. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), NH-37, BELTOLA, NEAR HANUMAN KANTA, GUWAHATI - 781028

191. PALLAVI MOTORS PVT LTD (-02), DAG NO. 2201, PATTI NO. 237, VILLAGE - JYOTIKUCHI, MOUZA - BELTOLA, AK AZAD ROAD, GUWAHATI, DISTRICT - KAMRUP, ASSAM. - 781034

HOJAI

192. RAMLAL DURGADUTT MOTORS PVT LTD (-01), KHATIAN NO.: 312/3F, HOJAI MAIN ROAD, NEAR UCO BANK, SHANKARDEVNAGAR, HOJAI, DISTRICT - NAGAON, ASSAM - 782435 PH :7002680534.

HOWLY

193. PODDAR CAR WORLD PVT LTD (-01), PATTI NO. 601, DAG NO. 1567, HOWLI TOWN, MOUZA GHILAJARI, DISTT BARBETA, ASSAM - 781316 PH :8085957586.

HOWRAGHAT

194. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), HOWRAGHAT TOWN, KARBI ANGLONG, ASSAM - 782481 - 782481 PH :9864191169.

JAGIROAD

195. RAMLAL DURGADUTT MOTORS PVT LTD (-02), JAGIROAD, MORIGAON, NALAO, ASSAM - 782410 PH :9365884355.

JORHAT

196. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO. 7 & 8 OF P.P NO. 33, DAG O. 9 OF P.P NO. 61, DAG NO. 382 OF P.P NO. 206, VILLAGE - PAKIMURI HABIGAON, MOUZA - SARAIBAHAL, JORHAT - 785006

197. JAINCO AUTOTECH PVT LTD (-01), AT ROAD, SEUNI ALI, JORHAT, ASSAM 785001 - 785001 PH :9287957451.

KALGACHIA

198. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), VILL - KALGACHIA, PO - KALGACHIA, DIST BARPETA - 781319 PH :8638487401.

KALIABOR

199. RAMLAL DURGADUTT MOTORS PVT LTD (-01), MADHAB GAON., PO-KUWARITOL, PS.KALIABOR, - 782137

KAMPUR

200. RAMLAL DURGADUTT MOTORS PVT LTD (-01), VILL KAMPUR, PANCHINI JAR, PO KAMPUR, DIST NAGAON, PIN 782426 - 782426

KARIMGANJ

201. JAIN UDYOG (6901-04), STEAMER GHAT ROAD, KARIMGANJ, ASSAM - 788710 PH :9435179025.

KAYAKUCHI

202. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), KAYAKUCHI, BARPETA, ASSAM - 781352

KHARUPATIA

203. BIMAL AUTO AGENCY (-01), VILL -BOLOGARAH, P.O - KHARUPETIA, P.S DHULA, DIST - DARRANG, ASSAM. - 784115

KHATKHATI

204. PODDAR CAR WORLD PVT LTD (-01), NEAR TELEPHONE EXCHANGE, NH-39, KHATKHATI, DISTRICT - KARBI ANGLONG - 782460 PH :6000900381.

KOKRAJHAR

205. BHARATI MOTORS PVT LTD (-01), TITAGURI, AT-KOKRAJHAR, DIST-KOKRAJHAR - 783370

LANKA

206. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO 95 OF PP NO 59, DAG NO 96 OF PP NO 26 & DAG NO 418 OF PP NO 73 KISAM LAKHIMPUR, MOUZA - LANKA, DIST - HOJAI, ASSAM. - 782442 PH :9707556868.

MAJULI

207. RAMLAL DURGADUTT MOTORS PVT LTD (-01), PETROL PUMP, NEAR GARMUR, GARMUR, MAJULI, JORHAT, ASSAM 785104 - 785104

MANGALDOI

208. PODDAR CAR WORLD PVT LTD (-01), PUNIA, NH-52, MANGALDOI, DISTT. DARRANG - 784115 PH :9706970132.

MARGERITA

209. VISHAL CAR WORLD PVT LTD (-01), MARGERITA TOWN, BEHIND IOCL PETROL PUMP, NH-38, MARGERITA, ASSAM - 786181 PH :943586000.

MORIGAON

210. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO. 423 OF PP NO. 221, KISSAM BACHNAGHAT, MORIGAON, ASSAM. - 782105 PH :7002239592.

NAGARBERA

211. PALLAVI MOTORS PVT LTD (-01), NAGARBERA., DOKUCHI, KAMRUP, - 781127

NAGAON

212. RAMLAL DURGADUTT MOTORS PVT LTD (-01), KHUTIKHATIA, HAIBARGON, NAGAON - 782002 PH :9706007918.

213. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), DAG NO. 255, 1508(N)/254(O), 1509(N)/257(O) AND 291, PATTI NO. 506(N)/15(O), 507(N)/15(O), 507(N)/97(O) AND 98, VILLAGE - DEODHAR, MOUZA - PAKHIMORIA, DIST.-NAGAON. - 782002

214. RAMLAL DURGADUTT MOTORS PVT LTD (-03), PAKHIMURIA, NEAR BHUGDOI DHABA, NAGAON, ASSAM

215. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-02), BAJRANG CAR WORLD DIMORUGURI OPPOSITE KAPILI NURSING HOME DISTRICT NAGAON STATE ASSAM - 782003

NAHARKATIYA

216. JAYBEE AUTO AGENCIES PVT LTD (-03), NAHARKATIYA TOWN PART NO. 4, MOUZA - JAYPORE, NEAR ST. MARY'S SCHOOL, DISTRICT - DIBRUGARH, ASSAM - - 786610 PH :7002722358.

NALBARI

217. BIMAL AUTO AGENCY (9201-01), CHOWKBAZAR, NALBARI HAJO ROAD, NALBARI DIST. NALBARI - 781335 PH :7576842484.

NARAYANPUR

218. SAKIA AUTO PVT LTD (-01), WARD NO-2, P.O-DIKRONG BADULAHATI, NH-52, NARAYANPUR - 784164

NAZIRA

219. RAMLAL DURGADUTT MOTORS PVT LTD (-01), MAIN ROAD NAZIRA., NEAR NRL PETROL PUMP, PO/PS NAZIRA, - 785685

NORTH LAKHIMPUR

220. SAIKIA AUTO PVT LTD (-01), HATILUNG, NH-52 ROAD, NORTH LAKHIMPUR, ASSAM - 787031 PH :8473946336.
221. SAIKIA AUTO PVT LTD (-03), KHELMATI, WARD NO. 14, NH-52, NORTH LAKHIMPUR, ASSAM - 787001 PH :7002571073.

PATHSALA

222. PODDAR CAR WORLD PVT LTD (-01), DAG NO. 451, PATTI NO. 151 KMP, PATHSALA, DIST. -BARPETA, ASSAM. - 781325 PH :6009000256.

RAHA

223. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT. LTD.) (-01), RAHA TOWN, NH-37., NEAR TOLL GATE, - 782103

RAJGARH

224. JAYBEE FARM AGENCIES PVT LTD (-01), DAG NO.182, PP NO.140 OF 2 NO. BHAGATIA GAON, LAT NO.11, RAJGARH, MOUZA-TINKHONG, DISTT. DIBRUGARH, ASSAM - 786611 PH :9954799273.

RANGIA

225. PODDAR CAR WORLD PVT LTD (-01), RANGIA TOWN, WARD NO. 5, SHANTIPUR, BHUTAN ROAD, NEAR POLYCLINIC HOSPITAL, RANGIA DISTT. KAMRUP (ASSAM) - 781354 PH :8724877892.

SADIYA

226. VISHAL CAR WORLD PVT LTD (-01), 5 NO. SHANTIPUR, SADIYA, DIST. SADIYA, - 786155

SALBARI

227. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), K.C COMPLEX, SALBARI, P.O. ANANDA BAZAR, DIST. BAKSA - 781318

SARUPATHAR

228. JAINCO AUTOTECH PVT LTD (-01), WARD NO 1, PADUMONI, SARUPATHER, GOLAGHAT - 785601

SIBSAGAR

229. RAMLAL DURGADUTT MOTORS PVT LTD (-02), RANGHAR CHARIALI, DHAPROTA, AT ROAD, OPPOSITE RANGHAR, SHIVASAGAR - 785640
230. RAMLAL DURGADUTT MOTORS PVT LTD (-01), NO.1,CHAULKARA GAON,UNDER KONWAR,DIST: SIVASGAR - 785640

SILCHAR

231. JAIN UDYOG (#901-02), KAUSHAL COMPLEX, SONAI ROAD, SILCHAR, ASSAM - 788006 PH :9706002524.

SIMLA

232. PODDAR CAR WORLD PVT LTD (-01), VILL: HAZUA NEW COLONY, PO- KOKLABARI, PS- SIMLA, DISTRICT- BAKSA, ASSAM - 781330

SONAPUR

233. PODDAR CAR WORLD PVT LTD (-03), NEAR LUMSUM,N.C.SONARPUR,ASSAM,782401 - 782401

SONARI

234. JAINCO AUTOTECH PVT LTD (-01), BORAH CHARALI, WARD NO 12, SONARI, CHARAIDEO - 785690

SOOTEA

235. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), BIGHA NO 2, KATHA 10, KHERAJ MIYADI, REVENUE CIRCLE NO DUAR, SOOTEA - 784175

SORBHOG

236. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), VILLAGE DAHALAPARA, KISMAT DWARIKA, PS SORBHOG, SUB DIVISION- BARPETA- ASSAM. - 781317 PH :8011042222.

TANGLA

237. BIMAL AUTO AGENCY (-01), DAG NO :121, PATTI NO.101/320, VILLAGE BULLARPARA, MOUZA TANGLA. - 784521 PH :9954387619.

TENGAGHAT

238. BIMAL AUTO AGENCY (-01), NEAR INDIAN OIL PETROL PUMP., SH-23, TEHGAGHAT - 786103

TEZPUR

239. RAMLAL DURGADUTT MOTORS PVT LTD (-01), NEAR DON BASCO SCHOOL, P.O. NIKAMULSATRA, TEZPUR, ASSAM - 784154
240. RAMLAL DURGADUTT MOTORS PVT LTD (-02), GORAIMARI, VILLAGE - SOLGAON, TEZPUR, ASSAM. - 784001 PH :9836036157.

TINSUKIA

241. VISHAL CAR WORLD PVT LTD (-01), LAIPULY, A.T. ROAD, TINSUKIA, DIST - TINSUKIA, ASSAM - 786183 PH :9435860000.

TITABAR

242. JAINCO AUTOTECH PVT LTD (-01), PUBALI NAGAR, TITABOR - 785630

ARARIA

BIHAR

243. SEEMANCHAL MOTORS PVT LTD (-01), NEAR BUS STAND, JAGDISH RICE MILL COMPOUND, HOSPITAL ROAD, FORBESGANJ, DISTT. ARRRARIA, BIHAR - 854318 PH :8797096013.

ARRAH

244. PEARL CARS (A UNIT OF VINHYAVASINI AUTOMOBILES PVT LTD) (-01), (A UNIT OF VINHYAVASINI AUTOMOBILES PVT. LTD.), DHANUPRA, NEAR GANPAT CHOUDHARY DWAR, NH-30, ARRAH (BIHAR) - 802301 PH :8294634604.

AURANGABAD

245. KARLO AUTOMOBILES PVT LTD (-01), KARLO AUTOMOBILES PVT LTD, GT ROAD, NEAR, RAIPURA MORE, BABHANDI, AURANGABAD - 824101 PH :7019085212.

BANKA

246. SEEMANCHAL MOTORS PVT LTD (-01), KHATA NO. 134, KHESRA NO. 118, BEHIND MARUTI SHOWROOM, STATION ROAD, BANKA, BIHAR. - 813101 PH :8797096020.

BEGUSARAI

247. GS MOTORS PVT LTD (-01), HARHAR MAHADEV CHOWK, NH 31, BEGUSARAI, BIHAR - 851101 PH :924756206.

BETTIAH

248. SHREE GOPAL AUTO PVT LTD (-01), BEETIAH - MOTIHARI HIGHWAY, NH-28 B, NEAR MACHALI LOK, BEETIAH (BIHAR). - 845438 PH :9771486183.

BHAGALPUR

249. SEEMANCHAL MOTORS PVT LTD (-01), BAUSI ROAD, ALIGANJ, NEAR SAINT TRESA SCHOOL, ALIGANJ, BHAGALPUR. - 812005 PH :8797096020.

BHITA

250. REESHAV AUTOMOBILES PVT LTD (-01), PLOT NO 1674 & 1676, KHATA NO - 19 & 67 AT MOUZA - MAHADEOPUR PHULARI, P.O - BIHTA, P.S- BIHTA, DISTRICT - PATNA - 801103 PH :7763954585.

BIHARSHARIF

251. REESHAV AUTOMOBILES PVT LTD (-03), PATNA RANCHI ROAD, NR GAGAN DIWAN SOGARA SCHOOL, THANA-LAHERI MURARPUR, BIHARSHARIF, DISTRICT-NALANDA, BIHAR - 803101 PH :9263632175.

BUXAR

252. PEARL CARS (A UNIT OF VINHYAVASINI AUTOMOBILES PVT LTD) (-01), C/O DEVDHITRA UPDDHYA, SYNDICATE, BYE PASS ROAD, BUXAR - 802101

CHAKIA

253. RAMKRISHNA MOTORS PVT LTD (-01), OJHA TOLA, NEW BYPASS, CHAKIA-845412, PURVI CHAMPARAN DISTT., BIHAR - 845412 PH :9801773716.

CHAPRA

254. REESHAV AUTOMOBILES PVT LTD (-02), 146, PLOT NO. 381, VILLAGE RAUJA, CHAPRA PATNA ROAD, NEAR BHIKHARI CHOWK, CHAPRA, BIHAR - 841301 PH :7061295296.

DANAPUR

255. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-02), ADJASCENT ARYA SAMAJ MANDIR, NEAR SAGUNA MORE, DANAPUR - 800018 PH :9386898458.
256. ALANKAR AUTO SALES & SERVICE PVT LTD (-05), TOUZI NO. 5057, THANA NO. 35, MOUZA - BABAKKARPUR, DANAPUR, PATNA. - 801503 PH :9334415434.

DARBHANGA

257. RAJKRISHNA MOTORS LLP (-01), KHATA NO.61936, RAUSHAN CHOWK, BAJITPUR, B.M.P. -13, ROAD, DARBHANGA, BIHAR - 846009 PH :7004529271.
258. RAJKRISHNA MOTORS LLP (-02), VIP ROAD, ALLALPATTI, DARBHANGA (BIHAR) - 846003 PH :9693127351.

DEHRI ON SON

259. PEARL CARS (A UNIT OF VINHYAVASINI AUTOMOBILES PVT LTD) (-02), MOUZA - KHASRA, KHATA NO. 141, PLOT NO. 186, SAAT KATDA THANA - DEHRI-ONE-SONE, DIST. -ROHTAS, BIHAR. - 821307 PH :8294634602.

GAYA

260. KARLO AUTOMOBILES PVT LTD (-01), BODH GAYA, GAYA. - 824231
261. DMC CARS (A UNIT OF DHANRAJ AGENCIES PVT LTD) (-01), DHANRAJ AGENCIES PRIVATE LIMITED, MARUTI SUZUKI ARENA SHOWROOM, OPPOSITE AIRPORT RUNWAY, GAYA-DOBHI ROAD, GAYA, PIN 823004 - 823004

GOPALGANJ

262. SHREE GOPAL AUTO PVT LTD (-01), NH-28, DANAPUR, TEHSIL-MANJAGARH, GOPALGANJ (BIHAR) - 800023

HAJIPUR

Dealer Workshop (AS ON 31.01.2026)

263. REESHAV AUTOMOBILES PVT LTD (-01), KHATA 617 & KHASHRA 354/1605, NEAR RELIANCE PETROL PUMP, M G SETU ROAD, HAJIPUR (VAISHALI). - 844101
PH :960945038.

JEHANABAD

264. DMC CARS (A UNIT OF DHANRAJ AGENCIES PVT LTD) (-01), KHATA NO - 80, PLOT NO -1490, MOUZA - MUTHER, PS- JEHANABAD, DIST - JEHANABAD. - 804408

KATIHAH

265. SEEMANCHAL MOTORS PVT LTD (-01), NEAR SBP VIDIYA VIHAR SCHOOL, SIRSA, KATIHAH PURNEA ROAD, KATIHAH - 854105
PH :7762893700.

KISHANGANJ

266. SEEMANCHAL MOTORS PVT LTD (-01), PASCHIM PALI ROAD, COLLEGE ROAD, THANA-KNE, WARD NO.1, KISHANGANJ (BIHAR). - 855101
PH :8797096019.

LAKHISARAI

267. GS MOTORS PVT LTD (-01), TAUZI NO. 39, KHATA NO. 3, KHESSA NO. 496, MOUZA - JAINAGAR, ANCHAL - LAKHISARAI, DIST. -LAKHISARAI, BIHAR. - 811311
PH :9204756206.

MADHUBANI

268. RAJKRISHNA MOTORS LLP (-01), BHOWRA TOLA, BARDIBAN, MADHUBANI, BIHAR - 847211

MAHUA

269. REESHAV AUTOMOBILES PVT LTD (-01), MUZAFFARPUR-MAHUA ROAD,RASALPUR,HP PETROL PUMP, MADHAUL,MAHUA,VAISHALI,NEAR AKSHYAWAT COLLEGE - 844122

MOHANIA

270. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (-01), MOHANIA-BUXAR ROAD ,SH-14,MOHANIA - 821109

MOTIHARI

271. RAJIV AUTOMOBILES PVT LTD (-03), NEAR CHHATAUNI CHOWK, BESIDE NH 28 A, MOTIHARI TOWN , BIHAR - 845401
PH :9234609669.

MUZAFFARPUR

272. RAJIV AUTOMOBILES PVT LTD (-01), RANDAYALI NAGAR, PATNA HAZIPUR ROAD, MUZAFFARPUR, BIHAR - 842002
PH :910347908.

273. RAMKRISHNA MOTORS PVT LTD (-01), KRISHNA TALKIES CAMPUS, AKHARAGHAT ROAD, MUZAFFARPUR, BIHAR. - 842001

274. RAJIV AUTOMOBILES PVT LTD (-04), KHABRA POKHAR LANE NO -1, PANCHAYAT -KHABRA, CITY- MUZAFFARPUR - 843146
PH :9234609671.

NAUGACHIA

275. SEEMANCHAL MOTORS PVT LTD (-01), NEAR GAYATRI PLY ROOM, NH-31, NAUGACHIA MARKET, NAUGACHIA, DISTRICT - BHAGALPUR, BIHAR. - 853204

NAWADA

276. REESHAV AUTOMOBILES PVT LTD (-04), 191 & 400, KHSARA NO. 3105 & 3102, NEAR DM'S OFFICE, PATNA-RANCHI MAIN ROAD, NAWADA, BIHAR - 805110
PH :6206162228.

PATNA

277. KARLO AUTOMOBILES PVT LTD (1502-15-04), NEAR BATA GUNJ, DINGA PATNA, BIHAR. - 800013

278. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-03), PLOT NO.118-119, BEHIND DURGA MARINE DRIVE APARTMENTS, DIJURA DEVI STHAN, ASHOK RAJPATH, PATNA - 800001
PH :9934020200.

279. REESHAV AUTOMOBILES PVT LTD (1506-15-01), PLOT NO 25/1581 KHATA NO.494, MOUZA KUMHRAR, PARGANA AZEEMABAD, KANKARBAGH, PATNA - 800004
PH :7632995356.

280. KARLO AUTOMOBILES PVT LTD (1502-05), JAGDEOPATH , NEAR SAI CORPORATE PARK, PATNA - 801506
PH :9264190675.

281. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-15-06), ALANKAR COMPOUND, BESIDE ALANKAR SUN CITY, SANDALPUR, KUMHRAR, PATNA - 800006 - 800006
PH :9304403916.

282. ALANKAR AUTO SALES & SERVICE PVT LTD (-15-07), BASUDEB SADAN CAMPUS,SANDALPUR,PATNA - 800006

283. SHREE GOPAL AUTO PVT LTD (1507-15-01), KHAGAIL ROAD, OPP. KOTAK MAHINDRA BANK, DANAPUR, PATNA - 801503

284. HORIZON AUTOMOBILE PRIVATE LIMITED (1508-15-01), DHAWALPURA NAGAR,MAULI ROAD, ,PS-CHOWK,NEAR MURGI DANA FACTORY, - 800001

PURNEA

285. SEEMANCHAL MOTORS PVT LTD (-01), NH-31, NEAR MARKETING YARD, GULAB BAGH, PURNEA (BIHAR) - 854326
PH :8797096014.

RAXAUL

286. RAMKRISHNA MOTORS PVT LTD (-01), KAWRIHAR, TOLA - LAXAMIPUR, THANA NO -9, RAJUI NO - 951, THANA AND ANCHAL - TAJAUL, DIST - EAST CHAMPARAN , BIHAR. - 845305

ROSERA

287. RAJKRISHNA MOTORS LLP (-01), NAND CHOWK,JAIL ROAD, , WARD NO.17,ROSERA, BIHAR - 848210

SAHARSA

288. GS MOTORS PVT LTD (-02), PATUAHA, NH 107 SAHARSA,BIHAR - 852201
PH :9263638456.

SAMASTIPUR

289. RAJKRISHNA MOTORS LLP (-01), KHESSA NO. 3190-95, KHATA NO. 78, HERPUR ALLOTH, SAMASTIPUR, BIHAR. - 848101
PH :9204552405.

SASARAM

290. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (-01), PLOT NO.7, 9 & 11, NH-2 MORE SARAI, SASARAM (BIHAR) - 821115

SITAMARHI

291. RAJIV AUTOMOBILES PVT LTD (-01), DUMRA ROAD, SHANTI NAGAR, SITAMARHI. - 843301

SIWAN

292. SHREE GOPAL AUTO PVT LTD (-01), CHAPRA ROAD, NEAR CHAPDHALA, NH 85, SIWAN - 841236
PH :9771486132.

SUPAUL

293. GS MOTORS PVT LTD (-01), SISAUNI, ROAD, KISHANPUR WEST, BIHAR 852138 - 852138

CHANDIGARH

CHANDIGARH

294. MODERN AUTOMOBILES (-01), 4 M.W. INDL AREA, CHANDIGARH - 160002

295. AUTOPACE NETWORK PVT LTD (-01), PLOT #112-113, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002

296. TRICITY AUTOS (-02), PLOT NO 89, PHASE-1 INDUSTRIAL AREA, CHANDIGARH - 160002
PH :9988882335.

297. NAVDESH AUTOS LLP (-01), PLOT NO. 42, INDUSTRIAL AREA PHASE-1, CHANDIGARH. - 160002

CHHATTISGARH

AKALTARA

298. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (-01), SHOP NO 4,5,6,7 & 8, SHRI NARAYAN COMPLEX & GODOWN, NEAR INDRYA UDYAN,SHEORINARAYAN ROAD,AKALTARA-495552, CHHATTISGARH - 495552
PH :7987590484.

AMBAGARH CHOWKI

299. SPARSH AUTOMOBILES PVT LTD (-01), WARD NO.1, MOHALLA MANPUR BEHIND CRGB BANK,AMBAGARH CHOWKI, CHHATTISGARH - 491661

AMBIKAPUR

300. MAHAMAYA AUTOCARS PVT LTD (-01), MANEDRAGARH ROAD, AMBIKAPUR, CHATTISGARH. - 497001
PH :7987741432.

ARANG

301. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (-01), MAIN ROAD, IN FRONT OF BLOCK OFFICE, ARANG, CHHATTISGARH - 493441

BAGBAHARA

302. HDN MOTORS PVT LTD (-01), M/S HDN MOTORS, BESIDE R.N RICE MILL, NEW MAHAVEER COMPLEX, MAHASAMUND ROAD, BAGBAHARA - 493449
PH :7909800004.

BAIKUNTHPUR

303. MAHAMAYA AUTOCARS PVT LTD (-01), WARD NO.01, KHATA NO.91/6, TEHSIL - BAIKUNTHPUR, DISTT. - KORIYA, CHATTISGARH - 497335

BALOD

304. CHOUHAN AUTOMOBILES LLP (-01), H.NO 185, WARD NO 25, NAYA MARKET, DALLIRAJHARA, BALOD -491228 - 491228
PH :9837325267.

BALODA BAZAAR

305. SKY AUTOMOBILES (5001-04), AMBEDKAR CHOWK, RAIPUR ROAD, BALODA BAZAAR, CHATTISGARH. - 493332

BALRAMPUR

306. MAHAMAYA AUTOCARS PVT LTD (-01), NEAR REST HOUSE,, RAMANUJGANJ ROAD,BHANORA , - 497119

BASNA

307. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (-01), M/S VISHWABHARTHI AUTO, PADAMPUR ROAD, BASNOL, BASNA, CHHATTISGARH - 493554
PH :6262620060.

BEMETRA

308. CHOUHAN AUTOMOBILES LLP (-01), KHASRA NO. 88/2, CHOUHAN AUTOMOBILE LLP, KAWARDHA ROAD, NAVGHAD CHOWK, BEMTARA CHATTISGARH - 491335 PH :6262000222.	321. CHOUHAN AUTOMOBILES LLP (-01), H.NO 185, WARD NO 25, NAYA MARKET,DALLIRAJHARA,BALOD DISTRICT-491228 - 491228 PH :6262000222.	332. SATYA AUTO PRIVATE LIMITED (-01), NEAR KHOKSHA RAILWAY CROSSING, CHAMPA ROAD, NH-200, JANJGIR - 495668	343. SPARSH AUTOMOBILES PVT LTD (5002--02), BARONDA CHOWNK, BAGBAHRA ROAD, MAHASAMUND. - 493445
BHATAPARA	DANTEWADA	KANKER	MANENDRAGARH
309. SPARSH AUTOMOBILES PVT LTD (-01), RAIPUR ROAD, BHATAPARA (CHATTISGARH) - 493118	322. SKY AUTOMOBILES (-01), PATAR RAS MAIN ROAD,DANTEWADA,PIN-494440. - 494440	333. SKY AUTOMOBILES (5001--06), RAZA NAGAR, SINGARBHAT, NH-30, KANKER , DISTRICT - KANKER, CHHATTISGARH - 494334	344. MAHAMAYA AUTOCARS PVT LTD (-02), WARD NO.21, NH-43, AMBIKAPUR ROAD, NEAR HP PETROL PUMP, MANENDRAGARH, DISTT. KORIIYA - 497442
BHILAI	DEOBHOG	KATGHORA	MUNGELI
310. CHOUHAN AUTOMOBILES LLP (8305--01), PLOT NO.1 & 34, SHIVNATH COMPLEX, BEHIND CHOUHAN ESTATE, G.E. ROAD, SUPELA, BHILAI. - 490023	323. SPARSH AUTOMOBILES PVT LTD (-01), M/S SPARSH AUTOMOBILES PVT LTD SANTOSHI NAGAR,NEAR BHARAT PETROL PUMP, DHARAMGARH ROAD, DEOBHOG - 493890 - 493890 PH :9926626662.	334. SATYA AUTO PRIVATE LIMITED (-01), BILASPUR RD. KATGHORA, KORBA, CHATTISGARH - 495445	345. SATYA AUTO PRIVATE LIMITED (-01), KHASRA NO. 270/2, BILASPUR ROAD, MUNGELI, CHHATTISGARH - 861468
311. SPARSH AUTOMOBILES PVT LTD (-01), R-17, INDUSTRIAL AREA, NANDNI ROAD, CHHAWANI CHOWK, BHILAI, CHHATTISGARH - 490026	DHAMTARI	KAWARDHA	PANDARIYA
312. CHOUHAN AUTOMOBILES LLP (8305--02), NH-6, DURG BYPASS ROAD, KHASRA NO.1/14, 1/23, 1/192, VILLAGE-KATULBOD, BHILAI, TEHSIL & DISTT. DURG, BHILAI, CHHATTISGARH - 491001	324. SKY AUTOMOBILES (-01), KASRA NO.238/2, SEHARA DABRI, RAIPUR ROAD, DHAMTARI-493773 CHATTISGARH - 492009 PH :8889988612.	335. CHOUHAN AUTOMOBILES LLP (-01), KHASRA NO. 100/6, TALPUR BILASPUR ROAD, KAWARDHA, CHHATTISGARH. - 491995	346. CHOUHAN AUTOMOBILES LLP (-01), KHASRA NO. 24.7, KAWARDHA ROAD, NEAR INDIAN OIL, PANDARIYA, SINGARPUR, CHHATTISGARH - 491559
313. SPARSH AUTOMOBILES PVT LTD (8304-83-02), M/S. SPARSH AUTO,VEERSAVARKAR MARKET, G.E ROAD, SUPELA,BHILLAI-490023 - 490023 PH :9926626662.	DIPKA	KHAIRAGARH	PATHALGAON
BHUBAN	325. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (-01), NEAR GOVT COLLEGE ,JHABAR ROAD,DIPKA, KOBRA ,CHHATISGARH - 495452	336. SPARSH AUTOMOBILES PVT LTD (-01), KHAIRAGARH -JHALBANDHA ROAD,AMLIPARA, OPP - BIJALI OFFICE, KHAIRAGARH -491881 - 491881 PH :9926626662.	347. MAHAMAYA AUTOCARS PVT LTD (-01), KHASRA NO. 567/2, PHATALGAON, DISTRICT - JASPUR, CHHATTISGARH. - 496118
314. SKY AUTOMOBILES (-01), NH-53, BYPASS ROAD,, BHUBAN, DHENKANAL. - 759017	DONGARGARH	KHARSIA	PENDRA
BILASPUR-CG	326. SPARSH AUTOMOBILES PVT LTD (-01), M/S SPARSH AUTOMOBILES, ADARSH NAGAR, NEARTHANA CHOWK, DONGARGARH, DT:RAJNANDGAON, CHHATTISGARH - 491445 - 491445	337. SATYA AUTO PRIVATE LIMITED (-01), M/S SATYA AUTO , BESIDE GOVT HIGH SCHOOL, RANISAGAR, KHARSIA, DISTRICT: RAIGARH, CHHATTISGARH - 496661 PH :9993092051.	348. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (-01), - M SQUARE MOTORS, NEAR SEMRA CLOCK MAIN ROAD, PENDRA, GOURELA PENDRA MARWAHI-495119 - 495119 PH :7987590484.
315. SATYA AUTO PRIVATE LIMITED (-01), SECTOR C, PLOT NO. 42, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHATTISGARH - 495001	DURG	KONDAGAON	PITHORA
316. SATYA AUTO PRIVATE LIMITED (-02), PLOT NO. 848/20, 848/26, 848/40, MOPKA BYPASS ROAD, BILASPUR, CHHATTISGARH. - 495006 PH :9977879698.	327. SPARSH AUTOMOBILES PVT LTD (-01), OPP. JAINAM PLACE, BEFORE PULGAON CHOWK, PULGAON NAKA, DURG, CHHATTISGARH - 491001	338. SKY AUTOMOBILES (-01), - M/S SKY AUTO, NH-90 RAIPUR ROAD, NEAR INDIAN OIL PETROL PUMP, KONDAGAON, CHHATTISGARH - 494226 PH :9425204051.	349. SPARSH AUTOMOBILES PVT LTD (-01), PLOT NO. 284/1, RAMSAGAR PARA, RAIPUR ROAD, PITHORA, CHHATTISGARH. - 761008
317. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (-01), KHASRA NO. 420 AND 414/1, NEAR RELIANCE PETROLEUM PUMP, BESIDES TRANSPORT NAGAR GATE, RAIPUR ROAD, PARSADA, BILASPUR. - 495223 PH :6262622560.	GARIYABANDH	KORBA	RAIPUR
318. SATYA AUTO PRIVATE LIMITED (-03), WARD NO.1, BESIDES HERO SHOWROOM, MUNGELI ROAD, SAKRI, BILASPUR - 495001	329. SPARSH AUTOMOBILES PVT LTD (-01), NEAR HP PETROL PUMP, RAIPUR ROAD, GARIYABAND, CHHATTISGARH. - 756032	KURUD	350. SKY AUTOMOBILES (5001-50-01), G.E. ROAD, MOHABA BAZAR, RAIPUR. - 492010
CHARODA	GHARGHODA	LORMI	351. SKY AUTOMOBILES (5001-50-02), K.K. ROAD, MOUDHAPARA, RAIPUR. - 492001 PH :9584460290.
319. SPARSH AUTOMOBILES PVT LTD (-01), NH-6, OPP. RAIL NAGAR, CHARODA, BHILAI	330. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (-01), M/S M SQAURE,VILLAGE BHENGARI, NAVAPARA-TENDA,GHARGHODA,DISTRICT - RAIGARH CHHATTISGARH. PIN CODE: 496111 - 496111 PH :7987690484.	MAGARLAD	352. SPARSH AUTOMOBILES PVT LTD (5002-50-01), PACHPADI NAKA, OPP. DUTTA DRY CLEANER, DHAMKARI, JAGDALPUR ROAD, RAIPUR. - 492001
CHHURIIYA	JAGDALPUR	MAGARLAD	353. SKY AUTOMOBILES (5001-50-05), NEAR R.K. MALL, KOTA ROAD, RAIPUR - 492001 PH :9893000161.
320. SPARSH AUTOMOBILES PVT LTD (-01), NEAR CHURIYKALA BUS STAND ROAD, CHURIYA - 491558	331. SKY AUTOMOBILES (-01), GEEDAM ROAD, JAGDALPUR, CHATTISGARH. - 494001	342. SKY AUTOMOBILES (-01), WARD NO:14, SWANI VIVEKANAND NAGAR, PANDUKA ROAD, MATHURA NAGAR, MAGARLAD, DIST- DHAMTARI, CHATTISGARH - 493662	354. SKY AUTOMOBILES (5003-50-01), AVANTIVIHAR ROAD, TELEBANDHA, RAIPUR (C.G) - 492006 PH :9523214155.
DALLIRAJHARA	JANJGIR	MAHASAMUND	355. SPARSH AUTOMOBILES PVT LTD (-04), OPP. UNION BANK, MAIN ROAD, PANDRI, RAIPUR - 492004
			356. SPARSH AUTOMOBILES PVT LTD (5002-50-05), PLOT - 31, INDUSTRIAL ESTATE, OPP MAHESH COLD STORAGE, BHANPURI, RAIPUR - 494224

Dealer Workshop (AS ON 31.01.2026)

357. SKY AUTOMOBILES (5001-07), ADJOINING WOLFORTH CITY, BHATGAON, RING ROAD NO. 2, RAIPUR, CHHATTISGARH - 492013
358. HDN MOTORS PVT LTD (5005-50-01), BESIDES BHARAT BENZ SHOWROOM, DURG-BHILAI ROAD, TATIBANDH, RAIPUR, CHHATTISGARH. - 492001
359. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (5004-50-01), VIDHAN SABHA ROAD, MOVA, RAIPUR DISTT. CHHATTISGARH - 492005

RAJGARH

360. SATYA AUTO PRIVATE LIMITED (-01), JINDAL ROAD, RAIGARH - 496001

RAJIM

361. SPARSH AUTOMOBILES PVT LTD (5002-03), RAIPUR ROAD, NEAR AMMANI PETROL PUMP, NAYAPARA, RAJIM - 493881

RAJNANDGAON

362. SPARSH AUTOMOBILES PVT LTD (-01), NEAR HANUMAN TEMPLE, VILL-MANKI, NH-6, RAJNANDGAON, CHHATTISGARH - 491441

SAKTI

363. SATYA AUTO PRIVATE LIMITED (-01), NH-49, NANDAUR KHURD, MALDI, DIST. SAKTI, PIN-495689, CHHATTISGARH - 495689

SARAI PALI

364. SKY AUTOMOBILES (-01), KHASRA NO.482/5 AND 482/6, RAIPUR ROAD, SARAI PALI, DIST-MASAMUND, SARAI PALI - 493558

SARANGARH

365. SATYA AUTO PRIVATE LIMITED (-01), KASRA NO. 714, 73/2, 74/2, 75/1 AND 76/2, SARANGARH BIKAS KHAND, SARANGARH, DISTT. RAIGARH. - 733751

SHIVIRNARAYAN

366. SATYA AUTO PRIVATE LIMITED (-01), M/S SATYA AUTO,DEORI, SHIVIRNARAYA, JANJGIR - CHAMPA, CHATTISGARH - PIN 495556 - 495556 PH: 9993092051.

SIMGA

367. HDN MOTORS PVT LTD (-01), PLOT NO 2, WARD NUMBER 05, SHANKAR NAGAR, SIMGA, BALODA BAZAR, CHHATTISGARH - 493101 PH: 9826686000.

SURAJPUR

368. MAHAMAYA AUTOCARS PVT LTD (-01), NEARNAHMAHINDRA SHOWROOM ,CHANDAPUR ,CHATTISGARH - 497229

TILDA

369. SKY AUTOMOBILES (-01), KASRA NO. 29/31, TILDA, DIST.-RAIPUR, CHHATTISGARH. - 493114 PH: 9425204051.

DADRA AND NAGAR HAVELI

SILVASSA

370. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), NEAR ATHAL CHAR RASTA,DADAR & NAGAR HAVELI, SILVASSA - 396230 PH: 9723816223.

DAMAN AND DIU

DAMAN

371. KATARIA AUTOMOBILES PRIVATE LIMITED (-11), NEAR AKASWANI CENTER, RINGANWADA, NANI DAMAN , DAMAN UNION TERRITORY - 396210

DELHI

DELHI

372. SAYA AUTOMOBILES LTD (-03), A 21-22, G.T.KARNAL ROAD, NEW DELHI - 110033
373. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (-01), A-100 MAYAPURI,PHASE-II,NEW DELHI - 110064
374. COMPETENT AUTOMOBILES CO LTD (-03), PLOT NO.3,GAZIPUR,DELHI. - 110096
375. T R SAWHNEY MOTORS PVT LTD (-01), 33 & 34, HARICHAND MELARAM COMPLEX, EAST GOKULPUR, WAZIRABAD ROAD, DELHI - 110094
376. RANA MOTORS PVT LTD (-02), C-47,OKHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI - 110020
377. T R SAWHNEY MOTORS PVT LTD (-02), B-6 INDUSTRIAL AREA, PHASE I, OPP SECTOR 18, BADLI, NEW DELHI - 110042
378. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (-01), 5, WAZIRPUR,INDUSTRIAL AREA,ADJACENT TO WAZIRPUR DEPOT,RING ROAD, NEW DELHI - 110034
379. ROHAN MOTORS LTD (-01), F-9/B-1, MOHAN COOPERATIVE INDUSTRIAL ESTATE, MATHURA ROAD, DELHI - 110044
380. MAGIC AUTO PVT LTD (-01), A-93,PHASE-2,MAYAPURI INDL AREA,DELHI - 110064
381. PREM MOTORS PVT LTD (-01), KHASRA NO. 544/1, MUNDKA, NEW DELHI - 110041
382. T R SAWHNEY MOTORS PVT LTD (-04), PLOT NO.-508, FUNCTIONAL INDUSTRIAL ESTATE, PATPARGANJ - 110092
383. MAGIC AUTO PVT LTD (-01), PLOT NO. 68/3,MOTINAGAR,NEW DELHI. - 110015
384. SAYA AUTOMOBILES LTD (-2B), KHASRA NO.2,G.T. KARNAL ROAD,OPP. GURUDUARA HARGOVIND SINGH,SIRAS PUR BADLI,DELHI - 110033
385. COMPETENT AUTOMOBILES CO LTD (-06), 14, SHIVAJI MARG, NAGARGARH ROAD, NEW DELHI - 110015

386. RANA MOTORS PVT LTD (-04), B-6/6, OKHLA INDUSTRIAL AREA PHASE-II, NEW DELHI - 110020
387. PREM MOTORS PVT LTD (-01), KH. NO.804/2,MAHIPALPUR MATA CHOWK, DELHI - 110037
388. AAA VEHICLEADES PRIVATE LIMITED (-03), VILLAGE GHEVRA, KHASRA NO.87/3, 87/8 & 87/13/1, DELHI-ROHTAK ROAD, METRO PILLAR NO.616, MUNDKA, NEW DELHI - 110041 PH:9717092903.
389. RANA MOTORS PVT LTD (-05), A-8, RAJASTHANI UDYOG NAGAR, NEAR AZADPUR FRUIT MARKET, G.T. KARNAL ROAD, OPP. METRO PILLAR NO.119, DELHI. - 110033
390. T R SAWHNEY MOTORS PVT LTD (-01), B-19, MAYAPURI INDUSTRIAL AREA, PHASE-1, NEW DELHI. - 110064
391. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (-02), 9/55 KIRTI NAGAR, INDUSTRIAL AREA, NEW DELHI - 110015
392. MAGIC AUTO PVT LTD (-01), PLOT NO. 449 & 450, PATPARGANJ INDUSTRIAL AREA, NEW DELHI. - 110092
393. DO MOTORS (A DIVISION OF D.D. MOTORS MOBILITY) (-03), 85B RANAJI ENCLAVE, NAGLI SAKRAWATI, NAJAFGARH, NEW DELHI. - 110043
394. PREM MOTORS PVT LTD (-01), 36/22/2 AND 36/19, PANA UDHYAN, NARELA, NEW DELHI. - 110040
395. DO MOTORS(A DIVISION OF D.D. MOTORS MOBILITY (-01), 32/19, MATIALA, BEHIND DELHI PUBLIC SCHOOL, SECTOR-3, DWARKA, NEW DELHI. - 110059
396. FAIR DEAL WHEELS PVT LTD (-01), PLOT NO.25, KHATA KHATAUNI NO.97/98, KHASRA NO.48/17, OPP. BRAHMSHAKTI HOSPITAL, BUDH VIHAR, POOTH KALAN, MAIN KANJHAWALA ROAD, DELHI - 110086 PH:8448690737.
397. COMPETENT AUTOMOBILES CO LTD (-07), 23/2, MATIALA PHIRNI, POCKET C, SECTOR 3, DWARKA, DELHI. - 110059
398. AAA VEHICLEADES PRIVATE LIMITED (-01), B243, OKHLA PHASE-1, OKHLA, DELHI - 110020 PH:8448582912.
399. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (-05), A-90, WAZIRPUR INDUSTRIAL AREA, NEW DELHI-110052 - 110052 PH:9310367233.
400. JAGMOHAN AUTOMOTIVES PVT LTD (-01), PLOT NO. 69/2, WAZIRPUR INDUSTRIAL AREA, NEW DELHI, PIN-110052 - 110052 PH:9650790351.
401. RANA MOTORS PVT LTD (-08), B-83, GTK ROAD INDUSTRIAL AREA, DELHI. - 110033 PH:9289496300.

402. SHREYASH AUTOMOTIVES PVT LTD (-01), PLOT NO.2, SSI INDUSTRIAL ESTATE, GT KARNAL ROAD, NEW DELHI. - 110063 PH:43288888.
403. SHREYASH AUTOMOTIVES PVT LTD (-02), A-3, WAZIRPUR INDUSTRIAL AREA, DELHI. - 110052
404. VIPUL MOTORS PVT LTD (-01), B-26, JHILMIL INDUSTRIAL AREA, DELHI - 110095 - 110095 PH:9811233385.
405. COMPETENT AUTOMOBILES CO LTD (-08), 43/12, NAJAFGARH BAHUDURGARH ROAD, NEW ANAJ MANDI, NEAR JAAT BHAWAN, NAJAFGARH, PIN-110043, DELHI - 110043
406. PREM MOTORS PVT LTD (-02), GROUND FLOOR, PLOT NO. C-7, SMA CO-OPERATIVE INDUSTRIAL AREA, GTK ROAD, AZADPUR, PIN-110033, DELHI - 110033
407. SINGLA LINK AGENCY PVT LTD. (-01), 395 PATPAR GANJ INDL. AREA,PATPARGANJ,NEW DELHI - 110092
408. JAGMOHAN AUTOMOTIVES PVT LTD (-02), KH. NO. 26/34/7/8 REVENUE ESTATE NANGLI SAKRAWATI INDUSTRIAL AREA, DELHI-110043. - 110043
409. AAA VEHICLEADES PRIVATE LIMITED (-02), KH. NO. 32-33 VILLAGE SHAHOORPUR, SATBARI, NEAR FATEHPUR BERI, IN-FRONT SKY-MANSION TOWER, CHATTARPUR, PIN-110074, DELHI - 110074
410. FAIR DEAL WHEELS PVT LTD (-01), F-13, CHAND BAGH, MAIN WAZIRABAD ROAD, BHAJANPURA DELHI - 110053
411. SINGLA LINK AGENCY PVT LTD. (-02), E-26, B1 EXTENSION, MOHAN COOPERATIVE INDUSTRIAL AREA, MATHURA ROAD, NEW DELHI - 110044 - 110091

GOA

BICHOLIM

412. SAI SERVICE PRIVATE LIMITED (-01), CITY SURVEY NO. 46/1, MUSLIM WADDO, BICHOLIM, GOA - 403529

CANACONA

413. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), PLOT NO.40, CANCONA INDUSTRIAL ESTATE, SHREESTAL, CANCONA, SOUTH GOA - 403702

CUNCOLIM

414. SAI SERVICE PRIVATE LIMITED (3402-06), SURVEY NO.64/7, SHOP NO.3-A-II, CANCNA MODDI, CUNCOLIM, SOUTH GOA - 403703

DHARBANDORA

415. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-07), AT- KHANDEPAR- USGAON, TAL-DHARBANDORA, SOUTH GOA - 403401

GOA

416. SAI SERVICE PRIVATE LIMITED (3402-03), OFF PANJIM HIGHWAY, PONDA, GOA, - 403401
MAPUSA

417. SAI SERVICE PRIVATE LIMITED (3402-05), D-2/B, MAPUSA INDUSTRIAL ESTATE, MAPUSA, GOA, - 403507

418. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-03), PLOT NO. 19/20, THIVIM INDUSTRIAL ESTATE, KARASWADA, MAPUSA, GOA - 403507
MARGAO

419. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-01), OPP. DAMODAR TEMPLE, FATORDA, MARGOA, GOA - 403602

420. SAI POINT CARS PVT LTD (3409-01), H.NO.17, WARD NO.5, SURVEY NO.34/3, 34/4, MARGAON PONDA HIGHWAY, SONFATOR

421. AMBORA, CAMURLIN, SALTETE, GOA - 403722

421. SAI SERVICE PRIVATE LIMITED (3402-02), SURVEY NO. 212/4, VILLAGE - VERNA, TAL : SALTETE, NEXT TO AGNEL POLYTECHNIC, MARGAO - 403718

422. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-08), PLOT NO. M-58 AND M-59, PHASE 3B, VERNA INDUSTRIAL ESTATE, MARGAO, VERNA, SALTETE SOUTH GOA, GOA - 403722
PANAJI

423. SAI SERVICE PRIVATE LIMITED (3402-01), SURVEY NO: 36/1, PENHA DE FRANCE, TAL : BARDEZ, ALTO PCRVORIM, GOA - 403501

424. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-02), D.B BANDODKAR MARG, CAMPAL, PANAJI, GOA - 403001

425. SAI SERVICE PRIVATE LIMITED (3402-07), SHED NO.18/29, PLOT NO.5A, SURVEY NO.11/76, TELEIGAON, ST. INEZ, PANJIM, GOA-403 002 - 403001
PERNEM

426. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SURVEY NO. 258/1-B & 258/1-C, OPPOSITE INDUSTRIAL TRAINING INSTITUTE, TALUKA - PERNEM, DIST.-NORTH GOA. - 403512 PH :8380082893.

SANVORDEM

427. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SURVEY NO. 4, SUBDIVISION-3, VILLAGE - CACORA, TALUKA - CURCHOREM, SANVORDEM, DIST. - SOUTH GOA, GOA - 403706 PH :9850477607.

SATTARI

428. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-10), SURVEY NO. 60, SUB DIV NO. 05, VILLAGE ARVALEM, VILLAGE PANCHAYAT ARVALEM, TALUKA SATTARI, NORTH GOA, GOA - 403505 PH :9923464422.

TALEGAO

429. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-06), SURVEY NO. 122, MAHBOS, NEAR SHANKARWADI TEMPLE, SHANKARWADI, TALEGAON, - 403001

VASCO

430. SAI SERVICE PRIVATE LIMITED (3402-04), NEXT TO SHIKALIM CHURCH, SHIKALIM, VASCO, GOA - 403802

431. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-09), OPP BHRAMASTAL TEMPLE, PATRONG BAINA, VASCO, GOA - 403802
GUJARAT

AHMEDABAD

432. KIRAN MOTORS LIMITED (-01), SARKHEJ - GANDHINAGAR HIGHWAY, OPP. RAJUPATH CLUB, AHMEDABAD - 380054

433. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), D/8 BEHIND ESI HOSPITAL, OUTSIDE DARIAPUR DARWAJA, AHMEDABAD - 380016

434. POPULAR WHEELERS (INDIA) PVT LTD (-01), PATEL TRUST BUILDING, AVTAR HALL, NAROL, NARODA HIGHWAY, ISANPURA ROAD, AHMEDABAD - 382443

435. KIRAN MOTORS LIMITED (-02), BEHIND L&T GODOWN, SARKHEJ SANAND HIGHWAY, AHMEDABAD - 382210

436. KATARIA AUTOMOBILES PRIVATE LIMITED (-05), NEAR KOKHRA BRIDGE, MANINAGAR - 380008

437. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), BEHIND ADANAL PUMP, NEAR MAKARBA CROSSING, MAKARBA, SG HIGHWAY - 380051

438. POPULAR WHEELERS (INDIA) PVT LTD (-01), BESIDE SOLA ROAD BRIDGE, S. G. HIGHWAY SOLA, AHMEDABAD - 380054

439. KIRAN MOTORS LIMITED (-01), SURVEY NO. 82/1/1, NEAR H.P. PETROL PUMP, MOTERA ROAD, CHANDKHEDA, AHMEDABAD - 380005

440. UDAY AUTOLINK PVT LTD (-01), NEAR GALAXY SPACIA, OPP. DASTAN FARM, S. P. RING ROAD, KATHWADA, AHMEDABAD, GUJARAT - 382430

441. NANDA AUTOMOBILES PVT LTD (-01), SURVEY NO. 229/3, OPP. GOKULESH PETROL PUMP, NAROL - ASLALI ROAD, NAROL, AHMEDABAD, GUJARAT - 382405

442. STARLINE CARS PVT LTD (-01), PLOT NO. 103/2, NANDA CHILODA, NEAR RAILWAY CROSSING, KRISHNANAGAR ROAD, NARODA, AHMEDABAD - 382330

443. KIRAN MOTORS LIMITED (-02), FINAL PLOT NO.33/1/1, NEAR SHRUSHTI LAVISH, OPP. SHYAM VILLA-II, NARODA-NIKOL ROAD, NIKOL DISTT. AHMEDABAD - 382330

444. KIRAN MOTORS LIMITED (-04), SURVEY NO. 245/3, TP SCHEME NO. 43, NEAR KARGIL PETROL PUMP, SCIENCE CITY ROAD, AHMEDABAD - 380060

445. POPULAR WHEELERS (INDIA) PVT LTD (-01), BEHIND G. B. SHAH COLLEGE, NEAR SWAMINARAYAN PARK, VAISHALI TOWNSHIP ROAD, VASNA, AHMEDABAD, GUJARAT - 380007

446. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (-01), PLOT NO. 116, BOPAL - AMBIL ROAD, BOPAL, AHMEDABAD, DISTRICT - AHMEDABAD, GUJARAT - 380058

447. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (-01), PLOT NO.116 & 118/2, SARDAR PATEL RING ROAD, VASTRAL, AHMEDABAD - 382418

448. TANU MOTORS PVT LTD (-01), SURVEY NO. 1155/1-2, 1154 & 1156, PLOT NO. 39, SARKHEJ-SANAND ROAD, SANAND, AHMEDABAD (GUJARAT) - 382110

449. STARLINE CARS PVT LTD (-09), SR NO - TP - 57, PLOT NO. 67, NEAR GOTA FLYOVER BRIDGE, OPP. SHANKU FARM HOUSE, S.G. HIGHWAY, GOTA, AHMEDABAD - 382481

450. KATARIA AUTOMOBILES PRIVATE LIMITED (-02), PLOT NO. 112, 116 & 119, SURVEY NO. 283/3.7.10, B/H SILVER STAR, BESIDE HARI VILLA BUNGLAWS, GOTA ROAD, CHANDLODIYA, AHMEDABAD - 382481

451. KATARIA AUTOMOBILES PRIVATE LIMITED (-10), SURVEY NO. 247, TP NO. 73, OPP. PAVITRA ENCLAVE, MANSAROVER ROAD, NEAR HARI OM FARM, TRAGAD, CHANDKHEDA, AHMEDABAD - 382470

452. NANDA AUTOMOBILES PVT LTD (-02), PLOT NO-6, BEHIND HP PETROL PUMP, OPP. UMIYA TEMPLE, CANAL ROAD, THALTEJ-SHILAJ ROAD, AHMEDABAD - 380059 - 380059

453. KIRAN MOTORS LIMITED (-05), AMBER STATE, NEAR HONDA WORKSHOP, OPP. MG MOTORS, SANATHAL, AHMEDABAD - 382210

AMBAJI

454. TANU MOTORS PVT LTD (-01), OPP KUMBHARIYA JAIN DERASAR, GIDC ROAD, AMBAJI, DIST-BANASKANTHA, GUJARAT 385110 - 385110 PH :9727709227.

AMOD

455. RAVIRATNA MOTORS PVT LTD (-03), ROYAL PARK, JAMBUSAR-BHARUCH ROAD, AMOD, DISTRICT: BHARUCH, GUJARAT - 392110

AMRELI

456. ALPHA AUTOLINK LLP (-01), R.S NO 151/152, OPP GANESH GINNING, AMRELI BYE PASS ROAD, AMRELI - 365601

ANAND

457. AMAR CARS PVT LTD (-01), JANTHA CROSSING, SOJITRA ROAD, ANAND - 388121 PH :990960772.

458. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO. 189/1+2/A+3/A/K 190/P, OPP. OLD JAKAT NAKA, NEAR RAILWAY OVERBRIDGE, ANAND-CHIKHODRA ROAD, ANAND, GUJARAT - 388120 PH :768954466.

ANKLAV

459. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), AMBICA COMPLEX, GROUND FLOOR SHOP NO. B, C AND D, ASODAR CHOKDI, TAL. ASODAR, CITY ANKLAV, DIST. ANAND, PIN-388510, GUJARAT - 388510 PH :7227917151.

ANKLESHWAR

460. RAVIRATNA MOTORS PVT LTD (-01), PLOT NO. 62/2/B, GIDC, VALIA ROAD, ANKLESHWAR - 393002 PH :9687691063.

BAGODRA

461. NANDA AUTOMOBILES PVT LTD (-01), SHOP NO. 9, 10, 11, 12, KAMDHENU COMPLEX, BAGODRA HIGHWAY, NR. SBI BANK, BAGODRA - 382240

BALASINOR

462. AMAR CARS PVT LTD (-01), SR. NO. 1451, OPP. OIC PETROL PUMP, AHMEDABAD HIGHWAY (NH-47), KANTHARJUNA MUWADA, VILLAGE - VADALA, TALUKA - BALASINOR, DISTRICT - MAHISAGAR, GUJARAT - 388255 PH :721109960.

BARDOLI

463. DHRU MOTORS (4002-02), G.I.D.C, SURAT BARDOLI ROAD, BARDOLI - 394601

464. KATARIA AUTOMOBILES PRIVATE LIMITED (-02), BLOCK NO.13, NANDIDA CROSS ROAD, BARASADI VILLAGE, SURAT-BARDOLI ROAD, BARDOLI, GUJARAT - 394310

BAREJA

465. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), NH 64, BAREJA, DISTRICT AHMEDABAD, GUJARAT - 382425 PH :7046079997.

BARWALA (AHMEDABAD)

466. UDAY AUTOLINK PVT LTD (-01), OPP. HILTON HOTEL, BHAVNAGAR HIGHWAY, TA BARWALA, DIST. AHMEDABAD - 382450

BAVLA

Dealer Workshop (AS ON 31.01.2026)

467. KATARIA AUTOMOBILES PRIVATE LIMITED (-07), NEAR ESSAR PETROL PUMP, BAVLA -AHMEDABAD HIGHWAY, BAVLA - 382220	479. KATARIA AUTOMOBILES PRIVATE LIMITED (-19), PLOT NO.13, SURVEY NO 33.34, AND 35 PAKKI VILLAGE, HADADAD, OPP. PATEL HYUNDAI SHOWROOM, PALIYAD BOTAD ROAD - 364710 PH :9558060658.	DAHOD	499. TANU MOTORS PVT LTD (-01), SURVEY NO. 722, OPPOSITE RANI RUDY MATAJI MANDIR, DHOLKA KALKUND HIGHWAY, DHOLKA, GUJARAT - 382225 PH :9512009104.
BECHRAJI		489. R B CARS PVT LTD (-02), NEAR SIMANDHAR JAIN TEMPLE, OLD INDORE HIGHWAY,DAHOD - 389151	
468. STARLINE CARS PVT LTD (-01), R.S. NO. 336 PAKI, MOJE-BECHAR (BECHARAJI), TALUKA - BECHARAJI, DIST.-MEHSANA. - 384210 PH :9909043244.	CHANASMA	DANTIWADA	DHORAJI
BHABHAR	480. STARLINE CARS PVT LTD (-01), 16/17, PASABHI COMPLEX, NEAR ROYAL PALACE HOTEL, MEHSANA HIGHWAY, CHANASMA. - 384220	490. TANU MOTORS PVT LTD (-01), VISHWAS COMPLEX, OPP HINGLAJ PETROL PUMP, NR. JAIN DERASAR, DANTIWADA HIGHWAY, AT-PO PANTHWADA, TALUKA-DANTIWADA, DIST-BANASKANTHA - 385545 PH :9099940424.	500. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-09), JETPUR ROAD, OPP. SHRINATHJI SOCIETY, DHORAJI - 360410
469. STARLINE CARS PVT LTD (-01), SHOP NO. 7, 8 ,9, SIDDHI VINAYAK BUSINESS HUB, R.S. NO. 225, PANJAPOLE ROAD, BHABAR, DIS. -BANASKANTHA, GUJARAT. - 385320	CHANDRALA	DEDIAPADA	DHRANGADHRA
BHACHAU	481. NANDA AUTOMOBILES PVT LTD (-01), HIMMATNAGAR HIGHWAY NO.8, NEAR DEVANSHI PARTY PLOT, CHANDRALA, DIST- GANDHINAGAR, GUJARAT - 382320	491. RAVIRATNA MOTORS PVT LTD (-01), SURVEY NO-124/45, PLOT NO-1, VILLAGE-NIVALDA, TA-DEDIAPADA, DIST-NARMADA. - 393040	501. DREAM VEHICLES PVT LTD (-01), PLOT NO. 79, SURENDRANAGAR- DHRANGADHRA ROAD, OPP. ARMY WORKSHOP, DISTRICT-SURENDRANAGAR. - 363310 PH :9227775725.
470. K D MOTORS (-02), SUNRISE MALL,OPP. BUS STAND,BHACHAU BHUJ ROAD, BHACHAU, GUJARAT - 370140	CHANGODAR	DEESA	DIYODAR
BHANVAD	482. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (-01), SURVEY NO.393, VILLAGE - MORAIYA, CHANGODAR, TALUKA - SANAND, SUN DISTT - AHMEDABAD - 382210 PH :7211120014.	492. TANU MOTORS PVT LTD (-03), NH-14, NR. ESSAR PETROL PUMP, RADHANPUR HIGHWAY, HANUMAN NAGAR, MALGADH, DEESA - 385535 PH :9909006099.	502. TANU MOTORS PVT LTD (-01), NR.HP PETROL PUMP, BHESANA CROSS ROAD, BHABHAR HIGWAY,DIYODAR-385330 PH :9099017756.
471. ATUL MOTORS JAM LLP (-01), R.S. NO.439, PLOT NO.19, BHANVAD (GUJARAT) - 360510	CHHOTAUDEPUR	DEHGAM	DWARKA
BHARUCH	483. KIRAN MOTORS LIMITED (-01), PLOT NO. 29-30, SURVEY NO. 137, OPP. TO SP OFFICE, CHHOTA UDEPUR - 391165	493. NANDA AUTOMOBILES PVT LTD (-03), SURVEY NO. 311, MOJE PALIYA TALUKA DEHGAM, GANDHINAGAR, GUJARAT-382305 - 382305	503. ATUL MOTORS JAM LLP (-01), SURVEY NO. 41, NEAR, SHRI SANTAN SEVA MANDAL, CORNER PLOT OF STATION ROAD AND HIGHWAY ROAD, DWARKA, DISTRICT - DWARKA - . - 361335
472. RAVIRATNA MOTORS PVT LTD (-01), NH 8, OPP YOGI PETROL PUMP,P.O. ZADESHWAR,BHARUCH - 392011	CHIKHLI	DETROJ	GANDHI NAGAR
BHAVNAGAR	484. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO.461, VILLAGE-MAJIGAM, TALUKA-CHIKHALI, DISTT-NAVSARI, GUJARAT - 396521 PH :7698953899.	494. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (-01), PLOT NO-61, MILKAT NO-2534, AT-DETROJ, TALUKA-DETROJ-RAMPURA-382120 - 382120 PH :7971846442.	504. NANDA AUTOMOBILES PVT LTD (-01), 1003,SECTOR-28,GANDHI NAGAR - 382028
473. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO 137/2, PLOT NO 301/2&3 AND 301/4&5, VERTEJ GIDC, NARI CHOWKDI, RAJKOT ROAD, BHAVNAGAR. - 364004 PH :9426168286.	CHILODA	DEVGARHBARIA	505. NANDA AUTOMOBILES PVT LTD (-05), PLOT NO. 805, GIDC, SECTOR-28, GANDHINAGAR. - 382028
474. KATARIA AUTOMOBILES PRIVATE LIMITED (-02), PLOT NO-29, NR. TALAJA OCTROI CIRCLE, JAKATNAKA, AT-ADHEWADA, DIST-BHAVNAGAR, GUJARAT - 364002. - 364002 PH :9638884422.	485. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (-01), PLOT NO. 332, BESIDES GALLOPS TATA, NH-8, CHILODA-HIMMATNAGAR HIGHWAY, CHILODA. - 382355	495. R B CARS PVT LTD (-05), BESIDE ARIHANT PETROL PUMP, PIPLOD ROAD, DEVGADH BARIA - 389380	GANDHIDHAM
BHUJ	CHOTILA	DHANERA	506. B.M. AUTOLINK (7702-03), SURVEY NO.129/26 P. GALPADAR HIGHWAY, GANDHIDHAM , DISTT.KACHCHH, GUJARAT. - 370110
475. K D MOTORS (-01), PLOT NO. 5/6/14,UMANAGAR,MIRZAPUR HIGHWAY ROAD , BHUJ,GUJARAT - 370001	486. DREAM VEHICLES PVT LTD (-01), SURVEY NO. 31, PLOT NO. 1, NILKANTH SOCIETY, NH NO. 8A, AHMEDABAD-RAJKOT, AT & PO - CHOTILA, DISTRICT - SURENDRANAGAR, GUJARAT. - 363520 PH :9227775709.	496. TANU MOTORS PVT LTD (-01), 01 & 02. MARUTI NANDAN COMPLEX, NEAR ESSAR PETROL PUMP, DHANERA-DEESA HIGHWAY, DHANERA. - 385310	GODHRA
476. K D MOTORS (-03), R.S. NO. 25/2, 25/3, 26/2, PLOT NO. 57 TO 61, VILLAGE - MIRZAPUR, TALUKA - BHUJ, GUJARAT. - 370001 PH :9909953124.	CHUDA	DHARAMPUR	507. R B CARS PVT LTD (-01), PLOT NO. 112/11,12-VAVDI,GODARA - DAHOD HIGHWAY, GODHRA, PANCHMAHAL, GUJARAT - 389001
BODELI	487. DREAM VEHICLES PVT LTD (-01), NR. GOVT HOSPITAL,CHATARLIYA ROAD,CHUDA,SURENDRANAGAR. - 363410 PH :9313802500.	497. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO.29/3/P1, VILLAGE ASHURA NR. ASHURA CIRCALE, DHARAMPUR DISTT. VALSHAD, GUJARAT - 396050 PH :9723455291.	508. R B CARS PVT LTD (-04), SURVEY NO.107, LUNAWADA ROAD, GIDC, GODHRA, DISTT. PANCHMAHAL-389001. - 389001
BORSAD	DABHOI	DHARI	GONDAL
478. AMAR CARS PVT LTD (-01), BORSAD - TARAPUR HIGHWAY, BORSAD , DISTRICT - ANAND, GUJARAT - 388540	488. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), OPP. VEGA BUS STOP, NEAR VEGA CROSS ROAD, DABHOI-BODELI ROAD, DABHOI, TA:DABHOI, DI:VADODARA - 391110 PH :8156000463.	498. ALPHA AUTOLINK LLP (-01), PLOT NO. 9, DHARI - KHAMBHA ROAD, NEAR RAILWAY FATAK DHARI , TALUKA - DHARI, DIST. - AMRELI, GUJARAT. - 365640	509. ATUL MOTORS PVT LTD (5503-05), 8-B NATIONAL HIGHWAY, OPP. DAULAT OIL MILL, NR. NILKANTH VIRUDASHRAM, RAJKOT HIGHWAY,GONDAL - 360311
BOTAD		DHOLKA	510. ATUL MOTORS PVT LTD (5503-55-06), RAJKOT AHMEDABAD HIGHWAY, NR. CHANDARANA PETROL PUMP, OPP. GUJARAT SAMACHAR PRESS, AT. NAVAGAM RAJKOT - 360003 PH :9924688774.

511. ATUL MOTORS PVT LTD (-01), NEAR ASHAPURA RAILWAY CROSSING, RAJKOT-PORBANDAR NATIONAL HIGHWAY, GONDAL-360311. - 360311	522. ATUL MOTORS JAM LLP (-02), C-36, MP SHAH ARUN UDYOG, SARUSECTION ROAD, JAMNAGAR - 361002	533. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), AT&POST. KAPRADA, DHARAMPUR - NASIK ROAD, N.H.67& 848. TA.KAPRADA, DIST. VALSAD - 396065	543. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SANVIRA HAT BAZAAR, KHERGAM-DHARAMPUR HIGHWAY ROAD, SH-67, KHERGAM, PIN-396040. - 396040 PH:9624007774.
GOZARIA	523. ATUL MOTORS JAM LLP (-03), OPP MADHAV BAUG1, NEAR RAILWAY OVER BRIDGE, JAMNAGAR, GUJARAT-361006. - 361006 PH:9574004709.	KARJAN	KIM
512. VIMCO MOTORS PVT LTD (-01), 1597/339 P4 VISHNAGAR-GOZARIYA ROAD, GOZARIYA, DIST.-MEHSANA. - 382825 PH:7016623842.	JASDAN	534. AMAR CARS PVT LTD (-01), SURVEY NO.851/787 BESIDE PMT TOOLS, KANDARI, N.H.-8, KARJAN, DISTT-VADODRARA (GUJARAT) - 391210	544. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO. 116-121, DAL MILL COMPOUND, OPP. SURAT JILLA SANGH, KIM CROSS ROAD, NH-8, KIM - 394110 PH:9723555185.
HALOL	524. ATUL MOTORS PVT LTD (5503-09), SURVEY NO. 1253, PLOT NO. 4, NEAR KALYAN PETROL PUMP, JASDAN-ATKOT HIGHWAY, JASDAN, DIST.-RAJKOT, GUJARAT. - 360050 PH:9265404142.	KATHLAL	KODINAR
513. R B CARS PVT LTD (-01), PLOT NO. 104/6 & 104/8, VADODARA - GODHRA HIGHWAY, NEAR NAVJIVAN HOTEL, HALOL, DISTRICT - PANCHMAHAL, GUJARAT - 389350	JHALOD	535. AMAR CARS PVT LTD (-01), MAHAVEER AUTO SHOWROOM, NADIAD ROAD, JB PLAZA, KATHLAL, GUJARAT. - 387630 PH:9909960761.	545. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), R.S.NO.222, PLOT NO.2, 3 SHOPS, KODINAR-362720 DISTT. JUNAGADH, GUJARAT - 362720
HALVAD	525. R B CARS PVT LTD (-01), SURVEY NO. 2550B/10, 11, AT - JHALOD, TALUKA- JHALOD, DISTRICT - DAHOD. - 389170	KAWANT	KOSAMBA
514. DREAM VEHICLES PVT LTD (-01), PLOT NO.5 & 6, NAKLANKDHAM TOWNSHIP, OPP. HONEST RESTAURANT, AHMEDABAD HIGHWAY, HALVAD DISTT. SURENDRANAGAR (GUJARAT) - 363330 PH:8238000965.	JUNAGARH	536. RAVIRATNA MOTORS PVT LTD (-01), SURVEY NO -35 , NASVADI KAVANT ROAD, KAVANT, DIST: CHOTTA UDEPUR. - 391170	546. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO-629, OPP. PIRAMAL GLASS COLONY, KIM KOSAMBA MAIN ROAD, KOSAMBA, DISTRICT- SURAT, GUJRAT - 394120
HANSOT	526. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-02), PLOT NO. 81-82 G.I.D.C. DOLATPURA,RAJKOT-JUNAGARH HIGHWAY, JUNAGARH - 362001	KESHOD	KUKARWADA
515. RAVIRATNA MOTORS PVT LTD (-01), AT UTRAJ, HANSOT, DISTRICT - BHARUCH. - 393030 PH:9687691063.	527. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-06), SURVEY NO.45/1, PLOT NO. 214-C/D/E/F, GIDC-I, DOLATPARA, JUNAGADH - 362001	537. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), R S NO. 125/1, GODOWN NO. 01, SONDARDA, TALUKA - KESHOD, DISTRICT - JUNAGADH, GUJARAT. - 362220 PH:7043999073.	547. STARLINE CARS PVT LTD (-01), SHOP NO.1741, 1742 AND PLOT NO.1752, KUKARWADA TALUKA, VIJAPUR, DISTT MAHESANA (GUJARAT) - 382830
HIMATNAGAR	KADI	KHAMBHAT	LAJPUR
516. KIRAN MOTORS LIMITED (-01), NEAR G.I.D.C.MOTIPURA, HIMMATNAGAR - 383001	528. STARLINE CARS PVT LTD (-07), OPP. COTTON MARKETING YARD, KADI-CHATRAL ROAD, TAL: KADI, DIST: MEHSANA - 382715 PH:8160707156.	538. AMAR CARS PVT LTD (-01), PLOT NO. 7/8/9, RAJMAHAL PARK, OPP. SARDAR CHATRALAY, LAL DARWAJA, GAYATRINAGAR ROAD, KHAMBHAT, TALUKA KHAMBHAT, ANAND DISTRICT, GUJARAT - 388620 PH:9909960772.	548. AMAR CARS PVT LTD (-01), NEAR INDIANOIL PETROL PUMP, ACHIN, NAVSARI ROAD, DIST. SURAT - 394235
HISAR	KAKANPUR	KHANVEL	LALSAR
517. COMET CAR SALES & SERVICE PVT LTD (4006-40-04), SAROLI VILLAGE, NEAR SAIBABA MANDIR, SURAT-OLPAD ROAD - 394520	529. R B CARS PVT LTD (-01), SURVEY NO.618/2, PAIKI PLOT NO. 29,30,31 AT. KAKANPUR, TAL. GODHRA, DISTRICT. PANCHMAHAL PIN-388713. - 388713 PH:9099049347.	539. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO 40/3, SILVASA KHANVEL ROAD, KHANVEL, GUJARAT - 396230	549. R B CARS PVT LTD (-01), SURVEY NO-202, AT-LALSAR, LALSAR-LUNAWADA HIGHWAY, TALUKA-LUNAWADA PIN-388270. - 388270
IDER	KALAVAD	KHEDA	LAVANA
518. KIRAN MOTORS LIMITED (-01), SURVEY NO.69 IDAR-AMBAJI ROAD, IDAR DIST: SABARKANTHA - 383430	530. ATUL MOTORS JAM LLP (-01), SANIDHYA ARCADE, NEAR SANIDHYA PARTY PLOT, KALAVAD - DHORAJI ROAD, KALAVAD. - 361160 PH:9574222111.	540. AMAR CARS PVT LTD (-01), S.NO.708, PLOT NO.1, VILLAGE-SOKHDA, TAL: MATER, DISTT. KHEDA, GUJARAT - 387570 PH:9909960761.	550. R B CARS PVT LTD (-01), AT PO -LAVANA, NEAR BABILIYA CROSSING, MODASA ROAD, LAVANA-389230 - 389230
JAMBUSAR	KALOL	KHEDBRAHMA	LIMBASI
519. RAVIRATNA MOTORS PVT LTD (-01), SURVEY NO-2939-2954, PLOT NO-2, VILLAGE-JAMBUSAR, TALUKA-JAMBUSAR, DIST-BHARUCH. - 392150 PH:9687667595.	531. NANDA AUTOMOBILES PVT LTD (-01), PLOT NUMBER 1147,1148, MEHSANA HIGHWAY, KALOL, GANDHINAGAR - 383028	541. KIRAN MOTORS LIMITED (-01), AMBAJI ROAD, KHEDBRAHMA, DIST. - SABARKANTHA, PIN - 383255 - 383255 PH:9824010721.	551. AMAR CARS PVT LTD (-01), SURVEY NO 2495, OPP PHC CENTER, VILLAGE-LIMBASI - 387250
JAMJODHPUR	KAPADVANJ	KHERALU	LIMBDI
520. ATUL MOTORS JAM LLP (-01), NEAR HDFC BANK, GAYATRI MANDIR ROAD, JAMJODHPUR, DIST-JAMNAGAR (GUJARAT) - 360530. - 360530 PH:9537888988.	532. AMAR CARS PVT LTD (-01), SAMARTH SQUARE, SHOP NO. 1, MODASA KAPADVANJ ROAD, KAPADVANJ, GUJARAT-387620 - 387620 PH:9909960761.	542. STARLINE CARS PVT LTD (-01), R S NO. 4962 MAHAVIR COMPLEX, KHERALU, DIST. -MEHSANA - 384325	552. DREAM VEHICLES PVT LTD (-01), SURVEY NO.276/1, NEAR PANCHVATI HOTEL, LIMDI CROSS ROAD, AHMEDABAD-RAJKOT HIGHWAY, LIMDI, DISTT. SURENDRANAGAR, GUJARAT. - 363421
JAMNAGAR	KAPRADA	KHERGAM	LUNAWADA
521. ATUL MOTORS JAM LLP (-01), SURVEY NO.422, PLOT NO. 16,17 & 19, JAMNAGAR, GUJARAT - 361001			553. R B CARS PVT LTD (-01), SURVEY NO.90, AT-BHAYASAR, GODHRA-LUNAWADA HIGHWAY, LUNAWADA , TALUK-LUNAWADA, DISTT-MAHISAGAR, GUJARAT. - 389230

Dealer Workshop (AS ON 31.01.2026)

MADHI	564. STARLINE CARS PVT LTD (-01), NAGALPUR HIGHWAY, MAHESANA, GUJARAT - 384002 PH: 9909043635	575. AMAR CARS PVT LTD (-02), NEAR RAJHANS MULTIPLEX, NADIAD-UTTARSANDA ROAD - 383730 PH: 9909980761.	585. TANU MOTORS PVT LTD (-01), OPP. DHARTI RESORT, ABU- AHMEDABAD HIGHWAY, PALANPUR - 385001 PH: 9099017756.
554. DHRU MOTORS (-01), MADHI SYADLA, BAJIPURA ROAD., ATPOS, MADHI, SYADLA, TAPI, - 394340	565. TANU MOTORS PVT LTD (-04), SURVEY NO.78, NEAR SUNRISE AUTOMOBILES (AMW DEALER), GUJARAT STATE HIGHWAY NO.41, MEHSANA - 384002 PH: 9909006076.	NAKHATARANA	586. STARLINE CARS PVT LTD (-08), SURVEY NO.4 & 5/2, OPPOSITE L K PETROL PUMP, PALANPUR-DEESA HIGHWAY, PALANPUR-385001, DISTT BANASKANTHA, GUJARAT - 385001 PH: 9824461793.
MAHUVA (BHUVNAGAR)	555. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), V.P. COMPLEX, BUNDER RD, NR. GAUSHALA, BARPARA, MAHUVA, GUJARAT 364290. - 364290 PH: 6357327534.	576. K D MOTORS (-01), PLOT NO.1, RS NO-19, AT-NANA ANGIYA, TALUKA-NAKHATRANA, KUTCH PH: 9909953119.	PALEJ
MAHUVA (SURAT)	566. VIMCO MOTORS PVT LTD (-01), SURVEY NO. 104 & 104 PAIKI 1, AT P.O. - PALAVASANA, MEHSANNA, GUJARAT. - 384002 PH: 8909953333.	NALIYA	587. RAVIRATNA MOTORS PVT LTD (-01), PLOT NO. 626/8, GIDC AREA, PALEJ, DISTRICT - BHARUCH - 392220
556. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), BLOCK NO. 14/2, VILLAGE BUDHALESHWAR, SURAT SAPUTARA STATE HIGHWAY, TAL. MAHUVA, DIST. SURAT - 394250 - 394250	567. VIMCO MOTORS PVT LTD (-02), SHOP # 7&8, TIRUPATI SAHIBAGH MARKET, MEHSANA - RADHANPUR ROAD, NEAR SAHAJ VILLA, MEHSANA - 380002. - 380002 PH: 8909953333.	577. K D MOTORS (-01), AT PO - SHAKTI SOCIETY, MAHAVIR NAGAR, PLOT(1), OPP. BANK OF BARODA, NALIYA, TAL-ABDASA, KUTCH. - 370655 PH: 9909953119.	PALITANA
MANAVADAR	METODA	NANA PONDHA	588. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO 15, YASOVIJAYNAGAR, NEAR RAILWAY CROSSING, PALITANA HIGHWAY, PALITANA-364270 DIST BHAVNAGAR. - 364270 PH: 6357314891.
557. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), RS NO. 13/1, 14, PLOT NO. 48, BHAKTINAGAR, TALUKA - MANAVADAR, DIST.-JUNAGADH. - 362630 PH: 7043999073.	568. ATUL MOTORS PVT LTD (5503-08), PLOT NO. 2328, GATE NO. 2, METODA GIDC, METODA, TALUKA LODHIKA, DISTRICT - RAJKOT, GUJARAT - 360021	578. AMAR CARS PVT LTD (-01), SHOP NO 7-11, JALASHAI SHOPPING CENTER, AT-NANA PONDHA, TALUKA- KAPRADA, DIST-VALSAD - 396126 PH: 7227971155.	PALSANA
MANDAL	MODASA	NANDASAN	589. KATARIA AUTOMOBILES PRIVATE LIMITED (4004-07), BESIDE SAINATH COMPLEX, KADODARA AHMEDABAD ROAD - NH-8, UMBHEL GAM, TALUKA: PALSANA KADODARA, SURAT. - 382721 PH: 992446895.
558. KIRAN MOTORS LIMITED (-01), SURVEY NO. 708, MANDAL - DETROJ HIGHWAY, NR. RELIANCE PETROL PUMP, MANDAL , DI: AHMEDABAD, GUJARAT. - 382130 PH: 9408803925.	569. KIRAN MOTORS LIMITED (-02), SHAMLAL JI ROAD, SABARKANTHA DIST., MODASA - 383315	579. TANU MOTORS PVT LTD (-01), M/S TANU MOTORS PVT LTD, AT&PO-NANDASAN, TALUKA-KADI, DIST-MEHSANA 382705 - 382705	PARDI
MANDVI	MORBI	NASWADI	590. AMAR CARS PVT LTD (-01), OPPOSITE MORARJI DESAI MEMORIAL HALL SERVICE ROAD N.H-48, KILLA-PARDI, DIST-VALSAD - 396125 PH: 7226800777.
559. K D MOTORS (-01), PLOT NO.25.26 & 27, RAJ COMMERCIAL, SURVEY NO.246, NEAR "THE BEACH RESORT", MANDVI NALIYA ROAD, MANDVI-KUTCH - 370465	570. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-07), SURVEY NO. 351/2, PLOT NO. 10, DHARTI INDUSTRIAL AREA, RAJPURA ROAD, SANALA, MORBI , TEHSIL-MORBI, DISTT-MORBI, GUJARAT. - 363641	580. RAVIRATNA MOTORS PVT LTD (-01), HOUSE NO-301, 302,303, IN VALPURA-RAMLALNAGAR, VILLAGE AT-NASWADI, DIST: CHOTTA UDEPUR - 391150 PH: 9687691047.	PATAN
560. KIRAN MOTORS LIMITED (-01), C.S NO-3278, ZHANKHAVAV-MANDVI ROAD, DHOBANI NAKA, MANDVI - 394160. - 394160	571. DREAM VEHICLES PVT LTD (-03), PLOT NO 2, DHARM GOLD INDUSTRIAL ESTATE, PIPLI JETPUR HIGHWAY, DIST MORBI, PIN 363642 - 363642 PH: 7069089532.	NAVSAARI	591. STARLINE CARS PVT LTD (-02), CHANASMA HIGHWAY, PATAN - 384265 PH: 7046046187.
MANGROL	MOTI KHAVADI	581. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO.-891, OPP PAUVA MILL, NH-8, NEAR GANESH SISODRA CHOKDI, GANESH SISODIA NAVSARI, GUJARAT - 394643 PH: 9723430012.	PATDI
561. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO. 12-28, MOSALI, MANGROL, DISTRICT-SURAT. - 394410 PH: 6357071775.	572. ATUL MOTORS JAM LLP (-01), PLOT NO.22 & 29, NEAR PADANA POLICE STATION, JAMNAGAR-KHAMBHALIYA HIGHWAY, MOTI KHAVDI, ZANKHAR, TA: LALPUR, DIST - JAMNAGAR, GUJARAT. - 361140	NETRANG	592. DREAM VEHICLES PVT LTD (-01), R.S. NO.1614/2, PLOT NO.16, PATDI TALUKA DASADA, DISTT. SURENDRANAGAR, GUJARAT - 382765 PH: 9227775709.
MANSA	MUNDRA-DOM	582. RAVIRATNA MOTORS PVT LTD (-01), SURVEY NO. 184, PLOT NO. 1 & 2, VILLAGE - NETRANG, TALUKA - VALIA, DIST.-BHARUCH. - 393130 PH: 9687691063.	PAVI JETPUR
562. NANDA AUTOMOBILES PVT LTD (-04), SURVEY NO. 1686, NR. UMA PETROLEUM (INDIAN OIL), RAJPURA CROSS ROADS, MANSA GANDHINAGAR HIGHWAY, MANSA -382845. - 382845 PH: 9727921000.	573. B.M. AUTOLINK (7702-02), PRAGPAR ROAD, MUNDRA, DISTRICT-KUTCH, GUJARAT, - 370421	OLPAD	593. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), NEAR ANKUR HOTEL, OPP. DHARESHWAR GEB STATION, PITHADIA, RAJKOT HIGHWAY, JETPUR (GUJARAT). - 360370
MEHMDABAD	MUVAL	583. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (4006-02), 1906/1907, OPP. KUMBHARVAD, JUNA PURA, OLPAD - 394540 PH: 9099916099.	PETLAD
563. AMAR CARS PVT LTD (-01), PATEL FALIYA, KHATRAJ, MEHMEDABAD, DIST.-KHEDA, GUJARAT. - 387130 PH: 9909960761.	574. AMAR CARS PVT LTD (-01), YOGI RESIDENCY MOVAL CHOKDI, PADRA- JAMBUSAR HIGHWAY - MUVAL, TALUKA-PADRA, VADODARA. - 391430	PADRA	594. AMAR CARS PVT LTD (-01), SURVEY NO. 396/2, RANGAIPUR VILLAGE, PETLAD, DIST.-ANAND. - 388450 PH: 9099017068.
MEHSANA	NADIAD	584. AMAR CARS PVT LTD (2205-02), NEAR WESTERN BYPASS, AT SAMIYALA, PADRA, DIST. - VADODARA, GUJARAT - 391440	
		PALANPUR	

POR		RAJIPILA		SAYLA		628. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (-01), LAXMI PLAZA, SHOP NO. 21 & 22, SURAT DHULIYA HIGHWAY, TALUKA - SONGADH, DIST.-TAPI. - 384220 PH : 9099916099.
595. AMAR CARS PVT LTD (-01), SANKRUTI COMPLEX, POR KAYAVAROHAN ROAD, OPPOSITE OM BUNGALOWS. POR GUJARAT 391243 - 391243		607. RAVIRATNA MOTORS PVT LTD (-01), OPP. JALARAM SAW MILL, NEAR HARSIDDH MATAJI TEMPLE, RAJIPILA, DIST: NARMADA, GUJARAT - 393145		618. DREAM VEHICLES PVT LTD (-01), LALGURU COMPLEX, SUDAMDA ROAD, SAYLA, DISTRICT SURENDRANAGAR, GUJARAT PIN 363430 - 363430 PH : 9227775709.		SUPEDI
PORBANDAR		RAJULA		SELAMBA		629. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO-4827, PAIKI PLOT NO-18, MATRAVAD ROAD, GRAM-SUPEDI, DIST - RAJKOT - 360440 PH : 9409497902.
596. ATUL MOTORS JAM LLP (-01), PLOT NO. 208, GIDC VANANA, NATIONAL HIGHWAY, PORBANDAR, DIST. PORBANDAR GUJARAT - 360577		608. ALPHA AUTOLINK LLP (-01), R.S NO 96/3, PLOT NO-6 & 7, HINDORNA ROAD, RAJULA CITY, TALUKA-RAJULA - 365560 PH : 9033409043.		619. RAVIRATNA MOTORS PVT LTD (-01), CITY SURVEY NO. NA124/2/1, VILLAGE - GHANSHERA, SELAMBA TALUKA- SAGBARA, DIST- NARMADA, PIN CODE:- 393050 - 393050		SURAT
PRANTIJ		RANPUR		SHANKESHWAR		630. KIRAN MOTORS LIMITED (4001-40-01), SURAT-BARDOLI ROAD,DUMBHAL,NEAR PUNA JAKAT NAKA,SURAT - 395010
597. KIRAN MOTORS LIMITED (-01), NO.6/P, OPP. VEGETABLE MARKET, PRANTIJ HIGHWAY, VILLAGE-KHAMALPUR, TALUKA-PRANTIJ, DISTT. SABARKANTHA, GUJARAT - 383205		609. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO -624/1,P2 PALIYAD ROAD, TALUKA RANPUR, DIST- BOTAD, GUJARAT. - 382245		620. STARLINE CARS PVT LTD (-01), MANIBHADRA SHOPPING CENTRE, SHANKHESHWAR HIGHWAY, SHANKHESHWAR (GUJARAT)- DIST: PATAN - 384246 PH : 9824601729.		631. DHRU MOTORS (4002-40-01), JEEVAN GANGA NAGAR,NEAR JEEVAN JYOTI THEATRE,UDHNA MAIN ROAD,SURAT - 394210
RADHANPUR		RAPAR		SHAPAR		632. KIRAN MOTORS LIMITED (4001-40-02), PANDESARA,BAMROLI ROAD,SURAT - 395002 PH : 9824603880.
598. STARLINE CARS PVT LTD (-01), SURVEY NO. 208/A, MOUJA - RADHANPUR, RADHANPUR MAIN ROAD, DISTRICT - PATAN, GUJARAT. - 385340		610. B.M. AUTOLINK (-01), PARAGPAR CHAAR RASTA RAPAR GHANDHIDHAM KUTCH - 370165 PH : 9727725723.		621. ATUL MOTORS PVT LTD (-01), SHOP NO. 1 TO 4, SURVEY NO. 305/1, PLOT NO. 169, SHAPAR, DISTRICT - RAJKOT, GUJARAT - 360024		633. KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-04), TP NO. 6, SURVEY NO. 317/2, FINAL PLOT NO. 39, OPP SMS GARDEN, NEAR VIP ROAD, VESUJ, SURAT - 395007 - 395007
RAJKOT		SAMI		SHIHORI		634. KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-05), KATARIA ARCADE,OPP. RAJHANS CINEMA,DUMAS ROAD, PILODD, SURAT - 395007
599. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-55-01), PERFECT HOUSE,GONDAL ROAD,VANDI,RAJKOT - 360004		611. STARLINE CARS PVT LTD (-01), SHOP NO. 55-56, AMBESHWAR PLAZA, SAMI-HARIJ ROAD. - 384240		622. TANU MOTORS PVT LTD (-01), OPP. PANCHMUKHI HANUMAN TEMPLE, SHIHORI - DEESA HIGHWAY, SHIHORI, TA- KANKREJ, DIST- BANASKANTHA.385550 - 385550		635. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (4006-40-01), CHIKUWADI COMPLEX, GHB ROAD, PANDESARA, SURAT. - 394221 PH : 9099915995.
600. ATUL MOTORS PVT LTD (5503-55-01), PLOT NO.49/1 & 2, GIDC, BHAKTI NAGAR INDUSTRIAL ESTATE, RAJKOT. - 360002 PH : 8140909093.		612. VIMCO MOTORS PVT LTD (-01), SURVEY NO 917, VIRA SHOPPING CENTER, AT-SAMI, TALUKA-HARIJ, DIST-PATAN, GUJARAT. - 384245 PH : 8909953333.		SIDDHPUR		636. KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-08), BLOCK NO.233, TP NO.8, OPP. SHREE LEKHA RESIDENCY, PALANPORE, ADAJAN, SURAT - 394310 PH : 9924119020.
601. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-55-04), 150 RING ROAD,OPP. GANDHIGRAM POLICE CHOWKI,RAJKOT - 360005		SANTEJ		623. STARLINE CARS PVT LTD (-01), PLOT NO. 140-1285/7, SIDHPUR, TALUKA - VADGAM, DISTRICT - PATAN. - 384151		637. KIRAN MOTORS LIMITED (4005-01), PLOT NO. 443, FP NO. 26 MOJE PALGAM, ADAJAN, SURAT - 395009
602. ATUL MOTORS PVT LTD (5503-55-02), BEHIND HP PUMP,UNIVERSITY ROAD ,NEAR SNK SCHOOL, RAJKOT - 360005 PH : 8347005382.		613. NANDA AUTOMOBILES PVT LTD (-01), SUB PLOT NO. 05, SHOP NO. 3 & 4, BLOCK NO. 1162, SANTEJ, KALOL. - 380060 PH : 9727822000.		SIHOR		638. AMAR CARS PVT LTD (4009-02), PLOT NO.10&11, SURVEY NO.7 & 9, SONARAS COMPOUND, NEAR DGVCL OFFICE, KARMNATH MAHADEV TEMPLE LANE, KAPODARA, VARACHHA ROAD, SURAT - 395006 PH : 7069026512.
603. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-08), R.S. NO. 50/1, 150 FEET RING ROAD, RAIL NAGAR, RONKI, RAJKOT, GUJARAT. - 360006		SANTRAMPUR		624. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY PLOT NO 338, PAKKI 1 SIHOR BHAYNAGAR RAJKOT HIGHWAY. - 364240		639. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (4006-40-03), R. S. NO. 311, T. P. SCHEME-3, FINAL PLOT NO. 102/A, KATARGAM, SURAT, DISTRICT - SURAT, GUJARAT. - 395004 PH : 9099916099.
604. KATARIA AUTOMOBILES PRIVATE LIMITED (5504-55-01), S. NO. 10/1, TPS NO. - 10, KALAVAD ROAD, MOTAMAVA, RAJKOT, GUJARAT. - 360001 PH : 7573870001.		614. R B CARS PVT LTD (-01), NEAR PTC COLLEGE, SANT ROAD, SANTRAMPUR,DISTT.- PANCHMAHAL - 389260		SINOR		
605. KATARIA AUTOMOBILES PRIVATE LIMITED (5504-55-02), OPP.ADARSH MARBLE,BESIDE SANNY PAJI KA DHABA, JAMNAGAR-RAJKOT HIGHWAY. - 360001		SARDHAR		625. RAVIRATNA MOTORS PVT LTD (-01), NEAR SEVGA CHOKDI, SEVGA DABHOI ROAD, AT AND POST SEVGA, TALUKA SINOR, DIST. VADDODARA, PIN-391105, GUJARAT - 391105 PH : 7227055065.		
RAJPARDI		615. ATUL MOTORS PVT LTD (-01), PLOT NO.1, NEAR VISHWA CATER FEED, RAJKOT-BHAVNAGAR NATIONAL HIGHWAY - 360025		SITAPUR		
606. RAVIRATNA MOTORS PVT LTD (-01), R.S.NO.973, CTS NO. 1298, SHOPS PLOT NO.29 & 30, MOJE RAJPARDI, TALUKA-JHAGADIA, DISTT. BHARUCH - 393115		SAVLI		626. STARLINE CARS PVT LTD (-01), SHOP NO. 2, RUDRA ARCADE, REVENUE SURVEY NO. 129, VITHLAPUR (SITAPUR) BECHARAJI - VIRAMGAM HIGHWAY, DIST. AHMEDABAD, PIN CODE: 382120 - 382120		
		616. KIRAN MOTORS LIMITED (-01), SURVEY NO. 2592/1 PAKKI 2, NEAR RELIANCE PETROL PUMP, BHADRVIA CHOWKDI, SAVLI - TIMBA ROAD, SAVIL, TALUK - SAVLI, DISTRICT - VADDODARA, GUJARAT. - 391770 PH : 7984799054.		SOJITRA		
		SAYAN		627. AMAR CARS PVT LTD (-01), RAMDEV ARCADE, OPP. BUS STATION, AT - SOJITRA, DIST. - ANAND GUJARAT PIN 387240. - 387240 PH : 9662357557.		
		617. KIRAN MOTORS LIMITED (-01), PLOT NO.6 TO 10 OF R BLOCK, SURVEY NO.209, VILLAGE PARIYA, TALUKA: OLPAD, SAYAN - 394130		SONGADH		

Dealer Workshop (AS ON 31.01.2026)

640.	DHRU MOTORS (4002-40-03), PLOT NO.54/A, LAXMINARAYAN INDUSTRIAL ESTATE, UDHNA, SURAT-394210 - 394210 PH :9978900862.	651.	TANU MOTORS PVT LTD (-01), PLOT NO. 21 & 22, VAJEGADH, DEESA HIGHWAY, THARAD, DIST.-BANASKANTHA - 384220	660.	VIMCO MOTORS PVT LTD (-01), SHILALEKH COMPLEX, BLOCK-D, SURVEY NO-2713, VADNAGAR-VISNAGAR HIGHWAY, NEAR FOOD PARADISE HOTEL, VADNAGAR, GUJARAT - 385355 PH :7016623842.	673.	AMAR CARS PVT LTD (-01), SHAH ALKABEN JITENDRA KUMAR, VALETVA CHOWKI, NEAR VISAT MATA MANDIR, PADGOL ROAD, VALETVA, DIST- KHEDA, GUJARAT - 388440
641.	KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-09), SR NO-465+476, PLOT NUMBER:-1-9 AND 13-23, GURU KRUPA SHOPPING, NRLAXMIBA PARK SOCIETY, NH 8, KHOLWAD, KAMREJ, SURAT-394190. - 394190	THASARA		VADODARA		VALIA	
642.	DHRU MOTORS (4002-40-06), TP NO.59, FP NO. 148, SUB PLOT NO-2, NEAR D'MART, MADHURAM CIRCLE, DINDOLI, SURAT - 394210	652.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO 1 & 2, GIDC THASRA, BESIDES NARMADA VASAHAT, DAKORE THASRA ROAD, GUJARAT-388250 - 388250 PH :7984092780.	661.	KIRAN MOTORS LIMITED (2201-01), 909/4, G.I.D.C.MAKARPURA,VADODARA - 390010 PH :9624472699.	674.	RAVIRATNA MOTORS PVT LTD (-01), AT & PO VALIA, TA-VALIA, DIST. BHARUCH, VALIA - 393135
SURENDRANAGAR		TILAKVADA		662.	KIRAN MOTORS LIMITED (2201-02), PLOT NO.160, SUB-I NUTAN GUJ.INDL. ESTATE, OLD CHHANI ROAD, VADODARA - 390002 PH :9824207889.	VALOD	
643.	DREAM VEHICLES PVT LTD (-01), 261/P, OPP MARKETING YARD,GIDC AREA,WADHWAN CITY, SURENDRANAGAR - 363030	653.	RAVIRATNA MOTORS PVT LTD (-01), SURVEY NO-157, VILLAGE- MOTI KAMSOLI, TALUKA-TILAKVADA, DIST-NARMADA, PIN-391120. - 391120	663.	AMAR CARS PVT LTD (2203-01), GORWA ROAD,VARODARA,GUJARAT. - 390016	675.	DHRU MOTORS (-01), PLOT NO.5 TO 9, TAIYABA PARK SOCIETY, AT & PO - VALOD, TALUKA - VALOD, DISTT. - TAPI, GUJARAT. - 394640 PH :9712984522.
644.	DREAM VEHICLES PVT LTD (-02), PLOT NO-504/B, GIDC PHASE-3, WADHWAN, SURENDRANAGAR, GUJARAT-363030 - 363030 PH :9227775724.	UMERGAON		664.	AMAR CARS PVT LTD (2203-22-02), KALA GHODA, OPP. KIRTI MANDIR, VADODARA, DIS: VADODARA, GUJARAT - 390001 PH :7211109952.	VALSAD	
TALAJA		654.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO. 239, LORD COMPLEX, SHOP NO. B-9 AND B-10, UMERGAON, DISTRICT - VALSAD, GUJARAT. - 396170 PH :9624001794.	665.	KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-01), 984/4, GIDC, OLD NH-8,MAKARPURA ROAD, VADODARA, GUJARAT - 390010 PH :9904033422.	676.	KATARIA AUTOMOBILES PRIVATE LIMITED (-06), SURVEY NO. 211,ATUL-ALSAD ROAD,PARNERA,AVALSAD, GUJARAT - 396020
645.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO-168, DHANJIBHAI BALADHIYA NI WADI, NEAR MAHUVA PALITANA CROSS ROAD, MAHUVA BHAVNAGAR HIGHWAY, TALAJA-364140. - 364140 PH :9316626475.	UMRETH		666.	AMAR CARS PVT LTD (2205-22-01), VARASIYA AIRPORT ROAD, OPP POONAM CINEMA, KARELIBAUG, VADODARA, GUJARAT - 390016 PH :8980006756.	677.	AMAR CARS PVT LTD (9701-97-02), NEAR KALPANA WEIGH BRIDGE, OPP. VISHWAKARMA MANDIR, DHAMDACHI - 396001
TALALA		UNA		667.	KIRAN MOTORS LIMITED (2201-03), C/O ARBUDA COLD STORAGE, 823 POWER CABLE ROAD, DHARMSINH ROAD, OPP. UMA AMAR PARTY PLOT, NEAR CHHANI JAKAT NAKA, VADODARA - 390002 PH :2771122.	VANSDA	
646.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), SURVEY NO-55/9/1, PLOT NO-10, TALALA-VERAVAL HIGHWAY, AT-TALALA, DIST-GIR SOMNATH, 362150 - 362150 PH :8511147524.	656.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), SURVEY NO. 113, PLOT NO. 6, OPP. SWAMI VIVEKANAND VIDYALAYA, NEAR BANSIDHAR PETROL PUMP, BHAVNAGAR HIGHWAY, VAYAJPUR, UNA, DISTRICT - GIR SOMNATH, GUJARAT. - 362560	668.	KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-02), OPPOSITE SHARDA MANDIR HIGH SCHOOL, VINOBA BHAVE ROAD, SALATWADA, VADODARA - 390001 PH :8156017770.	678.	KATARIA AUTOMOBILES PRIVATE LIMITED (-02), JAMNABA PARK, VANSDA HANUMAN BARI CHAR RASTA, VANSDA-DHARAMPUR ROAD, RANI FALIYA, VANSDA, DISTRICT - NAVSARI, GUJARAT - 396580 PH :7624088188.
TALOD		UNJHA		669.	RAVIRATNA MOTORS PVT LTD (2206-22-01), SURVEY NO. 1581, MILES HOUSE, ATLADARA ROAD, VADODARA - 390012	VAPI	
647.	KIRAN MOTORS LIMITED (-01), SURVEY NO-168, NEAR BALAJI PARK, TALOD, TALUKA-TALOD, DIST-SABARKANTHA, PIN-383215 - 383215	657.	TANU MOTORS PVT LTD (-02), OPP. DHANA DAL FACTORY,MEHSANA PALANPUR HIGHWAY, UNJHA- 384170 PH :9727762079.	670.	KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-03), C/O SHIVAM TIMBER MART, BESIDES SIDDHESHWAR PLAZA,NEAR SARDAR ESTATE, NEW VIP ROAD, VADODARA -390019. - 390019	679.	KATARIA AUTOMOBILES PRIVATE LIMITED (-97-03), PLOT NO. C-29,NATIONAL HIGHWAY-8,G. I. D. C., VAPI, TAL. PARDI - 396195
TANKARA		UPLETA		671.	KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-04), OPP. RUDEKSH BLISS, RANG VATIKA ROAD, BAPOD, WAGHODIA - 390019	680.	KATARIA AUTOMOBILES PRIVATE LIMITED (-97-09), PLOT NO. 304/2, VILLAGE BALITHA, NH-8, OPP BABA SITARAM TEMPLE, NEAR SWAMINARAYAN SCHOOL, SALAV, VAPI , DISTRICT -VALSAD, GUJARAT - 369191
648.	ATUL MOTORS PVT LTD (-01), PLOT NO. 8/1, S. NO. 107, VILLAGE - JABALPUR, TALUKA - TANKARA, SUB DISTRICT - MORBI, DISTRICT - RAJKOT. - 363650	VADGAM		672.	RAVIRATNA MOTORS PVT LTD (-02), SURVEY NO 560, BEHIND IOCL PETROL PUMP., VILLAGE-VEMAL (SAMA), SAMA-SAVLI ROAD - 682024	681.	AMAR CARS PVT LTD (9701-97-01), SURVEY NO. 1034, 1035, NEAR WOODLAND HOTEL, NH-8, VILLAGE - BALITHA, VAPI. - 396145 PH :9327909504.
TARAPUR		VADNAGAR		VALETVA		VASO	
649.	AMAR CARS PVT LTD (-01), NEAR N K STEEL, TARAPUR ROAD, TARAPUR, DIST.-ANAND. - 388180 PH :9909960772.	659.	VIMCO MOTORS PVT LTD (-01), SURVEY NO-177, BESIDE ESSAR PETROL PUMP, VADGAM - PALANPUR ROAD, VADGAM, DIST - BANASKANTHA, GUJARAT - 385410. - 385410 PH :8909953333.	673.	KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-04), OPP. RUDEKSH BLISS, RANG VATIKA ROAD, BAPOD, WAGHODIA - 390019	682.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO -8, NEAR MADHURAM FARMHOUSE, MAUJA-VASO, DIST-KHEDA, GUJARAT - 387380
THANGADH						VERAVAL	
650.	DREAM VEHICLES PVT LTD (-01), NEAR GATE, OPP.RELIANCE PETROL PUMP. - 363530					683.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-05), SR.988/2/P1/P1, AT VILLAGE-DARI, TALUKA - PATAN, JUNGADH VERAVAL HIGHWAY, CHATRODA CHOWK, VERAVAL - 362255
THARAD						VIJAPUR	

684. STARLINE CARS PVT LTD (-04), HIMMATNAGAR HIGHWAY, ANANDPURA CHAR RASTA, VIJAPUR - 382870
PH :9909043635.

VIRAMGAM

685. KIRAN MOTORS LIMITED (-01), SURVEY NO.319/P, NILKI CHOKDI, VIRAMGAM, DISTT: AHMEDABAD, GUJARAT. - 382150
PH :8156016222.

VISAVADAR

686. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), OPP BUS STAND, AT PO-MANDAVAD, TAL-VISAVADAR, DIST-JUNAGADH, PIN-362130. - 362130

VISNAGAR

687. STARLINE CARS PVT LTD (-05), VISNAGAR -AMBAJI ROAD, OPP. DHAROI COLONY, VISNAGAR, DISTT. - MEHSANA - 384315
PH :7046046174.

VYARA

688. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (-01), SHOP NO. 11 & 12, BLOCK NO. 175/1/A, RS NO. 113, VYARA-SURAT ROAD, VYARA, DISTRICT - TAPI, GUJARAT - 394650
PH :9099916099.

WAGHODIA

689. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), OPPOSITE BHARAT PETROLEUM, WAGHODIA, TALUKA - WAGHODIA, DISTRICT - VADODARA, GUJARAT. - 391760
PH :7203013712.

WANKANER

690. ATUL MOTORS PVT LTD (-01), RAJKOT-WANKANER HIGHWAY, NEAR JADESHWAR CHAMBERS, NEAR INTERNATIONAL CERAMIC, WANKANER (GUJARAT) - 363621

HARYANA

ADAMPUR (HARYANA)

691. SARAOGI AUTOMOBILES PVT LTD (-01), KEWAT NO. 663, KHAT NO. 1147, KHESRI NO. 44/2/1/12/1-0, MANDI ADAMPUR, TEHSIL - ADAMPUR, DIST. -HISSAR, STATE - HARYANA. - 125052
PH :8607777153.

AMBALA

692. MODERN AUTOMOBILES (1801-18-01), MODEL TOWN CROSSING, G.T.ROAD, AMBALA, HARYANA. - 134003
PH :9215016044.

693. MODERN AUTOMOBILES (1801-18-02), NEAR AMAR PALI RESTAURANT, G.T. ROAD, AMBALA - 134003
PH :9215016044.

694. EAKANSH WHEELS PVT LTD (1802-18-01), STONE NO. 126, JAGADARI ROAD, VILLAGE TEPLA, AMBALA - 133001
PH :9991703000.

695. EAKANSH WHEELS PVT LTD (1802-18-03), PLOT NO. 8, BASANT VIHAR, BEHIND SWASTIK MARBLE, NEAR MOTOR MARKET, AMBALA CITY, HARYANA - 133001
PH :88813874888.

696. T R SAWHNEY MOTORS PVT LTD (1803-18-01), JAGGI GARDEN, BALDEV NAGAR, OPPOSITE AMBALA PASSPORT OFFICE, AMBALA - 134003
PH :9990110068.

ASSANDH

697. KARNAL MOTORS PVT LTD (8906-04), OPP. NEW GRAIN MARKET, KARNAL ROAD ASSANDH, DISTT. KARNAL - 272032
PH :7082111325.

BABARPUR

698. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (-01), G.T. ROAD, NEAR PARK RESIDENCY, SHIMLA MAULANA, BADOLI, BABARPUR, DISTT. PANIPAT - 132103

BAHADURGARH

699. COMPETENT AUTOMOBILES CO LTD (-01), PLOT NO. 1202, MIE PART B, BAHADURGARH, HARYANA - 124507
PH :8929648144.

BAPOLI

700. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (-01), KHEWAT NO. 136, VILLAGE - JHAMBA, TEHSIL - BAPOLI, DISTRICT - PANIPAT. - 132103
PH :9053400583.

BARARA

701. EAKANSH WHEELS PVT LTD (-01), SH-4, KALA AMB - SHAHBAD - BARARA ROAD, BARARA - 133201
PH :9991478100.

BARWALA

702. MODERN AUTOMOBILES (-01), KHEWAT/KHOTONI NO. 388, KHASARA NO. 46/9, 10, OPPOSITE AXIS BANK, VILLAGE BATAPUR, P.O. BARWALA, TEHSIL AND DISTT. PANCHKULA, HARYANA - 134118
PH :9896217059.

BAWAL

703. DINCO 4 WHEELS LLP (AUTO VIBES) (-01), KHATA NO. 326 AND KHATAUNI NO. 362, OPPOSITE PRATHAM HOUSING, NH-8, BAWAL, DISTRICT - REWARI, HARYANA. - 123501
PH :7082100250.

BERI

704. COMPETENT AUTOMOBILES CO LTD (-01), KHASRA NO. 9/19,KEWAT NO.320, BERI JHAJJAR ROAD,WAZIRPUR, - 124201

BHIWANI

705. JAGMOHAN AUTOMOTIVES PVT LTD (-01), DELHI ROHTAK ROAD, NEAR RADHA SWAMI SATSANG MANDIR, BHIWANI - 127021
PH :8685005592.

BILASPUR

706. PLATINUM MOTOCORP LLP (-02), KHASRA NO.54/67, CHOUDHARY NIHAL SINGH MARKET, BILASPUR CHOWK, NH-8, BILASPUR, DISTRICT - GURUGRAM. - 122413

BILASPUR-HR

707. PANDIT AUTOMOBILES PVT LTD (-01), NEAR GRAMIN BANK, JAGADHRI ROAD, BILASPUR, DISTRICT - YAMUNANAGAR, HARYANA. - 135102
PH :9992113854.

CHARKHI DADRI

708. JAGMOHAN AUTOMOTIVES PVT LTD (-02), BHIWANI LOHARU ROAD, CHARKHI DADRI, BHIWANI - 127306
PH :8059900538.

CHEEKA

709. EAKANSH MOTORS PVT LTD (-04), MARBLE MARKET, PATIALA ROAD, CHEEKA, HARYANA. - 136034
PH :8053086000.

CHHACHHRAULI

710. PANDIT AUTOMOBILES PVT LTD (-01), HB NO. 311, NEAR MDAY SCHOOL, TEHSIL - CHHACHHRAULI, DISTRICT - YAMUNA NAGAR. - 135103
PH :9812455895.

DADRI TOE

711. COMPETENT AUTOMOBILES CO LTD (-01), KHEWAT NO. - 270 MIN, KHATONI NO. - 319, DADRI TOYE, DISTT. JHAJJAR, HARYANA PIN 124103 - 124103
PH :9821308849.

DAHINA

712. DINCO 4 WHEELS LLP (AUTO VIBES) (-01), REWARI MAHENDERGARH ROAD, NEAR RAILWAY STATION, DAHINA, REWARI - 123411
PH :7082100201.

DHAND

713. EAKANSH MOTORS PVT LTD (-01), PANCHMUKHI CHOWK, KARNAL ROAD, DHAND, DISTT. KATHAL, HARYANA. - 136020
PH :8395906111.

DHARUHERA

714. DINCO 4 WHEELS LLP (AUTO VIBES) (-01), KHASRA NO. 57, KILLA NO. 7, SOHNA-DHARUHERA ROAD, OFF SECTOR-4A, DHARUHERA, DIST.-REWARI. - 122106
PH :7082100270.

ELLENABAD

715. SHAKTI MOTORS PVT LTD (-03), SURERA CHOWNK, NEAR CHAUDHARI MANI RAM COLLEGE, SIRSA ROAD, ELLENABAD - 125055
PH :8222900250.

FARIDABAD

716. VIPUL MOTORS PVT LTD (5801-58-01), 27/5 KM, MAIN MATHURA ROAD, FARIDABAD - 121002

717. VIPUL MOTORS PVT LTD (5801-58-03), UNIT-II, PLOT NO. 1A 19/6, MATHURA ROAD, FARIDABAD - 121006

718. TCS AUTOWORLD (A UNIT OF TCS & ASSOCIATES PVT LTD) (5804-58-02), PLOT NO-1A, SECTOR-6, FARIDABAD, - 121001

719. FAIR DEAL PREMIUM WHEELS PVT LTD (5807-58-01), PLOT NO -17A, NIT INDUSTRIAL AREA, NIT FARIDABAD - 121003
PH :8448296686.

720. TCS AUTOWORLD (A UNIT OF TCS & ASSOCIATES PVT LTD) (5804-58-02), 20.4 KMS MILESTONE, BHASKAR COMPOUND, AMAR NAGAR, MAIN MATHURA ROAD, FARIDABAD, HARYANA. - 121003

721. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (5806-01), 15/3, MATHURA ROAD, NEAR SECTOR-28, METRO STATION, FARIDABAD - 121003

722. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (5806-58-02), BYE PASS ROAD, PLOT NO. 12 SECTOR-9, FARIDABAD. - 121006

723. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (5806-58-03), 15-INDORA COMPLEX, NAHAR PAR NEAR SIDDHARTH SCHOOL, FARIDABAD, KHERKALANM PIN-121002, HARYANA - 121002

FARMANA

724. JAGMOHAN AUTOMOTIVES PVT LTD (-01), NEAR PARAMOUNT SCHOOL OF SCIENCE, KHARKHODA ROAD, FARMANA, DISTRICT SONIPAT, HARYANA - 131408

FARRUKHNAGAR

725. PLATINUM MOTOCORP LLP (-01), KHEVAT NO. 299, MUSTIL NO.-12, KHASRA NO.-19/3 AND 22/2, VILLAGE - SEHADPUR MOHAMADPUR, TEHSIL - FARRUKHNAGAR, DISTRICT - GURGAON. - 122506

Dealer Workshop (AS ON 31.01.2026)

FATEHABAD

726. SHAKTI MOTORS PVT LTD (–01), NH-10, SIRSA ROAD, FATEHABAD - 125050
PH :8222900217.

FEROZEPUR JHRIKA

727. PASCO AUTOMOBILES (–01), VILLAGE - CHAK RANGLA, TEHSIL - FIROZPUR JHRIKA DIST - NUH - 122104

GANAUR

728. JAGMOHAN AUTOMOTIVES PVT LTD (–01), SAROJ GARDEN, GT ROAD, GANNAUR, DISTRICT SONIPAT
RAILWAY ROAD, GANNAUR - 131101
PH :8199911106.

GHARAUNDA

729. KARNAL MOTORS PVT LTD (8906–05), WARD NO.-1, BEHIND GOVT. SR. SEC. SCHOOL COLONY, GHARAUNDA, - 132114
PH :8220222321.

GOHANA

730. JAGMOHAN AUTOMOTIVES PVT LTD (–01), NEAR KHANPUR CHOWNK, ROHTAK PANIPAT HIGHWAY, GOHANA, DISTT. - SONEPAT - 131301
PH :8685005521.

GURGAON

731. PASCO AUTOMOBILES (9506-95-01), PASCO HOUSE, 6 PALAM GURGAON ROAD, INDUSTRIAL ESTATE, GURGAON - 122006
732. VIPUL MOTORS PVT LTD (5801-95-02), 504, UDYOG VIHAR, PHASE-III, GURGAON - 122001
733. COMPETENT AUTOMOBILES CO LTD (9505-95-01), A-25, INFOCITY, SECTOR-33, GURGAON - 122004
734. PASCO AUTOMOBILES (9506-95-02), SECTOR 17-18, DIVIDER ROAD, GURGAON, HARYANA, - 122015
735. ROHAN MOTORS LTD (9508-95-01), 2482/84, SECTOR-52A, WAZIRABAD VILLAGE, OPP. AARDI CITY MALL, GURGAON - 122001
736. VIPUL MOTORS PVT LTD (5801–04), PLOT NO.5/22/1, SARHAUL VILLAGE, SECTOR-18, MAIN ROAD, GURGAON. (HARYANA) - 201102
737. PREM MOTORS PVT LTD (9511-95-01), PLOT NO.101, SAINI PLAZA MARKET, OPP. H BLOCK, NEAR RAM MANDIR, PALAM VIHAR, GURGAON - 122017
738. PREM MOTORS PVT LTD (9512-95-01), PLOT NO. 3, IDC, OPPOSITE SECTOR-14, GURGAON - 122001
739. RANA MOTORS PVT LTD (9509-95-02), PLOT NO.60, IDC, GURGAON - 122001
740. PASCO AUTOMOBILES (9510-95-01), PLOT NO. 34/3, DINESH JAIN COMPLEX, DELHI-AJMER EXPRESSWAY (NH-8), RAJIV CHOWK, GURGAON, HARYANA. - 122001

741. PREM MOTORS PVT LTD (9512-95-02), PLOT NO. 122, PALAM VIHAR EXTENSION, NEAR KRISHNA CHOWK, GURUGRAM - 122017
742. PLATINUM MOTOCORP LLP (–03), 5/13 SOHNA ROAD VILL-TIKRI ADJACENT TO POLARIS HOSPITAL, GURGAON HARYANA - 122018
743. PREM MOTORS PVT LTD (9512-95-G1), QILA NUMBER 8/2, MUSTAKIL NO - 25, SECTOR 17-18, DIVIDING ROAD, GURGAON, - 122015
PH :8800000817.
744. PLATINUM MOTOCORP LLP (–95-04), KILA NO. 15, SECTOR 93, NEAR HAYATPUR POLICE CHOWKI, HAYATPUR, GURGAON, PIN-122050, HARYANA - 122050
PH :9899118850.
745. PASCO AUTOMOBILES (9506-95-04), KHASRA NO. 191/2 & 190/2, MAIN DAULTABAD ROAD, OPP. OLD BHALLA CHEMICALS FACTORY, DAULATABAD INDUSTRIAL AREA, GURGAON, HARYANA - 122006
PH :8851227233.
746. SWASTIK MOTOCORP PVT LTD (9514-95-01), NEAR RAO JAI SINGH CHOWK, SIKANDERPUR BADHA, SECTOR-85, GURUGRAM, HARYANA - 122004 - 122004
747. COMPETENT AUTOMOBILES CO LTD (9505-95-02), MAIN FARUKH NAGAR ROAD, DHANKOT, GURGAON - 122505 - 122505
748. PREM MOTORS PVT LTD (9512-95-03), OPP. TRUE VALUE, SECTOR 17-18 DIVIDING ROAD GURGAON - 122001
749. SWASTIK MOTOCORP PVT LTD (9514-95-02), KHATA NO.141/146, KILA NO.16/2/2, SECTOR-83, GURUGRAM, - 122004
750. SWASTIK MOTOCORP PVT LTD (9514-95-03), KHATAUNI NO 135, KHASRA/KILA NO 66/3/2/1 & 66/3/2/2, GURGAON- SOHNA RD, NEAR VATIKA CHOWK, GURUGRAM - 122101

HANSI

751. JAGMOHAN AUTOMOTIVES PVT LTD (–01), G. T. HIGHWAY ROAD, MAIN ROHTAK HANSI ROAD, NEAR HOLLAND TRACTORS AGENCY & HP PETROL, HANSI
ROHTAK ROAD, HANSI (HISAR), HARYANA. - 124001
PH :8059900546.

HATHIN

752. ROHAN MOTORS LTD. (–01), MAIN MARKET ROAD, WARD NO.13HATHIN, PALWAL, PIN-121103, - 121103

HISSAR

753. MODERN AUTOMOBILES (7602-76-01), OPP. VIDYUT NAGAR, DELHI ROAD, HISAR, - 125005
PH :9355473000.
754. SARAOGI AUTOMOBILES PVT LTD (7604-76-01), 5TH KM STONE, SIRSA ROAD, HISSAR, HARYANA - 125001
PH :8607777043.

755. MODERN AUTOMOBILES (7602-76-02), OPP. BBMB, HISSAR DELHI ROAD, HISSAR - 125001
PH :9355473000.
756. UNIQUE MOTORS PVT LTD (7603-76-01), OPP. BHANU INDUSTRIES, DELHI ROAD, VILLAGE: SATROO, HISSAR (HARYANA) - 125006
PH :8818055535.

HODAL

757. ROHAN MOTORS LTD (–02), KILA NO. 8/2(7-11), 9(5-06), 12(5-0), 13(8-0), HIGHWAY ROAD, NEAR RAILWAY BYEPASS CHOWK, TEHSIL - HODAL, DIST -PALWAL. - 121106

ISMALABAD

758. KARNAL MOTORS PVT LTD (–01), KHEWAT NO. 928, KHASRA NO. 2760(5-14), 2761(800), VILLAGE - ISMAILABAD, TEHSIL - PEHOW, DIST. -KURUKSHETRA, HARYANA. - 136129
PH :7082007138.

ISRANA

759. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (–01), MUSHTIL NO.-119, NEAR MANDI MOD, MAIN GOHANA ROAD, ISRANA - 132107
PH :9053400417.

JASANA

760. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (–01), MUSTKIL NO -06, KILL NO -22 VILLAGE, JASANA FARIDABAD HARYANA-121101 - 121101

JHAJJAR

761. COMPETENT AUTOMOBILES CO LTD (–01), PLOT NO 5, NEAR GOVT POLYTECHNIC COLLEGE, JHAJJAR-BAHADURGARH ROAD, JHAJJAR, HARYANA - 124101
PH :9999493040.

JIND

762. EAKANSH MOTORS PVT LTD (–01), ROHTAK ROAD, NATIONAL HIGHWAY-71, OPP. GRAIN MARKET, JIND, HARYANA - 126102
PH :7876008184.

JULANA

763. EAKANSH MOTORS PVT LTD (–01), PLOT NO. 52.53, KHEVAT NO. 253/3, ROHTAK ROAD, JULANA, DISTRICT JIND, HARYANA.
JIND ROHTAK MAIN ROAD, OPP. NEW BUS STAND, JULANA, DIST. JIND, HARYANA - 126101
PH :8816802111.

KAITHAL

764. EAKANSH MOTORS PVT LTD (–01), AMBALA ROAD, NH-65, KAITHAL - 136027
PH :9671788801.

KALANAUR

765. JAGMOHAN AUTOMOTIVES PVT LTD (–01), BHIWANI ROAD, KALANAUR, DISTRICT ROHTAK - 124113
PH :9812000425.
766. PANIDIT AUTOMOBILES PVT LTD (–01), VPO. KALANAUR, DISTRICT- YAMUNANAGAR, HARYANA - 124113
PH :9053055550.

KALAYAT

767. EAKANSH MOTORS PVT LTD (–01), NEAR BUS STAND, KAITHAL-KALAYAT ROAD, VILLAGE-KALAYAT, DISTT. KAITHAL (HARYANA) - 136117
PH :9671788801.

KALKA

768. MODERN AUTOMOBILES (–01), ADJOINING INDIAN OIL PETROL PUMP, RAM NAGAR, NH-22, KALKA, DISTRICT – PANCHKULA, HARYANA - 133302
PH :9896217059.

KARNAL

769. KARNAL MOTORS PVT LTD (8906-89-01), 71/3 MILESTONE, G.T. ROAD, KARNAL - 132001
PH :822202399.
770. KARNAL MOTORS PVT LTD (8906-89-02), KHEWAT NO. 59, JHANJHARI GT ROAD, KARNAL - 132001
PH :8222022430.
771. MODERN AUTOMOBILES (8907-89-01), NEAR NAMASTE CHOWK, OLD G.T.ROAD, KARNAL - 132001
PH :7419900042.
772. MODERN AUTOMOBILES (8907-89-03), 117-118 KM MILE STONE NH1, NEAR VILLAGE KAMBOPURA, GT ROAD, KARNAL - 132001
PH :7419900042.

KATHURA

773. JAGMOHAN AUTOMOTIVES PVT LTD (–01), GOHANA MAHAM ROAD, KATHURA, GOHANA. - 131301
PH :8685005400.

KHARKHODA

774. JAGMOHAN AUTOMOTIVES PVT LTD (–01), NEAR KHANDA BYPASS CHOWK, SONIPAT ROAD, KHARKHODA, DISTRICT: SONIPAT, HARYANA - 131402
PH :8685005593.

KOSLI

775. DINCO 4 WHEELS LLP (AUTO VIBES) (–01), OPPOSITE RAJIV GANDHI STADIUM, TEHSIL ROAD KOSLI, DISTRICT – REWARI, HARYANA - 123302
PH :7082100202.

KUND

Dealer Workshop (AS ON 31.01.2026)

818. COMPETENT AUTOMOBILES CO LTD (-03),
DAULA-197, LOHATKI VILLAGE, KHASRA
NO.174, SOHNA ROAD, GURGAON, PIN-122103,
HARYANA - 122103

SONEPAT

819. JAGMOHAN AUTOMOTIVES PVT LTD (-01),
BAHALGARH-DELHI ROAD, OPP. POWER
HOUSE, SONIPAT - 131001
PH :9992200372
820. JAGMOHAN AUTOMOTIVES PVT LTD (-02),
GAYATRI GARDEN, MURTHAL ROAD, SONEPAT
(HARYANA) - 131001
PH :8685005686

821. JAGMOHAN AUTOMOTIVES PVT LTD (-03), O-11
INDUSTRIAL AREA, SONIPAT, HARYANA. -
131001
PH :9812615000.

TAURU

822. PASCO AUTOMOBILES (-01), KILA NO. 34/1/2,
REWARI ROAD, TAURU, DIST.-MEWAT,
HARYANA. - 122015

TOHANA

823. SHAKTI MOTORS PVT LTD (-01), NEAR GREEN
VALLEY PUBLIC SCHOOL, RATIA ROAD,
TOHANA - 125120
PH :8572800991.

TOSHAM

824. JAGMOHAN AUTOMOTIVES PVT LTD (-01),
BHIWANI ROAD, TEH. TOSHAM, DIST. BHIWANI.
- 127040
PH :8059900566.

YAMUNANAGAR

825. PANDIT AUTOMOBILES PVT LTD (-01),
GOVINDPUR ROAD, JAGADRI, YAMUNANAGAR
- 135001
PH :9812455896.
826. PANDIT AUTOMOBILES PVT LTD (-03), PLOT
NO.E-8, INDUSTRIAL AREA, ITI ROAD, YAMUNA
NAGAR (HARYANA) - 135001
PH :9812455896.

HIMACHAL PRADESH

ALAMPUR

827. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
KHASRA NO. 1606/1582, STATE HIGHWAY
PALAMPUR-SUJANPUR AT JANGAL, VILLAGE -
ALAMPUR, DIST.-KANGRA. - 176082

BADDI

828. GOYAL MOTORS PVT LTD (-04),
KHATA/KHATAUNI NO. 26/26, KHASRA NO.
93/56/32 AND 94/56/32, KITAS 2, REVENUE
MAUZA - CHAK JANGI, HADBAST NO. 203,
TEHSIL - BADDI, DISTRICT - SOLAN, HIMACHAL
PRADESH. - 173205
PH :9418076972.

BAIJNATH

829. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
TASHI JONG, PAPROLA-BAIJNATH, NH-20,
KANGRA-MANDI ROAD, TEHSIL BAIJNATH,
DISTT. KANGRA - 176115

BANGANA

830. COMPETENT AUTOMOBILES CO LTD (-01),
VILLAGE BHALET, POST OFFICE DOHGI,
TEHSIL BANGANA, DISTT UNA, HIMACHAL
PRADESH - 174307

BANIKHET

831. PATHANKOT VEHICLEADES PVT LTD (-01),
KHASRA NO.709, KHATA KHATOONI NO.23,
BANIKHET, THE-DALHOUSE, DISTT. CHAMBA -
176303

BILASPUR-HP

832. COMPETENT AUTOMOBILES CO LTD (-01),
KHEWAT NO. 8/8 KHATAUNI, KHASRA NO.
137/30, 31, MAUZA KOTHI, PARGANA 9, P. O. -
CHANDPUR, TEHSIL - SADAR, DIST.-
BILASPUR, HIMACHAL PRADESH. - 174001

CHAMBA

833. PATHANKOT VEHICLEADES PVT LTD (-01),
MOHALLA SULTANPUR, BALU BRIDGE,
CHAMBA - 176310
834. PATHANKOT VEHICLEADES PVT LTD (-02),
KHASRA NO. 88/96, 1 & KHASRA NO.628/276,
VILLAGE & PO SAROO, THE. & DISTT. CHAMBA,
HIMACHAL PRADESH. - 176310

CHOWARI

835. PATHANKOT VEHICLEADES PVT LTD (-01),
KHATA KHATNI NO. 24/32 MIN, KHASRA NO. 90,
VILLAGE - LAHRU, P.O. - PARCHHORE, TEHSIL -
BHATTIYAT, DIST.-CHAMBA, HAMACHAL
PRADESH. - 144416
PH :8894569632.

DARLAGHAT

836. GOYAL MOTORS PVT LTD (-01), VILL SYAR, ,
PO DARLAGHAT,TEH ARKI, HIMACHAL
PRADESH - 171102

DEHRA

837. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-02),
VILLAGE & P.O. SUNHET, TEHSIL DEHRA, DIST.
KANGRA - 177101
PH :9817013058.

GAGGAL

838. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
NATIONAL HIGHWAY -20, ZAMANABAD ROAD,
ICHHI, GAGGAL, DISTT. KANGRA , HIMACHAL
PRADESH - 176209
PH :9418988832.

GAGRET

839. COMPETENT AUTOMOBILES CO LTD (-01),
HOSHIAHPUR ROAD, OPP. HPSEB OFFICE,
GAGRET, DISTRICT UNA, HIMACHAL PRADESH
- 177021

GHUMARWIN

840. COMPETENT AUTOMOBILES CO LTD (-01),
WARD NO 6, KHASRO NO 1619KHEWAT NO
129/148, ABDHANIGHAT VILLAGE - 174021

HAMIRPUR

841. COMPETENT AUTOMOBILES CO LTD (-01),
VILLAGE TIKKAR, P.O DIDWIN TEHSIL & DISTT,
HAMIRPUR - 177401
PH :9805510276.

INDORA

842. PATHANKOT VEHICLEADES PVT LTD (-01),
VILLAGE CHANDOR, PO & TEHSIL INDORA,
DISTT. KANGRA, PIN-176401, HIMACHAL
PRADESH - 176401
PH :9418008627.

JAISINGHPUR

843. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
HARSI PATTAN ROAD, OPP. SABJI MANDI,
TEHSIL - JAISINGHPUR, DIST. - KANGRA,
HIMACHAL PRADESH. - 176095

JASWAN

844. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
JASWAN, KANGRA, HIMACHAL PRADESH. -
221502

JAWALI

845. PATHANKOT VEHICLEADES PVT LTD (-01),
VILLAGE - TIUKARI, NEAR MAHAVIR HOSPITAL
LUBH ROAD, TEHSIL - JAWALI, DIST.-KANGRA,
HAMACHAL PRADESH. - 176023
PH :9418195333.

JHANDUTTA

846. COMPETENT AUTOMOBILES CO LTD (-01),
BEHRAN,TEHSIL JHANDUTTA, DISTRICT
BILASPUR H.P. - 174031

JOGINDER NAGAR

847. COMPETENT AUTOMOBILES CO LTD (-01),
VILL. DHELU PO DOHAG, JOGINDER NAGAR
(H.P.) - 175015
PH :9805005754.

JWALAMUKHI

848. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
KHASRA 880/613, MAUJA BOHAN, TEHSIL
JWALAMUKHI, DISTRICT KANGRA - 176031
PH :9418488999.

KULLU

849. COMPETENT AUTOMOBILES CO LTD (-01),
PLOT 384, INDUSTRIAL AREA, SHAMSHI, KULLU
(HP) - 175126
PH :7018035136.

KUNIHAR

850. GOYAL MOTORS PVT LTD (-01), KHATA NO. -
77, VILLAGE KOTHI, P.O. KUNNIHAR, TEHSIL -
ARKI, DISTRICT - SOLAN, HIMACHAL PRADESH
- 173207
PH :9418312472.

MANALI

851. COMPETENT AUTOMOBILES CO LTD (-01),
VILL. CHOURI VIHAR (AALU GROUND), P.O. &
THESEL- MANALI, DIST. KULLU, (H.P.) - 175131
PH :9418387465.

MANDI

852. COMPETENT AUTOMOBILES CO LTD (-01),
GUTKAR INDUSTRIAL AREA, DELHI MANDI
ROAD, N.H.21 GUTKAR, MANDI - 124501

MATIANA

853. GOYAL MOTORS PVT LTD (-), VPO MATIANA (
NEAR DEV BHOOMI APPLE COLD
STORAGE),THEOG. SHIMLA, HIMACHAL
PRADESH-171212. - 171212

NADAUN

854. COMPETENT AUTOMOBILES CO LTD (-01),
VILLAGE JALAN, KHASRA NO.183, PO & TEHSIL
NADAUN, DISTT. HAMIRPUR, HIMACHAL
PRADESH - 177041
PH :9805737436.

NAGROTA

855. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
MALAN, NAGROTA - BAGWAN, KANGRA, H.P. -
176047
PH :7018268819.

856. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-06),
JHIKLI AMBARI, MOUZA AMBARI, MALAN,
NAGROTA BAGWAN, TEHSIL & DISTT. KANGRA,
HIMACHAL PRADESH - 176047
PH :7018268819.

NAGROTA SURIAN

857. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
KHEWAT NO. 115, KHATAUNI NO. 127, KHASRA
NO. 2037, MAHAL BASSA, SUB TEHSIL -
NAGROTA SURIAN, DISTRICT - KANGRA. -
176027
PH :9418488999.

NALAGARH

858. GOYAL MOTORS PVT LTD (-01), NEAR HP PETROL PUMP, VILLAGE PEERSTHAN, P.O & TEHSIL, NALAGARH, DISTT. SOLAN (H.P.) - 174101
PH :9418704572.

NERWA

859. GOYAL MOTORS PVT LTD (-01), KHASRA NO. 482, VILLAGE - KEDI, TEHSIL - NERWA, DISTRICT - SHIMLA, HIMACHAL PRADESH. - 171210
PH :9418663572.

NURPUR

860. PATHANKOT VEHICLEADES PVT LTD (-01), VILLAGE JACHH, PO JASSUR, TEHSIL NURPUR, DISTT. KANGRA - 176201
861. PATHANKOT VEHICLEADES PVT LTD (-02), VILL. NANGLAHAR, PO-RAJA KA BAG, TEH - NURPUR, KANGRA - 176201

PALAMPUR

862. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (-01), NEAR IOCL PUMP, KANGRA MANDI ROAD, PALAMPUR, DISTT. KANGRA, HIMACHAL PRADESH. - 176061

PAONTA SAHIB

863. GOYAL MOTORS PVT LTD (-02), OPP BIBIJEET KAUR SENIOR SECONDARY SCHOOL, SHAMSHERPUR - NH-72, PAONTA SAHIB - 173025
PH :9459210872.

RAJGARH

864. GOYAL MOTORS PVT LTD (-01), KHATA NO. 517/505, 478/3, KHASRA NO. - 38/98 VILLAGE NERI RATAULI, P.O. RAJGARH TEHSIL - RAJGARH, DISTRICT - SIRMAUR - HIMACHAL PRADESH - 173101
PH :9418312472.

RAMPUR

865. GOYAL MOTORS PVT LTD (-01), KHASRA NO. 824/825, MINN NO. 155/396, 163/411, NAGLI, ROHRU ROAD, RAMPUR, TEHSIL - RAMPUR, DISTRICT - SHIMLA. - 172001
PH :9459296572.

ROHRU

866. GOYAL MOTORS PVT LTD (-01), CHARGAON SHIMLA ROAD, ROHRU, DISTRICT - SHIMLA - 171207
PH :9418016072.

SALOONI

867. PATHANKOT VEHICLEADES PVT LTD (-01), KHASRA NO. 299/174, VILLAGE. MAHJEER, TEHSIL-SALOONI, DISTT. CHAMBA, PIN-176320, HIMACHAL PRADESH - 176320
PH :9418059252.

SARAHAN

868. GOYAL MOTORS PVT LTD (-01), KHATA KHATUNI NO. 686/623/591/451 VILLAGE TIKKAR (280), TEHSIL PACHAD, DISTT SIRMAUR (HP) - 173024

SHAHUPUR

869. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (-01), VILLAGE MANJHGRAN, P.O. DRAMMAN, TEHSIL SHAHPUR, DISTT. KANGRA, HIMACHAL PRADESH - 176206
PH :9459900241.

SHIMLA

870. GOYAL MOTORS PVT LTD (-01), TARADEVI, SHIMLA,(H.P.) - 171010
PH :9418663572.

SOLAN

871. GOYAL MOTORS PVT LTD (-01), DEON GHAT, SOLAN - 173211
PH :9418138772.

UNA

872. COMPETENT AUTOMOBILES CO LTD (-01), VILLAGE RAINSARY, P.O JHALERA, TEHSIL & DISTRICT-UNA - 174303
PH :9805737436.

JAMMU AND KASHMIR

AKHNOOR

873. JAMMU MOTORS PRIVATE LIMITED (-01), MAIN ROAD DASKAL, TEHSIL - AKHNOOR, DISTRICT - JAMMU - 181201
PH :9419118393.

874. JAMMU MOTORS. PVT.LTD. (-02), MAIN ROAD DASKAL NEAR HANUMAN CHOWK, NEAR HANUMAN CHOWK AKHNOOR - 181201

BANDIPORA

875. JAMKASH VEHICLEADES PVT LTD (1205--04), AJAR BANDIPORA, J&K - 193502
PH :9149726427.

BARAMULLA

876. JAMKASH VEHICLEADES PVT LTD (-01), VILLAGE SANGRAMA,WAGAROO, BARAMULLA - 193101
PH :7889612218.

BHADRAWAH

877. J&K VEHICLEADES PVT LTD (-01), KHASRA NO.2863, LOWER SUNGLI UNIVERSITY ROAD, BHADERWAH, DISTT. DODA, J&K - 182222

BHASOLI

878. JAMKASH VEHICLEADES PVT LTD (-01), ZERO MORTH, BASHOLI, DISTT. KATHUA, BASHOLI, PIN-184201, JAMMU & KASHMIR - 184201
PH :9018847230.

BUDGAM

879. HIGHLAND AUTOMOBILES PVT LTD (-04), KHASRA NO. 208 MIN, KHEWAT NO. 9 AND KHATTA NO. 55, MOUZA - PALLAR, TEHSIL AND DIST.-BUDGAM. - 191111
PH :9419019898.

CHOWKI CHOURA

880. JAMMU MOTORS PRIVATE LIMITED (-01), KHASRA NO. 37 MIN, ADJACENT TO J&K BANK, JAMMU POONCH HIGHWAY, CHOWKI CHOURA, JAMMU & KASHMIR - 185154
PH :9596975060.

DAYALACHAK

881. JAMKASH VEHICLEADES PVT LTD (-01), KHASRA NO. 183, KHEWAT NO.14, KHATANO-74, VILLAGE CHAK SAKTA, DAYALACHAK, TEHSIL & DISTT. KATHUA, JAMMU & KASHMIR - 184121
PH :88492849170.

DODA

882. J&K VEHICLEADES PVT LTD (-01), MINTO CAR CARE, AKHYARABAD, MAIN ROAD, DODA CITY, DODA (J&K) - 182202
PH :9419796821.

GANDERBAL

883. JAMKASH VEHICLEADES PVT LTD (-01), MALSHAIE BAGH, GANDERBAL (J&K) - 191201
PH :9419000828.

HANDWARA

884. JAMKASH VEHICLEADES PVT LTD (-01), KHEWAT NO-31, KHATTA NO-298, SURVEY NO- 3764/1816, MOZA BRARIPORA, TEH- HANDWARA, DIST- KUPWARA, J&K - 193221

HANJWARA PATTAN

885. JAMKASH VEHICLEADES PVT LTD (-01), NEAR LIGHT HOUSE SCHOOL, HANJWARA BRIDGE, HANJWARA PATTAN - 193121

JAMMU

886. JAMKASH VEHICLEADES PVT LTD (3306-33-01), NH-1A, BYE PASS, OPP CHANNI HIMMAT, JAMMU - 180015
PH :6006801639.

887. JAMKASH VEHICLEADES PVT LTD (3306-33-02), NEAR GENERAL BUS STAND, OPP. PHE OFFICE, B.C. ROAD, JAMMU - 180001
PH :9419224014.

888. JAMKASH VEHICLEADES PVT LTD (3306-33-04), SUNJWAN, DISTT. JAMMU - 180011
PH :7006018600.

889. PEAKS AUTO PVT LTD (3312-33-01), GANGYAL INDUSTRIAL AREA, BEHIND COCA COLA FACTORY, JAMMU - 180010
PH :9697001125.

890. JAMMU MOTORS PRIVATE LIMITED (3308-33-01), 6, AKHNOOR ROAD, JAMMU. - 180001
PH :9419118393.

891. JAMMU MOTORS PRIVATE LIMITED (3308-33-02), PLOT NO.2, RAJPURA CHUNGI OPP AG OFFICE, AKHNOOR ROAD, JAMMU - 180002
PH :9419118393.

892. PEAKS AUTO PVT LTD (3312--02), KHASRA NO.425 & 426, KHATA NO.425 & 426, TOPE SHRKHANIAN (BACKSIDE OF BEST PRICE), AKNOOR ROAD, JAMMU. - 180001
PH :9697001125.

893. JAMKASH VEHICLEADES PVT LTD (-07), KHEWAT NO. 25, KHATA NO. 355, KHASRA NO. 544 MIN PALOURA ROAD, JANIPUR, JAMMU. - 180007
PH :9419191502.

894. NSF VEHICLES (UNIT OF NEW STYLE FABRICATORS PVT LTD) (3314-33-01), INDUSTRIAL ESTATE, ASHOK NAGAR (ADJOINING BAJAJ 2WHEELER), NEAR SATWARI, JAMMU - 180003

895. NSF VEHICLES (UNIT OF NEW STYLE FABRICATORS PVT LTD) (-02), RANIBAGH, NEAR JAMMU AIRPORT, JAMMU., NEAR JAMMU AIRPORT, JAMMU. - 180001

KATHUA

896. JAMMU MOTORS PRIVATE LIMITED (-01), WARD NO.13, CHAK PARTAP SINGH HATLI MORH, NH1-A, KATHUA TEHSIL KATHUA - 184101
PH :9419118393.

KATRA

897. J&K VEHICLEADES PVT LTD (-01), VILLAGE: KOTLI BAJALAN, TEHSIL - KATRA, DISTRICT - REASI, JAMMU AND KASHMIR. - 182301

KRALPORA

898. JAMKASH VEHICLEADES PVT LTD (-01), SHULOORA ROAD, KARALPORA, DISTRICT - KUPWARA, JAMMU & KASHMIR. - 193224

KUPWARA

899. JAMKASH VEHICLEADES PVT LTD (1205--03), JAMKASH VEHICLEADES, NEAR GM FILLING STATION, DC OFFICE ROAD KUPWARA - 193223
PH :9622499902.

MAGAM

900. JAMKASH VEHICLEADES PVT LTD (-01), KHASRA NO. 34, MOUZA - CHICHILOLA, MAGAM, GULMARG ROAD, TEHSIL - KWARHAMA, DIST.-BARAMULLA, JAMMU & KASHMIR. - 193401
PH :8825016046.

MAHANPUR

Dealer Workshop (AS ON 31.01.2026)

901. JAMMU MOTORS PRIVATE LIMITED (-01), MAHANPUR, DISTRICT KATHUA, TEHSIL MAHANPUR - JAMMU & KASHMIR - 184202 PH :9596975060.
- MANJAKOTE**
902. JAMKASH VEHICLEADES PVT LTD (-01), NEAR PHC ROAD MANJAKOTE, TEHSIL MANJAKOTE, DISTRICT RAJOURI, J&K - 185131 PH :7006014395.
- MARH**
903. JAMKASH VEHICLEADES PVT LTD (-01), KHASRA NO. 269, LOWER MUTHI DHARMAL, DIST-JAMMU, STATE - JAMMU & KASHMIR. - 181205 PH :7006898474.
- NOWSHERA**
904. JAMMU MOTORS PRIVATE LIMITED (-01), TEHSIL - NOWSHERA, DISTRICT RAJOURI, JAMMU & KASHMIR - PIN CODE - 185152 - 185152
- PANCHARI**
905. J&K VEHICLEADES PVT LTD (-01), VILLAGE MIR, TEHSIL PANCHARI, DISTT. UDHAMPUR J&K - 182125
- PHINTER**
906. JAMKASH VEHICLEADES PVT LTD (-01), KHASRA NO.2293/405 AND KHEWAT NO.81/98, GURHA KALYAL, PHINTER, TEHSIL RAMKOT, DISTT. KATHUA, J&K. - 184203
- POONCH**
907. JAMKASH VEHICLEADES PVT LTD (-01), VILLAGE KUNUYIAN, TEHSIL HAVELI POONCH, JAMMU & KASHMIR - 185121 PH :7006014395.
- PULWAMA**
908. PEAKS AUTO PVT LTD (1204-03), MUGHAL ROAD, GUNGOO, PULWAMA - 192301 PH :9519275151.
- RAJOURI**
909. JAMKASH VEHICLEADES PVT LTD (3306-06), KALAKOTE ROAD, VILLAGE BADOL, RAJOURI - 185131 PH :7006014395.
- REASI**
910. J&K VEHICLEADES PVT LTD (-01), HOSPITAL ROAD, MADI, REASI, REASI, JAMMU & KASHMIR - 182311
- RS PURA**
911. JAMKASH VEHICLEADES PVT LTD (3306-03), GAGAIN MORTH, R S PURA, JAMMU, - 181102 PH :9419190370.
- SHOPIAN**

912. PEAKS AUTO PVT LTD (-01), AGLAR SOFANAMAN, SHOPIAN - 192303 PH :9519275151.
- SIDHRA**
913. JAMKASH VEHICLEADES PVT LTD (-01), KHASRA NO.80 & KHATA NO.100, VILLAGE SIDHRA, NH1A, NEAR BHARAT PETROLEUM PETROL PUMP, TEH. & DISTT. JAMMU - 180019 PH :9419134144.
- SRINAGAR**
914. HIGHLAND AUTOMOBILES PVT LTD (1202-01), SONWAR, SRINAGAR - 190001 PH :9419057564.
915. JAMKASH VEHICLEADES PVT LTD (1205-01), HYDERPURA BY PASS CROSSING, SRINAGAR - 190015 PH :7006037255.
916. PEAKS AUTO PVT LTD (1204-12-01), BYE PASS ROAD, NH - 1A, NEAR HOTAL SILVER STAR, SRINAGAR - 191101 PH :9519275151.
917. JAMKASH VEHICLEADES PVT LTD (1205-05), NARBAL CROSSING, NH-1A, SRINAGAR, JAMMU & KASHMIR - 190017 PH :9796700750.
918. KATHROO MOTORS PRIVATE LIMITED (1207-12-01), MIRZA KAMIL CHOWK, HAWAL SRINAGAR - 190001
- SUMBAL**
919. JAMKASH VEHICLEADES PVT LTD (-01), GULSHAN PORA, SRINAGAR- SUMBAL ROAD, DISTRICT BANDIPORA, J&K- 193501 - 193501
- SURANKOTE**
920. PEAKS AUTO JAMMU PVT LTD (-01), NEAR KNIET KING FILLING STATION, BHARAT PETROLEUM, POONCH MUGHAL ROAD, SURANKOTE, DISTT: POONCH - 185101 PH :9697001125.
- THANA MANDI**
921. JAMKASH VEHICLEADES PVT LTD (-01), HASPLOTE(CHRUNG), TEHSIL THANAMANDI, DISTRICT RAJOURI -185212 - 185212 PH :9419267607.
- UDHAMPUR**
922. J&K VEHICLEADES PVT LTD (-01), NATIONAL HIGHWAY 1A, NEAR DAK BANGLOW, UDHAMPUR - 182101 PH :7006881028.
- URI (CHAAL BONIYAAR)**
923. JAMKASH VEHICLEADES PVT LTD (-01), KHASRA NO.346/118, KEWAT NO.15, KHATA NO.30, MOUZ-CHALAL (URI), TEHSIL-BONIYAR, DISTT. BARAMULLA - 193123 PH :9419074012.
- VIJAYPUR**

924. JAMMU MOTORS PRIVATE LIMITED (-01), JAMMU PATHANKOT HIGHWAY, VIJAYPUR (SAMBAA), J&K - 184120 PH :9596975060.
- JHARKHAND**
- BAGODAR**
925. RELIABLE INDUSTRIES (-01), SONTURPI, GT ROAD, GAIDA, BAGODAR, GIRIDIH, JHARKHAND. - 825322
- BALIAPUR**
926. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (-01), WARD NO 53, HOLDING NO - SAF3797, KANDRA SINDRI, BALIAPUR. - 828123 PH :7980074787.
- BOKARO**
927. HINDUSTAN AUTO AGENCY (-02), R1, CITY CENTRE, SECTOR-4, BOKARO STEEL CITY, BOKARO - 827004
928. HINDUSTAN AUTO AGENCY (-03), M2, SECTOR-4, CITRY CENTRE, BOKARO STEEL CITY (JHARKHAND) - 827004
- BUNDU**
929. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (-01), NH - 33 NEAR PPK COLLAGE , PS - BUNDU, RANCHI, JHARKHAND - 835204
- CHAIBASA**
930. PEBCO MOTORS LIMITED (-01), KOLHAN TIMBER MERCHANT, NEAR RAILWAY CROSSING, TATA ROAD, CHAIBASA, DISTRICT - WEST SINGHDHUM, JHARKHAND. - 833201
- CHANDANKIYARI**
931. HINDUSTAN AUTO AGENCY (-01), KHATA NO.119,PLOT NO.4055 AND 4056, MOUZA BARKAMA,MAIN ROAD,CHANDANKIYARI, - 828134
- CHANDWA**
932. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (-01), HILLTOP MOTORS, MAIN ROAD, CHANDWA, PO AND PS, CHANDWA - 829203, DIST - LATEHAR, JHARKHAND - 829203 PH :7061157502.
- CHIRKUNDA**
933. RELIABLE INDUSTRIES (-01), PLOT NO. 109-110, KHATIAN NO. 12, MOUZA NO. 251, P.S. - CHIRKUNDA, DISTRICT - DHANBAD, JHARKHAND. - 828202
- DALTONGANJ**
934. PREMSONS MOTOR UDYOG PVT LTD (5103-02), KACEHRI ROAD, DALTONGANJ, PALAMU - 822101 PH :9835507004.

- DEOGHAR**
935. RELIABLE INDUSTRIES (5202-03), SHAHEED ASHRAM ROAD, JHAUNSAGARHI, DEOGHAR, - 814112
936. RELIABLE INDUSTRIES (-01), MOUZA - CHAKRIPIHARI, NO. 587, WARD NO. 36, DEOGHAR, JHARKHAND. - 814114
- DHANBAD**
937. RELIABLE INDUSTRIES (5202-01), KATRAS ROAD, DHANBAD, JHARKHAND. - 826001
938. RELIABLE INDUSTRIES (5202-02), BEHIND PRABHAT KHABAR, AT: KOLAKUSMA, P.O K.G. ASHRAM, SARAIIDHELA , DHANBAD - 828127
939. RELIABLE INDUSTRIES (5202-52-06), SUGIADIH, HIRAK ROAD, SARAIIDHELA, DHANBAD, JHARKHAND. - 828127 PH :9334094940.
940. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (-01), NH-2, GT ROAD, SAHARJORI, BARWADA, DHANBAD. - 828109
941. RELIABLE INDUSTRIES (5202-09), TILAKRAIDIH, K G ASHRAM, NH-32, GOVINDPUR, DHANBAD, JHARKHAND - 828109 PH :9031096662.
- DUMKA**
942. RELIABLE INDUSTRIES (-01), OPP DUDHANI PETROL PUMP, DEOGHAR-PAKUR ROAD,DUMKA (JHARKHAND) - 814101 PH :6205161170.
943. RELIABLE INDUSTRIES (-02), GILAN PARA, NEAR TOWER CHOWK - 814110
- GARHWA**
944. PREMSONS MOTOR UDYOG PVT LTD (-01), KHATA NO. 4, KHESRA NO. 108, 109, THANA NO. 342, PIPRAKALA, GARHWA, JHARKHAND. - 822114
- GHATSHILA**
945. PEBCO MOTORS LIMITED (-01), PLOT NO. 68, KHASRA NO.128, MAUZA PAORA, NH-33, NEAR FULL-DUNGRI CHOWK,GHATSHILA, EAST SINGHDHUM (JHARKHAND) - 832303
- GIRIDIH**
946. RELIABLE INDUSTRIES (5202-04), MOHANPUR, PACHAMBA ROAD, GIRIDIH. - 815301
947. RELIABLE INDUSTRIES (-08), PLOT NO. 7, HALKA NO. 12, KHATA NO. 2, THANA NO. 266, MOUZA - CHATRO, GIRIDIH, JHARKHAND. - 815301 PH :9835835101.
- GODDA**
948. RELIABLE INDUSTRIES (5202-05), ASANBANI CHOWK, MAIN ROAD, GODDA. - 814133 PH :6207129088.
- GOMIA**

949. HINDUSTAN AUTO AGENCY (-01), HAZARI, GOMIA-KATHWARA ROAD, - 829111
- GUMLA**
950. PREMSONS MOTOR UDYOG PVT LTD (5103-04), VANASTHALI COMPLEX PUGUCHAMPA NAGAR,NH-23,SISAI ROAD, GUMLA - 835207 PH. 9835507004.
- HAZARIBAGH**
951. HINDUSTAN AUTO AGENCY (-01), NEAR SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. - 825301
952. HINDUSTAN AUTO AGENCY (-02), MASIPIRHI, BABHANBAY, HAZARIBAGH, JHARKHAND. - 825301
- JAMSHEDPUR**
953. PEBCO MOTORS LIMITED (3101-31-01), MEDIUM SECTOR, INDUSTRIAL AREA, ADITYAPUR, JAMSHEDPUR - 831001 PH. 9308433388.
954. PEBCO MOTORS LIMITED (3101-31-02), 16 BALICHALA, CONTRACTORS & GODOWN AREA, SONARI, JAMSHEDPUR - 831011 PH. 9308433388.
955. MOTOR WORLD (A DIVISION OF KALIMATI MOTORS PVT LTD) (3102-31-01), N.H.33, NEAR PARDIH CHOWK, MANGO, JAMSHEDPUR - 831012
- JAMTARA**
956. RELIABLE INDUSTRIES (-01), PLOT NO. 483, PARWAT BIHAR, DUMKA ROAD, JAMTARA, JHARKHAND. - 815351
- KATRAS**
957. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (-01), RAJHANS REFRACTORIES, OPP. LIC OFFICE, RAJGANJ ROAD, KATRAS, DISTT. DHANBAD, JHARKHAND-828114 - 828114 PH. 8910900556.
- KHUNTI**
958. PREMSONS MOTOR UDYOG PVT LTD (-01), PLOT NO. 747, KHATA NO. 2, DAHUGUTU, CHAIBASA ROAD, KHUNTI, JHARKHAND. - 835210 PH. 9835507004.
- KODARMA**
959. HINDUSTAN AUTO AGENCY (-01), AT LALMAN DIGTUH, BESIDE KRISHNA SURYA COLD STORAGE, JHUMRI TILAIYA, P.S. - TILAIYA, DISTRICT - KODERMA, JHARKHAND. - 825409 PH. 6201998936.
- MURI**
960. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (-01), NEAR BANK OF INDIA, SILI MAIN ROAD, MURI, PIN - 835102 - 835102 PH. 7061157502.

NAGAR UNTARI

961. PREMSONS MOTOR UDYOG PVT LTD (-01), PLOT NO.-598, KHATA, NO.-134, CITY, SHRI BANSHIDHAR NAGAR, JHARKHAND 822121 - 822121

PAKUR

962. RELIABLE INDUSTRIES (-01), C/O KHOKHAN RAY,HIRANPUR,PAKUR, MAIN ROAD,VILL.SAHERKOL,PS PAKUR REGISTRY OFFICE - 816107 PH.9031096662.

PHUSRO

963. HINDUSTAN AUTO AGENCY (-01), DUMRI BERMU JAINA ROAD, PHUSRO, JHARKHAND - 829144

RAMGARH

964. HINDUSTAN AUTO AGENCY (-01), MARAR, RANCHI ROAD (NH-33), RAMGARH - 829122 PH.9263631345.

RANCHI

965. PREMSONS MOTOR UDYOG PVT LTD (5103-51-01), 502, KANKE ROAD, RANCHI. - 834008 PH. 9304807355.
966. PREMSONS MOTOR UDYOG PVT LTD (5103-51-03), 10/P, NAMKUM INDUSTRIAL ESTATE,BEHIND HIGH TENSION INSULATOR FACTORY, LOWER CHUTIA, RANCHI - 834010 PH.9262899003.
967. PREMSONS MOTOR UDYOG PVT LTD (5103-51-05), PLOT NO.31 & 134, JOHNSON MORH, TUPUDANA INDUSTRIAL AREA, TUPUDANA, RANCHI - 834003 PH.9835507004.
968. PREMSONS MOTOR UDYOG PVT LTD (5103-51-06), PLOT NO.14 (P) KOKAR INDUSTRIAL AREA KOKAR, RANCHI. - 834001 PH.9835507004.
969. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (-01), KHATA NO. 247, MOUZA - PUNDAG,P.S. - PUNDAG, RANCHI, JHARKHAND. - 834004 PH.7061157502.
970. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (-02), NEAR KATHAL MORE, ARGORA RANCHI RD, NEAR EKLABA TOWER, DHIPATOLI, ARGORA, RANCHI - 834004 PH.7061157502.
971. PREMSONS MOTOR UDYOG PVT LTD (5103-51-07), ARGORA-KATHAL MORE ROAD, OPPOSITE OF RELIANCE FRESH - 834001
972. TULSYAN MOTORS PRIVATE LIMITED (5110-51-01), TULSYAN COMPOUND, PANDRA, RATU ROAD, RANCHI JHARKHAND - 834001

SIMDEGA

973. PREMSONS MOTOR UDYOG PVT LTD (-01), R.S PLOT NO 4674 UNDER KHATA NO 157, SITUATED AT VILLAGE - GOTRA, NEAR GOUSHALA, MAIN ROAD, SIMDEGA, JHARKHAND. - 835223 PH.9835507004.

TORPA

974. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (-01), OPPOSITE NAGAR KARYALAY, KHUNTI SIMDEGA ROAD, TORPA, KHUNTI, JHARKHAND - 835227

KARNATAKA

ANEKAL

975. PRATHAM MOTORS PVT LTD (-04), SY#45/3, KAVAL HOSAHALLI, KASABA HOBLI, ANEKAL TALUK - 562106

ANKOLA

976. BHARATH AUTO CARS PVT LTD (-01), NEAR NARAYANA TEMPLE KAKKAR MUTTA, BELEGUDI CROSS, ANKOLA, UK DISTRICT - 581314 PH.7829567400.

ATHANI

977. SHANTESHA MOTORS PVT LTD (-01), RS NO. 605, SHIVAYOGI NAGAR, BIJAPUR ROAD, ATHANI, DIST. - BELGAUM. - 591304 PH.8884472587.

ATHRADI

978. ABHARAN MOTORS PVT LTD (-04), HERABETTU ROAD ATHARDI UDUPI - 576107 PH.9845472500.

ATTIBELE

979. SURAKSHAA CAR CARE PVT LTD (-01), SURVEY NO.22/7/8, SARJAPUR MAIN ROAD, INDIABELE VILLAGE, OPP. TO GOLDEN LIBERTY, ATTIBELE P.O., BANGALORE - 562107 PH.9449865665.

BAGALKOT

980. VIJAY MOTOWINGS PVT LTD (-01), 180/4-2 BELGUM RAICHUR ROAD,NEAR APMC MARKET YARD, BAGALKOT - 587103 PH.9481289167.

BAGEPALLI

981. BIMAL AUTO AGENCY INDIA PVT LTD (-01), H.L. NO. 423 AND 436 SRI SATHYA SAI NAGAR, ON NH-7, THIMAKALAPALLI BLOCK-II, PARAGODU GRAM PANCHAYATH, KASABA HOBLI, BAGEPALLI TALUK, CHIKKABALLAPUR DIST. - 561207 PH.9742458888.

BAJPE

982. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO: 5/A3,SUNKADAKATTE, KOLAMBE VILLAGE,BAJPE, DAKSHINA KANNADA DIST, KARNATAKA,574142 - 574142

BANDAHALLI

983. BIMAL AUTO AGENCY INDIA PVT LTD (-01), SURVEY NO: 44/11, TAVARAKERE VILLAGE, NANDAGUDI HOBLI, BANDHALLI, HOSKOTE TALUK, BANGALORE RURAL DIST, KARNATAKA- 562122 - 562122

BANGALORE

984. MANDОВI MOTORS PVT LTD (-01), 24/4,7TH MAIN,WILSON GARDENS,BANGALORE - 560027
985. MANDОВI MOTORS PVT LTD (-07), 17/A-2&3 IND.SUBURB.IIND STAGE, GORAGUNTEPALAYA, TUMKUR ROAD, YESWANTHPUR, BANGALORE - 560022
986. MANDОВI MOTORS PVT LTD (-05), NO.2/106 (NEXT TO KASSIA BLDG.),17TH CROSS,MAGADI CHORD ROAD EXTN.
987. VUJAYANAGAR,BANGALORE - 560079
988. RNS MOTORS PVT LTD (7301-03), 2275 TUMKUR ROAD, GURGUNTEPALYA, YESHWANTHPUR, BANGALORE - 560022 PH.9606933236.
989. BIMAL AUTO AGENCY INDIA PVT LTD (-01), NO. - 60/3, VENKATALA VILLAGE, YELAHANKA HOBLI, BANGALORE NORTH TALUK - 560064
990. BIMAL AUTO AGENCY INDIA PVT LTD (-01), 60/2, MAHADEVPURA, WHITE FIELD ROAD, BANGALORE - 560048
991. RNS MOTORS PVT LTD (7301-04), HOSUR ROAD,BOMMANAHALLI,MAOVALA POST,BANGALORE - 560068 PH.9148001412.
992. MANDОВI MOTORS PVT LTD (-08), NO. 70 SARAKKI INDUSTRIAL LAYOUT,J.P NAGAR,3RD PHASE, BANGALORE - 560078
993. PRATHAM MOTORS PVT LTD (-01), SY. NO. 78/4, OPP. TO BELLANDUR CENTRAL MALL, OUTER RING ROAD, VARTHUR HOBLI, BELLANDUR,BANGALORE EAST TALUK, BANGALORE - 560103 - 560037
994. BIMAL AUTO AGENCY INDIA PVT LTD (-02), NO. 69/2, SARAKKI, KANAKAPURA ROAD, BANGALORE - 560078
995. PRATHAM MOTORS PVT LTD (-02), STHANIKAM'S ARCADE, OPP. ST THERESA HOSPITAL, DR. RAJ KUMAR ROAD, A BLOCK,RAJAJINAGAR 2 STAGE, BANGALORE - 560010
996. KALYANI MOTORS PRIVATE LIMITED (-01), MYSORE ROAD,PANTHARAPALYA,KENGRI HOBLI,BANGALORE - 583201

Dealer Workshop (AS ON 31.01.2026)

996. BIMAL AUTO AGENCY INDIA PVT LTD (-03), NO 7/1, KALANAAGRAHARA VILLAGE, MOUNT ST. JOSEPH TRAINING COLLEGE FOR JESUITS COMPOUND, IMB POST, BANNERGHATTA RD., BANGALORE - 560076	1012. BIMAL AUTO AGENCY INDIA PVT LTD (-01), #184/185, OPP. FORUM VALUE MALL, WHITE FIELD MAIN ROAD, BANGALORE - 560066	1025. KALYANI MOTORS PRIVATE LIMITED (-05), SY NO.8/4, G HOSAHALLI MAIN ROAD, GOLLARAHATTI, V N POST, YESHWANTPURA HOBLI, MAGADI MAIN ROAD, BANGALORE - 560091	1038. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO. 26, OMR ROAD, NEXT TO PRIMARY HEALTH CENTRE - 560037
997. BIMAL AUTO AGENCY INDIA PVT LTD (-04), 6TH CROSS, OFF OLD AIRPORT ROAD, HAL 2ND STAGE POST, BANGALORE - 560038	1013. SURAKSHAA CAR CARE PVT LTD (-04), PLOT NO. 8 & 9, NEXT TO BDA COMPLEX, 4TH BLOCK, 100 FT ROAD, KORAMANGALA, BANGALORE, KARNATAKA - 560034	1026. SURAKSHAA CAR CARE PVT LTD (-06), BEARING NO. 54/4-320/2, BEGUR HOBLI, BOMMANAHALLI VILLAGE, BEGUR HOBLI, BANGALORE, KARNATAKA - 560068	1039. AVANISH AUTO LLP (-02), NO. 277, NELAMANGALA TALUK, DASANAPURA, HOBLI, MADANAYAKANAHALLI, BANGALORE - 560037
998. MANDОВI MOTORS PVT LTD (-0C), NO 1 TO 5, NAVODAYA HBS, 4TH STAGE, 4TH MAIN, RAJAJINAGAR INDUSTRIAL TOWN, BASAWESHWAR NAGAR - 560044	1014. KALYANI MOTORS PRIVATE LIMITED (-01), # 10/5, NAGADEVANHALLI, KENGERI, MYSORE ROAD, BANGALORE, KARNATAKA - 560056	1027. PRATHAM MOTORS PVT LTD (-07), SUVEY NO. 43/1, ON SH-35, VILLAGE - YAMARE, SARJAPUR MAIN ROAD, POST - DOMMASANDRA, TALUKA - ANEKAL, BENGALURU RURAL, KARNATAKA - 562125	BANGARPET
999. KALYANI MOTORS PRIVATE LIMITED (-04), 119/1, 11TH CROSS, MALLESHWARAM, BANGALORE, - 560003	1015. BIMAL AUTO AGENCY INDIA PVT LTD (-06), PLOT NO. 82, DODDA BANASWADI MAIN ROAD, BEHIND IOC PETROL PUMP, NEXT TO AIYAPPA TEMPLE, BANASWADI, BANGALORE, KARNATAKA - 560033	1028. SURAKSHAA CAR CARE PVT LTD (-07), SURVEY NO 106/2A, CHANDAPURA MUNICIPAL TOWN, MUTHASANDRA HOSUR MAIN ROAD, ANEKAL TQ, BANGALORE, KARNATAKA - 560099	1040. SURAKSHAA CAR CARE PVT LTD (-01), 180/4 OPP. APMC YARD, KOLAR-BANGARPET ROAD, BANGARPET (KARNATAKA) - 563114 PH: 944865601.
1000. MANDОВI MOTORS PVT LTD (-0D), 6/8, SHREE GANGA GARDEN, GANGA NILAYA, HENNUR CROSS, KALYANAGAR POST - 560043	1016. VARUN MOTORS PVT LTD (-01), SURVEY NO: 93, PLOT NO:31, PEENYA III PHASE, INDUSTRIAL AREA, PEENYA, YESHWANTHUR HOBLI, BANGALORE NORTH, BANGALORE, KARNATAKA-56005 - 560022	1029. VARUN MOTORS PVT LTD (-03), SY NO: 136 (OLD NO 54/8) SANGEGURUVANAHALLI(VP) KAMAKSHIHALI VILLAGE, WARD NO: 17, VRISHABHAVATHI NAGAR, MAGADI ROAD, BANGALORE NORTH THALUK, BANGALORE, KARNATAKA - 560079	BANTWAL
1001. MANDОВI MOTORS PVT LTD (-0E), SY NO:26, AMBLIPURA VILLAGE, VATHUR HOBLI, BANGALORE, EAST TALUKA - 560102	1017. KALYANI MOTORS PRIVATE LIMITED (-05), PLOT NO. 74/5, HORMAVU MAIN ROAD, NEAR BBMP OFFICE, KR PURAM HOBLI, BANGALORE - 560043	1030. RNS MOTORS PVT LTD (-01), SURVEY NO. 48, HEBBAGODI, HOSUR MAIN ROAD, ANEKAL TALUK, BANGALORE URBAN DIST, KARNATAKA - 560099	1041. MANDОВI MOTORS PVT LTD (-01), NH-75, PANEMANGALORE, B.C. ROAD, BANTWAL, KARNATAKA - 574231 PH: 9008810123.
1002. KALYANI MOTORS PRIVATE LIMITED (-02), SY. NO:58/1A & 51/22, AVALAHALLI, NH-4, K.R. PURAM, BANGALORE - 560049	1018. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), NO. 5, 15TH CROSS, KOLANDAPPA GARDEN, ANEPALYA, POST - AADUGODI, BANGALORE - 560030	1031. KALYANI MOTORS PRIVATE LIMITED (-03), SURVEY NO. 194/5, HUNSEMARANAHALLI, JALA HOBLI, DEVANAHALLI TALUK, (YELAHANKA NEW TALUK), NEW KEMPEGOWDA INTERNATIONAL AIRPORT ROAD, NORTH - 562110	BASAVAKALYAN
1003. KALYANI MOTORS PRIVATE LIMITED (-03), NO.129/4, KUNDALAHALLI VILLAGE, OPP. TO BROOKE FIELD HOSPITAL, BROOKFIELD, BENGALURU - 574239	1019. MANDОВI MOTORS PVT LTD (-01), KATHA NO.4, SITUATED AT GANAKAL DHAKALE, SRINIVASAPURA, KENGERI HOBLI, UTTARAHALLI, BANGALORE - 560060	1032. MANDОВI MOTORS PVT LTD (-09), MUNICIPAL NO. 133 (OLD NO.S 133 & 133/1), BULL TEMPLE ROAD, BBMP WARD NO. 49, K G NAGAR, BANGALORE, KARNATAKA-560018 - 560018	1042. LAHOTI MOTORS PVT LTD (-01), SURVEY NO: 122/16, TRIPURANTH, SASTAPUR BANGLA MUMBAI HIGHWAY, BASAVAKALYAN, - 585327
1004. SURAKSHAA CAR CARE PVT LTD (-01), 30/3 K AGRAHARA, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE - 580100	1020. VARUN MOTORS PVT LTD (-02), BEARING NO. 27/1 & 27/2, SURVEY NO. 41/3 & 42/7 BAGALAGUNTA, HESSARGHATTA MAIN ROAD, NEAR WIDIA SCHOOL BUS STOP, NAGASANDRA POST, BANGALORE - 560073	1033. KALYANI MOTORS PRIVATE LIMITED (-06), SURVEY NO. 67, NH-209, NAVARATAN GARDENS, (NEAR IOCL PETROL BUNK) DODDALKALASANDRA VILL., UTTARAHALLI HOBLI, KONANAKUNTE, KANAKAPURA-KENGERI ROAD, BANGALORE, KARNATAKA - 560062	1043. SHANTESHA MOTORS PVT LTD (-01), MUJAWAR COMPOUND, NEHRU NAGAR, BELGAUM, - 590010 PH: 9902043711.
1005. SURAKSHAA CAR CARE PVT LTD (-02), #54/1, BOMMANAHALLI, HOSUR MAIN ROAD, BANGALORE - 560068	1021. MANDОВI MOTORS PVT LTD (-0J), SITE NO. 58/1, J.B. KAVAL, MAJOR SANDEEP UNNIKRISHNAN ROAD, VIDYARANYAPURA, BANGALORE - 560097	1034. SANVIT AUTOMOTIVES LLP (-01), NO2559/1 OPP. SHELL PETROL BUNK, GOTTIGERE BANNERGHATTA ROAD, BANGALORE - 560083	1044. SHANTESHA MOTORS PVT LTD (-03), PLOT NO. 39, RS NO. 670, CTS NO. 1612/3, KHANAPUR ROAD, UDAYIMBA, BELGAUM (SCREE SHOT ATTACHED) - 590006 PH: 8884433911.
1006. KALYANI MOTORS PRIVATE LIMITED (-04), 250/1, BILEKAHALLI, BANNERGHATTA ROAD, BENGALURU - 560076	1022. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO. 8/3, 10/4, 10/2, VILLAGE - THALAGHATTAPURA, KANAKAPURA MAIN ROAD, NEAR NANDI TOYOTA, UTTARAHALLI HOBLI, TALUK - BENGALURU SOUTH, BANGALORE, KARNATAKA - 560109	1035. KALYANI MOTORS PRIVATE LIMITED (-C1), KATHA NO 39, SURVEY NO 58 HENNUR MAIN ROAD, KR PURAM HOBLI - 560043	1045. SHANTESHA MOTORS PVT LTD (-06), PLOT NO. 2/1, RS NO. 29, KIIDB INDUSTRIAL AREA, KIIDB BAUXITE ROAD, KANGRALI BK, BELGAUM. - 590010 PH: 9731396805.
1007. BIMAL AUTO AGENCY INDIA PVT LTD (-04), PLOT NO.37/38, 2ND STAGE, PEENYA INDUSTRIAL AREA, BANGALORE - 560058	1023. RNS MOTORS PVT LTD (7301-0J), SY. NO. 11/2 & 12/1, VILLAGE - ARAKERE, BEGUR HOBLI, BANNERGHATTA ROAD, BANGALORE - 560 076. PH: 7780982836.	1036. AVANISH AUTO LLP (-01), SURVEY NO 8/1B, JALAHALLI CROSS, T DASARAHALLI, BENGALURU - 560038	BELLARY
1008. RNS MOTORS PVT LTD (7301-0G), 106/7, BELLARY ROAD, NEAR IOC PETROL BUNK, AMRUTHAALLI, NEAR HEBBAL FLYOVER, BENGALURU (KARNATAKA) - 560092 PH: 6364884787.	1024. SURAKSHAA CAR CARE PVT LTD (-05), SURVEY NO.2/6, BERTENA AGRAHARA, OPP. METRO CASH & CARRY, HOSUR MAIN ROAD, BANGALORE - 560100	1037. SANVIT AUTOMOTIVES LLP (-02), SANVIT MOTORS, HULIMAVU TO BEGUR ROAD, GOTTIGERE, BANGALORE - 560037	1046. KPF PVT LTD (-01), P.B. NO. 58, BELLARY HOSPITAL ROAD, ALLIPURA, BELLARY - 583101 PH: 9449876025.
1009. PRATHAM MOTORS PVT LTD (-05), #58/5 KUDLU VILLAGE, NEXT TO ZEE SCHOOL, SARJAPUR HOBLI, ANEKAL TALUK, BANGALORE - 560034			BELLUR CROSS
1010. RNS MOTORS PVT LTD (7301-0H), PLOT NO.129, KIADB INDUSTRIAL AREA, HEBBAGODI VILLAGE, BOMMASANDRA, JIGINI LINK ROAD, BANGALORE - 562158 PH: 9539865771.			1047. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO. 537/61, BELLUR VILLAGE, BELLUR HOBLI, NAMANGALA TALUK, MANDYA DIST KARNATAKA 571418 - 571418
1011. KALYANI MOTORS PRIVATE LIMITED (-02), 10/1, HEBBAL, AMANIKERE KASABA HOBLI, YOGESH NAGAR, BANGALORE - 560024			BELTHANGADY
			1048. BHARATH AUTO CARS PVT LTD (4503-04), MAIN ROAD, BELTHANGADY, BELTHANGADY TALUK DK DISTRICT - 574214 PH: 9886543230.
			BHADRAWATI
			1049. SHRUTI MOTORS PVT LTD (-01), SURVEY NO. 18/4, BH ROAD, KADAKATTE HOBLI, KADAKATTE, BHADRAWATI, SHIMOGA DIST., KARNATAKA - 577229

BHATKAL

1050. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO. 157/2A, SUSGADI VILLAGE, NH66, BHATKAL, UTTARKANNADA DISTRICT, KARNATAKA. - 581320
PH :9008693940.

BIDAR

1051. LAHOTI MOTORS PVT LTD (-01), SI 50/51, PRATAP NAGAR, UDGIR ROAD, KIADE INDUSTRIAL AREA, NAUBAD, BIDAR - 585402
PH :8884412049.
1052. LAHOTI MOTORS PVT LTD (-02), PLOT NO. 58, NAUBAD INDUSTRIAL AREA, PRATAP NAGAR, BIDAR. - 585401
PH :9108707709.

BIJAPUR

1053. RNS MOTORS PVT LTD (7301-01), SURVEY NO.25K/1, CHITRADURGA SHOLAPUR ROAD, VIJAYPURA, BIJAPUR DISTT. KARNATAKA - 586109
PH :8861208998.

BUDHIGERE

1054. BIMAL AUTO AGENCY INDIA PVT LTD (-01), KHATTA NO.115.SY. NO. 128/33, MANDUR MAIN ROAD, BUDIGERE CROSS, MANDUR VILLAGE, NEXT TO IOCL PETROL BUNK, BANGALORE EAST TALUK, BANGALORE, - 560049
PH :9742259528.

BYNDOOR

1055. ABHARAN MOTORS PVT LTD (-01), 3-256 & 3-257, SOUPARNIKA COMPLEX, NH 66, VILLAGE - YEDATHRE, BYNDOOR, KUNDAPUR TALUK, UDUPI DISTT. - 576214
PH :7899751777.

CHALLAKERE

1056. SAKETH AUTOMOBILES (-01), SITE NO. 9 & 10, SY. NO. 96/1, OPP. SUJIMALLSHWARA NAGAR, BELLARY ROAD, CHALLAKERE. - 577522
PH :9686550126.

CHAMARAJANAGAR

1057. MANDIVI MOTORS PVT LTD (-01), RAJ KAMAL BUILDING, SATHYAMANGALA ROAD, KUVEMPU EXTENSION, CHAMRAJNAGAR (KARNATAKA) - 571313
PH :9845445586.

CHANNAGIRI

1058. SHRUTI MOTORS PVT LTD (-01), SURVEY NO.5, MACHANAYAKANAHALLI, OPP. FIRE STATION, CHITRADURGA ROAD, N.H.13, CHANNAGIRI DISTT. DAVANGERE - 577213

CHANNAPATNA

1059. KALYANI MOTORS PRIVATE LIMITED (-01), PROPERTY NO.58, MALUR GRAMA, MALLUR HOBLI, CHANNAPATNA TALUKA RAMANAGARA DISTRICT - 562160
PH :9845066682.

CHANNARAYAPATNA

1060. VENKAT MOTORS (-01), PLOT NO. 389, 36/3, 132/1, BESIDES THIRUMALA RICE MILL, MYSORE ROAD, CHANNARAYAPATNA, DISTRICT: HASSAN, KARNATAKA. - 573116
PH :8147077144.

CHICKBALLAPUR

1061. BIMAL AUTO AGENCY INDIA PVT LTD (-01), NO. 169/1, AMMANI KANDAVARAKERE VILLAGE, KASABA HOBLI, CHIKBALLAPURA DISTRICT - 562101
PH :9742262499.

CHICKMANGALUR

1062. SHRUTI MOTORS PVT LTD (-01), AIT CIRCLE, KM ROAD, CHIKMANGALUR - 577102

CHIKKA TIRUPATI

1063. SURAKSHAA CAR CARE PVT LTD (-01), URVEY NO. 1/2, OPPOSITE TO BHARATH PETROL BUNK, ANCHEMISKUR, CHIKKA TIRUPATI, KOLAR, KARNATAKA - 563160 - 563160

CHIKODI

1064. SHANTESHA MOTORS PVT LTD (-05), OPP. IOC PUMP, NEAR B.K.COLLEGE, MIRAJ ROAD, CHIKKODI, KARNATAKA - 591201
PH :7829925790.

CHINTAMANI

1065. PRATHAM MOTORS PVT LTD (-06), SURVEY NO. 33, NEXT TO VIJAYA P U COLLEGE, OPP. GOPASANDRA LAKE, SREENIVASAPURA MAIN ROAD, CHINTAMANI, KARNATAKA - 563125

CHITRADURGA

1066. SAKETH AUTOMOBILES (-01), NEAR VEDA COMPLEX, NH-4, M H ROAD, CHITRADURGA - 572130
PH :9686550313.

DABASPET

1067. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO. 33/4 (OLD SY NO. 33/3 & 33/2C), KENGAL KEMPOHALLI VILL., SOMPURA HOBLI, DABASPET MAIN ROAD, NELAMANGALA TALUK, BANGALORE RURAL DIST., KARNATAKA-562111 - 562111

DAVANGERE

1068. SHRUTI MOTORS PVT LTD (-01), NEAR PANCHDEVASTHANA, P. B. ROAD, DAVANGERE, KARNATAKA - 577004

1069. SHRUTI MOTORS PVT LTD (-02), DOOR NO. 473/1, SURVEY NO. 18/1, BESIDE GMIT COLLEGE, OPP. M&M SHOWROOM, OLD P. B. ROAD, DAVANGERE, KARNATAKA - 577001

DEVANAHALLI

1070. BIMAL AUTO AGENCY INDIA PVT LTD (-01), SURVEY NO.241/114/6, 11TH WARD, BB ROAD, DEVANAHALLI, BANGALORE DISTT. - 562110
PH :9742262514.

DHARWAD

1071. RNS MOTORS PVT LTD (-01), NO.29A/1, 29A/2, 29A/3 PLOT NO.1, ASHOK NAGAR, DODDANAYAKANAKOPPA VILLAGE, GOA ROAD, DHARWAD, KARNATAKA - 580008

DODDABALLAPUR

1072. PRATHAM MOTORS PVT LTD (-01), PLOT NO. 50, OBADENAHALLI INDUSTRIAL AREA, DODDABALLAPUR 3RD PHASE, SY. NO. 107, AREHALLI GUDDADAHALLI, KASABA HOBLI TALUK - DODDABALLAPUR, DISTRICT - BENGALURU RURAL. - 561203
PH :9886671687.

DODDADUNNASANDRA

1073. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO.57/1A, DODDADUNNASANDRA VILLAGE, ANUGONDANHALLI HOBLI, HOSKOTE TALUK, BANGALORE RURAL, KARNATAKA- 562114 - 562114

GADAG

1074. RNS MOTORS PVT LTD (7301-0E), PLOT NO. 64, DIAGONALLY OPP. REGIONAL TRANSPORT OFFICE, HUBLI GADAG MAIN ROAD, GADAG - 582103
PH :9538925602.

GAJENDRAGARH

1075. PRN AUTOMOTIVES LLP (-), BESIDE PIAGGIO SHOWROOM, HUBLI-GAJENDRAGAD ROAD, GAJENDRAGAD, GADAG DISTRICT, KARNATAKA - 582101

GANGAVATI

1076. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT LTD) (-03), JAGANMATHA COMPLEX, RAICHUR ROAD, GANGAVATI, - 583227
PH :9449870754.

GAURIBIDANUR

1077. MANDIVI MOTORS PVT LTD (-01), NO.592/522, E DIVISION, OPP. PUSHPANJALI TALKIES, B.H. ROAD, GAURIBIDANUR TOWN, DISTT. CHIKBALLAPUR - 562120
PH :8217453513.

GOKAK

1078. SHANTESHA MOTORS PVT LTD (-01), RS NO.106/3D/2A, APMC ROAD, GOKAK, BELGAUM DISTT. - 591307
PH :7829925760.

GONIKOPPAL

1079. MANDIVI MOTORS PVT LTD (2501-07), KAIKERY VILLAGE, GONIKOPPAL., - 571213
PH :990064873.

GUBBI

1080. SAKETH AUTOMOBILES (-01), SY NO. 71, ASSESSMENT NO. 54/4/4911, PROPERTY NO. 28-5-252, NEAR PETROL BUNK, B H ROAD, GUBBI TOWN & TALUK, TUMKUR DISTRICT, KARNATAKA,572216 - 572216

GUDIBANDHA

1081. BIMAL AUTO AGENCY INDIA PVT LTD (-01), DOOR NO:160, 1ST WARD, OPP TO GOVERNMENT BUS STAND, BAGEPALLI ROAD, GUDIBANDA, CHICKBALLAPURA DISTRICT KARNATAKA - 561209
PH :9742261903.

GULBARGA

1082. LAHOTI MOTORS PVT LTD (-01), LAHOTI GARDENS, NEAR KMF, HUMNABAD ROAD, GULBARGA - 585104
PH :9480825014.

1083. LAHOTI MOTORS PVT LTD (-02), DOOR NO. 7-12-11, 2ND BLOCK, OPP. GUNJ BUS STAND, HUMNABAD ROAD, GULBARGA, KARNATAKA. - 585104
PH :7619342035.

GUNDLUPET

1084. KALYANI MOTORS PRIVATE LIMITED (-01), ASSESSMENT NO. 2491/S. NO. 51/1, 2, 3, N.S. 11 AND ASSESSMENT NO. 2494/S. NO. 51/ N.S. 11, MYSORE-OOTY ROAD, GUNDLUPET. - 571111
PH :9686855799.

HAGARIBOMMANAHALLI

1085. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT LTD) (-01), SITE NO.112A/2 & 112A/3, BLOCK NO.2, WARD NO.:3, HAGARIBOMMANAHALLI PANCHAYAT, BELLARY DISTRICT. - 583212
PH :9481343007.

HALIYAL

1086. RNS MOTORS PVT LTD (-01), SURVEY NO: 347P/27, DOOR NO:B1180/15 & B1180/16, HANUMAN COMPLEX, HALIYAL CIRCLE, MAIN ROAD, HALIYAL TOWN & TALUK, UTTARA KANNADA DISTRICT, KARNATAKA - 581329
PH :8284200200.

HARAPANAHALLI

Dealer Workshop (AS ON 31.01.2026)

1087. SHREE LAKSHMI CARS PVT LTD (-01), SURVEY NO 13/1, ADAVIAHALLI VILLAGE, KASABA HOBLI, HARAPPANAHALLI, DISTRICT - VIJAYANAGARA, KARNATAKA - 583131

HAROHOLLI

1088. SURAKSHAA CAR CARE PVT LTD (-01), SURVEY NO. 40/4, HOSAKOTE VILLAGE, HAROHALLI HOBLI, KANAKAPURA TALUK, RAMANAGARA - 562112
PH :984986508.

HASSAN

1089. VENKAT MOTORS (-01), NO. 326, HASSAN GROWTH CENTRE, H.N. PURA ROAD, HASSAN - 573201
PH :9844044038.

HAVERI

1090. REVANKAR MOTORS PVT LTD (-01), NEAR TMAE SOCIETY CAMPUS, IJARILAKMAPUR, PB ROAD, HAVERI - 581110
PH :7022016903.

H-CROSS

1091. BIMAL AUTO AGENCY INDIA PVT LTD (-01), PART NO.1, SITE NO.36, SBT COMPLEX, HOSKOTE-BANGALORE ROAD, KARIYANAPURA, H CROSS, SHIDLAGHATTA TALUK, BANGALORE RURAL DISTT. CHIKKABALLAPURA - 562122
PH :9738948126.

HEBRI

1092. ABHARAN MOTORS PVT LTD (-01), SURVEY NO. 61-7C1P1 & 61-2P1, VILLAGE & TALUK - HEBRI, KARKALA, DIST.-UDUPI, KARNATAKA - 576112
PH :9900077605.

HEGGADADEVANA KOTE (H D KOTE)

1093. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO. 5/4, VILLAGE - YARAHALLI, KASABA HOBLI, TALUK - H.D.KOTE, DISTRICT - MYSORE - 571125
PH :9686855799.

HESSARGHATA

1094. BIMAL AUTO AGENCY INDIA PVT LTD (-01), SY NO 294/3, HESSARGHATTA VILLAGE YELAHANKA TALUK, BENGALURU, KARNATAKA - 560088
PH :9743658662.

HONNAVAR

1095. RNS MOTORS PVT LTD (-01), SURVEY NO. 727/1A, KARKI VILLAGE, HONNAVAR (HONAVAR) TALUK AND TOWN, UTTARA KANNADA DIST., KARNATAKA - 581327

HOSANAGRA

1096. SHRUTI MOTORS PVT LTD (-01), SH-52, OPPOSITE CANARA BANK, HOSANGARA, PIN-577418, - 577418

HOSADURGA

1097. SAKETH AUTOMOBILES (-01), ASSESSMENT NO. 9310/6, PLOT NO. 6, HOSADURGA TOWN, SARASWATI BADAVANE, HOSADURGA, DIST. -CHITRADURGA, KARNATAKA. - 577527
PH :7625088946.

HOSKOTE

1098. BIMAL AUTO AGENCY INDIA PVT LTD (-05), NO. 205/108, SITUATED AT HOSKOTE TALUK, KASABA HOSKOTE TOWN, DISTT.- BANGALORE - 562114

HOSPET

1099. MUNEEER CARS (A UNIT OF MUNEEER ENTERPRISES PVT LTD) (-01), BELLARY ROAD, SANKLAPUR, HOSPET, - 583203
PH :7619505001.

HUBLI

1100. RNS MOTORS PVT LTD (7301-73-01), PUNE - BANGALORE ROAD, UNKAL, HUBLI - 580025
PH :9538965902.

1101. RNS MOTORS PVT LTD (7301-73-0F), GOKUL ROAD MUREDESHWAR BHAVAN, HUBLI - 580030
PH :8861208532.

1102. REVANKAR MOTORS PVT LTD (7303-01), CTS NO.165/A, WARD NO.III, DESHPANDE NAGAR, HUBLI (KARNATAKA) - 580029
PH :8792008301.

1103. PRN AUTOMOTIVES LLP (7304-73-01), SURVEY NO 33, NAGASHETTI KOPPA VILLAGE BESIDES SRINIVAS GARDENS, HUBLI - 580020

HUNSUR

1104. KALYANI MOTORS PRIVATE LIMITED (-01), M-18 & M-19, KSSIDC INDUSTRIAL ESTATE, BM BYPASS ROAD, HUNSUR, MYSORE DISTRICT, KARNATAKA - 571105
PH :7022669699.

JEWARGI

1105. LAHOTI MOTORS PVT LTD (-01), S NO: 125, PLOT NO:7, FILTER BED ROAD, OPP. BUS DEPOT, JEWARGI, KALABURGI DISTRICT (FORMERLY GULABARGA), KARNATAK-585310.
PH :9480825004.

KADABA

1106. MANDIVI MOTORS PVT LTD (-01), SURVEY NO.-11/20, KALARA, KADABA POST, DAKSHIN KANNADA DISTT., KARNATAKA - 574221
PH :9740912365.

KADUR

1107. SHRUTI MOTORS PVT LTD (-01), SHOP NO. 1 & 2, DAGA COMPLEX, ULUKINAKALLU, NEAR PEARLS CLUB, B.H. ROAD, KADUR, DISTRICT - CHIKMAGALUR. - 577548

KANAKAPURA

1108. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO. 447/1B, KASABA HOBLI, BUDIGUPPE GRAMA, TALUKA- KANAKAPURA, DISTRICT- RAMANAGARA. KARNATAKA. - 562117
PH :9900599933.

KARKALA

1109. ABHARAN MOTORS PVT LTD (-03), NH-13, MANGALORE KUDREMUKH ROAD, PULKERI, KARKALA - 574104
PH :9880232666.

KARWAR

1110. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO. 459/2B, 456/2B AND 456/3, CHITTAKULA VILLAGE, KARWAR TALUKA, UTTARKANNADA DISTRICT, KARNATAKA. - 581301
PH :7829567400.

KITTUR, BELGAUM

1111. SHANTESHA MOTORS PVT LTD (-01), PLOT NO. 219, KITTUR INDUSTRIAL AREA (KIADB), POONA BANGALORE HIGHWAY (NH-4), KITTUR TOWN AND TALUK, BELGAUM DISTRICT, - 591115
PH :9731396808.

KOLAR

1112. MANDIVI MOTORS PVT LTD (-0F), 67/3 BANGALORE-CHENNAI HIGHWAY, KONDARAJANA HALLI, OPP HOTEL SHANTHI SAGAR, KOLAR. - 563101

KOLLEGAL

1113. MANDIVI MOTORS PVT LTD. (-01), MYSORE KOLLEGAL ROAD, NEAR BRAHMARAMBA KALYANAMTAP, - 571440

KOPPA

1114. SHRUTI MOTORS PVT LTD (-01), NEARBY ARACENT POWDER SHOP, UPPERPET, KOPPA, DIST-CHIKMAGALURU, KARNATAKA - 577126

KOPPALL

1115. KPF PVT LTD (-01), SL. 283/10, NEAR MINI VIDHAN SOUDHA, KOPPALL HOSPET ROAD NH63, KOPPALL - 583238
PH :9449876027.

KRISHNARAJANAGARA (KRANAGARA)

1116. KALYANI MOTORS PRIVATE LIMITED (-01), NO.D. DORNHALLI, DODDEKOPPALU GRAMA PANCHAYAT, KASABA HOBLI, KRISHNARAJANAGARA, MYSORE DISTRICT, KARNATAKA - 571602
PH :8971159430.

KRISHNARAJAPET

1117. MANDIVI MOTORS PVT LTD (-01), KHATA NO.3094, SY. NO.278, MYSORE CHENNERAYAPATNA ROAD (OPP. TO K.B.C. FUEL STATION), KRISHARAJAPET TOWN, TALUK MANDYA DISTT. KARNATAKA - 571423
PH :9845132038.

KUDUR

1118. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO 272/1 AND SURVEY NO.272/2, NARASANDRA VILLAGE, KUDURU HOBLI, MAGADI TALUK, RAMANAGARA DISTRICT, KARNATAKA 562127 - 562127

KUMTA

1119. BHARATH AUTO CARS PVT LTD (-01), MALLYA'S COMPOUND, NH-66, ALVEKODI KALBAGH VILLAGE, KUMTA (KARNATAKA) - 581334
PH :9448979530.

KUNDARPUR

1120. ABHARAN MOTORS PVT LTD (-02), NH-17, THAKKATTE, KUNDAPURA - 272877
PH :9880197524.

KUNIGAL

1121. SAKETH AUTOMOBILES (-01), NEAR KRS AGRAHARA, BM ROAD, KUNIGAL, TUMKUR DISTRICT, KARNATAKA - 572130
PH :9686550127.

KUSHAL NAGAR

1122. MANDIVI MOTORS PVT LTD (-01), SY NO:88, MADAPATANA, KUSHAL NAGAR, SOMVARPUR, NORTH KODAGU, KARNATAKA - 571234
PH :9900080893.

LINGASUGUR

1123. MUNEEER CARS (A UNIT OF MUNEEER ENTERPRISES PVT LTD) (-01), PLOT NO. 11, BASAMMA COMPLEX, RAICHUR ROAD, LINGSUGUR, RAICHUR, KARNATAKA - 584122
PH :9480830255.

MADDUR

1124. MANDIVI MOTORS PVT LTD (-01), SURVEY NO 802/2A4B, NEAR SANJAY THEATRE, BM ROAD, MADDUR TOWN, MANDYA DISTRICT, KARNATAKA - 571428

MADIKERI

1125. KALYANI MOTORS PRIVATE LIMITED (-01), BASAPPA THEATRE BUILDING, DASAWAL ROAD, MADIKERI KODAGU DISTRICT. - 571201 PH :9606073867.

MAGADI

1126. PRATHAM MOTORS PVT LTD (-01), SY NO.92/2, THIRUMALAI VILLAGE, KASABA HOBLI, MAGADI TOWN & TALUK, RAMANAGARA DISTRICT, KARNATAKA - 562120 PH :9900058483.

MALUR

1127. MANDОВI MOTORS PVT LTD (-01), NO 12/8, BANGALORE - MALUR MAIN ROAD, OPPOSITE OF INDIAN OIL PETROL BUNK - 563130

MANCHENAHALLI

1128. VARUN MOTORS PVT LTD (-01), NO:1219, GOLAPPA COMPUIND, MAHESHWARI CIRCLE, MANCHENAHALLI, GOWRIBIDANUR TALUK, CHIKKABALLAPUR DIST, KARNATAKA- 561211 - 561211 PH :9513979162.

MANDYA

1129. MANDОВI MOTORS PVT LTD (2501-06), 1660/A, KALLAHALLI EXTENSION, M.C. ROAD, - 571401 PH :9611165873.

1130. KALYANI MOTORS PRIVATE LIMITED (-02), PROPERTY NO 139/A, UMMADAHALLI VILLAGE, KASABA HOBLI, MANDYA, KARNATAKA - 571401

MANGALORE

1131. MANDОВI MOTORS PVT LTD (4502-45-01), ARVIND BUILDING, BALMATTI ROAD, HAMPANKATTA, MANGALORE - 575001 PH :9845107701.

1132. BHARATH AUTO CARS PVT LTD (4503-45-01), NH-17, KUNTINAK JUNCTION, DEREBAIL, NEAR A.J. HOSPITAL, MANGALORE - 575004 PH :9886785730.

1133. MANDОВI MOTORS PVT LTD (4502-45-03), NO., HASSAN GROWTH CENTRE, ADYARN.H. -48, MANGALORE - 575007 PH :9845514146.

1134. MANDОВI MOTORS PVT LTD (4502-07), BALLAL INDUSTRIAL ESTATE, YAYYADI, MANGALORE, KARNATAKA - 575008 PH :9880079235.

1135. BHARATH AUTO CARS PVT LTD (-06), PLOT NO. 290/1, 291/1, KODIALBAIL VILLAGE, NEXT TO BHARATH BEEDI WORKS PVT. LTD., BUNTS HOSTEL, KADRI ROAD, MANGALORE, KARNATAKA - 575002 PH :9886333030.

1136. MANDОВI MOTORS PVT LTD (4502-08), DOOR NO. 2-63/4, SUJITH BAGH LANE, YEYYADE, MANGALORE, DISTRICT - DAKSHINA KANNADA, KARNATAKA - 575008 PH :9880278077.

1137. BHARATH AUTO CARS PVT LTD (-08), S. NO. 1376/1-41, 1375/41-2-A1P1, 2A1P3, 1373/1-40, 1369/1-40-A2, KASABA BAZAR, KANDADAPALLI, KUDROLI, TALUK - MANGALORE, MANGALORE, KARNATAKA - 575003 PH :9886785730.

MUDBIDRI

1138. BHARATH AUTO CARS PVT LTD (4503-03), BHARATH BEEDI COMPOUND, NEAR ALVAR'S HOSPITAL, MOODBIDRI - 574227 PH :9886785430.

MUDHOL

1139. VIJAY MOTOWINGS PVT LTD (-01), PLOT NO. 38, IN NARS NO. 15-2, WARD NO. 5, VISHWESHWAR COLONY, LOKAPUR ROAD, MUDHOL TOWN, BAGALKOT DIST. - 587313 PH :9606046173.

MUDIGERE

1140. SHRUTI MOTORS PVT LTD (-01), SURVEY NO.10/1, 10/2, SITE NO.14, 15 NEXT TO SRIRANGPURA VIHAR, GOWDAHALLI RD - 577132

MULBAGAL

1141. PRATHAM MOTORS PVT LTD (-01), NO. 35-6-117/1, CHITTOOR MAIN ROAD, VEERABHADRA NAGAR, MULBAGAL, KOLAR DIST., KARNATAKA-563131 - 563131

MULKI

1142. BHARATH AUTO CARS PVT LTD (4503-05), BHARATH BEEDI COMPOUND, NH-17 MULKI - 574154 PH :9986020730.

MURUDSWAR

1143. RNS MOTORS PVT LTD (7301-02), NH-17, MANGALORE-BOMBAY ROAD, MURUDSWAR, KARNATAKA - 581350 PH :9538965969.

MYSORE

1144. MANDОВI MOTORS PVT LTD (2501-25-01), NO: 5 K.R.S.ROAD, MYSORE - 570005 PH :9945248860.

1145. MANDОВI MOTORS PVT LTD (2501-25-05), NO.182/145/C, BANNUR ROAD, SIDHARTHA NAGAR, MYSORE, KARNATAKA - 570011 PH :9845939936.

1146. KALYANI MOTORS PRIVATE LIMITED (2503-25-01), MANATHAVADI ROAD, VIDYARANYA PURAM, MYSORE - 570008 PH :7259255558.

1147. MANDОВI MOTORS PVT LTD (2501-25-08), 217/2, HUNSUR ROAD, HINKAL POST, MYSORE, KARNATAKA - 570017 PH :9845939937.

NAGAMANGALA

1148. MANDОВI MOTORS PVT LTD (-01), SURVEY NO:3316/2327,VISHALAXAMMA COMPLEX, T B BADAVANE B M ROAD, NAGAMANGALA TOWN, MANDYA DISTRICT, KARNATAKA - 571432 PH :9845132038.

NANJANGUD

1149. KALYANI MOTORS PRIVATE LIMITED (-01), 4340/4159/4, HULLAHALLI ROAD, NANJANGUD, DISTRICT - MYSORE, KARNATAKA. - 571301 PH :9686855799.

NARASIMHARAJAPURA

1150. SHRUTI MOTORS PVT LTD (-01), SURVEY NO # SURVEY NO.173/P KOPPA ROAD, NAGALAPURA VILLAGE,NARASIMHARAJAPURA, CHIKMAGALU R DIST.,KARNATAKA - 577134

NARAVI

1151. MANDОВI MOTORS PVT LTD (-01), SURVEY NO:122/1B1,DOOR NO:4/59,SHRI CHAITHANYA , ARASAKATTE, NARAVI, BELTHANGADY TALUK, DAKSHINA KANNADA DIST, KARNATAKA- 574109. - 574109 PH :9740392005.

NELAMANGALA

1152. RNS MOTORS PVT LTD (-01), NO.167/2, TUMKUR ROAD, KASABA HOBLI, NH4, NELAMANGALA, BANGALORE RURAL DT., BENGALURU, KARNATAKA - 562123 PH :7259875385.

NELYADI

1153. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO. 97/11P AND SURVEY NO. 97/9, VILLAGE - HOSAMAJALU KAUKRADY, POST - NELYADI, TALUK - PUTTUR, DIST.-DAKSHIN KANNADA. - 574229 PH :9886072730.

OORGAUMPET

1154. BIMAL AUTO AGENCY INDIA PVT LTD (-01), SITE NO:10, NEW KATHA NO: 251, ROBERTSONPET, KGF, OORGAUMPET, KOLAR DIST, KARNATAKA- 563122 - 563122 PH :9513748707.

PADUBIDRI

1155. ABHARAN MOTORS PVT LTD (-01), PLOT NO. 51/20, VILLAGE - PADUBETTU, PADUBIDRI TOWN, TALUKA & DISTRICT - UDUPI, KARNATAKA. - 574111 PH :9880232999.

PANDAVAPURA

1156. KALYANI MOTORS PVT. LTD. (-01), SY NO.299/12, KENNALU VILLAGE., KASABA HOBLI, PANDAVAPURA TALUK, - 571435

PERESANDRA

1157. BIMAL AUTO AGENCY INDIA PVT LTD (-01), SURVEY NO # NO.39,NO:113, SAMRUDDHI NILAYA GROUND FLOOR, NH7, ARURU VILLAGE, PERESANDRA, CHIKKABALLAPUR DISTRICT, KARNATAKA- 562104 - 562104 PH :8660799820.

PUTTUR

1158. BHARATH AUTO CARS PVT LTD (4503-02), NEAR RAIWAY STATION, HARADY, PUTTUR - 571753 PH :9886072730.

RAICHUR

1159. MUNEEER CARs (A UNIT OF MUNEEER ENTERPRISES PVT LTD) (-02), #12-10-64,GOUSHAL ROAD,SIYA TALAB AREA,RAICHUR - 584101 PH :9480830264.

RAJANUKUNTE

1160. VARUN MOTORS PVT LTD (-01), SURVEY NO. 3/1, SITE NO. 6, SINGANAYAKANAHALLI, RAJANUKUNTE, BANGALORE NORTH TALUK, BANGALORE URBAN, KARNATAKA - 560064 PH :9513979162.

RAMANAGARA

1161. KALYANI MOTORS PRIVATE LIMITED (-02), #K1318/2034C,OPP TO ROTARY HOSPITAL,BM ROAD, RAMNAGARAM - 571511

RANEENUR

1162. REVANKAR MOTORS PVT LTD (-01), SCHEDULE A-2, OPP. STJIT ENGINEERING COLLEGE, P B ROAD, RANEENUR, KARNATAKA. - 581115 PH :8830947883.

SAGAR

1163. SHRUTI MOTORS PVT LTD (-01), BESIDE H GANAPATHIYAPPA PETROL BUNK (BP), B H ROAD, NH-206, SAGAR, SHIMOGA DISTT. - 577401

SAKLESHPUR

1164. VENKAT MOTORS (-01), SITE NO. 19, 3RD WARD, SARASWATHIPURAM, SAKLESHPUR TOWN, DISTRICT - HASSAN. - 573134 PH :7892809634.

SARJAPURA

1165. PRATHAM MOTORS PVT LTD (-01), SURVEY NO. 476/3, SARJAPUR TOWN, TALUKA - ANEKAL, SARJAPUR HOBLI, DISTRICT - BANGALORE URBAN, KARNATAKA. - 562125 PH :7760962890.

SAUNDATI

1166. SHANTESHA MOTORS PVT LTD (-01), CTS NO. 4038B/1,PLOT NO 16/3 DHARWAD ROAD, KENCHALAKOP, SAUNDATTI - 591126 SHIKARIPURA

Dealer Workshop (AS ON 31.01.2026)

1167. SHREE LAKSHMI CARS PVT LTD (-01), 35/5, AADHI SAKTI TEMPLE SHIMOGA-SHIKARIPURA ROAD, SHIKARIPURA - 577427

SHIMOGA

1168. SHRUTI MOTORS PVT LTD (-01), K.NO 599, SHANKARMUTT ROAD, SHIMOGA - 577201
1169. SHRUTI MOTORS PVT LTD (-02), BLOCK L-1, INDUSTRIAL ESTATE, BEHIND HP PETROL BUNK, SAGAR ROAD, SHIMOGA - 577204
1170. SHRUTI MOTORS PVT LTD (-03), SURVEY NO. 41/3 & 41/4, HOINNALI ROAD, SHANTHI NAGAR, SHIMOGA - 577201
1171. SHREE LAKSHMI CARS PVT LTD (-01), SURVEY NO - 74 & 86 (PLOT NO 1800), URGADUR, BY PASS ROAD, SHIVAMOGGA, KARNATAKA - 577203 - 577203

SIDDAPUR

1172. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO. 211, NEAR IOCL PETROL BUNK, JOG ROAD, VILLAGE - HOSUR, TALUK - SIDDAPUR, DISTRICT - UTTARA KANNADA - 581355 PH: 9449402730.

SINDHANUR

1173. KPF PVT LTD (-01), SY. NO. 168/15, EJ HOSAHALLI CAMP GANGAVATHI MAIN ROAD, SINDHANUR, RAICHUR DISTRICT, KARNATAKA - 584128 - 584128

SIRISI

1174. RNS MOTORS PVT LTD (-01), SURVEY NO 43/B, LANDKANALLI VILLAGE, DODNALLI GRAMA, SIRSI TALUK AND HOBALI, UTTAR KANNADA, KARNATAKA - 581402 PH: 9895979023.

SIRSI

1175. RNS MOTORS PVT LTD (7301-0D), K H B COLONY, SIRSI - 581402 PH: 9538925606.

SIRUGUPPA

1176. MUNEEER CARS (A UNIT OF MUNEEER ENTERPRISES PVT LTD) (-01), SITE NO:31C/1B & PLOT NO.1, BELLARY - SIRUGUPPA MAIN ROAD, SIRUGUPPA TALUK, BELLARY DISTRICT - 583121 PH: 7619505001.

SOMWARPET

1177. MANDOVI MOTORS PVT LTD (-01), SURVEY NO 130 SITUATED AT MADIKERI ROAD, NAGROOR VILLAGE, BALAGUNDA POST, SOMWARPET TALUK, NORTH KODAGU DISTT. - 571236 PH: 9845115665.

SORABA

1178. SHRUTI MOTORS PVT LTD (-01), NO: 2281681997, 6TH WARD, KHATA NO: 7/A-1/B, OPPOSITE TO GOVERNMENT JUNIOR COLLEGE, SHIRALA-KOPPA ROAD, SORABA, SHIVAMOGGA DIST, KARNATAKA- 577429 - 577429

SRINGERI

1179. SHREE LAKSHMI CARS PVT LTD (-01), SL NO 711, DHIRUVANISH GRAND, RAJANAGAR, SRINGERI - 577139

SRINIVASAPURA

1180. SURAKSHAA CAR CARE PVT LTD (-01), SY NO. 40, VPRD NO. 86, PROPERTY NO. 84 & 87, CHALDIGANA HALLI GRAMA PANCHAYATH, PANNASAMAKANA HALLI VILLAGE, SRINIVASAPURA POST & TALUK, DIST.-KOLAR, KARNATAKA - 563135 PH: 9449865601.

SULLIA

1181. MANDOVI MOTORS PVT LTD (4502-04), ODABAI SULLIA, MANGALORE MYSORE ROAD, KARNATAKA - 574239 PH: 9900002325.

SURTHKAL

1182. MANDOVI MOTORS PVT LTD (4502-02), KANA ROAD, SURATHKAL - 574158 PH: 9845514143.

T. NARASIPURA

1183. MANDOVI MOTORS PVT LTD (-01), KHATA NO:472/473/474, OPP TO SRI RAGHAVENDRA SWAMY MUTT, CHAMARAJANAGAR ROAD, T. NARASIPURA TOWN, MYSORE DISTRICT, KARNATAKA - 571124 PH: 9845132038.

THIRTHAHALLI

1184. SHRUTI MOTORS PVT LTD (-01), PLOT NO. 1507/2187, OPP. TO HEGDE PETROL PUMP, AGUMBE ROAD, THIRTHAHALLI - 577432

THOKOTU

1185. BHARATH AUTO CARS PVT LTD (-01), NH-66, KAPIKAD, ULLAL, THOKOTTU, DAKSHINA KANNADA DISTT. - 575017 PH: 9538796330.

TIPTUR

1186. SAKETH AUTOMOBILES (-03), BANDIHALLI INDUSTRIAL ESTATE, N.H.206, TIPTUR, KARNATAKA - 572201 PH: 9945301023.

TUMKUR

1187. SAKETH AUTOMOBILES (-01), SIRA ROAD, TUMKUR - 572106 PH: 9686550323.

UDUPI

1188. ABHARAN MOTORS PVT LTD (-01), N.H. 17, NITTUR, UDUPI - 576103 PH: 9880232999.

1189. ABHARAN MOTORS PVT LTD (-05), NO. 305/1C, DOOR NO. 5-51A, RAILWAY STATION ROAD, INDRALI, UDUPI, DISTT. - UDUPI - 576101 PH: 9686694341.

UJIRE

1190. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO.237-281, MANGALORE-CHARMADY ROAD, NEAR INDIAN OIL PETROL PUMP, SAMPIGE NAGAR, UJIRE, BELTHANGADY TALUKA, DISTT. DAKSHINA KANNADA, KARNATAKA - 574240 PH: 9886176130.

UPPINANGADI

1191. MANDOVI MOTORS PVT LTD (4502-05), NR.PADMA VIDYA IOC PETROL STATION-34, NEKKILADY, UPPINANGADY - 574241 PH: 9740912365.

VENOOR

1192. BHARATH AUTO CARS PVT LTD (-01), RESURVEY NO:8/5, KARIMANELU VILLAGE, VENOOR, BELTHANGADY TALUK, DAKSHINA KANNADA DIST., KARNATAKA-574242 - 574242

VIJAYPURA

1193. BIMAL AUTO AGENCY INDIA PVT LTD (-01), DOOR NO 563, MARUTHI NAGAR, CHIKKABALLAPUR ROAD, VIJAYAPURA TOWN, DEVANAHALLI TALUK, BANGALORE RURAL DISTRICT KARNATAKA - 562135 PH: 8884433996.

VITTAL

1194. MANDOVI MOTORS PVT LTD (-01), DOOR NO. 1-287 (9), JISHAN COMPLEX, VITTAL TOWN, TALUKA - BANTWAL, DISTRICT - DAKSHIN KANNADA - 574243 PH: 9008810123.

YADGIR

1195. LAHOTI MOTORS PVT LTD (-01), SURVEY NO. 101/1, GULSARAM VILLAGE, YADGIR TOWN & DISTT, SHAHPUR TALUKA, KARNATAKA - 585223 PH: 9480825031.

KERALA

ADIMALI

1196. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), RE SURVEY NO:647/5-2, BUILDING NO:15/121, MANNANKANDAM VILLAGE, ADIMALI, DEVIKULAM TALUK, IDUKKI DISTRICT, KERALA-685561 - 685561

ADOOR

1197. AVG MOTORS PVT LTD (-02), KOTTAMUKAL, K.P. ROAD, ADOOR PO, PATHANMTHITTA, KERALA - 691523 PH: 9446355900.

ADUR

1198. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0A), M. C. ROAD, MITHRAPURAM, ADOOR, PATHANMTHITTA - 689518 PH: 9745998303.

ALAKODE

1199. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE. SY. NO. 23/1958, ARANGAM, ALAKODE, TALIPARAMBA TALUK, KANNUR DISTRICT, KERALA - 670571 - 670571

ALANALLUR

1200. KVR AUTOCARS PVT LTD (-01), BUILDING NO. 10/1050, CHANDAPPADI, MANNARKAD ROAD, POST - ALANALLUR, TALUKA - MANNARKAD, DISTRICT - PALAKKAD, KERALA - 678601 PH: 9747020582.

ALAPPUZA

1201. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-12), BLOCK NO. 145, RE-SURVEY NO. 79, ALAPPUZHA WEST VILLAGE, AMBALAPPUZHA TALUK, ALAPPUZHA DIST. KERALA-699002 - 699002 PH: 9745977744.

ALATHIYOOR

1202. A M MOTORS (-11), RE SURVEY NO. 160/3, 161/7 (OLD SURVEY NO. 359/1), VILLAGE - ALATHIYOOR, TIRUR PONNAI ROAD, TALUKA - TIRUR, DIST.-MALAPPURAM, KERALA - 676102

ALATHUR

1203. BRD CAR WORLD LIMITED (-01), SURVEY NO. 456/8, 455/8, 455/9, ERATTUKKULAM, KATTUSSERY VILLAGE, ALATHUR TALUKA, PALAKKAD DISTRICT, KERALA - 678682 PH: 9745634999.

ALLEPEY

1204. POPULAR VEHICLES AND SERVICES LIMITED (-01), BUILDING NO. XVIII/135, DOOR NO. 13/449, CCSB ROAD, PALACE WARD, CHUNGAM, ALAPPUZHA, KERALA-688011 - 688011 PH: 9778698161.

ALUVA

1205. BRD CAR WORLD LIMITED (-09), RE SURVEY NO.330/7, NH-47, KUNNAMPURAM, PO-DESHAM PANCHAYATH, CHENGAMANAD, ALUVA - 683102 PH: 9745907100.

ANCHAL

1206. SARATHY AUTO CARS (-01), SURVEY NO. 371/9, VILLAGE - IDAMULAKKAL, P.O. - ANCHAL, TALUK - PUNALUR, DISTRICT - KOLLAM - 691306
PH :952690665.
1207. POPULAR VEHICLES AND SERVICES LIMITED (1601-14), RE SURVEY NO 581/5, BLOCK NO 33, ANCHAL VILLAGE, NEAR ALBILAL DRIVING SCHOOL, KATHADY JUNCTION, ANCHAL, KERALA - 691306
PH :9778698200.

ANGAMALY

1208. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0F), ANGAMALY KALADY ROAD, MC ROAD, ANGAMALY - 683572
PH :9745998434.
1209. POPULAR VEHICLES AND SERVICES LIMITED (2701-0D), 182-AIRPORT JUNCTION NAGAR.M.C. ROAD ANGAMALY - 683572
PH :8086078886.

AREEKODE

1210. KVR AUTOCARS PVT LTD (-01), SURVEY NO. 196/22-4, 196/10-1, 196/22-2, 19, KEEZHUPARAMBU VILLAGE, PATHANAPURAM, AREEKODE - 673639

ATTINGAL

1211. POPULAR VEHICLES AND SERVICES LIMITED (1601-07), PALAMKONAM, PERUNKULAM,VIA-ALAMCODE, ATTINGAL - 695102
PH :8086078788.
1212. SARATHY AUTO CARS (-01), SURVEY NO. 2952/17 & 2952/4, KIZHUVILLAM VILLAGE, ATTINGAL, CHARAYINKEEZHU TALUK, TRIVANDRUM DIST., KERALA - 695104
PH :9526052765.
1213. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SY. NO. 541/3, 14, 15, 16, (OLD SY. NO. 22, 22/13, 16), IN BLOCK NO. 3 OF VELLOOR VILLAGE, EASTERN SIDE OF NATIONAL HIGHWAY 47, NEAR INTERNATIONAL SCHOOL, CHEMBAKAMANGALAM, KORANI PO, ATTINGAL, TRIVANDRUM DIST., KERALA. - 695104
PH :9747550888.

BALARAMAPURAM

1214. POPULAR VEHICLES AND SERVICES LIMITED (1601-11), POOVAR ROAD, VAZHIMUKKU, BALARAMAPURAM P.O., TRIVANDRUM DISTRICT - 695501
PH :8943345922.

BHARANIKAVU

1215. SARATHY AUTO CARS (-01), URVEY NO. 116/2 OF 4, SASTHAMKOTTA VILLAGE, BHARANIKAVU TOWN, KUNNATHOOR TALUK, KOLLAM DISTRICT. KERALA, PIN-690520 - 690520
PH :7994825565.

CALICUT

1216. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-01), MARUTI WORKSHOP, PANIKKER ROAD, CALICUT, NADAKKAVE - 673011
PH :9745998019.
1217. POPULAR VEHICLES AND SERVICES LIMITED (4702-47-02), BEHIND MIMS, EASWARAMANGALAM ROAD, GOVINDAPURAM P.O., CALICUT - 673016
PH :9846298613.
1218. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-06), KOYA ROAD JUNCTION, PUTHIYANCADI, POST WEST HILL, CALICUT - 673005
PH :9745998020.
1219. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-08), NEAR STEEL COMPLEX, NALLALAM, CALICUT - 673855
PH :9745998018.
1220. POPULAR VEHICLES AND SERVICES LIMITED (4702-47-07), NH-17 BYE PASS, PACHAKKIL, MALAPARAMBU P.O., KOZHIKODE, CALICUT - 673009
PH :9288012082.
1221. BIMAL AUTO AGENCY INDIA PVT LTD (-01), RE SURVEY NO. 13, BUILDING NO. 5/548, KRISHNARJUNA BUILDING, AREEKAD, VILLAGE AND PANCHAYATH - CHERUVANNUR, P.O. - NALLALAM, CALICUT (KOZHICODE), KERALA. - 673027
1222. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-12), R S NO: 51/7, IIRINGALLUR, OLAVANNA PANCHAYATH, GURUVAYOORAPPAN COLLEGE PO, PALLAZHI - 673014
1223. A M MOTORS (-47-01), SURVEY NO: 17/57, 55, AMBALAPADI, POOLADIKUNNU, NH-66, ERANJIKKAL POST - 673001

CHALAKUDY

1224. POPULAR VEHICLES AND SERVICES LIMITED (2701-0C), SURVEY NO: 350/1, 352/1, 352/2, 362/1, 363/3, 364/1, NH BYEPASS 47, PERAMBRA VILLAGE, CHALAKUDY, THRISSUR DIST., KERALA- 680722 - 680307
PH :9072609600.
1225. BRD CAR WORLD LIMITED (-01), MURINGOOR P.O., CHALAKUDY - 680316
PH :9645176999.
1226. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 53/1, 53/2 & 55/1, PANAMBILLY COLLEGE JUNCTION, VILLAGE-PERAMBRA, POTTA, TALUKA CHALAKKUDY, DISTT. THRISSUR, PIN-680307, KERALA - 680307

CHALAPARAMBU

1227. AVG MOTORS PVT LTD (-01), VAIKOM, KOTTYAM, CHALAPARAMBU, - 673002

CHANGANASSERY

1228. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), BUILDING NO. 4/11, BLOCK NO. 4, RE-SURVEY NO. 224/1, VAZHAPPALLI WEST VILLAGE, CHANGANASSERY TOWN & TALUK, KOTTAYAM DIST., KERALA - 686103
PH :9778699557.

CHANGARAMKULAM

1229. A M MOTORS (-01), MELE MANTHADAM, ALANKODE, P.O., CHANGARAMKULAM, MALAPPURAM DISTT, KERALA - 679585
PH :9895756008.

CHAVAKKAD

1230. BRD CAR WORLD LIMITED (-06), ORUMANAYOOR P.O.CHAVAKKAD, DISTRICT-THRISSUR - 680512
PH :9645963999.
1231. SAI SERVICE PRIVATE LIMITED (-01), SURVEY NO. 26/5, MULLANTHARA PARAMBU, OVUNGAL, KUNNAMKULAM ROAD, TALUK - GURUVAYUR, CHAVAKKAD.) - 680506
PH :9495883852.

CHAVARA

1232. SARATHY AUTO CARS (-01), SURVEY NO: 99/2, 99/21-1 & 99/21-2, OPPOSITE CHAVARA BUS STAND, NH 66, CHAVARA, KOLLAM DIST., KERALA - 691584 - 691584

CHENGANNUR

1233. SARATHY AUTO CARS (-06), PRAVUMKODD, THIRUVANVANDOOOR P.O. CHENGANNUR TALUK, ALAPPUZHA (DIST) - 689124
PH :9447002647.
1234. SAI SERVICE PRIVATE LIMITED (-01), SURVEY NO. 276/2, 11, 13, 13-2-2, NEAR BPCL PUMP AND SURVEY NO. 276/12, M C ROAD, NEAR LABHAM MAVELI STORE, CHENGANNUR PO & MUNICIPAL, CHENGANUUR VILL & TALUK, ALAPPUZHA DIST., KERALA-689121 - 689121
PH :9288024220.

CHERUPALASSERY

1235. KVR AUTOCARS PVT LTD (-01), SURVEY NO. 154/4, RS NO. 154/4, VILLAGE - CHERUPPALASSERY, TALUK - OTTAPPALAM, DISTRICT - PALAKKAD - 679503

CHERTHALA

1236. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), OPPOSITE TO S.N. COLLEGE, S.N. PURAM P.O., KANJIKUZH, CHERTHALA, ALAPPUZHA-DIST. - 688552
1237. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE-SURVEY NO.150/2-1,147/3, BUILDING NO KP-18/80, N.H. KANJIKUZH VILLAGE, CHERTHALA, ALAPPUZHA DISTT., - 688582
PH :9072530127.

1238. MAJO MOTO (A UNIT OF GEORGE MAJO AUTOMOBILES PVT LTD) (-01), RE SURVEY NO:121/2082,BUILDING NO:28/344, CHERTHALA,ALAPPUZHA DIST, KERALA - 688524 - 688524

CHERUPUZZHA

1239. KVR AUTOCARS PVT LTD (-01), SURVEY NO.191, VAYAKKARA VILLAGE, - 670511

CHINGAVANAM

1240. POPULAR VEHICLES AND SERVICES LIMITED (-01), BUILDING NO. VI 461, RE SURVEY NO. 290/9, GOMATHI JUNCTION, MAVILANGU KARA, CHINGAVANAM P.O., DISTT. KOTTAYAM, KERALA - 686531
PH :9778690817.

CHITTUR

1241. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), S.NO.719/3 AND 721/1, RE SURVEY NO.671/10, VELLIVAVALLAMPATHY VILLAGE, KOZHINJAMPARA, CHITTUR, PALAKKAD DISTT. - 678555

CHULLIMANOOR

1242. POPULAR VEHICLES AND SERVICES LIMITED (1601-16), RE-SURVEY NO. 43/7, VILLAGE-ANAND, CHULLIMANOOR TOWN, TALUKA-NEDUMANGAD, DIST. TRIVANDRUM, PIN-695541, KERALA - 695541
PH :9778690745.

COCHIN

1243. POPULAR VEHICLES AND SERVICES LIMITED (2701-27-01), PERANDOOOR ROAD, PUNNAKAL, ELAMAKKARA, COCHIN - 682025
PH :9846017725.
1244. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-02), BEHIND COMMERCIAL SALES TAX, M.G. ROAD, COCHIN, - 682015
PH :9745998040.
1245. SAI SERVICE PRIVATE LIMITED (2705-27-01), 501/1 15L., CHERANALLOOR ROAD, EDAPPALLY, COCHIN - 682024
PH :9645106339.
1246. SAI SERVICE PRIVATE LIMITED (2705-27-02), NH-47,,PATHADIPALAM,EDAPPALLY,,COCHIN - 682024
PH :9645105057.
1247. POPULAR VEHICLES AND SERVICES LIMITED (2701-27-04), NEAR LISI HOSPITAL, OPP. IMA BLOOD BANK, COCHIN, - 682018
PH :9846296618.
1248. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-09), PALARIVATTOM KAKKANAD ROAD, KAKKANAD, COCHIN, - 682030
PH :9745998013.

Dealer Workshop (AS ON 31.01.2026)

1249. SAI SERVICE PRIVATE LIMITED (2705-08), KETTEZHUTHUM KADAVU, INTUC JUNCTION, NETTOOR, ERNAKULAM, COCHIN (KERALA) - 682040 PH :8129496818.	1259. INDUS MOTOR (-01), 43/16-2, 43/17, 43/18, 43/3, 2, OPP. SANETTUMANOOR, KOTTAYAM, PIN-686631, KERALA - 686631	1268. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0C), MEENANGADI, KAKKAVAYAL P.O., NORTH KALPETTA, WAYAND - 673591 PH :9745998592.	1279. BRD CAR WORLD LIMITED (-02), BRD INDUSTRIAL ESTATE, KARIKKAD, KUNNAMKULAM - 680519 PH :9995804599.
1250. MAJO MOTO (A UNIT OF GEORGE MAJO AUTOMOBILES PVT LTD) (2709-27-01), DOOR NO.5/452, 5/452A, 5/453, OLD ELOOR ROAD, ELOOR JUNCTION, NORTH KALAMASSERY, DISTRICT - ERNAKULAM, COCHIN - 683104	1260. SAI SERVICE PRIVATE LIMITED (-01), PLOT NO.83/1,2 OPPOSITE TO KUMAR PETROL PUMP, STATUE ROAD, CHULLIKKAL POST, FORT KOCHI - 682005 PH :9645106330.	1269. KVR AUTOCARS PVT LTD (-C1), BUILDING NOS. 363, 364, 365, 366,367,368 AND 369 CONSTRUCTED ON THE PLOT COMPRISED IN RESURVEY NOS. 719/6, 722/3, 722/22, 722/6, 722/8, 722/10, 722/21, SITUATED AT MUTTIL NORTH VILLAGE, VYTHIRI TALUK, KALPETTA SUB-DISTRICT, WAYANAD DISTRICT, KERALA. - 673122 PH :9747021902.	KARUNAGAPALLY 1280. SARATHY AUTO CARS (-05), K.S. PURAM,NEELIKULAM, KARUNAGAPALLY,KOLLAM. - 690544 PH :9526691565.
1251. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-0L), SURVEY NO. 30-A/32, KARIKKAD ROAD, THEKKUMBHAGAM, PUTHIYAKAVU, TRIPUNITHURA, ERNAKULAM, KERALA - 682301 PH :9745992070.	1261. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-08), KUNAMKULLAM CHAVAKKAD ROAD, OPPOSITE CHOOLPURAM MOSQUE, GURUYOOR, THRISSUR - 680505 PH :9745998015.	KANHANGAD 1270. POPULAR VEHICLES AND SERVICES LIMITED (4702-06), HIGHWAY JUNCTION,KANHANGAD SOUTH P.O. ,KANHANGAD - 689641 PH :9946104885.	1281. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SY.NO.243/1, 243/10, 243/16, 243/15, 243/16, EDAPPALLY KOTTA JUNCTION, NEAR TITANIUM, CHAVARA POST, KARUNAGAPALLY, DISTT. KOLLAM. - 691583 PH :9745998006.
1252. MAJO MOTO (A UNIT OF GEORGE MAJO AUTOMOBILES PVT LTD) (2709-02), PLOT NO.2/316, NH-47, MARADU VILLAGE, KANNDIKAD, NEAR SAROVARAM, KUNDANOOR, COCHIN (KERALA) - 687001	1262. BRD CAR WORLD LIMITED (-05), KARUPADANNA P.O., IRINJALAKUDA, THRISSUR - 680670 PH :9539006999.	1271. KVR AUTOCARS PVT LTD (-02), ARANGADI, P.O. KANHANGAD, DIST. KASARGOD. - 671315 PH :9605040999.	1282. SARATHY AUTO CARS (-11), SURVEY NO. 15/3, SIDCO INDUSTRIAL AREA, EDAKULANGARA PO, NEAR KARUNAGAPALLY RAILWAY STATION, KARUNAGAPALLY, KERALA - 690562 PH :9526691565.
1253. POPULAR VEHICLES AND SERVICES LIMITED (2701-27-10), SURVEY NO: 162/2,162/24-2, 162/25,162/3,162/1-2,162/13-2 & 162/5, BUILDING NO: 33/2,33/3 & 33/4, PIPELINE ROAD, PADIVATTOM, VAZHAKALA, COCHIN, KERALA-682021 - 682021	IRITTY 1263. INDUS MOTOR COMPANY PRIVATE LIMITED (-02), SURVEY NO. 48, BUILDING NO. 214, PERUPARAMBA, IRITTY, KANNUR, KERALA - 670703 PH :9747554929.	1272. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0F), SURVEY NO.491/3A1 AND 491/3A2, AJANUR VILLAGE, KANHANGAD, HOSADURGA TALUK, KASARGOD DISTT, KERALA. - 671541	KASARGOD 1283. KVR AUTOCARS PVT LTD (-01), ANANGUR, VIDYANAGAR (PO), NH17, KASARGOD - 671123 PH :9747021206.
1254. BRD CAR WORLD LIMITED (-10), OPPOSITE IOC PARKING GATE, SEA PORT AIRPORT ROAD, IRRUPPANAM. - 682024	IRITY 1264. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE-SURVEY NO: 14/4, 11/2, NEAR JABBAR KADAVU BRIDGE, KEEZHUR VILL., PERAVOOR ROAD, IRITTY MUNICIPAL, KANNUR DIST. KERALA - 670703 PH :7902473741.	KANJIRAPALLY 1273. AVG MOTORS PVT LTD (-01), NEW SURVEY NO. 187/2 (OLD SURVEY NO. 299/1, 299/11), KANJIRAPALLY VILLAGE & TALUKA, KOTTAYAM DISTRICT.,KERALA - 686512	1284. POPULAR VEHICLES AND SERVICES LIMITED (4702-0D), MUNDAKULAM, CHEMMANAD (PO), KASARGOD - 671371 PH :9946104821.
EDAKKARA 1255. KVR AUTOCARS PVT LTD (-01), SURVEY NO. 1087/1C-91, VAZHAKADAVU VILLAGE, OOTY ROAD, MUNDA, EDAKKARA TOWN, NILAMBUR TALUK, MALAPPURAM DIST., KERALA - 679331 PH :9747020777.	KAIPAMANGALAM 1265. SAI SERVICE PRIVATE LIMITED (2705-07), SURVEY NO: 240/4-2 & 240/4-3, 249/5-19, 249/4A-3, 249/4B-1, 249/5-14, 249/4B, 249/4A-4 KAIPAMANGALAM BOARD,KAIPAMANGALAM P O, THRISSUR DIST, KERALA - 680681 PH :8129496846.	KANJRAPALLY 1274. INDUS MOTOR COMPANY PRIVATE LIMITED (-02), VADAKUMBHAGAM KARAYIL, KUNNAMBHAGAM P.O. , KANJIRAPALLY - 686506 PH :9745998009.	1285. INDUS MOTOR COMPANY PRIVATE LIMITED (-03), 18/304A & 18/304B, SY. NO. 39/3B, RE SY. NO. 57/6, MOGRAL, MANJESHWAR TALUK, KASARGOD, KERALA - 671541 PH :9747550747.
EDAPPAL 1256. POPULAR VEHICLES AND SERVICES LIMITED (4702-05), KOZHICKODA ROAD, KAVILPADY, EDAPPAL, MALAPPURAM - 679582 PH :9946104680.	KALAMASSERY 1266. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-07), KALAMASSERY, ALUVA WEST, ERNAKULAM DIST, KERALA - 683106 PH :9745998012.	KANNUR 1275. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0E), BALANKINAR JN., KATTAMPALLY.P.O, KANNUR - 690011	KATAPPANA 1286. AVG MOTORS PVT LTD (-01), PALLIKKAVALA, KATTAPPANA, IDUKKI, KERALA - 685508
EDAVANNAPPARA 1257. A M MOTORS (-01), SURVEY NO. 98/1, PALLIPADY,EDAVANNAPPARA, AREEKODE ROAD, CHEEKODE POST, EDVANNAPPARA, KONDOTTY TALUK, MALAPPURAM DIST., KERALA- 673645 - 673645	KALLAMBALAM 1267. POPULAR VEHICLES AND SERVICES LIMITED (-01), BUILDING NO. 5/472, NH-47, KADUAPPALLY, THOTTAKAD P O, KALLAMBALAM, TRIVANDRUM DIST., KERALA - 695605 PH :8086078788.	KANNUR 1276. KVR AUTOCARS PVT LTD (-04), CP-3-651-B, OPP. DHANRAJ TALKIES, PUTHIYATHERU, CHIRAKKAL POST, KANNUR, KERALA - 670011 PH :9656034333.	KATTAPANA 1287. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), KATTAPPANA-IDUKKI KAVALA, BYE PASS ROAD, KATTAPPANA, IDUKKI (DIST.). - 685508 PH :9746743460.
EDAVANNAPPARA 1258. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO. 77/16-1 & 77/2-4, BUILDING NO.18/152-B, CHEEKODE VILLAGE,EDAVANNAPPARA KONDOTTY ROAD, CHERUVAYOOR PO, MALLAPPURAM DISTRICT, KERALA-673645 - 673645 PH :9539007323.	KALPETTA 1268. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0C), MEENANGADI, KAKKAVAYAL P.O., NORTH KALPETTA, WAYAND - 673591 PH :9745998592.	KARIKKAD (KUNNAMKULAM)) 1277. POPULAR VEHICLES AND SERVICES LIMITED (4702-0F), PLOT NO.82/6A, NEAR CHARAPPURAM SREEMUTHAPPAN KAVU, KAPPAD ROAD, THAZHE CHOYVA (PO), KANNUR - 670018 PH :9846062796.	KAYAMKULAM 1288. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE-SURVEY NO. 81/3, VILLAGE & TOWN - KATTAPPANA, TALUK & DIST.-IDUKKI, KERALA. - 685515 PH :9746818407.
ETUMANOOR 1259. INDUS MOTOR COMPANY PRIVATE LIMITED (2705-08), KETTEZHUTHUM KADAVU, INTUC JUNCTION, NETTOOR, ERNAKULAM, COCHIN (KERALA) - 682040 PH :8129496818.	1260. SAI SERVICE PRIVATE LIMITED (-01), PLOT NO.83/1,2 OPPOSITE TO KUMAR PETROL PUMP, STATUE ROAD, CHULLIKKAL POST, FORT KOCHI - 682005 PH :9645106330.	1278. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), BALAN KINAR, KATTAMPALLY PO, KANNUR, KERALA - 670811	KARUNAGAPALLY 1289. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-05), KARIYILAKULANGARA, KAYANKULAM P.O., ALAPPUZHA DISTT. - 690572 PH :9745998005.

KODAKARA

1291. A.M. MOTORS (–01), OPPT. KODAKARA POLICE STATION, NH-544, PERINGAKULAM, KODAKARA POST, THRISSUR - 680684

KODANGALLUR

1292. SAI SERVICE PRIVATE LIMITED (2705–03), NH-17, K.S.PURAM, KODUNGALLUR - 680667 PH: 9645106571.

KODUNGALLUR

1293. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), RE-SURVEY NO. 116/1-6, 116/2-5, BUILDING NO. 560/A, WARD NO. VII, AALA VILLAGE, (OLD VILLAGE-SREENARAYANAPURAM), KODUNGALLUR TALUK, MADHILAKOM SRO, SANTHIPURAM PO, THRISSUR DIST., KERALA - 680008 PH: 9747513444.

KODUVALLY

1294. A M MOTORS (–01), SURVEY NO-91/9, 91/10, NALLANKADY, VAVAD POST, KODUVALLY, KOZHICODE DISTRICT, KERALA - 673572 PH: 9895979023.

KOLANCHERRY

1295. SAI SERVICE PRIVATE LIMITED (–01), SURVEY NO.138/7, BLOCK NO. 47, WARD-8, KOLENCHERY TOWN, NH-85, AIKARANADU NORTH VILL., KUNNATHUNADU TALUK, ERNAKULAM DIST., KERALA-682311 - 682311 PH: 7356600595.

KOLLAM

1296. POPULAR VEHICLES AND SERVICES LIMITED (1801–04), H & C COMPOUND, MUNDACKAL, KOLLAM - 680006 PH: 7594977550.

1297. INDUS MOTOR COMPANY PRIVATE LIMITED (1602–03), OLD SARATHY THEATRE, PUNALOOR ROAD, KOLLAM - 691005 PH: 9745998004.

KONDOTTY

1298. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 16/1, BLOCK NO. 36 (OLD SURVEY NO. 100/1), NEDIYURUPPU VILLAGE, KONDOTTY PO, ERNAD TALUKA, MALAPURAM DISTRICT, KERALA - 683573 PH: 9746743178.

KOOTHATTUKULAM

1299. SAI SERVICE PRIVATE LIMITED (–01), EDAPUTHUSSERY BUILDING, M.C. ROAD, OPP. MARYGIRI PUBLIC SCHOOL, KOOTHATHUKULAM P.O., ERNAKULAM DT. - 686662 PH: 9645106258.

1300. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO. 614/3-4, BAPUJI JUNCTION, CHORAKUZHIM C ROAD, KOOTHATTUKULAM, MUVATTUPUZHA TALUK, ERNAKULAM DIST., KERALA - 686662 - 686662

KOPPAM

1301. A M MOTORS (–01), SURVEY NOS: 331/3-6, 331/3-10, NEAR SALAFIYYA TRAINING COLLEGE, PERINTHALMANNA-PATTAMBI ROAD, KARINGANDU, VILAYUR POST, KOPPAM, PALLAKKAD DIST., KERALA-679309 - 679309 PH: 9048666635.

KOTHAMANGLAM

1302. POPULAR VEHICLES AND SERVICES LIMITED (2701–08), NEAR BSNL OFFICE, THANGALAM, KOTOHAMANGALAM, KERALA - 686691 PH: 9846027990.

1303. INDUS MOTOR COMPANY PRIVATE LIMITED (-03), PALAKKADAN BUILDING, CHANKLAM, KOTHAMANGALAM - 686691 PH: 9745998479.

KOTTAKKAL

1304. INDUS MOTOR COMPANY PRIVATE LIMITED (4701–09), NEAR MATHRUBHUMI PRESS, P.O. KOTTAKKAL, MALAPURAM DIST. - 676503 PH: 9745998017.

1305. POPULAR VEHICLES AND SERVICES LIMITED (4702–03), NH-17, CHANDAPARAMBU, RANBATHANI P.O, MALAPPURAM, KOTTAKAL - 676510 PH: 9946104631.

KOTTARAKKARA

1306. POPULAR VEHICLES AND SERVICES LIMITED (-01), MYLOM, MC ROAD, KOTTARAKKARA, DISTT-KOLLAM, KERALA - 691531 PH: 8086073466.

1307. SARATHY AUTO CARS (–01), WARD NO.40, MELILLIA PANCHAYATH, IPPALLOOR LOWER KARIKAM, KOTTARAKKARA DISTT. KOLLAM (KERALA) - 691531 PH: 9847423365.

1308. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), RE SURVEY NO.207/3-2, KIZHAKEKKARA MURIYIL, KNS HOSPITAL JUNCTION, KOTTARAKKARA VILLAGE AND TALUKA, KOLLAM DISTT. - 691531 PH: 9747562299.

1309. POPULAR VEHICLES AND SERVICES LIMITED (-02), BUILDING NO. MP/20749.20/426, 20/748, INCHAKADU, KALAYAPURAM VILLAGE, MYLOM PANCHAYATH, KOTTARAKKARA TALUKA, KOLLAM DISTRICT, KERALA-691560 - 691560 PH: 8086073466.

1310. INDUS MOTOR COMPANY PRIVATE LIMITED (-02), RE-SURVEY NO. 141/3-4, 142/1-2, 15-16, 143/1-2, 143/2, 143/15-2, 143/15-2-2, BEARING NOS. 25/36 & 38, KOTTARAKKARA VILLAGE, KOTTARAKKARA TALUK, KOLLAM DISTRICT, KERALA- 691506 - 691506 PH: 9747562299.

KOTTAYAM

1311. AVG MOTORS PVT LTD (–01), ERAYILKADAVU, KOTTAYAM - 686001 PH: 7510982222.

1312. INDUS MOTOR COMPANY PRIVATE LIMITED (2702–04), MULANKUZA JN., NATTAKOM P.O., KOTTAYAM, KERALA - 686013 PH: 9745998148.

1313. POPULAR VEHICLES AND SERVICES LIMITED (-01), NEAR ST. THOMAS CHURCH, S.H. MOUNT, P.O. KOTTAYAM - 686006 PH: 8086073454.

1314. INDUS MOTOR COMPANY PRIVATE LIMITED (2702–0C), MANIPPUZHA, NATTAKOM P.O., KOTTAYAM - 686013 PH: 9745998007.

KOZHENCHERRY

1315. AVG MOTORS PVT LTD (–03), KOZHENCHERRY, COLLEGE JUNCTION, DISTRICT-PATHANAMTHITTA, - 689641 PH: 9446092995.

1316. SAI SERVICE PRIVATE LIMITED (–01), SURVEY NO: 315/15-B & 315/15-C.TB JUNCTION, NEAR HP PETROL PUMP, KOZHENCHERRY, PATHANAMTHITTA, KERALA - 689641 - 689641

KUNNAMANGALAM

1317. BIMAL AUTO AGENCY (–01), SURVEY NO 268/6, D.NO 6/247, KUNNAMANGALAM, KERALA - 673571

KUNNAMKULAM

1318. POPULAR VEHICLES AND SERVICES LIMITED (2701–07), CHOONDAL, TRISSUR ROAD, KUNNAMKULAM, TRISSUR DIST - 680502 PH: 9946105695.

KUTTIYADI

1319. A M MOTORS (–01), KUTTIYADI-PERAMBRA ROAD, PARAKKADAVU, PALERI POST, KUTTIYADI - 673508

1320. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), CHERYAKUMBALAM, PARAKKADAVU, KUTTIYADI, - 673508

LAKKIDI PERUR

1321. A M MOTORS (–01), 217/7, 217/2, 278/2, 278/1, PALAPPURAM, P.O. OTTAPPALAM, LEKKIDI PERUR DISTT. PALAKKAD, - 679302

MAILLATTY

1322. KVR AUTOCARS PVT LTD (–03), CHOWKI, MAILLATTY(P.O.), (VIA) UDUMA, POINACHI, KERALA - 671319 PH: 9747021026.

MALAPPURAM

1323. A M MOTORS (–01), VARANGODE, DOWNHILL, MALAPURAM, - 676519 PH: 9895705325.

MALLAPPALLY

1324. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), THOPPI COMPLEX, MALLAPPALLY KOTTAYAM RD, MALLAPPALLY WEST, MALLAPPALLY (KERALA) - 689585 PH: 9747541400.

MANATHAVADY

1325. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 1/2A1, A1, B1, RY 1/210, 1/99, MYSORE ROAD, CHETTPALAM, MANATHAVADY CITY & TALUK, WYANAD DIST., KERALA - 670645 PH: 9745997002.

MANJARI

1326. POPULAR VEHICLES AND SERVICES LIMITED (-0E), NARUKARA VILLAGE, RAJIV GANDHI BYEPASS JN., THURAKKAL, MANJARI (KERALA) - 676121 PH: 9859992406.

MANJERI

1327. A M MOTORS (–05), THURAKKAL BYEPASS, MANJERI, MALAPURAM, KERALA - 676121 PH: 9895756035.

1328. KVR AUTOCARS PVT LTD (–01), CH BYE PASS ROAD, MANJERI, MALAPPURAM, KERALA - 676123 PH: 9747020801.

MANNARKAD

1329. A M MOTORS (–07), NH-213, MANNARKAD, DIST.-PALAKKAD - 678582 PH: 9859597048.

MANNARKKAD

1330. INDUS MOTOR COMPANY PRIVATE LIMITED (2702–0K), ANAKATTY ROAD, AANDIPPADAM, NELLIPPUZHA-PO. MANNARKKAD, KERALA - 678583 PH: 9745995946.

MAVELIKARA

1331. POPULAR VEHICLES AND SERVICES LIMITED (-02), KONNAYIL SUVAKO INDUSTRIAL COMPLEX, SHED A-1, KOLLAKADAVU INDUSTRIAL ESTATE, KOCHAL MOODU, KALLIMEL P.O., MAVELIKKARA, KERALA - 690570 PH: 9400052338.

Dealer Workshop (AS ON 31.01.2026)

1332. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 135/1/A, RE-SURVEY NO. 28/52, NEAR PRAYIKKARA, MAVELIKKARA VILLAGE & TALUK, ALAPUZZHA (ALLEPPEY) DISTRICT, KERALA - 690 101. - 690101
1333. POPULAR VEHICLES AND SERVICES LIMITED (-10), BUILDING NO. 10/115-A, WARD NO. 10, CHENNIHALA VILL. AND TOWN, SHANTHIVANAM JUNCTION, CHERUKOLE P.O., MAVELIKKARA TALUK, ALAPPUZHA DIST., KERALA - 690104. - 690104
PH :9778690833.

MORAYUR

1334. A M MOTORS (-01), SURVEY NO. 328/1, VILLAGE - MORAYUR, VALENCHERY, DISTRICT - MALAPPURAM, KERALA. - 673642
PH :8086526666.

MUVATTAPUZH

1335. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), NH-49, MUVATTUPUZZHA KODAMANGALAM ROAD, NEAR R.K. HOSPITAL, MUVATTUPUZZHA, ERNAKULAM DIST. - 686661
PH :9745998011.
1336. POPULAR VEHICLES AND SERVICES LIMITED (2708-02), MUTHUKALLU JUNCTION, PERUMALLUR P.O., MUVATTUPUZZHA, KERALA - 686673
PH :7356988840.

NADAPURAM

1337. A M MOTORS (-01), NADAPURAM-THALASSERY ROAD., PERODE POST, NADAPURAM, KOZHIKODE, KERALA - 673506

NEDUMANGAD

1338. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE-SURVEY NO. - 855/29, 855/14/1 (OLD SURVEY NO. 1563/1), KARIPPUUR VILLAGE, NEDUMANGAD TALUK, TRIVANDRUM DIST., KERALA - 695541. - 695541
PH :9846036696.

NEYATTINKARA

1339. POPULAR VEHICLES AND SERVICES LIMITED (-15), BUILDING NO. 11/562, KP-IX-843, NH 47, KOTTAMOM., KOLLAYIL PANCHAYAT, PANVEL - KOCHI - KANYAKUMARI HIGHWAY, KOTTAMOM, NEYATTINKARA, TRIVANDRUM, KERALA - 695122. - 695122
PH :9946104602.

NEYYANTTINKARA

1340. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), INDUS MOTOR CO. PVT. LTD., OLD M.V THEATRE, NEAR KSRCT BUS STATION, NEYYATTINKARA, DIST. TRIVANDRUM - 695121
PH :9747544500.

NILAMBUR

1341. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0A), MINERVA JUNCTION, NILAMBUR., KERALA - 679329
PH :9745998396.
1342. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0D), MANAVEDHAM HIGH SCHOOL ROAD, CHANDAKUNNU - NILAMBUR PO, NILAMBUR, MALAPPURAM DIST. - 679329
PH :9745998396.
1343. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE-SURVEY NO. 6/1 BLOCK NO. 76, CHEMMARAN, NADUVATH PO, WANDOOD ROAD, NILAMBUR, MALAPPURAM DIST., KERALA - 679328
PH :7736094999.
1344. A M MOTORS (-01), NILAMBUR MYSORE ROAD, JYOTHIPADI, NILAMBUR - 679329

NILAMEL

1345. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY. NO. 195/10, 195/3-1-2, 195/3-2-1, 195/8, 195/14, 195/9-1, 195/11-1, BLOCK NO. 32, ATTINGAL MUNICIPALITY, PAZHAYAKUNNAMEL VILLAGE, CHIRAYINKIL TALUK, (BORDER OF NILAMEL TOWN), TRIVANDRUM DIST., KERALA - 695601
PH :9745993331.
1346. POPULAR VEHICLES AND SERVICES LIMITED (-01), BUILDING NO. 10/279 TO 288, M. C. ROAD, KANNANCODU, NILAMEL PO, KOLLAM (DIST.), KERALA - 691535 - 691535
PH :8714606483.

OTTAPALAM

1347. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), BUILDING NO.23/667, 23/669, PALAKKAD-OTTAPPALM ROAD, OTTAPPALAM VILLAGE, OTTAPPALAM TALUKA, PALAKKAD DISTT., KERALA - 679101
PH :9747544454.

PALA

1348. POPULAR VEHICLES AND SERVICES LIMITED (-04), 12TH MILE, PALA-PONKUNNAM ROAD, PALA - 686575
PH :9072609475.
1349. INDUS MOTOR COMPANY PRIVATE LIMITED (-05), OPP. ALPHONSA COLLAGE ARUNAPURAM(PO), PALA, KOTTAYAM - 686574
PH :9745998878.
1350. AVG MOTORS PVT LTD (-01), SURVEY NO.670/1, BLOCK-21, LALAM VILLAGE, ANTHINADU MEENANCHIL, PALA, KOTTAYAM DIST. - 686651
PH :9447137246.
1351. INDUS MOTOR COMPANY PRIVATE LIMITED (-07), SURVEY NO. 176, BLOCK NO. 16, HIGHWAY JUNCTION, ETTUMANOOR-POOJAR HIGHWAY, CHERPUNKAL, PALA, KOTTAYAM DISTRICT - 686584
PH :9747516934.

PALAKKAD

1352. POPULAR VEHICLES AND SERVICES LIMITED (2701-09), OPP. PALANA HOSPITAL, KODUVAYOOR ROAD, KINASSERY P.O., PALAKKAD - 678707
PH :9946105613.
1353. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0G), VADAKKUMURI-NH-47, KANNADI, KUZHALMAMMAM (P.O.), PALAKKAD. - 678701
PH :9745998590.
1354. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), DOOR NO: 5/366 & 367, NH 47, KOOTUPATHA, CHANDRANAGAR POST, PALAKKAD - 678007
PH :9747519500.

PANDIKKAD

1355. A M MOTORS (-01), SURVEY NOS: 333/2-2, 333/3-2, CHOORAKKAVU, PERINTHALMANNA ROAD, NEAR INDIAN OIL PETROL PUMP, PANDIKKAD TOWN & POST, MALAPPURAM DISTRICT, KERALA - 676521
PH :9539999570.

PARAPPANANGADI

1356. A M MOTORS (-01), SURVEY NO.66/6, 66/7, KODAPPADI, POST-CHETTIPPADY, PARPANGADI, MALAPPURAM. - 676319
PH :9895900466.

PARASSALA

1357. SARATHY AUTO CARS (-01), SURVEY NO.21/14, BUILDING NO. 717 C, NEAR SARASWATHY HOSPITAL, PARVATHIYANWIL - 695502

PARAVUR

1358. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO. 340/1-76,77,78, NEAR HP PETROL PUMP, PARAVUR-MANJALI MAIN ROAD, MANNAM PO, NORTH PARAVUR MUNICIPAL, ERNAKULAM DIST. 683520, KERALA. - 683520
PH :9072609638.

PATHANAMTHITTA

1359. AVG MOTORS PVT LTD (-02), JUNNUGAPADY, MYLAPRA ROAD, PATHANAMTHITTA. - 689671
PH :9446002987.
1360. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-13), KUMBABHA, PATHANAMTHITTA - 689653
PH :9745998008.
1361. POPULAR VEHICLES AND SERVICES LIMITED (-05), T.K. ROAD, NEAR COLLECTORATE, PATHANAMTHITTA - 689645
PH :9539009734.

1362. INDUS MOTOR COMPANY PRIVATE LIMITED (-12), SURVEY NO. 11-13/12(1), KARIMPANKUZHAY ROAD, NEAR SAROJ GAS AGENCY, MAKKANKUNNU, PATHANAMTHITTA, KERALA. - 689645
PH :974599858.

1363. POPULAR VEHICLES AND SERVICES LIMITED (-11), BUILDING NO 244 / A, CHURULIKODE PO, PULIMOODO JUNCTION, PATHANAMTHITTA TOWN & DIST., KOZHENCHERY TALUKA, KERALA-689643. - 689643

PATHANAPURAM

1364. SARATHY AUTO CARS (-01), SURVEY NO. 3060/7-4, 3060/7-5, SALEMIPURAM, KAYAMKULAM - PUNALAR ROAD, PATHANAPURAM, KOLLAM DIST., KERALA - 689695 - 689695

PATHIRAPPALLY

1365. POPULAR VEHICLES AND SERVICES LIMITED (-02), BUILDING NO. X/832 TO 834, X/837 TO 838, OPP. UDAYA STUDIO, PATHIRAPPALLY TOWN, AMBALAPUZZHA TALUK, NH-47, ALAPPUZHA DIST., KERALA-688521. - 688521
PH :977869169.

PATTAMBI

1366. A M MOTORS (-04), SHORANUR ROAD, PATTAMBI, DISTRICT-PALAKKAD, - 679306
PH :9567866059.
1367. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0B), PERINTHALMANNA ROAD, THEKKUMURI, PATTAMBI - 679303
PH :9745998295.
1368. A M MOTORS (-09), CHERPULASSERY ROAD, KOOMBAN KALLU, KARIMPULLI, MELE PATTAMBI POST, PALAKKAD DISTT., KERALA. - 679306
PH :9567866059.

PAYANNUR

1369. POPULAR VEHICLES AND SERVICES LIMITED (4702-04), N H 17, EZHILODE P.O., PAYANUR - 670309
PH :9946104701.
1370. POPULAR VEHICLES AND SERVICES LIMITED (-01), SY. NO. 218/1, CHERUTHAZHAM VILLAGE, EZHILODE (NEAR COLONY BUS STOP), PAYANNUR-KANNUR NH, PAYANNUR TALUK, KANNUR DISTRICT, KERALA - 670 309. - 670309
PH :9946104701.

PAYANUR

1371. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO -289/117, 290/105, KARIVELLUR PERALAM GRAM PANCHAYAT (NEAR PALATHARA BRIDGE), PAYANUR TALUK, KANNUR DISTRICT, KERALA- PIN-670521. - 670521
PH :9745998204.

PEREMBRA

1372. POPULAR VEHICLE & SERVICE (-01), NO. 62/1, KOTHALI VILLAGE, MOORIKUTHI, PERAMBRA TOWN, KOYILANDY TALUKA, CALICUT - 673525

PERINTHALMANA

1373. A M MOTORS (-03), NEAR FIRE STATION, HOSPITAL ROAD, PERINTHALMANNA - 679322 PH : 8129818235.

1374. KVR AUTOCARS PVT LTD (-01), SURVEY NO. 87/8-15, CALICUT ROAD, NEAR ITC, THIRURJAKAD, PERINTHALMANNA - 679351 PH : 9747020573.

1375. KVR AUTOCARS PVT LTD (-06), OOTY ROAD, PERINTHALMANNA, MALAPPURAM(DT.), KERALA - 679322 PH : 9747020837.

PERUMBAAVOOR

1376. SAI SERVICE PRIVATE LIMITED (2705-04), M.C.ROAD,PERUMBAAVOOR,ERNAKULAM DIST,KERALA - 683542 PH : 7034258335.

1377. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 72/2-3, 72/3-3, TALUK - KUNNATHUNADU, VILLAGE - RAYAMANGALAM, SUB DIST.-PERUMBAAVOOR, DIST.ERNAKULAM. - 683541 PH : 9747591803.

PIROVAM

1378. SAI SERVICE PRIVATE LIMITED (-01), SUVEY NO. 788/12-2-5, NEAR PIRAVOM GOVT. HOSPITAL, PIRAVOM TOWN & MUNICIPALITY, MUVATTUPUZHA TALUK, ERNAKULAM DIST., KERALA - 686664 PH : 9645106198.

PUNALUR

1379. SARATHY AUTO CARS (-03), NH-208, Q.S. ROAD,ELAMPAL POST,PUNALUR, KOLLAM DIST - 691322 PH : 9744400265.

1380. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SY. NO. 48/1/42, OLD, SY. NO. 231A/3324, (OLD RAMRAJ TILES FACTORY), THALICODE, PATHANAPURAM TALUK, PUNALUR ANCHAL ROAD - 691305 PH : 9747638885.

QUILANDY

1381. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), BUILDING NO.13/53 A, CHENGOTTUKKAVE VILLAGE, QUILANDY, KOZHICKODE DISTT. - 673306

QUILON

1382. SARATHY AUTO CARS (-01), NH-47 BYE PASS,AYATHIL(P.O.),QUILON - 691017 PH : 974455265.

1383. SARATHY AUTO CARS (-12), BUILDING NO. 15/620, SURVEY NO. 234/1, 235/2, SITHARA JUNCTION, ADICHANALLOOR VILLAGE, KOTTIYAM PO, KOLLAM DIST., KERALA - 691571 PH : 9847936165.

1384. SARATHY AUTO CARS (-13), SURVEY NO. 431/13-42, NEAR SN PUBLIC SCHOOL, VADAKKEVILA, AYATHIL, KILLIKLOOR PO, PUNTHALATHAZHAM-PALATHARA ROAD, KOLLAM, KERALA - 691004 PH : 8606430765.

RAMANATTUKKARA

1385. A M MOTORS (-06), NEAR RED CRESCENT HOSPITAL, FEROKE, CHUNGAM, CALICUT DISTRICT, RAMANATTUKARA, - 673632 PH : 9567866144.

RANNI

1386. INDUS MOTOR COMPANY PRIVATE LIMITED (-06), CHELLAKKAD-PO, PATHANAMTHITTA(DISTRICT), RANNI - 689677 PH : 9745998737.

1387. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO.417/3, 417-10, 417/16-2-1 & 41, BLOCK NO.09,PAZHAVANGADI VILLAGE, RANNI - 689672

SASTHAMKOTTAH

1388. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-09), NO. SP IX/661, 662, 663, KADAPUZHA ROAD, PORUVAZHY P.O., BHARANIKUVU, SASTHAMKOTTAH, KOLLAM - , KERALA - 690520 PH : 9745998849.

SHORNUR

1389. POPULAR VEHICLES AND SERVICES LIMITED (2701-0E), PALAKKAD PATTAMBI ROAD, KULAPPULLY JUNCTION, VADANAMKURUSSI, SHORNUR - 679124 PH : 8589992432.

SULTHAN BATHERY

1390. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO. 421/5, 421/6, BLOCK NO. 22, KRISHNAGIRY VILLAGE, PATHIRIPALAM, KOLAGAPPARA (PO), TALUK & TOWN - SULTHAN BATHERY, WAYANAD DIST., KERALA - 673501 PH : 7594977551.

TALIPARAMBA

1391. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), RE SURVEY 53/4, THIRCHAMBARAM TALIPARAMBA, KANNUR - 670141

TELLICHERRY

1392. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-04), TEMPLE GATE, MAKKOOTAM, THALAYI, TELLICHERRY , KERALA - 670102 PH : 9747520100.

THALASSERY

1393. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), NETTUR POST, KODUVALLY, THALASSERY, KANNUR DISTRICT - 670105 PH : 9745998022.

THALAYOLAPARAMBU

1394. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0J), THODUPUZHA ROAD, THALAYOLAPARAMBU, VAIKOM(TALUK), DISTRICT-KOTTAYAM, KERALA - 686605 PH : 9746743003.

THAMARASSERY

1395. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), RE-SY. NO. 44/5A, 44/6, RAROTH VILLAGE, (NEAR CHUNGAM), THAMARASSERY PANCHAYAT & TALUK, CALICUT DIST., KERALA - 673573 PH : 9747553362.

1396. POPULAR VEHICLES AND SERVICES LIMITED (-10), SURVEY NO.43/4 BLOCK NO:005, RAROTH VILLAGE, THAMARASSERY TALUK, KOZHICKODE DISTRICT, KERALA - 673573 PH : 9846397060.

THIRUVALLA

1397. AVG MOTORS PVT LTD (-01), M.C ROAD, PERUMTHURUTHI, THIRUVALLA, PATHANAMTHITTA DISTT - 689107 PH : 9446323999.

1398. POPULAR VEHICLES AND SERVICES LIMITED (-06), KAVUMBHAGOM P.O, THIRUVALLA, PATHANAMTHITTA (DIST.), KERALA - 689103 PH : 8086073489.

THODUPUZHA

1399. INDUS MOTOR COMPANY PRIVATE LIMITED (-04), PALA ROAD, THODUPUZHA - 685584 PH : 9745998831.

1400. POPULAR VEHICLES AND SERVICES LIMITED (-01), SY.NO.124/7A-1, 124/7A-2, THODUPUZHA EHLOOR MAIN ROAD, VILLAGE & TOWN, THODUPUZHA, DISTT. IDUKI - 685585

THRISSUR

1401. POPULAR VEHICLES AND SERVICES LIMITED (2701-05), KUNNATHUMKARA, PARAVATTANI, THRISSUR, KERALA - 680655 PH : 6282306495.

1402. SAI SERVICE PRIVATE LIMITED (2705-06), 17/30,POOTHOLE,THRISSUR,KERALA - 680004 PH : 9645105051.

1403. BRD CAR WORLD LIMITED (-01), NH 47,BYE PASS,KONIKARRA POST,THALORE, THRISSUR - 680031 PH : 9995807141.

1404. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0D), JYOTHI COMPLEX, GURUVAYOOR ROAD, WEST FORT, THRISSUR - 680004 PH : 9745998014.

1405. BRD CAR WORLD LIMITED (-07), GURUVAYOOR ROAD, PUNKUNNAM P.O., PUZHAKKAL, THRISSUR - 680002 PH : 9746476529.

THRITHALLUR

1406. BRD CAR WORLD LIMITED (-04), PO-THRITHALLUR, NH-17, THRITHALLUR THRISSUR - 680619 PH : 9539197888.

TIRUR

1407. A M MOTORS (-02), SATELLITE AUTO WORKS, PAYYANAGADI POST, TIRUR - 676101 PH : 9995879706.

1408. KVR AUTOCARS PVT LTD (-05), T.P 7/204-B, TANUR ROAD,MOOCHIKKAL, MEENADATHUR P.O., TIRUR, DISTRICT-MALAPPURAM, KERALA - 676307 PH : 9747020673.

1409. A M MOTORS (-08), THALAKKADATHOOR PO, MALAPPURAM,MALAPPURAM DISTT. - 676103

1410. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 119/3, 4, 9A, OLD MODERN PHARMACEUTICALS PVT. LTD., THRIKANDIYOOR VILLAGE, CHAMBAVATTOM ROAD, TIRUR, KERALA - 676105 PH : 9747518883.

1411. KVR AUTOCARS PVT LTD (-07), 829/A, THANUR ROAD, MOOCHIKKAL, MEENADATHUR PO, TIRUR, MALAPPURAM DIST - 676103

TRIPPUNITHURA

1412. SAI SERVICE PRIVATE LIMITED (2705-05), HILL PALACE ROAD,KARINGACHIRA,COCHIN - 682301 PH : 9645105067.

TRIPPRAYAR

1413. POPULAR VEHICLES AND SERVICES LIMITED (2701-08), SURVEY NO. 296/5,8, 296/9-1, NATTIKA VILLAGE, NEAR CIVIL STATION, POLY JUNCTION, TRIPPRAYAR TOWN, THRISSUR TALUK & DISTRICT, KERALA-680566 - 680566 PH : 9846699245.

TRIVANDRUM

1414. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-01), T.C. 24/885 THYCAUD P.O., THYCAUD P.O., METTUKUDA, TRIVANDRUM - 695014 PH : 9745998001.

1415. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-01), C.I.T. ROAD, KILLIPALAM, KARAMANA P.O, TRIVANDRUM - 695002 PH : 9946104601.

Dealer Workshop (AS ON 31.01.2026)

1416. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-02), NH BYE PASS ROAD, VEMPALAVALATTOM, TRIVANDRUM - 695029 PH :974598003.	1426. POPULAR VEHICLES AND SERVICES LIMITED (4702--0A), N.H.17, KAIKAMPA, UPPALA P.O., KASARGOD (KERALA) - 671322 PH :8086078864.	1436. RUKMANI MOTORS PVT LTD (-01), WARD NO 1, JHABUA ROAD, ALIRAJPUR, MADHYA PRADESH, MP - 457887 PH :8889676035.	1447. KAMTHI MOTORS LLP (-01), IN FRONT OF AJRAM CITY, DIST.BALAGHAT, MADHYA PRADESH - 481001
1417. SARATHY AUTO CARS (1607-16-02), KOVALAM BYEPASS,SN NAGAR, MANACAUD (PO), TRIVANDRUM - 695009 PH :9947270665.	1427. KVR AUTOCARS PVT LTD (-01), NH 17, BANDIYODE, MANGALAPADI (PO), UPPALA, KASARGOD DISTT.,KERALA - 671324 PH :9526021876.	ALOT	BARELI
1418. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-05), G.G. MEDICAL COLLAGE P.O., MURINJAPALAM, TRIVANDRUM, MURINJAPALAM, . - 695011 PH :974598002.	VADAKARA	1437. PATEL MOTORS (INDORE) PVT LTD (-01), IN FRONT OF VIP COLONY, STATION ROAD, ALOT, DIST : RATLAM MADHYA PRADESH - 457114 - 457114	1448. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), SURVEY 423/2, VILLAGE KAMTON, NH 12, BARELI, RAISEN, MADHYA PRADESH. - 464668 PH :7909903922.
1419. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-05), OPP. ST. JUDE CHURCH,CIT ROAD, KILLIPPALAM,TRIVANDRUM - 695002 PH :9846298610.	1428. INDUS MOTOR COMPANY PRIVATE LIMITED (4701--07), BYE PASS JN,VATAKARA-673104,CALICUT, - 673104 PH :9745980021	AMLAHA	BARHI
1420. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-08), NEAR MUSLIM JUMA MASJID, MUKKAM PLAMOODE, VATTAPPARA-MANNANTHALA M C ROAD, VATTAPPARA P.O, MANNANTHALA,TRIVANDRUM - 695028 PH :9747540100.	1429. POPULAR VEHICLES AND SERVICES LIMITED (-01), NEAR MADAPPALLY GOVT. COLLEGE, MADAPPALLY, P.O. VADAKARA, KOZHIKODE (KERALA) - 673102 PH :8943345935.	1438. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), INDORE ROAD AMLAHA - 466113	1449. SHUBH MOTORS PVT LTD (-01), 1286/2, BARHI, DIST. - KATNI, MADHYA PRADESH - 483770 PH :9752546255.
1421. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-11), SURVEY NO.3, TC-7/1069/9), MARUTHAMKUZHI, SASTHAMANGALAM VILLAGE, PTP NAGAR ROAD, KANJIRAMPARA P.O., TRIVANDRUM - 695030 PH :9747508822	VALENCHERRY	ANUPPUR	BARI
1422. SARATHY AUTO CARS (1607--03), 77/2-11, NEMOM VILLAGE, PAPPANAMCODDU INDUSTRIAL AREA, TALUKA AND DISTRICT- THIRUVANANTHPURAM, KERALA, PH :9961665865.	1430. A M MOTORS (-01), SURVEY NO. 132/4, KOLAMANGALAM, PERINTHALMANNA ROAD, VALANCHERY, DIST.-MALAPPURAM. - 676552 PH :9745986666.	1439. SHUBH MOTORS PVT LTD (-01), NEAR HDFC BANK, TEHSIL ROAD, ANNUPUR - 484224	1450. SRISATYASAI AUTOMOBILES PVT LTD (-01), WARD NO.12,IN FRONT OF JANPAD, PANCHAYAT OFFICE,-BARI, PIN-464665, MAD - 464665
1423. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-12), RE-SURVEY NO. 26/4-1, MANANTHALA STADIUM ROAD, NEAR SURYAPRABHA AUDITORIUM, ULOOR VILLAGE, MANANTHALA, TRIVANDRUM DIST., KERALA - 695015 PH :9846498605.	VARAKALA	ASHOK NAGAR	BARNAGAR
1424. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-17), BUILDING NO. 13/632,632-A, 633,633-A1,633-A2,634-636, 6TH MILE STONE, VAZHAYILA PO, PEROORKADA, THIRUVANANTHPURAM, KERALA - 695521 - 695521 PH :9288023313.	1431. SARATHY AUTO CARS (-01), SURVEY NO.7, PALLACHIRA, VARKALA, CHIRAYANKEEZHU TALUKA,THIRUVANATHAPURAM DISTRICT, KERALA-695143 - 695143	1440. PREM MOTORS PVT LTD (-02), SURVEY NO. 67/2/3, SINGAKHEDI HOUSE GUNA BYPASS NEAR RAJ MATA CIRCLE, ASHOKNAGAR, MADHYA PRADESH. - 473331 PH :9926809856.	1451. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), RUNIJA ROAD ,BARNAGAR CITY, DISTRICT UJJAIN - 456771
1425. SARATHY AUTO CARS (1607-16-01), SURVEY NO. 24/48/4, VILL. MUTTATHARA, NH BYE PASS ROAD, KALLIMOOD JN., VALLAKADAO PO, ENCHAKKAL, THIRUVANANTHPURAM, KERALA-695008 - 695008 PH :9562416665.	VETTICHIRA	ASHTA	BARWANI
UPPALA	1432. KVR AUTOCARS PVT LTD (-03), AP IV, 75A TO G, NH-17, CHUNKAM, DIST. MALAPPURAM, VETTICHIRA - 676552 PH :9747020023.	1441. JEEWAN MOTORS PVT LTD (-01), KHASRA NO.111/1 NEAR RELIANCE PETROL PUMP, BHOPAL ROAD, ASHTA, DISTT. SEHORE (M.P.) - 466001	1452. NIMAR MOTORS PVT LTD (-02), ANJAD ROAD, VILLAGE -KARAIHI, BARWANI, MADHYA PRADESH - 451551
	WADAKKANCHERY	BADARWAS	BATTIS SHIRALA
	1433. BRD CAR WORLD LIMITED (-03), VAZHAKODE, CHELAKARA ROAD, MULLURKARA P.O., WADAKKANCHERY, THRISSUR DIST - 680583 PH :9567869403.	1442. NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT LTD) (-01), SUMELA HIGHWAY, BADARWAS, DISTT. SHIVPURI, - 473885	1453. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SURVEY NO-44/2/A/1 & 14/1/A/3, NEAR SIDDHESHWAR PERTOL PUMP, VILLAGE - 32 SHIRALA, TALUKA-SHIRALA, DIST- SANGLI, MAHARASHTRA - 415408
	LEH-LADAKH	BADNARWAR	BEGAMGANJ
	LEH	1443. PATEL MOTORS (INDORE) PVT LTD (-01), KHASRA NO. 2194/1, BADNAGAR ROAD, BADI CHOUPATI, OPPOSITE BSNL TOWER, BADNARWAR, DISTT. - DHAR, MADHYA PRADESH. - 454660	1454. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), IN FRONT OF DUSHERRA MAIDAN, SAGAR BHOPAL ROAD, BEGAMGANJ, DIST - RAISEN, MADHYA PRADESH - 464881 - 464881 PH :7909997536.
	MADHYA PRADESH	BADWAH / BARWAHA (BOTH NAMES ARE OK)	BEOHARI
	1434. DRUK AUTO ZONE (-01), AIRPORT ROAD, LEH (LADAKH), DISTT. LADAKH, LEH - 194101 PH :8082800205.	1444. NIMAR MOTORS PVT LTD (-05), NIRMAL COMPLEX, INDORE ROAD, BARWAH - 451001	1455. SHUBH MOTORS PVT LTD (-01), REEVA ROAD, NEAR AARRA MACHINE, BEOHARI, DIST. -SHAHDOL, MADHYA PRADESH - 484774 PH :9755595423.
	AGAR	BAGH (DISTRICT - DHAR)	BERASIA
	1435. UNITARA MOTORS PVT LTD (-01), 27, UJJAIN ROAD, NEAR MARKETING FUEL STATION, AGAR, MADHYA PRADESH (465669) - 465669 PH :9575650883.	1445. RUKMANI MOTORS PVT. LTD. (-01), NEAR BAGHESHWARI MANDIR., KUKSHI ROAD,BAGH, - 454221	1456. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), BHOPAL ROAD, OPP. BERASIA HOSPITAL, BERASIA, DISTRICT - BHOPAL, MADHYA PRADESH. - 463106 PH :877059361.
	ALIRAJPUR	BAHORIBAND	BETMA
		1446. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (-01), OPP GRAIN MARKET, BAHORIBAND, DIST. - KATNI, MADHYA PRADESH - 483330	
		BALAGHAT	

1457. OCEAN MOTORS PVT LTD (-01), OPPOSITE
MPBE OFFICE, INDORE-AHEMDABAD ROAD,
BETMA, DISTRICT - INDORE, MADHYA
PRADESH. - 453001
PH :7389936444.

BETUL

1458. KAMTHI MOTORS LLP (-01), NEAR SUNITA
COLONY, ITARSI ROAD, BETUL, MADHYA
PRADESH. - 4600013 - 4600013
PH :9111535777.

BHANPURA

1459. PATEL MOTORS (INDORE) PVT LTD (-01),
GAROTH RD., BHANPURA, MADHYA PRADESH -
458775 - 458775

BHAVRA

1460. RUKMANI MOTORS PVT LTD (-01), GRAM
PANCHAYAT, KALIYAVAHU, OPP SUNKER
MANDIR, BHAVRA TEHSIL, ALIRAJPUR
DISTRICT, MADHYA PRADESH - 457882 -
457882
PH :9755549200.

BHITARWAR

1461. NIKUNJ MOTORS (A UNIT OF RSKS
AUTOMOTIVES PVT LTD) (-01), BESIDE
SAUSAR COTTON INDUSTRIES, CIVIL LINE,
NAGPUR-CHHINDWARA ROAD, DABRA-
BHITARWAR ROAD, BHITARWAR, MP - 474009 -
474009
PH :9109105599.

BHOPAL

1462. JEEWAN MOTORS PVT LTD (-01), 9E SECTOR
A, INDUSTRIAL AREA, GOVINDPURA, BHOPAL -
462024

1463. SATYAM MOTORS PVT LTD (-01),
NH-12, SUVEESHA NAGAR, HOSHANGABAD
ROAD, MISROAD - 462040

1464. JEEWAN MOTORS PVT LTD (-04), KHASRA NO.
54-55/1/1, NEAR RELIANCE FRESH, CHUNA
BHATTI MAIN ROAD, INDIAN OIL PETROL PUMP,
BHOPAL (M.P.) - 462036

1465. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ
MOTORS PVT LTD) (-01), 8A, SECTOR-C, J.K.
ROAD, GOVINDPURA INDUSTRIAL AREA,
BHOPAL, MADHYA PRADESH - 462023

1466. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (-
01), 4/1, DAGA HEIGHTS, NEAR BUDHNA
MANDIR, MAIN ROAD KOLAR ROAD,
CHUNABHATTI, BHOPAL, MADHYA PRADESH. -
462016

1467. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (-
02), KHASRA NO. 80/1/K, VILLAGE -
HALALPURA, TEHSIL - HUZUR, DISTRICT -
BHOPAL, MADHYA PRADESH. - 462030

1468. SRISATYASAI AUTOMOBILES PVT LTD (-01),
RAJENDRA PRASAD BHAWAN PARISHAR,
INFRONT OF OLD VIDHAN SABHA BUILDING,
PO - JAHANGIRABAD, MALVIYA NAGAR,
BHOPAL, DISTRICT - BHOPAL, MADHYA
PRADESH - 462008. - 462008

BIAORA

1469. UNITARA MOTORS PVT LTD (-01), OLD AB
ROAD, KACHNARIA, BIAORA (M.P.) - 465674
PH :9575650883.

BICHHIYA

1470. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA
GAYATRI AGENCIES PVT LTD) (-01), NEAR
CIVIL COURT, BICHHIYA, DIST. MANDLA,
PIN-481995, MADHYA PRADESH - 481995
PH :9303143327.

BIJURI

1471. SHUBH MOTORS PVT LTD (-01), GRAM - NEAR
GENTRI GATE, NAGAR PALIKA PARISHAD
BIJURI, DISTRICT - ANUPPUR, MADHYA
PRADESH - 484116
PH :9755580253.

BINA

1472. ADINATH CARS PVT LTD (-01), PLOT NO. 2/3/4/5
AMANTIGEL LAND SEMI URBAN INDUSTRIAL
AREA, BINA, KHURAI ROAD (NH 26) BINA,
DISTRICT - SAGAR, MADHYA PRADESH -
470113
PH :9009780047.

BURHANPUR

1473. NIMAR MOTORS PVT LTD (-02), 654/15, 16
BASEMENT OF HOTEL AMBIKA RESIDENCY.,
OPPOSITE PAKIZA SHOWROOM, - 450331

CHAKGHAT

1474. CITY CARS (A UNIT OF AGARWAL WHEELS PVT
LTD) (-01), GRAM AND POST - CHANDAI,
CHAKGHAT, TEHSIL - TEONTER, PRAGRAJ
ROAD, NH 27, DIST- REWA, MP - 486226. -
486226

CHANDERI

1475. PREM MOTORS PVT. LTD. (-01), NEW BUS
STAND, NEAR SBI BANK., CHANDERI-LALITPUR
BYE PASS - 473446

CHATTARPUR

1476. ADINATH CARS PVT LTD (-01), MAHOBA ROAD,
NEAR BUS STAND, CHHATARPUR, DISTT
SAGAR - 471001
PH :9009785577.

CHHANERA

1477. NIMAR MOTORS PVT LTD (-01), NEAR ST.
STEPHEN SCHOOL, HARDA ROAD, CHHANERA
(HARSUD), PIN-450001, MADHYA PRADESH -
450001
PH :9669569504.

CHHINDWARA

1478. KAMTHI MOTORS LLP (-01), KHASRA NO.1/53,
BESIDE MVM SCHOOL, NAGPUR ROAD, VILL.
-SARRA, DISTT. CHHINDWARA, MADHYA
PRADESH - 480001

CHITRAKOOT

1479. CITY CARS (A UNIT OF AGARWAL WHEELS PVT
LTD) (-01), PILIKOTHI CHOURAHA, BESIDE
SINGH AUTOMOBILE- A HERO AGENCY,
CHITRA ROAD, CHITRAKOOT, DISTRICT-SATNA
(MADHYA PRADESH)- 485334 - 485334

DABRA

1480. PREM MOTORS PVT LTD (-01), PICHHORE
TIRAH, GWALIOR JHANSI ROAD, DABRA, DIST.
-GWALIOR. - 475110
PH :9926809110.

DAHI

1481. KTL AUTOMOBILE PRIVATE LIMITED (-01),
BHAGAT SINGH MARG, WARD NO.2, DAHI DAHI,
DHAR DISTRICT - 454331

DAMOH

1482. ADINATH CARS PVT LTD (-01), SAGAR
JABALPUR BYPASS ROAD, DAMOH (M.P.) -
470661
PH :9009780035.

DATIA

1483. PREM MOTORS PVT LTD (3003-05),
NR.BHOJPURIA MOTORS, BHANDER ROAD,
DATIA, MADHYA PRADESH - 475661
PH :9165012280.

DEORI

1484. ADINATH CARS PVT LTD (-01), C/O
VISHWANATH DIXIT, VIJAYSHRI GAS SERVICE,
NEAR GOVT. HIGH SCHOOL, NARSINGPUR
ROAD, VILLAGE KHEER, DEORI DISTT. SAGAR
(M.P.) - 470226
PH :7000410522.

DEPALPUR

1485. OCEAN MOTORS PVT LTD (-03), NEAR LEELA
RESIDENCY, INDORE
ROAD, DEPALPUR, DIST. INDORE-MP - 453115

DEWAS

1486. UNITARA MOTORS PVT LTD (-01), SURVEY NO
255, A.B. ROAD,
RASULPUR SQUARE, DEWAS,
MADHYA PRADESH PIN 455001 - 455001
PH :9575650883.

DHAMNOD

1487. KATHED MOTOCORP (A UNIT OF KATHED
MOTORS PVT LTD) (-01), KHASRA NO. 484/1/2,
OLD A B ROAD, OPPOSITE HP PETROL PUMP,
DHAMNOD, DIST.-DHAR, MADHYA PRADESH. -
454552
PH :9981585165.

DHAR

1488. RUKMANI MOTORS PVT LTD (5304-02), 41/2
MAGAJPURA, DHAR., - 454001

DHARAMPURI

1489. RUKMANI MOTORS PVT LTD (-01), MANAWAR
ROAD, DHARAMPURI, MADHYA PRADESH -
454449 - 454449

DINDORI

1490. STANDARD MOTOCORP PVT LTD (-01),
SUKKHAR WARD 1, NEAR DHURVE PETROL
PUMP, DINDORI - 481661

FALI

1491. OCEAN MOTORS PVT LTD (-01), NH 47, NEAR
GRAM - FALI, TEHSIL KHUDELI, INDORE,
MADHYA PRADESH. - 452016
PH :7389936477.

GADARWARA

1492. STANDARD MOTOCORP PVT LTD (-01),
KHASRA NO. 130/31/A & 131/2, HALKA NO. 18/1,
NO. 119, GADARWARA, DISTRICT -
NARSINGHPUR. - 487551
PH :8319784336.

GANDHWANI

1493. RANA MOTORS PVT LTD (-01), MUKATI
COMPLEX, BAGH AWALDA MAAN ROAD,
TEHSIL- GANDHWANI, DIST - DHAR, MADHYA
PRADESH - 454446 - 454446
PH :9109975566.

GANJ BASODA

1494. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (-
01), LAL BAGH, BARETH ROAD, GANJ BASODA,
VIDISHA, 464221. - 464221
PH :9425148584.

GARRA

1495. KAMTHI MOTORS LLP (-01), LALBARRA ROAD,
GARRA INDUSTRIAL AREA, GARRA, BALAGHAT,
MADHYA PRADESH. - 481331
PH :772302684.

GAUTAMPURA

1496. OCEAN MOTORS PVT LTD (-01), RUNJI
CHOURAHA, GAUTAMPURA, TEHSIL -
DEPALPUR, DISTT.-INDORE, MADHYA
PRADESH. - 453220

GHATIYA

1497. YUG CARS (A UNIT OF RUKMARANI CARS
INDORE PVT LTD) (-01), NEAR JAGOTI
SQUARE, UJJAIN - AGAR ROAD, GHATIYA, MP -
456550 - 456550
PH :9425067979.

GOTEGAON

Dealer Workshop (AS ON 31.01.2026)

1498. STANDARD MOTOCORP PVT LTD (-01), JABALPUR ROAD, OPP. NEW KRISHI UPJ MANDI, TEHSIL - GOTEGAON, DIST. -NARSINGHPUR - 443001 PH :7771003774.	1509. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), SEHORE NADAN ROAD, NEAR SARASWATI SCHOOL, ICHHAWAR, DISTRICT - SEHORE, MADHYA PRADESH. - 466115	1523. OCEAN MOTORS PVT LTD (5306-53-04), PLOT NO. 142 AND 151, SCHEME NO. 97, PART-4, COMMERCIAL MANDI, NEAR CAT SQUARE, INDORE. - 452012 PH :7389936405.	1535. PATEL MOTORS (INDORE) PVT LTD (-01), SURVEY NO.165/1/1/2, GRAM BALKHEDA, TEHSIDIST.NEEMUCH,JAWAD,MADHYA PRADESH 458330 - 458330
GUNA	INDERGARH	1524. KTL AUTOMOBILE PRIVATE LIMITED (5309-53-C1), PLOT NO.5/R.C, SCHEME NO 134,MR 10,VILLAGE KHAJRANA, DIST INDORE-452010,MADHYA PRADESH - 452010 PH :6263455899.	JHABUA
1499. PREM MOTORS PVT LTD (-01), OPP R.T.O.,A.B. ROAD,GUNA. - 473001 PH :268015.	1510. PREM MOTORS PVT LTD (-01), NEAR KHERAPATI GARDEN, INDERGARH, MP - 475675 - 475675 PH :9926809818.	1525. RUKMANI MOTORS PVT LTD (-53-05), 109, BHAWRASLA NEAR PRATAP AUTO, FRONT OF VINAYAK TOL KANTE, SANWER ROAD, INDORE, PIN-453111, MADHYA PRADESH - 453111 PH :91099778301.	1536. PATEL MOTORS (INDORE) PVT LTD (-01), INDORE AHMEDABAD ROAD, MEGHNAGAR NAKA, JHABUA, MADHYA PRADESH. - 457661 PH :9826634449.
GWALIOR	INDORE	INGORIYA	JIRAPUR
1500. PREM MOTORS PVT LTD (3003-30-01), M. L. B. ROAD,GWALIOR,, - 474002 PH :9926809803.	1511. PATEL MOTORS (INDORE) PVT LTD (5303-53-01), 428/3/3,NIRANJANPUR.A B ROAD,INDORE - 452010	1526. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (-01), SURVEY NO.589,, NAGDA ROAD,VILL.INGORIYA, - 456222	1537. UNITARA MOTORS PVT LTD (-01), KHLCHIPUR ROAD, JIRAPUR DIST- RAJGARH MADHYA PRADESH - 465961 - 465961
1501. PREM MOTORS PVT LTD (3005-01), SHIVPURI LINK ROAD, GWALIOR - 474002 PH :9926809803.	1512. RUKMANI MOTORS PVT LTD (5304-53-01), 2-3,,A.B. ROAD,INDORE - 452001	JABALPUR	JOBAT
1502. NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT LTD) (3006-30-01), GOLE KA MANDIR SQUARE, AIRPORT ROAD, GWALIOR, MADHYA PRADESH - 474005 - 474005 PH :947067974.	1513. PATEL MOTORS (INDORE) PVT LTD (5303-53-02), 176/1,PIPLYA RAU,A.B. ROAD ,INDORE - 452017	1527. SHUBH MOTORS PVT LTD (5403-54-01), MAHANADDA, MADAN MAHAL ROAD, JABALPUR, MADHYAPRADESH - 482001 PH :9755545540.	1538. RUKMANI MOTORS PVT LTD (-01), BYEPASS ROAD, OPPOSITE JP COLLEGE, JOBAT, MP - 457990. - 457990 PH :6262505181.
HANSA KHEDI	1514. RUKMANI MOTORS PVT LTD (5304-53-03), NO. -4/5, MANORAMA GANJ, INDORE - 452001	1528. STANDARD MOTOCORP PVT LTD (5405-54-02), DEENDAYAL CHECK, DAMOH NAKA, JABALPUR - 482002	KACHROD
1503. KATHED MOTOCORP (A UNIT OF KATHED MOTORS PVT LTD) (-01), MAIN DHARMAT ROAD, HANSA KHEDI (CHANDRAWATI GANJ), TEHSIL -SANWER, DISTRICT -INDORE, MADHYA PRADESH. - 453551 PH :9479952490.	1515. OCEAN MOTORS PVT LTD (5306-53-01), PLOT NO.49, SCHEME NO.97, PART 4, COMMERCIAL MANDI, CAIT SQUARE, RING ROAD, INDORE, MP. - 452001	1529. SHUBH MOTORS PVT LTD (5403-54-03), 156/5/1, 156/3KA, 156/3GHA, BEHIND OM PETROLEUM, ADHARTAL TIRAHA, JABALPUR, MADHYA PRADESH - 482002 PH :9755595496	1539. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), MOHALLA PATEL COLONY, BARNAGAR RD, KACHROD, MP. - 456313
HARDA	1516. OCEAN MOTORS PVT LTD (5306-02), NEAR QUEENS COLLEGE ASHARAM BAPU ASHRAM, KHANDWA ROAD,INDORE - 452017	1530. STANDARD MOTOCORP PVT LTD (5405-03), CHIMNEY PLOT, MADAN MAHAL, NEAR GULZAR HOTEL, JABALPUR - 482001	KANNOD
1504. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (-02), NEAR RTO,INDORE HIGHWAY ROAD,HARDA MP - 461331	1517. PATEL MOTORS (INDORE) PVT LTD (5303-03), M.O.G. LINES, NEAR GANGWAL BUS STAND, DHAR ROAD, INDORE (M.P.) - 452006 PH :7314293919.	1531. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (5404-54-01), MOUZA KARMETA N.B. 497, P.H. NO 23/26, KHASRA NO. 497 & DIV. KHASRA NO. 484/6, DIV. SHEET NO 2, PLOT NO 63/1, JABALPUR-PATAN ROAD, JABALPUR. - 482002 PH :7489901021.	1540. UNITARA MOTORS PVT LTD (-01), KANNOD,DISTRICT-DEWAS, MADHYA PRADESH -455332 - 455332
HATOD	1518. OCEAN MOTORS PVT LTD (5306-53-03), 171A, 174A, 175A, 180A, 181A, 82A, 182A, BRAJESHWARI EXTENSION, PIPLIYAHANA, INDORE - 452001	1532. STANDARD MOTOCORP PVT LTD (5405-54-04), NEW WARD NO. 71, IN FRONT OF ORIENTAL COLLEGE, KATNI BYPASS, JABALPUR, MP. - 482003	KARELI
1505. OCEAN MOTORS PVT LTD (-01), 726/6, INDORE-DEPALPUR MAIN ROAD, OPP. HP GAS AGENCY, HATOD DISTT. INDORE - 453111 PH :7389936477.	1519. KATHED MOTOCORP (A UNIT OF KATHED MOTORS PVT LTD) (5307-01), PLOT NO. 483/2/2, MAIN DHAR ROAD, NEAR CHANDAN NAGAR POLICE STATION, INDORE, MADHYA PRADESH. - 452002 PH :7471111132.	JAIPUR	1541. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT. LTD) (-01), NEAR KRISHNA HOTEL,, NARSINGHPUR-KARELI BYPASS,KARELI, - 487221
HATPILIYA	1520. RANA MOTORS PVT LTD (-01), KHASRA NO. 293/2, 299/1, TEJIPUR, GADBADI PUL, A.B. ROAD, INDORE. - 452009 PH :9109975566.	1533. KIRAN MOTORS LIMITED (1118-11-01), 75, JHOTWARA INDUSTRIAL AREA JAIPUR - 302001	KARERA
1506. UNITARA MOTORS PVT LTD (-01), OPPOSITE UNWIND RESORT, HATPILIYA, DEWAS, MADHYA PRADESH - 455223 - 455223	1521. PATEL MOTORS (INDORE) PVT LTD (5303-53-05), SURVEY NO. 174/5 AND 174/6, PIPLIYA RAO, INDORE, MADHYA PRADESH. - 452012	JAORA	1542. PREM MOTORS PVT LTD (-01), GRAM - JHASI ROAD, KARERA, DISTRICT - SHIVPURI, MADHYA PRADESH - 473660. - 473660 PH :9926823596.
HATTA	1522. RUKMANI MOTORS PVT LTD (-04), MANGAL COMPOUND, GODDOWN NO. 11-12, VILLAGE 15/1, PIPLYA KUMAR, MR 11 RING ROAD, DEWAS NAKA, INDORE, MADHYA PRADESH. - 452010	1534. PATEL MOTORS (INDORE) PVT LTD (-04), SURVEY NO.57/11/1, RATLAM ROAD, RATLAM NAKA, OPP. KOTHARI AGRIKO, INDUSTRIAL AREA, INFRONT OF ST. PAUL SCHOOL, JAORA, DISTT. RATLAM, MADHYA PRADESH - 457226	KATNI
HOSHANGABAD			1543. SHUBH MOTORS PVT LTD (-01), KHASRA NO.850, NH-7, JHINJARI, INFRONT OF POLICE STATION, JABALPUR ROAD, KATNI, MADHYA PRADESH. - 483501 PH :9755515839.
1508. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (-01), 185, RAMJIBABA GROUND, HOSHANGABAD, MADHYA PRADESH - 461001 PH :8889282222.			KHANDWA
ICHHAWAR			1544. NIMAR MOTORS PVT LTD (-03), BEFORE VIKAS UDYOG, INDORE ROAD, KHANDWA - 450001
			KHARGONE
			1545. NIMAR MOTORS PVT LTD (-01), JETAPUR,SANAWAD ROAD,KHARGAONE, - 462026
		JAWAD	

1546. NIMAR MOTORS PVT LTD (-06), PH. NO. 35, VILLAGE - DANAPUR, TEHSIL - KHARGONE, DISTRICT - KHARGONE, MADHYA PRADESH. - 451001

KHATEGAON

1547. UNITARA MOTORS PVT LTD (-01), NEMAWAR-INDORE ROAD, KHATEGAON, M.P. - 455336 - 455336
PH :9993406993.

KOTMA

1548. SHUBH MOTORS PVT LTD (-01), WARD NO.7, ANNUPUR KOTMA ROAD, DISTT. ANNUPUR, KOTMA (M.P.) - 484336
PH :9755581441.

KUKSHI

1549. OCEAN MOTORS PVT LTD (-01), SURVEY NO.593/5/1, 593/6/1, BARIWANI ROAD, TOLL KANTE KE PASS, TEHSIL-KUKSHI - 454331

KURWAI

1550. SRISATYASAI AUTOMOBILES PVT LTD (-01), SH-14, MAIN ROAD,,KURWAI,VIDISHA,,MADHYA PRADESH 464224 - 464224

LAKHNADON

1551. KAMTHI MOTORS LLP (-01), RANI DURGAVATI CHOWK, NH-7, WARD NO. - 05, JABALPUR ROAD, LAKHNADON, MADHYA PRADESH. - 480886
PH :9285506128.

LATERI (VIDISHA)

1552. SRISATYASAI AUTOMOBILES PVT LTD (-01), KHASRA NO.572,,ANANDPUR ROAD,, LATERI,MADHYA PRADESH 464114 - 464114

LOHARI

1553. KATHED MOTOCORP (A UNIT OF KATHED MOTORS PVT LTD) (-01), SINGHANA-KUKSI ROAD, LOHARI, DHAR, PIN-454335, MADHYA PRADESH - 454335

MAHESHWAR

1554. NIMAR MOTORS PVT LTD (-01), OPPOSITE DEVRAJ HOTEL, MAIN MANDESHWAR-DHAMNOD ROAD, MAHESHWAR, MP - 451224
PH :9669569504.

MAHIDPUR

1555. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), 264/3, BHIMAKHEDA, MAHIDPUR, UJJAIN - 456443
PH :9109130402.

MAIHAR

1556. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-04), UNIT OF AGARWAL WHEELS PVT. LTD., NEAR RELIANCE PETROL PUMP, NH-7, REWA ROAD, MAIHAR (M.P.) - 485771
PH :7354252525.

MAJHAULI

1557. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-01), WARD NUMBER 14, NAGAR PARISAD MAJHAULI, DIST. SIDHI (M.P.) - 486666. - 486666
PH :7970003171.

MAJHOLI

1558. SHUBH MOTORS PVT LTD (-01), INDRANA ROAD, SUHAJINI TIRAHA, MAJHOLI, MADHYA PRADESH - 483336
PH :911155580.

MANASA

1559. PATEL MOTORS (INDORE) PVT LTD (-01), 982/1, RAMPURA ROAD, MANASA, DIST. NEEMUCH, MADHYA PRADESH. - 458110
PH :9644405368.

MANAWAR

1560. OCEAN MOTORS PVT LTD (-01), PLOT NO - 40, BAKANER ROAD, MANAWAR, DISTRICT - MANAWAR, MADHYA PRADESH. - 454335
PH :7389936477.

MANDLA

1561. STANDARD MOTOCORP PVT LTD (-01), KATARA ROAD, MANDLA, DIST. MANDLA MP - 481661

MANDSAUR

1562. PATEL MOTORS (INDORE) PVT LTD (-02), BLOCK 'C', SHED-5, WARD NO. 1, INDUSTRIAL AREA, CITY - MANDSAUR, MADHYA PRADESH. - 458001

MANPUR

1563. PATEL MOTORS (INDORE) PVT LTD (-01), KHASRA NO. 302/1/3, AB ROAD, MANPUR, DIST- INDORE - 453661
PH :9826360699.

MAUGANJ

1564. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-01), NEAR SENGAR PETROL PUMP ,CHACK MODE WARD NUMBER 03,NH 7 ,MAUGANJ, DISTT - REWA, MADHYA PRADESH - 486331. - 486331
PH :975301199.

MHOW

1565. OCEAN MOTORS PVT LTD (-01), A.B. ROAD, NEAR KISANGANJ POLICE STATION, MHOW - 453441

MOHANA

1566. PREM MOTORS PVT LTD (-01), MOHANA, DISTRICT GWALIOR, MADHYA PRADESH - 475330. - 475330

MORENA

1567. PREM MOTORS PVT LTD (-01), NEAR SALES TAX BARRIER SQUARE, AB ROAD MORENA - 476001
PH :9926002791.

NAGDA

1568. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), PLOT NO. 17, STATE HIGHWAY NO.17, INDOIYA ROAD, NAGDA, DISTRICT - UJJAIN, MADHYA PRADESH. - 456335

1569. PATEL MOTORS (INDORE) PVT LTD (-01), SURVEY NO.200/1,205/1/208,, VILLAGE MANKI NAGDA,MHOW ROAD, - 454660

NAINPUR

1570. STANDARD MOTOCORP PVT LTD (-01), MANJU SAHU, MANDLA ROAD, NEAR MPEB OFFICE, ADJOINING TO BAJAJ SHOW ROOM, NAINPUR, DISTT MANDLA, MADHYA PRADESH -481776. - 481776
PH :7771003374.

NARAYANGARH

1571. PATEL MOTORS (INDORE) PVT LTD (-01), 1742/11, NARAYANGARH, TEHSIL - MALHARGARH, DISTRICT- MANDSAUR, MADHYA PRADESH. - 458553
PH :9977703907.

NARSINGHPUR

1572. STANDARD MOTOCORP PVT LTD (-01), KH. NO. 82/44 & 83/44, NB NO 519, PC NO. 19(42), OLD 46 (NEW) MOUZA RONSRA R.I.M. 2, TEHSIL & DISTRICT - NARSINGHPUR, MADHYA PRADESH. - 487001

NASRULLAGANJ

1573. JEEVAN MOTORS PVT LTD (-01), KHASRA NO. 458, VILLAGE - RALA, TEHSIL - NASRULLAGANJ, DISTRICT - SEHORE, MADHYA PRADESH. - 466331

NEEMUCH

1574. PATEL MOTORS (INDORE) PVT LTD (-02), MHOW-NEEMUCH ROAD,NEEMUCH(MP), - 458441
PH :9977703907.

NIWARI

1575. ADINATH CARS PVT LTD (-01), ATKHASRA NO 2017/1, NEAR HDFC BANK MAIN ROAD, NIWARI, MADHYA PRADESH -472442 - 472442
PH :9009787562.

NIWAS

1576. STANDARD MOTOCORP PVT LTD (-01), OPP. INDIAL OIL PETROL PUMP, NIWAS , DISTRICT MANDLA, MADHYA PRADESH - 483001. - 483001

PANDHURNA

1577. KAMTHI MOTORS LLP (-01), SHANKAR NAGAR, PANDHURNA, DIST. - CHHINDWARA, MADHYA PRADESH - 480334. - 480334
PH :9111535777.

PANNA

1578. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-01), KHASRA NO. 378, MOHAN RAJ VILAS CHOURAHA, BESIDE MOHAN RAJ HOTEL, CIVIL LINE NH-75, PANNA, MADHYA PRADESH. - 488001
PH :7354252525.

PARANDA

1579. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), 691/1/190, PARANDA BARSHI ROAD, PARANDA, TAL-PARANDA, DIST-DHARASHIV - 413502

PARASIA

1580. KAMTHI MOTORS LLP (-01), KHIRSADOHMAL, PARASIA, CHHINDWARA, MP - 480441
PH :9285506109.

PAT

1581. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), WARD NO. 9, UJJAIN -KOTA ROAD, OPPOSITE GOVT MIDDLE SCHOOL, PAT, DISTT UJJAIN , MP - 416522

PATAN

1582. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (-01), BESIDE KRISHI UPAJ MANDI, PATAN, PIN-483119, MADHYA PRADESH - 483119
PH :9770415141.

PAWAI

1583. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-01), NEAR ETORI PETROL PUMP, PANNA ROAD, PAWAI, DIST. - PANNA, MP- 488446 - 488446
PH :9754301199.

PETLAWAD

1584. PATEL MOTORS (INDORE) PVT LTD (-01), NEAR H. P. PETROL PUMP, THANDLA ROAD, PETLAWAD, DISTRICT - JHABUA, MADHYA PRADESH. - 457773
PH :9111160868.

PICHHORE

1585. PREM MOTORS PVT LTD (-01), NEAR OF BACHRON CHAURAHA, PICHHORE, DIST. DIST. SHIVPURI, PIN-475300, MADHYA PRADE - 475300

PIPARIYA

1586. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (-01), HATHWAS TIRAHA, SHOBHAPUR ROAD, PIPARIYA, MADHYA PRADESH. - 461775

PITHAMPUR

Dealer Workshop (AS ON 31.01.2026)

1587. PATEL MOTORS (INDORE) PVT LTD (5303-04), 254-A, SECTOR-1, INDUSTRIAL AREA, PITHAMPUR, DISTT. DHAR - 454775 PH :9826360699.	1599. OCEAN MOTORS PVT LTD (-01), JAIN SHRI SUPER MARKET, SERVICE ROAD, MHOW-NEEMUCH ROAD, SADALPUR, DISTRICT DHAR (M.P.) - 454001 - 454001 PH :7389936423.	1609. STANDARD MOTOCORP PVT LTD (-01), KHASARA NO.172/3, BHERAV MATA MANDIR NEAR TOLL NAKA MAIN ROAD, JABALPUR NARSINGHPUR ROAD, SHAHPURA. - 483119 PH :7771000392.	1619. RUKMANI MOTORS PVT LTD (-01), AMRIT SAGAR COLONY, SIMROL, DIST. - INDORE, MADHYA PRADESH - 452020 - 452020 PH :9109978301.
1588. KTL AUTOMOBILE PRIVATE LIMITED (-01), WARD NO 18 , VILLAGE - AKOLIA , PITHAMPUR, MP - 454775 - 454775	SAGAR	1610. STANDARD MOTOCORP PVT LTD (-01), NEAR SAI PETROLEUM, SHARDA NAGAR, JABALPUR ROAD, SHAHPURA, DIST -DINDORI, MP. - 481990	SINGHOLI
PUSHPRAJGARH	1600. ADINATH CARS PVT LTD (-01), STATION ROAD, TILAK GANJ, SAGAR (M.P.) - 470001 PH :9009780030.	SHAJAPUR	1620. PATEL MOTORS (INDORE) PVT LTD (-01), BEGHU CHITTORGARH ROAD, TENGOLI, NEEMUCH, MP - 458228 - 458228 PH :9977703907.
1589. SHUBH MOTORS PVT LTD (-01), WARD NUMBER 8 ,SHIVRICHANDAS KARAUNDI TIRAHAA ,AMARKANTAK ROAD ,RAGENDRAGRAM DISTRICT ANUPPUR (M.P.) - 484224	SANWER	1611. UNITARA MOTORS PVT LTD (-01), LAL GHATI, A B ROAD, SHAJAPUR, MP - 465001 PH :9993406993.	SINGRAULI
RAISEN	1601. RANA MOTORS PVT LTD (-01), S.NO. 356/3/1, OLD UJJAIN BYPASS ROAD, TALUKA SANWER, DIST.-INDORE, MADHYA PRADESH. - 453551 PH :9109975566.	SHAMGARH	1621. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-02), NEAR VIJAY BANDHU PETROL PUMP, KACHANI, THE. WAIDHEN, DISTRICT, SINGRAULI ,MADHYA PRADESH KHASRA NO-3721/1 &3721/2, GRAM- NAVGARH, SIDHI-REWA ROAD, WAIDHAN , DISTRICT- SINGROULI (MADHYA PRADESH)-486887. - 486886 PH :7354252525.
1590. JEEWAN MOTORS PVT LTD (-01), WARD NO 14, PATANDEV, SAGAR ROAD, RAISEN, MADHYA PRADESH - 464551 PH :9826017799.	SATNA	1612. PATEL MOTORS (INDORE) PVT LTD (-01), KHASRA NO. 1179/1, MOHALLA MAROTH, TEHSIL - SHAMGARH DISTRICT - MANDSAUR, MADHYA PRADESH. - 458883 PH :9753088222.	SIRONJ
1591. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), OPPOSITE S P OFFICE, NEAR ST. FRANCIS SCHOOL, VIDISHA ROAD, RAISEN, MADHYA PRADESH. - 464551 PH :7869755501.	SAUSAR	SHIVPURI	1622. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), OPPOSITE BALAJI DHAM, LINK ROAD, SIRONJ, MADHYA PRADESH. - 464228 PH :7909997585.
RAJGARH	1603. KAMTHI MOTORS LLP (-01), BESIDE SAUSAR COTTON INDUSTRIES, CIVIL LINE, NAGPUR-CHHINDWARA ROAD, SAUSAR, DIST-CHHINDWARA, M.P - 480106. - 480106 PH :9111535777.	SHUJALPUR	SITAMAU
1592. RUKMANI MOTORS PVT LTD (-01), CHANDRA SHEKHAR AZAD MARG, NEAR TRIMURTI NAGAR, RAJGARH, DIST. - DHAR, MP. - 454116 PH :9755549200.	SEHORE	1614. UNITARA MOTORS PVT LTD (-01), KISHONI, OPPOSITE HP FUEL STATION, SHUJALPUR, M.P - 465333 - 465333 PH :9575650883.	1623. PATEL MOTORS (INDORE) PVT LTD (-01), MAUKHEDA, TEHSIL - SITAMAU, DISTRICT - MANDAU, MADHYA PRADESH - 458990 - 458990 PH :9826360699.
RAJOD	1604. JEEWAN MOTORS PVT LTD (-02), 869/1/2, OFFICERS COLONY, IN FRONT OF CHURCH GROUND, BHOPAL, INDORE ROAD - 466001	SHYAMPUR	SUTHALIA
1593. RUKMANI MOTORS PVT. LTD. (-01), NEAR POLICE STATION, SARDARPURA BADNAWARROAD, RAJOD, DIST. DHAR, MADHYA PRADESH 454 - 454660	SENDHWA	1615. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (-01), NEAR MAHADEV RESTAURANT, NH-12, SHYAMPUR, DISTRICT - SEHORE, MADHYA PRADESH - 466651. - 466651 PH :7909997570.	1624. UNITARA MOTORS PVT LTD (-01), MAKSUDANGARH ROAD, NEAR POLICE STATION SUTHALIA - 465677
RATLAM	1605. NIMAR MOTORS PVT LTD (-01), KHASRA NO. 286/10 AND 287/14, HALKA NO. 11, VARLA ROAD, SENDHWA, TEHSIL - SENDHWA, DISTRICT - BARWANI, MADHYA PRADESH. - 451666	SIDHI	TARANA
1594. PATEL MOTORS (INDORE) PVT LTD (-01), 76 C,D&E, INDUSTRIAL AREA, RATLAM - 452001	SEONI	1616. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-01), ADHYAR KHOSH, NEAR GYAN DHARAMKATA, SIDHI, MADHYA PRADESH. - 486661	1625. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), HOUSE NO. 1/6, WARD NO. 10, TOTLA MARG, TARANA-UJJAIN ROAD, TARANA, MADHYA PRADESH. - 456665
1595. PATEL MOTORS (INDORE) PVT LTD (-03), 181/17,18, DOSHI GOAN, INDUSTRIAL AREA ,JAORA ROAD, RATLAM - 457001	SEONI MALWA	SIHORA	TENDUKHEDA
REWA	1606. KAMTHI MOTORS LLP (-01), IN FRONT OF MVM SCHOOL, JABALPUR ROAD, RTO BYPASS, SEONI - 480882	1617. SHUBH MOTORS PVT LTD (-01), KHASRA NO. 31/1, P.H. - 11, MOUZA - GHAT SIMARIYA, TEHSIL - SIHORA, DISTRICT - JABALPUR, MADHYA PRADESH., - 483440	1626. STANDARD MOTOCORP PVT LTD (-01), KHASARA NO. 49/6, MOUZA - TENDUKHEDA, DISTRICT - NARSINGHPUR. - 470880
1596. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-03), NYPASS CHURHATA, DIST. REWA - 482001 PH :7354252525.	SEONI MALWA	SILWANI	THIKRI
1597. SHUBH MOTORS PVT LTD (5403-05), VILLAGE - RATHARA, TEHSIL - HUZZUR, DISTRICT - REWA, MADHYA PRADESH - 486003 - 486003 PH :975582351.	1607. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (-01), NEAR AXIS BANK, SEONI MALWA, MP. - 461223 - 461223 PH :8889281113.	1618. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), MAHAVIR COLONY, SAI KHEDA ROAD, SILVANI, DIST. RAISEN, MP - 464886. - 464886 PH :9174000501.	1627. NIMAR MOTORS PVT LTD (-01), OPPOSITE OF SHREE BALAJI TYRE SALES & SERVICE, SHREE NAGAR, THIKRI, MADHYA PRADESH -451660. - 451660 PH :9109202186.
SABALGARH	SHAHDOL	SIMROL	TIKAMGARH
1598. PREM MOTORS PVT LTD (-01), NR. INDIAN OIL PETROL PUMP, SABALGARH, DIST. - MORENA, MP - 476229 - 476229	1608. SHUBH MOTORS PVT LTD (-01), JAMUA, NEAR GYAN GUPTA, BUDHAR ROAD, SHAHDOL, - 484771 PH :9755595423.		
SADALPUR	SHAHPURA		

1628. ADINATH CARS PVT LTD (-01), NEAR NEW BUS STATION, OPPOSITE OF BANKE BIHARI COLONY, MAURANIPUR ROAD,TIKAMGARH, MADHYA PRADESH - 472001
PH :9200888454.

TULJAPUR

1629. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), 684/2, PLOT NO 16, VISHWAS NAGAR, BEED ROAD, TULJAPUR DIST. DHARASHIV - 413601

UDAIPURA

1630. JEEWAN MOTORS PVT LTD (-01), WARD NO 3, NH-12, UDAIPURA, DIST. - RAISEN, MADHYA PRADESH - 464770
PH :9826017799.

UJJAIN

1631. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), SURVEY NO. 59/3, DEWAS ROAD,UJJAIN - 456010

1632. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-02), 54/3/2, AGAR NAKA, NEAR VARDHAN HOTEL, MAKODI AAM CHAURHA, INDIRA NAGAR, UJJAIN, MADHYA PRADESH. - 456001
PH :9425067979.

UMARIA

1633. SHUBH MOTORS PVT LTD (5403-04), 8/2 GRAM BHAGRA, KIRANTAL KHURD, UMARIA DISTRICT UMARIA (MADHYA PRADESH) - 484661
PH :9755502682.

UNHEL

1634. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), 15/ 35, STATION ROAD, UNHEL, UJJAIN - 456221

VIDISHA

1635. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (-01), PLOT NO 59/1, VILLAGE RANGAI, VIDISHA, MADHYA PRADESH - 464001
PH :9109900374.

VIDISHA

1636. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), UDAYNAGAR COLONY, NEAR OIL FACTORY, SAGAR ROAD, VIDISHA, DISTRICT-VIDISHA (M.P.) - 464001 - 464001
PH :7869755501.

VIJAY RAGHAVGARH

1637. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (-01), KARITALAJ- VIJAYRAGHAVGARH ROAD, VIJAYRAGHAVGARH, DISTT. - KATNI, MP- 483775 - 483775

MAHARASHTRA

AHMEDNAGAR

1638. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), SARDA MILLS, SAVEDI ROAD,AHMEDNAGAR, MAHARASTRA - 414001
PH :7410024227.

1639. KANKARIYA AUTOMOBILES PRIVATE LTD (-05), MIDC, AHMEDNAGAR - 414003
PH :7447700029.

1640. MAHALAXMI AUTOMOTIVES PVT LTD (-01), SURVEY NO 248/249, MANMAD RD, SAVEDI, AHMEDNAGAR. - 414003

AHMEDPUR

1641. AUTOMOTIVE MANUFACTURERS PVT LTD (-01), SURVEY NO-58/1/2, VILLAGE-MARSHIVANI, NH-361, PO & TALUKA-AHMEDPUR, DIST-LATUR, PIN-413515. - 413515

AJARA

1642. SAI SERVICE PRIVATE LIMITED (-01), GAT NO. 30, PLOT NO. 24, GP MILKAT NO. 906/3, NEAR MAYUR PETROL PUMP, AJARA, DISTRICT - KOLHAPUR. - 416505

AKLUJ

1643. CHAVAN MOTORS DIVISION INDIA PVT LTD (-04), PLOT NO. 15/3-A, PANCHVATI STOP,MALINAGAR ROAD,AKLUJ - 413101

AKOLA

1644. KHADELWAL AUTOWHEELS PVT LTD (-01), TIRUPATI CHAMBERS,CONVENT ROAD,AKOLA - 444005

1645. KHADELWAL AUTOWHEELS PVT LTD (-02), PLOT NO E/12-13-MIDC PHASE-2, AKOLA. - 444001

AKOT

1646. KHADELWAL AUTOWHEELS PVT LTD (-01), PLOT NO 18 & 19, SURVEY NO 600/3, AKOT - AKOLA ROAD, AKOT, AKOLA (MAHARASHTRA) - 444101 - 444101

ALEPHATA

1647. KOTHARI AUTO WHEELS PVT LTD (-01), GAT NO.446, MATOSHRI PRIDE, NEAR SADHANA BANK, KALYAN ROAD, A/P - ALEPHATA, TALUKA - JUNNAR, DISTT. PUNE, PIN-412411 - 412411
PH :8421753278.

ALIBAUG

1648. SIMRAN MOTORS PVT LTD (-05), SURVEY NO. 30/1, OPP. RCF COLONY, VILLAGE - VESHVI, ALIBAUG, DISTRICT - RAIGAD, MAHARASHTRA - 402201

ALLAPALLY

1649. TRISTAR CARS PVT LTD (---), SHIVAJI SQUARE ETAPALLI ROAD, WARD NO 2, MOUZA-ALLAPALLI, HOUSE NO 1465, TAH-AHERI, DIST- GADCHIROLI-442703. - 442703

AMALNER

1650. MANRAJ MOTORS PVT LTD (-01), PRASAD MOTORS, RAVI NAGAR, NEAR NAYARA PETROL PUMP, DHULE ROAD, AMALNER, DIST.JALGAON-425401. - 425401

AMBERNATH

1651. AHER AUTOPRIME LLP (-01), PLOT NO-24,26,27/17, MIDC, KALYAN-BADLAPUR ROAD, VILLAGE - KOHOJ, KHUNTAVLI, AMBERNATH - 421501
PH :8422871720.

AMRAVATI

1652. ASPA BANDSONS AUTO (P) LTD (-01), SATURNA BADNERA ROAD,AMRAVATI,MAHARASTRA, - 444607
PH :9423123665.

1653. ASPA BANDSONS AUTO (P) LTD (-05), A1/A2, OLD BY PASS ROAD, MIDC, AMRAVATI, DIST: AMRAVATI, MAHARASTRA. - 444607
PH :9423339601.

ARAG

1654. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SURVEY NO.1, VILL-ARAG, TALUKA: MIRAJ, DIST: SANGLI - 416401

ARVI

1655. SEVA AUTOMOTIVE PVT LTD (-01), PLOT NO-7, SURVEY NO-32/7, MAUZA -AHMADNAGAR, WARDHA ROAD, NAGAR PARISHAD-ARVI, TEHSIL-ARVI, DIST-WARDHA - 442201
PH :8484988769.

ASHTA

1656. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), GATE NO: 328/9, NEAR S R HOTEL, ASHTA-ISLAMPUR ROAD, ASHTA - 416301

ATPADI

1657. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), GAT NO. 2774, MAYAKKA NAGAR . NEAR BDS BANK , ATPADI. TAL- ATPADI . DISTRICT SANGLI . PIN 415301 - 415301

AURANGABAD

1658. AUTOMOTIVE MANUFACTURERS PVT LTD (2102-21-01), PLOT NO. 1,P.B.NO. 716,CHIKALTHANA,AURANGABAD - 431210
PH :9158000046.

1659. PAGARIYA AUTO PVT LTD (2103-21-01), OPP. OLD HIGH COURT, NEAR HOTEL ASHOKA EXECUTIVE, JALANA ROAD, AURANGABAD - 431005

1660. AUTOMOTIVE MANUFACTURERS PVT LTD (2102-21-03), C-27,MIDC, CHIKALTHANA , N/R LUPIN LABORATORIES, AURANGABAD, MAHARASHTRA - 431006
PH :9158000059.

1661. PAGARIYA AUTO PVT LTD (2103-21-05), GAT NO. 46, PLOT NO. 50, NEAR MASTER COOK RESTAURANT (KAILASH HOTEL) BEED BYPASS ROAD, AURANGABAD, MAHARASHTRA - 431005

1662. PAGARIYA AUTO PVT LTD (2103-21-06), PLOT NO.A-35 MIDC, NEAR MAIN RAILWAY STATION, AURANGABAD - 431001

BALLARPUR

1663. TRISTAR CARS PVT LTD (-04), PLOT NO.11, BEHIND ZAWERI PETROL PUMP, NEAR GURU NANAK COLLEGE, ALLAPALLI ROAD, BAMNI, TAH. BALLARPUR - DIST. - 442701
PH :7447473304.

BARAMATI

1664. MAHALAXMI AUTOMOTIVES PVT LTD (-01), BARAMATI- PHALTAN RD., KASBA, BARAMATI, DIST. PUNE - 413102
PH :9881370310.

BARSHI

1665. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), GAT NO.1407/1, LATUR ROAD, NEAR ESSAR PETROL PUMP, BARSHI. - 413401

BEED

1666. PAGARIYA AUTO PVT LTD (-01), GUT NO. 61, VILLAGE - GHOSAPURI, TALUKA AND DISTRICT - BEED, MAHARASHTRA. - 431122

BHANDARA

1667. AUTOMOTIVE MANUFACTURERS PVT LTD (2001-03), JINDAL'S BLDG, NEAR NAVKAR PETROL PUMP, SAINATH NAGAR, NH-6, BHANDARA - 441904

BHIGWAN

1668. MAHALAXMI AUTOMOTIVES PVT LTD (-01), GAT NUMBER-342, NEXT TO HOTEL SAGAR, PUNE-SOLAPUR HIGHWAY, BHIGWAN - 413130. - 413130
PH :9922979653.

BHILAWADI

1669. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), SURVEY NO-1721, AT POST - MALWADI, BHILAWADI, TAL-PALUS, DIST-SANGLI, PIN-416303.

BHIWANDI

1670. NAVNIT MOTORS PVT LTD (3908-03), SURVEY NO. 422, 45/1, GUPTA WAREHOUSE, DAPODE, TALUKA-BHIWANDI, DIST-THANE. - 421302

1671. AHER AUTOPRIME LLP (-03), NEXT TO K N PARK, RAJNOLI VILLAGE, KALYAN BYPASS ROAD, BHIWANDI - 421302

BHOR

1672. SEHGAL AUTORIDERS PVT LTD (-01), GUT NO. 929/1, UTTROLI, BHOR, TALUKA - BHOR, DISTRICT - PUNE, MAHARASHTRA - 412206
PH :9527771016.

Dealer Workshop (AS ON 31.01.2026)

BHUSAWAL

1673. MANRAJ MOTORS PVT LTD (-02), NATIONAL HIGHWAY 6, NEAR KHADKA ROAD CROSSING, BHUSAWAL 425201. - 425201
PH :9422867242.

BOISAR

1674. SHIVAM AUTOZONE INDIA PVT LTD (-01), PLOT NO. J-240, MIDC ROAD, BOISAR, TARAPUR INDUSTRIAL, MUMBAI, PIN-401501, MAHARASHTRA - 401501
PH :8082551155.

BRAMHAPURI

1675. TRISTAR CARS PVT LTD (-02), 165, NAVEGAON, NEAR VIDYANIKETAN SCHOLL, WADSA ROAD, BRAHMIPURI, DIST: CHANDARPUR, MAHARASHTRA - 441206
PH :7745883000.

BULDHANA

1676. MANRAJ MOTORS PVT LTD (-01), GAT NO. 94, PLOT NO. 11, SUNDERKHEDE, BULDHANA, MAHARASHTRA - 443001
PH :7875051521.

CHALISGAON

1677. MANRAJ MOTORS PVT LTD (-01), SL. NO 406, PLOT NO. 2, NEAR HOTEL RANI PARK, DHULE ROAD, CHALISGAON, DIST: JALGAON, MAHARASHTRA - 424101
PH :8408889861.

CHANDGAD

1678. SAI SERVICE PRIVATE LIMITED (-01), GAT NO.360, G.P.M NO.157, A/P HALKARNI TALUKA CHANDGAD, DISTT. KOLHAPUR, MAHARASHTRA - 416507
PH :9673339103.

CHANDRAPUR

1679. TRISTAR CARS PVT LTD (-01), NR. HOTEL KUNDAN PLAZA,NAGPUR ROAD,CHANDRAPUR - 442401
PH :7722068612.
1680. TRISTAR CARS PVT LTD (-03), NAGPUR ROAD, CHANDRAPUR - 442401
PH :7722068603.
1681. ARYA CARS (A UNIT OF BARBATE AUTOMOTIVE PVT. (-01), ARYA CARS (A UNIT OF BARBATE AUTOMOTIVE, WORKSHOP /BODY SHOP .PLOT NO X-7 - 442401

CHIMUR

1682. TRISTAR CARS PVT LTD (-01), SHOP NO 1-2, OPP. RTM COLLEGE, CHIMUR, DIST-CHANDRAPUR, MAHARASHTRA - 442903 - 442903

CHIPLUN

1683. JAGRUT MOTORS PRIVATE LIMITED (-01), SURVEY NO-543, NH-17, MUMBAI-GOA HIGHWAY AT-KALAMBASTE,TAL-CHIPLUN, DIST-RATNAGIRI,MAHARASHTRA - 415605

CHOUK

1684. SIMRAN MOTORS PVT LTD (-01), SIMRAN MOTORS PVT LTD STOCKYARD , AT WAVANDAL, SURVEY NO- 62/2A POST- CHOWK, NEAR ARUN HOTEL, MUMBAI-PUNE HIGHWAY, TALUKA - KHALAPUR, DISTRICT - RAIGAD - 410206
PH :8691988895.

COLVALE

1685. SAI SERVICE PVT. LTD. (-08), PLOT NO.S-11, COLVALE INDUSTRIAL ESTATE, COLVALE, BARDEZ COLVALE - 403507

DAHANU

1686. SAI SERVICE PRIVATE LIMITED (-03), DAHANU-JAWAHAR ROAD, DAHANU(E), TAL-DAHANU, DIST. TAHNE - 401602

DAHIWADI

1687. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO-483/13/2, VILLAGE-DAHIWADI, DAHIWADI-SATARA ROAD, TALUKA- MAN, DIST-SATARA, MAHARASHTRA - 415102

DAPOLI

1688. JAGRUT MOTORS PRIVATE LIMITED (-06), AT/POST-DAPOLI, DAPOLI-KHED ROAD,DAPOLI.DIST RATANAGIRI. - 415712

DEHUGAON

1689. SUMANKIRTI CARS PVT LTD (-01), GAT NO 359, DEHU - ALANDI ROAD, DEHUGAON, PUNE, MAHARASHTRA (412109) - 412109

DHAMANGAON

1690. ASPA BANDSONS AUTO (P) LTD (-01), RAMDEVBABA NAGAR, ANJANISINGH ROAD, DHAMANGAON RAILWAY, DIST- AMRAVATI - 444709
PH :9850333558.

DHULE

1691. SEVA AUTOMOTIVE PVT LTD (-01), GATE NO. 90,AWADHAN,MUMBAI AGRA ROAD,DHULE - 424001

DINDORI

1692. AUTOMOTIVE MANUFACTURERS PVT LTD (-01), S.NO.753, NEAR PANDAV PETROL PUMP,NASIK DINDORI ROAD, TAL. DINDORI, DISTT. NASIK - 422202
PH :9673000822.

DOMBILVLI

1693. AUTOMOTIVE MANUFACTURERS PVT LTD (3901-02), PLOT NO. B-43, PHASE-1,DOMBIVLI INDUSTRIAL AREA, DOMBIVLI,DISTT-THANE, MAHARASHTRA - 421201

1694. FORT POINT AUTOMOTIVE CARS PVT LTD (3906-02), SURVEY NO.13, NEAR PIMPLESHWAR TEMPLE, OPP. MAHANAGAR CNG PUMP, KALYAN-SHILPHATA ROAD, MANGAON, SONARPADA, DOMBIVLI EAST. - 421203

GADCHIROLI

1695. BARBATE AUTOMOTIVE INDIA PVT LTD (-01), PLOT NO. 10, GANESH NAGAR, MUL ROAD, GADCHIROLI , MAHARASHTRA - 442702
PH :9669929158.

1696. TRISTAR CARS PVT LTD (-01), PLOT NO 29, SURVEY NO 125/1OPP SBI NAVEGAON BRANCH, MUL ROAD< NAVEG - 442605

GANDHIGLAJ

1697. SAI SERVICE PRIVATE LIMITED (3802-04), 581/7B, PLON NO-12, SANKESHWAR ROAD, OPP. HOTEL NEELKAMAL, TAL. GADINGLAJ - 416502

GARGOTI

1698. KR MOTORS KOLHAPUR PVT LTD (-01), 230 & 231, KOLHAPUR GARGOTI ROAD, KHANAPUR, TALUKA BHUDARGAD, DISTRICT KOLHAPUR, MAHARASHTRA. - 416209

GEORAI

1699. PAGARIYA AUTO PVT LTD (-01), SHRI SIDDHI VINAYAK COMPOUND, SURVEY NO 556, JALNA ROAD, GEORAI, DISTRICT - BEED, MAHARASHTRA (431127) - 431127

GONDIA

1700. BARBATE AUTOMOTIVE INDIA PVT LTD (2004-02), ITI ROAD,NR. FULCHUR NAKA,OPP LAXMI FLOUR MILL,GONDIA - 441601
1701. BARBATE AUTOMOTIVE INDIA PVT LTD (2004-03), ITI KAWLEWADA ROAD, NEAR HIMGIRI LAYOUT, KARANJA, GONDIA, MAHARASHTRA. - 441601

GONDIPURI

1702. TRISTAR CARS PVT LTD (-01), SURVEY NO. 338 , OPP. POLICE STATION , AHERI CHANDRAPUR ROAD, GONDIPURI PIN 442702 (MAHARASHTRA) - 442702

GUHAGAR

1703. JAGRUT MOTORS PRIVATE LIMITED (-01), SURVEY NO. 23A, SHRUNGALTALI, GUHAGAR-CHIPLUN ROAD, GUHAGAR, RATNAGIRI, MAHARASHTRA - 415703

HINGANGHAT

1704. SEVA AUTOMOTIVE PVT LTD (-01), PLOT NO. P-1, HINGANGHAT INDUSTRIAL AREA, NH-7, AJANTI, HINGANGHAT, TALUK - HINGANGHAT, DISTRICT - WARDHA, MAHARASHTRA. - 442301
PH :7722067843.

HINGOLI

1705. PAGARIYA AUTO PVT LTD (-01), PLOT NO.5,7 & 8, SURVEY NO 29/2, AKOLA BY PASS ROAD, HINGOLI. - 431513
PH :8411961177.

HUPARI

1706. SAI SERVICE PRIVATE LIMITED (-01), GAT NO.925/8K/2, PLOT NO.7, HUPARI TO YALGUD ROAD, HUPARI, TAL-HATKANANGALE, DISTRICT - KOLHAPUR. - 416203
PH :9923208454.

ICHALKARANSI

1707. SAI SERVICE PRIVATE LIMITED (-01), GATE NO. 107,KOLHAPUR ROAD,KABNOOR,ICHALKARANJJI - 416122

INDAPUR

1708. MAHALAXMI AUTOMOTIVES PVT LTD (-02), STATE HIGHWAY NO. 151, INDAPUR - 412219
PH :8308807314.

ISLAMPUR

1709. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GATE NO.905/A/3, NEAR BOMBAY RAYAN, PUNE-BANGALOE HIGHWAY (NH-4), ISLAMPUR TALUKA : WALVA, DIST:SANGLI - 415409

JALGAON

1710. MANRAJ MOTORS PVT LTD (-01), AJINTA ROAD, MIDC INDL AREA, JALGAON - 425003
1711. KHANDESH MOTORS LLP (-01), GAT 248/2, TARSOD-SHIVAR, TAL & DIST - JALGAON, PIN - 425002, MAHARASHTRA - 425002

JALNA

1712. AUTOMOTIVE MANUFACTURERS PVT LTD (2102-02), PLOT NO. 4 & 5, CTS NO. 11427/4-A, BALAJI COMPLEX, JALNA-AURANGABAD ROAD, JALNA. - 431203
PH :9158000663.

JATH

1713. CHOWGULE INDUSTRIES PRIVATE LIMITED (-05), PLOT NO. 12, SAWANT ESTATE, MORE COLONY, OPP. CATTLE BAZAR, SATARA ROAD, JATH, DISTRICT SANGLI, MAHARASHTRA - 416404

1714. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), GAT NO- 27/1B, POST-RAMPUR, JATH-SANGLI ROAD, TALUKA- JATH, DISTRICT-SANGLI - 416404
PH :8956454526.

JAYSINGPUR

1715. SAI SERVICE PRIVATE LIMITED (-01), GATE NO. 1239, NEAR ACHRYA TULSI BLOOD BANK, A/P UDGAON,(JAYSINGHPUR), TALUKA-SHIROL, DIST: KOLHAPUR - 416134
PH :9673339762.

JEJURI

1716. EXCELL AUTOVISTA PRIVATE LIMITED (-01),
GAT NO - 224, AT POST-SAKURDE, JEJURI,
TALUKA-PURANDHAR, DISTRICT-PUNE,
PIN-412303. - 412303
PH.9184052651.

KADEGAON

1717. CHOWGULE INDUSTRIES PRIVATE LIMITED (-
-01), GAT NO-248, KARAD ROAD, KADEGAON,
TAL-KADEGAON, DIST-SANGLI, MAHARASHTRA -
415304

KALWAN

1718. SHAAN CARS PVT LTD (-01), GAT NO. 189,
PLOT NO. 7, MALEGAON ROAD, A/P KALWAN,
NASHIK. - 423501

KALYAN

1719. AHER AUTOPRIME LLP (-01), SURVEY NO 53 &
54, HIND MILL, OPPOSITE STATE BANK OF
INDIA, ANDHARWADI ROAD, KALYAN, MUMBAI -
421301

1720. AHER AUTOPRIME LLP (-02), SURVEY
NO.31B, MOHANE ROAD, NEAR SHAHAD
RAILWAY STATION, SHAHAD, KALYAN. - 421103

KAMSHET

1721. SEHGAL AUTORIDERS PVT LTD (-01), AT
NAYGAON, POST KAMSHET, TALUKA MAVAL,
DISTRICT PUNE, MAHARASHTRA (410405). -
410405
PH.888881358.

KANKAVALI

1722. JAGRUT MOTORS PRIVATE LIMITED (-05),
PLOT NO.32-33, SURVEY NO.
-1886/1, MUMBAI-GOA HIGHWAY
(NH-17), JANAVLI, KANKAVLI, MAHARASHTRA -
416002

KANNAD

1723. AUTOMOTIVE MANUFACTURERS PVT. LTD. (-
-01), SURVEY NO 208/2, NEAR DEEPAK PETROL
PUMP, CHALISGAON ROAD, KANNAD - 431147

KARAD

1724. CHOWGULE INDUSTRIES PRIVATE LIMITED (-
-02), 112/3, PUNE-BANGALORE ROAD, NEAR
RELIANCE GAS PUMP, A/P MALKAPUR, TAL.
KARAD, DISTT. SATARA - 415110
PH.9922569835.

KARANJA

1725. ASPA BANDSONS AUTO (P) LTD (-01), MAA
GODAVARI NAGAR, NAGPUR-AURANGABAD
HIGHWAY, KARANJA, DISTRICT - WASHIM,
MAHARASHTRA - 444104. - 444104

KARJAT

1726. SIMRAN MOTORS PVT LTD (-03),
PANVEL-KARJAT ROAD, KARJAT, DIST. RAIGAD
- 410201

1727. KANKARIYA AUTOMOBILES PRIVATE LTD (-01),
KARJAT-NAGAR ROAD, KARJAT,
MAHARASHTRA - 414402
PH.9890843771.

KARMALA

1728. CHAVAN MOTORS DIVISION INDIA PVT LTD (-
-01), GAT NO. 105, SURVEY NO. 3961,
KARMALA-NAGAR ROAD, A/P- KARMALA,
TALUKA - KARMALA, DIST.-SOLAPUR. - 413202
PH.8806665691.

KATOL

1729. SEVA AUTOMOTIVE PVT LTD (-01), SURVEY
NO-241/1, PLOT NO 03, THOMA LAYOUT
JALALKHEDA ROAD, KATOL, MAHARASHTRA -
441302

KAVATE MAHANKAL

1730. CHOWGULE INDUSTRIES PRIVATE LIMITED (-
-01), MAHANKALI BAZAR, KAVATE
MAHANKAL-JAT ROAD, KAVATE MAHANKAL,
SANGLI, MAHARASHTRA - 416405

KHAMGAON

1731. MANRAJ MOTORS PVT LTD (-01), GAT NO 41,
OLD SURVEY NO. 12/1A, NEAR AMRUT PETROL
PUMP, AKOLA ROAD, KHAMGAON,
MAHARASHTRA - 444303

KHANAPUR (SANGLI)

1732. CHOWGULE INDUSTRIES PRIVATE LIMITED (-
-01), KHANAPUR VITA ROAD, KHANAPUR,
TAL-KHANAPUR, DIST-SANGLI - 415307
PH.9767899653.

KHARGHAR

1733. EXCELL AUTOVISTA PRIVATE LIMITED (-01),
SURVEY NO.742/439, KOPRA VILLAGE,
SECTOR-10, SION-PANVEL HIGHWAY,
KHARGHAR, DIST. RAIGAD - 410210

KHED

1734. JAGRUT MOTORS PRIVATE LIMITED (-01), GAT
NO - 43/B, MAUZA-BHARNE NAKA,
TALUKA-KHED, DIST-RATNAGIRI. - 415709
PH.9689533472.

KHED SHIVAPUR

1735. SEHGAL AUTORIDERS PVT LTD (-01), GATE
NO. 763A, PUNE BANGALORE HIGHWAY, VELU
VILLAGE, TEHSIL BHOR, OPP. INDIAN - 412205

KHOPOLI

1736. KIRAN MOTORS LIMITED (-01), PLOT NO-68,
VILLAGE-MULGAON, KHOPOLI INDUSTRIAL
ESTATE, KHOPOLI, TALUKA-KHALAPUR
DIST-RAIGARH - 410204

KOLAD

1737. EXCELL AUTOVISTA PVT LTD (-01), GATE
NO.154, AT BHUVAN KOLAD., MUM-GOA
HIGHWAY, RAIGAD. - 402112

KOLHAPUR

1738. SAI SERVICE PRIVATE LIMITED (3802-38-01),
PLOT NO. 1, E WARD, BEHIND PARVATI
TALKIES, SHIVAJI UDYAMNAGAR, KOLHAPUR -
416008

1739. SAI SERVICE PRIVATE LIMITED (3803-38-01),
C-6, SHIROLI MIDC, MENON OPP MENON
PISTONS, NH-4, KOLHAPUR - 416122

1740. SAI SERVICE PRIVATE LIMITED (3802-06), R S
NO. 1018/1, PLOT NO. 28, APATE NAGAR,
KALAMBA RING ROAD, KOLHAPUR,
MAHARASHTRA. - 416012

1741. KR MOTORS KOLHAPUR PVT LTD (3804-38-01),
PLOT NO. 216/2, 216/3, 216/5, NH-4, GOKUL
SHIRGAON, KOLHAPUR. - 416234

KONGAON

1742. PRAKASH AUTO PVT LTD (3903-02), SURVEY
NO.126/127,98/38,AT & POST KONGAON. -
421302

KOPARGAON

1743. SHAAN CARS PVT LTD (-01), SURVEY NO. 15/36
GAWARE PATIL ESTATE, NAGAR MANMAD
HIGHWAY, NEAR ASHOKA HOTEL,
KOPARGAON. - 423601
PH.9075028780.

KOREGAON BHIMA

1744. SAI SERVICE PRIVATE LIMITED (-01), GAT
NO-373, VILLAGE-KOREGAON BHIMA,
TALUKA-SHIRUR, DIST-PUNE. - 415501
PH.7774997005.

KUDAL

1745. JAGRUT MOTORS PRIVATE LIMITED (-01),
SURVEY NO. 50/5, 51/5, A/P PINGULI,
TEMBDHURI, TALUKA - KUDAL, DISTRICT -
SINDUDURG, MAHARASHTRA - 416520

KUDITRE

1746. SAI SERVICE PRIVATE LIMITED (-01), KUDITRE
FACTORY PHATA,
A/P - KOPARDE, TALUKA-KARVEER,
DIST-KOLHAPUR-416205. - 416205
PH.9923208460.

KURUDWADI

1747. CHAVAN MOTORS DIVISION INDIA PVT LTD (-
-01), GAT NO.-256, BYPASS ROAD, A/P KURDA,
TALUKA-MADHA, DISTT. SOLAPUR. - 413208
PH.8806665691.

KURUNDWAD

1748. SAI SERVICE PRIVATE LIMITED (-01), GAT NO.
250, AT POST - KURUNDWAD, TALUKA -
SHUROO, DIST.-KOLHAPUR. - 416106
PH.9673339695.

LANJA

1749. JAGRUT MOTORS PRIVATE LIMITED (-01), GAT
NO-663, TALUKA-LANJA, DIST - RATNAGIRI,
MAHARASHTRA - 416701 - 416701
PH.8108718346.

LASALGAON

1750. SHAAN CARS PVT LTD (-01), PLOT NO. 337,
LASALGAON MAIN ROAD, LASALGAON, TALUKA -
NANDGAON, DISTRICT - NASHIK. - 422306

LATUR

1751. AUTOMOTIVE MANUFACTURERS PVT LTD (-
-02), C-4/1319/1, SURVEY NO. 89/C, RING ROAD
BETWEEN NANDED NAKA AND BABHAGAON
NAKA, LATUR, PO & DIST-LATUR, PIN-413512. -
413512

LONAND

1752. SIDDHI WHEELS (A UNIT OF TARALEKAR
MOTORS PVT LTD) (-01), SR NO - 353/2, NEAR
RAILWAY BRIDGE, PUNE-SATARA ROAD,
LONAND, SATARA, MAHARASHTRA - 415521 -
415521

LONAVALA

1753. SEHGAL AUTORIDERS PVT LTD (-01), GATE
NO. 120/1, VILLAGE - WAKSAI, TALUKA -
MAVAL, LONAVALA, DISTRICT - PUNE,
MAHARASHTRA. - 410405

LONI

1754. MAHALAXMI AUTOMOTIVES PVT LTD (-01),
GAT NO. 55/5, SANGAMNER LONI ROAD, LONI,
TALUKA-RAHATA, AHMEDNAGAR
MAHARASHTRA - 413736

MAHAD

1755. SIMRAN MOTORS PVT LTD (-04), NEAR
RELIENCE PUMP, PANVEL-GOA ROAD, MAHAD,
DIST. RAIGAD - 402301
PH.9870404323.

MALEGAON

1756. SHAAN CARS PVT LTD (3703-02), GAT NO. 273,
POST-TEHARE, MALEGAON, AB HIGHWAY,
NH-3, DISTRICT-NASHIK - 423203

MALKAPUR

1757. KR MOTORS KOLHAPUR PVT LTD (-01), AT PO -
MALKAPUR, YELANE-SAHUWADI,
KOLHAPUR-RATNAGIRI ROAD, DIST-
KOLHAPUR, PIN-416105. - 416105

MANCHAR

1758. KOTHARI AUTO WHEELS PVT LTD (-01),
SOHAM NAGARI, A-WING, SHOP NO.8 & 16,
PUNE NASIK HIGHWAY, A/P MANCHAR,
TALUKA-AMBEGAON, DISTT: PUNE,
MAHARASHTRA - 410503
PH.8411003608.

MANGALVEDHA

Dealer Workshop (AS ON 31.01.2026)

1759. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), NEAR SWARAJYA HOTEL, PANDHARPUR ROAD, CHOKAMELANAGAR, MANGALWEDHA, MAHARASHTRA, PIN-413305 - 413305 PH :8805778881.	1770. CHOWGULE INDUSTRIES PRIVATE LIMITED (-03), 42C, OPP. WHISPERING WOODS, MIDC AREA, TALUKA MIRAJ, DISTT. SANGLI, MAHARASHTRA - 416410	1785. KIRAN MOTORS LIMITED (-01), CTS NO. 170 & 4081, BOMBAY AGRA ROAD, LB SHASTRI MARG, GHATKOPAR (WEST), MUMBAI, MAHARASHTRA, PINCODE: 400086 - 400086	1798. ARUN MOTORS PRIVATE LIMITED (2008-01), PLOT NO-9&10, PATNI PLAZA, KHAMLA RING ROAD, SAWARKAR NAGAR, NAGPUR, MAHARASHTRA - 440025
MANGAON	MORGAON	1786. MY CAR (PUNE) PVT LTD (-01), PLOT NO-10, CHANDIVALI ESTATE, CHANDIVALI FARM ROAD, OPP LAKE HOMES, ANDHERI EAST, MUMBAI, MAHARASHTRA - 400072 PH :8104907081.	1799. ARUN MOTORS PRIVATE LIMITED (2008-02), C-481, MIDC HINGNA MAIN ROAD, WADI, NAGPUR, PIN-440028, MAHARASHTRA - 440028 PH :7757988800.
1760. SIMRAN MOTORS PVT LTD (-01), SURVEY NO.97, AT-POST-NANORE, NH-17, MUMBAI-GOA HIGHWAY, MANGAON, RAIGAD, MAHARASHTRA. - 402104 PH :9223181120.	1771. MAHALAXMI AUTOMOTIVES PVT LTD (-01), GAT NO-179, MORGAON, - TALUKA- BARAMATI, DIST-PUNE - 412304 PH :9850994014.	MURGUD	1800. SEVA AUTOMOTIVE PVT LTD (2009-20-01), P.S.K 14, REVENUE CIRCLE, KH NO.84, NEAR KORADI POLICE STATION, PANJARA - 480115
1761. SIMRAN MOTORS PVT LTD (-02), GAT NO-65/2K, NANORE GAON, - 402104	MUMBAI	1787. SAI SERVICE PRIVATE LIMITED (-01), R.S. NO. 188/4, A/P MURGUD, TALUKA: KAGAL, DIST: KOLHAPUR - 416219	NALASOPARA
MANMAD	1772. SAI SERVICE PRIVATE LIMITED (-01), 462 SENAPATI BAPAT MARG, WORLI NAKA, LOWER PAREL, MUMBAI - 400013	MURTIZAPUR	1801. SHIVAM AUTOZONE INDIA PVT LTD (-01), SURVEY NO. 91.92, PLOT NO. 7, VILLAGE- DHANIV, NALASOPARA, DIST. PALGHAR, MAHARASHTRA. - 401209
1762. SHAAN CARS PVT LTD (-01), GAT NO. 11/3, PLOT NO. 1 AND SHOP NO. 3 & 4, NANDGAON ROAD, MANMAD. - 423104	1773. SAI SERVICE PRIVATE LIMITED (-02), ARVIND CHAMBERS, 194 ANDHERI KURLA ROAD, ANDHERI(EAST), MUMBAI - 400069	1788. KHANDELWAL AUTOWHEELS PVT LTD (-01), SURVEY NO 38, MAUJA SONORI, NH 06, NEAR HOTEL DEVA, MURTIZAPUR, DISTRICT-AKOLA - 444107 PH :8484063274.	NANDED
MANOR	1774. VITESSE PRIVATE LIMITED (-01), SHAH INDL ESTATE, PLOT 11 LINK ROAD, ANDHERI (WEST), MUMBAI - 400058	NAGOTHANE	1802. SEVA AUTOMOTIVE PVT LTD (6801-68-01), GAT NO-126, NEAR SUNDER PETROL PUMP, A/P PIMPALGAON MAHADEO, TQ-ARDHAPUR, NAGPUR-NANDED HIGHWAY, NANDED, MAHARASHTRA-431704 - 431604 PH :7447415607.
1763. SAI SERVICE PRIVATE LIMITED (-01), GUT NO. 37, NEAR MSEB POWER STATION, PALGHAR MANOR ROAD, AT POST - TAKVAHAL, DISTRICT - PALGHAR, MANOR - 401403 PH :9167980005.	1775. VITESSE PRIVATE LIMITED (-02), 77 AF PALKY GULLY, OFF VEER SAVARKAR MARG, PRABHADEVI, MUMBAI - 400025	1789. SIMRAN MOTORS PVT LTD (-01), SURVEY NO 241, PLOT NO. 11, MOUJE CHIKANI, ROHA, RAIGAD, - 402106	NANDURBAR
MARKAL	1776. SAH & SANGHI AUTO AGENCIES PVT LTD (-01), PRAKASH MILLS COMPOUND, OFF. GLOBE MILLS PASSAGE, WORLI, MUMBAI - 400013	NAGPUR	1803. SEVA AUTOMOTIVE PVT LTD (-02), P. NO.-324, BASILAL NAGAR SHAHADEA BYPASS ROAD, NEAR HOTEL KAREN GARDEN, CHAUFULLY NANDURBAR-425412 - 425412 PH :7720017528.
1764. MY CAR (PUNE) PVT LTD (-01), SRV NO 1283/2 & 1284, KAMALJAI WASTI, OPP. ENPRO INDUSTRIES, ON ALANDI MARKAL ROAD, A/P MARKAL, TEHSIL-KHED, DIST PUNE, PIN CODE NO. 412105. - 412105	1777. SAI SERVICE PRIVATE LIMITED (-04), C/O SHAKTI INDUSTRIAL WIRE COMPOUND, DATTA PADA ROAD, BORIVLI (EAST), MUMBAI - 400066	1790. SEVA AUTOMOTIVE PVT LTD (2002-20-01), 34/3, KACHIMET AREA, NEAR VAYUSENA NAGAR BUS STOP, WADI, AMRAVATI ROAD, NAGPUR - 440023	NARAYANGAON
MAUDA	1778. AUTOMOTIVE MANUFACTURERS PVT LTD (3901-04), PLOT NO. 108, BAZAR WARD, KURLA(WEST), MUMBAI - 400070	1791. AUTOMOTIVE MANUFACTURERS PVT LTD (2001-20-02), 575 KAMPTTEE ROAD, NAGPUR-26, - 440026	1804. KOTHARI AUTO WHEELS PVT LTD (-01), GATE NO. 747, PUNE NASIK HIGHWAY, WARULWADI, NARAYANGAON - 410504 PH :8411003608.
1765. ARUN MOTORS PVT LTD (-01), NEAR NIRMAL UJJWAL BANK, MAIN ROAD. - 441104	1779. FORT POINT AUTOMOTIVE CARS PVT LTD (-02), D-9, STREET NO. 21, OPP PATNI COMPUTERS, SEEPEZ, MIDC, ANDHERI, MUMBAI - 400096	1792. SEVA AUTOMOTIVE PVT LTD (2002-20-03), PLOT NO. 33A, CENTRAL MIDC, HIGNA ROAD, NAGPUR, MAHARASHTRA. - 440016	NASHIK
MAYANI	1780. SHIVAM AUTOZONE INDIA PVT LTD (-01), CHARKOP INDUSTRIAL ESTATE, KANDIVLI(WEST), MUMBAI, MAHARASHTRA - 400067	1793. BARBATE AUTOMOTIVE INDIA PVT LTD (2004-20-01), NEAR PARDY NAKA (OUTSIDE), NH-6, BHANDARA ROAD, NAGPUR - 440035	1805. AUTOMOTIVE MANUFACTURERS PVT LTD (3702-37-01), P-1-12, ADDITIONAL NASIK INDL. AREA, AMBAD, NASIK - 422010
1766. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO - 2101/1, 560/1, MAYANI VADJU ROAD, A/P- MAYANI, TAL-KHATAV, DIST-SATARA-415102 - 415102 PH :8888866659.	1781. VITESSE PRIVATE LIMITED (-07), PLOT NO.A59, KANDIVALI INDUSTRIAL CO-OP. SOC., GOVERNMENT INDUSTRIAL ESTATE, CHARKOP, KANDIVALI (W), MUMBAI - 400067	1794. AUTOMOTIVE MANUFACTURERS PVT LTD (2001-20-05), PLOT NO. 38/1, NEAR BOUDDHA VIHAR, OPP. DELHI PUBLIC SCHOOL, KAMPTTEE ROAD, NAGPUR, MAHARASHTRA - 441001	1806. SEVA AUTOMOTIVE PVT LTD (3701-37-01), PLOT NO. X - 46, MIDC, AMBAD, NASIK - 422010
MEDHA	1782. FORT POINT AUTOMOTIVE CARS PVT LTD (-03), C/O VARUN STEEL INDUSTRIES, AAM TOOL COMPOUND, BOAT HURT ROAD, BEHIND SEWARI POLICE STATION, DARUKHANA, REAY ROAD, MUMBAI - 400010	1795. BARBATE AUTOMOTIVE INDIA PVT LTD (2007-01), PLOT NO. 4, NEW COTTON MARKET, GHAT ROAD, NAGPUR, MAHARASHTRA - 440018 PH :8888859542.	1807. SHAAN CARS PVT LTD (3703-37-01), E-3 MIDC AREA, SATPUR, NASIK, MAHARASHTRA - 422007
1767. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO-76-24/25, OPP.PWD OFFICE, A/P-JAWALWADI(MEDHA), TAL-JAOLI, DI ST-SATARA, MAHARASHTRA-415012 - 415012	MHASLA	1796. BARBATE AUTOMOTIVE INDIA PVT LTD (2007-02), PLOT NO. 131, NH-6, BHANDARA ROAD, MAHALGAON, NAGPUR, MAHARASHTRA. - 441202 PH :8888820312.	1808. SHAAN CARS PVT LTD (3703-37-04), 03/810, NEAR NASARDI BRIDGE, WADALA ROAD, NASIK ROAD, NASIK - 422011
MHASWAD	1768. EXCELL AUTOVISTA PRIVATE LIMITED (-01), SURVEY NO-27, VILL- SAVAR, TALUKA-MHASLA, DIST- RAIGAD - 402105	1797. SEVA AUTOMOTIVE PVT LTD (2002-04), PLOT NO.05, 12, 13A, 13B CHANDRABHAGA GRUHA NIRMAN SAHAKARI LIMITED, KH NO.45/3, CITY SURVEY NO.570, MANEWADA RING ROAD, NAGPUR, MAHARASHTRA - 440027 PH :8390446644.	1809. SEVA AUTOMOTIVE PVT LTD (3701-37-06), SEVA FARMS, GATE NO. 822, AMBE BAHULA ROAD, VILHOLI, TALUKA & DISTRICT: NASIK, MAHARASHTRA - 422010 PH :9146007009.
1769. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO.287/5, SATARA-PANDHARPUR ROAD, - A/P-MHASWAD(MASAIWADI), MAHARASHTRA - 415509	1784. VELOX MOTORS PVT LTD (-01), PLOT NO.115/116/117 MIVERVA INDUSTRIAL ESTATE, MULUND-WEST, MUMBAI - 400080		1810. SEVA AUTOMOTIVE PVT LTD (-07), PLOT NO.A-23, NICE INDUSTRIAL AREA, MIDC, SATPUR, NASIK (MAHARASHTRA) - 422006
MIRAJ			1811. SEVA AUTOMOTIVE PVT LTD (-37-08), SHOP NO.1 & 2, SER. NO. 241/1-B-1/2, OPPOSITE NMC SCHOOL, DINDORI ROAD, MAHRSRUL, NASHIK, MAHARASHTRA - 422004

1812. SHAAN CARS PVT LTD (3703-37-05), SURVEY NO. 1, PLOT NO. 02, ADGAON, D-MART, MUMBAI AGRA HIGHWAY, NASHIK - 423101
1813. SHAAN CARS PVT LTD (-06), SURVEY NO. 72/2, VIHITGAON-VADNER ROAD, DEOLALI, NASHIK - 422401

NASRAPUR

1814. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO-152/2, PUNE SATARA HIGHWAY, AT POST: NASRAPUR CHELADI, TALUKA - BHOR, PUNE, MAHARASHTRA - 412213

NAVI MUMBAI

1815. AUTOMOTIVE MANUFACTURERS PVT LTD (3901-01), D-234 MIDC TTC INDL AREA, SHIRVANE NERUL NEW BOMBAY, - 400706
1816. EXCELL AUTOVISTA PRIVATE LIMITED (-02), PLOT NO-9, MIDC, NAVADE, TALOJA, TAL-PANVEL, DIST-RAIGAD - 410208
1817. SIMRAN MOTORS PVT LTD (3913-01), CAMEO FABRIC COMPANY, GEN 16, NEAR SULZER COMPANY, DIGHA, TTC AREA, AIROLI - 400701
1818. MY CAR (PUNE) PVT LTD (-01), A-751/2, MIDC TTC, TURBHE MAHAPE ROAD, PAWANE, NAVI MUMBAI - 400071
1819. SAI SERVICE PRIVATE LIMITED (-06), D 42, TTC INDUSTRIAL AREA, NAVI MUMBAI, PIN-400705 - 400705

NERAL

1820. EXCELL AUTOVISTA PRIVATE LIMITED (-01), NEAR OLD JAKAT NAKA, GANESH NAGAR, PAYARMAL, NERAL, TALUKA - KARJAT, DISTRICT - RAIGAD, MAHARASHTRA (410101) - 410101

NESARI

1821. KR MOTORS KOLHAPUR PVT LTD (-01), S NO. 2452, SUNDAR NAGAR, A/P NESARI, TAL-GADINGLAJ, DIST- KOLHAPUR-416504 - 416504

NEVASA

1822. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), BELOW ADARSH GRAMIN BANK, OPP. ILAKSHI MOTORS, NEVAS PHATA, AURANGABAD ROAD, TALUKA - NEVASA, DISTRICT - AHMEDNAGAR - 414603
PH :9420494601.

NIPHAD

1823. SHAAN CARS PVT LTD (-01), GAT NO. 99/3, RASALPUR AURANGABAD HIGHWAY, NIPHAD, DISTRICT - NASHIK, MAHARASHTRA - 422303
PH :9075028780.

OSMANABAD

1824. CHAVAN MOTORS DIVISION INDIA PVT LTD (-03), PLOT NO. A-53, INDUSTRIAL AREA, MIDC, OSMANABAD - 413501
PH :8888867861.

OTUR

1825. KOTHARI AUTO WHEELS PVT LTD (-01), GAT NO-184/3/B, ALEPHATA-KALYAN ROAD, OPP HP PETROL PUMP, VILLAGE-OTUR, TALUKA-JUNNAR, DIST-PUNE - 412409
PH :8411003608.

PABAL

1826. MAHALAXMI AUTOMOTIVES PVT LTD (-01), 3733, SHINKALKAR WASTI, PABAL, TALUK SHIRUR, PUNE, PIN 412403 - 412403
PH :8956288087.

PADGHA

1827. SHIVAM AUTOZONE INDIA PVT. LTD. (-01), SHOP NO.7/8, TRADE CENTRE., MUMBAI NASHIK HW, NEAR PADGHA TOLL PLAZA, - 421101

PAITHAN

1828. PAGARIYA AUTO PVT LTD (-01), GAT NO-277, MAUZA- PAITHAN, TALUKA- PAITHAN, DIST - AURANGABAD 431107 - 431107
PH :9922994237.

PALGHAR

1829. SAI SERVICE PRIVATE LIMITED (-01), SURVEY NO. 86/1, TEMBHODE, MANOR-MAHIM ROAD, PALGHAR, DISTRICT: THANE - 401404

PALUS

1830. CHOWGULE INDUSTRIES PRIVATE LIMITED (-04), PLOT NO.B-3, MIDC AREA, TALUKA PALUS, DISTT. SANGLI - 416308
PH :8888870122.

PANDHARPUR

1831. CHAVAN MOTORS DIVISION INDIA PVT LTD (-05), 410/A/3, A/P- WAKHARI, PHALTAN ROAD, PANDHARPUR, DIST-SOLAPUR.

GAT NO.56, ESABAVI, PUNE ROAD, TAL-PANDERPUR, SOLAPUR - 413001
PH :7774997005.

PANVEL

1832. SIMRAN MOTORS PVT LTD (-01), PLOT-2-8, SECTOR-15, OPP. HOTEL GARDEN, OLD MUMBAI PUNE HIGHWAY, PANVEL - 410206

1833. AUTOMOTIVE MANUFACTURERS PVT LTD (3901-03), PLOT NO:92/1, VILLAGE KOLAKHA, MUMBAI-GOA HIGHWAY, PANVEL, DISTT. RAIGAD - 410206

1834. K.T.S. AUTOMOTORS PVT LTD (-01), VILLAGE: APTA, OPP. APTA RAILWAY STATION, LADIWALI, DIST: RAIGAD, PANVEL (MAHARASHTRA) - 410207

PARATWADA

1835. ASPA BANDSONS AUTO (P) LTD (-01), SURVEY NO. 26/4A, RAMGAON, AMRAVATI PARATWADA ROAD, NEAR JAWARDI PHATA, PARATWADA TALUKA - ACHALPUR, DISTRICT - AMRAVATI - 444805
PH :8888897629.

PARBHANI

1836. PAGARIYA AUTO PVT LTD (-01), SURVEY NO-301, PLOT NO-86/A, OPP GULMOHAR LODGE, BASMAT ROAD, PARBHANI - 431401
PH :9511868433.

PARGAON

1837. MAHALAXMI AUTOMOTIVES PVT LTD (-01), PARGAON PHATA, KEDGAON PARGAON ROAD, PARGAON, PUNE, MAHARASHTRA - 412203 - 412203

PATAN

1838. CHOWGULE INDUSTRIES PVT. LTD. (-01), GAT NO.1543/KIPLOT NO.2., A/P-MHAWSHI, PATAN-MANDURE ROAD, - 415206

PATAS

1839. MAHALAXMI AUTOMOTIVES PVT LTD (-03), PUNE-SOLAPUR HIGHWAY, PATAS, TALUKA DAUND DISTT.-PUNE - 413106
PH :8888890957.

PEN

1840. SIMRAN MOTORS PVT LTD (-01), AT SURVEY NO 75, PLOT NO 2, MUMBAI-GOA HIGHWAY, WADHKAL (PEN) - 402107
PH :9503381198.

PHALTAN

1841. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), PLOT NO.83/1B/1, LONAND-PUNE ROAD, PHRANANDWADI, TALUKA:PHALTAN, DISTRICT: SATARA, MAHARASTRA - 415523
PH :8888886301.

PIMPLEGAON

1842. AUTOMOTIVE MANUFACTURERS PVT LTD (-01), GAT NO.517/P NEAR MARKET COMMITTEE, MUMBAI AGRA HIGHWAY, NH3 A/P PIMPALGAON BASWANT, TALUKA: NIPHAD, DIST-NASHIK - 422202

PIRANGUT

1843. MY CAR (PUNE) PVT LTD (-01), GAT NO-314, AT VILLAGE-KASAR AMBOLI, PIRANGUT, TALUKA -AMBOLI, DIST-PUNE, PIN-412108 - 412108
PH :9325424613.

POYNAD

1844. MY CAR (PUNE) PVT LTD (-01), SURVEY NO-52/2, SUBASH NAGAR, MUMBAI-GOA HIGHWAY, A/P-AMBEPUR, POYNAD, TALUKA-ALIBAUG, DIST-RAIGAD, PIN-402108 - 402108

PULGAON

1845. SEVA AUTOMOTIVE PVT LTD (-01), PLOT NO. 33, MOUZA - CHITKI, MOUZA NO - 2/33, HINDUSTAN COLONY, WARDHA ROAD, GRAM PANCHAYAT - LAXMINARAYANPUR, AT POST - PULGAON, TEHSIL - DEOLI, DISTRICT - WARDHA - 442302

PUNE

1846. SAI SERVICE PRIVATE LIMITED (1901-19-01), BOMBAY PUNE ROAD, FUGEWADI, PUNE - 411012
1847. SAI SERVICE PRIVATE LIMITED (1901-19-02), 889/80 J.M.ROAD, DECCAN GYMKHANA, PUNE - 411004
PH :9923208347.
1848. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-19-02), S.NO. 53,PUNE SATARA HIGHWAY,KATRAJ,PUNE - 411046
1849. SAI SERVICE PRIVATE LIMITED (1901-19-03), S.NO.15A GIDWANI COMPOUND, KONDWA BUDRUK, HAVELI, PUNE - 411046
PH :9923208345.
1850. WONDER CARS PVT LTD (1903-19-02), 12, NPS LINES,SOLAPUR ROAD,OLD POOL GATE,CAMP, PUNE - 411001
1851. KOTHARI AUTO WHEELS PVT LTD (1984-19-01), 110/A, PUNE SOLAPUR ROAD, NEAR FATIMA NAGAR, PUNE - 411039
PH :7498272309.
1852. MY CAR (PUNE) PVT LTD (1907-19-01), SURVEY NO. 131, MUMBAI BANGALORE HIGHWAY, WAKAD, PUNE - 411057
1853. CHOWGULE INDUSTRIES PRIVATE LIMITED (1911-19-01), S.NO.1, NEXT TO PODAR INTERNATIONAL SCHOOL, KATRAJ BYPASS ROAD, AMBEGAON-B, TALUKA-HAVELI, PUNE - 411046
1854. SAI SERVICE PRIVATE LIMITED (1901-19-05), NEAR NIGDI-BHOSARI ROAD, CHINCHWAD, PUNE - 411019
1855. SEHGAL AUTORIDERS PVT LTD (1913-19-01), SURVEY NO. 51, BAVDHAN KHRUD, TAL: HAVELI, DIST: PUNE - 411021
1856. SAI SERVICE PRIVATE LIMITED (1901-19-06), SURVEY NO.244/1, PHASE-II, NEAR BANK OF MAHARASHTRA, HINGEWADI, TAL - MULSHI, DISTRICT-PUNE,MAHARASHTRA - 411057
PH :9923208302.
1857. KOTHARI AUTO WHEELS PVT LTD (1984-03), PLOT NO. 2B, D1 BLOCK, CHINCHWAD, PUNE, DIST. PUNE - 411019
PH :9168662302.
1858. MAHALAXMI AUTOMOTIVES PVT LTD (1912-03), 59/A, MUNDHWA KHARADI ROAD, OPP. MUNDHWA POLICE STATION, MUNDHWA, PUNE, MAHARASHTRA - 411036
PH :8888874980.

Dealer Workshop (AS ON 31.01.2026)

1859. SAI SERVICE PRIVATE LIMITED (1901-07), 4/A/1A, 1/3 A, SALUNKE VIHAR ROAD, BORADE NAGAR, KONDWA, PUNE, MAHARASHTRA. - 411048 PH :9923208358.	1871. MAHALAXMI AUTOMOTIVES PVT LTD (1912-19-05), LANE NO 9, SANT NAGAR, BEHIND IOCL PETROL PUMP, LOHEGAON, PUNE, MAHARASHTRA-411047 - 411047 PH :8956045026.	SAKOLI 1883. AUTOMOTIVE MANUFACTURERS PVT LTD (-01), PLOT NO. 7, GAT NO. : 271/1/4, MOUZA - JAMBHALI, TAHSIL - SAKOLI, DIST : BHANDARA, PIN - 441802. - 441802	1893. BARBATE AUTOMOTIVE INDIA PVT LTD (-01), PLOT NO.2, MADANE LAYOUT, MOUZA GUJARKHEDI, NR. INDIAN PETROL PUMP, NAGPUR ROAD, SAVNER DIST. NAGPUR. - 441107 PH :8888859546.
1860. WONDER CARS PVT LTD (1903-03), PLOT NO.52/1 BLOCK F2, MIDC, PIMPRI, PUNE. - 411018	1872. MY CAR (PUNE) PVT LTD (1918-19-02), GAT NO 624, HISSA NO. 5/2, VILLAGE-KURULI, CHAKAN, TAL. KHED, DIST. PUNE, NEAR SAI EXPRESS WAY PETROL PUMP, PIN-410501. - 410501	SANGAMNER 1884. SHAAN CARS PVT LTD (-01), GAT NO. 173/4/5/6, A/P VELHALE, NASHIK PUNE HIGHWAY, SANGAMNER, DIST AHMEDNAGAR, MAHARASHTRA - 422605	SAWANTWADI 1894. JAGRUT MOTORS PRIVATE LIMITED (-01), SHIVSHAMBO APARTMENT, 1190, A/P KOLGAON, SURVEY NO.187, HISSA NO.33B, TAL-SAWANTWADI, DISTT. SINDHUDURG. - 416510
1861. MAHALAXMI AUTOMOTIVES PVT LTD (1912-04), NO.485/1, CTS NO.1041, OM SUPER MARKET, GHOKALE CROSS ROAD, MODEL COLONY, SHIVAJI NAGAR, PUNE - 411016 PH :8888842887.	1873. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-19-07), SURVEY NO 245/6,7/91, KHARABWADI CHAKAN - 410501	SANGLI 1885. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO.243 SANGLI KOLHAPUR ROAD, OPP. TO GAJANAN MAHARAJ MANDIR, ANKALI, TAL-SANGLI, DISTT. SANGLI - 416416 PH :9850966905.	SHAHAPUR 1895. SHIVAM AUTOZONE INDIA PVT LTD (-01), DR. DESHPANDE COMPOUND, NEAR BHATSA COLONY, VILLAGE - GOTHAGHAR, TALUKA - SHAHPUR, DISTRICT - THANE, MAHARASHTRA - 421601 PH :7718893483.
1862. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-19-05), 129/2/B/1, NEW PUNE MUMBAI HIGHWAY, KATRAJ DEHU ROAD BYPASS, TATHWADE, TAL-MULASHI, DISTT. PUNE (MAHARASHTRA) - 411033	1874. EXCELL AUTOVISTA PRIVATE LIMITED (1917-19-02), S.NO. 41/2B/1 PART CHOUDHARI VASTI, KHARADI, PUNE - 411014	SANGOLA 1886. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), SR NO. 917/2/B, SANGLI MIRAJ ROAD, MIRAJ, DISTRICT - SAGLI. - 416410	SHAHUWADI 1896. SAI SERVICE PRIVATE LIMITED (-01), GATE NO. 1213, RIAT DONOLI, TALUKA - SHAHUWADI, DIST - KOLHAPUR. - 416213 PH :9923208448.
1863. SAI SERVICE PRIVATE LIMITED (1901-08), SURVEY NO. 37, HISSA NO. 2, SITUATED AT WADGAON KHURD, NEAR NANDED CITY, SINHAHAD ROAD, TALUKA - HAVELI, DISTRICT - PUNE, MAHARASHTRA. - 411041 PH :9923208312.	PUSAD 1875. HIMALAYA CARS (-01), OPP P N COLLEGE, GAIMUKH NAGAR,YAVATMAL / DIGRAS ROAD, PUSAD - 445204 (DIST YAVATMAL, MAHARASHTRA) - 445204	SANGOLI 1887. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), GAT NO. 276/14/A, MAIN ROAD, KOLHAPUR HIGHWAY, A/P & TALUKA - SANGOLA, DIST. -SOLAPUR. - 413307 PH :8806665691.	SHILTPATA 1897. VELOX MOTORS PVT LTD (-01), SURVEY NO-99/2B, VILLAGE-DAIGHAR, KALYAN SHIL-PHATA ROAD, NEAR DATTI MANDIR, POST-PADALE, DIST-THANE, PIN-421204. - 421204 PH :8419984188.
1864. KOTHARI AUTO WHEELS PVT LTD (1984-05), PLOT NO. 24/B, HADAPSAR INDUSTRIAL ESTATE, PUNE. - 411028	RAHATA 1876. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), SHIRDI ROAD, SAKORI, RAHATA. - 423107 PH :8275033313.	SANKH 1888. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SURVEY NO-394/5, VILLAGE- SANKH, TALUKA-JATH, DIST- SANGLI, MAHARASHTRA - 416413	SHIRUR 1898. MAHALAXMI AUTOMOTIVES PVT LTD (1912-02), 1023/1, NEXT INDIAN OIL PETROL PUMP, SARADWADI, PUNE-AHMEDNAGAR HIGHWAY, TAL: SJIRUR, DIST: PUNE, MAHARASHTRA - 412120
1865. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-06), SR. NO. -43/44/S, 7 PARVATI INDUSTRIAL ESTATE, OPP. ADINATH SOCIETY, PUNE- SATARA ROAD, PUNE. - 411009	RAHURI 1877. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), TRIMURTI CRANE SERVICE, NAGAR-MANMAD ROAD, RAHURI, MAHARASHTRA. - 413705 PH :9420036767.	SAPHALE 1889. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (-01), H.NO.1137/1138/1139, , NUTAN NAGAR,MAKNE THEMHKODAWE ROAD, MAHARASHTRA - 401102	SHIRWAL 1899. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO.175, A/P SHINDEWADI, SHIRWAL-BHOR ROAD, SHIRWAL, TAL. KHANDALA, DISTT. SATARA - 412801 PH :9637399003.
1866. EXCELL AUTOVISTA PRIVATE LIMITED (1917-01), GATE NO.1232, 10TH MALL, PUNE SASWAD ROAD, VILLAGE - WADKI, TAL - HAVELI, DIST PUNE. - 412308	RAJAPUR 1878. JAGRUT MOTORS PRIVATE LIMITED (-01), SURVEY NO. 14/8, TARALWADI, RAJAPUR, DIST: RATNAGIRI - 416702	SASWAD 1890. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-03), SOLAPUR HIGHWAY, SASWAD, DIST. PUNE - 412301	SHRIGONDA 1900. MAHALAXMI AUTOMOTIVE PVT. LTD. (-01), GAT NO.2378/1/1/1, RAILWAY STATION ROAD, VILLAGE SHREKGONDA. - 413701
1867. KOTHARI AUTO WHEELS PVT LTD (1984-06), SURVEY NO.46, HISSA 9/1 CITY SURVEY NO.6181+6180), WADGAON SHERI, CHANDAN NAGAR, PUNE NAGAR ROAD, TAL-HAVELI, PUNE. - 411014 PH :8411003631.	RAJGURUNAGAR 1879. MY CAR (PUNE) PVT LTD (-01), SURVEY NO.94, SANDBHORWADI, NEAR TUKAL MANDIR, PUNE-NASIK HIGHWAY, TAL-KHED, RAJGURUNAGAR DISTT. PUNE. - 410505 PH :9112231553.	SATANA 1891. SHAAN CARS PVT LTD (-01), GAT NO 322/2/A/7, PUNDLIK NAGAR MALEGAON ROAD, AT POST SATANA DIST NASHIK - 423301 - 423301 PH :9922969656.	SHRIRAMPUR 1901. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), S.NO.139/1/3, NEAR NAKA NO.4, SANGAMNER ROAD, SHRIRAMPUR DISTT. AHMEDNAGAR - 413709 PH :9420494543.
1868. SUMANKIRTI CARS PVT LTD (1915-19-02), SURVEY NO. 9, NEAR BALEWADI SPORTS STADIUM MUMBAI-BANGALORE HIGHWAYS, MAHALUNGE PUNE, MAHARASHTRA. - 411045 PH :8551990106.	RAMTEK 1880. SEVA AUTOMOTIVE PVT LTD (-01), MOUZA NO 275, P H NO 24, GRAM PANCHAYAT - MANSAR,TEHSIL - RAMTEK, DISTRICT - NAGPUR, MAHARASHTRA. - 441401 PH :7758028060.	SATARA 1892. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), PLOT NO. B-2,OLD MIDC,SATARA - 415002	SIKRAPUR
1869. MY CAR (PUNE) PVT LTD (1918-19-01), GAT NO. 625, HISSA NO. 1/3/1, VILLAGE - KURULI, TALUKA - KHED, CHAKAN, DISTRICT - PUNE. - 410501 PH :7755900000.	RATNAGIRI 1881. JAGRUT MOTORS PRIVATE LIMITED (-01), D-25, MIDC MIRJOLE, MAHARASHTRA,RATNAGIRI - 415639	SAVNER	
1870. WONDER CARS PVT LTD (1903-04), SURVEY NO. 20, HISSA NO. 1/1/2, THERGAON, BAL KRISHNA MANGAL KARYALAYA, TALUKA - MULSHI, DANGE CHOWK, PUNE - 411 033. - 411033 PH :7887883311.	ROHA 1882. EXCELL AUTOVISTA PRIVATE LIMITED (-01), SHOP NO. 1 & 2, PANCHARATNA APARTMENTS, ROHA, ROHA KOLAD ROAD, RAIGAD - 402109 PH :9209200073.		

1902. EXCELL AUTOVISTA PRIVATE LIMITED (-01), AT POST SHIKARPUR MALTHAN PHATA, OPP. CHAURASIYA CHANA CENTER, PUNE NAGAR ROAD, TALUKA SHIRUR, DIST. PUNE, PIN-412208, PUNE - 412208 PH :9146194973.

SILLOD

1903. PAGARIYA AUTO PVT LTD (2103-04), PLOT NO. 19/20, SURVEY NO. 386, AURANGABAD NAKA, SILLOD, AURANGABAD - 431112 PH :8600037213.

SINNAR

1904. SHAAN CARS PVT LTD (3703-03), A-24, MIDC AREA MALEGAON, SINNAR TAL- SINNAR., - 422103

SOLAPUR

1905. CHAVAN MOTORS DIVISION INDIA PVT LTD (-02), 150, AKALKOT ROAD, OPP. SVCS HIGH SCHOOL, SOLAPUR, - 413006

1906. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), 18.39, INDUSTRIAL ESTATE, HOTAGI ROAD, SOLAPUR, - 413224 PH :8805778881.

1907. CHAVAN MOTORS DIVISION INDIA PVT LTD (-06), PLOT NO.95, IND. ESTATE, HOTAGI ROAD, SOLAPUR, - 413003 PH :8805986826.

TALASARI

1908. SHIVAM AUTOZONE INDIA PVT LTD (-01), SURVEY NO. 19/11 PLOT NO. 5, AT-POST - VADAVALI, NH-8, TALASARI, THANE, MAHARASHTRA - 401606

TALEGAON DABHADE

1909. MY CAR (PUNE) PVT LTD (-01), SR.NO.113, HISSA NO.1/3/2/A, MUMBAI PUNE OLD HIGHWAY, MAVAL, TALEGAON - 410506 PH :8273085855.

TASGAON

1910. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), SHETKARI MARKET, NEAR ISHA HOTEL, TASGAON-SANGLI ROAD, TALUKA - TASGAON, DIST.-SANGLI. - 416312 PH :8275030748.

TEMBHURNI

1911. CHAVAN MOTORS DIVISION (I) PVT LTD (-01), GAT NO.560/2/A, OLD PUNE ROAD NEAR SUMAN THEATRE, TEMBHURNI - 413221

THANE

1912. PRAKASH AUTO PVT LTD (3903-39-01), U NO-3, SHEET NO. 30, VITHALWADI STATION ROAD, ULHASNAGAR - 421003

1913. FORT POINT AUTOMOTIVE CARS PVT LTD (3906-39-01), KOTHARI WAREHOUSE NO. 11, POKHRAN ROAD NO. 11, MANPADA, CHATLARSAR, THANE - 400607

1914. NAVNIT MOTORS PVT LTD (3908-39-02), B R T PLOT, THANE (W) MAHARASHTRA - 400607

1915. VELOX MOTORS PVT LTD (-02), NEW SURVEY NO. 17/1/B, NEAR BLUE ROOF CLUB, VILLAGE - OWALE, GHODBUNDER ROAD, THANE (W), - 400615

1916. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (3915-39-01), BRILLIANT COMPLEX, WESTERN EXPRESS HIGHWAY, MIRA ROAD, THANE- 401107 - 401107 PH :8591942704.

1917. VELOX MOTORS PVT LTD (3914-39-01), PLOT NO: A-66, ROAD NO 21, NEHRU NAGAR, WAGLE INDUSTRIAL ESTATE, THANE WEST, MAHARASHTRA - 400604

TITWALA

1918. AHER AUTOPRIME LLP (-01), SURVEY NO. 23/2, SHOP NO. 3, NEAR GOVELI, TITWALA ROAD, GHOTSAI, TITWALA, PIN-421301, MAHARASHTRA - 421301 PH :18008334369.

TRIMBAK

1919. SHAAN CARS PVT LTD (-01), SURVEY NO. 280/3, OPPOSITE MSEB OFFICE, NEAR GOVT. GEST HOUSE, SWAMI SAMARTH BUS STOP, TRIMBAKESHWAR-NASHIK HIGHWAY; AT POST/TAL: TRIMBAKESHWAR DIST: NASHIK PIN: 422212 - 422212

TUMSAR

1920. AUTOMOTIVE MANUFACTURERS PVT LTD (-01), GAT NOS. 1350/149 & 1350/150, VILLAGE TUMSAR, TQ TUMSAR, DIST.- BHANDARA, STATE-MAHARASHTRA - 441912 PH :7391075992.

ULWE

1921. MY CAR (PUNE) PVT LTD (-01), SURVEY NO- 97/8, HOUSE NO-1498, A/P JASAI, ULWE, TEHSIL-URAN, DIST-RAIGAD, PIN NO-410206 - 410206

UMADI

1922. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), 182/2, INDRAYANI SANKUL, JATH ROAD, UMADI, TALUKA-JATH, PIN-416413. - 416413

UMBRAJ

1923. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SHOP-4,5,6 - GANRAJ COMPLEX, GAT NO. -213, UMBRAJ, TAL-KARAD, DIST-SATARA - 415109

UNDRI, PUNE

1924. KOTHARI AUTO WHEELS PVT. LTD. (-07), 312/1/1, KATRAJ BYPASS ROAD, - OPP. INDIAN OIL PETROL PUMP, URALI - 412307

URALI KANCHAN

1925. EXCELL AUTOVISTA PRIVATE LIMITED (-01), GAT NO-244, VILLAGE-SORTAPWADI, TALUKA -HAVELI, URULI KANCHAN, DIST-PUNE, PIN-412201 - 412201 PH :8097452280.

VADUJ

1926. CHOWGULE INDUSTRIES PRIVATE LIMITED (-03), KALEVASTI, VADUJ DAHIWADI ROAD , VADUJ - 415506 PH :8888866659.

VAIJAPUR

1927. PAGARIYA AUTO PVT LTD (-01), NEAR SUBHASH BUNGLOW, STATION ROAD, VAIJAPUR, AURANGABAD. - 423701 PH :9922994237.

VASAI

1928. SAI SERVICE PRIVATE LIMITED (-01), ANDRADESH BHAVAN, SURVEY #27 A NEAR UMELA PHATAK, VASAI (WEST), DIST. THANE, MAHARASHTRA - 401202

1929. SAI SERVICE PRIVATE LIMITED (-03), C/O MR. KENNETH NICHOLAS D'SOUZA, SURVEY NO-89, SATVALI ROAD, VILLAGE-WALIV, VASAI (EAST), DIST-PALGHAR, MAHARASHTRA, PIN-410208 - 401208

1930. SAI SERVICE PRIVATE LIMITED (-04), SURVEY NO. 152, VASAI MUMBAI HIGHWAY, BEHIND INDIA OIL PETROL PUMP, SASUNAVGARH - 401208

VASIND

1931. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (-01), NISARG GARDEN RESORT, MUMBAI NASHIK HIGHWAY NH3,VASIND WEST, - 421601

VELHE

1932. SUMANKIRTI CARS PVT LTD (-01), MAUZA NO-492/2, A/P-VELHA, TAL- VELHA, DIST-PUNE-412212 - 412212

VIKRAMGADH

1933. SHIVAM AUTOZONE INDIA PVT LTD (-01), NEAR GOVERNMENT DISPENSARY HOSPITAL, DAHANU ROAD, TEHSIL-VIKRAMGADH, DIST-PALGHAR-401605 - 401605 PH :8082551080.

VIRAR

1934. SAI SERVICE PRIVATE LIMITED (-02), SURVEY NO 16, AGASHI ROAD, PADMAN NAGAR, VIRAR-WEST, DISTT. PALGHAR. - 401301

VITA

1935. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), S. NO. 900, HISSA NO. 1.2,3/1/2, SANGLI VITA ROAD, VITA, TALUKA - KHANAPUR, DISTRICT - SANGLI, MAHARASHTRA - 415311 PH :8888870120.

WADA

1936. SHIVAM AUTOZONE INDIA PVT LTD (-01), SURVEY NO-133/7/1, SAIKRUPA BUILDING, WADA-BHIWANDI ROAD, VILLAGE-GANDHARE, TAL-WADA, DIST -PALGHAR 421303. - 421303

WAGHOLI

1937. SAI SERVICE PRIVATE LIMITED (1901-04), GAT NO 2406/1440, VILLAGE- WAGHOLI, TAL- HAVELI, DIST- PUNE - 412207

WAI

1938. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO. 407, A/P SHENDURJANE, MIDC ROAD, NEAR HOTEL GANDHARVA, OPP. DHOM LEFT CANAL, TAL - WAI, DISTT. SATARA - 412803 PH :5380080501.

WALUJ

1939. PAGARIYA AUTO PVT LTD (2103-03), E-16, WALUJ AURANGABAD - 431001 PH :9860999466.

WARANANAGAR

1940. SAI SERVICE PRIVATE LIMITED (-01), GAT NO :1122/A, KODOLI, TALUKA: PANCHALA, DIST. KOLHAPUR - 416114 PH :9923204173.

WARDHA

1941. SEVA AUTOMOTIVE PVT LTD (2002-02), GOPURI CHOWK, OPP. BANK OF INDIA COLONY, NAGPUR ROAD, WARDHA - 442001

1942. SEVA AUTOMOTIVE PVT LTD (2002-05), PLOT NO. 177, WARDHA-NAGPUR HIGHWAY, AT. PAVNAR, TEHSIL - WARDHA, DIST.-WARDH, PIN-442111, MAHARASHTRA - 442111 PH :7720009444.

WARUD

1943. ASPA BANDSONS AUTO (P) LTD (-04), SURVEY NO. 50/3, SETURJANAGHAT ROAD, TALUKA: WARUD, DIST. AMRAWATI - 444906 PH :7248925687.

WASHIM

1944. ASPA BANDSONS AUTO (P) LTD (-02), NEAR RAILWAY CROSSING, HIGOLI ROAD, WASHIM, - 444505

1945. ASPA BANDSONS AUTO (P) LTD (-06), B-31, HINGOLI ROAD, MIDC-WASHIM, PIN-444505. - 444505

YAVATMAL

1946. HIMALAYA CARS (-01), OPPOSITE RAUT PETROL PUMP, DARWHA ROAD, YAVATMAL, MAHARASHTRA - 445001

YEOLA

1947. SEVA AUTOMOTIVE PVT LTD (-01), GAT NO. 65-A, PLOT NO. 41, AHMED NAGAR-MANMAD ROAD, NEAR TEHSIL OFFICE, YEOLA, TALUKA - YEOLA, DISTRICT - NASHIK, MAHARASHTRA. - 423401
PH :9130033944.

YEWAT

1948. MAHALAXMI AUTOMOTIVES PVT LTD (-01), SOLAPUR PUNE NATIONAL HIGHWAY, SAHAJAPUR, YEWAT, TALUKA: DAUND, DISTT: PUNE (MAHARASHTRA). - 412202
PH :8308818946.

MANIPUR

BISHNUPUR

1949. EASTERN MOTORS (-01), BISHNUPUR BAZAR, TIDIM ROAD, BISHNUPUR DISTT. MANIPUR. - 795126

CHANDEL

1950. EASTERN MOTORS (-01), KAKCHING LAMKHAJ, AH1 (INDO BURMA ROAD), CHANDEL (MANIPUR) - 795103

IMPHAL

1951. EASTERN MOTORS (7401-74-01), CHINGMEIRONG EAST, IMPHAL, MANIPUR - 795001
PH :8415945626.
1952. EASTERN MOTORS (7401-74-02), NH.39, CHINGMEIRONG, WEST, IMPHAL. - 795010
PH :8415945626.
1953. SAMADON ENTERPRISE (-01), 82 GHARI MAKHA LEIKAI, IMPHAL WEST, MANIPUR. - 795140
PH :7005987123.

JIRIBAM

1954. EASTERN MOTORS (-01), AT HILGHAT, IMPHAL SILCHAR ROAD, JIRIBAM - 788104
PH :8415945626.

MAYANG

1955. EASTERN MOTORS (-01), MAYANG IMPHAL, THANA-AWANG, LEIKAI, OPPOSITE PRABABATI COLLEGE, PIN-795132, MANIPUR - 795132

SENAPATI

1956. EASTERN MOTORS (-01), DIST.-COUNCIL (POULEA) VILLAGE, P.O. - SENAPATI, SENAPATI, MANIPUR. - 795106
PH :8415945626.

THOUBAL

1957. EASTERN MOTORS (-01), THOUBAL, ATHOKPAM KHUNOU, NEAR D.C. OFFICE COMPLEX, THOUBAL, MANIPUR - 795138

UKHRUL

1958. SAMADON ENTERPRISE (-01), KAMPHASOM, UKHRUL, MANIPUR - 795142
PH :9774216305.

MEGHALAYA

BHAITBARI

1959. RANI MOTORS (-01), NEW BHAITBARI, WEST GARO HILLS, MEGHALAYA, (PATTA NO - 89 SONG - NEKEKONA, MOZUZA NO - VI- 3 LOT) - 794104

BHOIRYMBONG

1960. RANI MOTORS (-01), VILLAGE - UMROI MADAN, DISTRICT - RI BHOI, MEGHALAYA. - 793103
PH :9774478281.

JOWAI

1961. RANI MOTORS (-01), LADTHADLABHO, OPP. PWD OFFICE, JOWAI, DIST - JAINTIA HILLS, MEGHALAYA - 793150
PH :7085849525.

KHLIEHRIAT

1962. BANALARI WORLD CARS (8502-03), JOWAI-SICHAR ROAD, MEGHALAYA, KHLIEHRIAT - 793150

MAWKYRWAT

1963. RANI MOTORS (-01), DAK BANGLA, MAWKYRWAT, WEST KHASI HILLS, MEGHALAYA - 793114
PH :9856005544.

MAWNGAP

1964. BANALARI WORLD CARS (-01), LAITPYNTER, SHILLONG NONGTION ROAD, MAWNGAP, DIST. -EAST KHASI HILLS, MEGHALAYA. - 793121

MOIRANG

1965. SAMADON ENTERPRISE (-01), MOIRANG LAISHANGBAM LEIKAI, PO AND PS: MOIRANG, DIST- BISHNUPUR, MANIPUR - 795133
PH :7005987122.

MYLLIEM

1966. BANALARI WORLD CARS (-01), MADANING SYIEM, MYLLIEM, SHILLONG CHERRAPUNJI ROAD, DISTT: EAST KHASI HILLS, MEGHALAYA. - 793009

NONGPOH

1967. RANI MOTORS (8501-05), NEAR D.T.O. OFFICE, G.S. ROAD, NONGPOH, RIBHOI DISTT. - 793102
PH :9774478281.

NONGSTON

1968. RANI MOTORS (8501-04), OPP.IRANI PETROL PUMP, NEW NONGSTEIN, DISTRICT-WEST KHASI HILLS ,MEGHALAYA - 793119
PH :9856005544.

PYNURSULA

1969. BANALARI WORLD CARS (-01), PHLANGSHLAIN MAIN ROAD, SHILONG DAWKI, PYNURSULA, DISTRICT - EAST KHASI HILLS, MEGHALAYA - 793110 - 793110
PH :8415942700.

SHILLONG

1970. RANI MOTORS (8501-85-01), SUNNY HILLS, GARIKHANA, G.S.ROAD, SHILLONG - 793014
PH :9862099400.
1971. RANI MOTORS (8501-85-02), MAWLBEI, NH-44, SHILLONG JOWAI ROAD, MEGHALAYA. - 793021
PH :9014734780.
1972. BANALARI WORLD CARS (8502-85-01), MAWLAI NONGKWAR, G.S. ROAD, SHILLONG - 793017

TURA

1973. RANI MOTORS (-01), AGILLANGRE, ARAIMILE, PO NEW TURA, TURA - 794101
PH :7005563791.

UMSAW

1974. BANALARI WORLD CARS (-01), UMSAWKHWAN RAID MAWBHU, MYLLIEM SYIEMSHIP, RI BHOI DISTRICT, MEGHALAYA. - 793123

MIZORAM

AIZWAL

1975. GIG MOTORS (9103-91-01), EDENTHAR, AIZAWL, MIZORAM. - 796001
PH :8974559065.

LUNGLEI

1976. GIG MOTORS (-01), RAMTHAR VILLAGE, LUNGLEI, DISTRICT-LUNGLEI, MIZORAM - 796701
PH :8974559065.

NAGALAND

DIMAPUR

1977. PROGRESSIVE MOTORS (3201-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR - 797112
PH :7005254089.

1978. SEIYE AUTO (-02), 6TH MILE, NEAR ESAF BANK, CHUMOUKEDIMA, DIMAPUR, NAGALAND - 797112

KOHIMA

1979. SEIYE AUTO PRIVATE LIMITED (-01), TSIECIE, NH-29, PHEK ROAD, KOHIMA, NAGALAND - 797001

MOKOKCHUNG

1980. PROGRESSIVE MOTORS (-01), SUNGKONMEN ROAD, MOKOKCHUNG, NAGALAND. - 798601
PH :87877325534.

TUENSANG

1981. PROGRESSIVE MOTORS (-01), YUNPHANG , TUENSANG - 798612

TULI

1982. SEIYE AUTO PRIVATE LIMITED (-01), TULIYONGWARD TULI TOWN NEAR CO. OPERATIVE BANK - 798618

WOKHA

1983. PROGRESSIVE MOTORS (-01), NIROPEN COLONY, WOKHA-797111, NAGALAND - 797111
PH :9774070707.

ODISHA

ANANDAPUR

1984. JYOTE MOTORS PVT LTD (-01), KHATA NO. 246/407, PLOT NO. 76, P.S. - GHASIPURA, MOUZA - SUDUSUDIA, DISTRICT - KEONJHAR, ANANDPUR, ODISHA. - 758021

ANGUL

1985. ODYSSEY MOTORS PVT LTD (-01), AT/PO KULAD (NEAR NALCO CPP PLANT), KANDASAR, NALCO NAGAR, ANGUL (DISTT: ANGUL). - 759145

ATTABIRA

1986. APARNAA MOTORS (A UNIT OF APARNAA VAHAN PVT LTD) (-01), LADERPALLI MAIN ROAD, ATTABIRA, DIST.BARGARH, - 768027

ATTAGARH

1987. TUSHI MOTORS PVT LTD (-01), KHATA NO 212/420, MOUZA :BIRAKISHOREPUR ATHAGARH, DISTRICT: CUTTACK - 754029
PH :7504890838.

BALASORE

1988. JYOTE MOTORS PVT LTD (-01), PLOT NO. 276, GANESHWARPUR-NH-5, POST-JANUGANJ VIA REMUNA, DIST.-BALASORE - 756019

BALIGUDA

1989. SKY AUTOMOBILES (-01), KHATA NO.-370/451, TEHSIL-K NUAGAN, GEGURPADAR, BALIGUDA, - 762103

BALUGOAN

1990. JYOTE MOTORS PVT LTD (-01), .M/S PLOT NO 758/31, KHATA NO 350/30, MOUZA-GOBARDHANPUR, BALUGOAN, DISTRICT-KHORDA, ODISHA-752030 - 752030
PH :9776615001.

BAMRA

1991. ODYSSEY MOTORS PVT LTD (-01), M/S ODYSSEY MOTORS, NEAR SATSANG KENDRA, DUMERUNDA COLLEGE ROAD, BAMRA, GOVINDPUR-768221 - 768221
PH :9439314464.

BANEI

1992. ORBIT MOTORS PVT LTD (-01), PLOT NO -1683/2508, BBABUNJAGAON, KHATA NO-177/66, UPARGADA-98, ODISHA - 770038

BARBIL

1993. JYOTE MOTORS PVT LTD (-01), PLOT NO. 507,SUNDARA, UNIT NO. 13,P.S. BARBIL, ODISHA - 758035

BARGARH

1994. ODYSSEY MOTORS PVT LTD (-04), AT/PO -BARGARH, NH-6, DISTT.-BARGARH, ORISSA - 768028
PH :8908944206.

BARIPADA

1995. JYOTE MOTORS PVT LTD (-02), PLOT NO. 90/523/904, SWARUP VILLA, NH-5, BARIPADA - 757001

BELPAHAR

1996. APARNAA MOTORS (A UNIT OF APARNAA VAHAN PVT LTD) (-01), NH 49,, MAHIMA CHOWK. - 768217

BERHAMPUR

1997. SKY AUTOMOBILES (-01), PLOT NO.80/1191 DHARMA NAGAR, MAIN ROAD, BERHAMPUR - 760002

1998. SKY AUTOMOBILES (-02), PLOT NO. 876, WESTERN ROW NH-5, KONISI HATO, VILLAGE – KONISI, BERHAMPUR, GANJAM, ODISHA. - 761008

BHADRAK

1999. JYOTE MOTORS PVT LTD (-01), PLOT NO. 14/4837, KHATA NO. 1345/1087, TRISHALPUR, CHAMPRA, BHADRAK , ODISHA - 756101

BHAWANIPATNA

2000. LEGEND CARS PRIVATE LIMITED (-02), NH-201, KESINGA ROAD, BHAWANIPATNA - 766001

BHUBANESHWAR

2001. NARAYANI MOTORS PVT LTD (-01), 217, CUTTACK ROAD, JHARPARA, BHUBANESHWAR - 751006

2002. JYOTE MOTORS PVT LTD (-01), A-62, NAYAPALLI,NEAR CRPF SQUARE, BHUBANESHWAR - 751003

2003. SKY AUTOMOBILES (-01), PLOT NO -435/1866, NEAR KIIT SQUARE PATIA, BHUBANESHWAR, - 751022

2004. NARAYANI MOTORS PVT LTD (-02), PLOT NO 56 AND 57,RASULGARH, BHUBANESHWAR, ODISHA - 751010

2005. JYOTE MOTORS PVT LTD (-04), PLOT NO. 22 & 23, SECTOR-A, ZONE-D, MANCHESWAR INDUSTRIAL ESTATE AREA, BHUBANESHWAR, - 751010

2006. SKY AUTOMOBILES (-02), KHATA NO. 457/875, PLOT NO. 543, 756, 789 AND 546, SRIVIHAR, INFRONT OF IOCL OFFICE, P.S. -CHADRASHEKARPUR, BHUBANESHWAR, ODISHA. - 751024

2007. JYOTE MOTORS PVT LTD (-01), A/62, NAYAPALLI,NH-5,BHUBANESHWAR,ORISSA-751 003 - 751003

2008. NARAYANI MOTORS PVT LTD (-03), KHATA NO-652,PLOT NO 4493, MAUZA PANDRA THANA-RASULGARH,BHUABNESHWAR - 751025

2009. JYOTE MOTORS PVT LTD (-05), PLOT NO. 219/1088, AT-BADADHANPUR, PO-SISHUPALGARH, PURI BYPASS ROAD, BHUBANESWAR, KHURDHA - 751002

BOLANGIR

2010. ODYSSEY MOTORS PVT LTD (-03), NH-201, MADHIAPALI, SAMBHALPUR ROAD, BOLANGIR, ORISSA - 767001
PH :8895418122.

BOUDH

2011. ODYSSEY MOTORS PVT LTD (-01), BOLANGIR MAIN ROAD,BIJU PATNAIK CHOWK, NEAR SARASWATI PETROL PUMP,BOUDH - 762014

CHANDIKHOLE

2012. SKY AUTOMOBILES (-01), PLOT NO.285/3, SHANTI MANDAP MOUZA -SUNGUDA, TEHSIL-DARPANI, PO CHANDIKHOL, DIST. -JAJPUR, ODISHA. - 755044

CUTTACK

2013. SKY AUTOMOBILES (6701-67-02), BHANPUR, NH-5, CUTTACK - 753011

2014. TUSHI MOTORS PVT LTD (6702-01), PLOT NO. C-14, PLOT NO C-13, INDUSTRIAL ESTATE ,KHAPURIA,TAHASIL - CUTTACK SADAR ,CUTTACK DISTRICT,BHUBANESWAR - 753001
PH :9692912345.

2015. SKY AUTOMOBILES (6701-67-07), LAXMINAGAR BIDANASI - 753014

DEOGARH

2016. ORBIT MOTORS PVT LTD (-01), KHATA NO. 270, OI MOUZA, DEOGARH, ODISHA - 768108

DHENKANAL

2017. SKY AUTOMOBILES (6701-04), PLOT NO-136/1103, KATHAGARA , NEARASSAM OIL, NH-42, DHENKANAL. - 759001

DUNGURIPALI

2018. APARNAA MOTORS (A UNIT OF APARNAA VAHAN PVT LTD) (-01), NH-26, BARGARH-BOLANGIR HIGHWAY, , DUNGURIPALI, DIST.SONEPUR, ODISHA - 767023

GANDAI

2019. SPARSH AUTOMOBILES PVT LTD (-01), M/S SPARSH AUTOMOBILES ,WARD NO – 7, NEAR KRISHI UPAJ MANDI, GANDAI RAJNANDGAON ROAD,GANDAI – 491888 - 491888
PH :9926626662.

JAGATSinghpur

2020. NARAYANI MOTORS PVT LTD (-01), KHATTA NO. 827/221 & 827/222, PLOT NO. 1197 & 1199/3065, MOUZA-MARKHANDPUR, PO PUNABGA, DISTT. JAGATSinghpur, ODISHA - 754103

JAJPUR

2021. SKY AUTOMOBILES (6701-05), P.O JAHNA, P.S KORAI, KEONJHAR ROAD, JAJPUR, ORRISSA - 7553019

JALESWAR

2022. JYOTE MOTORS PVT LTD (-01), KHATA NO. 422/744, PLOT NO. 2304 AT P.O. - NAYABAZAR, JALESWAR, DIST. - BALASORE, ODISHA. - 756032

JEYPORE

2023. LEGEND CARS PRIVATE LIMITED (-03), SOURAGUDA,JEYPORE,DISTT-KORAPUT,ORISSA ,INDIA - 764001

JHARSUGUDA

2024. ODYSSEY MOTORS PVT LTD (-01), KHATA NO. 466/502, PLOT NO. 966, JHARSUGUDA TOWN, UNIT NO. 7, SARBAHAL P.S. JHARSUGUDA, ORISSA - 768201

KAMAKHYANAGAR

2025. SKY AUTOMOBILES (-01), ALUTAMA, KAMAKHYANAGAR, DHENKANAL ODISHA - 759018

KANTABANJHI

2026. ODYSSEY MOTORS PVT LTD (-01), SH-42, UDING, KANTABANJHI, ODISHA-767039 - 767039

KARANJIA

2027. JYOTE MOTORS PVT LTD (-01), KARANJIAGOLEI., KARANJIA,MAYURBHANJ, - 757037

KENDRAPARA

2028. JYOTE MOTORS PVT LTD (-01), M/S JYOTE MOTORS, KHATA NO: 351/85, PLOT NUMBER 633, MOUZA-ALBANKA, KENDRAPARA, ODISHA. - 754208
PH :9776615001.

KEONJHAR

2029. JYOTE MOTORS PVT LTD (-01), NH 215, DHRUPADA, BARBIL ROAD, KEONJHAR. - 758001

KUCHINDA

2030. ODYSSEY MOTORS PVT LTD (-01), /S ODYSSEY MOTORS, PLOT NO 146,KHATA NO 76/9,MOUZA-KUNDAPOSHI,NEAR KUNDESHWAR MANDIR,KUCHINDA,SAMBULPUR. - 768222
PH :9439314464.

NABRANGPUR

2031. LEGEND CARS PRIVATE LIMITED (-01), KHATA NO 204/155, PLOT NO 202, DHARNABDA MOUZA, NABRANGPUR ODISHA - 764059

NAYAGARH

2032. JYOTE MOTORS PVT LTD (-02), PLOT NO. 1319/3750, KHANDAPADA, NAYAGARH - 752069

NETAJI NAGAR,CUTTACK

2033. TUSHI MOTORS PVT LTD (-02), PLOT NO- 819/1021, MOUZA-UNIT 39,, NETAJI NAGAR - 753014

NIMPARA

2034. NARAYANI MOTORS PVT LTD (-01), PLOT NO. 345/1344, GANESH BAZAR, NIMAPARA, DISTRICT – PURI, ODISHA. - 752106

NIRGUNDI

2035. NARAYANI MOTORS PVT LTD (-04), KHATA NO 251/255, PLOT NO 233,MALGOWDINI-MOUZA BLITERUA, NIRGUNDI,DISTRICT-CUTTACK, ORISSA - 754025

PADAMPUR

2036. ODYSSEY MOTORS PVT LTD (-01), M/S ODYSSEY MOTORS, CHARPALLI,PADAMPUR, NEAR REGENCY HOTEL,DISTRICT:BARGARH, ORISSA - 770039
PH :9439314464.

PALLAHARA

2037. ODYSSEY MOTORS PVT LTD (-01), KHATA NO. 260, PLOT NO. 998/3720, PAHALLARA, ODISHA. - 759119

PANCHGAON

2038. ODYSSEY MOTORS PVT LTD (-01), KHATA 66/136 BEARING PLOT NO. 565/980 (4 SHOPS) KISAM -GHARABARI,MOUZA PANCHGOAN ,TAHSIL -LAKHANPUR ,DIST-JHARSUGUDA, ODISHA - 768226

PANIKOLI

2039. TUSHI MOTORS PVT LTD (-01), PLOT NO. 3211/3776, AT-SOTI, PO-PANIKOILI - 755043

PARADEEP

2040. NARAYANI MOTORS PVT LTD (-01), PLOT NO. 1438, UDAYA VIHAR, NEAR DO CHOWKI SQUARE, PARADEEP, ODISHA. - 754141

PARLAKHEMUNDI

2041. SKY AUTOMOBILES (-01), PLOT NO. 273, KHATA NO. 78, WARD NO. 1, PARLAKHEMUNDI, GAJAPATI, ORISSA. - 761211
PH :9776999977.

PHULBANI

2042. SKY AUTOMOBILES (-01), PLOT NO. 54/533, GUDRISAIHI, KHAJURIAPADA,DISTRICT – KANDHAMAL ODISHA. PIN CODE: 762001 - 762001
PH :9776900333.

PURI 2043. NARAYANI MOTORS PVT LTD (-01), PLOT NO.1797/2449, KHATA NO.187A/32, AT. BATAMANGLA,PO HAREKRISHNAPUR, BATAGAON, PURI, ODISHA - 752002	TANGI 2055. SKY AUTOMOBILES (-01), KHATA NO 731/18, PLOT NO.107,CHAMPAGARH NH 5,TANGI, DISTRICT - KHORDHA, - 752023 PH.9776900333.	2065. SWANI MOTORS PVT LTD (-01), KHASRA NO. 71, AJNALA-AMRITSAR ROAD, VILLAGE - BHARKA TARA SINGH, TEHSIL - AJNALA, DISTRICT - AMRITSAR, PUNJAB. - 143102 PH.8872001731.	2075. LOVELY AUTOS (3503-03), NAWASEHAR-JALANDHAR ROAD, BANGA - 145405 PH.9915028625.
RAIRANGPUR 2044. JYOTE MOTORS PVT LTD (-01), PLOT NO.1077/2466, PURNAGHATI, RAIRANGPUR, DISTT: MAYURBHANJ, ODISHA - 757046	TIRTOL 2056. NARAYANI MOTORS PVT LTD (-01), TIRTOL ,JADATIRA - 754137	AMRITSAR 2066. SWANI MOTORS PVT LTD (1701-17-01), 81,COURT ROAD, AMRITSAR - 143001 2067. JAYCEE MOTORS PVT LTD (1704-17-01), 274 EAST MOHAN NAGAR, G.T.ROAD, AMRITSAR - 143009 PH.9780038335.	BANUR 2076. TRICITY AUTOS (-01), SANDHU MARKET NEAR SALES TAX BARRIER, BANUR RAJPURA HIGHWAY, BANUR, PUNJAB - 140601 PH.9988882330.
RAYAGADA 2045. LEGEND CARS PRIVATE LIMITED (-01), M/S LEGEND CARS, JK PUR ROAD, KOMTALPETA, NEAR ENFIELD SHOWROOM, RAYAGADDA, ODISHA - 765001 PH.7008771180.	TITLAGARH 2057. ODYSSEY MOTORS PVT LTD (-01), M/S PLOT NO 687/1216, MOUZA PIPALPADAR, TITLAGARH,BALANGIR, ODISHA - 767033 PH.9439314464.	2068. RISHABH FOURWHEELS PVT LTD (1703-17-01), ADARSH SOAP COMPLEX, BATALA ROAD, AMRITSAR - 143004 PH.9914841577.	BARNALA 2077. MAX AUTOMOBILES (-01), NR. HANDIYAN CHOWK,MANSA BYE PASS,BARNALA,PUNJAB - 151001
ROURKELA 2046. ORBIT MOTORS PVT LTD (8701-87-01), VEDVYAS, NEAR PAAHADI BAR, ROURKELA,ORRISA - 769041	UDALA 2058. JYOTE MOTORS PVT LTD (-01), MOUZA - UDALA, TOWN UNIT NO. 7, NAGBANI, TEHSIL NO. 325, THANA NO. 110, DIST.-MAYURBHANJ, ODISHA - 757041 PH.8249877935.	ANANADPUR SAHIB 2069. CM AUTO SALES PVT LTD (-01), VILLAGE MIYANPUR, NAINA DEVI ROAD, ANANADPUR SAHIB,TEHSIL ANANADPUR SAHIB, DISTT. ROPAR,PUNJAB - 140123 PH.9915022897.	BATALA 2078. PATHANKOT VEHICLELEADS PVT LTD (-05), NEAR VMS INSTITUTE, SAID MUBARAK, GT ROAD, BATALA - 143505
SAMBHALPUR 2047. ODYSSEY MOTORS PVT LTD (-01), AINTHAPALI, SAMBALPUR, ORISSA - 768004 PH.7381083571.	KARAIKAL 2059. SHENBAKA CARS PVT LTD (-01), R. S. NO. 173/3PT, T. S. NO. 9/5, WARD, L-BLOCK, NO. 3, KARAIKAL NAGORE MAIN ROAD, VILLAGE - ODUTHURAI REVENUE, NERAVY COMMUNE, KARAIKAL MUNICIPALITY, KARAIKAL - 609602	APRA 2070. LOVELY AUTOS (-01), SAMRAI CHOWK PHILLIAUR ROAD, VILLAGE - APRA, TEHSIL - PHILLIAUR, DIST.-JALANDHAR, STATE - PUNJAB. - 144416 PH.9915020515.	BEGOWAL 2079. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), PELIA TOWN, BHADAS ROAD, WARD NO. 11, JALANDHAR ROAD, VPO. BEGOWAL, KAPURTHALA, PIN-144621, PUNJAB - 144621 PH.9779166004.
SEMILIGUDA 2049. ODYSSEY MOTORS PVT LTD (-05), ODYSSEY MOTORS, AINTHAPALI, SAMBHALPUR 2050. LEGEND CARS PRIVATE LIMITED (-01), 1231/2076,KHATA NO 113/1503, MOUZA:LUNGURI,SEMILIGUDA - 764036	PONDICHERRY 2060. SHENBAKA CARS PVT LTD (-02), SURVEY NO # RS.NO.252, DOOR NO:192, VARICHICKUDY VILLAGE, PORAYAR SALAI,KARAIKAL, PONDICHERRY-609 609 - 609609	AUR 2071. LOVELY AUTOS (-01), KHATUNI NO. 479/588, KHASRA NO. 27/20/04(2-18), 21/2(2-10), VILLAGE - AUR, TEHSIL - NAWASHAR, DIST.-SBS NAGAR, STATE - PUNJAB. - 144417 PH.9915020510.	BHADSON 2080. HIRA AUTOMOBILES LTD (-01), VILLAGE CHASWAL, NABHA ROAD, BHADSON - 147202
SOHELA 2051. ODYSSEY MOTORS PVT LTD (-01), KHATA NO 325/892, PLOT NO 396.7579, KISAM-GHARABARI, MOUZA-SOHELA, DIST-BARGARH, ODISHA - 768033	MADAGADIPET 2061. SHENBAKA CARS PVT LTD (-01), SURVEY NO. 129/4/A/2, MADAGADIPET REVENUE VILLAGE, MADAGADIPET, PONDICHERRY - 605107 PH.8220046178.	BAGHA PURANA 2072. REMIRA MOTORS PVT LTD (-01), BUILDING NO.68, OPP. SHINA ENCLAVE, MOGA ROAD, BAGHA PURANA, DISTT. MOGA, PIN-142038 - 142038 PH.7087025009.	BHAGTA BHAI KA 2081. TARA AUTOMOBILES (-01), NEAR SARPANCH HOUSE, BHAGTA BHAI KA, DISTRICT - BHATINDA, - 151206 PH.8437030666.
SORO 2052. JYOTE MOTORS PVT LTD (-01), PLOT NO 15/1269,KHATA NO 442, SORO, BALASORE, ODISHA STATE, - 756045 PH.9776615001.	PONDICHERRY 2062. SHENBAKA CARS PVT LTD (9601-96-01), 133/1A, MOOLAKULAM, VILLUPURAM MAIN ROAD, PONDICHERRY - 605010	BALACHAUR 2073. LOVELY AUTOS (-01), NEAR MCDONALD - GHUGGI JUNCTION), VPO-GARHI KANUGO, NAWANSHAHR CHANDIGARH HIGHWAY, CHANDIGARH ROAD, BALACHAUR, DISTRICT-S.B.S NAGAR, PUNJAB (NAWANSHAHR) - 144521	BHATINDA 2082. TARA AUTOMOBILES (7002-70-01), MANSA ROAD, OPP. I.T.I, BATHINDA - 151001
SUBARNAPUR 2053. ODYSSEY MOTORS PVT LTD (-01), KHATA NO. 32, MOUZA - SANJHINIK, SONEPUR (ALSO KNOWN AS SUBARNAPUR), DISTRICT - SUBARNAPUR, ODISHA - 767017	PUNJAB ABOHR 2063. TARA AUTOMOBILES (-01), SHREE GURU JAMBHESHWAR CHOWK, MALOUT SHREE GANGA NAGAR BYPASS, ABOHR, PUNJAB - 152116 PH.9876047847.	BALBEHRA 2074. DIVINE AUTOWORLD LLP (-01), NEAR HDFC BANK LTD., SAMANA ROAD, BALBEHRA - 147101 PH.9888341118.	BHOGPUR 2084. LOVELY AUTOS (-01), KHASRA NO. 31/114, 17/2 18/2 23, MAIN JALANDHAR-PATHANKOT HIGHWAY,OPP- AJIT PALACE, BHOGPUR - 144201
SUNDERGARH 2054. ORBIT MOTORS PVT LTD (-01), M/S ORBIT MOTORS, AT - PATRAPALI, PO SUNDERGARH, BY PASS ROAD, NEAR BJP OFFICE, SUNDERGARH - 770001 PH.8249354447.	ADAMPUR 2064. LOVELY AUTOS (-01), KHASRA NO.10/7/1, JALANDHAR-HOSHARPUR HIGHWAY, ADAMPUR DISTT. JALANDHAR - 144102	BANGA	BILGA

2086. LOVELY AUTOS (-01), VPO BILGA, NEAR GOVT. PRIMARY SCHOOL, TEHSIL PHILLAUR, JALANDHAR. - 144036 PH :9815069814.	2097. PLUTON DREAMWORKS PRIVATE LIMITED (-01), MOGA ROAD, NEAR HARYALI PETROL PUMP FEROZPUR PUNJAB - 152001	2108. TARA AUTOMOBILES (-02), F.F. ROAD, NEAR THANA SADAR, JALALABAD - 152024 PH :9876047847.	2119. JAYCEE MOTORS PVT LTD (-01), KHASRA NO.12/202, 21/1 KHATA NO.212/186/229 GILL KHETI STORE, GT ROAD, VILLAGE-KATHUNANGAL, DISTT. AMRITSAR, PUNJAB - 143502
CHUNNI KALAN	GARSHANKAR	JALLANDHAR	KHANNA
2087. HOSHIARPUR AUTOMOBILES (-01), NEAR RAJINDER MOTORS, SIRHIND-CHANDIGARH ROAD, VILLAGE CHUNNI, DIST. FATEHGARH SAHIB. - 140307	2098. HOSHIARPUR AUTOMOBILES (-02), OPP. COURT, CHANDIGARH ROAD, GARSHANKAR, DIST. HOSHIARPUR - 144527	2109. LOVELY AUTOS (3503-35-01), DR. AMBEDKAR CHOWK, JALANDHAR CITY - 144001 PH :9915020515.	2120. HOSHIARPUR AUTOMOBILES (-01), VILLAGE-KAUNI, NEAR GILL PETROL PUMP, GT ROAD, KHANNA, DIST.-LUDHIANA, PUNJAB. - 141401 PH :9888716261.
DASUA	GHANAUR	JALANDHAR	KHARAR
2088. HOSHIARPUR AUTOMOBILES (-04), OPP CHEEMA PETROL PUMP, G.T. ROAD, DASUYA - 144205	2099. DIVINE AUTOWORLD LLP (-01), WARD NO. 1, OPPOSITE OLD PETROL PUMP GHANAUR PATIALA ROAD, SUB TEHSIL - GHANAUR, TEHSIL - RAJPURA, DIST.-PATIALA, STATE - PUNJAB. - 140401 PH :9217048437.	2110. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (3506-35-01), OPP DPS SCHOOL, G.T. ROAD, JALANDHAR - 144010 PH :9779166004	2121. CM AUTO SALES PVT LTD (-03), NH-95, MORINDA ROAD, KHANPUR, KHARAR. DIST. MOHALI - 140301 PH :9915022878.
DERABASSI	GHAROTA	JALANDHAR, PUNJAB. - 144001	KOTKAPURA
2089. AUTOPACE NETWORK PVT LTD (-02), AT NH-2, NEAR DERABASSI, TOLL BARRIER-DERABASSI - 140507	2100. PATHANKOT VEHICLEADES PVT LTD (-01), VILLAGE AND PO GHAROTA, OPPOSITE PUNJAB GRAMIN BANK, TEHSIL & DISTT. PATHANKOT - 143533. - 143533 PH :8264105000.	JANDIALA GURU	2122. MAPSKO AUTO INDIA PVT LTD (-01), MOGA ROAD, NEAR GREEN DHABA OPPOSITE FUN PLAZA, KOTKAPURA, DISTRICT - FARIDKOT - 151204 PH :7347000518.
DEVIGARH	GHOMAN	JANDIALA MANJKI	LALRU
2090. HIRA AUTOMOBILES LTD (-01), CHANNA MOUR, PEHOWA PATIALA ROAD, DEVIGARH, DISTT. PATIALA (PUNJAB). - 147111	2101. PATHANKOT VEHICLEADES PVT LTD (-01), KHEWAT NO. 36, KHATAUNI NO. 122, KHASRA NO. 11/25 (7-18), VILLAGE - BALRAMPUR ADDA, KHASBA - GHOMAN - 143514 PH :8054500130.	2112. BABA AUTOS (-01), GT ROAD, NEAR TARN TARAN BYE PASS, JANDIALA GURU - 143115	2123. AUTOPACE NETWORK PVT LTD (-01), VILLAGE - LALRU, DERA BASSI, SAS NAGAR MOHALI, PUNJAB. - 140501 PH :9815011669.
DHARAMKOT	GORAYA	JHANJERI	LUDHIANA
2091. REMIRA MOTORS PVT LTD (-01), JOSAN MARKET, DHARAMKOT, MOGA - 142042	2102. LOVELY AUTOS (-01), NEAR MILAN PALACE, G.T. ROAD, GORAYA. - 144409 PH :9417804049.	2114. AUTOPACE NETWORK PVT LTD (-01), STATE HIGHWAY 12A, JHANJERI, SAHIBZADA AJIT SINGH NAGAR, - 140307	2124. GULZAR MOTORS PVT LTD (6204-01), G.T.ROAD, DHOLEWAL, OPP. MILITARY CARMF, LUDHIANA - 141003 PH :9814160099.
DHILWAN	GURDASPUR	KAHNUWAN	2125. SANDHU AUTOMOBILES PVT LTD (6206-01), DHOLEWAL CHOWK, LINK ROAD, LUDHIANA - 141203 PH :9815600095.
2092. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), MIANI BAKARPUR,AMRITSAR ROAD, OPP-INDIAN OIL PETROL PUMP, DHILWAN DISTT KAPURTHALA - 144804 PH :9779166004.	2103. PATHANKOT VEHICLEADES PVT LTD (-03), V.P.O. BABRI NH-15, DIST. GURDASPUR - 143521	2115. PATHANKOT VEHICLEADES PVT LTD (-01), KHASRA NO.606, VPO-KAHNUWAN, THE. & DISTT. GURDASPUR. - 143528 PH :8288993301.	2126. LOVELY AUTOS (6209-01), BABA NAND SINGH NAGAR, NEAR AYALLI CHOWK, FEROZEPUR ROAD, LUDHIANA - 141001 - 141001
DORAHU	2104. PATHANKOT VEHICLEADES PVT LTD (-06), VPO - JEEWANWAL BABRI, NH-15, GURDASPUR (PUNJAB) - 143521 PH :9417900870.	KALA SANGHAN	2127. LOVELY AUTOS (-62-02), GILL ROAD, NEAR CANAL BRIDGE, LUDHIANA, PUNJAB
2093. GULZAR MOTORS PVT LTD (-01), G.T. ROAD, NEAR ARRICHAN CHOWK, DORAHU, DISTT. LUDHIANA, PUNJAB. - 141421 PH :9814191122.	HOSHIARPUR	2116. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), MAIN CHOWK, KALA SANGHAN, DISTRICT KAPURTHALA, PUNJAB - 144623 PH :9779166004.	2128. LOVELY AUTOS (6209-03), OPPOSITE BHAI BALA SAHIB GURUDWARA, VILLAGE DAD, PAKHOWAL ROAD, LUDHIANA, PIN-141001, PUNJAB - 141001 PH :9815069814.
FARIDKOT	2105. HOSHIARPUR AUTOMOBILES (-01), SINGRIWALA, JALLANDHAR ROAD, HOSHIARPUR. - 146001	KALANAUR	2129. LOVELY AUTOS (6209-62-04), EURO MART COMPLEX, HAMBRAN ROAD, NEAR RADHA SWAMI SATSANG BHAWAN - 141008 PH :9815069814.
2094. MAPSKO AUTO INDIA PVT LTD (-01), FARIDKOT- KOTKAPURA ROAD, FARIDKOT, PUNJAB - 151204	JAGRAON	2117. PATHANKOT VEHICLEADES PVT LTD (-01), KALANAUR-GURDASPUR ROAD, VILLAGE KALANAUR, TEHSIL AND DISTRICT GURDASPUR, PUNJAB - 143512 PH :9717900879.	2130. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (6210-62-01), GT ROAD, OPPOSITE GOYAL HYUNDAI, VILLAGE DHANDHARI KHURD, LUDHIANA, DISTRICT - LUDHIANA, PUNJAB - 141010 PH :8054399990.
FATEHGARH CHURIAN	2106. SANDHU AUTOMOBILES PVT LTD (6206-05), NATIONAL HIGHWAY-64, JAGRAON - 142026 PH :8437025969.	KAPURTHALA	
2095. PATHANKOT VEHICLEADES PVT LTD (-01), KHASRA NO. 17 R. DERABABA NANAK ROAD, FATEHGARH CHURIAN, TEHSIL - BATALA, DIST. -GURDASPUR, STATE - PUNJAB. - 143602	JAITU	2118. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), SIDHU COMPLEX, CIRCLE ROAD - KAPURTHALA, PUNJAB - 144602 PH :9779166004.	
FAZILKA	2107. MAPSKO AUTO INDIA PVT LTD (-01), NEAR CANAL, BATHINDA ROAD, JAITU, DISTRICT - FARIDKOT. - 151202 PH :7347000520.	KATHU NANGAL	
2096. TARA AUTOMOBILES (-03), NH-10, NEAR SARVHTIKARI BAL VIDYA MANDIR, FAZILKA - 152116 PH :9876047847.	JALALABAD-PB		
FEROZPUR			

2131. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (6210-62-02), OPP SBI BANK , JAMALPUR, CHANDIGARH ROAD, LUDHIANA - 141010	MUKTSAR 2144. PLUTON DREAMWORKS PRIVATE LIMITED (-01), NEAR SSP OFFICE, BATHINDA ROADSRI MUKTSAR SAHIB - 152026	2158. DIVINE AUTOWORLD LLP (-63-02), BHARAT NAGAR,PATIALA-NABHA ROAD, PATIALA - 147001	2170. HIRA AUTOMOBILES LTD (-01), KEWAT NO. 948/950, KHATUNI NO. 1427, KHASRA NO. 101/27(4-7), PATIALA SAMANA ROAD, SAMANA, DIST.-PATIALA, STATE PUNJAB - 147101 PH :9217048236.
2132. LOVELY AUTOS (6211-62-01), 2716/1, GURDEV NAGAR, NEAR FEROZ GANDHI MARKET, LUDHIANA, PUNJAB - 141001	MULLANPUR 2145. SANDHU AUTOMOBILES PVT LTD (-01), OPPOSITE DHAKA ROAD, FEROZEPUR ROAD, MULLANPUR - 141101	PATRAN 2160. HIRA AUTOMOBILES LTD (6302-02), NARWANA ROAD, PATRAN, PUNJAB, - 147105	SANGRUR 2171. MAX AUTOMOBILES (-01), DHURI ROAD, SANGRUR, - 148024
MACHIWARA 2133. HOSHIAURPUR AUTOMOBILES (-01), SAMRALA ROAD, MACHIWARA, NEAR SHEEVA MARRIAGE PALACE - 141115 PH :9875900147.	MULLANPUR GARIBDASS 2146. NAVDESH AUTOS LLP (-01), H NO. 341, POST OFFICE - MULLAPUR GARIBDASS, TEHSIL - MAJRI, DIST.-SAS NAGAR, STATE - PUNJAB. - 140901 PH :8872004676.	PATTI 2161. JAYCEE MOTORS PVT LTD (-01), KHASRA NO. 64/19/2/1 KA 16/49 & KHASRA NO. 64/20 KA 29/94, NEAR RADHA SWAMI, TARN TARAN ROAD, VILLAGE - PATTI, DISTT.-TARN TARAN, PUNJAB. - 143416 PH :9780038335.	SHAHKOT 2172. LOVELY AUTOS (-01), PUBLIC SCHOOL ROAD, SHAHKOT, DISTRICT - JALANDHAR, PUNJAB. - 144702
MAHILPUR 2134. HOSHIAURPUR AUTOMOBILES (-05), NEAR NEW BUS STAND, CHANDIGARH ROAD, MAHILPUR, DIST. HOSHIAURPUR - 146105 PH :9914720424.	NABHA 2147. HIRA AUTOMOBILES LTD (6302-06), RADHA SWAMI ROAD, NABHA - 147201	PHAGWARA 2162. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), PLOT NO-62, INDUSTRIAL AREA, NEAR JCT BRIDGE LUDHIANA - 141001 PH :9779166004.	SIRHIND 2173. HOSHIAURPUR AUTOMOBILES (-01), KHEWAT KHATONI NO. 802/1049 & 821/1070 KHEWAT KHAS NO. 43/1/2/1 (1-0), BESIDE SBI BANK, BASSI ROAD, SIRHIND, TEHSIL AND DISTRICT - FATEHGARH SAHIB - 140406
MALERKOTLA 2135. MAX AUTOMOBILES (-01), MALERKOTLA-LUDHIANA MAIN ROAD, VILLAGE - BHOGIWA, MALERKOTLA, DIST.-SANGRUR, PUNJAB - 148023	NAKODAR 2148. LOVELY AUTOS (3503-04), JALANDHAR ROAD, NEAR MALARI GATE, NAKODAR - 144040	PHILLAUR 2163. LOVELY AUTOS (-01), OLD NAWANSHAHR ROAD CIVIL LINE, PHILLAUR, DISTRICT JALANDHAR - 144410 PH :9815069814.	SULTANPUR LODHI 2174. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), NEAR TALWADI BRIDGE, TALWADI ROAD, SULTANPUR LODHI, DISTRICT -KAPURTHALA - 144626 PH :9779166004.
MANDI GOBINDGARH 2136. HOSHIAURPUR AUTOMOBILES (-01), PLOT GOYAL MOTORS, NEAR YES BANK, MANDI SIRHIND ROAD, NH-1, MANDIGOBINDGARH, PUNJAB. - 147301	NANGAL 2149. CM AUTO SALES PVT LTD (-02), PLOT#36,AJOLI MOR, FOCAL POINT INDUSTRIAL AREA, NAPA NANGAL PUNJAB - 140126 PH :9592916811.	POHIR 2164. LOVELY AUTOS (-01), LUDHIANA-MALERKOTLA ROAD, NEAR SODHI MARRIAGE PALACE, POHIR, DISTRICT LUDHIANA, PUNJAB. - 141204 PH :9915020513.	SUNAM 2175. MAPSKO AUTO INDIA PVT LTD (-01), BHATINDA ROAD, SUNAM, DISTRICT - SANGRUR SUNAM, PUNJAB - 148028
MANSA 2137. TARA AUTOMOBILES (7002-02), BALATA ROAD, NEAR ARVIND NAGAR, MANSA , PUNJAB - 151505	NAWANSHAHR 2150. LOVELY AUTOS (3503-02), NAWANSHAHR CHANDIGARH ROAD, VILL.- LANGROHA, DISTT:- NAWANSHAHR, PUNJAB - 144514 PH :9915028682.	RAIKOT 2165. GULZAR MOTORS PVT LTD (-01), BARNALA BY PASS ROAD, RAIKOT - 141109 PH :9814160099.	TALWANDI BHAI 2176. PLUTON DREAMWORKS PRIVATE LIMITED (-01), MOGA ROAD,, NEAR FUN ISLAND, - 142050
MOGA 2138. REMIRA MOTORS PVT LTD (-01), INDUSTRIAL AREA, OPPOSITE ITI, GT ROAD, MOGA - 142001 PH :7087025402.	NIHAL SINGH WALA 2151. REMIRA MOTORS PVT LTD (-01), BARNALA ROAD, NEAR DEAR BABA SEWA DASS, TEHSIL-NIHALSINGHWALA, DIST.-MOGA. - 142055 PH :7067025009.	RAMPURA PHUL 2166. DIVINE AUTOWORLD LLP (-01), VILLAGE BADHAK, RAJPUR PATIALA ROAD, RAJPURA - 140401	TALWANDI SABO 2177. TARA AUTOMOBILES (-01), TALWANDI RAMA MAIN ROAD, NEAR VILLAGE-JAJJAL, RAMAMANDI,TALWANDI SABO, BHATINDA - 1551302
MOHALI 2139. NAVDESH AUTOS LLP (-01), PLOT NO.C-89, INDUSTRIAL AREA, PHASE-7, MOHALI - 160059 PH :8872016453.	PATHANKOT 2152. PATHANKOT VEHICLEADES PVT LTD (-01), NEAR MAAMON CHOWK, DALHOUSEIE ROAD, PATHANKOT, - 145001	RAYYU 2167. TARA AUTOMOBILES (-01), RAMPURA -BARNALA ROAD, RAMPURA PHUL - 151103	TALWARA 2178. HOSHIAURPUR AUTOMOBILES (-07), DAM ROAD, NEAR KALI MATA MANDIR, VILLAGE-NAGAR, TALWARA, PUNJAB - 144216
MOONAK 2140. CM AUTO SALES PVT LTD (-03), PLOT NO. B-64, INDUSTRIAL AREA PHASE-7, MOHALI - PUNJAB - 140110	2153. PATHANKOT VEHICLEADES PVT LTD (-04), NEAR A. B. COLLEGE, PATAHANKOT - 145001	RAJPURA 2168. DIVINE AUTOWORLD LLP (-01), VILLAGE BADHAK, RAJPUR PATIALA ROAD, RAJPURA - 140401	TANDA 2179. HOSHIAURPUR AUTOMOBILES (-06), VILL. PULPUKHATA, MIAMI ROAD, TANDA - 144203
MOHINI 2141. MAPSKO AUTO INDIA PVT LTD (-01), PATRAN ROAD, MOONAK, PUNJAB - 148028	2154. PATHANKOT VEHICLEADES PVT LTD (-07), PLOT NO. 58-C, 59-C, INDUSTRIAL GROWTH CENTRE, VILLAGE- CHACHELI, TEHSIL & DIST - 145001	RAYYU 2169. CM AUTO SALES PVT LTD (-01), CHANDIGARH ROPAR ROAD, ROPAR - 140001 PH :9915022802.	TAPA 2180. MAPSKO AUTO INDIA PVT LTD (-01), BHATINDA ROAD, TAPA, DISTRICT - BARNALA, TAPA, PUNJAB - 148108
MORINDA 2142. CM AUTO SALES PVT LTD (-01), KHASRA NO. 1092, CHANDIGARH-SAMRALA ROAD, MORINDA, DIST.-ROPAR, PUNJAB. - 140101 PH :9915022811.	PATIALA 2155. HIRA AUTOMOBILES LTD (6302-63-01), 13-B, FACTORY AREA, PATIALA - 147001	ROOPNAGAR 2169. CM AUTO SALES PVT LTD (-01), CHANDIGARH ROPAR ROAD, ROPAR - 140001 PH :9915022802.	TARAGARH
MUKERIAN 2143. HOSHIAURPUR AUTOMOBILES (-01), VILL. TALWANDI KALAN, GT ROAD, MUKERIAN - 144211	2156. HIRA AUTOMOBILES LTD (6302-63-04), C-20 & C-45, FOCAL POINT, PATIALA, PUNJAB - 147001	SAMANA	
	2157. HIRA AUTOMOBILES LTD (6302-63-07), D-1A, INDUSTRIAL FOCAL POINT, PATIALA (PUNJAB). - 147001		

2181. PATHANKOT VEHICLEADES PVT LTD (-01), VILLAGE - RAHIMPUR, VPO-TARAGARH, TEHSIL & DISTT. PATHANKOT, HIMACHAL PRADESH - 143534
PH :988639963.

TARN TARAN

2182. JAYCEE MOTORS PVT LTD (-01), VILLAGE - KAKKA, KANDIALA, NEAR SANDHU PETROL PUMP, AMRITSAR ROAD, TARN TARAN, PUNJAB - 143401
PH :9780038039.

TARSIKKA

2183. BABA AUTOS (-01), NEAR HDFC BANK, MAIN BAZAAR, TARSIKKA, PUNJAB - 143116

ZIRA

2184. PLUTON DREAMWORKS PRIVATE LIMITED (-01), MAKHU ROAD, NEAR HARBIR PETRO, - 142047

ZIRAKPUR

2185. TRICITY AUTOS (-01), PATIALA HIGHWAY, VILLAGE - NABHA, ZIRAKPUR, PUNJAB - 140603
PH :9988882330.

RAJASTHAN

AANDHI

2186. K.P. AUTOMOTIVES PVT LTD (-01), KHASRA NUMBER 11 25, VILL AANDHI, DISTT JAIPUR, RAJASTHAN - 303001 - 303001
PH :9549656559.

ABU ROAD

2187. NAVNEET MOTORS (-01), PLOT NO. E-26, RIICO AMBAJI INDUSTRIAL AREA, PALANPUR HIGHWAY, ABU ROAD DISTT. SIROHI - 307026
PH :7665000644.

ACHROL

2188. KTL AUTOMOBILE PRIVATE LIMITED (-01), KHASRA NO. 37/1522, GRAM ANI, ACHROL, DELHI ROAD, TEHSIL - ACHROL, DISTRICT - JAIPUR, 303002 - 303002
PH :7412077022.

AHORE

2189. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), MADHOPURA, NEAR KARNAWATI HOSPITAL, AHORE, DISTRICT - JALORE, RAJASTHAN PIN CODE: 307029 - 307029

AJMER

2190. AJMER AUTO AGENCIES PVT LTD (-01), SRINAGAR ROAD, AJMER (RAJASTHAN) - 305001
PH :9314955201.

2191. RELAN MOTORS PVT LTD (-01), NEAR BIRLA WATER TANK, PARABATPURA BYEPASS, AJMER - 305001

2192. RELAN MOTORS PVT LTD (-02), F-243 RIICO INDUSTRIAL AREA, PALRA, AJMER - 305001

2193. AJMER AUTO AGENCIES PVT LTD (-05), KHASRA NO.343/2, 344, 345, 347 GHUGHRA GHATI, JAIPUR ROAD, AJMER - 305001
PH :9314955201.

AJMER ROAD, JAIPUR

2194. KTL AUTOMOBILE PRIVATE LIMITED (-06), PLOT NO.-39-40, MAA KARNI NAGAR-E PANCHAY, PANCHAYAWALA NEAR VAISHALI NAGAR, SIRSI - 302017

AKLERA

2195. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), NH-52, RAM NAGAR COLONY, AKLERA, JHALAWAR, PIN-326033, RAJASTHAN - 326033
PH :9799299971.

ALWAR

2196. M G MOTORS (-01), MUKESH GENERAL FINANCE COMPANY, ROAD NO. 2, NEAR MEO BOARDING, ALWAR - 301001
PH :9001795520.

2197. M G MOTORS (-02), KHASRA NO.803/198, BHUGORE TIRAH, NEAR ALWAR PUBLIC SCHOOL, JAIPUR ROAD, ALWAR - 301001
PH :9001795520.

2198. M G MOTORS (-03), VAISHALI NAGAR, OLD DELHI ROAD, ALWAR, PIN-301001, RAJASTHAN - 301001

AMET

2199. TECHNOY MOTORS INDIA PVT LTD (-01), AMET, DISTT RAJSAMAND, RAJASTHAN - 313332

ANOOPGARH

2200. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), PLOT NO. AMEDKAR CHARAHARA, RAILWAY STATION ROAD, ANUPGARH (ANOOPGARH), DISTT SRI GANGANAGAR - 335701

ANTA

2201. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), KOTA-BARAN ROAD, ANTAH, DIST. -BARAN. - 325502
PH :9413379001.

ASIND

2202. CHAMPION CARS (PREM CARS PVT LTD) (-01), DEV TOWERS, BEAWAR ROAD, ASIND, DISTRICT - BHILWARA, RAJASTHAN - 311302 - 311302
PH :9887063862.

ATRU

2203. SUWALKA MOTORS PRIVATE LIMITED (-01), SALPURA ROAD, ATRU, NEAR DEPUTY OFFICE, PIN-325218, RAJASTHAN - 325218
PH :830633731.

BADI SDADRI

2204. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), MAIN CHITTOR ROAD, NEXT TO HP PETROL PUMP, BHOPATPURA, BARI SADRI, DIST. CHITTORGARH, PIN-312403, RAJASTHAN - 312403

BAGRU

2205. PREM MOTORS PVT LTD (-01), KHASRA NO. 1185, NH 8 AJMER ROAD, BAGRU, JAIPUR DISTRICT, RAJASTHAN - 303007

BAJJU

2206. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (-01), BAJJU, DISTT BIKANER, RAJASTHAN - 334305

BALESAR

2207. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), KHASRA NO. 2167 JODHPUR JAISALMER ROAD, VILL:- BALESAR SATTA, TEH:- BALESAR, DIST:- JODHPUR (RAJ.) - 342203
PH :7412087344.

BALOTRA

2208. L M J SERVICES LTD (6502-05), JODHPUR BALOTRA ROAD, BALOTRA, RAJASTHAN - 344022
PH :8005898360.

BANDANWARA

2209. RELAN MOTORS PVT LTD (-01), SHOP NO. 9 & 10, AJMER HIGHWAY, BANDANWARA, DIST. AJMER, PIN-305622 - 305622

BANSUR

2210. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), KOTPUTLI ROAD, NEAR SUBHASH CHOWK, BANSUR, RAJASTHAN - 301402
PH :8875005116.

BANSWARA

2211. NAVNEET MOTORS (-01), NEAR J.C. MILL, OPPOSITE AKASHWANI, DAHOD ROAD, BANSWARA - 327001

BAORI

2212. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), SHOP NO. 04, SHRI BALAJI NAGAR, NEAR SBI, BAORI, DIST. JODHPUR, PIN-342037, RAJASTHAN - 342037

BARAN

2213. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-03), BESIDE OJHA METAL, ATRU ROAD, BARAN - 325205
PH :8929854244.

BARMER

2214. L M J SERVICES LTD (6502-06), G-216, RIICO INDUSTRIAL AREA, BARMER - 344001
PH :8005898360.

2215. L M J SERVICES LTD (-01), NH# 68, OPP. SADAR THANA - 344001
PH :8005898360.

BASSI

2216. PREM MOTORS PVT LTD (-01), MOHAN PURA BASSI, JAIPUR, RAJASTHAN - 303301

BAYTU

2217. L M J SERVICES LTD (-01), NH-8, NEAR JAGDAMBA PETROL PUMP, BAYTU - 344034
PH :8094011126.

BEAWAR

2218. RELAN MOTORS PVT LTD (-01), PLOT NO 1, INDIRA GANDHI UDYOGPURI, AJMER ROAD, BEAWAR, RAJASTHAN - 305202
PH :9587687000.

BEGUN

2219. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), BHATIA & CO. (A UNIT OF BHATIA CORPORATION PVT LTD), IN FRONT OF GURUKUL, CHITTOR ROAD, BEGUN, TEHSIL - BEGUN, DISTRICT CHITTORGARH, 312023

BEHROR

2220. M G MOTORS (-01), B-168, RIICO INDUSTRIAL AREA, PHASE-II, OPP. APEX TUBE, BEHROR, DISTT: ALWAR - 301701
PH :9001795520.

BHADRA

2221. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), CHAK NUMBER-8, BARANI, NEAR HISAR BYEPASS BHADRA - BALSAMAND ROAD, BHADRA - 335501

BHARATPUR

2222. TM MOTORS PVT LTD (-01), BRIJ VIHAR COLONY, MADARPUR ROAD, BHARATPUR, RAJASTHAN - 321001
PH :9251422392.

BHAWANI MANDI

2223. SUWALKA MOTORS PRIVATE LIMITED (-01), K.NO. 327 MANDAVI OPPOSITE SDM OFFICE JHALAWAR ROAD, BHAWANIMANDI, JHALAWAR- 326502 - 326502
PH :941422256.

BHILWARA

2224. CHAMPION CARS (PREM CARS PVT LTD) (-01), CHITTORGARH ROAD, BHILWARA, RAJASTHAN, - 311001

2225. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), PLOT NO. 1/316/2, AJMER ROAD, BHILWARA, RAJASTHAN - 311001

2226. CHAMPION CARS (UNIT OF PREM CARS PVT. LTD) (-02), ARATI NO.255-258, GRAM JODHRAS, BHILWARA - 311011

BHINDER

2227. TECHNOY MOTORS INDIA PVT LTD (-01), NEAR RAILWAY STATION, SALUMBAR CHOURAHA, BHINDER - 313603
PH :8306111337.

BHINMAL

2228. SHRI KRISHNA AUTOSALES PVT LTD (-01), KHASRA NO. 2281, KARADA CROSSING, BHINMAL, DISTRICT - JALORE, RAJASTHAN. - 343029
PH :9610242790.

BHIWADI

2229. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), OPP. INDAG RUBBER, MAIN ROAD, BHIWADI - 301019
2230. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-02), F-458-C, RIICO, INDUSTRIAL AREA, BHIWADI - 301019
2231. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-04), KHASRA NO. 656/431, ALWAR ROAD, BHIWADI - 301019

BIJAYNAGAR

2232. AJMER AUTO AGENCIES PVT LTD (-01), KHASRA NO 39, AJMER -BHILWARA HIGHWAY CITY -BIJAYNAGAR DISTRICT - AJMER ,RAJASTHAN - 305624
PH :889902472.

BIKANER

2233. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-01), OPP. URMUL DAIRY PLANT, GANGANAGAR ROAD, BIKANER - 334004
2234. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-04), JAIPUR BYE PASS, BIKANER - 334004
2235. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-05), OPP. AVYAYAPPA TEMPLE, K. K. COLONY, BIKANER - 334003
2236. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (7102-71-01), KHASRA NO. 376/33, JAIPUR ROAD, NH-11, BIKANER, RAJASTHAN. - 334001
PH :8929834417
2237. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-07), ROAD NO. 4, IND. AREA, RANI BAZAAR, RANI BAZAAR, BIKANER - 340323

BILARA

2238. L M J SERVICES LTD (-01), BANGANDA MOD, JODHPUR ROAD, BILARA, RAJASTHAN - 342602
PH :8104689835.

BONLI

2239. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), OPP. GOPAL AGRO PETROL PUMP NIWAI RD, BONLI, RAJASTHAN - 322023

BORUNDA

2240. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), 42/34, GOTAN ROAD, BORUNDA, DIST.-JODHPUR, PIN-342604, RAJASTHAN - 342604
PH :9413311745.

BUNDI

2241. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-02), SUMAN PLAZA, NEAR TEACHER'S COLONY, CHITTOR ROAD, OPPOSITE ICICI ATM, BUNDI - 323001
PH :8929853245.

CHAKSU

2242. K.P. AUTOMOTIVES PVT LTD (1104-03), TONK ROAD, CHAKSU - 303901

CHANDAN

2243. L M J SERVICES LTD (-01), JAISALMER ROAD ,CHANDAN, DISTT JAISALMER, RAJASTHAN - 345031
PH :8094011126.

CHIRAWA

2244. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), NEAR PILANI CIRCLE, LOHARU ROAD, STATE HIGHWAY-8, CHIRAWA - 333026

CHITTORGARH

2245. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), PLOT NO. 1001/1-1002/1, NIMBAHERA ROAD, CHITTORGARH - 312001

CHOMU

2246. KTL AUTOMOBILE PRIVATE LIMITED (-01), KHASRA NO.695, JAIPUR SIKAR BYPASS ROAD, CHOMU, RAJASTHAN. - 303702
PH :7412077034
2247. SATNAM MOTOCORP PVT LTD (-01), NEAR CM CHOPRA HOSPITAL, JAIPUR ROAD, CHOMU, DISTRICT - JAIPUR, RAJASTHAN - 303702
PH :8302090000.

CHURU

2248. T R SAWHNEY MOTORS PVT LTD (-01), KHASRA NO. 913/54, JAIPUR ROAD, VILLAGE RAMSARA, CHURU, PIN-331001, RAJASTHAN - 331001
PH :9782078531.

DABI

2249. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), KARITALAI-MAHADEV MARKET, CHARBHUJA ROAD, DESURI (DISTRICT PALI) - 323022

DANTA RAMGARH

2250. JAMU AUTOMOBILES PVT LTD (-01), KHASRA NO. 1016/256, VILLAGE - RAMGARH, TEHSIL - DATAH RAMGARH, DIST.-SIKAR. - 332703
PH :9116816905.

DAUSA

2251. VIPUL MOTORS PVT LTD (1102-03), AGRA JAIPUR ROAD, DAUSA - 303303
PH :9672211333.

DECHU

2252. L M J SERVICES LTD (-01), OPP INDIAN OIL PUMP, JODHPUR ROAD, DECHU - 342314

DEGANA

2253. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), PLOT NUMBER -189, NEAR NAGAU RAILWAY STATION ROAD, DEGANA - 341503
PH :7230055955.

DEOLI

2254. K.P. AUTOMOTIVES PVT LTD (-01), KOTA-JAIPUR HIGHWAY, NH-12, DEOLI - 304804
PH :8696925259.

DESURI

2255. L M J SERVICES LTD (-01), MAHADEV MARKET, CHARBHUJA ROAD, DESURI, DISTT PALI, RAJASTHAN - 306703

DHARIYAWAD

2256. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), PRATAPGARH ROAD, DHARIYAWAD, DIST. - PRATAPGARH, RAJASTHAN - 313605 - 313605
PH :9829736081.

DHOLPUR

2257. TM MOTORS PVT LTD (-01), TM MOTORS PVT. LTD., GT ROAD DHOLPUR, RAJASTHAN. - 328001
PH :8094777862.

DIDWANA

2258. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), KHASRA NO. 73, NEAR CHOTI DEVI SCHOOL, LADNU ROAD, DIDWANA, DISTRICT - NAGAU, KHASRA NO. 2778, DIDWANA BYPASS, DIDWANA, DISTRICT NAGAU, RAJASTHAN - 341303
PH :7230055924.

DOONI

2259. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), NEAR POLICE STATION, DOONI, DIST. TONK, RAJASTHAN - 304802 - 304802

DUDU

2260. PREM MOTORS PVT LTD (-01), KHASRA NO.1107 & 1108, OPPOSITE POWER HOUSE SERVICE LANE, NH-8, DUDU. - 303008
PH :8058411181.

DUNGARPUR

2261. NAVNEET MOTORS (4902-02), G-71, INDUSTRIAL AREA, DUNGARPUR - 314001

FALNA

2262. L M J SERVICES LTD (-01), OPPOSITE PRAKASH DINING HOTEL, FALNA - 306116

FATEHNAGAR

2263. TECHNOY MOTORS INDIA PVT LTD (4903-03), PLOT NO.15, FATENAGAR SANWAR ROAD, UDAIPUR-CHITTORGARH HIGHWAY NO.76, FATEHNAGAR-313205 DISTT. UDAIPUR - 313205

FATEHPUR (RJ)

2264. JAMU AUTOMOBILES PVT LTD (-01), NH-52, RATANGARH ROAD., DISTT SIKAR - 332301

FATHEGARH

2265. L M J SERVICES LTD (-01), NEAR POLICE STATION, FATEHGARH, DIST. - JAISALMER, RAJASTHAN - 345027 - 345027

GANGAPUR CITY

2266. PREM MOTORS PVT LTD (-01), KHASRA NO. 5854, 5858, 5860, 5861, VILLAGE UDAI KALAN, THE GANGAPUR CITY - 322201
PH :8058794122.

GHRASNA

2267. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (-01), NH-11, BIKANER ROAD, ABHISHEK(MEENA)FILLING STATION KE PASS. - 335707

GOGUNDA

2268. TECHNOY MOTORS INDIA PVT LTD (-01), NH 27, GOGUNDA, DISTRICT-UDAIPUR - 313705

GOVINDGARH

2269. VIPUL MOTORS PVT LTD (-01), JAI BHAWANI MARKET, NH-2, GOVINDGARH, DIST. JAIPUR, PIN-303712, RAJASTHAN - 303712
2270. M G MOTORS (-01), SIKRI ROAD, GOVINDGARH, - 301604

GUDAMALINI

2271. L M J SERVICES LTD (-01), KHASRA NO. 1360/5, RATHORAM KI DHANI, JODHPUR ROAD, GUDAMALANI, DISTRICT - BARMER, RAJASTHAN - 344031. - 344031
PH :8094011126.

GUDHAGORJI

2272. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), BHORKI ROAD, GUDHAGORJI, DISTRICT - JHUNJHUNUN, RAJASTHAN. - 333022
PH :7412059848.

HANUMANGARH

2273. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-03), JUNCTION TOWN ROAD, HANUMANGARH - 335512

2274. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-06), PLOT NUMBER 134, INDUSTRIAL AREA, HANUMANGARH, RAJASTHAN. - 335512
PH :9413311745.

HINDAUN

2275. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), KHASRA NO. 737, VILLAGE - PATTI NARAINPUR, NEAR HANUMAN MANDIR, HINDAUN-MAHWA ROAD, HINDAUN. - 322230

ITAWA

2276. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), NAHER KE PASS, KHATOLI ROAD, ITAWA, ITAWA, RAJASTHAN - 325004

JAIPUR

2277. VIPUL MOTORS PVT LTD (1102-11-01), F-124A, MALVIYA INDUSTRIAL AREA, MALVIYA NAGAR, JAIPUR. - 302017

2278. K.P. AUTOMOTIVES PVT LTD (1104-11-01), E-198, SANGANER INDUSTRIAL AREA, MANSAROVAR, JAIPUR. - 302020

2279. PREM MOTORS PVT LTD (1112-11-02), 12 13, SUDARSHANPURA INDUSTRIAL AREA, JAIPUR. - 302006

2280. VIPUL MOTORS PVT LTD (1102-11-05), 29, INDUSTRIAL AREA, JHOTWARA, JAIPUR. - 302012

2281. PREM MOTORS PVT LTD (1112-11-01), PLOT NO. E101/A, VKI, JAIPUR. - 302039

2282. SATNAM MOTOCORP PVT LTD (1113-11-01), PLOT NO. E-524, SITAPURA INDUSTRIAL AREA, JAIPUR. - 302 022, RAJASTHAN. - 302022

2283. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-01), PLOT NO. 138, JHOTWARA INDUSTRIAL AREA, JAIPUR. - 302012 PH. 7412077022.

2284. PREM MOTORS PVT LTD (1112-11-03), PLOT NO. B-12, MALVIYA NAGAR, JAIPUR. - 302017

2285. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-02), KHASRA NO 1210-1216/2959, BHANKROTA, TEH SANGANER, DISTRICT JAIPUR. - 302026 PH. 7412077007.

2286. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-03), ORBIT MALL CIVIL LINES METRO STATION AJMER ROAD, JAIPUR. - 302006 PH. 7412077007.

2287. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (1116-11-C1), COMMERCIAL PLOT NO. J4, COMMERCIAL BELT B, VT ROAD, NEW SANGANER ROAD, MANSAROVAR SCHEME, JAIPUR, RAJASTHAN 302020 - 302020 PH. 9571105651.

2288. K.P. AUTOMOTIVES PVT LTD (1104-11-G1), B-1, GOVIND MARG, ADARSH NAGAR, JAIPUR. - 302004 - 302004 PH. 9549656559.

2289. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-04), CHOKDI HAWALI SHAHAR, SHIRKI SHAHAR, NEAR IDGAH, BILOCHOYAN MOHALLA, TRANSPORT NAGAR, DELHI ROAD, JAIPUR. - 302002 - 302002 PH. 9772210922.

2290. K.P. AUTOMOTIVES PVT LTD (1104-11-G2), PLOT NO. 4, RAJIV COLONY, RPA ROAD, OPP. RADHA SWAMI SATSANG BHAWAN, SHASTRI NAGAR, JAIPUR 302016. - 302016 PH. 9549656559.

2291. SANGA AUTONATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (1117-11-01), SECTOR 35, PRATAP NAGAR, SANGANER, JAIPUR, PIN-302023, RAJASTHAN - 302033 PH. 9929365847.

2292. K.P. AUTOMOTIVES PVT LTD (1104-11-09), KHASRA NO. 74/4 & 75/1, NEW KHANDELWAL NAGAR, GONER ROAD, NEAR JAIPUR AGRA HIGHWAY, JAIPUR, RAJASTHAN 302031 - 302031

2293. K.P. AUTOMOTIVES PVT LTD (-08), PLOT NO. 280, RAJENDRA NAGAR A, NIRMAL NAGAR, JAIPUR. - 302031

JAISALMER

2294. L M J SERVICES LTD (-01), PLOT NO. 36, 37, MAHESH REFUGEE COLONY, HDC SOCIETY, DABLA ROAD, JAISALMER (RAJASTHAN) - 345001 PH. 8005898360.

JAITARAN

2295. L M J SERVICES LTD (-01), KHASRA NO. 784, JAIPUR-JODHPUR BYE PASS ROAD, JAITARAN, DIST. -PALLI. - 306302 PH. 9269971266.

JALORE

2296. SHRI KRISHNA AUTOSALES PVT LTD (-01), KHASRA NO.6809/2616, 2623, INDUSTRIAL AREA, JALORE-BHINMAL ROAD, JALORE - 343001

JAMWA RAMGARH

2297. K.P. AUTOMOTIVES PVT LTD (-01), KHASRA NUMBER -228/169, OPP UDAY AUTOMOBILES, JAIPUR ALWAR ROAD -JAMWA RAMGARH. - 303109

JAWAL

2298. TECHNOY MOTORS INDIA PVT LTD (-01), OPP. HP PETROL PUMP, SIROHI-JALORE ROAD, JAWAL, DIST. - SIROHI, RAJASTHAN - 307801. - 307801

JHADOL

2299. TECHNOY MOTORS INDIA PVT LTD (-01), KHASRA NO. 186/1, NH # 8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT, PIN-306104, RAJASTHAN - 306104 PH. 8890673099.

JHALAWAR

2300. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6102-02), OPP. BALAJI KI CHHATRI, KHEL CIRCULAR STADIUM, BUS STAND ROAD, JHALAWAR - 326001 PH. 9413350336.

JHUNJHUNUN

2301. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-02), E1-2, AUTOMOBILES SERVICE SECTOR, RIICO INDUSTRIAL AREA, PHASE-2, SIKAR JAIPUR ROAD, JHUNJHUNU. - 333001

JOBNER

2302. PREM MOTORS PVT LTD (-01), KHASRA NO. 758 & 754, BABER WALON KI DHANI, JOBNER, TEHSIL - PHULERA, DISTRICT - JAIPUR, RAJASTHAN - 303328 PH. 805841181.

JODHPUR

2303. L M J SERVICES LTD (6502-65-01), PRATAP NAGAR, JODHPUR - 340002 PH. 9950496202.

2304. L M J SERVICES LTD (6502-65-04), OPP TO RFC OFFICE, NEW POWER HOUSE ROAD, JODHPUR - 342003 PH. 8094011127.

2305. SHRI KRISHNA AUTOSALES PVT LTD (6503-65-01), 32-A, HEAVY INDUSTRIAL AREA, NR FCI GODOWNS, JODHPUR - 342005

2306. L M J SERVICES LTD (6502-09), B-8, 9, 10, MARUDHAR INDUSTRIAL AREA, PHASE 1, BASNI, JODHPUR - 342008 PH. 8094011147.

2307. L M J SERVICES LTD (6502-0C), 21/1, PAL MAIN BALOTRA ROAD, NEAR D.P.S. CIRCLE, JODHPUR - 342002 PH. 7230057721.

2308. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (6504-65-01), C-62 BASNI INDUSTRIAL AREA, PHASE-1, JODHPUR - 342005 PH. 7412059839.

2309. L M J SERVICES LTD (6502-65-0D), PARSHWANATH COLONY, KAYLANA ROAD, JODHPUR. - 342001 PH. 8696916455.

2310. L M J SERVICES LTD (6502-65-10), KHASRA NO. 357/5, BANAR ROAD, OPPOSITE VIDHYA PUBLIC SCHOOL, JODHPUR, RAJASTHAN - 342003 PH. 7222002424.

KAPASAN

2311. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), OLD RASHMI ROAD, KAPASAN, DIST. CHITTORGARH, RAJASTHAN - 312202

KAPRAIN

2312. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), MEGA HIGHWAY ROAD, NEAR PETROL PUMP, KAPRAIN DISTT. BUNDI - 323301 PH. 9413379001.

KEKRI

2313. AJMER AUTO AGENCIES PVT LTD (-03), KOTA SAWAR ROAD, KEKRI - 305404 PH. 9314955201.

KHAJWALA

2314. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), DANTOR ROAD, KHAJWALA, DIST. - BIKANER, RAJASTHAN. - 340323 PH. 9982299866.

KHANDAR

2315. PREM MOTORS PVT LTD (-01), SAWAI MADHOPUR-KHANDAR RD, KHANDAR, RAJASTHAN - 322025. - 322025 PH. 8058899960.

KHANPUR

2316. SUWALKA MOTORS PRIVATE LIMITED (-01), BYPASS CHORAYA, MEGA HIGHWAY BARAN-JHALAWAR, KHANPUR, TEHSIL - KHANPUR, DISTRICT - JHALAWAR, RAJASTHAN PIN CODE: 326038 - 326038 PH. 8306337331.

KHERLI

2317. M G MOTORS (-01), KHERLI KATHUMAR ROAD, VILLAGE KHERLI, DISTT. ALWAR, RAJASTHAN - 321606 PH. 9001795520.

KHERWARA

2318. TECHNOY MOTORS INDIA PVT LTD (-01), OPP. ATITHI PALACE, VILLAGE BADLA, NH 8, KHERWARA, TEHSIL - KHERWARA, DISTRICT - UDAIPUR, RAJASTHAN PIN CODE: 313803

KISHANGARH

2319. AJMER AUTO AGENCIES PVT LTD (-01), R K LINK ROAD, - 305802 PH. 9314391011.

KISHANGARH BAS

2320. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-03), KISHANGARH BIWADI HIGHWAY, NEAR KISHANGARH, DISTRICT ALWAR - 301405

KOLAYAT

2321. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (-01), NEAR PANCHAYAT SAMITI JHAJJU ROAD, KOLAYAT - 334302

KOTA

Dealer Workshop (AS ON 31.01.2026)

2322. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-61-01), 13-16 B, INDUSTRIAL ESTATE, KOTA - 324007 PH :8929400447.	LOSAL	2345. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), KHASRA NUMBER 1679, NH-89, MERTA ,RAJASTHAN - 341510 PH :9116007201.	NIWAI
2323. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6102-61-01), AUTO MOBILE ZONE, G-11/12 INDUSTRIAL AREA, KOTA - 324005	LUNI	NADOTI	2355. K.P. AUTOMOTIVES PVT LTD (-01), VANASTHALI CIRCLE, NEAR PRATEEK GAS AGENCY, TONK ROAD, NIWAI, DISTRICT - TONK. - 304021 PH :8696925262.
2324. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-61-04), 3(K), CHAMBAL INDUSTRIAL AREA, KOTA, RAJASTHAN - 324007 PH :8929400447.	2336. L M J SERVICES LTD (-01), NEAR SBI BANK, SALAWAS ROAD, LUNI, TEHSIL - LUNI, DISTRICT - JODHPUR, RAJASTHAN PIN CODE: 342802 - 342802 PH :8094011126.	2346. FORTUNE CARS (-01), SH-25, VPO, NADAUTI ALWAR, GANGAPUR CITY STATE HIGHWAY - 322215	NOHAR
2325. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-05), E-46, CHAMBAL INDUSTRIAL AREA, KOTA - 324007 PH :8929400447.	LUNKARANSAR	NAGAUER	2356. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), OPP. RAILWAY STATION, NOHAR, DISTRICT-HANUMANGARH - 335523
2326. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-06), PLOT NO. E-222, ROAD NUMBER 5, INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN - 324005	2337. DUJI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (-01), VISWAKARMA MARKET, BIKANER ROAD, LUNKARANSAR, BIKANER, RAJASTHAN - 334603. - 301026	2347. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), KHASRA NO. 1479/982 & 1478/83, BIKANER ROAD, NAGAUER. - 341001 PH :9116008624.	NOKHA
2327. SUWALKA MOTORS PRIVATE LIMITED (-01), RIDDHI SIDDHI NAGAR, KUNHARI, BUNDI ROAD, KOTA, RAJASTHAN - 324008	MAHWA	NAINWA	2357. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), F-46, RIICO EXTENSION, NOKHA INDUSTRIAL AREA, NOKHA DISTT- BIKANER (RAJASTHAN) - 334803 PH :7412059805.
2328. SUWALKA MOTORS PRIVATE LIMITED (6104-02), PLOT NO. A172 (B-1) INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN. - 324003	2338. VIPUL MOTORS PVT LTD (-01), KHASRA NO.37/384, BHARATPUR ROAD BYE-PASS, N.H. -11, MAHWA, DISTT. DAUSA (RAJASTHAN) - 321608 PH :9672211333.	2348. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), UNIARA ROAD, OPP: PETROL PUMP, NAINWA, DIST. KOTA - 323801 PH :9413379001.	PADAMPUR
KOTPUTLI	MAKRANA	NARAYANPUR	2358. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (-01), NEAR BASANT PLACE, BHAGAT SINGH CHOWK, KARANPUR ROAD, PADAMPUR SRI GANGANAGAR 335041 - 335041
2329. PREM MOTORS PVT LTD (-01), NH-8, BUCHARA COLONY, OPP. SHAKTI VIHAR, KOTPUTLI, JAIPUR - 303108	2339. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), KHASRA NO. 609/4, NEAR BAJAJ SHOWROOM, MANGLANA ROAD, MAKRAHA, DISTRICT - NAGAUER. - 341505 PH :7230055934.	2349. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), KHASRA NO. 2848, JAIPUR ROAD, NEAR NARAYANPUR BYPASS VILLAGE, NARAYANPUR TEHSIL - NARAYANPUR, DISTRICT - ALWAR, RAJASTHAN PIN CODE: 301024. - 301024 PH :8875004375.	PALI
2330. PREM MOTORS PVT LTD (-02), KHASRA NO-636, KOTPUTLI, DIST. JAIPUR, RAJASTHAN - 303108	MALPURA	NASIRABAD	2359. L M J SERVICES LTD (6502-03), KHASRA NO. 77/1/1, JODHPUR PALI ROAD, PALI - 306401 PH :9269971266.
KUCHAMAN	2340. K.P. AUTOMOTIVES PVT LTD (-01), PLOT NO.07, SHRI KALYAN NAGAR COLONY, JAIPUR-KEKRI ROAD, MALPURA - 304502 PH :8696925262.	2350. AJMER AUTO AGENCIES PVT LTD (-04), CHAVANI BOARD NO:1613, HAWA CHAKKI, NASIRABAD ROAD, NASIRABAD, DISTT. AJMER - 305601 PH :9314955201.	PAOTA
2331. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), SUDARSHAN NAGAR, BURSUA ROAD, KHASRA NO.148, KUCHAMAN. - 341508 PH :7230055928.	MANDALGARH	NAWALGARH	2360. K.P. AUTOMOTIVES PVT LTD (-01), PATTI SANKHYA 31, MISAL SANKHYA 89, NEAR BAMBORIA PETROL PUMP, NH-8, PAOTA, RAJASTHAN. - 303106
LADNU	2341. CHAMPION CARS (PREM CARS PVT LTD) (-01), OPP. MODEL SCHOOL, BIJOLIA ROAD, MANDALGARH, DISTRICT - BHILWARA, PIN-311604, RAJASTHAN PH :9837325267.	2351. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), KHATA NO. 76, PUNJA KI DHANI, SIKAR ROAD, NAWALGARH, DISTRICT - JHUNJHUNU, RAJASTHAN PIN CODE: 333042 - 333042 PH :9928720360.	PARBATSAR
2332. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), KHASRA NO. 1011, SUJANGARH ROAD, LADNUN - 341306 PH :7412044506.	MANGALWAD	NEEM KA THANA	2361. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), NEAR IFL HOUSING FINANCE CO., KISHANGARH ROAD, PARBATSAR, DISTRICT - NAGAUER, RAJASTHAN - 341512 - 341512 PH :8740909096.
LAHAR	MARWAR JUNCTION	2352. JAMU AUTOMOBILES PVT LTD (-03), NEAR TOLL PLAZA, KOTPUTLI ROAD, NEEM KA THANA, SIKAR - 332713	PARTAPUR
2333. NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT LTD) (-01), WARD NO.09, BHIND BHANDER ROAD, LAHAR. - 477001	2342. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), NH-27, PAL KHERI, MANGALWAD, CHHITORGARH. - 312024	NEEMRANA	2362. NAVNEET MOTORS (-01), AAASHAPURA CHAURAH, BHAGORA MORT, NEAR AAASHAPURA MANDIR, PARTAPUR ,RAJASATHAN - 327024 PH :9001550644.
LALSOT	MASUDA	2353. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), F-42 & 42(B), PHASE-1, NEEMRANA, TEHSIL: BEHROR, DISTT. ALWAR - 301705	PHALODI
2334. VIPUL MOTORS PVT LTD (-01), PLOT NO.22,23, KHASRA NO.1502-03, NARAYAN VIHAR, SAWAI MADHOPUR ROAD, LALSOT, RAJASTHAN - 303502 PH :9672211333.	MERTA	NIMBAHERA	2363. SHRI KRISHNA AUTOSALES PVT LTD (-01), OPP. RCP GUEST HOUSE, NAGAUER KHICHAN ROAD, PHALODI, RAJASTHAN - 342301 PH :9116011958.
		2354. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), PLOT NO. 7-8, 33-34, 35-36, NIMBAHERA, DIST. -CHITTORGARH. - 312601	PHULERA
			2364. KTL AUTOMOBILE PRIVATE LIMITED (-01), KHASRA NO. 21 TO 24 AND PLOT NO. 189 IN RAM VIHAR COLONY, PANCHBHATI, PHULERA, DISTRICT - JAIPUR, RAJASTHAN - 303338 PH :7412077022.

2365. KTL AUTOMOBILE PRIVATE LIMITED (-02),
KHAIRA NO. 21 TO 24 AND PLOT NO. 189, IN
RAM VIHAR COLONY - 303338

PILIBANGA

2366. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT
LTD) (-01), HANUMANGARH ROAD, PILIBANGA,
DISTRICT-HANUMANGARH, RAJASTHAN -
335803

PINDWARA

2367. NAVNEET MOTORS (-01), OPPOSITE WOLKEM
FACTORY, SIROHI ROAD, PINDWARA, DIST. -
SIROHI. - 307022

PIPAR

2368. L M J SERVICES LTD (-01), KHASRA NO. 1095,
PIPAR CITY, DIST.-JODHPUR. - 342601
PH. 9462616268.

PIRAWA

2369. BHATIA & COMPANY (A UNIT OF BHATIA
CORPORATION PVT LTD) (-01), PLOT
NO.19, NEAR KRISHI UPJ MANDI, SOYAT
ROAD, PIRAWA, DIST. JHALAWAR, - 326034

PISANGAN

2370. AJMER AUTO AGENCIES PVT LTD (-01), PLOT
NO.11, SHIV VIHAR COLONY, MANGLIYAWAS
ROAD, PISANGAN, DISTRICT - AJMER,
RAJASTHAN. - 305204
PH. 9314955201.

POKHARAN

2371. L M J SERVICES LTD (-01), SUNDER NAGAR,
TEHSIL POKHARAN, DISTRICT - JAISALMER,
RAJASTHAN. - 345021
PH. 9610115660.

PRATAPGARH (RAJASTHAN)

2372. BHATIA & COMPANY (A UNIT OF BHATIA
CORPORATION PVT LTD) (-01),
CHITTORGARH-PRATAPGARH ROAD,
GRAM-BAMBOTARA, PRATAPGARH
(RAJASTHAN) - 312605
PH. 9571274999.

RAIPUR

2373. L M J SERVICES LTD (-01), NATIONAL
HIGHWAY, PALI ROAD, VILLAGE - RAIPUR,
DISTRICT - PALI. - 306304
PH. 9269971266.

RAISINGHNAGAR

2374. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT
LTD) (-01), PLOT NO. H-2, INDUSTRIAL AREA,
RAISINGHNAGAR, DISTRICT -
SRANGANAGAR. - 335051

RAJGARH

2375. M G MOTORS (-01), ALWAR SIKANDRA MEGA
HIGHWAY, VILLAGE DIGAWARA, TEHSIL
RAJGARH DISTT. ALWAR - 301408
PH. 9001795520.

2376. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT
LTD) (-01), NH-65, OPP. BHAGAT SINGH
CHOWK, RAJGARH DISTT. CHURU. - 331023
PH. 9602261977.

RAJSAMAND

2377. TECHNOY MOTORS INDIA PVT LTD (-01), ARAJI
NO 241 - 242, DHOINDA, RAJASAMAND,
RAJASTHAN - 313324

RAMGANJMANDI

2378. BHATIA & COMPANY (A UNIT OF BHATIA
CORPORATION PVT LTD) (-01), KHAIRABAD
ROAD, KHASARA NO. 753, A.S.I COLONY,
RAMGANJ MANDI - 326519
PH. 9414085790.

RAMGARH

2379. M G MOTORS (-01), PLOT NO. 8, BALOT
NAGAR, OLD DELHI ROAD, RAMGARH, ALWAR,
RAJASTHAN - 301026

RANIWARA

2380. SHRI KRISHNA AUTOSALES PVT LTD (-01),
NEAR RAILWAY GATE, BHINMAL ROAD
, RANIWARA, TEHSIL - RANIWARA, DISTRICT -
JALORE, RAJASTHAN, PIN CODE: 343040 -
343040
PH. 9928377669.

RATANGARH

2381. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT
LTD) (-01), PLOT NO. AREA F-186 INDUSTRIAL
AREA, RATANGARH. - 331022
PH. 7412087301.

RAWATBHATA

2382. BHATIA & COMPANY (A UNIT OF BHATIA
CORPORATION PVT LTD) (-01), NEAR INDIAN
OIL PETROL PUMP, KOTA ROAD, RAWATBHATA
, DIST. CHITTORGARH, RAJASTHAN. - 323307

RAWATSAR

2383. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT
LTD) (-01), CHAK 21-22, DWD, PLOT NUMBER
-10 & 11, RAWATSAR (RAJASTHAN). - 335524

REENGUS

2384. JAMU AUTOMOBILES PVT LTD (-01), REENGUS
HIGHWAY, REENGUS DISTT. SIKAR -332404 -
332404
PH. 332404.

RENWAL

2385. PREM MOTORS PVT LTD (-01), 193, JAIPUR
CHOMU ROAD, NEAR 10 DUKAN, RENWAL
KISHANGARH, JAIPUR, RAJASTHAN - 303904

RENWAL MANJHI

2386. PREM MOTORS PVT LTD (-01), KHASRA
NUMBER 2286/110, OPP ROHINI NAGAR 1
, JAIPUR BHILWARA HIGHWAY
, RENWAL, TEHSIL PHAGI JAIPUR, RAJASTHAN
(303904) - 303904

REVDAR

2387. TECHNOY MOTORS INDIA PVT LTD (-01), OPP.
TIRUPATI PETROL PUMP, KAROTI ROAD,
REVDAR, DISTT. SIROHI, RAJASTHAN. - 307514

SABLA

2388. TECHNOY MOTORS INDIA PVT LTD (-01), NEAR
BP PETROL PUMP, SABLA ASPUR ROAD,
SABLA, TEHSIL-ASPUR, DUNGERPUR,
PIN-314022, RAJASTHAN - 314022

SAGWARA

2389. TECHNOY MOTORS INDIA PVT LTD (-01),
BANSWARA ROAD, CHUNGINAKA, NR.
CENTRAL JAIL, SAGWARA, DUNGARPUR
DISTT., RAJASTHAN - 314025

SALUMBAR

2390. NAVNEET MOTORS (-01), GANESH GHATI,
BANSWARA ROAD, SALUMBAR, DISTRICT -
UDAIPUR. - 313027
PH. 7665887444.

SAMBHAR

2391. KTL AUTOMOBILE PRIVATE LIMITED (-01),
PLOT NUMBER -C1 NEAR SHAKUMARI PG
COLLEGE, PHULERA ROAD , SAMBHAR 303604
- 303604
PH. 7412077022.

SAMRANIYA

2392. BHATIA & COMPANY (A UNIT OF BHATIA
CORPORATION PVT LTD) (-01), KHASRA
NO.857/394, GADRETA BYPASS, SANTOSHI
NAGAR, SAMRANIYA, - 325217

SANCHORE

2393. SHRI KRISHNA AUTOSALES PVT LTD (-01),
PLOT NO. 217, KHASRA NO. 844, 865, 867,
MANMOHAN SINGH PARK, NH-15, BARMER
ROAD, SANCHORE, DIST.-JALORE. - 343041
PH. 9636224546.

SANGARIA

2394. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT
LTD) (-01), HANUMANGARH ROAD NEAR
KARMA PETROL PUMP - 335035
PH. 7412059827.

SANGOD

2395. BHATIA & COMPANY (A UNIT OF BHATIA
CORPORATION PVT LTD) (-01), KHASRA NO
1637, SANGOD BAPAPAR MAIN ROAD
, SANGOD - 325801
PH. 9413359999.

SAPOTRA

2396. FORTUNE CARS (A UNIT OF JYOTI
AUTOMOBILES PVT LTD) (-01), VPO SAPOTRA,
NEAR PETROL PUMP DIST. KARAUJI,
PIN-322218 - 322218

SARDARSHAHAR

2397. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT
LTD) (-01), KHASRA NO.134, MOTOR MARKET,
RATANGARH SARDARSHAHAR ROAD,
SARDARSHAHAR DISTT. CHURU, RAJASTHAN -
331403
PH. 9799833995.

SARWAR

2398. RELAN MOTORS PVT LTD (-01), CHAMAN
CHOURAHA, AJMER ROAD,
SARWAR, DISTRICT - AJMER,
RAJASTHAN 305403 - 305403
PH. 9587687000.

SAWAI MADHOPUR

2399. PREM MOTORS PVT LTD (-01), PLOT NO.14,
RIICO INDUSTRIAL AREA, KHERDA, SAWAI
MADHOPUR - 322001

SAYALA

2400. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT
LTD) (-01), NEAR PETROL PUMP, HANUMAN
MANDIR SOUTH STYLE, MAIN ROAD SAYALA,
SAYALA TEHSIL - SAYALA, DISTRICT - JALORE,
RAJASTHAN PIN CODE: 343022 - 343022
PH. 9460739993.

SHAHJAHANUR

2401. FORTUNE CARS (A UNIT OF JYOTI
AUTOMOBILES PVT LTD) (-01), KHASRA NO.
1258, VPO SHAHJAHANPUR, DELHI-JAIPUR
HIGHWAY, DISTRICT -ALWAR, RAJASTHAN -
301706. - 301706

SHAHUPURA

2402. K.P. AUTOMOTIVES PVT LTD (1104--05),
VILLAGE RAJPURA, GRAM PANCHAYAT
BIDARA, NH-8, SHAHPURA - 303103

SHEO

2403. L M J SERVICES LTD (-01), NEAR RIDDI SIDDIHI
HOTEL, OPPOSITE HP
PETROL PUMP, TEH SHEO, DISTT - BARMER -
335521
PH. 8094011144.

SHEOGANJ

2404. NAVNEET MOTORS (-01), F 132, OPP. 33/11 KV
STATION, RIICO INDUSTRIAL AREA,
SHEOGANJ, DISTRICT - SIROHI, RAJASTHAN -
307027 - 307027
PH. 9414159146.

SIKAR

2405. JAMU AUTOMOBILES PVT LTD (-01),
F-54, JAIPUR ROAD (NH-11), SIKAR - 332001

SIKRAI

2406. VIPUL MOTORS PVT LTD (-01), OPP NAYARA
PETROL PUMP, MANPUR ROAD SIKRAI, DAUSA
(RAJASTHAN) - 303508

SIMALWARA

Dealer Workshop (AS ON 31.01.2026)

2407. NAVNEET MOTORS (–01), RAJPUR PEETH ROAD, SIMALWARA, DISTRICT - DUNGARPUR, RAJASTHAN - 314403 - 314403
SINGHANA

2408. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (–01), NARNAUL ROAD, SINGHANA, DIST. JHUNJHUNU, PIN-333516, RAJASTHAN - 333516

SIROHI

2409. NAVNEET MOTORS (4902–03), PLOT NO. 8, BHADRANAGAR NAGAR, ANADRA ROAD, SIROHI - 307001
PH : 779960989.

SIVANA

2410. L M J SERVICES LTD (–01), BALOTRA ROAD, SIWANA, DISTRICT - JODHPUR, RAJASTHAN. - 344044
PH : 8005898360.

SOJAT

2411. L M J SERVICES LTD (–01), KHASRA NO. – 186/1, NH-8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT , RAJASTHAN - 306104
PH : 9269971266.

SRI DUNGARGARH

2412. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (–01), 1563/1273, NH-11, MOMASAR BASS, DUNGARGARH, DISTRICT - BIKANER, RAJASTHAN. - 331803
PH : 9414138511.

SRI GANGANAGAR

2413. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (–01), NEW AUTOMOBILE MARKET SURATGARH-HANUMANGARH ROAD, SRIGANGANAGAR - 335001
2414. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (–03), CHAK 1G CHOTI, NH15, SRIGANGANAGAR, RAJASTHAN - 335001
PH : 8875911503.

SRI KARANPUR

2415. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (–01), PADAMPUR ROAD, NEAR DHAN MANDI, SRI KARANPUR, TEHSIL – SRI KARANPUR, DISTRICT – SRI KARANPUR, RAJASTHAN, PIN CODE: 335073
PH : 8875088998.

SRI MADHOPUR

2416. JAMU AUTOMOBILES PVT LTD (–01), WARD NO 4, RINGUS ROAD, SRI MADHOPUR DIST. SIKAR. - 332715
PH : 9116816905.

SUJANGARH

2417. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (–01), KHASRA NO.459/333, SALASAR ROAD, NEAR ANAJ MANDI, SUJANGARH , DISTT. CHURU - 331507
PH : 8875011561.

SULTANPUR

2418. SUWALKA MOTORS PRIVATE LIMITED (–01), KHASRA NUMBER 485, NEAR PETROL PUMP , SULTANPUR ROAD , SULTANPUR , DISTT KOTA - 325204
PH : 7742121212.

SUMERPUR

2419. L M J SERVICES LTD (6502–08), G-14 JAKHAMATA INDUSTRIAL AREA, OPP. DASHAREA GROUND, SUMERPUR - 306902
PH : 8094002633.

SURATGARH

2420. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (–02), OPP. RELIANCE PETROL PUMP, NH-15, SURATGARH - 335804
PH : 8875012667.

SWAROOPGANJ

2421. NAVNEET MOTORS (–01), NEAR POLICE STATION, NAYI BHAWARI, NATIONAL HIGHWAY 27, SWAROOPGANJ. - 307001

THANAGAZI

2422. M G MOTORS (–01), NEAR INDIA PETOL PUMP, THANAGAZI, ALWAR ROAD, DIST. ALWAR, PIN-301022, RAJASTHAN - 301022
PH : 9799398200.

TIBBI

2423. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (–01), NEAR KESARGARH PALACE, HANUMANGARH ROAD, TIBBI, DIST. HANUMANGARH, PIN-335526, RAJASTHAN - 335526
PH : 9413311745.

TINWARI

2424. L M J SERVICES LTD (–01), OPPOSITE NEW TEHSIL OFFI CE, TIWARI, MATHANIA ROAD, TIWARI - 342306 - 342306
PH : 809011126.

TODARISINGH

2425. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (–01), JAKHAD COLONY, NEAR ESSAR PETROL PUMP, TODARISINGH, DIST. – TONK, RAJASTHAN-304505. - 304505

TONK

2426. K.P. AUTOMOTIVES PVT LTD (–01), F-94, RIICO INDUSTRIAL AREA, TONK , RAJASTHAN - 304001
PH : 9549651972.

TUNGA

2427. PREM MOTORS PVT LTD (–01), VILLAGE GUALANI, BASSI-LALSOT ROAD, TUNGA, TEHSIL- BASSI, JAIPUR - 303302 - 303302
PH : 8058998123.

UDAIPUR

2428. NAVNEET MOTORS (4901-49-01), 7 CITY STATION ROAD, UDAIPUR - 313001
PH : 7230046375.

2429. NAVNEET MOTORS (4902-49-01), S-140, MADRI INDUSTRIAL AREA, OPP. BSNL OFFICE, UDAIPUR. - 313002

2430. TECHNOY MOTORS INDIA PVT LTD (4903-49-02), NH-8, GOVERDHAN VILLAS, DEVALI, NEAR JEEVAN TARA RESORT, UDAIPUR - 313002
PH : 7073468292.

2431. TECHNOY MOTORS INDIA PVT LTD (4903-49-04), KHASRA NO. 546, 547, 554 AND 555, NEAR CHITRAKOOT NAGAR, OPP. BHIRAVGARH HOTEL, SUKHER, TEHSIL – BADGAON, UDAIPUR, RAJASTHAN. - 313001
PH : 7073468292.

UDAIPURWATI

2432. AURIC MOTORS PVT LTD (–01), INFRONT OF FRAMA TRACTOR, SIKAR ROAD, POWER HOUSE UDAIPURWATI JHUNJHUNU - 333307

VATIKA

2433. SANGA AUTONATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (–01), PLOT NO.3 & 8, VINAYAK VIHAR, VATIKA, SANGANER, JAIPUR, PIN-303905, RAJASTHAN - 303905

VIRATNAGAR

2434. K.P. AUTOMOTIVES PVT LTD (–01), KHASRA NUMBER 1156, OPP HOTEL GULMOHAR ,JAIPUR ROAD ,VIRATNAGAR,DISTT JAIPUR - 303102

SIKKIM

GANGTOK

2435. ENTEL MOTORS (–01), 6TH MILE, P.O.TADONG, GANGTOK, SIKKIM - 737102

JORTHANG

2436. ENTEL MOTORS (–01), PIPALEY ROHTAK, NEAR JNU SCHOOL, WEST SIKKIM, JORTHANG - 737121

TAMIL NADU

ALANDURAI

2437. AADHI CARS PVT LTD (–01), NO.69/1 A, SIRUVANI MAIN ROAD, URIPALLAM PUDHUR, ALANDURAI, COIMBATORE (TAMIL NADU) - 641101
PH : 8754045816.

ALANGUDI

2438. PLA MOTORS (–01), S. NO. 400/6-A-2, NO. 1/85, MANGALAPURAM, PUDDUKOTTAI TO ALANGUDI ROAD, NEAR KNP KALYANA MANDAPAM, ALANGUDI TOWN & TALUK, PUDDUKOTTAI DIST., TN - 622301 - 622301
PH : 8870454466.

ALANGULAM

2439. AADHI CARS PVT LTD (–01), SURVEY NO. 495/7, TIRUNELVELI - TENKASI ROAD, ALANGULAM, TIRUNELVELI DISTRICT, TN - 627851
PH : 8754044143.

AMBASAMUNDHAM (AMBAL)

2440. AADHI CARS PVT LTD (–01), DOOR NO. 2/253, SURVEY NO. 104/2, RTO OFFICE ROAD, VILLAGE - VAGAikulam, AMBASAMUNDHAM. - 627401

AMBUR

2441. SRI AMMAN CARS INDIA PVT LTD (–01), 25/2A, 25/2B, 26/1&28/2, PLOT NO-42, SIDCO INDUSTRIAL ESTATE, VINNAMANGALAM, CHENGILLIKUPPAM VILLAGE, AMBUR TALUK, TIRUPATHUR DIST., TAMILNADU - 631005

ANAMALAI

2442. ABT LIMITED (–01), SITE NO. 6/12, NEAR ABT SAMUGA KODAM, SETHUMADAI ROAD, ANAMALAI, COIMBATORE DISTRICT, TAMILNADU - 642104
PH : 9788174244.

ANDIPATTI

2443. ASIR AUTOMOBILES PVT LTD (–01), SURVEY NO. 459/1A1, THENI MAIN ROAD, ANDIPATTI, THENI DISTRICT, TAMILNADU - 625512

ANJUGRAMAM

2444. ATHEN CARS (–01), 994/6A, VARIYOOR, ANJUGRAMAM, AGASTHEESWARAM TALUK, , - 629401

ANNUR

2445. JAIRISHNAA AUTOSALES PVT LTD (–01), SF NO.266/1B, OTTRAPALAYAM VILLAGE, OPP. TO KG SCHOOL, ANNUR, COIMBATORE (DIST), TAMILNADU - 641653
PH : 9788850733.

ANTHIYUR

2446. SREE SARADHAMBAL AUTOMOBILES PVT LTD (–01), SURVEY NO.495/4, OLD NO.724B, KANCHI THOTTI THOTTAM, BHAVANI MAIN ROAD, ANTHIYUR. - 638501
PH : 8754068777.

ARACHALUR

2447. SREE SARADHAMBAL AUTOMOBILES PVT LTD (–01), SF NO: 63/2, DOOR NO: 19, ST-1, NAGARAJAPURAM, KODUMUDI ROAD, ARACHALUR, ERODE DIST., TAMILNADU- 638101. - 638101

ARAKKONAM

2448. GANESH CARS PVT LTD (-01), SURVEY NO. 556A/3, VILLAGE - ICHIPUDHUR, TALUKA - ARAKKONAM, VELLORE. - 631003
PH: 9842345399.

ARIYALUR

2449. PILLAI & SONS MOTOR COMPANY (-01), NO.1/1, NEAR ULAVAR SANTHA, JAYAMKONDAM ROAD, ARIYALUR (TAMIL NADU). - 621704

ARNI

2450. GANESH CARS PVT LTD (-01), DOOR NO. 1151/3, VELLORE MAIN ROAD, OPPOSITE TO HERO MOTORS SHOWROOM, RATNAMANGALAM BUS STOP, ARNI, THIRUVANMALAI, TAMIL NADU. - 632301
PH: 9585553266.

ARUPPUKOTTAI

2451. ASIR AUTOMOBILES PVT LTD (-01), SURVEY NO. 205/1, 5/5C, NEHRU NAGAR, ARUPPUKOTTAI TO MADURAI BYPASS ROAD, ARUPPUKOTTAI, DIST.-VIRUDHUNAGAR. - 626101
PH: 9944059911.

ATTUR

2452. S M CAR PVT LTD (-01), SF NO. 351/10A, SALEM TO CHENNAI BY PASS ROAD, APPAMASAMDURAM, ATTUR, SALEM. - 636108
PH: 7094440057.

AVADI

2453. VISHNU CARS PVT LTD (-01), SURVEY NO. 146, 147/1F & 147/G, NO. 7 VILLAGE - KAVARAPALAYAM, CTH ROAD, AVADI, DISTRICT - THIRUVALLUR, CHENNAI, TAMIL NADU - 600054

AVINASHI

2454. SHASHTI CAR PRIVATE LIMITED (-01), SURVEY NO. 373/1E, THEKKU THOTAM, NALLIGOUNDAMPALAYAM, PALANGARAI, KUPOUDAMPALAYAM POST, NH ROAD, AVINASHI EAST, TIRUPPUR DISTRICT, TAMILNADU - 641654
PH: 9429303319.

BHAVANI

2455. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-05), NO.5/1072, LAKSHMI NAGAR, NH-47, VASAVI COLLEGE (P.O.), BHAVANI, ERODE (DIST), TAMIL NADU. - 638316
PH: 9597385777.

CHENGALPETTU

2456. AIE CARS PVT LTD (-01), PLOT NO. 98/1, PULIPAKKAM VILLAGE, CHENGALPETTU, DISTRICT-KACHEEPURAM, TAMIL NADU. - 603002

2457. AIE CARS PVT LTD (-02), DOOR NO. 41, GST ROAD, PULIPAKKAM, CHANGELPET, TAMILNADU - 603202

CHENGAM

2458. GANESH CARS PVT LTD (-01), SURVEY NO. 293/3A, 3A1,VILLAGE - THUKAPETTAI, CHENGAM, DIST.-TIRUVANMALAI. - 606701
PH: 7397395289.

CHENNAI

2459. ABT LIMITED (1401-14-01), # 355-A, GST ROAD, ALANDUR, CHENNAI, TAMILNADU - 600032
2460. KHIVRAJ MOTORS PVT LTD (1404-14-01), 623 MOUNT ROAD, CHENNAI - 600006
PH: 9043014530.

2461. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-01), 16 & 17 INDUSTRIAL ESTATE, AMBATTUR, CHENNAI - 600058
PH: 9952000089.

2462. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-02), NO.17, LATTICE BRIDGE ROAD, ADYAR, CHENNAI - 600020
2463. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-02), OLD NO.155, NEW NO.123, PONRANJITHAM COMPLEX, MEDAVAKKAM MAIN ROAD, NEAR BUS TERMINUS, KEEKATTALAI, CHENNAI - 600117

2464. ABT LIMITED (1401-14-05), A/A2, BHARANI STUDIO COMPLEX, DR. BHANUMATHI KRISHNA ROAD, 22, ARCOT ROAD, SALIGRAMMAM, CHENNAI - 600093

2465. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-03), 4/321, OLD MAHABALIKPURAM RD., KOTTIVAKKAM, CHENNAI - 600040

2466. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-01), NEW DOOR NO.256 (OLD DOOR NO. 93), ARCOT ROAD, VIRUGAMBAKKAM, CHENNAI, TAMIL NADU-600092 - 600093

2467. ABT LIMITED (1401-14-07), NO. 422, KOLAPERUMAL SCHOOL STREET, POONMA MALLE HIGH ROAD, CHENNAI - 600106

2468. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (1493-14-01), 5,THIRUMURUGAN ST, KOYAMBEDU, CHENNAI - 600107
PH: 7305087055.

2469. ABT LIMITED (1411-14-01), 29, WALLS ROAD, OPP. ALBERT THEATER, EGMORE, AMBATTUR, CHENNAI - 600058

2470. VISHNU CARS PVT LTD (1427-14-02), 176/1, LUZ CHURCH ROAD, NEAR KAMADHENU THEATRE MYLAPORE, CHENNAI - 600004

2471. VISHNU CARS PVT LTD (1427-14-01), NO. 91, GST ROAD, ALWITONE ESTATE, BEHIND LAXMI THEATRE, PALLAVARAM, CHENNAI - 600043

2472. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-03), NO. 3, 200 RING ROAD, RETTERI JUNCTION, RETTERI, CHENNAI - 600099

2473. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-05), PLOT NO. - 80, BABU JAGAGEVAN RAM STREET, GERUGAMBAKKAM, CHENNAI - 600112
PH: 9952000079.

2474. KHIVRAJ MOTORS PVT LTD (1404-14-03), SURVEY NO. A1& A2, SIDCO INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032
PH: 7299971978.

2475. ABT LIMITED (1401-14-0D), NO.2/170, ECR ROAD, INJAMBAMBAKKAM, CHENNAI TAMIL NADU. - 600041

2476. AIE CARS PVT LTD (1496-01), PLOT NO.1,2,3 & 4, SURVEY NO.91/2, B1, A2 & B, NEELANKARAI, EAST COAST ROAD, CHENNAI - 600115

2477. RAJALAKSHMI CARS PVT LTD (1486-01), OLD DOOR NO.69, NEW DOOR NO.20,GRAND NELLORE TRUNK ROAD, MADHAVARAM, CHENNAI - 600060

2478. KHIVRAJ MOTORS PVT LTD (1480-02), PLOT NO. 119 & 120, ELECTRICAL & ELECTRONICS INDUSTRIAL ESTATE, PERUNGUDI, CHENNAI - 600096

2479. ABT LIMITED (1401-0E), NO. 1/132, RAJEEV GANDHI SALAI, SHOLINGANALLUR, DISTRICT - CHENNAI, TAMIL NADU. - 600119

2480. VISHNU CARS PVT LTD (1427-14-03), 4/13 LOYAL GARDEN, KALAHATHAMMAN KOVIL STREET, RAMAPURAM, CHENNAI, TAMIL NADU. - 600089

2481. VISHNU CARS PVT LTD (1487-14-01), NO.203 TO 206 MOUNT POONAMALLE ROAD, KATTUPAKKAM, CHENNAI - 600056
PH: 9677127432.

2482. VISHNU CARS PVT LTD (1487-14-02), NO. 120, MAMBAKKAM MAIN ROAD, MEDAVAKKAM, CHENNAI - 600100

2483. VISHNU CARS PVT LTD (1427-14-04), NEW S. NO. 314/1B1A, PALLAVARAM - THORAIPAKKAM RADIAL ROAD, NEAR OLD CHETTINADU CEMENT GOWDOWN, KEELAKATTALAI, CHENNAI - 600117
PH: 9940057775.

2484. VISHNU CARS PVT LTD (1427-06), PLOT NO. 4, MORISON 4 STREET, ALANDUR, CHENNAI. - 600016

2485. RAJALAKSHMI CARS PVT LTD (1486-02), OLD NO. 27, NEW NO. 22A, ALAPAKKAM MAIN ROAD, MADURAVOYAL, CHENNAI. - 600095

2486. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (1493-03), PLOT NO. G30, 3RD MAIN ROAD, 9TH STREET, AMBATTUR INDUSTRIAL ESTATE, DIAGONALLY TO TELEPHONE EXCHANGE, CHENNAI. - 600058
PH: 7305087033.

2487. POPULAR VEHICLES AND SERVICES LIMITED (-06), PLOT NO. 10, NEW SURVEY NO. 88/1A1, 88/1C, 88/1B & 88/2B, NOOMBAL MAIN ROAD, VANAKARAM, CHENNAI. - 600077

2488. AIE CARS PVT LTD (1496-14-02), PLOT NO. L-1 SIDCO INDUSTRIAL ESTATE, VILLIVAKKAM, CHENNAI, TAMIL NADU. - 600049

2489. VISHNU CARS PVT LTD (1427-14-07), SURVEY NO. 19/1A2, 83/18, DOOR NO. 113, NEAR PARIMALAM THEATER, KUNDRATHUR MAIN ROAD, MANNADY THALAI, NALLUR, SAMBA THALAI, MOONRAMKATTALAI VILLAGE, ONDI COLONY, KUNDRATHUR, CHENNAI. - 600069

2490. VISHNU CARS PVT LTD (-14-08), SURVEY NO. 62/2B, DOOR NO. 1/63, AGARAM MAIN ROAD, THIRUVANCHERRY VILLAGE, TAMBARAM TALUK, SELAIYUR, KANCHIPURAM DIST., CHENNAI, TAMIL NADU. - 600073
PH: 8056260022.

2491. ABT LIMITED (1401-14-10), S. NO: 32/2, NANDAMBAKKAM, PADMINI GARDEN, CHENNAI - 600089, TN. - 600089

2492. VISHNU CARS PVT LTD (1488-14-01), DOOR NO. 8, NP INDUSTRIAL ESTATE, JAWAHARLAL NEHRU ROAD, EKKATUTHANGAL, CHENNAI,TN - 600032
PH: 7550360444.

2493. KHIVRAJ MOTORS PVT LTD (1404-14-G1), SURVEY NO:76/A, NO.27, PLOT NO. D-2, KEELAKOTTAYUR, VANDALUR TO KELAMBAKKAM MAIN ROAD, MAMBAKKAM, CHENGALPET, CHENNAI,TN - 600127
PH: 9841591558.

2494. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-G1), SURVEY NO: 18/1B2A1A, NAZARATHPET VILLAGE, POONAMALLE, CHENNAI,TAMIL NADU- 600123 - 600123
PH: 7994449644.

2495. ABT LIMITED (1401-14-11), OLD SURVEY NO: 84/1A & 85/1A, NEW TOWN SURVEY NO:1, RACE COURSE ROAD, GUINDY, CHENNAI, TAMILNADU - 600032
PH: 9994437421.

2496. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (-14-05), NO. 273, (OLD NO. 191), TAMBARAM- VELACHEERY MAIN ROAD, NARAYANAPURAM, PALLIKARANI, CHENNAI,TN - 600100

2497. POPULAR VEHICLES AND SERVICES LIMITED (1410-07), NEW S.NO:27B,3/2A3B,3/7B & 4/8B (OLD S. NO:2/1B, 3/2,3/3B, 4/4), SEMBIUM- RED HILLS ROAD, NEAR AMBEDKAR STATUE, KATHIRVEDU, AMBATTUR TALUK, THIRUVALLUR DIST., CHENNAI, TN-600066 - 600066

Dealer Workshop (AS ON 31.01.2026)

2498. INDUS MOTOR COMPANY PRIVATE LIMITED (1495-14-01), 51/1A, DOOR NO-6, NEARBY CHENNAI TRADE CENTRE, MOUNT POONAMALLE ROAD, NANDAMBAKKAM, CHENNAI, TAMILNADU-600089 - 600089	2510. ABT LIMITED (4101-41-05), LAKSHMI THEATRE BUILDING, T.S. NO. 1199/2, TS WARD NO. 3, KEMPATTY COLONY, SOUTH UKKADAM, COIMBATORE - 641001	2524. AADHI CARS PVT LTD (4108-41-06), SF NO. 14/78-A, RENUKA SHELTERS, VILANKURICHI MAIN ROAD, KALAPATTI, COIMBATORE, TAMIL NADU-641048 - 641006 PH :8754045840.	2535. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-04), OPP. TO ANJANEYAR TEMPLE, NEAR FIVE CORNER, MADURAI ROAD, DHARAPURAM - 638656 PH :9597550777.
2499. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (-01), NO.503/1, GNT ROAD, THANDALKAZHANI, PUZHAI, REDHILLS, CHENNAI, TN-600066 - 600066	2511. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-03), 555, NSR ROAD, SAIBABA COLONY, COIMBATORE - 641011 PH :9047055667.	2525. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-11), PLOT NO. 1, RAJA STREET, KALLIMADAI, NANJAPPA NAGAR, COIMBATORE, TAMIL NADU - 641005 PH :9344870035.	2536. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SF 134/4A3, DINDIGUL BYPASS ROAD, NEAR INDIAN OIL PETROL PUMP, DHARAPURAM TOWN AND TALUKA, TIRUPPUR DIST., TAMILNADU-638656 - 638656 PH :9787853000.
2500. ABT LIMITED (1401-14-12), SURVEY NO # NO: 27, VELACHEERRY MAIN ROAD, RAM NAGAR NORTH, MADIPAKKAM, CHENNAI, TAMILNADU-600091 - 600091	2512. ABT LIMITED (4101-41-08), 15/55-C, ALAGESAN ROAD (EAST), METTUPALAYAM ROAD, COIMBATORE - 641043	2526. AADHI CARS PVT LTD (4108-41-07), SF NO: 404/1, VAIKALPALAM, PERUR MAIN ROAD, PERUR, COIMBATORE, TAMILNADU-641010 - 641010	DHARMAPURI
2501. AIE CARS PVT LTD (1496-14-03), SURVEY NO: 160/2A, 160/1C, 160/2A1 A2 & 160/2B2, KRISHNA NAGAR, MUDICHUR ROAD, WEST TAMBARAM, TAMBARAM TALUK, CHENGALPET DISTRICT, CHENNAI, TAMILNADU-600045 - 600045	2513. JAIKRISHNAA AUTOSALES PVT LTD (4107-41-01), 8/60-C&8/62-D, METTUPALAYAM ROAD, G.N.MILLS POST , NEARJOHNBOSSO CHURCH, COIMBATORE - 641029	2527. ABT LIMITED (4101-41-12), D.NO 13/7-I THONDAMUTHUR ROAD, BOMMANAPALAYAM, PN PUDUR - 641041	2537. SRI AMMAN CARS INDIA PVT LTD (-02), NEAR COLLECTOR BUNGALOW, OLD HOSUR ROAD, JETTIHALLI (PO), DHARMAPURI , TAMILNADU - 636807
2502. VISHNU CARS PVT LTD (1427-14-09), SURVEY NO:44/1, 44/1B1A &44/1A1A, RAJESH NAGAR, IRUMBULIYUR VILLAGE, SERVICE ROAD- MADURAVOYIL BYPASS, WEST TAMBARAM, CHENNAI, TAMILNADU - 600045	2514. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-07), NO 44, KANNUSAMY GOUNDER STREET, OORGOUNDER THOTTAM, SANGANUR, COIMBATORE - 641027 PH :9655219900.	2528. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-12), 313/1H1, KARASAKADU THOTTAM, GANESH NAGA MALLUMCHAMPATTI, POLLACHI MAIN ROAD - 641001	DINDIGUL
2503. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (1493-14-06), G-17, 1ST MAIN ROAD, AMBATUR INDUSTRIAL ESTATE, CHENNAI, TAMILNADU-600058 - 600058	2515. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-08), SF-94, SATHY MAIN ROAD, VISVASAPURAM, SARAVANNAMPATTI, COIMBATORE - 641013 PH :9585877775.	COONOOR	2538. PLA. MOTORS FIRM (-01), NO. 5, TRICHY MADURAI BY PASS ROAD, NH-45, DINDIGUL - 624001 PH :7010075200.
CHETPET	2516. JAIKRISHNAA AUTOSALES PVT LTD (4107-41-02), DOOR NO. 48, KAMARAJAR ROAD, LAKSHMIPURAM, PEELAMEDU, COIMBATORE, TAMIL NADU - 641004	2529. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), 78 E, BRINDAVAN SCHOOL ROAD, CONOOR, NILGRIS DIST- TN - 643102	EDAYARPALAYAM, COIMBATORE
2504. GANESH CARS PVT LTD (-01), DOOR NO: 35/C, CHETPET TOWN, CHETPET TALUKA, TIRUVANNAMALAI DIST., TAMILNADU, - 606801	2517. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-0D), 98/1 VILANKURICHI MAIN ROAD, THANEER PANDAL ROAD, COIMBATORE - 641004 PH :9655345775.	CUDDALORE	2539. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SITE NO. 2, SY. NO. 404/1A1, THADAGAM ROAD, TVS NAGAR, EDAYARPALAYAM, COIMBATORE - 641025 PH :9047081914.
CHEYAR	2518. AADHI CARS PVT LTD (4108-01), SURVEY NO.469/2, DOOR NO: 46-2, SATHY MAIN ROAD, RAMAKRISHNAPURAM, GANAPATHY, COIMBATORE - 641035	2530. ABT LIMITED (-01), K. V. SUBRAMANIAM NAGAR, CHIDAMBARAM MAIN ROAD, CUDDALORE O. T. - 607003	ERODE
2505. GANESH CARS PVT LTD (-01), NO.16, KANCHEEPURAM ROAD, CHEYYAR, TIRUVANNAMALAI DISTT. - 604407 PH :9787669339.	2519. ABT LIMITED (4101-41-0D), 36-A GANDHI NAGAR, SUNDARAPURAM, COIMBATORE (DIST) COIMBATORE - 641024	2531. VISHNU CARS PVT LTD (-01), SURVEY NO. 35/8, 35/8A, 35/21, 35/6, 35/6A1A, 35/20, VILLAGE - PERIYA KANANGAKUPPAM, CUDDALORE - 607001 PH :7338884131.	2540. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), 23/1, PERUND, URAI ROAD, ERODE, - 638011 PH :9677987777.
CHIDAMBARAM	2520. AADHI CARS PVT LTD (4108-02), NEAR KOVAI MEDICAL CENTRE & HOSPITAL, AVINASHI ROAD, CIVIL AERODROME POST, CHINNIVAMPALAYAM, COIMBATORE - 641004	CUMBUM	2541. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-06), SURVEY NO. 1363/3, 1363/5, 1363/6, BEHIND MANIKAVASAKAR COLONY BUS STOP, OPPOSITE TO CANARA BANK, KARUR BYPASS ROAD, SOLAR, ERODE - 638002 PH :6385805777.
2506. VISHNU CARS PVT LTD (-01), SURVEY NO. 102/2 & 102/5, BHUVANAGIRI MAIN ROAD, KEERAPALAYAM, CHIDAMBARAM TOWN, CUDDALORE, TAMIL NADU. - 606802	2521. AADHI CARS PVT LTD (4108-41-03), NO.71, OLD SRIRAM THEATRE COMPLEX, MARUDHA MALAI MAIN ROAD, VADAVALLI, COIMBATORE - 641041	2532. MEENAKSHI AUTO ZONE PVT LTD (-01), PATTI NO. 4388, SURVEY NO. 1003/2 & 1003, VILLAGE - UTHAMPURAM, SUB DIST.-CUMBUM, TAMIL NADU. - 625516 PH :9940094881.	2542. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (-01), OLD G.S. NO. 337 (1 TO 4), RS NO. 259/11A, 10.9.8., SATHY ROAD, PERIYA SEMUR VILLAGE, ERODE, TAMILNADU - 638003 PH :9171791991.
CHINNAMANUR	2522. AADHI CARS PVT LTD (4108-41-04), PLOT NO.295, RADHA RANI THEATER COMPLEX, NEAR JAYASHANTHI THEATER, TRICHY ROAD, ONDIPUDUR, COIMBATORE - 641005	DENKANIKOTTAI	2543. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-08), RF. NO. 17/1, 2, CAVERI ROAD, KARUNGALPALAYAM, ERODE, TAMILNADU - 638003 PH :8098825000.
2507. ABT LIMITED (-01), SF NO. 446 /1A, WARD A, BLOCK-2, TS NO.8/15, PERIYAKULAM TO CHINNAMANUR MAIN ROAD, KEELAPOOLANANDHAPURAM, CHINNAMANUR MUNICIPAL TOWN & TALUK, THENI DIST., TN- 625515 - 625515 PH :9715863213.	2523. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-0E), PLOT NO. 210, PALAKAD ROAD, BK PUDUR, COIMBATORE, TAMIL NADU. - 641008 PH :7094688870.	DEVAKOTTAI	2544. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-09), SF.NO.245, KANDHAIYAN THOTTAM, SOOLAI, SATHY ROAD, VEERAPPANCHATTIRAM, ERODE, TAMILNADU - 638004 PH :9655240486.
COIMBATORE		DHARAPURAM	
2508. ABT LIMITED (4101-41-06), 744, PULIYAKULAM ROAD, P.N. PALAYAM, COIMBATORE - 641037 PH :9944400987.			
2509. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-01), IYER HOSPITAL PREMISES, TRICHY ROAD, COIMBATORE - 641005 PH :8220862666.			

2545. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (-02), R.S. NO:1098/3, VINAYAGAR KOVIL STREET, TELEPHONE NAGAR, POONDURAI MAIN ROAD, ERODE, TAMILNADU - 638002 PH :9626711444.

GANGAVALI

2546. THRIVENI CAR COMPANY PVT LTD (-01), SURVEY NO # SF NO. 22/3A/1A, 106 ATTUR MAIN ROAD, GANGAVALLI, SALEM, TN - 636105 PH :9159722299.

GOPICHETTI PALAYAM

2547. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-03), NO. 318, CUTCHERY, GOBICHETTI PALAYAM - 638476 PH :9597560777.

GUDALUR

2548. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), 12/294 B6- B9, SURVEY NO:297/3A, SULTHAN BATTERY- DEVARSHOLA- GUDALUR ROAD, GUDALUR, NILGIRIS, TN- 643212 - 643212

GUDIMANGALAM

2549. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO 347 7 347/1, GUDIMANGALAM, TAMIL NADU - 642201

GUDIYATHAM

2550. GANESH CARS PVT LTD (-01), SURVEY NO.250/1, NEAR NH-75, GANDHI NAGAR, SETHUVADAI, GUDIYATTAM - 635803

GUDUVANCHERY

2551. VISHNU CARS PVT LTD (-01), 52, THAILAVARAM VILLAGE, BEHIND HOTEL PATTIKADU, GUDUVANCHERRY, KANCHEEPURAM DISTT. - 603203

GUMMIDIPOONDI

2552. RAJALAKSHMI CARS PVT LTD (-01), PLOT NO. F-13, SURVEY NO. 262/2, SIPCOT INDUSTRIAL COMPLEX, VILLAGE - PAPPANAKUPPAM, GUMMIDIPOONDI, THIRUVALLUR - 601201

HARUR

2553. SRI AMMAN CARS INDIA PVT LTD (-01), 429/9, HARUR SALEM MAIN ROAD, HARUR POST, DHARMAPURI, TAMIL NADU - 636903

HOSUR

2554. SRI AMMAN CARS INDIA PVT LTD (-01), P.O.- PERANDAPALLI, NH-7, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109

IDAPPADI

2555. THRIVENI CAR COMPANY PVT LTD (-01), SURVEY NO.330/3B/1B, AVANI PERUR KILMUGAM VILLAGE, IDAPPADI DISTT. SALEM - 637101 PH :9003311488.

KALLAKURCHI

2556. ABT LIMITED (-01), SURVEY NO. 215/4, NEAR AKT SCHOOL, DURUGAM ROAD, NEAR DOORDARSHAN BLDG, NEELAMANGALAM VILLAGE., KALLAKURICHI TALUK & DIST., TAMILNADU - 606202 PH :9047514890.

2557. S M CAR PVT LTD (-01), SF: 31/3B, NO. 19 EMAPPER VILLAGE, KALLAKURICHI, TAMILNADU - 606213 PH :7094440010.

KANCHEEPURAM

2558. GANESH CARS PVT LTD (-02), ANBU NAGAR, DHIMMA SAMUDRAM POST, NEAR VELLA GATE, CHENNAI BANGALORE NH-4, KANCHEEPURAM - 631502 PH :9842306061.

KANGAYAM

2559. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), NO. 407/263, TIRUPPUR ROAD, KANGAYAM TALUK & TOWN, TIRUPPUR DIST. ,TAMIL NADU. - 638701 PH :708531777.

KARAIKUDI

2560. ABT LIMITED (4202-05), 42-43 KOVILLOOR ROAD, OPP. TNSTC DEPOT - 630302

2561. SIVA AUTOMOTIVE TRADING PVT LTD (-01), NO. 73, SUBRAMANIANPURAM 9TH STREET, COLLEGE ROAD, KARAIKUDI, SIVAGANGA DIST, TAMILNADU-630002 - 630002 PH :7402710000.

KARUMATHAMPATTI

2562. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SF: NO.281/B, NEAR BHARAT PETROL BUNK, VILLAGE - VAGUTHANKADU, SOMANUR ROAD, KARUMATHAMPATTI TOWN, TALUK-PALLADAM, DISTT. COIMBATORE. - 641659 PH :9159210008.

KARUNGAL

2563. ATHEN CARS (-01), SURVEY NO. 639/5, KARUNGAL TOWN, VILAVANCODE TALUK, KANYAKUMARI DISTRICT, TAMILNADU - 629157 PH :7094434179.

KARUR

2564. ABT LIMITED (-01), SF NO. 529/1, SALEM BY PASS, ROAD, VENGAMEDU CIRCLE, SEMMADAI - 639002

KATPADI

2565. GANESH CARS PVT LTD (-04), 170/2B THIRUVALLAM ROAD, ARUPPARUTHI VILLAGE, KATPADI, VELLORE DISTT. - 632004 PH :9842313139.

KATTUMANNARKOIL

2566. VISHNU CARS PVT LTD (-01), SURVEY NO. 6& 7, PERIYAKULAM VADA KARAI, OPP TO GNANAVINAYAGAR KOIL, KATTUMANNARKOIL TOWN AND TALUK, CUDDALORE DIST., TAMILNADU - 608301 PH :7358004555.

KAWALKINARU

2567. AADHI CARS PVT LTD (-01), SURVEY NO:1943/1, SURESH COMPLEX, KANYAKUMARI BYEPASS ROAD, KAWALKINARU JUNCTION, KAWALKINARU (VADAKANKULAM), TIRUNELVELI, - 627105 PH :7339111259.

KELAMBAKKAM

2568. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (-01), AGP MAHAAL, SURVEY NO.43, OMR, 60 FEET VEERANAM HIGH ROAD, PADUR, KELAMBAKKAM, CHENGALPATTU DISTRICT, TAMIL NADU - 603103 PH :7305087002.

KINATHUKADAVU

2569. AADHI CARS PVT LTD (-01), NO.212, KAMARAJ NAGAR, SOLAVALAM PALAYAM PANJAAYATH, KINATHUKADAVU DISTT. COIMBATORE (T.N.) - 642109

KODUMUDI

2570. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO.548/A, KARUR MAIN ROAD, NEAR BUS STAND, KODUMUDI. - 638151 PH :8754756777.

KOTAGIRI

2571. AADHI CARS PVT LTD (-01), SURVEY NO.89/79, OOTY MAIN ROAD, KOTAGIRI, DISTT. NILGIRIS, TAMIL NADU. - 643217

KOVILPATTI

2572. ASIR AUTOMOBILES PVT LTD (-01), OLD NO.1, NEW NO.13, SATTUR MAIN ROAD, KOVILPATTI (TAMIL NADU) - 628501

KRISHNAGIRI

2573. SRI AMMAN CARS INDIA PVT LTD (-03), NH-7,NR. AAVIN DAIRY, MOTTUR, SALEM BYE PASS ROAD, KRISHNAGIRI, TAMILNADU - 635001

KULASEKHARAM

2574. ATHEN CARS (-01), ITE NO : 409/17A - ARANIVILAI, NEAR RANGE OFFICE, CONVENT ROAD - KULASEKARAM, KALKULAM -TALUK,KANYAKUMARI DIST. TN - 629161 PH :7094471569.

KUMBAKONAM

2575. PILLAI & SONS MOTOR COMPANY (-02), 369/2 B, KUMBAKONAM CHENNAI MAIN ROAD, KUMBAKONAM, TANJAVUR - 612501

2576. PILLAI & SONS MOTOR COMPANY (-06), D. NO. HP-1, GOVT. INDUSTRIAL ESTATE, SIDCO, THIRUBHUVANAM TOWN & POST, KUMBAKONAM, THANJAVUR DISTRICT, TAMILNADU - 612103 PH :8489900136.

2577. PLA MOTORS (-01), 139/2, 139/3, VELAPETTAI AGRAHARAM, CHENNAI BYPASS ROAD, KUMBAKONAM - 612501

LALGUDI

2578. PILLAI & SONS MOTOR COMPANY (-01), SURVEY 98/4, ANGARAI VILLAGE, LALGUDI TALUK, TIRUCHIRAPPALLI VILLAGE, LALGUDI, TAMIL NADU - 621601

MADATHUKULAM

2579. ABT LIMITED (-01), SF NO:143/A2D, 143/A2B, NO-88,SY. NO. NH 209, NEAR UNION OFFICE, AGRAHARAKANNADIPIUTHUR VILLAGE, UDDUMALAI MAIN ROAD, MADATHUKULAM, TIRUPPUR DIST, TN - 642113

MADURAI

2580. ABT LIMITED (4202-02), MADURAI-DINDIGAL BYE PASS ROAD, NEAR FATIMA COLLEGE, MADURAI - 625018

2581. ABT LIMITED (4202-42-04), 09, 109A, GST ROAD, TIRUPARANKUNDRAM, MADURAI - 625005 PH :9600966164.

2582. SIVA AUTOMOTIVE TRADING PVT LTD (4205-01), 2C, GATE LOCK ROAD, NEAR NEW RAMNAD ROAD, MADURAI - 625016 PH :7402780000.

2583. ASIR AUTOMOBILES PVT LTD (4206-01), 9, CHAMBAKULAM, MELUR MAIN ROAD, MATTUTHAVANI, MADURAI, TAMIL NADU - 625007 PH :9944059911.

2584. SIVA AUTOMOTIVE TRADING PVT LTD (4205-02), NO. 6-A, TPK ROAD, NEAR SAIBABA TEMPLE, ANDALPURAM, MADURAI. - 625003

2585. MEENAKSHI AUTO ZONE PVT LTD (4207-01), PLOT NO. 25 D, SIDCO INDUSTRIAL ESTATE, KAPPALUR, MADURAI, TAMIL NADU. - 625008 PH :9427995681.

2586. MEENAKSHI AUTO ZONE PVT LTD (4207-42-02), SURVEY NO. 238/2A, PLOT NO. 36, 37, 38, TALLAKULAM VILLAGE, SIVAGAMI NAGAR, NATHAM MAIN ROAD, MADURAI - 652014 PH :9940224881.

2587. SIVA AUTOMOTIVE TRADING PVT LTD (4205-42-03), PATA NO. 615, SURVEY NO. 32/2, 32/4, THENI MAIN ROAD, ACHAMPATHU, MADURAI, TN - 625019 PH :7402738888.

MADURANTHAKAM

2588. AIE CARS PVT LTD (-01), SURVEY NO. 38/3 A2B, NH-45, MADURANTHAKAM, KANCHIPURAM. - 603306

Dealer Workshop (AS ON 31.01.2026)

MALLASAMUDRAM

2589. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(-01), SF NO. 194/3C, MALLASAMUDRAM MAIN
ROAD, MALLASAMUDRAM TOWN,
TIRUCHENGODE TALUK, NAMAKKAL DIST.,
TAMIL NADU. - 637503
PH :9894932019.

MALLUR

2590. THRIVENI CAR COMPANY PVT LTD (-01),
SURVEY NO.50/4A, AMANI AMMAPALAYAM
VILLAGE, DISTT.: DADHAGAPATTY SUB
REGISTRATION , MALLUR DISTT. SALEM -
636309

MANAMADURAI

2591. ABT LIMITED (-01), NO. 35, OLD RAMNAD
ROAD, MANAMADURAI TOWN, DISTRICT -
SIVGANGAI. - 630606
PH :9994450331.

MANAPPARAI

2592. PILLAI & SONS MOTOR COMPANY (-01), PLOT
NO.262, TRICHY DINDIGUL BYPASS ROAD,
VENGAIKURUCHI VILLAGE,MANAPPARAI,
TRICHY,TN - 621307
PH :8489900908.

MANGALAPURAM

2593. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(-01), DOOR NO. 1/518, SURVEY NO. 75/1,
ATTUR MAIN ROAD, MANGALAPURAM (POST),
TALUK -RASIPURAM, DISTRICT - NAMAKKAL. -
636202
PH :7094447871.

MANNARGUDI

2594. PILLAI & SONS MOTOR COMPANY (-01), NO. 37,
THIRUTHURAIPOONDI ROAD, MANNARGUDI,
THIRUVARUR DISTRICT, TAMIL NADU. - 614001
PH :7094411675.

MAYILADUTHURAI

2595. PILLAI & SONS MOTOR COMPANY (-04),
46,VELLALAGARAM VILLAGE,
MAYILADUTHURAI, TAMILNADU - 609007

MECHERI

2596. S M CAR PVT LTD (-01), SURVEY NO. 139A/5,
PATT A NO. 653, AMANI M.KALIPATTY VILLAGE,
MECHERI TOWN, METTUR TALUK, SALEM
DIST., TAMIL NADU. - 636453
PH :7094440010.

MELUR

2597. SIVA AUTOMOTIVE TRADING PVT LTD (-01),
OLD SN. 138/1, SURVEY WARD C, BLOCK NO. 1,
T.S. NO. 21/7, VILLAGE AND TOWN - MELUR,
MELUR , DIST-MADURAI. - 625109
PH :8098120000.

METTUPALAYAM

2598. ABT LIMITED (4101-0C), PLOT NO. 6 TO
9,PONVIZHA NAGAR, KARAMADAI KOVAI MAIN
ROAD, METTUPALAYAM - 641043

METTUR

2599. THRIVENI CAR COMPANY PVT LTD (-01), S.F.
NO. 73/7A3C, METTUR TO BHAVANI ROAD,
NEAR NATAMANGALAM BUS STOP,
MADHAIYANKUTTAI (PO), METTUR TALUK,
SALEM, TAMILNADU - 636452
PH :9159566999.

MINJUR

2600. RAJALAKSHMI CARS PVT LTD (-01), PLOT NO.
27, SRI JANAKI RATHINA NAGAR, VILLAGE AND
TOWN - MINJUR, PONNERI - 601 203, DISTRICT
- THIRUVALUR. - 601203

NAGAPATTINAM

2601. PILLAI & SONS MOTOR COMPANY (-01),
NO.181, KEELA ANTHANAPETTAI,
ANTHANAPETTAI, P.O. - MANJAKOLLA,
PUTHUR, NAGAPATTINAM DISTT. TAMIL NADU -
611106
PH :4365220250.

NAGERCOIL

2602. ATHEN CARS (-01), RESURVEY NO. G.3/9-7,
BUILDING NO. 254-A/3 & 4 K.P ROAD
,PARAVATHIPURAM, NAGERCOIL
,KANYAKUMARI DISTRICT TAMILNADU - 629003
PH :8012029777.

2603. ATHEN CARS (-02), SURVEY NO. 54/1,2,4,6 & 11
KOTHAIGRAMAM OZHUGINASERY,
THERAKALPUTHUR VILLAGE, NAGERCOIL,
KANYAKUMARI DISTRICT, TN-629001 - 629001

2604. AADHI CARS PVT LTD (-05), PLOT NO. 14,
INDUSTRIAL ESTATE, KONAM, NAGERCOIL,
PIN-629004 - 629003

NAMAKKAL

2605. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(-01), SURVEY NO. 1/10-11, NEAR MURUGAN
TEMPLE, SALEM ROAD, NAMAKKAL - 637001
PH :937164888.

2606. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(-03), 1/412/1 NEAR PON NAGAR,
MUDALAIPATTY, SALEM ROAD, NH-7,
NAMAKKAL (TAMIL NADU) - 637001
PH :737192888.

NANGUNERI

2607. AADHI CARS PVT LTD (-01), DOOR NO: 38 / 1,
BHASKAR NAGAR, THAMBUPURAM,
NANGUNERI, TIRUNELVELI DISTRICT. PIN:
627108 - 627108

NATRAMPALLI

2608. GANESH CARS PVT LTD (-01), NO:8/12-1, NEAR
ARJUNA SULOCHANA MAHAL, BENGALURU-
CHENNAI MAIN ROAD,VELAKALNATHAM,
NATRAMPALLI, TIRUPATTUR DIST. TAMIL NADU
- 635854. - 635854

NAZARETH

2609. ASIR AUTOMOBILES PVT LTD (-01), OLD NO.
49B, 49C & 49D, NEW NO. - 194, 195 & 196,
CHURCH STREET, NAZARETH, TUTICORIN
DIST. TN- 628617 - 628617

NEGAMAM

2610. ABT LIMITED (-01), 68, 69, ABT BUS STAND,
PALLADAM ROAD, PERIA NEGAMAM,
POLLACHI, TAMIL NADU - 642120

NEYVELI

2611. VISHNU CARS PVT LTD (-01), SURVEY
NO:545/2A1A, NH-45C, OPP. NATIONAL
COLLEGE,KUMBAKONAM - CHENNAI HIGH
WAY, NEAR NEYVELI ARCH GATE, NEYVELI
T.S, KEELAKOLLAI, MARUNGUR
POST,PANRUTTI,CUDDALORE DISTRICT,
TAMILNADU - 607103
PH :9384059575.

OMALUR

2612. SRI AMMAN CARS INDIA PVT LTD (-04), 123, 3B,
NH-7, BANGALORE BYE PASS ROAD,
KOTTAMETTUPATTI, OMALUR, SALEM (DIST.),
TAMIL NADU - 636012

2613. THRIVENI CAR COMPANY PVT LTD (-01), PLOT
NO. 44 & 45, PALANIYAPPA NAGAR LAYOUT,
NH-7, KAMALAPURAM VILLAGE, OMALUR,
DISTRICT - SALEM, TAMIL NADU - 636309

OOTY

2614. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(4103-05), VIJAYANAGARAM FARM ROAD,
NEAR ROSE GARDEN, OOTY - 643001

PADAPPAI

2615. VISHNU CARS PVT LTD (-01), SURVEY
NO.368/2A/1, 368/2A/2,
VANDALLUR-WALAJABAD MAIN ROAD,
PADAPPAI EAST, CHENNAI. - 601301
PH :8754417168.

PALACODE

2616. SRI AMMAN CARS INDIA PVT LTD (-01),
SURVEY NO 620/1A2,
620/1A2B,KARAKATHAHALLI VILLAGE,
PALACODE,DHARMAPURAM DISTRICT,TAMIL
NADU - 638608

PALANI

2617. PLA MOTORS (-02), NO:13-1-11C-1, WEST
AYAKUDI, DINDIGUL ROAD, PALANI, DINDIGUL
DISTRICT, TAMIL NADU - 624613

PANRUTI

2618. VISHNU CARS PVT LTD (-01), SURVEY NO: 87/4,
87/T R V NAGAR, LAKSHMI NARAYANAPUR AM
VILLAGE-PANRUTI - 607106

PARAMATHIVELUR

2619. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(-01), SURVEY NO. 171, NEAR KONGU SCHOOL,
NAMAKKAL BYPASS ROAD, PADAMUDI
PALAYAM, TALUKA - PARAMATHIVELUR,
NAMAKKAL , TAMIL NADU. - 638182
PH :887066599.

PATTUKOTTAI

2620. PILLAI & SONS MOTOR COMPANY (-01),
SURVEY NO. 85/6, 85/4, 84/6, DOOR NO.314/11,
SRI JANAGALAKSHMI NAGAR, THANJAVUR
ROAD, ALADIKUMULAI VILLAGE, TALUK
PATTUKOTTAI, THANJAVUR. - 614615
PH :7094433074.

PAVITHRAM

2621. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(-01), SURVEY NO. 102/1B, NAMAKKAL MAIN
ROAD, PAVITHRAM - 637021
PH :9600320888.

PENNAGARAM

2622. SRI AMMAN CARS INDIA PVT LTD (-01),
SURVEY NO. 419/1, VILLAGE -
PARUVADHANAALLI, PENNAGARAM,
DHARMAPURI. - 636810
PH :9715047700.

PERAMBALUR

2623. PLA MOTORS (2305-04), SURVEY NO.88/1,
A3,NH45, ELAMBALUR VILLAGE, PERAMBALUR,
TAMILNADU - 621212
PH :8870004960.

PERNAMBIT

2624. SRI AMMAN CARS INDIA PVT LTD (-01),
SURVEY NO:708,PLOT NO: 87.88 & 89,
PERNAMBIT TO GUDIYATTAM ROAD,
PERNAMBIT VELLORE DISTRICT, TAMIL NADU
- 635810 - 635810
PH :7094403100.

PERUMBAKKAM

2625. KHIVRAJ MOTORS PVT LTD (-01),
NO.1,VARALAKSHMI NAGAR, THIRUVALLUR
ROAD, PERUMBAKKAM,KANCHIPURAM DIST,
TAMILNADU- 631402 - 631402
PH :7338786693.

PERUNDURAI

2626. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(-01), SF NO.542/1, KOVAI MAIN ROAD,
PERUNDURAI VILLAGE, PERUNDURAI DISTT.
ERODE, TAMIL NADU - 638052
PH :959740777.

PN PALAYAM

2627. JAIKRISHNAA AUTOSALES PVT LTD (4107-04), NO. 12/190 SRKY PORT, MTR ROAD, P.N. PALAYAM, COIMBATORE - 641020
2628. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), NO.: 12/90, TKV GARDEN, SRKV POST, MTP ROAD, P.N. PALAYAM, TAMIL NADU - 641020

POCHAMPALLI

2629. SRI AMMAN CARS INDIA PVT LTD (-01), NEW SURVEY NO. 561/5, VILLAGE - JUMBUKUTTANPATTI, POCHAMPALLI, KRISHNAGIRI - 635206

POLLACHI

2630. ABT LIMITED (-01), NACHIMUTHU POLYTECHNIC CAMPUS, UDUMALPET ROAD, POLACHI - 642003

POLUR

2631. GANESH CARS PVT LTD (-01), AZHAGO COMPLEX, SURVEY NO:77/1, CUDADALOR TO CHITTOOR ROAD, POLUR, THIRUVANNAMALAI DISTRICT, TAMILNADU - 606803
PH :9842345200.

PONNAMARAVATHY

2632. P.L.A. MOTORS (-01), NO.4-1B2B & 4-1B3, PUDUKKOTTAI MAIN ROAD, PONNAMARAVATHI, PUDUKKOTTAI DIST., TAMILNADU-622407 - 622407

PONNERI

2633. ABT LIMITED (-01), DOOR NO.18(S.F.NO42/1A-3), KRISHNA PURAM, PONNERI TALUK, - 601204

PUDDUKOTAI

2634. P.L.A. MOTORS (2305-02), NO. 10, MARIAMALAI NAGAR, ALANGUDI- THIRUMAYAM ROAD, PUDUKOTTAI, - 622003

PULIYANGUDI

2635. AADHI CARS PVT LTD (-), TENKASI -PULIYANKUDI ROAD, PULIYANKUDI, DISTRICT-TENKASI, TAMILNADU - 627855

PUNJAI PULIAMPATTI

2636. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO. 250/1, PANKAU PULIYAMPATTU MUNICIPALITY, PUNJAI PULIYAMPATTI - 638459, SATHY THALUK, ERODE - 638459
PH :6385810777.

RAJAPALAYAM

2637. MEENAKSHI AUTO ZONE PVT LTD (-01), DOOR NO. 96, COTTOM MARKET, TENKASI-MADURAI ROAD, RAJAPALAYAM, VIRUDHUNAGAR DIST., TAMILNADU - 626117
PH :9443785811.

RAMANATHAPURAM

2638. SIVA AUTOMOTIVE TRADING PVT LTD (-01), SURVEY NO. 172/1B2C, 172/2C, VILLAGE - ACHUNTHANAYAL, ACHUNTHANGAL GROUP, TALUK - RAMANATHAPURAM, RAMANATHAPURAM. - 623502
PH :8098110000.

2639. MEENAKSHI AUTO ZONE PVT LTD (-01), SURVEY NO: 458/4, MADURAI - RAMESHWARAM ROAD, NEAR RAMNAGAR BUS STOP, RAMANATHAPURAM, TAMIL NADU - 623503 - 623503

RAMESHWARAM

2640. SIVA AUTOMOTIVE TRADING PVT LTD (-01), NO-2307, SURVEY NO-279/3A, RAMNAD ROAD, ARIYANKADU, RAMESHWARAM, RAMANATHAPURAM DISTRICT, TAMILNADU PH :7402788998.

RANIPET

2641. GANESH CARS PVT LTD (-01), SURVEY NO. 44/1, PLOT NO. 484, OPPOSITE TO THIRUMALAI CHEMICALS, SIPCOT LAYOUT OF HOUSE SITES, SIPCOTS INDUSTRIAL COMPLEX, RANIPET, TAMIL NADU. - 632403
PH :9842330388.

RASIPURAM

2642. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO:41/1 B1A, MOOLAKADU VILLAGE, MASAKALIPATTI, SALEM MAIN ROAD, RASIPURAM DISTT. NAMAKKAL - 637401

REDHILLS

2643. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-04), NO.503, G.N.T. ROAD, REDHILLS, CHENNAI - 600066
PH :9952000078.

SALEM

2644. ABT LIMITED (4101-03), 32 THAMANA CHETTY ROAD, ARISIPALAYAM, SALEM - 636009

2645. THRIVENI CAR COMPANY PVT LTD (-01), 12/2E1, SUBRAMANIA NAGAR, 2ND GATE, JUNCTION ROAD, SALEM. - 636005

2646. S M CAR PVT LTD (-01), SF NO. 64/2C3, ATTUR SALEM BYPASS ROAD, PINANGUKARAR THOTTAM, SEELANIKANPATTY, SALEM. - 636202

2647. THRIVENI CAR COMPANY PVT LTD (-03), SURVEY NO. 57, VILLAGE - MASINAICKENPATTY, AYYATHIAPPATTINAM, AMMAPET, SALEM. - 636103

2648. S M CAR PVT LTD (-02), DOOR NO. 50/28, SF NO. 1/10B, SARADHA COLLEGE MAIN ROAD, ALAGAPURAM PUDHUR VILLAGE, HASTHAMPATTY, SALEM, TAMILNADU - 636007
PH :7094440053.

SANKAGIRI

2649. THRIVENI CAR COMPANY PVT LTD (-01), SURVEY NO.171/5B, KCK PLAZA, KACHERIDADU, DEPUTY COLLECTOR ROAD, SALEM, SANKAGIRI (TAMIL NADU) - 637301
SANKARANKOVIL

2650. AADHI CARS PVT LTD (-01), PLOT NO. 132/H, OPPOSITE TO NEW TALUK OFFICE, TIRUVENGADAM ROAD, SANKARANKOVIL. - 627756
PH :7397728025.

SATHYAMANGALAM

2651. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO. 51, 54 & RS NO. 37, KOTTUVEERAMPALAYAM VILLAGE, SATHYAMANGALAM - 638 401, DISTRICT - ERODE, TAMIL NADU - 638401
PH :9597592777.

SATTUR

2652. MEENAKSHI AUTO ZONE PVT LTD (-01), SURVEY NO. 18/10, CHATRAPATTI VILLAGE, MADURAI KANYAKUMARI NATIONAL HIGHWAYS, SATTUR, VIRUDHUNAGAR DISTRICT, TAMILNADU - 626203
PH :9940094881.

SEYDUNGANALLUR

2653. ASIR AUTOMOBILES PVT LTD (-02), SURVEY NO. 59/3E, TIRUCHENDUR ROAD, SEYDUNGANALLUR TOWN, TALUK - SRIVAIKUNTAM, TUTICORIN DIST., TAMIL NADU - 628809
PH :8344992220.

SHOLINGUR

2654. GANESH CARS PVT LTD (-01), NO.401, ARAKKONAM MAIN ROAD, OPPOSITE TVS FOUNDARY, PANDIYANELLORE, SHOLINGUR, WALAJA TALUK, RANIPET DISTRICT, TAMILNADU - 631102
PH :7397395259.

SIVAGANGAI

2655. ASIR AUTOMOBILES PVT LTD (-01), S. NO: 144/1, SIVAGANGAI-THONDI ROAD, PAIYAUROPILLAIVAYAL, SIVAGANGAI, TAMILNADU - 630561
PH :9750372220.

SIVAKASI

2656. MEENAKSHI AUTO ZONE PVT LTD (-01), 372 D & E, ARUNACHALAM COMPLEX, THIRUTHANGAL ROAD, SIVAKASI. - 626123

SRIPERUMBUDUR

2657. RAJALAKSHMI CARS PVT LTD (-01), SURVEY NO. 150/1A, DOOR NO 1C, THERADI STREET, NEW VILLAGE NO 42, SRIPERUMBADUR, KANCHEEPURAM DISTRICT, TAMIL NADU. - 602105
PH :8939995469.

SRIVILLIPUTHUR/RAJAPALAYAM

2658. ABT LIMITED (4202-03), NO. 10/32, PADIKKASUVAITHANPATTI, NEAR RTO OFFICE, SRIVILLIPUTHUR, VIRUDHUNAGAR, TAMIL NADU - 626125

SULUR

2659. JAIKRISHNAA AUTOSALES PVT LTD (4107-05), DOOR NO. 37 F, RANGANATHAPURAM, TRICHY ROAD, SULUR - 641402

TENKASI

2660. AADHI CARS PVT LTD (-01), DOOR NO. 3/50-1, SURVEY NO. 447B, TIRUNELVELI MAIN ROAD, VILLAGE - KUNARAMANALLUR, TENKASI. - 627814
PH :9500991475.

2661. AADHI CARS PVT LTD (-02), DOOR NO. 47, MADHALAMPARAI, TENKASI AMBAI HIGHWAY, TENKASHI, TIRUNELVELI DIST., TAMILNADU. - 627814
PH :9500991475.

THALAIVASAL

2662. THRIVENI CAR COMPANY PVT LTD (-01), S NO: 5/268, NEAR NATHANKARAI TOLL PLAZA, VADAKKU KADU, NATHANKARAI, THALAIVASAL, SALEM, TAMILNADU - 636122

THAMMAPATI

2663. S M CAR PVT LTD (-01), SURVEY NO # SF: 328/11, NAGIAMPATTI, THAMMAPATTI, SALEM DISTRICT, TAMILNADU - 636113. - 636113
PH :7094440010.

THANJAVUR

2664. PILLAI & SONS MOTOR COMPANY (-01), 12A, SELVAM NAGAR, TANJAVUR, TAMILNADU - 613007

2665. P.L.A. MOTORS (-01), SURVEY NO. 173/6B4, TRICHY-THANJAVUR ROAD, NANJIKOTTAI BYPASS, THANJAVUR, TAMILNADU - 613005

THARAMANGALAM

2666. THRIVENI CAR COMPANY PVT LTD (-01), NO. 1/122, KATTAMPATTI, JALAKANDAPURAM, THARAMANGALAM, SALEM DIST., TAMIL NADU. - 636501

THELLAR

2667. SRI AMMAN CARS INDIA PVT LTD (-01), THIRUVANNAMALAI BYE-PASS ROAD, THELLAR - 604406

THENI

Dealer Workshop (AS ON 31.01.2026)

2668. MEENAKSHI AUTO ZONE PVT LTD (-01), DOOR NO. 871/1, RATHINAM NAGAR, PERIYAKULAM MAIN ROAD, THENI TOWN, DISTRICT - THENI - 625531
PH :9789703881

THIRUKALKUNDARAM

2669. AIE CARS PVT LTD (-01), SURVEY NO.113/38, DOOR NO.61, MADRAS ROAD, MANGALAM VILLAGE, THIRUKALKUNDARAM, CHENGALPATTU DISTRICT, TAMIL NADU- 603 107 - 603107

THIRUKOVILUR

2670. ABT LIMITED (-01), S.NO: 729/10, NO-45, SANDAPET, AANUR, THIRUKOVILUR, KALLAKURICHI DIST - 605757

THIRUMAZHISAI

2671. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (-01), DP 30, SIDCO INDUSTRIAL ESTATE, THIRUMAZHISAI - 600124
PH :9500064259

THIRUMULLAIVOYAL

2672. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (-01), NO. 48, BALAJI NAGAR, NEW SIR IRVANSTADE FORD HOSPITAL, THIRUMULLAIVOYAL DISTT. CHENNAI - 600062
PH :7305087044

THIRUTHURAPOONDI

2673. PILLAI & SONS MOTOR COMPANY (-01), NO.246/3, SRI KRISHNA LODGE COMPLEX, THIRUVARUR ROAD, THIRUTHURAPOONDI, THIRUVARUR DIST., TAMILNADU- 614713. - 614713

THIRUVAIYARU

2674. PILLAI & SONS MOTOR COMPANY (-01), NO.5, ODAURAI STREET, THIRUVAIYARU, 613204 - 613204

THIRUVALLUR

2675. KHIVRAJ MOTORS PVT LTD (1404-04), 2151, KAKKULUR ROAD, THIRUVALLUR - 602001
2676. KHIVRAJ MOTORS PVT LTD (1404-05), PLOT NOS.218,219,220,225,226,227,228 AND S.NOS.18/5,18/6, EMPIRE CITY PART-3, KAKKALLUR VILLAGE, THIRUVALLUR TALUK, THIRUVALLUR - 602001

THIRUVANNAMALAI

2677. GANESH CARS PVT LTD (-03), NO.-5, NH-78, KRISHNAGIRI PONDY ROAD, CHINA KANKEYANUR, OPP SKP ENGG. COLLEGE, THIRUVANNAMALAI - 606601
PH :9842305072

THIRUVARUR

2678. PILLAI & SONS MOTOR COMPANY (-03), THANJAI NAGARI ROAD, OPP. TO S. P. OFFICE - 610001

2679. PILLAI & SONS MOTOR COMPANY (-01), NO. 9, WARD NO.-4, BLOCK NO. 10, NEW SY. NO. 601/6B1, SUNDARAVILAGAM, NARSINGHAMPT, THIRUVARUR TOWN & DIST., TAMIL NADU - 610001
PH :9442163509.

THISAYANVILLAI

2680. AADHI CARS PVT LTD (-01), SURVEY NO. 240/1, 7/1, HIGHWAYS ROAD, OPP. TO VO OFFICE, SELVA MARUTHUR, THISAYANVILLAI. - 627657
PH :7339511187.

THITTAKUDI

2681. VISHNU CARS PVT LTD (-), SURVEY NO 129/1, ERAMANGALAM VILLAGE, THITHAKUDI, CUDDALORE DISTRICT, TAMILNADU - 606106

THOPPUR

2682. SRI AMMAN CARS INDIA PVT LTD (-01), SITE NO. 422 /2A, BANGALORE TO SALEM HIGH WAY, AMMANI, THOPPUR VILLAGE & TOWN,NALLAMPALLI TK, DHARMAPURI DISTRICT. - 636352
PH :9790004273.

THUCKALAY

2683. ATHEN CARS (-01), DOOR NO. 576B, (RE SURVEY NO-530/7) THIRUVITHANCODE ROAD, KERALAPURAM, MUTHALAKURICHI, VILLAGE - MUTHALAKURICHI, KALKULAM-TALUK, THUCKALAY, DISCTRICT - KANYAKUMARI, TAMILNADU - 629174
PH :8012029888.

THURAIYUR

2684. PLA MOTORS (-01), D.NO.-5/300, SINGALANDHAPURAM VILLAGE, THURAIYUR DISTT. TRICHY (TAMIL NADU) - 621010
PH :9486763725.

TINDIVARAM

2685. VISHNU CARS PVT LTD (-01), SURVEY NO. 50/4, 50/5 & 63, NEAR RTO OFFICE, MOLASUR, TINDIVANAM, VILUPPURAM,TAMILNADU - 604102
PH :9500039023.

TIRUCHENDUR

2686. ASIR AUTOMOBILES PVT LTD (-01), SURVEY NO. 220/1D1A, 221/3, 221/4, 221/5, 221/5A, 221/5B, PODIHCIGI NAGAR, VILLAGE-VEERAPANDIYAPATINAM, TIRUCHENDUR, TUTICORIN. - 628215
PH :7373900220.

TIRUCHENGODE

2687. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-02), PLOT NO-10, OPP TO PONNUSWAMY KALYANA MANDAPAM, KOOTAPALLI COLONY, TIRUCHENGODE - 637001

TIRUNELVELI

2688. AADHI CARS PVT LTD (-01), PLOT NO. 261, MADURAI MAIN ROAD, KARAIERUPPU, TIRUNELVELI, TAMIL NADU - 627357
PH :9500991610.

2689. AADHI CARS PVT LTD (-03), DOOR NO. 37, RAMNAGAR, KTC NAGAR, TIRUNELVELI, TAMIL NADU - 627011
PH :9500991610.

2690. AADHI CARS PVT LTD (-04), SF NO:161/4, SF NO: 893/2, NORTH BYEPASS ROAD, GALAXY HOSPITAL BACKSIDE, PALAYANKOTTAI, TIRUNELVELI, TAMILNADU - 627001

TIRUPATHUR

2691. GANESH CARS PVT LTD (-01), SURVEY NO.54/4, TIRUPATHUR TO KRISHNAGIRI ROAD, PALLIPET VILLAGE, TIRUPATHUR DISTT. VELLORE - 635601
PH :9842308909.

TIRUPATTUR (SIVAGANGAI)

2692. ABT LIMITED (-01), DOOR NO. 8/2/29A, KARAUKUDI ROAD, TIRUPATHUR, DISTRICT - SIVAGANGAI. - 630211

TIRUPPUVANAM

2693. MEENAKSHI AUTO ZONE PVT LTD (-01), NO.21,BAKHYA NAGAR, WARD NO-1, MANDAPAM MAIN ROAD, TIRUPPUVANAM, SIVAGANGA DISTRICT, TAMIL NADU - 630611 - 630611
PH :9442799581.

TIRUPUR

2694. ABT LIMITED (4101-09), NO. 4, SABHAPATHI PURAM, NEAR TMF HOSPITAL, TIRUPUR - 641601

2695. SHASHTI CAR PRIVATE LIMITED (-01), SRI PADMINI GARDENS, KANGEYAM ROAD, OPP. ST JOSEPH SCHOOL, TIRUPUR - 641604

TIRUTHANI

2696. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (-01), NO. 9/13, CHENNAI BY PASS ROAD, OLD CHENNAI ROAD, DISTT. THIRUVALLUR, TIRUTHANI,TAMILNADU - 631209
PH :7358773860.

TIRUVANNAMALAI

2697. SRI AMMAN CARS INDIA PVT LTD (-01), 2A/2, SURVEY NO. 3676/3, ANNA SALAI, TIRUVANNAMALAI-CHENNAI NH-101, TIRUVANNAMALAI TOWN AND DIST., TAMILNADU - 602601
PH :7094471293.

TONDI

2698. SIVA AUTOMOTIVE TRADING PVT LTD (-01), SURVEY NO: 85/16, WARD 10/78, SOUTH THOPU STREET, ECR MAIN ROAD, ECR, THONDI, RAMANATHAPURAM DISTRICT, TAMIL NADU - 623409
PH :7402788820.

TRICHY

2699. ABT LIMITED (2302-23-02), 4/40, COLLECTOR OFFICE ROAD, CANTONMENT, TRICHY - 620001
2700. PLA MOTORS (2305-23-01), NO. 18/2, NA-45, DHEERAN NAGAR, TRICHY-DINDUGAI MAIN ROAD, TRICHY - 620009
2701. ABT LIMITED (2302-23-03), MADRAS TRUNK ROAD, MAMBALASALAI, TRICHY - 620005
2702. PLA MOTORS (2305-23-03), 10A & B, ALEXANDRIA ROAD, CANTONMENT, TRICHY - 620001
2703. PILLAI & SONS MOTOR COMPANY (2306-23-01), SURVEY NO. 10B, 1A/D, CHENNAI TRICHY BY-PASS ROAD, VILLAGE - THIRUNALLUR, TRICHY. - 620002
2704. ABT LIMITED (2302-04), NO.46/3, 46/5A, AGARAM VILLAGE, TIRUVERAMBUR TOWN & TALUK, TIRUCHIRAPPALLI (TRICHY) DISTRICT, TAMIL NADU - 620013. - 620013

TUTICORIN

2705. ASIR AUTOMOBILES PVT LTD (-01), SURVEY NO. 25/1B, MAPPELLAIURINI VILLAGE, ETTAYAPURAM ROAD, TUTICORIN, TAMIL NADU - 628002
PH :7373501220.

UDUMALPET

2706. ABT LIMITED (-01), 2/3, PERIYAKOTTAI PIRIVU, S.V. MILL POST, UDUMALPET - 642126

ULANDURPET

2707. ABT LIMITED (-01), S NO: 392/1A, DOOR NO: 2129/2020, ULANDURPET, KALLAKURICHI DIST, TAMILNADU-606107. - 606107

USILAMPATTI

2708. SIVA AUTOMOTIVE TRADING PVT LTD (-01), NO. 33/1B2A, USILAMPATTI - MADURAI HIGHWAY, POTTULUPATTI PANCHAYATH, USILAMPATTI, MADURAI DISTRICT, TAMILNADU-625532 - 625532
PH :7680888840.

UTHANGARAI

2709. SRI AMMAN CARS INDIA PVT LTD (-01), SURVEY NO. 104/1, 104/1B, VILLAGE - THANDIYAPPANUR, UTHANGARAI, KRISHNAGIRI. - 635304
PH :9715044600.

UTHIRAMERUR

2710. AIE CARS PVT LTD (-01), SURVEY NO:383/3B-82, UTHIRAMERUR MAIN ROAD, UTHIRAMERUR, KANCHEEPURAM DISTRICT, TAMILNADU - 603406
- UTHUKOTTAI**
2711. KHIVRAJ MOTORS PVT LTD (-01), SURVEY NO. 442/1, NEHRU BAZZAR STREET, UTHUKOTTAI, DIST.-THIRUVALLUR - 602026
PH :7299635536.
- VALLIYUR**
2712. AADHI CARS PVT LTD (-01), DOOR NO. 314A/11-14, WITHIN VADAKU VALLIOOR, REVENUE VILLAGE, VADAKKU VALLIOOR PANCHAYAT, RADHAPURAM TALUK, VALLIOOR. - 627002
PH :7373091462.
- VANDAVASI**
2713. GANESH CARS PVT LTD (-01), SURVEY NO.272, KEELSAATHAMANGALAM VILLAGE, CHETPET ROAD, VANDAVASI, TIRUVANNAMALAI, DISTT. T.N. - 604408
PH :7395802484.
- VANIYAMBADI**
2714. GANESH CARS PVT LTD (-01), NO. 197/1B1, NH-46 (AH-7), PETHAKALLUPALLI VILLAGE, NEAR TOLL GATE, VANIYAMBADI , VELLORE (DIST), TAMIL NADU. - 635801
PH :9842327709.
- VELLAKOVIL**
2715. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (-01), SURVEY NO:502/C &371/D, NO. 196,197,KOVAI KARUR MAIN ROAD, VELLAKOVIL, TIRUPUR DIST., TAMILNADU - 638111
PH :9994606000.
- VELLORE**
2716. GANESH CARS PVT LTD (-01), 91 NEW BY-PASS ROAD, VELLORE - 632004
PH :9842377110.
2717. SRI AMMAN CARS INDIA PVT LTD (-01), DOOR NO. 68, SURVEY NO. 66/7, NEAR RANGALAYA KALYANA MANDAPAM, VELLORE-KATPADI ROAD, KALINJUR VILLAGE, KATPADI TALUKA, GANDHINAGAR, VELLORE DIST., TAMIL NADU. - 632006
2718. SRI AMMAN CARS INDIA PVT LTD (-02), SURVEY NO. 316/3B2, 316/8A, 316/8B, NEAR SHELL PETROL PUMP, MELMONAVUR VILLAGE,VELLORE TALUK & DIST. ON NH48 (CHENNAI – BENGALURU HIGHWAY), VELLORE, TAMILNADUR - 632010
PH :7094471320.
2719. GANESH CARS PVT LTD (-06), SY NO. 188/2B, EDAYANSATHU, ARANI ROAD, BAGAYAM, VELLORE - 632503

VENGAL

2720. VISHNU CARS PVT LTD (-01), NEW SURVEY NO:67/1B, 67/20, CHINMAYA NAGAR,THAMARAIPAKKAM VILLAGE, VENGAL,THIRUVALLUR DIST., TAMILNADU- 601103 - 601103
PH :9500121559.

VEPPAMPATTU

2721. POPULAR VEHICLES AND SERVICES LIMITED (-01), SNO. 35/2A2, CTH ROAD 89., VEPPAMPATTU,TIRUVALLUR DIST., TAMIL NADU - 602 024. - 602024

VILLUPURAM

2722. ABT LIMITED (-02), 264/1, GINGEE MAIN ROAD, AYINAMPALAYAM, VILLUPURAM - 605602

VIRUDHACHALAM

2723. ABT LIMITED (-01), PLOT NO. 56, JUNCTION ROAD, NEAR SHANMUGA LODGE, VIRUDHACHALAM, DISTRICT – CUDDALORE, TAMIL NADU. - 606101

VIRUDHUNAGAR

2724. MEENAKSHI AUTO ZONE PVT LTD (-0A), DOOR NO:6/504, SURVEY NO. 11/6, PELAMPATTI VILLAGE,VIRUDHUNAGAR MADURAI HIGH WAY,OPPOSITE TO VVV COLLEGE. , TALUK & DIST. VIRUDHUNAGAR, TAMILNADU - 626001
PH :9940094881.

WALAJABAD

2725. AIE CARS PVT LTD (-01), SURVEY NO: 334, KANCHEEPURAM- CHENGALPET ROAD, VENGUDI, WALAJABAD VILL AND TOWN, KANCHIPURAM DIST.,TAMIL NADU631605 - 631605

TELANGANA

ACHAMPET

2726. SRI JAYARAMA MOTORS PVT LTD (-01), SURVEY :133A/3/1 HYDERABAD ROAD, ACHAMPET ,NAGARKURNOL DT - 509375

ADDANKI

2727. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO-1020/2, RAMANAGAR, ONGOLE ROAD, ADDANKI - 523201

ADILABAD

2728. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO:131/6 & 131/7, NH-44, ADILABAD TOWN ROAD, MAVALA, ADILABAD, TELANGANA - 504001
PH :9133307724.

AMANGAL

2729. THE MITHRA AGENCIES (-01), VIDHYA NAGAR COLONY,ROAD NO.5, OPPOSITE INDIAN OIL, MRO OFFICE,S NO:1439 - 509321

ARMUR

2730. VARUN MOTORS PVT LTD (-01), SURVEY NO 277, ARGUL VILLAGE, JAKARANPALLY (MANDAL), ARMUR, NIZAMABAD DISTT. (A.P.) - 503224
PH :9052901888.

BANSWADA

2731. VARUN MOTORS PVT LTD (-01), #2-138/5,SOMESHWAR SHIVAR, NEAR BIKNOOR "X" ROAD, BANSWADA(M) - 503187

BASARA

2732. ADARSHA AUTOMOTIVES PVT LTD (-01), URVEY NO 59/E, RAVINDRAPUR , BASARA, NIRMAL DISTRICT, TELANGANA - 504101
PH :8886092222.

BELLAMPALLY

2733. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO 5/31, PEDANAPALLI, BELLAMPALLY, MANCHERIAL DISTRICT, TELANGANA - 504251
PH :8886092222.

BHADRACHALAM

2734. VARUN MOTORS PVT LTD (-01), H-NO 1-138/1B-OLD SARPAKA ROAD, BHADRACHALAM, BHADRADI-KOTHAGUDEM, TELANGANA - 507111
PH :9885576602.

BHEEMGAL

2735. VARUN MOTORS PVT LTD (-01), SURVEY NO. 398, MORTHAD ROAD, - 503307

BHONGIR

2736. PAVAN MOTORS PVT LTD (-01), SURVEY NO 779, YADADRI BHONGIR DISTRICT, BHONGIR, TELANGANA - 508116

BHUPALAPALLY

2737. ADARSHA AUTOMOTIVES PVT LTD (-04), SY NO.314, HANAMKONDA ROAD, MANDAL BHUPALAPALLY, TELANGANA 6-113, JAWAHAR NAGAR, MAIN ROAD, SBH MAIN BRANCH ROAD, BHUPPALPALLY, DISTRICT - WARANGAL, ANDHRA PRADESH - 506169
PH :7799790526.

BODHAN

2738. VARUN MOTORS PVT LTD (-01), PLOT NO. 5/2, ACHANAPALLY CROSS ROAD, BODHAN, DIST. -NIZAMABAD, TELANGANA. - 503185

CHEGUNTA

2739. AUTOFIN LIMITED (-01), 1145/3, CHEGUNTA, CHEGUNTA MANDAL, MEDAK DISTRICT, NATIONAL HIGHWAY NO - 44 FACING, TELANGANA - 502255

CHEVELLA

2740. GEM MOTORS (INDIA) PVT LTD (-01), SURVEY NO. 17/A, MANDAL – CHEVELLA, DISTRICT – RANGA REDDY, TELANGANA - 510101

DAMMAPETTA

2741. VARUN MOTORS PVT LTD (-01), NEAREST H.NO 5-48 CPS SCHOOL,DAMMAPETA ,BADRI KOTHAGUDEM DT,TELANGANA

DORNAKAL

2742. ADARSHA AUTOMOTIVES PVT LTD (-01), SY NO.150, BY PASS JUNCTION, NTR CIRCLE, DORNAL, MAHBUBABAD DIST., DOORNAKAL, TELANGANA - 506381

DUBBKA

2743. ADARSHA AUTOMOTIVES PVT LTD (-01), ADARSHA AUTOMOTIVE PVT LTD, OPP. BUS DEPOT, BYPASS ROAD, SIDDIPT, TELANGANA

ETUNAGARAM

2744. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT LTD) (-01), H.NO 12-412 & 12-413,AKULAVARI GHANPUR, ETURNAGARAM, MULUGU DISTRICT,TELANGANA - 506165
PH :868828005.

GADWAL

2745. SRI JAYARAMA MOTORS PVT LTD (-02), PLOT NO. 5 & 6, BESIDE RURAL POLICE STATION, KURNOOL ROAD, MAHABUB NAGAR DISTRICT, ANDHRA PRADESH - 500125

GAJWEL

2746. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT LTD) (-01), SURVEY NO. 220, VILLAGE – PRAGNAPUR, GAJWEL, DISTRICT – MEDAK, TELANGANA. - 502311

GHATKESAR

2747. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT LTD) (-01), 3-21, JODIMETLA, CHOUDA RIGID VILLAGE GHATKESAR MANDAL, DISTRICT – RANGA REDDY. - 501301
2748. JYABHARI AUTOMOTIVES PRIVATE LTD (-01), SY NO. 581/B, GHATKESAR VILLAGE & MANDAL, MEDCHAL-MALKAJIGIRI DIST - 501301

HUSNABAD

2749. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO. 202/E, H. NO. 12-1/4 & 12-1/A, VILLAGE & MANDAL - HUSNABAD, DIST. -SIDDIPT, TELANGANA - 505467

HUZURABAD

2750. ADARSHA AUTOMOTIVES PVT LTD (-01), SY NO 1687, ADJACENT TO KARIIMNAGAR WARANGAL R&B ROAD, HUZURABAD - 505468

HYDERABAD

2751. THE MITHRA AGENCIES (1002-10-01), 1-8-670, NEAR RTC CROSS ROAD,AZAMABAD INDUSTRIAL AREA, HYDERABAD, - 500020
PH :9966838294.

Dealer Workshop (AS ON 31.01.2026)

2752.	POPULAR VEHICLES AND SERVICES LIMITED (1088-10-01), SABOC TOWERS, RAJBHAVAN ROAD, SOMAJIGUDA, HYDERABAD - 500482	2767.	VARUN MOTORS PVT LTD (1012-10-01), MARUTI AUTHORISED DEALER, SURVEY NO.115, IT PARK, NANAKRAMGUDA, GACHIBOWLI, HYDERABAD - 500008	2780.	JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-01), PLOT NO. 113, 114, 115 IN LUMBINI ENCLAVE CB SQUARE, VILLAGE - GACHIBOWLI, SHERLINGAMPALLY MNADAL, HYDERABAD, TELANGANA STATE. - 500032 PH :9109090401.	2791.	JAYABHERI AUTOMOTIVES PRIVATE LTD (1085-10-01), SURVEY NO 686,UPPAL, MEDCHAL-MALKAJIGIRI DISTRICT, HYDERABAD, TELANGANA - 500013 PH :814250666.
2753.	POPULAR VEHICLES AND SERVICES LIMITED (1091-10-02), R-4/A,IDA BLOCK, INDUSTRIAL ESTATE,UPPAL, HYDERABAD - 500039	2768.	POPULAR VEHICLES AND SERVICES LIMITED (1089-10-01), D.NO.1-10-1/285/1, OPP. VEGITABLE MARKET, ECIL CROSS ROADS, KUSAIGUDA, HYDERABAD - 500062	2781.	JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-02), SURVEY NO.11/36, PLOT NO.32, 39 & 40, NEAR N CONVENTION CENTRE, KHANAMET, HYDERABAD, SHERLINGAMPALLY MANDAL, HYDERABAD - 500081 PH :7799916666.	2792.	PAVAN MOTORS PVT LTD (10-02), PLOT NO 351,352,353,354,355,356,357 LEGALA CIRCLE ROAD, BHAGYALAKSHMI NAGAR, SERILINGAMPALLY, HYDERABAD - 500019
2754.	VARUN MOTORS PVT LTD (4603-10-04), B-11 CO-OPERATIVE INDUSTRIAL ESTATE, BALANAGAR, HYDERABAD, - 500037	2769.	SAI SERVICE PRIVATE LIMITED (1011-04), H.NO.16-2-839/4/10, SAIDABAD, L.B.NAGAR, HYDERABAD - 500059 PH :7799352000.	2782.	ADARSHA AUTOMOTIVES PVT LTD (1019-10-01), H. NO. 2-4-43/15, SURVEY NO. 34, SOGBOWLI (PILLER NO. 185 OF P.V. NARSIMHA RAO EXPRESSWAY), RAJENDRANAGAR, UPPERPALLY, ATTAPUR, RANGA REDDY, HYDERABAD, TELANGANA. - 500048	2793.	JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-04), SURVEY NO 7,14,15,16,IPM BLOOD BANK COLONY,HAYATHNAGAR,HYDERABAD. - 501504
2755.	VARUN MOTORS PVT LTD (4603-10-08), ADITYA NAGAR COLONY, ,ADITYA NAGAR COLONY, TOLICHOWKI, SHAIKPET (VILLAGE, HYDERABAD, HYDERABAD - 500008	2770.	VARUN MOTORS PVT LTD (4603-0G), 1-10-28/1 SY. NO.285, KUSAIGUDA, NEAR ECIL X ROADS, HYDERABAD - 500062 PH :7799600093.	2783.	KALYANI MOTORS PRIVATE LIMITED (1018-02), M.S VIDHATA BINNY MODERN RICE MILL, BEARING NO. 8-4-15 IN SURVEY NO. 239 & 240 OF VILLAGE - KARMANGHAT, MANDAL - SAROORNAGAR, DISTRICT - RANGA REDDY, HYDERABAD - 500079 PH :910022277.	2794.	KALYANI MOTORS PRIVATE LIMITED (1018-10-05), SURVEY NO. 314/A/1, GOPANNAPALLY, SERILINGAMPALLY, HYDERABAD - 502032
2756.	VARUN MOTORS PVT LTD (1010-10-01), PLOT NO. VI- VII A & B, UNDER WARD NO. 10, AUTONAGAR, VANASTALIPURAM, HYDERABAD, R. R. DISTT - 500070 PH :9885208555.	2771.	VARUN MOTORS PVT LTD (4603-10-0H), PLOT NO. 1354/1, ROAD NO. 1, NEAR IOC PETROL PUMP, JUBLEE HILLS, HYDERABAD, ANDHRA PRADESH - 500033 PH :8886322776.	2784.	THE MITHRA AGENCIES (1002-10-06), SURVEY NO.57, D.NO.8-2-108, BIRAMALGUDA, KARMANGHAT NAGARJUN SAGAR ROAD, HYDERABAD, TELANGANA. - 500079 PH :8886621232.	2795.	VARUN MOTORS PVT LTD (1086-10-01), SY NO. 90, NH-44, BESIDE DOLA RI DHANI, KOMPALLY, HYDERABAD, TELANGANA - 500100
2757.	VARUN MOTORS PVT LTD (4603-10-06), SHOP NO. 31, SRIKRUPA MARKET, D.NO. 16-10-1/F/31, MALAKAPET, HYDERABAD - 500036	2772.	VARUN MOTORS PVT LTD (4603-10-0J), PLOT NO. 1-45, SY.NO.:1 TO 7, GOPINATH COMPLEX, TARANAGAR, LINGAMPALLY, HYDERABAD, RANGAREDDY DISTRICT, TELANGANA STATE - 500019 PH :8886067847.	2785.	VARUN MOTORS PVT LTD (4603-10-0M), KSN GARDENS, 5-162/6, BORABANDA MAIN ROAD, HYDERABAD - 500018 PH :9885579623.	2796.	KALYANI MOTORS PRIVATE LIMITED (1018-10-04), SURVEY NO 314/A/1, GOPANNAPALLY, RC PURAM, HYDERABAD - 500019
2758.	POPULAR VEHICLES AND SERVICES LIMITED (1091-10-01), 16-11-19/5/2/C, SALEEM NAGAR COLONY,MALAKPET (NEAR FARHAT HOSPITAL),HYDERABAD - 500036	2773.	SAI SERVICE PRIVATE LIMITED (1011-07), PLOT NO.B-21 & B-34, BHEL ANCILLARY INDUSTRIAL ESTATE, RAMACHANDRAPURM, HYDERABAD - 502032 PH :9703811411.	2786.	JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-03), SURVEY NO.283, PLOT NO.D-46 & 47, PHASE-V, IDA, JEEDIMETLA, QUTUBULLAPUR MANDAL, RANGA REDDY DISTT., HYDERABAD (TELANGANA) - 500055 PH :7799784567.	2797.	ADARSHA AUTOMOTIVES PVT LTD (10-02), PLOT NO. 2B, 2C, 2D, 2E/27, VISHNU MARG, PARVATH NAGAR, MAIN ROAD MADHAPUR - 500081
2759.	THE MITHRA AGENCIES (1002-10-03), PLOT NO. 3-4-10,NEAR MADHAPUR POLICE STATION, MADHAPUR, HYDERABAD - 500081	2774.	ADARSHA AUTOMOTIVES PVT LTD (1014-01), 18-2-45 NEAR FLYOVER, CHANDRAYANGUTTA "X" ROAD, HYDERBAD - 500005	2787.	ADARSHA AUTOMOTIVES PVT LTD (10-03), SURVEY NO. 220/A, AMBEDKAR ROAD, OPP HERITAGE FRESH, NEAR AMBAEDKAR STATUE, NEAR ALWAL, SECUNDERABAD. - 500010 PH :9291859954.	2798.	THE MITHRA AGENCIES (1002-10-08), SY NO. 575/1/2 & 576/1/2,ADIBATLA TCS RD, NEAR HP PETROL PUMP BUNK, NADARGUL - 501510
2760.	POPULAR VEHICLES AND SERVICES LIMITED (1088-10-01), 11-6-19/1192,OPP. HOTEL HARSHA,PUBLIC GARDEN ROAD, NAMPALLY, HYDERABAD - 500001	2775.	POPULAR VEHICLES AND SERVICES LIMITED (1088-03), SURVEY NO.434, 5-5-33/19, BEHIND HUDA TRUCK PARKING, KUKATPALLY, DISTT: RANGAREDDY, HYDERABAD - 500072	2788.	KALYANI MOTORS PRIVATE LIMITED (1011-08), DOOR NO.7-2-C33 & C34, INDUSTRIAL ESTATE, SANATH NAGAR, HYDERABAD. - 500018 PH :7799360003.	2799.	VARUN MOTORS PVT LTD (10-12), SURVEY NO.46, KEESARA MANDAL, NAGARAM, MEDCHAL, MALKAJIGIRI DIST., HYDERABAD - 500072
2761.	VARUN MOTORS PVT LTD (4603-10-0A), 1-11-200,SHAMALA BUILDING BEGUMPET, HYDERABAD - 500016 PH :9885206555.	2776.	KALYANI MOTORS PRIVATE LIMITED (1018-01), PLOT NO. A-23 & A31/1, I.D.A, NACHARAM, HYDERABAD. - 500076 PH :9100114863.	2789.	SAT SERVICE PRIVATE LIMITED (1011-04), SURVEY NO. 135/A & 135/A/A, MANIKONDA, RAJENDRA NAGAR MANDAL, RANGAREDDY DISTRICT, HYDERABAD, TELANGANA - 500089 PH :9912341524.		IBRAHIMPATNAM
2762.	THE MITHRA AGENCIES (1002-10-04), 8-18-138, PLOT NO. 8,NEAR MARGADARSI CHIT FUND,L.B. NAGAR RING ROAD, RR DIST,HYDERABAD - 500074 PH :9963551265.	2777.	ADARSHA AUTOMOTIVES PVT LTD (1014-10-02), H. NO. 8-64/1, RUDRA COLONY, SHAMSHABAD, HYDERABAD. - 501218 PH :9603296633.	2790.	THE MITHRA AGENCIES (1002-10-07), SURVEY NO.12,13,148,15, MEDIPALLY, GHATKESAR MANDAL, RANGA REDDY DISTRICT, HYDERABAD, TELANGANA - 500098 PH :8886697954.	2800.	PAVAN MOTORS PVT LTD (10-01), S.NO.123/E, MPP PATELGUDA, IBRAHIMPATNAM, RANGA REDDY - 501506 PH :8790144499.
2763.	GEM MOTORS (INDIA) PVT LTD (1009-10-01), RAGHUVENDRA SOCIETY,KONDAPUR, HYDERABAD , ANDHRA PRADESH - 500084 PH :9912899128.	2778.	GEM MOTORS (INDIA) PVT LTD (1009-10-03), SURVEY NO. 135/A & 135/A/A, MANIKONDA, RAJENDRA NAGAR MANDAL, RANGAREDDY DISTRICT, HYDERABAD, TELANGANA - 500089 PH :9912341524.			JAGTIAL	
2764.	GEM MOTORS (INDIA) PVT LTD (1009-10-02), 2-11, SURVEY NO: 165,172,HYDERNAGAR, KUKATPALLY, HYDERABAD, ANDHRA PRADESH - 500072 PH :9912344538.	2779.	GEM MOTORS (INDIA) PVT LTD (1009-10-03), SURVEY NO. 135/A & 135/A/A, MANIKONDA, RAJENDRA NAGAR MANDAL, RANGAREDDY DISTRICT, HYDERABAD, TELANGANA - 500089 PH :9912341524.			2801.	ADARSHA AUTOMOTIVES PVT LTD (10-04), HOUSE NO.-1-5-216/A,OPPOSITE TO KVA SUBSTATION, KARIMNAGAR ROAD, JAGTIAL, - 505327 PH :8886152222.
2765.	SAI SERVICE PRIVATE LIMITED (1011-10-01), PLOT NO. 88, INDUSTRIAL AREA,C.I.E. GANDHI NAGAR, ,BALANAGAR, HYDERABAD - 500037 PH :9010827755.					JAMIKUNTA	
2766.	THE MITHRA AGENCIES (1002-10-05), PLOT NO. 19,20 & 21,ROAD NO. 10,IDA NACHARAM, HYDERABAD - 500076					2802.	VARUN MOTORS PVT LTD (10-01), SY NO. 794, KARIMNAGAR ROAD, AMMIKUNTA, DIST. KARIMNAGAR - 505152
						JANGAON	
						2803.	ADARSHA AUTOMOTIVES PVT LTD (10-01), H.NO.339, HYDERABAD ROAD, JANGAON. - 506167 PH :7799626633.
						JOGIPET	

2804. VARUN MOTORS PVT LTD (-01), #8-65/12/C MAIN ROAD YARD ANDOLE MANDAL, OPP. MARKET YARD, SANGAREDDY, TELANGANA - 502270

JUKKAL

2805. VARUN MOTORS PVT LTD (-01), PLOT N9 OF SY NO 74/EE/3 AND 74/UU/1, KOWLAS VILLAGE, JUKKAL MANDAL, DIST-KAMAREDDY, TELANGANA - 503305

KADTHAL

2806. THE MITHRA AGENCIES (-01), S NO 8, KANDUKURU, KADTHAL, TELANGANA - 509358

KAGHAZANAGAR

2807. ADARSHA AUTOMOTIVES PVT LTD (-01), H.NO :1-61/3, BORIGAON,KAGHAZANAGAR,KOMARAMBHEEM - 504296
PH :8886092222.

KALWAKURTHY

2808. SRI JAYARAMA MOTORS PVT LTD (-01), D.NO.12-42, BESIDE INDIAN OIL, PETROL PUMP, DEVERAKONDA ROAD, KALWAKURTHY - 509324

KAMAREDDY

2809. VARUN MOTORS PVT LTD (-01), H.NO.11-107/61, BESIDE:GURU RAGHAVENDRA COLONY, CHINNA MALLAREDDY VILLAGE, KAMAREDDY - 503111
PH :9885557570.

KARIMNAGAR

2810. ADARSHA AUTOMOTIVES PVT LTD (-01), H.NO. 8-6-31/1, HYDERABAD ROAD, BY-PASS JUNCTION KARIMNAGAR - 505001

2811. ADARSHA AUTOMOTIVES PVT LTD (-05), H.NO.8-6-301/18, BY-PASS ROAD, ANUNAGAR, KARIM NAGAR, TELANGANA - 505001

2812. VARUN MOTORS PVT LTD (-01), BEARING NO. 1-81/3/10/2, SURVEY NO. 221 & 222, REKURTHY VILLAGE, KARIMNAGAR-JAGTAL ROAD, KARIMNAGAR MANDAL & DIST. , TELANGANA - 505001

2813. VARUN MOTORS PVT LTD (-02), SURVEY NO. 277.278/B, AREPALLY VILLAGE, TEEGALAGUTTAPALLI GRAM PANCHAYAT, KARIMNAGAR - 505001
PH :9885210555.

2814. ADARSHA AUTOMOTIVES PVT LTD (-06), 1-81/3/10/2,JAGITYAL ROAD,REKURTHY, KARIMNAGAR - 505010

2815. VARUN MOTORS PVT LTD (-03), PLOT NO. 12,5,3 & 4, SY NO. 793, BOMMAKAL VILLAGE, KARIMNAGAR - 505001

KATARAM

2816. ADARSHA AUTOMOTIVES PVT LTD (-01), SY. NO. 131, H NO. 12-38, GAREPALLI, KATARAM(M), JAYASHANKAR(DIST.), TELANGANA - 506169

KEESARA

2817. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), H-NO 3-56/9/6A, SURVEY NO 5,KEESARA, MEDCHAL-MALKAJIGIRI, TELANGANA - 501301
PH :9678076666.

KHAMMAM

2818. MITHRA AUTO AGENCIES PVT LTD (2604--02), SURVY NO. 182,WARANGAL ROAD, OPP. FCI GODOWNS,PEDA THANDA,KHAMMAM - 507003
PH :8886063527.

2819. SANTOSH AUTOMOTORS PVT LTD (2607--03), SURVEY NO: 19, BESIDE ROYAL OAK FURNITUR, NEAR RTC BUS STAND, RAPARTHI NAGAR - 507318

KHANAPUR

2820. VARUN MOTORS PVT LTD (-01), NO:14-10A, NEAR SAI BABA TEMPLE, OPP. GIRLS HIGH SCHOOL, VILL. & MANDAL: KHANAPOOR, DIST-NIRMAL

KODAD

2821. PAVAN MOTORS PVT LTD (-01), SURVEY NO. 42, KOMARBANDA REVENUE LIMITED, KODAD , DISTRICT - NALGONDA, TELANGANA - 508206
PH :8008899995.

KODANGAL

2822. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO 1156/AA1/2, BESIDE EESAIR PETROL PUMP, KODANGAL, VIKARABAD, TELANGANA - 509338

KOLLAPUR

2823. SRI JAYARAMA MOTORS PVT LTD (-01), SURVEY NO 259/AA2, 259/E2,KOLLAPUR, NAGAR KURNOOL DISTRICT, TELANGANA - 509102
PH :9985880015.

KOSGI

2824. SRI JAYARAMA MOTORS PVT LTD (-01), SY. NO. 1798/B, KOSGI TOWN, SITUATED TANDOR ROAD KOSGI(G.P & MANDAL), NARAYANPET DIST, TELANGANA

KOTHAGUDEM

2825. VARUN MOTORS PVT LTD (2603--04), DOOR NO. 5-35/4/B,LAKSHMIDAVI PALLI,BHADRACHALAM ROAD, KOTTHAGUDEM - 507101

LINGAMPET

2826. VARUN MOTORS PVT LTD (-01), 12-119, OPP:HONDA SHOWROOM, YELLAREDDY ROAD, LINGAMPET, DIST:KAMAREDDY - 503124

LUXITTIPTET

2827. VARUN MOTORS PVT LTD (-01), SURVEY NO 289/E, NEAR BY SSR GARDENS,LUXETIPTET, MANCHERIAL DISTRICT, TELANGANA - 504215
PH :8297848999.

MADHIRA

2828. SANTOSH AUTOMOTORS PVT LTD (-01), SURVEY NO 33/A, H -NO : 1-780/8, MCN COMPLEX, WYRA ROAD, MADHIRA, KHAMMAM,TELANGANA - 507203

MAHABUBABAD

2829. ADARSHA AUTOMOTIVES PVT LTD (-01), SY. NO.38/A, MAHBUBABAD REVENUE VILLAGE AND MANDAL, MAHBUBABAD. - 506101

MAHBUBNAGAR

2830. SRI JAYARAMA MOTORS PVT LTD (-001), PLOT NO C1 & C2, INDUSTRIAL ESTATE, METTUGADA, MEHBOOBNAGAR - 504001
PH :8096998846.

MAHESHWARAM

2831. ADARSHA AUTOMOTIVES PVT LTD (-01), (BEARING #5-187, SURVEY NO.:336/A1, VILLAGE & MANDAL: MAHESHWARAM DISTT. RANGA REDDY - 501359

MALL

2832. PAVAN MOTORS PVT LTD (-01), MALL HYDERABAD ROAD., YACHARAM MANDALAM,RANGA REDDY DIST., - 501509

MANCHERIAL

2833. ADARSHA AUTOMOTIVES PVT LTD (-03), SURVEY NO 477 / 2, GARMILLA VILLAGE, MANCHERIAL, TELANGANA
BEHIND MAHINDRA TRACTORS SHOWROOM,BELLAMPALLY ROAD, MANCHIRIAL , DISTT. ADILABAD - 504208
PH :8886302222.

MANTHANI

2834. VARUN MOTORS PVT LTD (-01), SURVEY NO 1018, H NO 16-4/D2, PLOT NO 5, LAINGADDA STREET, MANTHANI, - 505184
PH :8886619373.

MANUGURU

2835. SANTOSH AUTOMOTORS PVT LTD (-01), MANUGURU MAIN RD, PILOT COLONY, MANUGURU (PT), TELANGANA - 507117

MARIPEDA BUNGLAW

2836. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT LTD) (-01), KHAMMAM - WARANGAL HWY, MARIPEDA BUNGLAW, MARIPEDA, TELANGANA 506315 - 506315

MEDAK

2837. VARUN MOTORS PVT LTD (-01), SY.NO.:1486/A3, HYDERABAD ROAD, MEDAK (MDL & TOWN) - 502110
PH :9154953337.

MEDCHAL

2838. AUTOFIN LIMITED (-01), H. NO. 11-27/1, SURVEY NO.401, MEDCHAL VILLAGE AND MANDAL, DIST. - MEDCHAL. - 501401
PH :8885040020.

METAPALLY

2839. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO. 40/U/2 CHOULAMADHI, METPALLY PIN CODE 505325 - 505325
PH :8886092222.

MIRYALGUDA

2840. PAVAN MOTORS PVT LTD (-01), SURVEY NO-940 8943, (OPPOSITE TO MINA ENGINEERING COLLEGE) NARKETPALLY ADDANKI BY-PASS ROAD, MIRYALGUDA ,NALGONDA DISTRICT,ANDHRA PRADESH - 508207
PH :8790900399.

MOINABAD

2841. GEM MOTORS (INDIA) PVT LTD (-01), SURVEY NO. 70, PLOT NO. 4, VILLAGE AND GRAM PANCHAYAT - HIMAYATH NAGAR, MANDAL - MOINABAD, DISTRICT - RANGA REDDY. - 500075

MOMINPET

2842. VARUN MOTORS PVT LTD (-01), SY NO.242/A/3, MOMINPET (VILL & MDL) - 501202

MORTHAD

2843. VARUN MOTORS PVT LTD (-01), H NO -16-1/3/B, KARIMNAGAR ROAD, MORTHAD, TELANGANA - 503225

MUSTABAD

2844. VARUN MOTORS PVT LTD (-01), OPP: NEW BUSTAND,MUSTABAD,RAJANNA SIRICILLA (D) - 521107

NAGARKURNOOL

2845. SRI JAYARAMA MOTORS PVT LTD (-01), SURVEY NO.44/A AND 45/A, UYYALWADA VILLAGE, NAGARKURNOOL, TELANGANA - 509209

NALGONDA

2846. PAVAN MOTORS PVT LTD (-01), CHERLAPALLY VILLAGE, NALGONDA ROAD, NALGONDA - 508001

NARAYANKHED

2847. VARUN MOTORS PVT LTD (-01), D. NO. 1-6-111/25/B/5/A/1, SY NO. 57/2, BHUMAN COLONY, GRAM PANCHAYAT & MANDAL - NARAYANKHED, DISTRICT - MEDAK, TELANGANA. - 502286
PH :9885210555.

NARAYANPET

Dealer Workshop (AS ON 31.01.2026)

2848. SRI JAYARAMA MOTORS PVT LTD (-01),
SURVEY NO. 468/4, MAHABUBNAGAR ROAD,
NARAYANPET TOWN, DIST. MAHABUBNAGAR,
STATE- TELANGANA - 509210

NARSAMPET

2849. ADARSHA AUTOMOTIVES PVT LTD (-01), OPP.
TRIVENI JUNIOR COLLEGE, WARANGAL TO
NARSAMPET HIGHWAY - 506132

NARSAPUR

2850. KALYANI MOTORS PRIVATE LIMITED (-01),
SURVEY NO 66, BLOCK
NO-19,NARSAPUR,DISTRICT:MEDAK,
TELANGANA - 534275
PH :9100067766

NELLAKONDAPALLI

2851. VARUN MOTORS PVT LTD (-01), SY.NO. 211
212 AT KUSUMANCHI ROAD,
NELAKONDAPALLI, KHAMMAM DISTRICT,
TELANGANA - -- 507160

NIRMAL

2852. ADARSHA AUTOMOTIVES PVT LTD (-02),
SURVEY NO: 1246/1,1247 & 1248 , SHASTRI
NAGAR, NIRMAL, TELANGANA.

H. NO. 1-1-131, SHASTRINAGAR, MANCHIRIAL
ROAD, DISTT. ADILABAD, NIRMAL - 504106
PH 8886342222.

NIZAMABAD

2853. VARUN MOTORS PVT LTD (-01), PLOT NO. GP
1-57/4/1,PANGARA BORGOAN,NIZAMABAD -
503230

PALAKURTHY

2854. WIN MOTORS (A UNIT OF BHADRAKALI
AUTOCARE PVT LTD) (-01), SURVEY NO
537/B,MAIN ROAD, PALAKURTHY,JANGAON
DISTRICT,TELANGANA - 506317
PH :8688838005.

PALWANCHA

2855. VARUN MOTORS PVT LTD (-01), SURVEY
NO.758 & 757, NEHRU NAGAR, PALWANCHA
(NEW POLANCHA) MANDAL & TOWN,
BHADRADRI KOTHAGUDEM DISTT.,
TELANGANA - 507115
PH :8297163222.

PARGI

2856. VARUN MOTORS PVT LTD (-01), HOUSE NO.
2-356 JANGAIAH COMPLEX, SURVEY NO.
217/EE4, JAYANTHI NAGAR COLONY, MANDAL -
PARGI, DISTRICT - RANGA REDDY. - 510501

PARKAL

2857. ADARSHA AUTOMOTIVES PVT LTD (-01),
SY.NO 946, H.NO 5-27, VIKAS NAGAR,
PARKAL,WARANGAL. - 506164
PH :8886742222.

PEDAPALLY

2858. ADARSHA AUTOMOTIVES PVT LTD (-01),
SURVEY NO 142, H NO 185, RANGAMPALLI
VILLAGE, PEDDAPALLI , TELANGANA - 505172

PILERU

2859. VISHNU CARS PVT LTD (-01), VISHNU CARS
PVT LTD, BESIDE NAGI REDDY FUNCTION
HALL, PILERU, MUDUPULAVEMULA, ANDHRA
PRADESH - 517214

RAMAGUNDAM

2860. ADARSHA AUTOMOTIVES PVT LTD (-01),
5-6-172 SURVEY NO. - 259/B, MEDIPALLY
SHIVAR, RAMAGUNDAM MUNICIPALITY,
DISTRICT - KARIM NAGAR, ANDHRA PRADESH
- 505209
PH :8886144550.

RAMAYAMPET

2861. VARUN MOTORS PVT LTD (-01), SURVEY NO.
1626 & 1626/2 SITUATED AT BLOCK NO. 16,
RAMAYAMPET, DISTRICT - MEDAK. - 502101

SADASHIVA NAGAR

2862. VARUN MOTORS PVT LTD (-01),
#17-48/C,NH-44,MAIN ROAD, BESIDE
GEENBAVARCHI, SADASHIVNAGAR - 503145

SADHASHIVPET

2863. SAI SERVICE PRIVATE LIMITED (-01), PLOT NO.
2, SY NO. 974, GURUNAGAR COLONY, OLD
BOMBAY HIGHWAY ROAD, SADASHIVPET,
SANGAREDDY DIST. 502291. - 502291
PH :9966377888.

SANGAREDDY

2864. SAI SERVICE PRIVATE LIMITED (1011-05),
H.NO.4-8-92/1/4/5, AHMED NAGAR,
OPP.GOV'T.ITI, SANGAREDDY, MEDAK (DIST),
ANDHRA PRADESH - 502001
PH :7661811000.

SATUPALLI

2865. MITHRA AUTO AGENCIES PVT LTD (-01),
SURVEY NO. 75 NEAR VIVEKANANDA
STATUE,SATHUPALLI, KHAMMAM. - 507303
PH :9848988312.

SECUNDERABAD

2866. ACER MOTORS (A DIVISION OF KRISHNAIAH
MOTORS PVT LTD) (-01), A1, MOTI
VALLEY,TRIMULGHERRY,SECUNDERABAD, -
500015

2867. AUTOFIN LIMITED (-01), SURVEY NO. 33,
MEDCHAL ROAD, BOWENPALLY,
SECUNDERABAD - 500011
PH :8885040130.

2868. VARUN MOTORS PVT LTD (4603-01), 1-10-176/1,
BEHIND VARUN TOWERS-I, OPP. HYDERABAD
PUBLIC SCHOOL, BEGUMPET,
SECUNDERABAD, HYDERABAD, TELANGANA
STATE. - 500016
PH :9985552452.

2869. POPULAR VEHICLES AND SERVICES LIMITED
(1088-04), PLOT NO. 207, TADBUND,
SECUNDERABAD. - 500009

2870. PAVAN MOTORS PVT LTD (-02), PLOT NO. 1-12,
749, 750, SURVEY NO. 751/2, VENKATADRI
NAGAR, NEW MIRJALGUDA, MALKAJIGIRI,
SECUNDERABAD, TELANGANA - 500047
PH :9121293690.

SHAD NAGAR

2871. SRI JAYARAMA MOTORS PVT LTD (-01),
SERVEY NO.445, FAROOQ NAGAR,
SHADNAGAR, MAHABUB NAGAR DISTT.
ANDHRA PRADESH. - 500216
PH :8096996671.

SHAMIRPET

2872. POPULAR VEHICLES AND SERVICES LIMITED (-
01), SHED NO 2-242, MAJEEDPUR CROSS
ROADS,SHAMIRPET,
MEDCHAL-MALKAJIGIRI,TELANGANA - 500078

SHANKARPALLY

2873. SAI SERVICE PRIVATE LIMITED (-01), SURVEY
NO. 203, HYDERABAD ROAD OPP. SM
FUNCTION HALL ROAD, SHANKARPALLY,
RANGA REDDY DISTT. - 501203

SIDDIPET

2874. ADARSHA AUTOMOTIVES PVT LTD (-01),
SURVEY 197/A, VILLAGE - PONNALA, SIDDIPET,
DISTRICT - MEDAK, TELANGANA - 502103

SIRCILLA

2875. ADARSHA AUTOMOTIVES PVT LTD (-01), H. NO.
10-1-7/2, 10-1-7/3, 10-1-7/3/A/1, KARIMNAGAR
ROAD, SIRCILLA, DISTRICT - KARIMNAGAR,
TELANGANA - 505301

SURYAPET

2876. PAVAN MOTORS PVT LTD (-01), SURVEY NO.
493, THALLAGADDA, SURYAPET MANDAL,
NALGONDA DISTRICT, ANDHRA PRADESH. -
508213

TALLADA

2877. MITHRA AUTO AGENCIES PVT LTD (-01),
SURVEY NO 890/A, D.NO 7-8,
NARAYANAPURAM, TALLADA, TELANGANA -
507167
PH :9848988312.

TANDUR

2878. VARUN MOTORS PVT LTD (-01), H. NO.
2-1-20/3, 2-1-20/3/A & 2-1-20/9, PLOT NO. 45, 46,
47, SURVEY NO. 57 OF MALREDDYPALLY
VILLAGE, TANDUR MUNICIPALITY, VIKARABAD
DISTRICT, TELANGANA - 501141
PH :8886619370.

THIMMAPUR

2879. KALYANI MOTORS PRIVATE LIMITED (-01), SY
NO.51/LUU, THIMMAPUR VILLAGE , KOTHUR
MANDAL, RANGAREDDY, TELANGANA - 509325

THORRUR

2880. ADARSHA AUTOMOTIVES PVT LTD (-01),
SURVEY NO.1 TO 5, BEARING M. NO.4-153/1,
VILLAGE & MANDAL THORRUR DISTT.
WARANGAL - 506163

TOOPRAN

2881. ADARSHA AUTOMOTIVES PVT LTD (-01), PLOT
NO 7&8, SY NO 185,184,179U, NAGULAPALLY
VILLAGE,TOOPRAN MANDAL,TELANGANA
STATE: TELANGANA CITY: TOOPRAN PIN :
502334 CITY CATEGO - 502334

UTNOOR

2882. ADARSHA AUTOMOTIVES PVT LTD (-01), OPP.,
KB COMPLEX, UTNOOR, DIST- ADILABAD

VARNI

2883. VARUN MOTORS PVT LTD (-01), H.NO.9-54/1,
SATYA NARAYANA PURAM,VARNI. - 503201

VELMULWADA

2884. ADARSHA AUTOMOTIVES PVT LTD (-01),
SURVEY NO 438,NAMPALLI, VEMULWADA
VILLAGE, RAJANNA SIRCILLA-DISTRICT,
TELANGANA - 505302

VIKARABAD

2885. GEM MOTORS (INDIA) PVT LTD (-01), SHOP
NO. 3-2-93/2, VILLAGE - YENNAPALLY,
VIKARABAD MUNICIPALITY, VIKARABAD,
DISTRICT - RANGA REDDY, TELANGANA. -
501101
PH :9912349840.

VM BANJAR

2886. MITHRA AUTO AGENCIES PVT LTD (-01), DOOR
NO 6-101/1, VM BANJAR VILLAGE, NEAR RTC
BUS STAND, PENUBALLY MANDAL, KHAMMAM -
507302

WANAPARTHY

2887. SRI JAYARAMA MOTORS PVT LTD (-01),
SURVEY NO.1149, KURNOL ROAD,
WANAPARTHY (A.P.) - 509103
PH :8096903879.

WARRANGAL

2888. ADARSHA AUTOMOTIVES PVT LTD (-02), PLOT
NO.10, INDUSTRIAL AREA, MULUGU ROAD,
WARRANGAL - 506007
PH :8886132222.

2889. ADARSHA AUTOMOTIVES PVT LTD (-03),
OPPOSITE TO ORUGALLU FILLING STATION,
HUNTER ROAD, SHAYAMPET, HUNAMKONDA,
WARANGAL - 506001
PH :8688492222.
2890. WIN MOTORS (A UNIT OF BHADRAKALI
AUTOCARE PVT LTD) (-01), SURVEY NO. 16,
16/A & 16/B, OPPOSITE KAKATIYA UNIVERSITY
GATE-2, LASHKERSINGARAM REVENUE
VILLAGE, HANAMKONDA MANDAL, WARANGAL.
- 506001
PH :8688828010.
2891. WIN MOTORS (A UNIT OF BHADRAKALI
AUTOCARE PVT LTD) (-02), PLOT NUMBER
9,10,11 & 13/A, SURVEY NUMBER 148/A&B OF
BHEEMRAM VILLAGE, WARANGAL. - 506015
PH :8688828015.
2892. ADARSHA AUTOMOTIVES PVT LTD (-05),
SY.NO742/A,753,
100FEETROAD,WADEPALLY,HANAMKONDA,WA
RANGAL, TELANGANA STATE - 506001
- YELLANDU**
2893. VARUN MOTORS PVT LTD (-01), 15-129, BESIDE
SEI SUDIMALA BRANCH, MAIN ROAD,
YELLANDU, BHADRADRI. - 507101
- ZAHIRABAD**
2894. SAI SERVICE PRIVATE LIMITED (-01), PLOT
NO-5,NEAR IBP PETROL BUNK,
NH-9,ALIPUR,ZAHIRABAD,MEDAK
(DIST),ANDHRA PRADESH - 502220
PH :7660005206.

TRIPURA

- AGARTALA**
2895. JAIN UDYOG (6901-69-01), ARUNDHUTI NAGAR,
OPP. INDUSTRIAL ESTATE, AGARTALA - 799003
PH :9862149275.
2896. JAIN UDYOG (6901-69-05), 58-B/C, INDUSTRIAL
AREA ARUNDHATI NAGAR, AGARTALA - 799003
2897. JAIN UDYOG (6901-69-06), KHATIAN NO. 1843,
MOUJA & TEHSIL - KHAYERPUR, JIRANIA
SUBDIVISION, AGARTALA - 799008
2898. PALLAVI MOTORS PVT LTD (6902-69-01), 44 NH
ROAD, DAG NO. 495, DAG NO. 1748, DAG NO.
867, POST OFFICE KHERPUR, AGARTALA
(TRIPURA) - 799008
PH :9864052488.

AMARPUR

2899. JAIN UDYOG (-01), NEAR MOTOR STAND,
AMARPUR,TRIPURA - 799101

AMBASSA

2900. JAIN UDYOG (-01), A.A. ROAD, OPPOSITE OF
CHANDRAI PARA HS SCHOOL, AMBASSA,
DHALAI, TRIPURA. - 799289

BELONIA

2901. JAIN UDYOG (-01), SUKANTA NAGAR, S.B.C
NAGAR, BANKAR, BELONIA, PIN-799155,
TRIPURA - 799155
- DAMCHERA**
2902. PALLAVI MOTORS PVT LTD (-01), DAMCHERRA,
NARENDRA NAGAR NORTH TRIPURA - 799256
- DHARMANAGAR**
2903. JAIN UDYOG (6901-03), DHARMANAGAR,
COLLEGE ROAD, DHARMANAGAR,
TRIPURA(NORTH). - 799250
- KAMALPUR**
2904. PALLAVI MOTORS PVT LTD (-01), KAMALPUR,
NEAR MANIKVHANDER BAZAR., KAMALPUR
AMBASSA ROAD. - 799285
- KANCHANPURA**
2905. PALLAVI MOTORS PVT LTD (-01),
KANCHANPUR, URICHERRA JUMPUI ROAD ,
TRIPURA 799270 - 781352
- KUMARGHAT**
2906. PALLAVI MOTORS PVT LTD (-01), UTTAR PABIA
CHERRA KUMARGHAT, M/C WARD
NO.06,UNOKOTI - 799264
- MANU**
2907. PALLAVI MOTORS PVT LTD (-01), MANU, MAIN
BAZAR, DHALAI TRIPURA 799275 - 799275
- NORTH LAKHIMPUR**
2908. VISHAL CAR WORLD PVT LTD (-01), VILL-
CHARAMORIA (MOIDOMIA),
IST-NORTH-LAKHIMPUR, STATE-ASSAM -
787001
- SABROOM**
2909. JAIN UDYOG (-01), VILL- PASCHIM JALEFA,
TAHESIL- HARINA, SABROOM SOUTH TRIPURA,
PIN-799145 - 799145
- SANTIBAZAR**
2910. PALLAVI MOTORS PVT LTD (-01),
SANTIBAZARM NEAR SDM OFFICE., SOUTH
TRIPURA. - 799144
- TELIAMURA**
2911. PALLAVI MOTORS PVT LTD (-01), SOUTH
KARAILONG., PACHIM TELIAMURA, TRIPURA. -
799201
- UDAIPUR**
2912. JAIN UDYOG (-01), DHWAJANAGAR
INDUSTRIAL ESTATE,UDAIPUR,TRIPURA
(SOUTH) - 799116
PH :9774020152.

UTTAR PRADESH

- AFZALGARH**
2913. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
VILL FATEHULLANAGAR,AFZAL GARH MARH.,
NH-74,AFZALGARH,TEHSIL DHAMPUR. - 246722

AGRA

2914. KTL PVT LTD (6606-66-01), MUGHAL ROAD,
KAMLA NAGAR, AGRA - 282004
2915. PREM MOTORS PVT LTD (-01), 45, OPPOSITE
AGRA COLLEGE, GOKULPURA, AGRA, UTTAR
PRADESH - 282002
PH :9690010799.
2916. KTL PVT LTD (6608-02), KHASRA NO. 171,
SEWLA JAT, GWALIOR ROAD, AGRA, UTTAR
PRADESH - 282001
PH :8449715099.
2917. MERAK VEHICLES (A UNIT OF ONE 3
VENTURES) (6609-66-01), KHASRA NO 65 & 74,
MAUZA MOHAMMADPUR, AGRA-DELHI ROAD
(NH-2), SIKANDRA, AGRA UTTAR
PRADESH-282007. - 282007
PH :9690486139.
- AJITMAL**
2918. KULDEEP MOTORS PVT LTD (-01), MUGHAL
ROAD AJITMAL, DIST : AURAIYA - 206121
- AKBARPUR**
2919. KTL PVT LTD (2801-03), KANPUR ROAD,
AKBARPUR - 209206
PH :7408409348.
2920. SMARTWHEELS PRIVATE LIMITED (7201-08),
TANDA ROAD, VILL-BUDHAEERPUR, PO-KATRIYA
YAKOOPUR, AKBARPUR , DIST-AMBEDKAR
NAGAR (U.P.) - 224122
PH :7705803248.

ALIGANJ

2921. DEV MOTORS PVT LTD (-01), KAYAMGANJ
ROAD, ALIGANJ, ETAH. - 226024

ALIGARH

2922. DEV MOTORS PVT LTD (-01), NEAR BANNA
DEVI, G.T.ROAD, ALIGARH - 202001
2923. DEV MOTORS PVT LTD (-04), PLOT NO 97,
VILLAGE SIKANDERPUR, BHUKRAVALI, GT
ROAD BYE PASS, ALIGARH - 202002
PH :7351345577.

ALLAHABAD

2924. AMITDEEP MOTORS PVT LTD (2901-29-01), 26
SULEM SARAI, G.T. ROAD, ALLAHABAD - 211001
2925. SARASWATI MOTORS LLP (2904-29-01), PLOT
NO 24, INDUSTRIAL AREA MNIT COLLEGE,
TELIYARGANJ, PRAYAGRAJ, UTTAR PRADESH.
- 211004
PH :8090854053.
2926. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE
LIMITED (2905-29-01), ARAZI NO 390 AND 389 AT
KATKA, ANDAWA SAHSON BYPASS,
PRAYAGRAJ - 211002
PH :9415324201.
2927. SARASWATI MOTORS LLP (2904-29-02), 342,
BHAGIPUR, SARAI INAYAT, ANDWA,JHUNSI,
PRAYAGRAJ - 211019

2928. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE
LIMITED (2905-29-02), 46, DANDI REWA ROAD,
OPPOSITE H.P.JANTA PETROL PUMP,
PRAYAGRAJ, UTTAR PRADESH. - 211008

AMETHI

2929. KTL AUTOMOBILE PRIVATE LIMITED (-01),
PLOT NO - E 32, INDUSTRIAL AREA TEKARIA,
UPSIDC, GAURIGANJ, DIST: C.S.M.NAGAR -
227409
PH :7379557377.

AMRITPUR

2930. KULDEEP MOTORS KANPUR LLP (-01), TEHSIL
ROAD NEAR TEHSIL BHAWAN, AMRITPUR,
DISTRICT FARRUKHABAD, UTTAR PRADESH -
209622

AMROHA

2931. AKANKSHA AUTOMOBILES PVT LTD (-01),
AMROHA - JOYA ROAD, NEAR PUNJAB
NATIONAL BANK, AMROHA, UTTAR PRADESH,
PIN CODE: 244221 - 244221
PH :7247800064.

ANPARA

2932. STAR CARS (A UNIT OF SARASWATI VEHICLES
LLP) (-01), KAHUWA NALA, AURI-BINA ROAD,
AURI ANPARA, DISTRICT - SONEBHADRA. -
232101

ANUPSHAHR

2933. SKUNIVERSE AUTOMOBILE PVT LTD (-01),
KHASRA NO. 341, BULANDSHAHR ROAD,
ANOOPSHAHR, DIST. BULANSHAHR,
PIN-203390, UTTAR PRADESH - 203390
PH :7055118430.

AONLA

2934. KAVISHA MOTORS PVT LTD (-01),
COMMERCIAL PLOT, RAN NAGAR ROAD, NEAR
MUNICIPALITY OFFICE, TEHSIL - AONLA, DIST.,
BAREILLY, STATE- UTTAR PRADESH. - 243301

ATARRA

2935. MY CAR PVT. LTD. (-01), 14/292, AZAD NAGAR.,
ATTARA, BANDA. - 210201

ATRAULI

2936. DEV MOTORS PVT LTD (-01), GATA NO. 126
TEHSIL ATRAULI NEAR HARIYAL, CENTER
MOJA MADHAULI NISFI ASHARABAD - 202280

AURAI

2937. VARANASI MOTORS PVT LTD (-01), KHATA /
KHATAUNI NO. 00045, GT ROAD (EHAH
HAURA), OPP. CHINI MILL,VILLAGE & TEHSIL
AURAI, DISTT: BHADHOI, UTTARPRADESH, PIN
2221 301 - 2221301

AURAIYA

Dealer Workshop (AS ON 31.01.2026)

2938. KULDEEP MOTORS PVT LTD (-01), NEAR INDIAN OIL TIRAHA, KANPUR ROAD, AURAIYA. - 206241
PH :9235358444.

AZAMGARH

2939. DEEP MOTORS (-01), HARBANSHPUR NARALI, AZAMGARH - 276001
PH :9838072905.
2940. DEEP MOTORS (-04), VILLAGE - BALDEV MADURI, TEHSIL - SAGRI, DISTRICT - AZAMGARH, UTTAR PRADESH. - 276138

BABRALA

2941. AKANKSHA AUTOMOBILES PVT LTD (-01), CHANDAUSI ROAD, BABRALA, DISTRICT SAMBHAL, UTTAR PRADESH. - 243751
PH :7895600005.

BACHRAWAN

2942. KTL AUTOMOBILE PRIVATE LIMITED (-01), VISHNUPUR, PHARWAN, RAEBARELI, LUCKNOW ROAD, DIST. - RAEBARELI. - 229301
PH :99184512222.

BAH

2943. KTL PVT LTD (-01), 16B, DHOBAIR, VILLAGE - BAH, DIST.-AGRA, UTTAR PRADESH. - 283104

BAHERI

2944. KAVISHA MOTORS PVT LTD (-01), KASRA NO. 530, 531, 532, 533. NAINITAL ROAD, OPP. RAMLILA GROUND, BAHERI, DISTRICT - BAREILLY, UTTAR PRADESH - 243201

BAHRAICH

2945. ANAND MOTOR AGENCIES LTD (1301-05), LUCKNOW ROAD, BEHRAICH, UTTAR PRADESH - 271801
PH :9519596080.

BAKSHI KA TALAB

2946. BRIGHT 4 WHEEL SALES PVT LTD (1305-04), PLOT NO: 57 TO 60, KAUSHALABAD, BADHAULI BKT, PARGANA MOHANN, SITAPUR ROAD, BAKSHI KA TALAB, LUCKNOW - 226020
PH :7317049000.

BALLIA

2947. DEEP MOTORS (-03), MAIDEYPUR, RAJDHANI ROAD, BALLIA - 277001
PH :9838072917.

BALRAMPUR

2948. ANAND MOTOR AGENCIES LTD (-01), NEAR BALRAMPUR CHINI MILLS, GONDA ROAD, BALRAMPUR, UTTAR PRADESH - 271201
PH :6307959576.

BANDA

2949. MY CAR PVT LTD (2803-03), KALUKUAN, TINDWARI ROAD, BANDA - 210001
PH :9792971223.

2950. SUMITRA DS MOTORS PVT LTD (-01), PURANPUR ROAD, BANDA, TEHSIL BANDA, THANA BANDA, DISTT. SHAHJAHANPUR - U.P. - 242042

2951. MY CAR PVT LTD (-02), ARAZI NO 1180 & 1181, LADAKAPURWA, TINDWARI ROAD, BANDA, UTTAR PRADESH - 210001

BANSI

2952. ARBIT AUTOMOBILES PVT LTD (-01), KHASRA NO. 66 M, GRAM: BHAWNI, TAPPA, KUNDARANA, PARGANA: BANSI EAST, TEHSIL BANSI, DISTT : SIDARTHNAGAR - 272153

BANTHRA

2953. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (-01), KHASRA NO.1628 AMARPUR, SIKANDARPUR MARKET, BANTHRA, KANPUR ROAD LUCKNOW - 226401
PH :9919101456.

2954. ONE UP MOTORS INDIA PVT LTD (1306-05), KHASRA NO. 1166, KHANDEDEV, KANPUR ROAD, BANTHRA, LUCKNOW - 226401

BARABANKI

2955. BRIGHT 4 WHEEL SALES PVT LTD (1305-03), VILL. DHARSANIA, LUCKNOW ROAD, NAWABGANJ, BARABANKI - 225001
PH :9838075960.

BARAUT

2956. TANYA AUTOMOBILES PVT LTD (-01), 240/2 SHAHPUR-BADOLI, DELHI SAHARANPUR ROAD, BARAUT, BAGHPAT, UTTAR PRADESH. - 250611
PH :7055300019.

BAREILLY

2957. CORAL MOTORS (P) LTD (5602-56-01), STATION ROAD, BAREILLY - 243001
2958. CORAL MOTORS (P) LTD (5602-56-03), PILIBHIT BYE PASS ROAD, EXECUTIVE CLUB CROSSING, BAREILLY, UTTAR PRADESH - 243002

2959. KAVISHA MOTORS PVT LTD (5601-56-01), 4TH KM, RAMPUR ROAD, CLUTTER BUCKGANJ, BAREILLY - 243502

2960. NANDINI MOTORS (A UNIT OF PARK LANE ENTERPRISES PRIVATE LIMITED) (5604-56-01), APEX MULTISPECIALITY HOSPITAL PILIBHIT BYPASS RD BAREILLY - 243001

BARHAJ

2961. SMARTWHEELS PRIVATE LIMITED (-01), VILL. -LAWARCHHII,, BARHAJ DEORIA ROAD, - 274601

BARHAN

2962. KTL PVT LTD (-01), VILLAGE BARHAN, ETMADPUR, AGRA, UTTAR PRADESH. - 283201

BASTI

2963. SMARTWHEELS PRIVATE LIMITED (7201-05), MANORI CHAURAHA, DUMARIYA GANJ ROAD, BASTI - 270002

2964. ARBIT AUTOMOBILES PVT LTD (7203-72-03), SANSARPUR FUTAHIA POST GANDHI NAGAR, DISTRICT BASTI UTTAR PRADESH - 272182
PH :8953412821.

BEHTA

2965. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (-01), KHASRA NO. 254, OPPOSITE SANGAM MOTORS, KURSI ROAD, BEHTA - 226026
PH :6388901514.

BELA

2966. KULDEEP MOTORS LUCKNOW PVT LTD (-01), TIRWA ROAD BELA, DISTRICT AURAIYA U.P. - 206251

BHADOHI

2967. VARANASI MOTORS PVT LTD (8402-02), VARNASI ROAD, BHADOHI - 221401
PH :9838360662.

BHARTANA

2968. KULDEEP MOTORS PVT LTD (-01), RAJA GANJ, BHARTANA, DISTRICT ETAWAH - 206242

BHINGA

2969. ANAND MOTOR AGENCIES LTD (-01), PATNAKHARGAURA, BHINGA, SHRIVASTI - 271831
PH :9415013059.

BHOGNIPUR

2970. KULDEEP MOTORS KANPUR LLP (-01), NEAR CHANDRA PETROL PUMP, KANPUR JHANSI ROAD, TEHSIL BHOGNIPUR, KANPUR DEHAT, UP - 209112

BHOJPUR

2971. MOTORCRAFT SALES PVT LTD (-01), OPPOSITE PRIMARY GOVERNMENT SCHOOL, HAPUR ROAD, VILLAGE BHOJPUR, TEHSIL - MODINAGAR, DISTRICT - GHAZIABAD. - 201204
PH :9410038456.

BIJNOR

2972. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (-01), KHASRA NO. 1573, NEAR GROUP CENTRE, CRPF, CAMP, BIJNORE, LUCKNOW, PIN-226002, UP - 226002

BIJNORE

2973. SHAKUMBARI AUTOMOBILES PVT LTD (-01), PLOT & KHASRA NO. 253/3 & 258/1 ADJACENT KHEDI CHAURAHA, NEAR PULKIT HOSPITAL, DELHI-BIJNOR HIGHWAY, BIJNOR, DIST. - BIJNOR, UTTAR PRADESH. - 246701
PH :8630881409.

BILARI

2974. AKANKSHA AUTOMOBILES PVT LTD (-01), 2KM-BILARI NH 509, NEAR SBS SCHOOL, BILARI, MORADABAD 244001 - 244001
PH :7900600008.

BILASPUR-UP

2975. AKANKSHA AUTOMOBILES PVT LTD (-01), NH-87, OPPOSITE SHAGUN BANQUET HALL, NEAR MILTON ACADEMY SCHOOL, RAMPUR NAINITAL ROAD, BILASPUR, DISTRICT - RAMPUR. - 244921
PH :9105370007.

BISALPUR

2976. CORAL MOTORS (P) LTD (-01), KHASRA NO. 668, VILLAGE : BISALPUR, DISTT: PILIBHIT, UTTAR PRADESH - 262201
PH :9837891846.

BISWAN

2977. CONCEPT CARS LIMITED (-01), BILJHARIYA, OPPOSITE-555, BRICK FIELD, BISWAN - 261201 - 261201
PH :7607696666.

BUDAUN

2978. CORAL MOTORS (P) LTD (5602-04), PLOT NO.- 72, BAREILY-MATHURA HIGHWAY, BUDAUN, UTTAR PRADESH - 132103
PH :9837891846.

BUDHANA

2979. RADHA GOVIND AUTOMOBILES PVT LTD (-01), BARAUT ROAD, NEAR BALWALA POLICE STATION. - 251309

BULANDSHAHR

2980. SKUNIVERSE AUTOMOBILE PVT LTD (-01), KHASRA NO 561 , BHOOR, OPP PANDIT PETROL PUMP , BULANSHAHR - 203001
PH :3219694600.

2981. SKUNIVERSE AUTOMOBILE PVT LTD (-02), KHASRA NO.2261, NEAR T POINT , BYPASS SIKARPUR ROAD, BULANDSHAHR - 203001
PH :7055118430.

CHAIL

2982. SARASWATI MOTORS LLP (-01), MALUJA CHAIL, TEHSIL CHAIL, KAUSHAMBI, UTTAR PRADESH - 212202

CHAKARNAGAR

2983. KULDEEP MOTORS PVT LTD (-01), RAJPUR ROAD, CHAKARNAGAR, DISTT : ETAWAH - 206125

CHAKIA

2984. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (-01), KATHSILA NAHER, NEAR SAINT JOHN'S SCHOOL CHAKIA, DISTRICT - CHANDAULI. - 232101
PH :9450544961.

CHANDAUSI

2985. AKANKSHA AUTOMOBILES PVT LTD (-01), AZAD ROAD, NEAR ROADWAYS, CHANDAUSI (BHEEM NAGAR) - 202412
PH :7248000002.

2986. AKANKSHA AUTOMOBILES PVT LTD (-02),
PATHRA CHOWK, BADAUN ROAD (NEAR INDIAN
OIL FILLINGSTATION), CHANDAUJI, DISTRICT
SAMBAHAL, UTTAR PRADESH - 202414 - 202414

CHAURE BAZAR

2987. SMARTWHEELS PRIVATE LIMITED (-01), PLOT
NO 366, GRAM CHAURE CHANDAUJI, CHAURE
BAZAAR, BIKAPUR TEHSIL, DISTT AYODHYA -
224209

CHAURI CHAURA

2988. ARBIT AUTOMOBILES PVT LTD (-01), ARAZI NO
561 DOMARI KHURD, CHAURI CHAURA,
GORAKHPUR - 273201
PH :8953412821.

CHIBRAMAU

2989. KTL PVT LTD (-01), PLOT GHATA NO. 70,
MAUJA - LALAKPUR, VILLAGE - CHIBRAMAU,
DIST.-KANNANUJ, UTTAR PRADESH - 209721

CHITRASENPUR

2990. AGR AUTOMOBILES PVT LTD (-01), KHASRA
NO-194,CHITRASENPUR, KACHHUWA ROAD,
VARANASI, PIN -221313 - 221313
PH :9889803355.

COLONELGANJ

2991. SMARTWHEELS PRIVATE LIMITED (-01),
OPPOSITE BHARAT PETROL PUMP, PIPRI,
COLONELGANJ, DISTT- GONDA, UTTAR
PRADESH - 271502

DADRI

2992. RANA MOTORS PVT LTD (-01), KHASRA NO
-1242, KHATONI NO - 56, VILLAGE DHOOM
MANIKPUR, DADRI, UTTAR PRADESH - 203207

DALMAU

2993. KTL AUTOMOBILE PRIVATE LIMITED (-01),
DALMAU ROAD, OPPOSITE BHAGIRATHI GUEST
HOUSE - 229203
PH :9918451222.

DANKAUR

2994. MOTORCRAFT SALES PVT LTD (-01), OPP.
SHRI DRONACHARYA DEGREE COLLEGE,
DANKAUR, DIST. - GAUTAM BUDDH NAGAR,
HARYANA - 203201
PH :9810289355.

DEBAI

2995. SK UNIVERSE AUTOMOBILE PRIVATE LIMITED
(-01), KHASRA NO. 299/2, SABALPUR DEBAI
DISTT, BULANDSHAHR - 203393

DEOBAND

2996. ATELIER AUTOMOBILES (-01), OPPOSITE CIVIL
COURT, MUZZAFARNAGAR HIGHWAY,
DEOBAND - 247001
PH :7500220011.

DEORIA

2997. SMARTWHEELS PRIVATE LIMITED (-01), CFC
BUILDING, INDUSTRIAL ESTATE, DEORIA,
DISTRICT DEORIA, UTTAR PRADESH
PLOT NO. C-7, AND SHED NO. D-3,
GOVERNMENT INDUSTRIAL ESTATE MEHRA,
DEORIA, DIST.-DEORIA, UTTAR PRADESH -
274001

2998. ARBIT AUTOMOBILES PVT LTD (-01), ARAZI NO
467 MI & 607 MAUJA SONUGHAT PARGANA
SALEMUR MAJHAULI, DEORIA, UTTAR
PRADESH - 274001
PH :8953412821.

DERAPUR

2999. KTL PVT LTD (-01), VILLAGE - DERAPUR,
KANPUR DEHAT, UTTAR PRADESH. - 209301

DHAMPUR

3000. SHAKUMBARJI AUTOMOBILES PVT LTD (-01),
KHASRA NO. 205, OPPOSITE, UHSA SMARAK
SCHOOL, MORADABAD ROAD, TEHSIL -
DHAMPUR, MOJA - ALEHPUR, DIST.-BIJNOR,
UTTAR PRADESH. - 246761
PH :9675970960.

DHAURAHARA

3001. SUMITRA DS MOTORS PVT. LTD. (-01),
DHAKHERWA ROAD, NEAR HAMID PETROL
PUMPBPCL, DHAURAHARA, LAKHIMPUR KHERI -
262723

DIBYAPUR

3002. KULDEEP MOTORS PVT LTD (-01), AURAIYYA
ROAD, DIBYAPUR - 206244
PH :9235258425.

DOMARIAGANJ

3003. SMARTWHEELS PRIVATE LIMITED (-01), VILL &
POST - CHAUKHARA, DOMARIAGANJ, DISTT -
SIDHDHARTH NAGAR - 272193
PH :7705800602.

ETAH

3004. DEV MOTORS PVT LTD (-01), GATA NO 685/4
VILL. GIRORA, ETAH-KASGANJ ROAD, ETAH, UP
- 207001
PH :7351345577.

ETAWAH

3005. KULDEEP MOTORS PVT LTD (-01), PAKKA
BAGH, KANPUR ROAD, ETAWAH - 206001
PH :257029.

FAIZABAD

3006. SMARTWHEELS PRIVATE LIMITED (7201-02),
SAHADAT GANJ, LUCKNOW ROAD, FAIZABAD,
UTTAR PRADESH. - 224001
PH :7705803245.

3007. SMARTWHEELS PRIVATE LIMITED (7201-72-03),
GHATAMPUR MAGALSI, OPP TRIMURTI HOTEL,
TEHSIL SOHAWAL, FAIZABAD, UTTAR
PRADESH - 224001
PH :7705800602.

FAKHARPUR

3008. ONE UP MOTORS INDIA PVT LTD (-01),
GHASIPUR, FAKHARPUR, BAHRACH (UP) -
271902
PH :9935275786.

FARIDPUR

3009. KAVISHA MOTORS PVT LTD (-01), GATE NO.
216, KASBA SARAI, TEHSIL - FARIDPUR,
DISTRICT - BAREILLY, UTTAR PRADESH. -
243503

FARRUKHABAD

3010. MY CAR PVT LTD (2803-04), NEKPUR KALAN,
FARRUKHABAD - 209625
PH :9792970093.

FATEHABAD

3011. KTL PVT LTD (-01), KHASRA NO. 730/731, GRAM
MAUJA, MADAYNA SIKRARA MODE,
FATEHABAD, DISTRICT - AGRA, UTTAR
PRADESH - 283111
PH :8449710051.

FATEHPUR

3012. KTL PVT LTD (2801-04), NH-2, OPP. RTO
OFFICE, KANPUR ROAD, FATEHPUR - 212601
3013. BRIGHT 4 WHEEL SALES PVT LTD (-01), GATA
NO-637 VILL. ISRAULI, TEHSIL, FATEHPUR,
BARABANKI - 212601

FAZILNAGAR

3014. SMARTWHEELS PRIVATE LIMITED (-01), NEAR
BAGHAUCH GHAT TURN FAZILNAGAR, UTTAR
PRADESH - 274401

FIROZABAD

3015. DEV MOTORS PVT LTD (-01), GATE NO.435,
MOUJA-DHOLPURA , NEAR ST JOHNS
CHAURAH, AGRA ROAD, FIROZABAD UTTAR
PRADESH - 283203

GAJRAULA

3016. AKANKSHA AUTOMOBILES PVT LTD (-01),
JHANAKPURI OPPOSITE RELIANCE PETROL
PUMP, DELHI ROAD, GAJRAULA - 244235
PH :7895400003.

GARH MUKTESHWAR

3017. ROHAN MOTORS LTD (-01), "EAST WARD NO.
8, ADARSH NAGAR, GARH, MUKTESHWAR,
DIST. HAPUR, PIN-245202 - 245202

GHATAMPUR

3018. MY CAR PVT LTD (-01), TRANSPORT NAGAR,
NEAR INDIAN OIL PETROL, HAMIRPUR ROAD,
GHATAMPUR, PIN-209206 - 208003

GHAZIABAD

3019. ROHAN MOTORS LTD (5904-59-01), 432
MUKAND NAGAR, G.T.ROAD, GHAZIABAD -
201001

3020. REGENT AUTOLINKS PVT LTD (5902-59-01),
A-10/9 INDUSTRIAL AREA, SITE NO 3, MEERUT
ROAD, GHAZIABAD - 201001

3021. ROHAN MOTORS LTD (5904-02), PLOT NO.46,
MEERUT-DELHI ROAD, MORTA, GHAZIABAD -
201102

3022. T R SAWHNEY MOTORS PVT LTD (5905-01),
PLOT NO. 96, RAJINDER NAGAR INDUSTRIAL
AREA, MOHAN NAGAR, GHAZIABAD, DISTT. -
GHAZIABAD, U.P. - 201007

3023. SNV AUTOMOBILES PVT LTD (5906-59-01), PLOT
NO. 15, SOUTH SIDE GT ROAD INDUSTRIAL
AREA, GHAZIABAD, UTTAR PRADESH - 201001 -
201001
PH :9650324325.

3024. GLOBUS AUTO LLP (5907-59-01), 139, PANDAV
NAGAR, GHAZIABAD, PIN-201001, UTTAR
PRADESH - 201001
PH :858872804.

3025. GLOBUS AUTO LLP (-59-02), 139, PANDAV
NAGAR, GHAZIABAD, PIN-201001 139, PANDAV
NAGAR, GHAZIABAD, PIN-201001 - 201001

GHAZIPUR

3026. AGR AUTOMOBILES PVT LTD (8403-03), RKBK
PETROL PUMP, NEAR BANSI BAZAR, GAZIPUR -
2333001
PH :2361136.

GHIROR

3027. KULDEEP MOTORS PVT LTD (-01), NEAR SSD
COLLEGE, KARHAL ROAD, GHIROR, DISTRICT -
MAINPURI, UTTAR PRADESH.
KARHAL ROAD, TEHSIL - GHIROR, DISTRICT -
MAINPURI, UTTAR PRADESH.
PH :9536755555.

GOLA

3028. SMARTWHEELS PRIVATE LIMITED (-01), NEAR
KANYA INTER COLLEGE, BHARASADA, GOLA,
DISTT - GORAKHPUR, UTTAR PRADESH -
273408
PH :7705800602.

GONDA

3029. SMARTWHEELS PRIVATE LIMITED (7201-07),
JANKI NAGAR, OPP INDIAN OIL DEPOT,
BAHRAICH ROAD, GONDA, UTTAR PRADESH. -
271001
PH :7705803261.

GORAKHPUR

3030. SMARTWHEELS PRIVATE LIMITED (7201-01),
MOHADDIPUR, (NEAR RAMGARH TAL),
GORAKHPUR (U.P.) - 273012
PH :7705803152.

3031. SMARTWHEELS PRIVATE LIMITED (7201-06),
NEAR T B HOSPITAL, LACHCHIPUR, NEPAL
ROAD, GORAKHPUR - 273012
PH :7705803109.

Dealer Workshop (AS ON 31.01.2026)

3032. SMARTWHEELS PRIVATE LIMITED (7202-01),
PLOT NO.AL-4, SECTOR-9, GIDA, GORAKHPUR.
- 273209

3033. ARBIT AUTOMOBILES PVT LTD (7203-72-01),
ARAZI NO. 66/1/1 MI & 66/2/1MI, 66 MI, MAUZA -
MAHEWA MUSTAKIL, NEAR FALMANDI CHOWK,
TRANSPORT NAGAR, GORAKHPUR, UTTAR
PRADESH - 273016

3034. ARBIT AUTOMOBILES PVT LTD (7203-72-1B),
MEDICAL COLLEGE ROAD, NEAR SPORTS
COLLEGE, GORAKHPUR, UTTAR PRADESH -
273016

GOSAIGANJ

3035. BRIGHT 4 WHEEL SALES PVT LTD (-01),
KHASRA NO. 24, VILLAGE - SHEKHANPUR,
PARGANA MOHANLALGANJ, TEHSIL -
MOHANLALGANJ, DIST.-LUCKNOW, UTTAR
PRADESH - 226501
PH :9838075929.

GREATER NOIDA

3036. ROHAN MOTORS LTD (-01), 63-A, UDYOG
VIHAR, GREATER NOIDA, UTTAR PRADESH -
201306

3037. VIPUL MOTORS PVT LTD (-01), PLOT NO. 64,
ECOTECH 12, GREATER NOIDA (WEST), UP -
201009
PH :9811233385.

HAIDERGARH

3038. BRIGHT 4 WHEEL SALES PVT LTD (-01),
PROPERTY SHOP NO. 5, 6 AND 7, VILLAGE -
GOTAUNA, PARGANA - HAIDERGARH, TEHSIL -
HAIDERGARH, DISTRICT - BARABANKI, - 225124

HAMIRPUR

3039. KTL PVT LTD (-01), VILLAGE RAMEDI,KANPUR
ROAD, HAMIRPUR - 210301
PH :7704907587.

HAPUR

3040. ROHAN MOTORS LTD (-01), KHASRA NO - 2225
, BAHADUR DHARAM KANTA, NEAR SUPREME
PETROL PUMP, GARH ROAD, HAPUR,
UTTARPRADESH - 245101 - 245101

HARDOI

3041. CONCEPT CARS LIMITED (-01), NANAK GANJ,
LUCKNOW ROAD, HARDOI - 241001
3042. CONCEPT CARS LIMITED (-04), PLOT NO. 1609
& 1605 GANGA BUX PURVA, BILGRAM ROAD,
HARDOI KANPUR HIGHWAY, HARDOI, UTTAR
PRADESH - 241001

HARGAON

3043. CONCEPT CARS LIMITED (-01), SITAPUR TO
LAKHIMPUR ROAD, NEAR HARGAON DRAM
KANTA KESHURWA, TEHSIL. HARGAON, DIST.
SITAPUR, UTTAR PRADESH. - 261121

HATHRAS

3044. DEV MOTORS PVT LTD (-03), NEAR NAGLA
UMMED, ALIGARH ROAD, HATHRAS - 204101
PH :9917435500.

IGLAS

3045. DEV MOTORS PVT LTD (-01), MATHURA ROAD,
IGLAS, DISTRICT ALIGARH. - 202124
PH :9837549000.

ITUNJA

3046. BRIGHT 4 WHEEL SALES PVT LTD (-01), 90M
GATA GRAM MANDOLI, ITTAUNJA, LUCKNOW,
UTTAR PRADESH-226203. - 226203
PH :7011482503.

JAGATPUR

3047. KTL PVT LTD (-01), GATA NO.331,
JOGMAGDIPUR POORE TAYN, NEAR MADRASA
ROAD, LUCKNOW PRAYAGRAJ HIGHWAY,
JAGATPUR, 229402 - 229402

JAGDISHPUR

3048. BRIGHT 4 WHEEL SALES PVT LTD (-01),
KATHORA,MUSAFIRKHANA,LUCKNOW
SULTANPUR ROAD,JAGDISHPUR-UTTAR
PRADESH - 227817

JAGNER

3049. MERAK VEHICLES (A UNIT OF ONE 3
VENTURES) (-01), SHRI RAM GARDEN, AGRA
ROAD, NEAR RADHA KRISHNA MANDHIR,
JAGNER, UTTAR PRADESH, 283115 - 283115
PH :7896500400.

JALALABAD

3050. SUMITRA DS MOTORS PVT LTD (-01), GRAM:
SUJAWALPUR, BAREILLY ROAD, TEHSIL:
JALALBAD, DIST. SHAHJAHANPUR - 242221

JALALPUR

3051. SMARTWHEELS PRIVATE LIMITED (-01),
SURHURPUR, TEHSIL - JALALPUR, UTTAR
PRADESH - 224149

JALAUJ

3052. KULDEEP MOTORS KANPUR LLP (-01),
PARSHURAM NAGR, JALAUJ KANPUR
ROADJALAUJ, UTTAR PARDESH - 285123

JAUNPUR

3053. KIRTI KUNJ AUTOMOBILES PVT LTD (-01),
KHANPUR AKBAR, KUTTUPUR TIRAHA - 222001
PH :9554951026.

JHANSI

3054. SURI AUTOMOBILES (6001-60-01), BALAJI UNNA
ROAD, ANSAL COLONY, JHANSI PIN - 284002. -
284002
PH :8881811383.

3055. VELOCITY CARS (A UNIT OF BASERA
VELOCITY AUTOHUB PVT LTD) (6002-01), PLOT
NO 486, 487, 488, 489 AND 477 (PATTA
NUMBERS), MAUZA - KOCCHABHANWAR,
BLOCK - BADAGAON, TEHSIL AND DISTT -
JHANSI. - 284128

KAKOD

3056. SKUNIVERSE AUTOMOBILE PVT LTD (-01),
GATA NO.1738,V-KAKORE DEHAT, TEHSIL
SIKANDRABAD,DIST.BULANDSHAHR, - 203203

KANNAUJ

3057. KTL PVT LTD (2801-05), PLOT NO. - 377,
AKBARPUR, KANNAUJ - 209725
PH :7408409305.

KANPUR

3058. KTL PVT LTD (2801-28-01), 9/46, BENAIHABAR
ROAD, HARSH NAGAR, KANPUR - 208002
PH :7408409341.

3059. MY CAR PVT LTD (2803-28-01), 84/54 C, JARIB
CHOWKI, G.T. ROAD, KANPUR - 208003
PH :9792970511

3060. KTL PVT LTD (2801-28-02), SHVAATRA KRISHNA
NAGAR, G T ROAD, KANPUR - 208007
PH :7408409253.

3061. MY CAR PVT LTD (2803-28-02), C-16, SITE-1,
PANKI INDUSTRIAL AREA, KANPUR - 208022
PH :9792970086.

3062. S B CARS PVT LTD (2806-28-01), 77B ,
FAZALGANJ, KANPUR - 208012

3063. MY CAR PVT LTD (2803-28-05), 88, BLOCK-T,
FACTORY AREA, FAZALGANJ, KANPUR - 208004
PH :9792970081.

3064. S B CARS PVT LTD (2806-28-05), 1/6-7
AMBEDKAR PURAM, AWAS VIKASH,
KALYANPUR, KANPUR - 208017
PH :7408525252

3065. KULDEEP MOTORS KANPUR LLP (-01),
BUKHAND NO.756, 756A, 757, BLOCK- W,
YOJNA: 2, JUHI KALAN, BARRA BYE PASS,
KANPUR. - 208017
PH :907668701

3066. KTL PVT LTD (2801-07), ARAZI NO. 1110,
VILLAGE BAIRI, AKBARPUR, KACHHAR, INDIRA
NAGAR, KANPUR, UTTAR PRADESH - 208026
PH :7408409379.

3067. KULDEEP MOTORS KANPUR LLP (-28-02),
PROPERTY NO. C-4 SITE-II, PANKI INDUSTRIAL
AREA, KANPUR. - 208020

3068. MY CAR PVT LTD (2803-28-06), PLOT NO.64A,
PAHARPUR, NEAR INDIRA PETRO, HAMIRPUR
ROAD, NAUBASTA, PIN-208021 - 209401

KANTH

3069. AKANKSHA AUTOMOBILES PVT LTD (-01),
GOSIPURA, HARIDWAR ROAD KANTH,
DISTRICT - MORADABAD, UP - 244501

KAPTANGANJ

3070. SMARTWHEELS PRIVATE LIMITED (-01), IN
FRONT OF BHARAT PETROL PUMP, RAMKOLA
ROAD, KAPTANGANJ, DISTT- KUSHINAGAR,
PIN- 274301. - 274301

KARHAL

3071. KULDEEP MOTORS PVT LTD (-01), SAFAI
KARHAL ROAD, KARHAL, - 205264

KARWI

3072. MY CAR PVT LTD (-01), ARAJI NO. 58, MAUJA -
AMANPUR, TEHSIL - KARWI, DIST.
-CHITRAKOOT, UTTAR PRADESH. - 210205

KASIA

3073. ARBIT AUTOMOBILES PVT LTD (-01), MAUJA
BHAIASA, HETIMPUR KASIA, KUSHINAGAR,
UTTAR PRADESH - 274206
PH :8953412821.

KATRA

3074. SUMITRA DS MOTORS PVT LTD (-01), GRAM:
SAALPUR NAVADIYAM, NH24, KATRA, TEHSIL -
TILHAR, SHAHJAHANPUR - 242301
PH :9336408074.

KAUSHAMBI

3075. SARASWATI MOTORS LLP (-01), ARAZI NO
1228, KORRO MANJHANPUR, KAUSHAMBI,
UTTAR PRADESH. PINCODE - 212207. - 212207
PH :8090854005.

KAYAMGANJ

3076. MY CAR PVT LTD (-01), BYE PASS ROAD ,
NEAR KHAN PETROL PUMP, VILLAGE :
KAYAMGANJ , DISTT: FARUKHABAD - 209502

KHAIR

3077. DEV MOTORS PVT LTD (-01), PLOT 117,
ALIGARH PALWAL ROAD, VILLAGE CHAMAN
NAGARIYA, KHAIR - 202138
PH :7351345577.

KHURJA

3078. SKUNIVERSE AUTOMOBILE PVT LTD (-01), OLD
GT ROAD, KHURJA, DISTRICT-
BULANDSHAHAH, UTTAR PRADESH - 203131. -
203131
PH :7055118430.

KIRAOLI

3079. PREM MOTORS PVT LTD (-01), GOVIND
PALACE, NEAR KIRAWALI TEHSIL, AGRA -
JAIPUR HIGHWAY, KIRAWALI, DISTRICT -
AGRA, UTTAR PRADESH. - 283122
PH :9690017099.

KITHORE

3080. RADHAGOVIND AUTOMOBILES PVT LTD (-01),
MANSAB PURA, ISLAMABAD, OPP. HP PETROL
PUMP, KITHORE, MEERUT, UTTAR PRADESH -
250104

KONCH

3081. KULDEEP MOTORS KANPUR LLP (–01), NEW
PATEL NAGAR, CITY KONCH, DISTRICT -
JALAU, UTTAR PRADESH - 285205
PH: 9839015046.

KOSI

3082. UMA MOTORS PVT LTD (–01), KHASRA NO. 245,
CITY - KOSI, DIST. -MATHURA - 281004

KUBERPUR

3083. KTL PVT LTD (6606–04), KHASRA
NO.248,249,251, NAWALPUR, BHAGPUR,
POST-ETHMADPUR, NH-2, KUBERPUR, AGRA,
UTTAR PRADESH - 282006
PH: 8449715099.

KUNDA

3084. SARASWATI MOTORS LLP (–01),
ALLAHABAD-LUCKNOW HIGHWAY, KUNDA,
DISTRICT PRATAPGARH. - 230204
PH: 8090854005.

KURAWALI

3085. KULDEEP MOTORS PVT LTD (–01), GT
ROAD, NEAR SWARAJ MEMORIAL PUBLIC
SCHOOL. - 205265

KURSI

3086. BRIGHT 4 WHEEL SALES PVT LTD (–01), GATA
NO. 261, VILLAGE BASARA, PARGANA KURSI,
TEHSIL FATEHPUR. - 225302

LAHARPUR

3087. CONCEPT CARS LIMITED (–01), KHASARA NO:
1639 VILLAGE LACHCHHAN NAGAR TEHSIL
LAHARPUR DISTRICT SITAPUR UP - 261135

LAKHIMPUR

3088. SUMITRA DS MOTORS PVT LTD (–02), GATA
NO. 66, LRP ROAD, TOWARDS GOLA,
LAKHIMPUR KHERI - 242001

3089. SUMITRA DS MOTORS PVT LTD (–01), GATE NO
604, PALIA ROAD, NEAR FCI WEAR HOUSE,
VILLAGE - BHARDSARIYA, KHERI, LAKHIMPUR -
262702

LALGANJ

3090. KTL AUTOMOBILE PRIVATE LIMITED (–01),
JEEWAN DEEP COMPOUND, ALLAHABAD
ROAD, LALGANJ, DISTT. RAIBARELLI - 229206

LALITPUR

3091. SURI AUTOMOBILES (6001–03), JAHANSI
SAGAR ROAD, LALITPUR - 284001
PH: 9451496015.

3092. VELOCITY CARS (A UNIT OF BASERA
VELOCITY AUTOHUB PVT LTD) (–01), LALITPUR
BYPASS ROAD, NH26 (LALITPUR-MEHRANA
HIGHWAY), IN FRONT OF RMV COLLEGE ROAD,
MAIN HIGHWAY, LALITPUR, UTTAR PRADESH -
284403
PH: 9560998709.

LONI

3093. T R SAWHNEY MOTORS PVT LTD (–G1), PLOT
NO. 16, DELHI SAHARANPUR ROAD, KHANNA
NAGAR, LONI, GHAZIABAD, UTTAR PRADESH -
201102

LUCKNOW

3094. ANAND MOTOR AGENCIES LTD (1301-13-01),
11TH KMS, FAIZABAD ROAD, CHINHAT,
LUCKNOW - 227105
PH: 7080000462.

3095. KTL AUTOMOBILE PRIVATE LIMITED
(1311-13-01), MATIYARI CHAURAH, CHINHAT,
FAIZABAD ROAD, LUCKNOW - 227105
PH: 7408411453.

3096. ANAND MOTOR AGENCIES LTD (1301-13-02), 47,
NEHRU ROAD, SADAR BAZAR, LUCKNOW -
226016

3097. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-01),
11/CP- 6, VIKAS NAGAR, RING ROAD,
LUCKNOW - 226022

3098. ONE UP MOTORS INDIA PVT LTD (1306-13-01),
C-16A, TRANSPORT NAGAR, KANPUR ROAD,
LUCKNOW, KANPUR ROAD, LUCKNOW - 226012

3099. KTL AUTOMOBILE PRIVATE LIMITED
(1311-13-02), INDRA NAGAR, OPP.
HALFAIZABAD ROAD, LUCKNOW, UTTAR
PRADESH - 226016
PH: 7408411478.

3100. KTL AUTOMOBILE PRIVATE LIMITED
(1311-13-03), BEHIND N S KOHLI PETROL PUMP,
SARDARI KHEDA, KANPUR ROAD, ALAMBAGH,
LUCKNOW - 226005

3101. ANAND MOTOR AGENCIES LTD (1301-13-04),
G-3, LDA MARKET, ALIGANJ, LUCKNOW -
226024

3102. ONE UP MOTORS INDIA PVT LTD (1306-13-03),
CHHANNILAL CROSSING, MANDIR MARG,
LUCKNOW - 226005
PH: 3916500451.

3103. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-02),
PARGANNA MOHANNA, STP ROAD, CHATMEEL,
LUCKNOW - 226021
PH: 9838075960.

3104. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-05),
PLOT NO. 68, BUTLER GANJ, BAALU ADDA,
LUCKNOW. - 226001

3105. MEGA MOTORS (A UNIT OF AKM MOTORS PVT
LTD) (–01), CP1 (COMMERCIAL PLOT 1), VIBHAV
KHAND, GOMTI NAGAR, LUCKNOW. - 226010

3106. KTL AUTOMOBILE PRIVATE LIMITED (13-07),
B-6/1A, AMAUSI INDUSTRIAL AREA,
NADARGANJ, LUCKNOW, UTTAR PRADESH. -
226008
PH: 7800007376.

3107. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-06),
KHASRA NO. 418, MISHRAPUR PARGANA
MAHONA, KURSI ROAD, LUCKNOW. - 226022
PH: 9935275786.

3108. ONE UP MOTORS INDIA PVT LTD (1314-13-01),
KHASRA NO. 20 TO 25, 30, 35, 37, 42, 43, 45, 47,
48, 49, 67, 68, 71 & 99, RAJJABGANJ, HARDOI
ROAD, LUCKNOW. - 226003

3109. MEGA MOTORS (A UNIT OF AKM MOTORS PVT
LTD) (1313-02), KHASRA NO. 614, VILLAGE:
BHADRUKH, VIP CANNEL RINGI ROAD, DEVI
KHARA, TELIBAGH (VIP ROAD), TEHSIL:
SAROJNI NAGAR,
LUCKNOW, UTTAR PRADESH 226002 - 226002
PH: 6388901514.

3110. KULDEEP MOTORS LUCKNOW PVT LTD
(1315-13-01), PLOT NO F-01, SECTOR-B,
PRIYADARSHINI, LUCKNOW, UTTAR PRADESH -
226006

3111. MEGA MOTORS (A UNIT OF AKM MOTORS PVT
LTD) (1313-13-03), KHASRA NO 326, IIM ROAD,
MUKATIPUR, LUCKNOW, UTTAR PRADESH -
226013

3112. MEGA MOTORS (A UNIT OF AKM MOTORS PVT
LTD) (1313-04), 671, BADRUK VIP ROAD,
TELIBAGH, LUCKNOW, UTTAR PRADESH -
226010

3113. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-09),
CP-195, SITUATE AT VIRAJ KHAND, GOMTI
NAGAR, LUCKNOW, PIN-226010 - 226010

MADHOGANJ

3114. CONCEPT CARS LIMITED (–01), KANPUR ROAD,
NEAR RAILWAY CROSSING, MADHOGANJ DIST.
HARDOI. - 241302

MADHOGARH

3115. S B CARS PVT. LTD. (–01), MADHOGARH ORAI,
JALAUAN HIGHWAY. - 285126

MAHARAJGANJ

3116. SMARTWHEELS PRIVATE LIMITED (–01),
BESIDES SHUBHAM HERO, RAMPUR,
MAHARAJGANJ, UTTAR PRADESH.
NEAR PHARENDA TAXI STAND, NAHAR ROAD,
PIPAR DEORA, MAHARAJGANJ, DIST.
MAHARAJGANJ, UTTAR PRADESH. - 273303
KTL AUTOMOBILE PRIVATE LIMITED (–01),
MUNNA MARKET HAIDERGARH ROAD TOWN
AREA, TEHSIL – MAHARAJGANG, DISTRICT –
RAIBAREILLY, UTTAR PRADESH.
PH: 99184512222.

MAHIRPURWA

3118. ONE UP MOTORS INDIA PVT LTD (–01), NEAR
KURWA RAILWAY CROSSING, LAKHIMPUR
BAHRAICHA ROAD, UTTAR PRADESH - 271855

MAHMUDABAD

3119. CONCEPT CARS LIMITED (–01), OPPOSITE
INDIAN PETROL PUMP, MAHMUDABAD
SIDAHULI ROAD, MAHMUDABAD, DISTRICT
SITAPUR, UTTAR PRADESH. - 261203

MAHOBA

3120. SURI AUTOMOBILES (6001–02), NEAR
PARMANAND CHOWK, GANDHINAGAR,
MAHOBA, UTTAR PRADESH. - 284001

3121. VELOCITY CARS (A UNIT OF BASERA
VELOCITY AUTOHUB PVT LTD) (–01), BAIRANG
CHOWK, SAGAR-KANPUR HIGHWAY, MAHOBA -
210427
PH: 9560998709.

MAHOLI

3122. CONCEPT CARS LIMITED (–01), MUSKAN
TRACTORS, NEAR MELA MADAN,
SHAHJANPUR ROAD, MAHSUNIYAGANJ,
MAHOLI, DIST.-SITAPUR, UTTAR PRADESH. -
261141
PH: 7607696666.

MAINPURI

3123. KULDEEP MOTORS PVT LTD (–02), SKP-4A,
MAINPURI - 205001
PH: 9235258444.

MALIHABAD

3124. ONE UP MOTORS INDIA PVT LTD (–01),
KHASRA NO. 326/1 AND 327, VILLAGE
PARGANA, TEHSIL – MALIHABAD, DISTRICT –
LUCKNOW, UTTAR PRADESH. - 227111
PH: 9918100781.

MANDI DHANORA

3125. AKANKSHA AUTOMOBILES PVT LTD (–01),
CHANDPUR ROAD, NEAR NEEDARMAL
SUGARCIMCRASHER, DHANORA - 244131

MATHURA

3126. UMA MOTORS PVT LTD (–01), 68, MAHOLI, NEAR
JAI GURUDEV TEMPLE, NH-2, KM STONE 146,
MATHURA - 281004

MATI

3127. MEGA MOTORS (A UNIT OF AKM MOTORS PVT
LTD) (–01), GATA NO 761, NEAR MATI POLICE
CHOWKI, VILLAGE- MATI, PARGANA- DEWA,
TEHSIL- NAWABGANJ, BARABANKI, UTTAR
PRADESH - 225003
PH: 6388901514.

MAU

3128. DEEP MOTORS (–01), DARI CHATTI -
KHUKHUNDVA, MAU, UTTAR PRADESH. -
275305
PH: 7704000552.

MAUDAHA

3129. KTL PVT LTD (–01), MAUDAHA, DISTRICT -
HAMIRPUR, UTTAR PRADESH - 210507

MAURANIPUR

Dealer Workshop (AS ON 31.01.2026)

3130. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT LTD) (-01), BASERA CITY, MAURANIPUR - GARUTHA ROAD, MAURANIPUR, DISTT: JHANSI, UTTAR PRADESH - 284204
PH :8299202863.

MAWANA

3131. RADHAGOVIND AUTOMOBILES PVT LTD (-01), MAIN SHANTI NAGAR ROAD, MAWANA KALAN, SUBDIVISION HASTINAPUR, TEHSIL MAWANA, DISTRICT MEERUT - 250401
PH :7456001002.

MEERGANJ

3132. KAVISHA MOTORS PVT LTD (-01), SINDHAULI CHAURAH, ADJACENT TO OBC BANK, NH-24, MEERGANJ, TEHSIL & DISTT - BAREILLY, UTTAR PRADESH - 243504

MEERUT

3133. TANYA AUTOMOBILES PVT LTD (4802-48-01), GOVT. INDUSTRIAL TRAINING INSTITUTE, BACHHA PARK, MEERUT - 250001
PH :9837077003.

3134. TANYA AUTOMOBILES PVT LTD (4802-48-03), 90, NAUCHANDI GROUND, GARH ROAD, MEERUT - 250001
PH :9837077004.

3135. RADHAGOVIND AUTOMOBILES PVT LTD (4807-01), VILLAGE - BARAL, KUNDA GATE NEAR YOGI FARM HOUSE, PARTAPUR, DELHI ROAD, MEERUT. - 250002

3136. TANYA AUTOMOBILES PVT LTD (4802-48-04), MUNICIPAL NO. 9, 9/2, 9/3, 9/4, 11, 11/1, VILLAGE - ROSHANPUR DORLI, OPP. KONARK COLONY, NEAR RAJMANDIR MANDAP, ROORKEE ROAD, TEHSIL - SARDHANA, MEERUT, U.P. - 250001
PH :7900201515.

3137. T R SAWHNEY MOTORS PVT LTD (4808-48-01), MUNICIPAL NO 101, KHASRA NO 1926/ MINJUMLA & 1927/1, MAHAL LEKHRAJ MUJBITA, MAIN DELHI ROAD, MEERUT, UP - 250002 - 250002
PH :9999163125.

MEHRONI

3138. VELOCITY CARS (-01), INDIRA CHAURAH, MEHRONI MADWARA ROAD - 284405

MEJA

3139. SARASWATI MOTORS LLP (-01), MEJA ROAD, MEJA KHAS, PRAYAGRAJ, - 212302

MIRZAPUR

3140. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (-01), PILI KOTHI, STATION ROAD, MIRZAPUR, UTTAR PRADESH - 231001

MISHRIKH

3141. CONCEPT CARS LIMITED (-01), NEAR ARYAVART BANK, SITAPUR ROAD, MISHRIKH, SITAPUR, U.P. PINCODE: 261401 - 261401
PH :7607696666.

MODINAGAR

3142. MOTORCRAFT SALES PVT LTD (5903-02), OPPOSITE SONIA ENCLAVE, ADJACENT SUMAN CINEMA, NH-58, MODINAGAR - 201204

MOHANLAL GANJ

3143. BRIGHT 4 WHEEL SALES PVT LTD (-01), KHASARA PLOT NO.581, VILLAGE PURSANI, PARGANA AND TEHSIL MOHANLALGANJ, LUCKNOW DISTT., UTTAR PRADESH - 227305

MOOSANAGAR

3144. MY CAR PVT LTD (-01), VILL. GAUSGANJ, POST MOOSANAGAR, KANPUR DEHAT, UTTAR PRADESH. - 209208

MORADABAD

3145. AKANKSHA AUTOMOBILES PVT LTD (-01), DELHI ROAD, 5TH.KM, MORADABAD (U.P.) - 244001
PH :7247800008.

3146. AKANKSHA AUTOMOBILES PVT LTD (-03), LAKRI FAZALPUR MINI BYPASS, MORADABAD. 5TH KM DELHI ROAD, MORADABAD - 244001
PH :9588200001.

3147. AKANKSHA AUTOMOBILES PVT LTD (-04), KHASRA NO. 569-570, VILLAGE - KAJIPURA, KANT ROAD, MORADABAD, UTTAR PRADESH. - 244001
PH :7895600007.

MUGHALSARAI

3148. AGR AUTOMOBILES PVT. LTD. (-01), ARAJI NO.23,MAUJA CHANDASHI, PARGANA RALHUPUR,DDU NAGAR,MUGHALSARAI, - 232101

MURADNAGAR

3149. MOTORCRAFT SALES PVT LTD (-01), KHASRA NO. 317, ASHLAT NAGAR, BESIDE HOTEL SR GRAND, MURADNAGAR, PIN-201206, UTTAR PRADESH - 201206

MURATGANJ

3150. SARASWATI MOTORS LLP (-01), A-ONE MARKET, IN FRONT OF MELA GROUND, MURATGANJ, KAUSHAMBHI, 212201 - 212201

MUZAFFARNAGAR

3151. RADHAGOVIND AUTOMOBILES PVT LTD (-01), NH-58 ,121 KM STONE, BY-PASS ROAD, NEAR TRANSPORT NAGAR, MUZAFFARNAGAR - 251001

NAGINA

3152. SHAKUMBARI AUTOMOBILES PVT LTD (-01), RAIPUR ROAD, NEAR AKBARABAD CHOWK, , NAGINA, DIST. BIJNOR, UTTAR PRADESH - 246762

NAJIBABAD

3153. SHAKUMBARI AUTOMOBILES PVT LTD (-01), NEAR BUS STAND, BIJNORE BYPASS ROAD, NAJIBABAD, DIST.-BIJNORE, UTTAR PRADESH. - 246701
PH :8630881459.

NANPARA

3154. KTL AUTOMOBILE PRIVATE LIMITED (-01), GATA NO. 3730, NANPARA DEHAT, PARGANA TE, TEHSIL, NANPARA, DIST. BAHRAICH - 271865

NARWAL

3155. MY CAR PVT LTD (-01), GATA NO. 821 , KARIBGWANA ROAD , NARWAL , KANPUR, UTTAR PRADESH. - 209401
PH :9792970005.

NAUGARH

3156. SMARTWHEELS PRIVATE LIMITED (-01), NEAR PAKARI CHAURAH, NAUGARH ROAD, SIDHDHARTHNAGAR - 272205
PH :775803129.

NAUTANWA

3157. SMARTWHEELS PRIVATE LIMITED (-01), OPP. RAJIV GANDHI DEGREE COLLEGE, BYPASS ROAD, NAUTANWA, DISTT - MAHARAJGANJ - 273164

NAWABGANJ

3158. KAVISHA MOTORS PVT LTD (-01), VILLAGE - EIDH JAGIR NEAR GURUDWARA AT NH-74, TEHSIL - NAWABGANJ, DISTRICT - BAREILLY. - 209859

NIGOHA

3160. BRIGHT 4 WHEEL SALES PVT LTD (-01), GATA NO 146, VILL NIGOHA, TEHSIL MOHANLALGANJ, LUCKNOW - 226302
PH :7011482503.

NOIDA

3161. ROHAN MOTORS LTD (-01), C-8/9, SECTOR - I, NOIDA - 201301

3162. ROHAN MOTORS LTD (-02), C-11, SECTOR-1, NOIDA, UTTAR PRADESH - 201301

3163. FAIR DEAL PREMIUM WHEELS PVT LTD (-01), D-39, SEC-10, NOIDA - 201301

3164. VIPUL MOTORS PVT LTD (-02), A-111, SECTOR 5, NOIDA - 201301

3165. VIPUL MOTORS PVT LTD (-01), J-14, SECTOR-63, NOIDA, DISTT. GAUTAM BUDDH NAGAR (U.P.) - 201301

3166. MOTORCRAFT SALES PVT LTD (5903-04), PLOT NO.15, SECTOR-140, NOIDA (U.P.) - 201305

3167. MOTORCRAFT SALES PVT LTD (5903-05), PLOT NO 19 ECOTECH 12 GREATER NOIDA WEST ,GB NAGAR , UP - 201308
PH :8826312222.

3168. DEV MOTORS PVT LTD (-01), GATA NO -582, VILLAGE SALARPUR, SECTOR-49, VISHWAKARMA ROAD, NOIDA, UTTAR PRADESH - 201304

3169. COMPETENT AUTOMOBILES CO LTD (-01), KHASRA NO. C-12, SECTOR-85, NOIDA - 201301

ORAI

3170. S B CARS PVT LTD (2806-02), KANPUR ROAD, ORAI - 285001
PH :9307219303.

3171. KTL PVT LTD (-01), KHASRA NO.155, MAUJA LAHARIYAPURWA, JALAUN, ORAI, PIN-285001, UTTAR PRADESH - 285001

PADRONA

3172. SMARTWHEELS PRIVATE LIMITED (-01), AARJI NO. 37 & 38, MAUJA - BELWA MISRA, TAPPA PAKDI, PARAGNA - SIDHUWA JAUBNA, TEHSIL - PADRAUNA, DIST.-KUSHINAGAR, UTTAR PRADESH. - 274304
PH :7705803259.

PANWARI

3173. SURI AUTOMOBILES (-01), PANWARI, NEAR RAM LEELA GROUND, TEHSIL KULPAHAR, DISTRICT MAHOBA. - 210429
PH :9452287690.

PAPHUNDA

3174. TANYA AUTOMOBILES PVT LTD (4802-05), 354/1, MAIN HAPUR ROAD, PHAPHUNDA. - 245206
PH :9917547777.

PATIYALI

3175. KTL PVT LTD (-01), PATIYALI, KASGANJ, UTTAR PRADESH. - 207243

PATTI-UP

3176. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (-01), KHASRA NO.65,WARD NO.7, , KUMHIYA,BYPASS ROAD, PATTI, UTTAR PRADESH - 230135

PAYAGPUR

3177. KTL AUTOMOBILE PRIVATE LIMITED (-01), ACHAL COMPLEX, NEAR BANK OF BARODA, PAYAGPUR - 271871

PEPPEGANJ

3178. ARBIT AUTOMOBILES PVT LTD (-01), GHATA NO. 466, 465 & 472, PEPPEGANJ, MOUZA - SAHABGANJ, TEHSIL - CAMPIERGANJ, DISTT: GORAKHPUR - 273165

PILIBHIT

3179. CORAL MOTORS (P) LTD (–01), BISALPUR ROAD, PILIBHIT, U.P. - 262001
PH :9837891846.

3180. KAVISHA MOTORS PVT LTD (–01), OPP. ANKUR INDUSTRIES, PILIBHIT PURANPUR 1.5 KMS FROM ASSAM ROAD CHAURAHA, - 262001

POOTH KHAS

3181. T R SAWHNEY MOTORS PVT LTD (–01), POOTH KHAS, ROHTA ROAD, MEERUT, UTTAR PRADESH. - 250502
PH :9999790229.

PRATAPGARH

3182. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (–01), KHASRA NO 1390, VILL: GONDEY, CHILBILA, PRATAPGARH, DIST. PRATAPGARH - 230001

3183. AMITDEEP MOTORS PVT LTD (–01), CHILBILA PATTI ROAD, NEAR TALA MODE, PIPARI, KHALSA, PRATAPGARH - 230001

PURANPUR

3184. CORAL MOTORS (P) LTD (–01), KHASRA NO. 768 & 770, VILLAGE – KHAMRIYA PATTI, PURANPUR – PILIBHIT ROAD, TEHSIL AND PARGANA – PURANPUR, DIST. PILIBHIT. - 262124

PURWA

3185. KULDEEP MOTORS KANPUR LLP (–01), GAURAWA PURWA ROAD DURGAPUR, PURWA, DISTRICT - UNNAO, UTTAR PRADESH - 209825

RAIBAREILLY

3186. KTL AUTOMOBILE PRIVATE LIMITED (–01), PLOT NO. 1550, GULLUPUR, P O KATWARA, HIJARCHANDRAPUR, RAIBAREILLY - 229303
PH :7800001601.

RAM SANEHI GHAT

3187. BRIGHT 4 WHEEL SALES PVT LTD (–01), GATA NO 76, VILLAGE - BHENDUWA BRAHMANAN, TEHSIL - RAM SANEHI GHAT, BARABANKI, UTTAR PRADESH, PIN 225409 - 225409
PH :9935275786.

RAMNAGAR

3188. BRIGHT 4 WHEEL SALES PVT LTD (–01), KHASRA NO. 629, VILLAGE - BUDHAWAL, TEHSIL - RAMNAGAR, DIST - BARABANKI, UTTAR PRADESH. - 225205

RAMPUR (UP)

3189. AKANKSHA AUTOMOBILES PVT LTD (–02), SHAHZAD NAGAR BAREILLY ROAD RAMPUR UTTAR PRADESH - 244901
PH :7895000007.

RATH

3190. MY CAR PVT LTD (–01), ETAYAL ORAI ROAD,, RATH,HAMIRPUR, - 210431

RAYA

3191. UMA MOTORS PVT LTD (–01), CHAUDHARY PADAM SINGH MARKET, NEAR INDIA INTER COLLEGE, RAYA - MAANT ROAD, RAYA, DISTT. MATHURA (U.P.) - 281204

RISIA BAZAR

3192. ONE UP MOTORS INDIA PVT LTD (–01), NANAPARA ROAD NEAR HP PETROL PUMP RISIA BAZAAR BAHAIRCH PIN:- 271875 - 271875

ROBERTSGANJ

3193. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (–01), UMRAURA, PIMPRI ROAD, ROBERTSGANJ, UTTAR PRADESH. - 231216

RUNKATA

3194. PREM MOTORS PVT LTD (–01), ROYAL BANDHAN RESORT, KHASRA NO 108, NH-2, RUNKATA, AGRA - 282101
PH :7060111245.

RUPAIDIHA

3195. ANAND MOTOR AGENCIES LTD (–01), RAMLEELA CHAURAHA, RUPAIDIHA, UTTAR PRADESH - 271881

SADABAD

3196. DEV MOTORS PVT LTD (–01), VILLAGE KUTKAI, AGRA ROAD SADABAD, DISTRICT HATHRAS, UTTAR PRADESH - 281306

SAHARANPUR

3197. ATELIER AUTOMOBILES (–01), NEAR BARI NAHAR, AMBALA ROAD, SAHARANPUR - 247001
PH :7500250070.

3198. TANYA AUTOMOBILES PVT LTD (–01), AAWAS VIKAS YOJNA, DELHI ROAD, SAHARANPUR, UTTAR PRADESH - 247001
PH :9837077004.

SAHASWAN

3199. CORAL MOTORS (P) LTD (–01), OPP BHARAT PETROL PUMP, BADAUN ROAD, SAHASWAN, DISTT. BADAUN. - 243638
PH :9837891846.

SAHIBABAD

3200. FAIR DEAL WHEELS PVT LTD (–01), 12/67 SITE 4, INDUSTRIAL AREA, SAHIBABAD, GHAZIABAD - 110095

3201. MOTORCRAFT SALES PVT LTD (5903–01), S-7 SITE-IV, SAHIBABAD INDUSTRIAL AREA, NEAR DABUR CHOWK, SAHIBABAD - 201010

3202. T R SAWHNEY MOTORS PVT LTD (–03), 28/11, SITE-IV, SAHIBABAD INDUSTRIAL AREA, DISTT- GHAZIABAD, UTTAR PRADESH - 201010

SALEMPUR

3203. SMARTWHEELS PRIVATE LIMITED (–01), GHATA NO. 48, GRAM: DEVPAR, TEHSILL: SALEMPUR, PARGANA: SALEMPUR MAUJHAULI, DISTT: DEORIA - 274509

SALON

3204. KTL AUTOMOBILE PRIVATE LIMITED (–01), SALON BYPASS, PARSHEDAPUR ROAD, SALON, DISTRICT RAIBARELLI, UTTAR PRADESH - 229127
PH :9918451222.

SAMBHAL

3205. AKANKSHA AUTOMOBILES PVT LTD (–01), PLOT NO. 303, NEAR TAJ MILK FACTORY, MORADABAD SAMBHAL ROAD, SAMBHAL, UTTAR PRADESH - 244302
PH :7248000028.

SANDILA

3206. CONCEPT CARS LIMITED (–01), PLOT NO.371, SARAY MARUPPUR, LUCKNOW ROAD, SANDILA-241204 DISTT. HARDOI. - 241204

SARDHANA

3207. RADHAGOVIND AUTOMOBILES PVT LTD (–01), DAURALA ROAD, NEAR RADHASWAMI SATSANG, SARDANA - 250342
PH :7456001030.

SHAHABAD

3208. CONCEPT CARS LIMITED (–01), VILLAGE MUJAGADH, SHAHABAD - 241124

SHAHJAHANPUR

3209. SUMITRA DS MOTORS PVT LTD (–01), SITAPUR ROAD, NH-24, SHAHJAHANPUR - 242001

SHAMLI

3210. RADHAGOVIND AUTOMOBILES PVT LTD (–01), KHERI KARMU, OPPOSITE POWER HOUSE, PANIPAT-KAIRANA ROAD, SHAMLI UTTAR PRADESH - 247776

SHAMSHABAD

3211. KTL PVT LTD (–01), BAKALPUR, TEHSIL SHAMSHABAD, AGRA SHAMSHABAD ROAD, UTTAR PRADESH. - 283125

SHIVRAJPUR

3212. KTL PVT LTD (–01), ARAZI NO. 67K, DUBIYANA, GT ROAD, SHIVRAJPUR, KANPUR, UTTAR PRADESH - 209205
PH :9414113666.

SIDHAULI

3213. CONCEPT CARS LIMITED (–01), R/O MISHRIKH ROAD NOROTTAM NAGAR, DAKSHIDI, OPP. BLOCK, SIDHAULI, SITAPUR - 261303
PH :7607596666.

SIDHOUR

3214. BRIGHT 4 WHEEL SALES PVT LTD (–01), KHASRA NO. 1632, VILLAGE SIDHAUR KHAS, TEHSIL HAIDERGARH, DISTRICT BARABANKI - 225413

SIKANDRA

3215. KTL PVT LTD (–01), YADAV MARKET, NEAR SURYA DHABA, NH-19, ETAWAH-KANPURROAD, SIKANDRA, U.P. - 209715
PH :9414113666.

SIKANDRABAD

3216. SKUNIVERSE AUTOMOBILE PVT LTD (–01), NEAR R K SCHOOL, VILLAGE – SANWALI SIKANDRABAD, DIST - BULANDSHAHR UTTAR PRADESH, PIN 203202
PH :7310106565.

SIRATHU

3217. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (–01), KHASRA NO 584, SAYARA MEETHEPUR, SIRATHU, DISTRICT 2 KAUSHAMBI, UTTAR PRADESH. - 212217

SIRAULI GAUSPUR

3218. BRIGHT 4 WHEEL SALES PVT LTD (–01), KHASRA 77, GRAM GHUSEDIYA, POST & TEHSIL SIRAULI GAUSPUR, BARABANKI UTTAR PRADESH- 225207 - 225207
PH :7011482503.

SISWA BAZAR

3219. ARBIT AUTOMOBILES PVT LTD (–01), WARD NO. 4, SAMRAT NAGAR SISWA BAZAR MAHARAJGANJ - 273162

SITAPUR

3220. CONCEPT CARS LIMITED (–02), LUCKNOW-DELHI ROAD, NH-24, VILLAGE JAMMAYAPUR, SITAPUR - 261001

SIYANA

3221. SKUNIVERSE AUTOMOBILE PVT LTD (–01), BULANDSHAHR ROAD, SIYANA DIST- BULANDSHAHR, UTTAR PRADESH PIN CODE 203412

SULTANPUR

3222. KIRTI KUNJ AUTOMOBILES PVT LTD (–01), SHAURYAMAU, MIRANPUR, VARANSI-LUCKNOW HIGHWAY, NH-56 (FAIZABAD BYPASS) SULTANPUR - 228001

SWAR

3223. AKANKSHA AUTOMOBILES PVT LTD (–01), IN FRONT OF EIDGAH, TEHSIL – SWAR, DISTRICT – RAMPUR, UTTAR PRADESH. - 244924
PH :7900600041.

TAMBOUR

3224. CONCEPT CARS LIMITED (–01), NEAR INDIAN GAS GANJAR, SITAPUR ROAD TAMBOUR - 261208
PH :7607696666.

THAKURDWARA

Dealer Workshop (AS ON 31.01.2026)

3225. AKANKSHA AUTOMOBILES PVT LTD (-01), KASHIPUR ROAD, THAKURDWARA, UTTAR PRADESH
2 KM. MORADABAD ROAD, NEAR JEETA KA DHABA, SAHAB GANJ (MUNSHI GANJ), THAKURDWARA, DISTT. MBD. UTTAR PRADESH - 244601
PH :7248000040.

TIKAITGANJ

3226. KTL AUTOMOBILE PRIVATE LIMITED (-01), KANAUJIA CITY, PHASE 2, MADARPUR, MOHAN ROAD, LUCKNOW. - 226013
PH :9918451222.

TILOI

3227. KTL AUTOMOBILE PRIVATE LIMITED (-01), VILLAGE PURE LANGDA, PAKAR GAON, MOHAN GUNJ, TEHSIL - TILOHI, DIST.-RAIBARELI. - 229309
PH :9918451222.

UNCHAHAHAR

3228. KTL AUTOMOBILE PRIVATE LIMITED (-01), ALLAHABAD LUCKNOW ROAD, NEAR PURANA PETROL PUMP, WARD NO. 5, UNCHAHAHAR, DISTT: RAIBARELI - 229404
PH :9918451222.

UNNAO

3229. S B CARS PVT LTD (2806-04), HUSSAIN NAGAR BYPASS,KANPUR-LUCKNOW HIGHWAY ROAD, UNNAO.U.P. - 209801
PH :9839806451.

UTRAULA

3230. KTL AUTOMOBILE PRIVATE LIMITED (-01), SH-9 , BESIDES SR PLOTTING OFFICE MANKAP, JOGIVEER - 271604

VARANASI

3231. VARANASI MOTORS PVT LTD (8402-84-01), THE MALL, CANTONMENT, VARANASI - 221001

3232. AGR AUTOMOBILES PVT LTD (8403-84-01), B-38/2A, MAHMOORGANJ, GOPAL VIHAR, VARANASI - 221010

3233. VARANASI MOTORS PVT LTD (8402-84-03), AARAJI NO.2 AND 48, G.T. ROAD, TODAPUR, MOHANSARAI, RAJATALAB, VARANASI (U.P.) - 221311

3234. AGR AUTOMOBILES PVT LTD (8403-84-04), ARAZI NO. 399, 398, 400, 401,NH2 PANDITPUR, DEHAT AMANAT, TEHSIL - RAJATALAB, VARANASI - 221112

VRINDAVAN YOJNA, LUCKNOW

3235. KTL AUTOMOBILE PVT. LTD (1311-13-08), PLOT NO 6&7 SARAWATIPURAM, NEAR SGPGI, RAI BARELI ROAD LUCKNOW - 226029

UTTARAKHAND

ALMORA

3236. NAINITAL MOTORS PVT LTD (-04), PAWAR BHAWAN, JOSHI KHOLA RAJPURA, PITHRAGARH ROAD, ALMORA - 263601
PH :9997194132.

BAGESHWAR

3237. NAINITAL MOTORS PVT LTD (-05), VILL. BILOMA,SERA, BAGESHWAR, UT, BAGESHWAR - 263642
PH :9557200522.

BARKOT

3238. FUTURE AUTO WHEELS PVT LTD (-01), YAMNOTRI ROAD, BARKOT, DISTRICT UTTARKASHI, UTTARAKHAND - PINCODE - 249141 - 249141

BAZPUR

3239. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), KHASRA NO. 98/2, VILLAGE - BHONA, ISLAM NAGAR, TEHSIL - BAZPUR, UTTARAKHAND. - 262401

CHAMPAWAT

3240. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), TANAKPUR LOHAGHAT ROAD, CHAMPAWAT, UTTARAKHAND - 262523

CHANDRAPURI

3241. SHAKUMBARI AUTOMOBILES PVT LTD (-01), KEDARNATH ROAD, BANASBARA, CHANDRAPURI, DISTRICT RUDRAPRAYAG, UTTARAKHAND - 246425

CHAUKHUTIYA

3242. NAINITAL MOTORS PVT LTD (-01), NH-58, BADRINATH ROAD, CHAUKHUTIYA, DIST. -ALMORA, UTTARAKHAND - 263656
PH :9997026565.

CHINYALISOUR

3243. ROHAN MOTORS LTD (-01), VILL- NAGNI DHANPUR (CHINYALISOUR), WARD NO-6,NAGAR PALIKA PARISHAD,DISTT- U - 249196

DEHRADUN

3244. ROHAN MOTORS LTD (5702-57-01), 130/1 CHAKRATA ROAD, YAMUNA COLONY, DEHRADUN - 248001

3245. DD MOTORS (A DIVISION OF D.D. MOTORS MOBILITY) (5709-57-01), 918/221, PATEL NAGAR, INDUSTRIAL AREA, DEHRADUN

3246. ROHAN MOTORS LTD (5702-57-02), 257/2, GMS ROAD,VILL. NIRANJANPUR, ADJ TO KAMLA PALACE, DEHRADUN - 248001

3247. FUTURE AUTO WHEELS PVT LTD (5706-57-01), KHASRA NO. 8KHA, MOHABEWALA INDUSTRIAL AREA, DEHRADUN, - 248001

3248. FUTURE AUTO WHEELS PVT LTD (5706-57-02), MUNICIPAL NUMBER 45 AND 46, RAJPUR ROAD, DEHRADUN, PIN: 248001 - 248001
PH :9760444430.

3249. SHAKUMBARI AUTOMOBILES PVT LTD (5708-57-01), KHASRA NO.15-ANA, MOHABEWALA, SAHARANPUR ROAD, DEHRADUN, PIN-248001, UTTARAKHAND - 248001

DIDIHAT

3250. NAINITAL MOTORS PVT LTD (-01), SUBHASH CHANDRA BOSE WARD, NEAR D.I.E.T, DIDIHAT, DISTT PITHORAGARH, PINCODE: 262551. - 262551
PH :9634092692.

DOIWALA

3251. FUTURE AUTO WHEELS PVT LTD (-01), 26, MISSARAWALA, DOIWALA, DISTRICT - DEHRADUN, UTTARAKHAND. - 248140
PH :7883473506.

GADARPUR

3252. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), BHASIYA MOD, RUDRAPUR ROAD, GADARPUR, UDHAM SINGH NAGAR, UTTARAKHAND. - 263152

GAIRSAIN

3253. ROHAN MOTORS LTD (-01), KHASRA NO. 1048, RANIKHET ROAD, OPP. GIC GROUND, GAIRSAIN, DISTRICT - CHAMOLI, UTTARA KHAND. - 246428
PH :8126484626.

GANGOLIHAT

3254. NAINITAL MOTORS PVT LTD (-01), VILL- KHETIGARA, PITHORAGARH-GANGOLIHAT ROAD, GANGOLIHAT, DISTT: PITHORAGARH - 262522
PH :9997093043.

GOPESHWAR

3255. ROHAN MOTORS LTD (5702-03), CHOPTA MANDAL ROAD, NEAR FOREST GATE, GOPESHWAR - 131028
PH :9634852898.

HALDWANI

3256. NAINITAL MOTORS PVT LTD (-01), VILLAGE JEETPUR NEGY, 5TH KM RAMPUR ROAD, HALDWANI - 263139
PH :7060201024.

3257. NAINITAL MOTORS PVT LTD (-02), KALA DUNGI, NEAR ABDULLAH PETROL PUMP, HALDWANI - 263139
PH :8126359222.

HARIDWAR

3258. SHAKUMBARI AUTOMOBILES PVT LTD (-01), E-5/6, INDUSTRIAL AREA, HARDWAR - 249407

JASPUR

3259. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), GANGUWALA, INFRONT OF ROOPAM CONVENT, KASHIPUR ROAD, JASPUR, UTTARAKHAND. - 244712
PH :8192000724.

KARANPRAYAG

3260. ROHAN MOTORS LTD (-01), BADRINATH ROAD, KARANPRAYAG, DISTRICT - CHAMOLI, UTTARAKHAND. - 246444
PH :8126129148.

KASHIPUR

3261. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), BAZPUR ROAD, KASHIPUR - 244713

KHATIMA

3262. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), VILLAGE: CHARUBETA,NEAR RTO CHECK POST,PILIBHIT ROAD KHATIMA, U.S NAGAR,UTTRAKHAND - 262308

KOTDWAR

3263. SHAKUMBARI AUTOMOBILES PVT LTD (-02), PLOT NO.23 & 30 INDUSTRIAL ESTATE, SITABPUR, KOTDWAR, DIS. PAURI (GARHWAL), UTTRAKHAND - 249001

LAKSAR

3264. SHAKUMBARI AUTOMOBILES PVT LTD (-01), HARDWAR ROAD, LAKSAR - 247664
PH :9927877715.

NANAKMATA

3265. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), KHATIMA ROAD, OPP GURURAMDAS HOSPITAL, NANAKMATA, U.S. NAGAR, UTTARAKHAND. - 262311
PH :9012172084.

NARENDAR NAGAR

3266. SHAKUMBARI AUTOMOBILES PVT LTD (-01), MAIN MARKET, NARENDAR NAGAR, DISTRICT - TEHRI GARHWAL, UTTARAKHAND - PIN CODE - 249175 - 249175

NOORPUR

3267. SHAKUMBARI AUTOMOBILES PVT LTD (-01), MORADABAD ROAD, NOORPUR, TEHSIL CHANDPUR, DISTRICT BIJNOR, UP - PIN CODE - 246734 - 246734

PATI

3268. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), LOHAGHAT- HALDWANI MAIN ROAD, NEAR PITHORAGARH CO-OPERATIVE BANK, PATI-262528 - 262528
PH :9917467820.

PAURI

3269. SHAKUMBARI AUTOMOBILES PVT LTD (-01), PAURI KOTDWAR ROAD NEAR GMO PETROL PUMP PAURI GARHWAL UTTARAKHAND - 246001

PIPLAKOTHI

3270. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
BADRINATH ROAD, MAYAPUR,
BATULA, PIPALKOTI, - 246472

PITHORAGARH

3271. NAINITAL MOTORS PVT LTD (-03), VILLAGE
PANDA, ODSAINI, DHARCHULA ROAD,
PITHORAGARH - 262501
PH :9634092692.

PRATAPNAGAR

3272. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
NEAR AISHWARYA FILLING STATION,
LAMBGAON, PRATAPNAGAR, DISTRICT TEHRI.,
UTTARAKHAND - 249165
PH :9927877715.

RAIWALA

3273. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
KHAND, GAON-1, RAIWALA., TEHSIL RISHIKESH,
- 249205

RAMNAGAR

3274. NAINITAL MOTORS PVT LTD (-01), BASAI,
KASIPUR ROAD, RAMNAGER - 244137

RANIKHET

3275. NAINITAL MOTORS PVT LTD (-01),
GANYADOLI, NEAR DRUG FACTORY,
RANIKHET DISTT. ALMORA (UTTARAKHAND) -
263645
PH :9557243222.

RISHIKESH

3276. FUTURE AUTO WHEELS PVT LTD (-01), 640,
LAXMAN JHULA ROAD, RISHIKESH. DISTT.
DEHRADUN, UTTARAKHAND - 249201

ROORKEE

3277. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
3RD KM STONE, DELHI-ROORKEE HIGHWAY,
NEAR IOC PETROL BUNK, ROORKEE DISTT
HARIDWAR - 247667
PH :7055104191.

RUDRAPRAYAG

3278. ROHAN MOTORS LTD (-01),
GULABRAI-BADRINATH ROAD, RUDRAPRAYAG
- 246171
PH :8650876815.

RUDRAPUR

3279. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT
LTD (-01), KICHA BYE PASS ROAD,
INDUSTRIAL AREA, RUDRAPUR - 263153

SELAQUI

3280. ROHAN MOTORS LTD (-01), KHASRA NO.783,
BAHADURPUR ROAD, NH-72, SELAKUI, DISTT.
-DEHRADUN, UTTARAKHAND. - 248011
PH :8006000439.

SITARGANJ

3281. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT
LTD (-01), PLOT NO 228/5 AND 228/6 KHATIMA
ROAD, SITARGANJ, DISTT - RUDRAPUR,
UTTARAKHAND. - 262405

SRINAGAR

3282. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
SRICOT GANAGANALI, NEAR MEDICAL
COLLEGE, PO- SRICOT, SRINAGAR - 246174

TEHRI

3283. DD MOTORS (A DIVISION OF D.D. MOTORS
MOBILITY) (-01), PLOT NO. 541, SECTOR-8E,
DISTT. - NEW TEHRI - 249001

UTTARKASHI

3284. DD MOTORS (A DIVISION OF D.D. MOTORS
MOBILITY) (-01), HOTEL RAMOLA, BARETHI
CHUNGI, GANGOTRI NATIONAL HIGHWAY,
UTTARKASHI. - 249151

VIKAS NAGAR

3285. ROHAN MOTORS LTD (-01), KHASRA NO.
433/79/2, JEEVANGARH, POST OFFICE-
AMBARI, CHAKRATA-BARKOT ROAD, VIKAS
NAGAR. - 248198
PH :9897507410.

WEST BENGAL

ALIPURDUAR

3286. PODDAR CAR WORLD PVT LTD (-01), BIRPARA
MORE, COOCH BEHAR ROAD, BESIDE
GOYENKA PETROL PUMP, ALIPURDUAR, WEST
BENGAL. - 736121

AMTALA

3287. BHANDARI AUTOMOBILE PVT LTD (-01),
VILLAGE - UDAYRAMPUR, P.O. - KANYANAGAR,
P.S. - BISHNUPUR, AMTALA, DIST.-24
PARGANAS SOUTH, WEST BENGAL - 743398
PH :9903850402.

ARAMBAGH

3288. SANEI MOTORS PVT LTD (-01), R.S. DAG NO.
1887, R.S. KHATIAN NO. 104, HAL KHATIAN NO.
1233, MOUZA-PARUL, J.L.NO. 38, R.S.NO. 3111,
P.S. ARAMBAGH, DISTT. HOOGHLY, WEST
BENGAL - 712601
PH :8584050184.

ASANSOL

3289. BEEKAY AUTO PVT LTD (-01), CHANDA MORE,
N.H.-2, ASANSOL - 713301

ASHOKNAGAR

3290. STARBURST MOTORS PVT LTD (-03), JESSORE
ROAD, MANIKNAGAR, KHOSDELPUR MORE,
P.S. - ASHOKNAGAR, NORTH 24 PARGANAS,
WEST BENGAL. - 743222

BADURIA

3291. PREMIER CAR WORLD PVT LTD (-01), VILL-
KIRRIPIPUR, P.O. MANDRA, P.S - BADURIA, DIST
- NORTH 24 PARGANAS, WEST BENGAL. PIN -
743438. - 743438
PH :9831414956.

BAGDAH

3292. SANEI MOTORS PVT LTD (-01), C/O,
DINABANDHU TARAFDAR, S/O LATE
NANDRANATH TARAFDAR, VILLAGE -
HALENCHA SOUTH, P.O. - HALENCHA COLONY,
P.S. - BAGDAH, DISTRICT - NORTH 24
PARGANAS, WEST BENGAL. - 743270

BAHRAMPUR

3293. BEEKAY AUTO PVT LTD (-01), BOKULTALA
(PASCHIM GAMINI), NH-34, BAHARAMPUR,
DISTT. MURSHIDABAD. - 742101
PH :267340.

BAJKUL

3294. BHANDARI AUTOMOBILE PVT LTD (-01),
VILLAGE - KAPTAPPA BARI, P.O. - KAJLAGARH,
P.S. - BHAGWANPUR, BAJKUL, DISTRICT -
PURBA MIDNAPORE. - 721626

BAKSHIRHAT

3295. PODDAR CAR WORLD PVT LTD (-01),
JORAIMORE, BAKSHIRHAT, BALA
KUTHI, BAKSHIRHAT - 736131

BALAGARH

3296. SANEI MOTORS PVT LTD (-01), DAG NO. 671,
MOUZA - BARUIPARA, J.L NO. 100, P.O. -
BALAGARH, DIST.-HOOGLY, WEST BENGAL -
712501
PH :8584050184.

BALURGHAT

3297. J K WHEELS PVT LTD (-01), BARO
RAGHUNATHPUR, P.O. - BELTALA PARK, P.S. -
BALURGHAT, DIST.-DAKSHIN DINAJPUR. -
731303
PH :9064301464.

BANDARGACHH

3298. PODDAR CAR WORLD PVT LTD (-01),
OPPOSITE COMMUNITY HEALTH CENTRE,
PHANSIDAWA, BANDAR GACHH, WEST
BENGAL 734014 - 734014

BANDEL

3299. SANEI MOTORS PVT LTD (-03), C/O G.S.
LAMINATOR, BANDEL STATION ROAD, HOOGLY
712123 - 712123

BANKURA

3300. BHANDARI AUTOMOBILE PVT LTD (-02), PLOT
NO -156, KH NO -173, MITHILA MOUZA,
AT/PO-BANKURA (WB) - 722101
PH :256766.

BARASAT

3301. PREMIER CAR WORLD PVT LTD (-01), R.S DAG
NO. 512 AND PARTY IN DAG NO. 513,
MOUZA-KHILKAPUR, P.O BARASAT, POLICE
STATION: DUTTA PUKUR, TOUZI NO. 146, J.L
NO. 4, DISTRICT - NORTH 24 PARGANAS,
WEST BENGAL - 700125
PH :8420122407.

BARDDHAMAN

3302. BEEKAY AUTO PVT LTD (-03), NH-2, PAMRA
VILLAGE ROAD, CHANDINI MORE, SATTAR MILE,
BURDWAN, WEST BENGAL - 713101

BARJORA

3303. BHANDARI AUTOMOBILE PVT LTD (-01),
VILLAGE + P.O. + P.S. - BARJORA, MOUZA -
BARJORA, J.L NO. 46, KHATIAN NO. 3380, PLOT
NO. 2795, BARJORA DISTRICT - BANKURA,
WEST BENGAL. - 722202
PH :8016087297.

BAROBISHA

3304. PODDAR CAR WORLD PVT LTD (-01), NH-17,
BALAKUTHI, BAKSHIRHAT, COOCHBEHAR,
WEST BENGAL (NH 31C, ALIPURDUAR ROAD,
BAROBISHA, - 736131

BARRACKPORE

3305. STARBURST MOTORS PVT LTD (-02), NEAR
RAIL GATE, WARD NO. 24, WEST BARASAT
ROAD, P.S. - TITAGARH, BARRACKPORE,
DISTRICT - NORTH 24 PARGANAS, KOLKATA. -
700120
PH :8335061333.

BARSUNDARA

3306. BHANDARI AUTOMOBILE PVT LTD (-05), PLOT
NO. 610, BARSUNDARA, ISHWARDAHA, JALPAI,
P.S. BHAWANIPUR, EAST MIDNAPORE, WEST
BENGAL - 721654
PH :9933055539.

BASIRHAT

3307. BHANDARI AUTOMOBILE PVT LTD (-03),
RAGHUNATHPUR, TALKI ROAD, BASIRHAT NR.
INDIAN PETROL PUMP, NORTH-24 PARGANAS. -
743428

BELACOBA

3308. PODDAR CAR WORLD PVT LTD (-01),
PRASANNA NAGAR, BELACOBA, BATTALA,
JALPAIGURI - 735133 - 735133
PH :8945533002.

BELDA

3309. BHANDARI AUTOMOBILE PVT LTD (-01), AT
VILLAGE BARAMATKATPUR, P.O
-LALNAGAR, BELDAH - 721424

BIDHANNAGAR

3310. SEVOKE MOTORS PVT LTD (-01),
MURALIGANG BIDHAN NAGER, OPP OF
MURALIGANG HIGH SCHOOL - 734426

Dealer Workshop (AS ON 31.01.2026)

BIRPARA

3311. SEVOKE MOTORS PVT LTD (-01), BHAGAT PARA, NH - 31, MADARIHAT ROAD, BIRPARA, BESIDE TASHI HOTEL, OPP - HIMALAYAN HOTEL, P.S - MADARIHAT, DIST - ALIPURDUAR, PIN - 735204 - 735204
PH :9800069144.

BISHNUPUR

3312. BHANDARI AUTOMOBILE PVT LTD (-01), STATION ROAD, P.O+P.S- BISHNUPUR, DIST: BANKURA, WEST BENGAL - 722122
PH :9748305539.

BOLPUR

3313. SAINATH AUTOLINKS PVT LTD (4402-03), KABI JOYDEB ROAD, NEAR BOLPUR BY PASS, BOLPUR, DIST: BIRBHUM

BONGAON

3314. STARBURST MOTORS PVT LTD (-01), 376/D, R D B ROAD, NEAR JESSORE ROAD, BAKSHIPALLY, BONGAON, NORTH 24 PARGANAS, WEST BENGAL - 743235
PH :9748298939.

BUDGE BUDGE

3315. ONE AUTO PVT LTD (-01), MAHESH TALA, NEAR DAKGHAR KALIMANDIR, BUDGE BUDGE TRUNK ROAD, DAKGHAR, WARD NO. 22, POLICE STATION-MAHESHTALA, WEST BENGAL - 700141

C K ROAD

3316. BHANDARI AUTOMOBILE PVT LTD (-01), P.O:SAT BANKURA, PS:GARBETA, CHANDRAKONA ROAD, DIST. PASCHIM MIDNAPORE, WEST BENGAL - 721252

CANNING

3317. ONE AUTO PVT LTD (-01), SUSUMAPALLY, CANNING, DIST - SOUTH 24 PARGANAS, WB - 743329
PH :8442830001.

CHAKDAH

3318. BHANDARI AUTOMOBILE PVT LTD (-01), VILLAGE - PUMLIA, P.O - CHAKDAH, DISTRICT - NADIA, WEST BENGAL. - 741222

CHANCHAL

3319. J K WHEELS PVT LTD (-01), CHANCHAL AZAD PALLY, OPPOSITE OF PWD 2ND GATE, P.O - CHANDRAPARA, P.S - CHANCHAL, DIST - MALDA - 732123 - 732123
PH :9734963360.

CHANDITALA

3320. BHANDARI AUTOMOBILE PVT LTD (-01), RS DAG NO 2986, LR DAG NO. 3150, UNDER L R KHATIAN NO 3859, MOUZA- KRISHNAMPUR, J.L. 59, POLICE STATION- CHANDITALA, HOOGHLY, WEST BENGAL - 712702
PH :6296900498.

CHANDRAKONA

3321. BHANDARI AUTOMOBILE PVT LTD (-02), AT. VILL. GOSAI PO+PS CHANDRAKONA TOWN, MOUZA DHARABILA, J.L.NO. 095, KHATIAN NO. 315, PLOT NO. 203 & 189, NEAR MUNIPAL GATE TOWARDS C.K. ROAD. - 721201
PH :8945526833.

CHHATNA

3322. BHANDARI AUTOMOBILES PVT LTD (-01), VILLAGE: DUBRAJPUR, P.O. GORH, DUBRAJPUR, P.S. CHHATNA DIST: BANKURA - 722132

CONTAI

3323. BHANDARI AUTOMOBILE PVT LTD (-03), SERPUR BAMUNBAR, P.O- MARISHDA, NEAR MECHEDA BYPASS, CONTAI, WEST BENGAL - 721401

COOCHBEHAR

3324. PODDAR CAR WORLD PVT LTD (-01), CHAKCHAKA, NEELKUTHI BAZAR, NEAR ADA FACTORY, NH-31, COOCH BEHAR, WEST BENGAL - 736101

DARJEELING

3325. BEEKAY AUTO PVT LTD (4301-05), MERRY VILLA, DARJEELING, DISTRICT-DARJEELING. - 734101

DHUPGURI

3326. BEEKAY AUTO PVT LTD (-01), MOUZA - DHUPGURI, PLOT NO. 1814, WARD NO. 16, DHUPGURI, DISTRICT - JALPAIGURI, WEST BENGAL - 735210

DIAMOND HARBOUR

3327. ONE AUTO PVT LTD (-01), VILLAGE - CHEWRA, OPPOSITE - K.E. CARMEL SCHOOL, P.O. - SARISHA HAT, P.S. - DIAMOND HARBOUR, DISTRICT - 24 PARGANAS (S), WEST BENGAL. - 743368
PH :8594862243.

DINHATA

3328. BEEKAY AUTO PVT LTD (-01), ADDRESS: VILLAGE - KARISHAL, MAIN ROAD, P.O- DINHATA, DIST- COOCHBEHAR, - 736135
PH :9932049347.

DUDHIA

3329. PODDAR CAR WORLD PVT LTD (-01), MIRIK ROAD, DUDHIA, WEST BENGAL - 722133

DURGAPUR

3330. SAINATH AUTOLINKS PVT LTD (4402-44-01), PLOT NO-743, MAUZA FRIDPUR, BURDWAN, DURGAPUR - 713213

DURLAVPUR

3331. PODDAR CAR WORLD PVT LTD (-01), VILL+PO - DURLAVPUR, PS- GANGAJALGHATI, DIST- BANKURA, PIN- 722133 - 722133

FALAKATA

3332. PODDAR CAR WORLD PVT LTD (-01), DAKSHIN PARANGAPAR, KHATIAN NO. 167/1 JL NO. 60, DAG NO. 652/1159, P.S. - FALAKATA, DISTT ALIPURDWAR - 735211
PH :8945533002.

GAZOLE

3333. J K WHEELS PVT LTD (-01), MOUZA-BAJEGAIRAL, RANIGANJ, PURBAPARA, KAMALDANGA, P.S -GAZOLE, DIST-MALDA, PIN - 732138 - 732138
PH :9734963360.

GHATAKPUKUR

3334. DEWARIS GARAGE LTD (-01), BASANTI HIGHWAY,MOUZA NARAYANPUR, POLICE STATION,BHANGAR, WEST BENGAL - 743502

GHATAL

3335. BHANDARI AUTOMOBILE PVT LTD (-01), VILL. NIMTOLA, P.O. & P.S. DASPUR, GHATAL, WEST MIDNAPORE, WEST BENGAL - 721211

GOPIBALLVPUR

3336. BHANDARI AUTOMOBILE PVT LTD (-01), JL NO. 1103, KHATIAN NO: 1103, PLOT NO. 438, VILLAGE + P.O. + P.S. - GOPIBALLVPUR, MOUZA - GOPIBALLVPUR, WEST MIDNAPUR, WEST BENGAL. - 721506

HALDIA

3337. BHANDARI AUTOMOBILE PVT LTD (-04), BALGHASIPUR, BHABANIPUR, PURBA MEDIANPUR, HALDIA - 721657

HOWRAH

3338. BHANDARI AUTOMOBILE PVT LTD (-01), BANKRA THANA,DOMJUR,HOWRAH. - 711403
3339. PREMIER CAR WORLD PVT LTD (-02), MOUZA - PRASASTHA, P.S. - DOMJUR, UNDER MOHIARY 2 NO. GRAM PANCHAYAT, ANKURHATI, HOWRAH, WEST BENGAL. - 711302

ILLAMBAZAR

3340. BEEKAY AUTO PVT LTD (-01), PLOT NO-615.616.618, JL NO-87,MOUZA-PAYER - 731214

JAGULI

3341. OSL MOTOCORP PVT LTD (-01), DAG NO-947, KHATIANNO: 54/1, P.S. HARINGHANTA - 741221

JALPAIGURI

3342. PODDAR CAR WORLD PVT LTD (-01), COLLEGE PARA, SIRISHITALA, NEAR ASSAM MORE, JALPAIGURI, WEST BENGAL. - 735101
PH :9435833002.

JAYGAON

3343. SEVOKE MOTORS PVT LTD (-01), HOUSE NO.43, WARD NO.11/22, N.S ROAD DARAGAON, P.S - JAYGAON, DISTT. ALIPURDUAR, WEST BENGAL - 736182
PH :9433825851.

JHARGRAM

3344. BHANDARI AUTOMOBILE PVT LTD (-01), DAG NO.383, KHATAN NO. JL396, WARD NO.11, RAJBATI CAMPUS, JHARGRAM, WEST BENGAL - 721507

KADAMBAGACHI

3345. STARBURST MOTORS PVT LTD (-04), MOUZA - PURBA ICHAPUR, J L NO. 111, RESU NO. 131, DAG NO. 385, KHATIAN NO. L R 754, KADAMBAGACHI, P.S. - BARASAT, DIST-NORTH 24 PARGANAS, WEST BENGAL - 700125
PH :8336933410.

KALIMPONG

3346. BEEKAY AUTO PVT LTD (-01), 10TH MILE, GUMBA HATTA, PO&PS KALIMPONG, DIST - KALIMPONG, WB. - 734301
PH :9932049347.

KALNA

3347. BEEKAY AUTO PVT LTD (-01), KALNA ROAD, NEAR KALNA SUB DIVISIONAL HOSPITAL, KALNA, PO+PS: KALNA, DISTT. BURDWAN, (W.B.) - 713409
PH :9932251483.

KALYANI

3348. STARBURST MOTORS PVT LTD (-01), KALYANI INDUSTRIAL GROWTH CENTRE, PHASE-III, A-5 (OPP. U I C UDYOG, NEAR: J I S COLLEGE), KALYANI. - 741234

KHARAGPUR

3349. BHANDARI AUTOMOBILE PVT LTD (-01), BHANDARI BUILDING, JHAPATAPUR, KHARAGPUR, WEST BENGAL - 721301
3350. PODDAR CAR WORLD PVT LTD (-01), RS DAG NO - 147, RS KHATIAN NO 7, MOUZA - MOBARAKCHAK, JL NO-210, PS - KHARAGPUR - 721301
PH :9631348626.

KHATRA

3351. BHANDARI AUTOMOBILE PVT LTD (-01), VILLAGE - SENAPATI, P.O & P.S - KHATRA, MOUZA-SENAPATI, JL NO.189, KHATIAN NO.659, PLOT NO.33/34, DISTT. BANKURA, WEST BENGAL - 722140

KHORIBARI

3352. PODDAR CAR WORLD PVT LTD (-01),
DOHAGURI, KHORIBARI, WEST BENGAL 734427
- 735222

KOLKATA

3353. MACHINO TECHNO SALES LTD (-02), 48 A,
TARATALA ROAD, KOLKATA - 700066

3354. DEWARS GARAGE LTD (-01), (PROP. DELTA
INTERNATIONAL LTD.), 14 BRITISH INDIAN
STREET, CALCUTTA - 700069

3355. MACHINO TECHNO SALES LTD (-01), 21/1
DARGA ROAD, (PARK CIRCUS), CALCUTTA -
700017

3356. PREMIER CAR WORLD PVT LTD (-01),
AGARPARA JUTE MILL, 28-B T.ROAD, P.O.:
-KAMARHATI, DISTT.-KOLKATA - 700058

3357. BHANDARI AUTOMOBILE PVT LTD (-01),
BUDGE BUDGE TRUNK ROAD, NEW
GOPALPUR, SARKARPOOL, MAHESHTALA,
DISTT. SOUTH 24 PARGANAS, WEST BENGAL -
700143

3358. SANEI MOTORS PVT LTD (-01), 16/2 CANAL
EAST ROAD, NEAR MANIKTALA POLICE
STATION, KOLKATA - 700067

3359. ONE AUTO PVT LTD (-02), 62 EAST TOPSIA
ROAD, P.S. TIJAJALA, ARUPOTA, KOLKATA,
WEST BENGAL - 700105

3360. ONE AUTO PVT LTD (-01), JL NO.3,
MOUZA-JAGADIPOTA, P.S.SONARPUR,
KHEYADAH NO.2, GRAM PANCHAYAT, DISTT.
SOUTH 24 PARGANAS - 700099

3361. SANEI MOTORS PVT LTD (-02), 235, HATIYARA
ROAD, SITALATALA, BAGUIATI, KOLKATA,
WEST BENGAL - 700059

3362. OSL MOTOCORP PVT LTD (-01), 49 DEBENDRA
CHANDRA DEY ROAD, LANE BESIDE SILVER
SPRING CLUB, E.M. BYE-PASS, KOLKATA -
700015

3363. STARBURST MOTORS PVT LTD (-05), R.S & L.R.
DAG NO. 3434, MOUZA-GOPALPUR, JL NO. -02,
RS NO. -140, LR KHATIAN NO. -5638, NEW
TOWN, RAJARHAT - 700136
PH :9681080301

3364. BHANDARI AUTOMOBILE PVT LTD (-C1), PLOT
NO. IDI15, ACTION AREA 2D, NEW TOWN, P.S.
RAJARHAT, KOLKATA, WEST BENGAL
PIN-700156 - 700156

3365. JYOTE MOTORS PVT LTD (-01), NAZIRABAD
MAIN ROAD, NAZIRABAD, ANANDAPUR, NEAR
BISHNU BIJOLI GARDEN, KOLKATA, PIN-700150,
WEST BENGAL - 700150

KOTLUAPUR

3366. BHANDARI AUTOMOBILE PVT LTD (-01),
KHATIAN NO.644, PLOT NO.373, JL NO. 101,
VILLAGE - MULDARA, P.S. + P.S. - KOTLUAPUR,
DISTT.-BANKURA, WEST BENGAL - 722141

KRISHNANAGAR

3367. BHANDARI AUTOMOBILE PVT LTD (-02), PLOT
NO.-1874, MOUZA-GOBINDSARAK, J.K. NO. 94,
PS-KOTWAL, OLD WARD NO. 20, LAI MOHAN
GHOSH ROAD, KRISHNANAGAR - 742011

LALGARH

3368. BHANDARI AUTOMOBILE PVT LTD (-01), PO &
PS- LALGARH, DISTRICT- JHARGRAM. - 721516

MADHYAMGRAM

3369. STARBURST MOTORS PVT LTD (-01), 9/1,
HEMANTA BOSE SARANI, BASUNAGAR, NEAR
DEAF & DUMB SCHOOL, UDAYRAJPUR,
MADHYAMGRAM - 700129

MALBAZAR

3370. BEEKAY AUTO PVT LTD (-01), CALTEX MORE,
VILLAGE + P.S. - MALBAZAR AND DISTRICT -
JALPAIGURI - 735221

MALDA

3371. J K WHEELS PVT LTD (-01), GABGACHHI, N.H.
34, MALDA, - 732103

MANGPOO

3372. PODDAR CAR WORLD PVT LTD (-01),
OPPOSITE QUININER FACTORY, MUNGPUR,
CINCHONA PLANTATION, WEST BENGAL -
734313

MATHABHANGA

3373. BEEKAY AUTO PVT LTD (-01), SITAKULCHI
ROAD, WARD NO.9, MATHABHANGA, DISTRICT
- COOCHBEHAR. - 736146

MIDNAPORE

3374. BHANDARI AUTOMOBILE PVT LTD (-01), JL
NO.190, KHATIAN NO. 889 VILL + P.O. TALUKI,
N.H.60, - 721101

MOHANPUR

3375. BHANDARI AUTOMOBILE PVT LTD (-01),
VILLAGE-NAYAGAON, P.O.-PAROI, P.S.
-MOHANPUR, MOUZA - NAYAGAON, JL NO.395,
KHATIAN NO.175/1, PLOT NO.895, DISTT.
-PASCHIM MIDNAPUR, W.BENGAL. - 721436
PH :9933055539.

NAGRAKATA

3376. PODDAR CAR WORLD PVT LTD (-01),
OPPOSITE HERO SHOWROOM, NEAR B.D.O
OFFICE, SUKHANIBASTI,
NAGRAKATA, WEST BENGAL - 735225

NAIHATI

3377. PREMIER CAR WORLD PVT LTD (-01), P.O.
BHATPARA, GRAM-MUKTARPUR, P.S. -
JAGATDAL, DIST-24 PGS (N), NAIHATI (WB) -
743123
PH :801700824.

NAKASHIPARA

3378. BHANDARI AUTOMOBILE PVT LTD (-01), L R
DAG NO. 7271, UNDER L R KHATIAN NO. 6734,
MOUZA - DEBAGRAN, J L NO. 60, POLICE
STATION - KALIGANJ, BLOCK - KALIGANJ,
NAKASHIPARA, DIST.-NADIA, WEST BENGAL. -
741138
PH :9163314418.

NAXALBARI

3379. BEEKAY AUTO PVT LTD (-01), MOUZA - GENI,
KHATIAN NO.275, PARGANA-HATIGHISHA, P.S.
NAXALBARI, DISTT. DARJEELING, WEST
BENGAL - 734429

OODLABARI

3380. PODDAR CAR WORLD PVT LTD (-01), PLOT NO
: 1144, TOUZI NO -84, OODLABARI, 735222 -
735222

PANCHLA

3381. BHANDARI AUTOMOBILE PVT LTD (-01), L R
DAG NO 3274, UNDER L R KHATIAN NO 3044,
MOUZA-MALLICKBAGAN, JL NO-7, POLICE
STATION - PANCHLA, DIST- HOWRAH - 711310
PH :9073664926.

PANDUA

3382. BHANDARI AUTOMOBILE PVT LTD (-01), GT
ROAD, PANDUA, NEAR KAKOLI CINEMA HALL,
OPP. POWER HOUSE, HOOGLY, WEST
BENGAL. - 712149
PH :9073912566.

PANSKURA

3383. BHANDARI AUTOMOBILE PVT LTD (-01),
MOUZA - PASCHIM NEKRA, JL NO.98, LR
NO.1154, LR NO.1156, PANSKURA, WEST
BENGAL. - 721139
PH :9933055539.

PATASHPUR

3384. PODDAR CAR WORLD PVT LTD (-01), VILL -
MOTIRAMPUR, PO MOTIRAMPUR, PS -
PATASHPUR, DIST PURBA MIDNAPORE -
721439

PEDONG

3385. SEVOKE MOTORS PVT LTD (-01), TOPKHANA,
DOKYONG 1, PEDONG, DIST: KALIMPONG,
PIN:734311 - 734311

PURULIA

3386. SAINATH AUTOLINKS PVT LTD (4402-02), PO.
LAKDA, VILLAGE-DADKA, ON RANCHI ROAD,
PURULIA - 723149

RAGHUNATHPUR

3387. BEEKAY AUTO PVT LTD (-01), MOUZA -
BUNDLA, JL. NO. 197, PLOT NO. 2656, KHATIAN
NO. LR 207, P.O. - RAGHUNATHPUR, P.S. -
RAGHUNATHPUR, DISTRICT - PURULIA. -
723133

RAIGANJ

3388. J K WHEELS PVT LTD (-01), JL NO. 150,
KHATIAN NO. 168/3 & 168/4, PLOT NO. 4158,
P.S. - RAIGANJ, MUNICIPALITY - RAIGANJ,
WARD NO. 11, HOLDING NO. 577/N, MOUZA -
RAIGANJ, DISTRICT - UTTAR DINAJPUR, -
733134
PH :9730508842.

RAMPURHAT

3389. BEEKAY AUTO PVT LTD (-01), PLOT NO 131, JL
NO 104, MOUZA -BATAIL, RAMPURAHAT - 731221

RANAGHAT

3390. STARBURST MOTORS PVT LTD (-01), THANA:
GANGNAPUR, ADSR OFFICE, 151 NO.MOUZA
PATULI, PLOT NO.309, RANAGHAT, DISTT:
NADIA - 741256

RUPNARAYANPUR

3391. BEEKAY AUTO PVT LTD (-01), P.S. -
SALANOUR, UNDER MOUZA - JEMARI, J.L. NO.
32, PLOT NO. 343-344, KHATIAN NO. 933,
RUPNARAYANPUR, PASCHIM BARDHAMAN
DISTRICT, WEST BENGAL. - 713335

SABANG

3392. BHANDARI AUTOMOBILE PVT LTD (-01),
VILLAGE - PAKAN DAKSHINBARH, P.O. -
DHANSWARPUR & P.S. - PINGLA, DIST.
-PASCHIM MIDNAPORE, SABANG - 721 166,
WEST BENGAL. - 721166
PH :9933055539.

SAINTHIYA

3393. SAINATH AUTOLINKS PVT LTD (-01), SAINTHIA
SURI ROAD, OPPOSITE YAMAHA SHOWROOM,
- 731234

SEORI

3394. BEEKAY AUTO PVT LTD (-01), RAMBADANPUR,
NEAR SP MORE, SIURI, BIRBHUM - WEST
BENGAL - 731101

SHYAMPUR

3395. SANEI MOTORS PVT LTD (-01), VILLAGE + P.O.
- GOBINDAPUR, P.S. - SHYAMPUR, DISTRICT -
HOWRAH, WEST BENGAL. - 711314
PH :8584050184.

SILIGURI

3396. BEEKAY AUTO PVT LTD (4301-43-01), NH-31,
P.O. MATIGARA, SILIGURI. - 734428

3397. BEEKAY AUTO PVT LTD (4301-43-04), AMAI
DIGHI, PHOOL BARI, STATE HIGHWAY -12,
SILIGURI - 734001

3398. SEVOKE MOTORS PVT LTD (4302-43-01), 233,
SEVOKE ROAD, 2ND MILE, SILIGURI - 734001
PH :9706010366.

3399. PODDAR CAR WORLD PVT LTD (-02), VILL.
EAST DHANTALLA, FULBARI II G.P, P.O
SATELLITE TOWNSHIP, DIST- JALPAIGURI -
734015
PH :8945533002.

Dealer Workshop (AS ON 31.01.2026)

3400. PODDAR CAR WORLD PVT LTD (-03),
OPPOSITE TO GANAPATI PETROL PUMP,
KHAPRAIL MORE, SILIGURI - 734005

SINGUR

3401. ONE AUTO PVT LTD (-03), OPPOSITE TO TAPSI
MAILIK KRISHAK BAZZAR - 712409

SITAI

3402. PODDAR CAR WORLD PVT LTD (-01), NETAJI
MORE, NEAR NETAJI BAJAR, P.S SITAI,
DISTRICT : COOCH BEHAR, PIN 736167 -
736167

SONADA

3403. SEVOKE MOTORS PVT LTD (-01), RATO MATEY
DARA, NEAR PETROL PUMP,P.O.- SONADA,
WEST BENGAL PIN - 734209 - 734209
PH -9800069144.

SONAMUKHI

3404. BHANDARI AUTOMOBILE PVT LTD (-01), J L NO.
77, KHATIAN NO. 360, PLOT NO. 114/287,
SONAMUKHI BISHNUPUR ROAD, VILLAGE -
CHURAMANIPUR, P.O. & P.S. - SONAMUKHI,
WEST BENGAL. - 722207
PH -9933055539.

SREERAMPUR

3405. BHANDARI AUTOMOBILE PVT LTD (-01),
BANGIHATI (MADPUR) DELHI ROAD,
SREERAMPUR, DISTT: HOOGHLY, WB - 712203

SUNDARA

3406. PODDAR CAR WORLD PVT LTD (-01), NH 14,
SITARAMPUR, OPP. INDIAN OIL PETROL PUMP,
SUNDARA , PASCHIM MEDINIPUR - 488333

TAMLUK

3407. BHANDARI AUTOMOBILE PVT LTD (-01),
MOUZA PADUMBASAN, WARD NO 10, JL
NO:144, DiSTT: EAST MIDNAPUR, WEST
BENGAL - 721636

TARAKESHWAR

3408. SANEI MOTORS PVT LTD (-01), MOUZA
BAIDYAPUR, UNDER BALIGORI(1), GRAM
PANCHAYET, TARAKESHWAR, DISTT. HOOGLY,
WEST BENGAL.
PH :8584050184.

TOOFANGANJ

3409. PODDAR CAR WORLD PVT LTD (-01), POWER
HOUSE PARA, PO ANDARANFULBARI (WEST),
TUFANGANJ, COOCHBEHAR, PIN-736159, WEST
BENGAL - 736159
PH -8945533002.

UDAYNARAYANPUR

3410. BHANDARI AUTOMOBILE PVT LTD (-01),
VILLAGE-JANGALPARA BELGRAM, PS-
UDAYNARAYANPUR, DIST- HOWRAH, WEST
BENGAL. - 711226
PH -9073664902.

ULUBERIA

3411. BHANDARI AUTOMOBILE PVT LTD (2401-01),
HOLDING 1242A, BANITABLA, P.O+P.S:
ULUBERIA, NH-6, DISTT: HOWRAH, WEST
BENGAL - 711316

ANDHRA PRADESH**MACHILIPATNAM**

1. SRI MARUTI MECHANICAL WORKS (4172--), D.NO 4-121, PLOT NO 26.27, ., POTEPALE INDUSTRIAL PARK, MACHILIPATNAM- 521002, - 521002
PH :94405538012.

NANDYAL

2. MARUTI MOTORS (2635--), PLOT NO 428, NH-18 , NEAR RAILWAY GATE , NANDYAL- 518501, - 518501
PH :9440554617.

PATTIKONDA

3. ROYAL MOTORS (5776--), ADONI ARTS & SCIENCE, COLLEGE ROAD ADONI,PATTIKONDA-518302, DISTRICT-KURNOOL, ANDHRA PRADESH - 518302
PH :9866362847.

SRIKALAHASTI

4. SUNDEEP CARS (5972--), 16/550, PANAGAL ROAD, OPP. NTR PARK, SRIKALAHASTI - 517644, TIRUPATI DISTRICT, ANDHRA PRADESH - 517644
PH :9848294869.

ASSAM**BISHAWANATH CHARIALI**

5. BINA AUTOMATION (3677--), ., P.O. BISHAWANATH CHARIALI, DISTT. SONITPUR, ASSAM-784 176 - 784176
PH :9957309744.

BOKAJAN

6. SHREE GANESH MOTORS (6040--), SUKHANJAN GF. ROAD,P.O.BOKAJAN(C.F.), DISTRICT KARBI ANGLONG, ASSAM - 782480
PH :9435167138.

DHALIGAON

7. ADHIKARY MOTOR WORKS (4049--), KUKURMARI, DHALIGAON, DIST. - CHIRANG, ASSAM - 783385 - 783385
PH :9435020938.

DHUBRI

8. BRAHMAPUTRA MOTOR SERVICING STATION (3127--), G.T.B ROAD, DHUBRI-783 301, (ASSAM), - 783324
PH :9101176148.

DIGBOI

9. GAURI AUTOMOBILES (3760--), MULIABARI, DIGBOI 786 171, . - 786171
PH :9435137556.

GOALPARA

10. BHARAT ENGINEERING WORKS (969--), PO - BALDMARI, AGIA ROAD, GOALPARA (ASSAM) -783 102 - 783102
PH :9864767777.

GOSSAIGAON

11. A.R. AUTOMOBILES (4544--), NH-31C, HABRUBIL, GOSSAIGAON, DIST KOKRAJHAR, ASSAM-783360 - 783360
PH :9435109765.

LUMDING

12. BEDI MOTORS (5827--), MAIN ROAD,NORTH LUMDING,LUMDING-782447, DISTRICT - NAGAON, (ASSAM), - 782447
PH :9957333991.

PATHSALA

13. USHA AUTOMOBILES (4240--), N.H 31,PATHSALA-781325, DISTRICT-BARPETA, ASSAM, - 781325
PH :9401310431.

BIHAR**BEGUSARAI**

14. K.B. MOTORS (4768--), NH-31, SINGHAUL, POKHAR, BEGUSARAI-851134, BIHAR - 851134

BHAGALPUR

15. RUPRA AUTOMOBILE (1577--), EAST OF AIRPORT, BHAGALPUR-813 210, P.O. BAHADURPUR, (BIHAR) - 813210
PH :9334385521.

DARBHANGA

16. SINGH MARUTI CARE (2277--), RAJKUMARGANJ, P.O. LALBAGH, DARBHANGA-846 004, (BIHAR), - 846004
PH :9431293796.

HAJIPUR

17. ALFA AUTO (5454--), PASWAN CHOWK, NH-13, HAJIPUR, DISTRICT - VAISHALI, BIHAR - 844 011, - 844101

MADHEPURA

18. KRISHNA AUTOMOBILES (2639--), SINGHSWAR ROAD, PATHRAHA, MADHEPURA-852 213, (BIHAR) - 852213
PH :9430583338.

MADHUBANI

19. VIDYAPATI AUTOMOBILE (4234--), BHAUJARA, GANGASAGAR, MADHUBANI, BIHAR - 847212 - 847212

MUZAFFARPUR

20. DYNAMIC MARUTI SERVICE CENTRE (1163--), HARI SHARAN MARG, AMGOLA, POST OFF RAMNA, MUZAFFARPUR-842 002, - 842002

PATNA

21. TIRUPATI AUTO (1956--), ASHIANA MORE, BAILEY ROAD OPPOSITE UNION BANK, RAJABAZAR, PATNA-14 - 800014

SASARAM

22. TRIPTY CAR SERVICE CENTRE (5535--), NEAR RELIANCE PETROL PUMP, G.T. ROAD,NH-2,SASARAM-821115, DISTRICT-SASARAM, BIHAR - 821115
PH :9934792421.

SITAMARHI

23. SITAMARHI AUTO CARE (6050--), INDUSTRIAL AREA,RAJOPATTI, PO.SITAMARHI-843302, DISTRICT-SITAMARHI , BIHAR - 843302
PH :9430012437.

CHANDIGARH**CHANDIGARH**

24. CAR CLINIC (179--), PLOT NO-81, INDUSTRIAL AREA, PHASE-2, CHANDIGARH, - 160002
PH :9417216782.
25. HI-TEK MOTORZ (4743--), PLOT NO. 695, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002
PH :9872567868.

CHHATTISGARH**AMBIKAPUR**

26. MARUTI AUTO CARE (4839--), KHARSIA NAKA, AMBIKAPUR -497001, DISTRICT-SURGUJA, CHATTISGARH - 497001
PH :9425256087.

KORBA

27. AUTO SELF SERVICE (8940--), RAILWAY STATION CANAL ROAD, NEAR SUNALIYA RAILWAY CROSSING, , MURARKA GALI, KORBA, CHATTISGARH -495678 - 495678
PH :9229495000.

AND NAGAR HAVELI AND DAMAN A DAMAN

28. CAR ZONE (4358--), SURVEY NO. 70/3, VARKUND, OPP VEERA DA DHABA, VAPI DAMAN ROAD, DAMAN-396210 - 396210
PH :9824184449.
29. TOP GEAR (5469--), DAMAN-KUNTA ROAD,KUNTA DAMAN-396210, DISTRICT - UNION TERRITORY , GUJARAT, - 396210
PH :9825631264.

DELHI**DELHI**

30. AUTOTECH ENGINEERS (4551--), PLOT NO. 20-24, MATIYALA VILLAGE, SECTOR-3, NEAR DPS DWARKA, NEW DELHI-110075 - 110075
PH :9811608008.

31. BRIGHT MOTORS (P) LTD. (885--), C-263 PEERAGARHI, OUTER RING ROAD, DELHI - 110 087, - 110087
PH :9810203018.

32. GLOBE SERVICE STATION (8961--), A-17, B1, EXTENSION MCIE, MATHURA ROAD, BADARPUR, DELHI-110 044, - 110044
PH :9540944009.

33. NAVEEN AUTOMOBILES (4934--), 37, PATPARGANJ INDUSTRIAL AREA, NEW DELHI-110092, . - 110092
PH :9911278537.

34. WIG AUTOMOBILES (8012--), D-3, S.M.A CO-OP. INDL. ESTATE, (OPP. JAHANGIR PURI CHOWK), G.T. KARNAL ROAD, DELHI-110 033 - 110033
PH :9811297607.

GOA**CURCHOREM**

35. VIPUL AUTOMOBILES (5376--), PLOT NO.7,8,9,KAKODA INSUNTIAL ESTATE, KAKODA CURCHOREM, DISTRICT - SOUTH GOA, GOA - 403706
PH :9422018746.

KUNDAIM

36. VIKAS ENGINEERING WORKS (4953--), BHOMA, KUNDAIM, GOA-403107, - 403107
PH :9823780335.

MAPUSA

37. SARDESAI AUTOMOBILES (2176--), 194, GAUNSAWADA, NEAR MILAGRES CHURCH, MAPUSA, GOA-403 507 - 403507
PH :9764448741.

PONDA

38. DHAULIKAR AUTOMOBILES (2041--), NO.5 TIP TOP MANSION IV, INDIRA NAGAR, DHAVALI, PONDA, GOA-403 401 - 403401
PH :9890669879.

VERNA

39. LUBRICARE SERVICES (261--), 7-D GOULLOY, NH.17 NUVEM, SALTETE, GOA-403 601 - 403601
PH :9822124376.

GUJARAT**ANAND**

40. PATEL TRACTOR COMPANY (2221--), (SERVICE DIVISION), BEHIND SUNIL CHAMBERS, STATION ROAD, ANAND-388 001 - 388001
PH :9925534494.

BHARUCH

41. NEW MARUTI MOTORS (5156--), 9/16 AKASH GANGA B/H CNG PUMP, OLD NH -8,BHOLAV , DISTRICT - BHARUCH, GUJARAT - 392001
PH :9898611424.

BHAVNAGAR

Maruti Authorized Service Station (AS ON 31.01.2026)

42. VIKRAM MOTOR GARAGE (127--),
TAKHTESHWAR PLOT, NEAR CHANDRA
BHUVAN, BHAVNAGAR - 364 002., - 364002
PH :9427145452.

BORSAD

43. SPEED AUTO (8953--), I B PETROL PUMP,
VASAD-TARAPUR HIGHWAY ROAD, VILLAGE
BORSAD, TALUKA BORSAD, DISTRICT ANAND,
GUJARAT- 388540 - 388540
PH :9979992779.

DAHOD

44. CAR SEVA (2438--), SAINT STEPHEN SCHOOL
ROAD, GODHRA ROAD., DAHOD. PIN-389151, -
389151
PH :9426469122.

DEESA

45. VAKHARIA MOTORS (3970--), PLOT NO. 57-60,
SURVEY NO. -- 16/1, DEESA -- PALANPUR
HIGHWAY, DEESA, DISTT. -- BANASKANTHA,
GUJARAT - 385535
PH :9377728841.

GANDHI NAGAR

46. SHREE ARBUDA MOTORS PVT. LTD. (2151--),
G.I.D.C. E-19/10/B, NEAR K-7, SECTOR 26,
GANDHINAGAR, GUJARAT - 382026 - 382044
PH :9825041331.

HALOL

47. MAA MOTORS (4767--), GODHRA ROAD, NEAR
TELEPHONE EXCHANGE, HALOL, GUJARAT -
389350
PH :9899810212.

IDAR

48. SUN MOTORS (5175--), IDAR-HIMMATNAGAR
HIGHWAY ROAD, AT KRUSHNAGAR,PO
NETRAMLI., TA.IDER DISTRICT SABARKANTA,
GUJARAT - 383430
PH :9228286768.

KALOL

49. SUNRISE AUTO CENTRE (146--), BLOCK
SURVEY NO. 1141, OPP JANPATH PETROLEUM,
NEAR SINDBAD HOTEL,
AHMEDABAD-MEHSANA HIGHWAY, KALOL,
DISTRICT -- GANDHINAGAR, GUJARAT - 382721
PH :9879542207.

KAMREJ

50. PATEL MOTOR GARAGE (2764--), PLOT NO
1,2,3, NAVAGAM., NR. MANISHA HOTEL, OPP
DADABHAGWAN TEMPLE, NAVAGAM, KAMREJ.,
DIST: SURAT-394185 - 394185
PH :9825127413.

KAPADVANJ

51. DISHA MOTORS (5960--),
MAHAMADPURA,KAPADVANJ-NADIAD ROAD,
KAPADVANJ-387620, DISTRICT-KHEDA,
GUJARAT - 387620
PH :9825641244.

LIMDI

52. PARTH AUTOMOBILES (4171--),
OPP.SWAMINARAYAN TEMPLE, NH NO-8A,
LIMBIDI DIST, SURENDERNAGAR , PIN-363421 -
363421
PH :9426714510.

LUNAWADA

53. N.J. MOTORS (4370--), R SURVEY NO 358,
MODASA HIGHWAY, MOTA SONELA,
LUNAWADA, DIST. MAHISAGAR 389230 - 389230
PH :9924252700.

MEHSANA

54. SHUBH AUTO SERVICES (3367--), NEAR AGRO
PETROL PUMP, OLD RTO, RAMOSNA JAKAT
NAKA, MEHSANA (GUJARAT) - 384001
PH :9825322460.

NADIAD

55. SHIVAM MOTORS (4430--), PLOT NO 35/1,
QUALITY SEEDS COMPOUND, NEAR BHUTIA
BUNGLOW, DABHAM, NADIAD, DISTRICT
KHEDA, GUJARAT- 387320 - 387320
PH :9825021960.

TALALA

56. RUBY MOTORS (5942--), TALALA ROAD ,
RAMRECHI(GIR), DIST - GIR, SOMNATH -
362150, - 362150
PH :9824061044.

UNJHA

57. AMBIKA MOTORS (3932--), SADGURU
COMPLEX, AHMEDABAD PALAM PUR HIGHWAY
ROAD, UNJHA, MEHSANA-384170 - 384170
PH :9824517382.

VIRAMGAM

58. KRISHNA MOTOR GARAGE (4038--), OUTSIDE
BHARWADI GATE, NEAR BHARAT PETROL
PUMP, VIRAMGAM, - 382150
PH :9426415274.

VYARA

59. PARTH MOTORS (8928--), D-1.CITY LIGHT
TOWER KAKRAPAR, BYPASS ROAD-VYARA,
DISTRICT-SURAT, GUJARAT - 394650
PH :9898292020.

FARIDABAD

60. PERFECT AUTOZONE (P), LTD. (5667--), PLOT
NO 9, ADJACENT TO UNION BANK OF INDIA,
ANKHIR, OPP SEC 21-D, MAIN BADHKAL ROAD,
DISTT FARIDABAD, HARYANA - 121001 - 121001

HARYANA

FARRUKHNAGAR

61. M R MOTORS (5946--), GURGAON-JHAJJAR
ROAD,OPP. ANAAZ MANDI,
FARRUKHNAGAR-123506, DISTRICT-GURGAON,
HARYANA - 122506
PH :9810831200.

FATEHABAD (HARYANA)

62. DHINGRA AUTOMOBILES (1856--), G.T. ROAD,
FATEHABAD, (HARYANA), - 125050
PH :9896012906.

63. MOTOR CRAFT (3064--), OPPOSITE M M
COLLEGE, SIRSA ROAD, FATEHABAD, 125050 -
125050
PH :9254080200.

GANGWA

64. PANCHMUKHI AUTOMOBILES (5968--), HISSAR
RAJGARH ROAD, GANGWA-125001,
DISTRICT-HISSAR, HARYANA - 125001
PH :9728100029.

GURGAON

65. QUTAB AUTO PVT. LTD. (3668--), KHEWAT/
KHATA NO 714/909, VILLAGE JHARSA, UNITECH
CYBER PARK ROAD, SECTOR 39, GURGAON,
HARYANA 122001 - 122001
PH :9811687333.

66. M R MOTORS (8946--), VIJAY VIHAR,MAIN
SILOKHRA ROAD,SEC-30, GURGAON- 122002 ,
HARYANA , - 122001
PH :9992111244.

67. SOMESH AUTOMOBILES (455--), PLOT NO
249/2/8, BLOCK A, ROAD NO A-56, DLF PHASE 1,
GURGAON 122002 - 122002
PH :9650690000.

HISSAR

68. SALASAR AUTO (4735--), OPP. VIDYUT NAGAR
GATE NO. 2, DELHI ROAD, HISSAR-125001,
HARYANA - 125001
PH :9355486716.

ISMAILABAD

69. VINAYAK MOTORS (9024--), OPP. MAHARAJA
PALACE , AMBALA HISSAR ROAD ,
ISMAILABAD-136129 , HARYANA - 136129
PH :9034820190.

ISRAMA

70. SHIV DARSHAN AUTOMOBILES (6051--), ISRAMA
PANIPAT ROAD, NR. NC
COLLEGE,ISRAMA-132103, DISTRICT-PANIPAT ,
HARYANA - 132107
PH :9911366230.

JHAJJAR

71. VASUNDHRA MOTORS (1467--), REWARI ROAD,
JHAJJAR-124 103, (HARYANA), - 124103
PH :9812012180.

KURUKSHETRA

72. KARTAR MOTORS (5349--), PLOT O 65-66,
SECTOR -2, HUDA INDUSTRIAL, AREA
KURUKSHETRA - 136118
PH :9896245900.

MAHENDERGARH

73. SHREE SHYAM MOTORS (8960--), NEAR I.O.C
PETROL PUMP, MAHENDERGARH-123029,
DISTRICT-MAHENDERGARH, (HARYANA) -
123028

MANESAR

74. MAITRI SERVICE STATION (2378--), N.H.8,
DELHI-JAIPUR ROAD, MANESAR (GURGAON), -
122001
PH :9818001128.

NILOKHERI

75. SAHIL MOTORS (8974--), NEW NEHSIL
ROAD NILOKHERI, DISTRICT KARNAL,
NILOKHERI-132117, HARYANA - 132117
PH :9812510190.

PALWAL

76. D.K. & R.K. MOTORS (1159--), NEAR BUS
STAND , NH-2 PALWAL, PALWAL, - 121102
77. SHEELA MOTORS (5141--), OPP MUNICIPAL
COUNCIL OFFICE, OLD G T ROAD, PALWAL,
DISTRICT - FARIDABAD, HARYANA - 121102

PANCHKULA

78. PANCHKULA AUTO SERVICES (1949--), PLOT
NO.300, PHASE-II INDUSTRIAL AREA,
PANCHKULA-134 109, (HARYANA) - 134109
PH :9872441546.

PATAUDI

79. SHUBHAM AUTOMOBILES (4641--), REWARI
ROAD, PATAUDI, DISTT. GURGAON, - 122413
SADHAURA

80. SHREE GANESH MOTORS (5959--), NEAR
INDIAN OIL PETROL PUMP, KALA AMB
ROAD,SADHAURA-133204,
DISTRICT-YAMUNANAGAR, HARYANA - 133204
PH :9813376260.

SHAHABAD

81. MAHALAXMI MOTORS (354--), LADWA ROAD,
SHAHABAD MARKANDA-136 135, (HARYANA), -
136135
PH :9812036433.

SIWANI

82. GANESH AUTOMOBILES (5931--), NEAR
RELANCE PETROL PUMP,HISAR ROAD,SIWANI,
DISTRICT-BHIWANI, HARYANA - 127046 - 127046
PH :8607113000.

SOHNA

83. SHRI SHYAM MOTORS (8978--),
OPP.RAGHUNANDAN PETROL PUMP, NEAR GD
GOENKA INTERNATIONAL SCHOOL,
SOHNA-122103, HARYANA - 122103
PH :9416455660.

TOSHAM

84. MOHINI AUTOMOBILES (6026--), OPP.NEW ANAJ
MANDI, NEAR MINI BANK,TOSHAM-127040 ,
DISTRICT-BHIWANI, HARYANA - 127040

HIMACHAL PRADESH

BADDI

85. LAJ MOTORS (5541--), 436.MAUJA
SURAJ MAJRA LABANA, BADDI, DISTRICT -
SOLAN, HIMACHAL PRADESH - 173205
PH :9816039189.

BANOI

86. BABA SERVICE STATION (4634--), VILL BANOI,
TEH SHAHPUR P.O., BANOI, DIST KANGRA
(HIMACHAL PRADESH) - 176209
PH :9418051290.

BHAMBLA

87. DHIMAN MOTORS (3837--), PLOT NO. 42,
INDUSTRIAL AREA, BHAMBLA, JAHU, DISTT
MANDI - 175004
PH :9816227437.

BHUNTAR

88. HANDA MOTORS (4262--), HANDA COMPLEX,
NEAR AIRPORT, BHUNTAR, KULLU (H.P.) -
175125
PH :9816007003.

CHAMBA

89. AUTOZONE (5247--),PATHANKOT RAOD PAREL
, SULTANPUR - CHAMBA , DISTRICT - CHAMBA ,
HIMACHAL PRADESH - 176310
PH :9418214848.

GHUMARWIN

90. BHASKAR AUTO SPARE & SERVICE (5147--),
VILLAGE KULLARU, GHUMARWIN, DISTRICT -
BILASPUR, HIMACHAL PRADESH - 174021
PH :9816090504.

JAWALAMUKHI

91. LAKSHMI AUTO SPARE & SERVICE CENTRE
(4630--), NEAR GANJU BAGH, DEHRA ROAD,
JWALAMUKHI, TEH. DEHRA, DIST. KANGRA
(HIMACHAL PRADESH) - 176031
PH :9418091048.

KUMARHATTI

92. SOLAN AUTOMOBILES PVT. LTD. (6420--),
DAGHOTI(SOLAN), P.O.KUMAR HATTI-173 229
(H.P.), - 173229
PH :9816030330.

MANDI

93. BHAGWATI AUTOMOBILES (269--), PLOT NO. 3,
INDUSTRIAL AREA PHASE 3, SAULI KHAD,
MANDI, HIMACHAL PRADESH - 175001
PH :9418461897.

MARANDA

94. MODERN SERVICE CENTRE (1175--), PUSHUP
COMPLEX, MARANDA-176 102, (H.P.) - 176102
PH :7018243011.

NADAUN

95. CAR CARE ENGINEERS (4423--), HOSHIARPUR
ROAD, MANPUL, NADAUN DISTT, HAMIRPUR,
HP - 177033
PH :9857799080.

NAHAN

96. AGGARWAL MOTORS (3334--), GUNNU GHAT,
NEAR TELECOM COLONY, NAHAN-173 001, -
173001
PH :9418023558.

PAONTA SAHIB

97. SUMEET MOTORS (1441--), SHAMSHERPUR,
PAONTA SAHIB-173 025, (H.P.) - 173025
PH :9418018329.

PATLI KUHAL

98. JAMDAGNI MOTORS (760--), VILLAGE PATLI
KUHALL, P.O.KATRAIN, DISTT.KULLU (H.P.), -
175129
PH :9816040247.

RAMPUR BUSHAHR

99. HIGHWAY SERVICE STATION (2649--), CHUHA
BAG, RAMPUR BUSHAHR, (H.P.) - 172001 -
172001
PH :9805831627.

100. KRISHNA AUTOMOBILE (4438--), VILL CHUHA
BAG, RAMPUR BUSHAHR-172001, - 172001
PH :9418036091.

SHIMLA

101. GURRAJ AUTO SERVICE (757--), NEAR CPRI
ROAD, BEMLOI, SHIMLA-171 001, - 171001
PH :9816233030.

102. MOTO WORLD (6433--), NAVBAHAR,
SHIMLA-171 002, - 171002
PH :9459050769.

SOLAN

103. SOLAN SERVICE CENTRE (764--), BYE PASS,
NEAR PWD OFFICE, SOLAN-173 212, - 173212
PH :9816022640.

UNA (H.P)

104. RUDRA MOTORS (3925--), NEAR OLD HOSPITAL
CHOWK, NH-22, UNA - 174303 (H.P.), - 174303
PH :8628803717.

105. TRINITY AUTO FAST ENGINEERS (1755--),
JALGRAN TABBA, NANGAL ROAD, UNA,
HIMACHAL PRADESH - 174303 - 174303
PH :9816628020.

JAMMU AND KASHMIR

BARAMULA

106. MARUTI MASTERS (4369--), KANISPOORA,
BARAMULA, KASHMIR, - 193101
PH :9906864748.

CHADOORA

107. VEHICLE MASTERS (4661--), MAIN ROAD,
CHADOORA-190001, DIST. BUDGAM, JAMMU &
KASHMIR - 190001
PH :9419441217.

JAMMU

108. KWIK FIT (2343--), AMBPALLA, B.C. ROAD,
JAMMU-180 001, - 180001
PH :9419104400.

109. MAGNA GARAGES (441--), NARWAL CHOWK,
TRANSPORT NAGAR, JAMMU-180 006 - 180006
PH :9796800000.

SAMBHA

110. DHANSAR CAR CLINIC (5146--), NATIONAL
HIGHWAY, SUPWAL SAMBHA , DISTRICT -
JAMMU, J&K - 184120
PH :9419393949.

JHARKHAND

KHUNTI

111. MOD MOBILES (5579--), MAIN ROAD,RANCHI
ROAD - KHUNTI, DISTRICT - KHUNTI, PIN -
835210, JHARKHAND - 835210
PH :9304468855.

PAKUR

112. SPEED WHEEL SERVICE CENTRE-PAKUR
(4976--), MAIN ROAD, PAKUR - 816107, - 816107
PH :9434101917.

KARNATAKA

BAGALKOT

113. NARA AUTOMOBILES (4357--), TP NO. 158 A/2,
WARD NO. 10, SHABADI COMPOUND EXTN,
BAGALKOT-587101 - 587101
PH :9880875595.

BANGALORE

114. ADARSHA AUTOMOBILES (4553--), 108/9,
HALASAHALLI ROAD, OPP HP GAS GODOWN,
NEXT TO SK FLOOR MILL, VARTHUR,
BANGALORE - 560087 - 560037
PH :9880195465.

115. BENAKA MOTORS (3237--), NO.158/2
VIBHUTIPURA, VIGNAN NAGAR BEHIND
B.E.M.L., NEAR RENUKA SWIMMING POOL,
BANGALORE-560 017
PH :9845212416.

116. KESHKAMAL MOTORS (2075--), NO.943 21ST
MAIN, BANASHANKARI 2ND STAGE, (NEAR
KIMS MEDICAL COLLEGE), BANGALORE-560
070
PH :9448071067.

117. CANARA MOTORS (8987--), 9TH MAIN, NEAR
PARLE G, TUMKUR ROAD,
CHIKKABIDARAKALLU VILLAGE,
BANGALORE-560073 - 560058
PH :9845842288.

118. NEXUS (2768--), #275/301, 80 FEET ROAD, OPP.
M.S. RAMAIAH HOSPITAL (BEL ROAD), RMV
2ND STAGE, BANGALORE-560 094
PH :9844013436.

119. RAJ MOTORS (2829--), NO.10 MAGADI MAIN
ROAD, OPP. UNANI MEDICINE INSTITUTE,
KOTIGEPALYA, BANGALORE-560 091
PH :9663555677.

120. SMART CARS (3571--), 3RD CROSS NEAR J.B.
TILES, KAGGADASA PURA MAIN ROAD, C.V.
RAMAN NAGAR, BANGALORE-560 093
PH :9663324361.

121. TRINITY CAR CARE PVT. LTD (5851--), SURVEY
NO 52/1 SRI GANDHADAKAVALL VILLAGE,
NAGARBHAVI BANGALORE-560091,
DISTRICT-BANGALORE , KARNATAKA - 560091
PH :9880793980.

122. TRINITY MOTORS (4638--), NO. 36, 4TH STAGE,
W.C. ROAD, BASAVESHWARANAGAR,
BANGALORE-560079 - 560079
PH :9845539474.

CHIKBALLAPUR

123. SUKOVE ENTERPRISES (3426--), B.B. ROAD
N.H.7, CHIKBALLAPUR-562 101, (KARNATAKA),
PH :9880607034.

DHARWAD

124. MYSORE GARAGE (2468--), BELGAUM ROAD,
DHARWAD-580 001, (KARNATAKA),
PH :9844133273.

GADAG

125. MODERN MOTORS (8939--), HUBLI ROAD,
GADAG-582 103, (KARNATAKA),
PH :9448746579.

KARKALA

126. KARKALA MOTORS (3549--), TELLAR ROAD,
KARKALA-574 104, (KARNATAKA),
PH :9845356244.

KOLAR

127. SHIVA SERVICE POINT (2472--), M.B. ROAD,
KOLAR-563 101, (KARNATAKA),
PH :9448228604.

KUNDAPUR

128. PRAKASH AUTO SERVICE (4522--), NH-66, NEAR
K.E.B., VODERHOBLI, KUNDAPURA,
KARNATAKA - 576201
PH :9341035642.

Maruti Authorized Service Station (AS ON 31.01.2026)

RANEENNUR

129. KIZEN MOTORS (4568--), P.B.ROAD,
RANEENNUR, KARNATAKA - 581115 - 581115
PH :9900922022.

SAGAR (KARNATAKA)

130. MALLIKA AUTO CENTRE (2133--), NO. 459/1204,
GANDHI NAGAR, BEHIND BHARAT PETROLEUM,
NH 206, SAGARA - 577401,
KARNATAKA
PH :9448139605.

SIRSI

131. ARUNDHATI MOTORS (1258--), HUBLI ROAD,
SIRSI-581 402, (UTTAR KARNATAKA),
PH :9845098822.

KERALA

ADIMALY

132. PLATHOTTAM AUTOMOBILES (3864--), NH-49,
OPPOSITE TO MINI INDUSTRIAL ESTATE,
ADIMALI-685561 - 685561
PH :9447023073.

ALUVA

133. AUTO TEAM (2630--), A/189 A, PARUR
JUNCTION, ALUVA, (KERALA) - 683108
PH :9947333760.

AMBALLUR

134. LAKSHMI DEVI AUTO GARAGE (4137--),
AMBALLUR, P.O. PUDUKAD, TRICHUR, KERALA
- 680301
PH :9847903949.

CHALAKUDY

135. STAR MARUTI GARAGE (5367--), NH47 BYE
PASS, NEAR CRESCENT PUBLIC SCHOOL,
CHALAKKUDY, DISTRICT - THRISSUR - 680307
PH :9946009375.

CHANGANACHERRY

136. PALATHRA MOTORS & SERVICE CENTRE (1072--),
VADAKKEKARA, VEROOR P.O.,
CHANGANACHERRY-686 104, - 686104
PH :9447195154.

CHEGGANNUR

137. NEW TECH AUTOMOBILES (1978--),
INDUSTRIAL ESTATE, MUNDANCAVU,
CHEGGANNUR-689 121, KERALA - 689121
PH :9389915757.

ETTUMANOOR

138. ROHIT MOTORS (4636--), THELLAKOM P.O.,
M.C. ROAD, ETTUMANOOR, KERALA - 686630
PH :9447079010.

KALLAMBALAM

139. PRAKASH AUTO ENGINEERS (5548--),
VADASSERIKONAM P.O. KALLAMBALAM,
VARKALA KALLAMBALAM-695143,
DISTRICT-TRIVANDRUM, KERALA - 695143
PH :9847159618.

KALLUMUTTY

140. MARUTI CARE (4179--), KALLUMUTTY, IRITTY
P.O., KANNUR, KERALA - 670703 - 670703
PH :9946703070.

KANNUR

141. PIONEER AUTO & ENGG.WORKS (4722--),
KANNOOTHUMCHAL ROAD, KANNUR - 2,
(KERALA), - 670005
PH :9447798255.

KATTAPPANA

142. UNITED SERVICE CENTRE (4433--), EDASERT
JUNCTION, KATTAPPANA-685508, KERALA, -
685508
PH :9961432941.

KAYAMKULAM

143. PERFECT MOTORS (8995--), MARUTI SERVICE
CENTRE, NH-47, CHEPPAD,
KAYAMKULAM-690507, DISTRICT-ALAPPUZHA
(KERALA) - 690507
PH :9447048338.

KUNDARA

144. SPARK SERVICE (5772--), ELAMPALLOOR,P.O.
KUNDARA-691501, DISTRICT-KOLLAM,
(KERALA) - 691501
PH :9809608020.

KUTHUPARAMBA

145. KRISHNA MOTORS (3435--), KUTTIKUNNU,
NEAR 66 KV SUB STATION,
KUTHUPARAMBA-670 643, KANNUR DIST.
(KERALA) - 670643
PH :9497296380.

MANNAR

146. MOHANS AUTOMOBILES (5457--), MOHANS
AUTOMOBILES & ENGINEERS
KUTTEMPEROOR P.O. MANNAR, DISTRICT -
ALAPPUZHA (KERALA) - 689622
PH :9447877377.

MANNUTHY

147. TOP CLEAN SERVICES (2834--), 13/450
MANNUTHI BYE PASS, P.O. OLLUKKARA,
THRISSUR, (KERALA) - 680651
PH :8592947776.

MUVATTUPUZHA

148. JAWAN AUTOMOBILES (2730--), MADAVOOR
POST, MUVATTUPUZHA-686 669, - 686669
PH :8943345500.

NEYYATTINKARA

149. XANON ENGINEERS (8951--), RAVELI TOLL
JUNCTION, NEYYATTINKARA,
TRIVANDRUM-695121, - 695121
PH :9946357813.

PALAKKAD

150. CAR CRAFT (2139--), 5/682 (1), MANALI,
PALAKAD-678 001, (KERALA) - 678001
PH :9349607819.

SASTHA MANGALAM

151. MARSHAL AUTOMOBILES (4035--), SWATHI
NAGAR, TC 22/1565, PIPPINMOOD,
SASTHAMANGALAM - PEROORKADA ROAD,
PEROORKADA PO, THIRUVANANTHAPURAM -
695005, KERALA - 695005
PH :9447461101.

SULTAN BATHERY

152. NEW INDIAN (8970--), MYSORE ROAD, SULTAN
BATHERY, WAYANAD DISTRICT,
KERALA-673592 - 673592
PH :8281682822.

TRIVANDRUM

153. EMINENT MARUTI SERVICE (2360--), T.C. 610
M.C. ROAD, MANNANTHALA, TRIVANDRUM-695
015, - 695015
PH :9447713639.

VARKALA

154. S.S. MOTORS (2979--), NEAR POLICE STATION,
VARKALA-695 141, TRIVANDRUM DISTT., -
695141
PH :9446104991.

VATAKARA

155. RANI CARS (8957--), BUILDING NO. 10/496A,
NADAPURAM ROAD MADAPPALLI COLLEGE
POST, VATAKARA, DISTRICT KOZHIKODE,
KERALA-673102. - 673102
PH :9400513139.

MADHYA PRADESH

BARWANI

156. SPEED AUTOMOBILES (5260--), KHANDWA
BARODA ROAD, NR. BALAJI TOLL
KANTA, BARWANI-451552, DISTRICT-BARWANI,
MADHYA PRADESH - 451552
PH :9926146073.

BHOPAL

157. SHUBHAM AUTOMOBILES (5052--), PLOT NO. 1
& 2, TIRANGA ROAD, SHAHPURA, BHOPAL,
MADHYA PRADESH -462039 - 462039
PH :9425009869.
158. TAURUS AUTOMOBILES (3372--), ALAKNANDA
COMPLEX, OPP.VIJAY STAMBH PRESS
COMPLEX, M.P. NAGAR ZONE-I, BHOPAL
(M.P.) - 462011
PH :9303131403.

BURHANPUR

159. SWADESHI MOTORS (4229--), NEAR GANPATI
MANDIR, GANPATI NAKA, BURHANPUR,
MADHYA PRADESH - 450331

DABRA

160. MODI MOTORS (3857--), BALLA KA DERA,
JHANSI ROAD, DABRA, GWALIOR - 475110
PH :8770360194.

DAMOH

161. MARUTI PRIME (1156--), BUS STAND, STATION
ROAD, DAMOH-470 661,
PH :8319706998.

DATIA

162. HIND MOTORS (4470--), NH-75, JHANSI BYPASS
ROAD, NEAR S.R.I COLLEGE, KALAMPURAM
TIRHA, DATIA, MADHYA PRADESH - 475661 -
475661
PH :9406969206.

DEWAS

163. AZAD MOTORS (4534--), 10, JAWAHAR NAGAR
COMPLEX AB ROAD DEWAS(MP)404051 -
455001
PH :9827533591.

GWALIOR

164. CLASSIC MOTORS & SERVICE STATION (5242--),
CHAUHAN PIAO.M.G. ROAD, THATIPUR
MORAR, GWALIOR, MADHYA PRADESH -
474011
PH :9329603001.
165. MARUTI ENTERPRISES (3021--), KHERAPATI
ROAD, GWALIOR-474 002, (M.P.) - 474002
PH :9425116466.

HARDA

166. MANOJ UDYOG & SERVICE CENTER (4145--),
87-88, INDUSTRIAL AREA, CHHIPANER ROAD,
HARDA, M.P. - 461331
PH :9826227245.

TIKAMGARH

167. ASHENDRA AUTOMOBILES (2636--), 350 OPP.
JAWAHAR NAVODAYA VIDYALAYA,
KUNDESHWAR, TIKAMGARH-472 001, MADHYA
PRADESH - 472001
PH :9009129909.

VIDISHA

168. SAMAY MOTORS (5179--), NEAR SC/ST SHED,
PITALMIL CHOURAHA, SAGAR ROAD NH-86,
VIDISHA, MP-464002 - 464002
PH :9425392521.

WAIDHAN

169. ANANT MOTORS (5732--), NEAR ESSAR
TOWNSHIP, BILAUJI, WAIDHAN,
DISTRICT-SINGRAULI, PIN-486886, MADHYA
PRADESH - 486886
PH :8319050124.

MAHARASHTRA

AHMEDNAGAR

170. AMIT SERVICE STATION (4158--), NEAR NAGAPUR HIGHWAY BRIDGE, NAGAR-MANMAD HIGHWAY, NAGAPUR DIST-AHMEDNAGAR, MAHARASHTRA - 414111

BARSHI

171. OM SERVICING CENTRE (5359--), KURWEDI ROAD - BARSI, DISTRICT - SOLAPUR , PIN - 413401, (MAHARASHTRA) - 413401 PH :9850437003.

BOISAR

172. SIFAR CAR CARE (4055--), PLOT NO. 15 AT- KURGAON, P O KUNDAN, BOISAR TARAPUR ROAD, TAL PALGHAR, DISTT THANE - 401506 PH :9765509990.

GADACHIROLI

173. VENUS AUTOMOTIVE (4170--), PLOT # 2, NR GOVERNMENT ITI COLLEGE, ADJ TO CHANDRAPUR GADACHIROLI HIGHWAY, GADACHIROLI, MAHARASHTRA-442605 - 442605 PH :9689228222.

ICHALKARANJLI

174. SAI AUTO LEADS (3821--), 6/1108, SANGLI VES, ICHALKARANJLI - 416115, DIST. KOLHAPUR, MAHARASHTRA - 416115 PH :9822009788.

JALGAON

175. SHREE MOTORS (3040--), 362 SHIVAJI NAGAR, JALGAON-425 001, , - 425001 PH :9823150704.

KANKAVLI

176. SAPALE AUTO SERVICE PVT. LTD. (1975--), MUMBAI GOA ROAD, N.H.17, KALMATH, KANKAVLI DISTT. SINDHURURG-416 602 - 416602 PH :9422434701.

KHAMGAON

177. JAIDEEP MOTORS (4779--), NEAR RELIANCE PETROL PUMP, NANDURA ROAD, KHAMGAON-444303, DISTRICT-BULDHANA (MAHARASHTRA) - 444303 PH :9850352826.

KOPARGAON

178. SAI MOTORS (4449--), NAGAR MANMAD HIGHWAY, NEAR HOTEL ASHOKA, KOPARGAON, DIST. AHMEDNAGAR (MAHARASHTRA) - 423601 PH :9850684384.

MUMBAI

179. ALLIED AUTO AGENCIES (2666--), 86/20 DR. AMBEDKAR ROAD, KHAR, MUMBAI-400 052, - 400052 PH :9768257450.

180. CARKRAFT AUTOMOBILES AND INFRASTRUCTURE PVT. LTD. (4654--), ABC GODOWN, MINERVA INDUSTRIAL ESTATE, OFF P.K. ROAD, NEAR SAI DHAM MANDHIR, MULUND (W), MUMBAI - 400080 PH :9820296924.

181. POWAI AUTO WORKS (1660--), OPP. PANCH KUTIR BUS STOP, 19 ADI SANKARACHARYA MARG, POWAI, MUMBAI-400 076 - 400076 PH :9820635317.

182. RAVI AUTOMOBILE SERVICES (553--), GHATKOPAR-MAHUL ROAD, TILAK NAGAR, CHAMBUR, MUMBAI-400 089 - 400089 PH :8657442190.

183. SUPER AUTO SERVICES PVT. LTD. (2430--), DESAI WADI JAYWANT SAWANT ROAD, NEAR HAPPY HOME SOCIETY, DAHISAR (W), MUMBAI-400 068 - 400068 PH :9867253000.

NAGPUR

184. BALAJI MOTORS (3078--), PLOT NO.18/27, NEAR NAKA NO.-1, KORADI ROAD, NAGPUR-20 - 440020 PH :9960634068.

NASHIK

185. RACCA SERVICES (3720--), RACCA ESTATE, OLD GANGAPUR NAKA, HANUMAN WADI LINK ROAD, PANCHVATI, NASHIK - 422003 - 422003 PH :9096846468.

PANVEL

186. GANGAL MOTORS (2934--), PLOT NO.:132,133 &117, SECTOR 1-S, ROAD NO-5, BEHIND CIDCO GODOWN, NEW PANVEL, DISTRICT - RAIGAD, (MAHARASHTRA) - 410206 PH :9320226072.

187. IDEAL AUTOMOBILES (2279--), IDEAL HOUSE,PLOT NO-83, (PANVEL INDUSTRIAL CO OP ESTATE LTD., PANVEL, DISTRICT - RAIGAD, (MAHARASHTRA) - 410206 PH :9969602650.

PASHAN

188. MARUTI CAR SANJIVANI (5278--), SURVEY NO 5/2,SUTARWADI SUSROAD,PASHAN, DISTRICT - PUNE, PUNE - 411021, MAHARASHTRA - 411021 PH :9960733360.

PATHARDI

189. SAGAR MOTORS (5979--), MALIBABHULGAON, NAGAR ROAD PATHARDI, MAHARASHTRA 414102 - 414102 PH :9822197969.

PEN

190. NAVNATH AUTO (5677--), OPPOSITE RAMWADI.S.T. STAND, NATIONAL HIGHWAY-17,TAL PEN-402107, DISTRICT-RAIGAD, MAHARASHTRA - 402107 PH :9834279228.

PUNE

191. APPU AUTOMOBILES (5029--), SR. NO. 165, PLOT NO. 801, TALAWADE ROAD, PUNE - 412114, MAHARASHTRA - 411062 PH :9371017595.

192. MANAS AUTOMOTIVE (5443--), SURVEY NO 9/20A, ANAND THORAT ROAD, NEAR APJ ABDUL KALAM E LEARNING SCHOOL, KARVE NAGAR, PUNE - 411052 - 411052 PH :9822043007.

193. SANTOOR CAR CARE (2053--), ASHOK PLAZA, 32/2 WADGAON SHERI NEAR WEIKFIELD, PUNE NAGAR ROAD, PUNE-411 014 - 411014

SANGAMNER

194. SAI MOTORS (2840--), NEAR GULEWADI PHATA, PUNE NASIK ROAD, SANGAMNER DIST. AHMEDNAGAR, PIN-422 608 (MHRS.) - 422608 PH :9860027513.

SANGLI

195. AWATI MOTORS (4772--), PADMAVATI COLONY, NEMINATH NAGAR VISHRAMBHAG, SANGLI-416415, MAHARASTRA - 416415 PH :9422407284.

196. BALAJI AUTO SERVICE (1564--), PLOT NO.43,GOLDEN PARK , BYPASS ROAD,SANGLI-416416 , DISTRICT-SANGLI , MAHARASHTRA - 416416 PH :9822106126.

SATANA

197. PATHAK MOTORS (5037--), YASHWANT NAGAR,TAHARABAD ROAD , SATANA - 423301, DISTRICT - NASIK, (MAHARASTRA) - 423301 PH :9890216257.

SHAHADA

198. MATOSHREE AUTOMOBILES (2870--), NO.558 SHAHADA DHONDAICHA ROAD, TAL. SHAHADA, NANDURBAR DISTT., (MAHARASHTRA) - 425409 PH :9421726230.

SHIRDI

199. SHREE GANESH AUTO CARE (4268--), POST SAKURI, TALUKA RAHATA, AHMEDNAGAR-423107, - 423107

THANE

200. CARKRAFT SERVICES PRIVATE LIMITED (8973--), SAINATH NAGAR, GHODBUNDER ROAD, KASARVADAVALI, THANE (W) - 400615 PH :9833795855.

ULHASNAGAR

201. MODERN CAR CARE (3260--), SHED NO 1/2/3, OPPOSITE SUPPER POINT HOTEL, SECTION 17, ULHASNAGAR - 421003, MAHARASHTRA - 421003 PH :9819774588.

URAN

202. SAI AUTOMOBILES (5665--), STATE HIGHWAY NO.56,NEAR JASAI NAKA, JASAI VILLAGE,URAN-410206, DISTRICT - RAIGAD, MAHARASHTRA - 410206 PH :9821806806.

WARORA

203. ROHIT AUTOMOTIVE (5873--), NAGPUR,CHANDRAPUR ROAD,VINAYAK-, LAYOUT,TILAK WARD,WARORA-442907, DISTRICT-CHANDRAPUR, MAHARASHTRA - 442907 PH :9172060099.

ODISHA**ANGUL**

204. ZEET AUTOMOBILES (1573--), NALCO NAGAR, KANDASAR, ANGUL - 759 145, ORISSA - 759145 PH :9437021285.

BALANGIR

205. ASHIRWAD AUTOMOBILE WORKS (3177--), DAMJI GARAGE, THIKADARPARA, , , BALANGIR-767 001 - 767001 PH :9437223452.

BARBIL

206. INDU MOTORS (3241--), IN FRONT OF UTKAL AUTOMOBILES, JODA-BARBIL HIGHWAY, BARBIL-758 035, (ORISSA) - 758035 PH :9437718008.

BHUBANESWAR

207. INDO JAPAN SERVICE (4936--), PLOT NO. 18, 19, 30 & 31, BHAGABANPUR INDUSTRIAL ESTATE, PO: PATRAPADA, BHUBANESHWAR-752019, ORISSA - 752019 PH :9861095444.

CUTTACK

208. AUTO MATES (426--), 3B/1325, SECTOR-11, CDA, CUTTACK, ODISHA - 753014 - 753008 PH :9437020646.

209. DURGA SERVICE CENTRE (8984--), NEAR PALAMANDAP, BADAMBADI, PO - ARUNODAY MARKET, DISTT - CUTTACK, PIN-753012 - 753012 PH :9937035762.

DHENKANAL

210. SHREE AUTO (8997--), GOUDUNIBEDIA, DHENKANAL - 759013, ODISHA - 759001 PH :9437414972.

PONDICHERRY

Maruti Authorized Service Station (AS ON 31.01.2026)

PUDUCHERRY

211. S D K MOTORS (471--), PLOT NO.12, 100 FEET ROAD, OZHANDAI KEERAPALAYAM MUDALIARPET, PONDICHERRY-605 004 - 605004 PH.9843045689.

PUNJAB

AMRITSAR

212. HANSON AUTOMOBILES (1722--), MAQBOOL PURA, G.T. ROAD, AMRITSAR, - 143001 PH.9815167669.

BANUR

213. AMRIK SERVICE STATION (2433--), PATIALA ROAD, BANUR, DISTT. MOHALI(PUNJAB), - 140601 PH.9815591325.

BARNALA

214. PUNJAB MOTOR GARAGE (6222--), DHANAULA ROAD, BARNALA (PUNJAB), - 148101 PH.9317512360.

DERABASSI

215. BINDAL AUTOMOBILES (1248--), CHANDIGARH AMBALA ROAD, PARAS RAM MARKET, DERA BASSI-140 507, - 140507 PH.9914449711.

DIRBA

216. PENTAGON MECHANICAL WORKS (2564--), JIND-SANGRUR ROAD, DIRBA, DISTT. SANGRUR, (PUNJAB) - 148035 PH.9876543400.

KURALI

217. V K MOTORS (8943--), CHANDIGARH ROPAR ROAD, KURALI, DISTRICT SAS NAGAR (MOHALI), PUNJAB -140103 - 140103 PH.9814273873.

MOHALI

218. SETHI MOTORS (4742--), PLOT NO. E-159, INDUSTRIAL AREA, PHASE-7, MOHALI, PUNJAB - 160055 PH.9814307002.

MORINDA

219. SONY MOTOR PALACE (1077--), SIRHIND ROAD, MORINDA-140 101, - 140101 PH.9815612477.

MUKERIAN

220. MARSHAL SALES CORPORATION (5251--), NEAR RADHA SOAMI SATSANG, PATHANKOT ROAD, MUKERIAN - 144211, DISTRICT HOSHIARPUR,PUNJAB - 144211 PH.8283835926.

PATIALA

221. RAJINDRA MOTORS (8924--), C-177, INDUSTRIAL FOCAL POINT, PATIALA, PUNJAB - 147003 PH.9316200335.

RAIKOT

222. RANA SUPREME MOTOR GARAGE (3732--), NEAR GURUDWARA TAHLIANA SAHIB, BARNALA BYE PASS ROAD, RAIKOT, DISTT. LUDHIANA (PUNJAB) - 141109 PH.9814265791.

RAMPURAPHUL

223. BALAJI AUTOMOBILES (4443--), OPPOSITE FCI GODOWN, RAMPURA PHUL - 151103 - 151103 PH.9417172671.

SIRHIND

224. MALHOTRA MOTORS (4657--), OPP. INCOME TAX OFFICE, SIRHIND, DISTT FATEHGARH SAHIB, PUNJAB - 140406 PH.9815844008.

SULTANPUR LODHI

225. HANDA MOTORS (2776--), TALWANDI ROAD, SULTANPUR LODHI, DISTT. KAPURTHALA, (PUNJAB) - 144626 PH.9815623392.

RAJASTHAN

ABU ROAD

226. UNIQUE MOTORS (4923--), MOUNT ROAD, AKBABHATTA, ABU ROAD-307 510, (RAJASTHAN) - 307510 PH.9929177781.

BEHROR

227. K.L. INTERNATIONAL AUTOMOBILES (1763--), DELHI JAIPUR HIGHWAY, VILLAGE DHAMI, P.O. KANKARDOPA, TEHSIL BEHROR DIST. ALWAR (RAJASTHAN) - 301701

BHARATPUR

228. CLASSIC MOTORS (2348--), DEEG ROAD, KUMHER GATE, BHARATPUR-321 001, (RAJASTHAN) - 321001 PH.9414026545.

BHIWADI

229. WHEEL-O-CITY (4246--), E-7D (A) PHASE-1, NEAR RIICO CHOWK, BHIWADI, RAJASTHAN - 301019

CHOMU

230. SHREE LAXMI MOTORS (3072--), MORIUA ROAD, CHOMU, JAIPUR-303702, (RAJASTHAN) - 303702 PH.9828160281.

DHAULPUR

231. NARAYAN MOTORS (3345--), G.T. ROAD, DHOLPUR, (RAJASTHAN), - 328001 PH.9116013413.

DIWANA

232. SANTOSH AUTOMOBILES (5450--), SANTOSH ATUOMOBILES KUCHAMAN ROAD , DIWANA , DISTRICT - NAGAUR , (RAJASTHAN) - 341303 PH.9828833363.

JAIPUR

233. A-1 MOTORS (4856--), D-28 MALVIYA NAGAR., INDUSTRIAL AREA JAIPUR, DISTRICT - JAIPUR , RAJASTHAN - 302017 PH.9414047628.
234. AUTONITY JAIPUR (4852--), GOPALPURA BYPASS, DELHI KISHANGARH, HIGHWAY JAIPUR, DISTRICT - JAIPUR - 302019, PH.9784377503.
235. JAI SHRI RAM AUTO SERVICE CENTRE (1140--), OPP. SHYAM NAGAR TURN, MAIN AJMER ROAD, SODALA JAIPUR, RAJASTHAN - 302019
236. TOSHNIWAL AUTOMOBILES (3475--), 131 SHRI GOPAL NGAR, GOPALPURA BYEPASS, JAIPUR, (RAJASTHAN) - 302015 PH.9887553836.

KUCHAMAN

237. DALUKA AUTO SALES (4565--), NEARBY SHARDA PALACE HOTEL., KUCHAMAN BYE PASS., KUCHAMAN CITY, 341508 - 341508 PH.9414433240.

MAKRANA

238. GEHLOT MOTORS (454--), OPPOSITE TO G.S.S, MANGLANA ROAD, MAKRANA, RAJASTHAN - 341505 PH.9829024687.

MERTA

239. DELUX CAR SERVICE CENTRE (3856--), KUCHERY ROAD, MERTA CITY, DISTT. NAGAUR, - 341510 PH.9414004543.

NEWAI

240. HEENA MOTORS (5568--), NEWAI BYEPASS ,NEAR JHILAY MOAD, NEWAI, DISTRICT - TONK, RAJASTHAN - 304021 PH.9414228066.

PILANI

241. MARUTI CARE CENTRE (3073--), CHIRAWA ROAD, DHANI POPSINGH, PILANI- 333031, RAJASTHAN - 333031

SUANGARH

242. SHRI CHARBHUJA MARUTI (4924--), LANDU ROAD, SUANGARH, DISTRICT-CHURU, RAJASTHAN - 331507 PH.9828118827.

SURATGARH

243. ROHIN SERVICE STATION (2646--), N.H.15 BIKANER ROAD, OPP. G.S.S. POWER HOUSE, SURATGARH-335 804, (RAJASTHAN) - 335804

TAMIL NADU

ARAVAKURICHI

244. GOWRI MARUTI (5570--), OPPOSITE IOCL PETROL PUMP,NH-7, ARAVAKURICHI, DISTRICT - KARUR, TAMILNADU - 639201 PH.9994818043.

CHENNAI

245. MARUTI NEEDS (2531--), NO.2 PARK ROAD, PADI, CHENNAI-600 050, - 600050 PH.9940099500.
246. P.A. SERVICE STATION (2346--), NO. 1 GOVINDARAJ ALUMEL AMMAL NAGAR, NEAR 100 FEET ROAD, AGRAHARAM, KORATTUR, CHENNAI-600 076 - 600076 PH.9840378025.
247. SWAMY AUTOMOBILES (456--), NO. 5, TANK BUND ROAD, NUNGAMBAKKAM, CHENNAI, TAMIL NADU - 600034 - 600008 PH.9840891916.
248. UNIQUE CAR CARE (5868--), NO.54, FIRST STREET, MANIKANDAPURAM, MTH HIGH ROAD, THIRUMULLAIVOYAL, CHENNAI, TAMILNADU - 600062 - 600062

COIMBATORE

249. SOUTH INDIA MOTORS (MARUTTI) (4752--), 9A/3 AVINASHI ROAD, NEAR KMCH POLICE CHECK POST, CIVIL AERODROME POST, SITRA, COIMBATORE-641014 (TAMIL NADU) - 641014 PH.9843027601.

DINDIGUL

250. MAGNUM MOTORS (1241--), MEENAKSHI NAICKAN PATTY, NH-83 BYE PASS ROAD, DINDIGUL - 624002, TAMIL NADU - 624002 PH.9842231340.

GADALUR

251. GREENWAY MARUTI SERVICE CENTER (5471--), KALAMPUZHA,D.O. NO 12/59-3, GUDALUR, DISTRICT - NILGIRLS, TAMILNADU - 643212 PH.9443603815.

GOBICHTTIPALAYAM

252. HI-TEC AUTO GARAGE (2426--), 426,ASIRIYAR NAGAR, KULLAMPALAYAM POST, ERODE MAIN ROAD, GOBICHTTIPALAYAM-638 476, - 638476 PH.9842447725.

HOSUR

253. BALAJI MOTORS (5136--), PLOT NO. 11 & 18, MARUTHI NAGAR, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109 - 635109 PH.9842755402.

KARAIKUDI

254. SURABI MOTORS (2340--), NO.11 TRICHY MAIN ROAD, (NEAR RAILWAY CROSS), SRIRAM NAGAR, KOTAIYUR, KARAIKUDI-630 001 - 630106
PH :9443351484.

KARUR

255. SRI SAKTHI AUTO CARE (2532--), NO. 3/244, BHARATHIYAR STREET, COVAI ROAD, VADIVEL NAGAR, L.N.S. POST, KARUR - 639002, TAMILNADU - 638009
PH :9842426585.

MADURANTHAKAM

256. MARUTHI MOTORS (6036--), NO.33.G.S.T. ROAD,KARUNGUZH, MADURANTHAKAM-603303, DISTRICT-KANCHIPURAM, TAMILNADU - 603303
PH :9443354073.

NAMAKKAL

257. ARUNA MOTORS (1461--), MARUTI SERVICE CENTRE, OPP. N.S.R. BUILDING, SALEM MAIN ROAD, NAMAKKAL-637 001 - 637001
PH :984725761.

PALLADAM

258. CHENDU MOTORS (4333--), KALIVELAMPATTI PIRIVU, TRICHY ROAD, PALLADAM-641662, COIMBATORE DIST - 641662
PH :9842225058.

PERUNDURAI

259. PRIYAM AUTOMOBILES (3036--), 28/4, JJ NAGAR, KOVAI MAIN ROAD, PERUNDURAI, ERODE DISTRICT, TAMIL NADU - 638052 - 638052

POLACHI

260. J D & COMPANY (6055--), 160 COIMBATORE ROAD, POLLACHI - 642002, TAMIL NADU - 642002
PH :9443565785.

SANKAGIRI

261. TECH ZONE AUTO SERVICE (2640--), 10/78 BHAVANI MAIN ROAD, (NEAR ERODE PIRIVU), SANKAGIRI SALEM DISTT., PIN-637 303 - 637303

THENI

262. SATHURAGIRI MOTOR WORKS (1650--), DOOR NO. 21/5, RAVENTHIRA OIL MILL COMPOUND, CUMBUM ROAD, THENI - 625531, TAMIL NADU - 625531
PH :9047033678.

TELANGANA**KHAMMAM**

263. EXCEL AUTO CARE (1043--), RAPARTHI NAGAR, BYPASS ROAD, KHAMMAM - 507001, - 507001
PH :9848156363.

UTTAR PRADESH**ALIGARH**

264. KAPIL AUTOMOBILES (1344--), OLD KHURJA BUS STAND, G.T.ROAD, ALIGARH(U.P.), - 202002
PH :9837007636.

265. KAR SCAN CENTRE (449--), RAMGHAT ROAD, KWARS, ALIGARH-202 002, - 202002
PH :8937000111.

ALLAHABAD

266. KAY CEE AUTOMOBILES (2155--), 72/60 L.B. SHASTRI MARG, ALLAHABAD, - 211001
PH :9415317225.

BABUGARH

267. GURUNANAK AUTOMOBILES (5977--), NH- 9, VILL SIMROLI , BABUGARH CANTT., DISTRICT- HAPUR, UTTAR PRADESH - 245102

BAGHPAT

268. KAUSHIK MOTORS (4473--), PLOT NO 525, DELHI SAHARANPUR ROAD,PALI, BAGHPAT, UTTAR PRADESH 250609 - 250609
PH :9837800582.

BALRAMPUR

269. D M AUTOMOBILES (3933--), NEAR S.P.AWAS, GONDA ROAD, BAHADURAPUR, DISTT: BALRAMPUR, UTTAR PRADESH - 271201 - 271201
PH :9415071840.

BARAUT

270. SIGNET AUTOMOBILES (4441--), NEAR INDUSTRIAL POLICE CHOWKI, DELHI ROAD, BARAUT-250611, DISTT BAGHPAT (U.P.) - 250611
PH :8218779429.

BIJNOR

271. SARDAR MOTORS (4671--), DELHI HIGHWAY ROAD , 4TH KM MILE STONE , BIJNOR - 246701, UTTAR PRADESH - 246701
PH :9837265076.

BULANDSHAHR

272. DELHI AUTO ENGRS (1351--), PLOT NO-106, NEAR TAFE TRACTOR AGENCY, NEAR CHANDPUR VILLAGE, DELHI ALIGARH BYPASS ROAD, BULANDSHAHR (UP) 203001 - 203001

CHANDPUR

273. BHARTI AUTOMOBILES (1777--), DHANORA ROAD, CHANDPUR, DISTT. BIJNOR, (U.P.) - 246725
PH :9837380551.

DADRI

274. NATIONAL MOTOR AGENCY (5143--), NOIDA ROAD , DADRI -203207, DISTRICT - GAUTAMBUDH NAGAR , UTTAR PRADESH - 203207

DEORIA

275. CLASSIC MOTORS (2971--), D-13/14 INDUSTRIAL ESTATE, OPPOSITE RTO OFFICE, GORAKHPUR ROAD, DEORIA-274 001 (U.P.) - 274001
PH :9415313939.

DHAMPUR

276. AUTAR AUTOMOBILES (4846--), NOORPUR ROAD, DHAMPUR-246761, DISTRICT-BIJNOR, UTTAR PRADESH - 246761
PH :7017211986.

FARUKHABAD

277. APOORVA MOTORS (4675--), SATANPUR MANDI ROAD, FARRUKHABAD, DISTRICT FARRUKHABAD, UTTAR PRADESH - 209625
PH :9044498958.

FIROZABAD

278. AMAN MOTORS (4366--), USAYANI CHAURAHA, RAJA KA TAAL, BYE PASS ROAD, FEROZABAD, UTTAR PRADESH - 283103
PH :9837500220.
279. GOVIND AUTOMOBILES (1739--), NH-2, INFRONT OF SUB POWER STATION, MODHA, ASFABAD CHAURAHA, FIROZABAD, UTTAR PRADESH, 283203 - 283203
PH :9837169332.

GHAZIABAD

280. KRISHNA AUTOMOBILES (5356--), 101.LAL KUAN ,SHIV MANDIR , BULANDSHAHR ROAD , DISTRICT - GHAZIABAD, UTTAR PRADESH - 201009
281. S P MOTORS (4973--), HAPUR BYPASS ROAD, MEHRAULI, GHAZIABAD, - 201001

GONDA

282. AMAN MOTORS (3858--), PORTER GANJ, LUCKNOW ROAD, GONDA, UTTAR PRADESH - 271001
PH :9415120101.

GREATER NOIDA

283. KUMAR MOTORS (8926--), M-8, SITE-5, UPSIDC, KASNA INDUSTRIAL AREA, GREATER NOIDA, DISTRICT-GOUTAM BUDH NAGAR, UTTAR PRADESH - 201312

HAPUR

284. SRASHTI MOTORS (3076--), NEAR HDFC BANK, DELHI ROAD, HAPUR, (U.P.) -245 101 - 245101

HARDOI

285. TAYAL AUTOMOTIVES (4265--), SOHRA KOTHI, BAWAN CHUNGI, HARDOI-241001, - 241001
PH :9415149951.

HATHRAS

286. RADHEY RADHEY AUTOMOBILES (4344--), NEAR BUS STAND, AGRA ROAD, HATHRAS-204101, - 204101
PH :9897069159.

KANNAUJ

287. SARALA AUTO CARE (5854--), G.T. ROAD,KANNAUJ, DISTRICT-KANNAUJ, UTTAR PRADESH, - 209725
PH :9918692324.

KHALILABAD

288. RATAN MOTORS (5645--), NEAR VAISHNO MATA MANDIR, CHOTI SARAULI, NH- 27, KHALILABAD, UTTAR PRADESH - 272175
PH :9621294899.

KHATAULI

289. EAGLE MOTORS (5142--), OPPOSITE EW ROADWAYS , G.T. ROAD. NH -58.KHATAULI, DISTRICT - MUZAFFARNAGAR, UTTAR PRADESH - 251201
PH :9997039786.

KHEKRA

290. KALASH MOTORS (5767--), OPP TEHSIL ,DELHI BAGHPAT ROAD, KHEKRA-201101, DISTRICT-BAGHPAT, UTTAR PRADESH - 250101
PH :9760027001.

KOSIKALAN

291. ADITYA MOTORS (1940--), IOC PUMP, NATIONAL HIGHWAY, KOSIKALAN, (U.P.) - 281403
PH :9837050778.

LAMBHUA BAZAR

292. VIKRAM MOTORS (3729--), LAMBHUA BAZAR, SULTANPUR (DIST.), UTTAR PRADESH-222 302, - 222302
PH :9450215996.

LONI

293. SAMBHAV AUTOMOBILES (5168--), 31.RURAL INDUSTRIAL ESTATE , ARYA NAGAR INDUSTRIAL AREA, MAIN DELHI SHAHRANPUR HIGHWAY, UTTAR PRADESH - 201102

LUCKNOW

294. B.K. MOTORS (2537--), KALYANPUR, RING ROAD, OPP. CARRIER CONVENT BOARD, LUCKNOW-226 015 - 226015
PH :9335908130.
295. V.S. MOTORS (4745--), RAMADHIN SINGH INTER COLLEGE CAMPUS, BABU GANJ, LUCKNOW-226007, UTTAR PRADESH - 226020
PH :9984749000.

MATHURA

296. SHREE GOPAL AUTOMOBILES (5664--), DELHI BYE PASS ROAD,NEAR GOKUL RESTAURANT, MATHURA - 281001, DISTRICT - MATHURA, UTTAR PRADESH - 281001
PH :9412726760.

MEERUT

Maruti Authorized Service Station (AS ON 31.01.2026)

297. KRISHNA AUTOMOBILES (5573--), PLOT NO D-10,SHRADHA PURI, KANKARKHERA - MEERUT, DISTRICT - MEERUT, UTTAR PRADESH - 250001
PH :9927241738.

MIRZAPUR

298. PRABHAT MOTORS (4131--), NH-7 REWA ROAD, CHANDAIPUR LAKHAMPUR, MIRZAPUR, U P - 231309
PH :9838940382.

NAJIBABAD

299. SETHI MOTORS (4557--), C/O SETHI BOARD INDUSTRIES LIMITED, OPP. HINDUSTAN COCO-COLA BOTTLING PLANT, NAGINA ROAD, NAJIBABAD-246763, DISTT. BIJNOR (UTTAR PRADESH) - 246732
PH :9837590800.

NOIDA

300. RAHUL MOTORS (4662--), A-59 SECTOR-80, PHASE-II, NOIDA-201303, UTTAR PRADESH - 201305
301. SKUNIVERSE AUTOMOBILE PRIVATE LIMITED (8922--), C-2 SECTOR 63, NOIDA - 201301, - 201301

OBRA

302. APPRECIATE SERVICES (4678--), BILLI RAILWAY STATION ROAD, OBRA, SONEBHADRA, UTTAR PRADESH - 231219
PH :8765833557.

PILKHUWA

303. SHREE BANKEY BIHARI MOTORS (6025--), NH-24,DELHI-GARH ROAD,PILKHUWA-245307, DISTRICT-GHAZIABAD, UTTAR PRADESH, - 245304
PH :9045548101.

PRATAPGARH (U.P)

304. SHREE MOTORS (4146--), 10, CHIBILA RANJEETPUR, PRAYAGRAJ AYOODHYA HIGHWAY, NH-330, PRATAPGARH, UTTAR PRADESH, PIN-230001 - 230001
PH :9415229257.

RATH

305. MARUTI POINT (4228--), ROOP NAGAR, BUDHOLIYANA, NEAR BUS STAND, ORAI ROAD, RATH, DIST. HAMIRPUR (U.P.) - 210431
PH :9415331735.

RENUKUT

306. AMBIKA MOTORS (1050--), PATEL NAGAR, MURDHAWA, RENUKUT-231 217, SONBHADRA (U.P.) - 231217
PH :9415251724.

SADABAD

307. ASHU SERVICE CENTRE (8972--), AGRA BYE PASS ROAD, SADABAD-281306, DISTRICT-HATHRAS, UTTAR PRADESH - 281306
PH :9058832658.

SAHIBABAD

308. MOTOR MAGIC AUTO ZONE (4462--), 4/29-A SITE-IV, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD - 201005
309. PANDEIT AUTOMOBILES (4647--), 3/1/1, SITE-IV, INDUSTRIAL AREA, SAHIBABAD, OPP. KAUSHAMBI, GHAZIABAD (UTTAR PRADESH - 201010

SHAHJAHANPUR

310. SUPER AUTO (3135--), OLD DIST. HOSPITAL ROAD, SHAHJAHANPUR (U.P.), PIN-242 001, - 242001
PH :9415035644.

SIKANDRABAD

311. NALIN AUTO (8921--), G.T. ROAD, SIKANDRABAD, DISTT. BULANDSHAHAR, (U.P.) - 203205

VARANASI

312. MISHRA ENGINEERS (4957--), S-4/68, NAI BASTI, PAHARIA, VARANASI-221002, UTTAR PRADESH - 221002
PH :9415301483.

UTTARAKHAND

DEHRADUN

313. HANS LAKHERA MOTORS (5032--), JOGI WALA RING ROAD, NATHAPUR APPARTMNT., NAR NEHRU GRAM POST OFFC, MASSOORI BYEPASS, DEHRADUN - 248001
PH :9897456677.

HALDWANI

314. HARYAL SERVICE CENTRE (5340--), BAREILY ROAD,GUAJALI - TALLI, HALDWANI, DISTRICT - NAINITAL, UTTARAKHAND - 263139
PH :9997200227.
315. ANJNI SERVICE CENTRE (8980--), NEAR BLOCK OFFICE,KALADHUNGI ROAD, LOHRISAL MALLA, CITY - HALDWANI, UTTARAKHAND - 263139, - 263139
PH :9837098899.

KASHIPUR

316. OM MOTORS (4329--), OPPOSITE SWAGAT MANDAP, BAZPUR ROAD, KASHIPUR DIST., U.S. NAGAR (UTTARAKHAND) - 244713
PH :9927500007.

KICHA

317. SHRI SHYAMJI AUTO SERVICE CENTRE (5648--), BAREILY ROAD,KICHA, PIN-263148, DISTRICT-UDHAM SINGH NAGAR, UTTARAKHAND - 263148
PH :9837033377.

RISHIKESH

318. GARHWAL GASOLINE STATION (3639--), , H.P. PETROL PUMP, LAXMAN JHULA ROAD, RISHIKESH-249 201 - 249137
PH :9837377767.

ROORKEE

319. DUM DUM ENGG. WORKS (1343--), GROUND FLOOR, A TO Z TOWER, NEAR SOLANI BRIDGE, HARIDWAR ROAD, ROORKEE, - 247664
PH :8449155002.

RUDRAPRAYAG

320. RAJESHWARI AUTOMOBILES (5669--), BADRINATH ROAD,GHOLTIR, RUDRAPRAYAG, DISTRICT - RUDRAPRAYAG, UTTARAKHAND - 246171
PH :9997217788.

RUDRAPUR

321. CORUS MOTORS (5059--), D1 D2.20/1.NAINITAL ROAD, DISTRICT - U.S. NAGAR , UTTARAKHAND, - 263153
PH :9927500007.

SIMLI

322. PINDER AUTOMOBILES (5527--), PLOT # C6-C9, INDUSTRIAL AREA , NEAR KARNAPRAYAG - SIMLI, UTTARAKHAND - 246449
PH :9627687196.

SITARGANJ

323. SHRI RAM MOTORS (5833--), AGARWAL BHAWAN,BYE PASS ROAD, SITARGANJ-242605, DISTRICT-UDHAM SINGH NAGAR, UTTARAKHAND - 262405
PH :8859485786.

VIKASNAGAR

324. SHREE RAM AUTOMOBILES (5066--), NEAR TEHSIL, CHAKROTA ROAD, VIKAS NAGAR-DEHRADUN, UTTARAKHAND - 248198
PH :9897731200.
325. SOUMYA MOTORS (4272--), CHAKRATA ROAD, BEHIND STATE BANK OF INDIA, VIKASNAGAR, DISTT. DEHRADUN (U.A) - 248198
PH :9412382490.

UTTRAKHAND

RAMNAGAR

326. MAHI AUTOMOBILES (5532--), SHANKARPUR RAMNAGAR, DISTRICT - NAINITAL, UTTARAKHAND, - 244715
PH :9637920845.

WEST BENGAL

ASANSOL

327. WEST END MOTORS (1665--), KALYANPUR SATELITE TOWNSHIP PROJECT, KANYAPUR LINK ROAD, PALASHDIAH MORE, PO-KANYAPUR, PIN-713341, ASANSOL, WESTBENGAL - 713341
PH :8798107541.

BALURGHAT

328. GHOSH AUTOMOBILES (2644--), NARAYANPUR, BALURGHAT, DAKSHIN DINAJPUR-733 101, - 733101
PH :9434963493.

BANDEL

329. CAR HOSPITAL (3675--), 2 NO. NETAJI PARK, G.T. ROAD, (OPP. MILITARY COLONY), BANDEL (WEST BENGAL) - 712102
PH :9038021085.

BIRPARA

330. PARTAP ENGINEERING WORKS (8942--), VILLAGE DEMDIMA, PO-BIRPARA, DISTRICT ALIPURDUAR, WEST BENGAL, PIN -735204 - 735204
PH :9832429319.

COOCH BEHAR

331. PROVA AUTOMOBILES (8936--), NH-17 (FORMERLY NH-31), CHAKCHAKA CHECK POST, P.O. - NILKUTHI BABURHAT, DIST. - COOCH BEHAR, PIN-736156, WEST BENGAL - 736101
PH :9434174309.

DURGAPUR

332. THE QUICKEST (2879--), BANS KOPA, (NEAR PARADISE INN), G.T. ROAD, DURGAPUR-713 212 - 713212
PH :9832165126.

FARAKKA

333. SPEED WHEEL SERVICE CENTRE (1056--), TTS HCC COLONY, FARAKKA, P.O. NABARUN, DISTT. MURSHIDABAD (W.B.) - 742236
PH :9434101917.

HALDIA

334. S.D. REPAIRING CENTRE (2168--), I.O.C. GATE NO.1, P.O. HALDIA OIL REFINERY, HALDIA-721 606, DISTT. MIDNAPORE (W.B.) - 721606
PH :9434021405.

JAIGAON

335. SHAKTI TRADING CO. (770--), M.G. ROAD, JAIGAON-736 182, - 736182
PH :7760808990.

JALPAIGURI

336. S.S. AUTOMOBILES (3664--), ASSAM MORE, JALPAIGURI, WEST BENGAL-735 101, - 735101
PH :943440252.

337. AUTOSTEL (646--), SAKOAJHORA, P.O.
GAIRKATA-735 212, DIST.JALPAIGURI, (W.B.) -
735212
PH :9934111868.

KALYANI

338. GOPAL AUTO SERVICE CENTRE (3373--), B.K.
EXPRESSWAY, BUDHHA PARK, KALYANI-741
235, NADIA (WEST BENGAL) - 741235
PH :9831319161.

KOLKATA

339. MARUTI LINK (1633--), CK-12 SECTOR 2, SALT
LAKE, CALCUTTA-700 091, - 700091
PH :9831180421.
340. NORTH POINT MOTORS PVT. LTD. (344--),
DUTTO BAGAN - 3D/1 BUS TERMINUS, 64/2B
BELGACHIA ROAD, CALCUTTA-700 037, - 700037
PH :9830220069.
341. ULTRA CRAFT (4643--), 103/1B, RAJA DINENDRA
STREET, KOLKATA-700006, WEST BENGAL -
700006
PH :9831313321.
342. ZENITH AUTO (5529--), BHOLA NATH
SARANI, CHINAR PARK, RAJARHAT ,
KOLKATA-700157, DISTRICT - KOLKATA, WEST
BENGAL - 700157
PH :9830643781.
343. DIAL AUTOMOBILES PVT.LTD. (643--), 162A,
PEARY MOHAN ROY ROAD, P.S.: CHETLA,
KOLKATA - 700027 - 700027
PH :9830552191.

KRISHNANAGAR

344. HIGHWAY SERVICE CENTRE (4455--), ASHA
DEEP, N.H-34, KRISHNANAGAR, NADIA-741101,
WEST BENGAL - 741101
PH :9434165494.

MADHYAMGRAM

345. J G BEHAL AUTO (4653--), DOLTALA,
GANGANAGAR, MADHYAMGRAM,
KOLKATA-700129 (WEST BENGAL) - 700129
PH :9831094430.

NARENDRAPUR

346. A.M. AUTOMOBILES (3175--), KAMALGAZI,
NARENDRAPUR, KOLKATA-700 103, (WEST
BENGAL) - 700103
PH :8335860051.

PURULIA

347. BANERJEE AUTO SERVICE (640--), ANABILA
VILLA, RANCHI ROAD, PURULIA.(W.B.), - 723101
PH :9434656942.

RAGHUNATHGANJ

348. AUTO WHEEL (4427--), NH 34, UMARPUR, PO
GHORSALA, DO MURSHIDABAD, WEST
BENGAL, PIN 742235 - 742235
PH :9434101917.

SILIGURI

349. MUM AUTO WORKS (4835--), NEAR DELHI
PUBLIC SCHOOL, PANCHANAI (DAGAPUR),
SILIGURI, WEST BENGAL-734003 - 734003
PH :9832068537.

350. BHAWANI MOTOR GARAGE (4844--),
BIDYASAGAR PALLY, NEAR RISHI BHAWAN,
BURDWAN ROAD, SILIGURI-734405, WEST
BENGAL - 734405
PH :9641162127.

SODEPUR

351. CAR CARE (8986--), B.T. ROAD, SODEPUR, P.O.:
SUKCHAR, 24 PARGANAS (NORTH) - 700115
PH :9674907411.

SRIRAMPUR

352. MARUTI AUTO CENTRE (2167--), 85/18 G.T.
ROAD (WEST), PO : MULLIKPARA, SRIRAMPUR,
HOOGLY-712 203 (W.B.) - 712203
PH :8777417901.

DELHI

DELHI

1. MSM (0883-08-01), F-39,OKHLA INDUSTRIAL
AREA,PHASE-II,NEW DELHI - 110020

TAMIL NADU

CHENNAI

2. MSM (1485-14-01), # 9, (SP),THIRU-VI-KA
INDUSTRIAL ESTATE, GUINDY, CHENNAI -
600032

ARUNACHAL PRADESH**ITANAGAR**

1. HIBRO AUTOMOBILES (7581-75-01), D-SECTOR, DISTT: PAPUMPARE, ITANAGAR - 791111

ASSAM**BARPETA**

2. ROY AUTO ENGINEERING WORKS (7281-72-01), POST OFFICE, BARPETA ROAD, MAIN ROAD , WARD NO.-4, ASSAM - 781315

DULIAJAN

3. B.S. MOTORS (X881-X8-01), NO. 01, BORPOTHAIR TINALI, DULIAJAN. - 786602

BIHAR**PATNA**

4. CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE, PATLIPUTRA , PATNA - 800013

DELHI**DELHI**

5. GALAXY AUTOMOBILES (0881-08-01), 8 INDUSTRIAL AREA,TILAK NAGAR,NEW DELHI, - 110018
6. A M AUTOMOBILES (A UNIT OF BLUE BIRD ENTERPRISES) (0891-08-01), 189-91, ,LAWRANCE ROAD,,DELHI - 110035

HARYANA**BALLABHGARH**

7. ROYAL MOTORS (9R82-9R-01), 21/5, G.T. ROAD, BALLABHGARD, DISTT-FARIDABAD - 121004

MURTHAL

8. MURTHAL AUTO PVT. LTD. (BV81-BV-01), 44 HSIIDC, MURTHAL - 131027

PANCHKULA

9. CARE TAKER (K381-K3-01), PLOT NO. 36, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113

PANIPAT

10. VIJAY MOTORS (D381-D3-01), PLOT# 136, INDUSTRIAL AREA, PHASE-1 - 132103

SAHA

11. PUNJAB MOTOR & ENGG WORKS (1881-18-01), NH-73, SHAHZADPUR ROAD, SAHA, DISTT.- AMBALA - 133104

YAMUNANAGAR

12. HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA - 135001

HIMACHAL PRADESH**JASSUR**

13. CLASSIC MOTOR GARAGE (8H81-8H-01), TEHSEEL NOOPUR, KANGRA, JASSUR, HIMACHAL PRADESH - 176201

JAMMU AND KASHMIR**SRINAGAR**

14. RAHIM MOTORS (1281-12-01), SIDGO INDUSTRIAL AREA, RANGRETH, SRINAGAR - 241384

JHARKHAND**RANCHI**

15. PODDAR CAR WORLD PVT LTD (5181-51-01), 47, 48 , KOKAR INDUSTRIAL AREA, RANCHI. - 834001

KERALA**PATHANAMTHITTA**

16. AGT MOTORS (W881-W8-01), AGT TOWERS, PUTHENPEEDI, OMALLUR, PATHANAMTHITTA - 689640

MADHYA PRADESH**NEEMUCH**

17. AUTO SCAN (3T81-3T-01), MHOW ROAD,NEEMUCH,MADHYAPRADESH. - 454775

MAHARASHTRA**PUNE**

18. MARUTI CARE POINT (1983-19-01), 17/1, RAHATANI, AUNDH-CHINCHWAD ROAD. OPP PCMC D' PRABHAG KARYALAY, NEXT TO HP SUBHIKA PETROL PUMP, RAHATNI, PUNE, MAHARASHTRA - 411017

THANE

19. THANAWALA MOTOR AGENCY (P) LTD (3981-39-01), B-31, OPPOSITE ITI,WAGLE ESTATE MAIN ROAD,WAGLE ESTATE,THANE - 400007

ODISHA**KEONJHAR**

20. KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA - 758001

PUNJAB**BATALA**

21. CITI AUTOMOBILES (V581-V5-01), NEAR GURUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA. - 143505

MOGA

22. SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI , G.T. ROAD, MOGA - 142001

RAJASTHAN**JAIPUR**

23. KATARIA AUTOZONE PVT LTD (1181-11-01), 1-A ; NARAYANPURI,KATARIA KRISHI FARM,SIRSI ROAD,JAIPUR - 302034

TELANGANA**HYDERABAD**

24. RETOUCH (1082-10-01), H.NO. 3-67/A, B, C, D NEW NAGOLE COLONY,NAGOLE VILLAGE, HYDERABAD,NAGOLE, HYDERABAD - 500068

UTTAR PRADESH**ALIGARH**

25. VINEET MOTORS (B681-B6-02), PLOT NO.D-138 &139, SECTOR-1, TALA NAGARI, RAMGHAT ROAD, ALIGARH - 202001

GHAZIABAD

26. KAP AUTOMOBILES PVT. LTD. (5981-59-01), D-BLOCK SHASHTRI NAGAR,HAPUR ROAD,GHAZIABAD
27. CHIRAG AUTOMOBILES (5983-59-01), PLOT NO. B1, SECTOR-B3, TRONICA CITY, GHAZIABAD - 201102

LUCKNOW

28. K M AUTOCRAFT (1381-13-01), 76/3, BARAURA, HUSSAIN BARI, HARDOI ROAD, LUCKNOW - 226003

MEERUT

29. UNIQUE CAR SCANNERS (4882-48-01), PLOT NO:514/4, SURAJ KUND ROAD, MEERUT, - 250001

NOIDA

30. MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8 & 9,SECTOR-8,NOIDA
31. MOTORCRAFT INDIA PVT LTD (A181-A1-02), C-125,SECTOR-63,NOIDA,
32. JKM MOTORS (A184-A1-01), A-25,SECTOR 9,DISTT. GAUTAM BUDH NAGAR,NOIDA - 201301
33. FAST TRACK AUTOCARE(INDIA) PVT. LTD. (A185-A1-01), A-13, SECTOR 63, NOIDA, G.B. NAGAR - 201301

SAHIBABAD

34. FAST TRACK SERVICES (M981-M9-01), PLOT NO.40/1B/2, 3 & 4, SITE 4, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD (U.P.) - 201010

UNNAO

35. VISHAL WHEELERS PVT. LTD. (1382-KL-01), PLOT NO. 1164, KANPUR-LUCKNOW BYE PASS, UNNAO, UTTAR PRADESH. - 209801

VARANASI

36. PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2, CLUB ROAD, VARANASI - 221002

WEST BENGAL**KOLKATA**

BATTERY LABEL SYMBOL MEANINGS

	No smoking, no naked flames, no sparks		Battery acid
	Shield eyes		Note operating instructions
	Keep away from children		Explosive gas

Prepared by
MARUTI SUZUKI INDIA LIMITED

Service Division
July, 2026

Part No. 99011M76T12-74W
Printed in India

For 24 X 7 assistance, contact Toll Free number 1800 102 6392[#] / 1800 200 6392[#]
(NEXA)

No STD code to be prefixed.

Service Division

MARUTI SUZUKI INDIA LIMITED

Palam Gurgaon Road, Gurgaon - 122 015 (Haryana)

www.marutisuzuki.com