



OWNER'S MANUAL


For vehicle fitted with CNG fuel system, use Tour M CNG Supplementary Owner's Manual

Refer for vehicle usage at all times.

Contains Warranty policy and important information on Safety, Operation & Maintenance.

Part No. 99011M75UE1-74W
March, 2026 **(ENG.)**

This Owner's Manual applies to TOUR M models. produced by
MARUTI SUZUKI INDIA LIMITED.

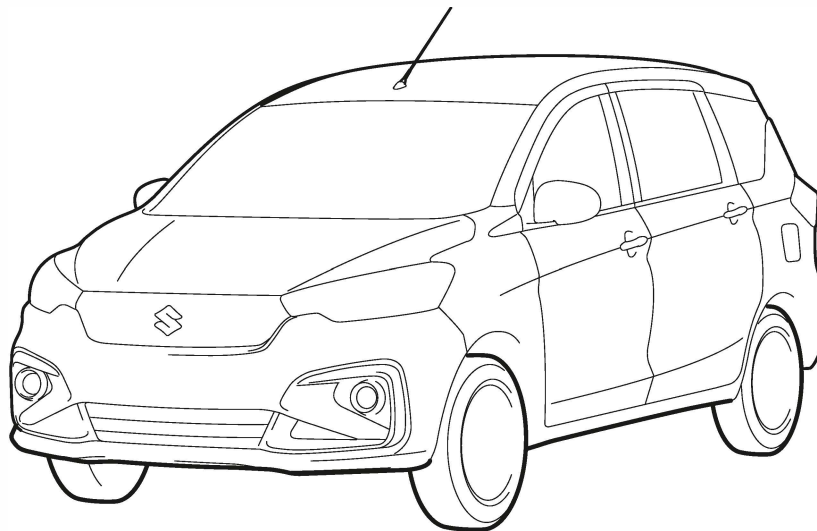

Note : The illustrated Model is one of the TOUR M series
Accessories shown in the picture are not part of standard equipment

© Copyright 2026 **Maruti Suzuki India Limited**. All rights reserved.
No part of this manual can be reproduced in any manner whatsoever or transmitted
in any form or by any means without prior written consent of Maruti Suzuki India Limited.

FOREWORD

The digital Owner's Manual is an essential part of your vehicle a rich document which familiarizes you with the vehicle by providing information such as features, warnings, operations and equipment description etc. Please read this manual carefully before operating your new MARUTI SUZUKI vehicle and review the manual from time to time. It is recommended to download this manual (from the "Maruti Suzuki" mobile application with your registered mobile number) and save a soft copy of the same for easy access all times. Please visit MARUTI SUZUKI authorised workshop for availing any service.

To prolong the life of your vehicle and reduce maintenance cost, the periodic maintenance must be carried out according to "PERIODIC MAINTENANCE SCHEDULE" described in "INSPECTION AND MAINTENANCE" section of this manual. It is essential for preventing trouble and accidents to ensure your satisfaction and safety.

Daily inspection and care as per "DAILY INSPECTION CHECKLIST" described in the "OPERATING YOUR VEHICLE" section of this manual is essential for prolonging the life of the vehicle and for safe driving.

Vehicle and the available features/accessories therein should be used and plied by the owner/user in accordance with the applicable legal requirements.

MARUTI SUZUKI INDIA LIMITED believes in conservation and protection of Earth's natural resources.

To that end, we encourage every vehicle owner to recycle, trade-in or properly dispose of, as appropriate, used Engine Oil, coolant and other fluids, batteries and tyres etc.

MARUTI SUZUKI INDIA LIMITED

All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. MARUTI SUZUKI INDIA LIMITED reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.

This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

IMPORTANT

⚠ WARNING/ ⚠ CAUTION/NOTICE/NOTE

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words **WARNING**, **CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay particular attention to messages highlighted by these signal words:

⚠ WARNING

Indicates a potential hazard that could result in death or serious injury.

⚠ CAUTION


Indicates a potential hazard that could result in minor or moderate injury.

NOTICE

Indicates a potential hazard that could result in vehicle damage.

NOTE:

Indicates special information to make maintenance easier or instructions clearer.

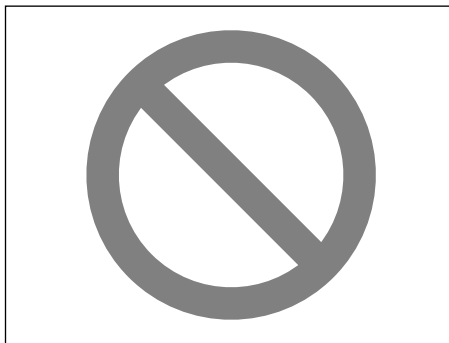

75F135

The circle with a slash in this manual means "Don't do this" or "Don't let this happen".

NOTE:

- Words like *car*, *model/variant* are invariably used in this manual to denote the "Vehicle".
- Pictorial representations used in this manual are for reference purposes only.

MODIFICATION WARNING

⚠ WARNING

Do not modify your vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification shall not be covered under warranty.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios may cause electronic interference with your vehicle's ignition system, resulting in vehicle performance problems. Consult your Maruti Suzuki authorized workshop or qualified service technician for advice on installing such mobile communication equipment.

NOTICE

The diagnostic connector of your vehicle is prepared only for the specific diagnostic tool for inspection and service purpose. Connecting any other tool or device may interfere with electronic parts operations and cause running out of batteries.


“WARNING”



Vehicle may break-down, meet with an accident or catch fire due to

1. Installation of
 - High wattage bulbs
 - Non genuine lamps / horns
 - Modified suspension / wheels
 - Non genuine parts / accessories etc.
2. Retrofitment of LPG / CNG fuel systems/kits.
3. Usage of domestic LPG.
4. Short circuiting due to tampering of wiring harness.

CAUTION: DO NOT STORE OR CARRY INFLAMMABLE MATERIALS IN THE VEHICLE.

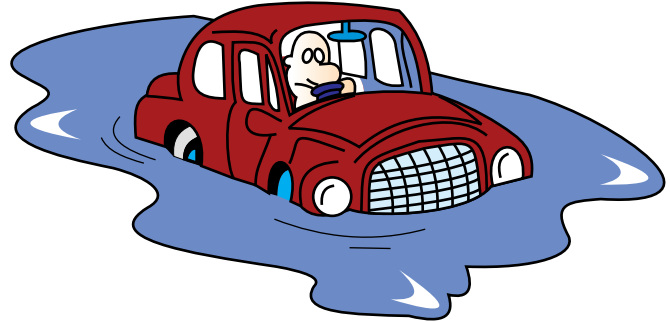

Avoid driving into or starting the vehicle in a heavily water logged area. Vehicle may break-down or engine may fail due to

1. Water entry into the engine (which may lead to hydrostatic lock).
2. Short circuiting of the electrical systems.

If the vehicle is stuck in deep water, do not start / crank the vehicle until the level of water drops below the level of exhaust pipe.

NOTE:

IF THE VEHICLE IS SUBMERGED IN WATER, REPORT TO THE NEAREST AUTHORIZED WORKSHOP.

“CAUTION”

1. Retro-fitment of LPG / CNG kit may deteriorate vehicle performance, reduce engine & engine related component's life and also warranty will be null and void for such vehicles.
2. Do not use domestic LPG/LPG cylinder for your factory fitted LPG vehicles.
3. Usage of domestic LPG for running vehicles is prohibited as per law.
4. Do not remove company fitted LPG/CNG kit to install some other kit. It may affect vehicle performance and may cause fire.
5. Drive slowly on wet roads. Tires may slip while braking at higher speeds due to aquaplaning. (reduced contact area between tire and road due to presence of water)
6. Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon-monoxide in cabin and may lead to suffocation or breathing problems.
7. Do not park vehicle on dry leaves or grass. This may lead to fire due to hot catalytic converter, igniting the dry leaves/grass.
8. If the vehicle is equipped with CNG/LPG, ensure availability of fire extinguisher in the vehicle all the time.
9. Always wear seat belt at all the times.
10. Do not use mobile phone while driving.
11. Avoid Smoking in the car, live bud thrown in car may cause fire.
12. Do not put any body part under the vehicle when it is supported on a Jack.
13. Do not use non-genuine accessories in your vehicle.
14. Do not fit accessories from unauthorized workshops/sources.
15. Usage of non-approved electrical accessories in your vehicle may result in spark, fire or personal injury.
16. Do not use camphor, incense sticks inside cabin room. Doing so may cause fire.
17. Avoid usage of cellular phones while refueling. Electric current and/or electronic interference from cellular phones can potentially ignite fuel vapors and cause fire.
18. Avoid entry inside vehicle immediately once after you have begun refueling. You can generate a build up of static electricity by touching, rubbing or sliding against any item or fabric capable of producing static electricity. Static electricity discharge can ignite fuel vapors and may causing a fire.
19. Do not check the engine room/ open the hood near the fire area (Outside the vehicle). Fuel, washer fluid, etc. are flammable oils that may cause fire.
20. Avoid driving when vehicle has met with an accident. Before driving, Please contact with authorized MSIL dealership.

To experience and use the Digital Owner's Manual, download Maruti Suzuki application



Maruti Suzuki application ensures a hassle free ownership experience. Get easy access to all the services and information you need by downloading the application



How to download Owners manual from Maruti Suzuki application

Step 1: Download the “Maruti Suzuki” mobile application from the Apple App Store or Google Play Store.

Step 2: Enter your registered mobile number and verify with the OTP received via SMS.

Step 3: Tap the “Offerings” icon on the bottom bar.

Step 4: Select “Owner’s Manual” to access your car’s digital manual.

Step 5: Tap on download icon at top right of the page to download the Owner's Manual.

Now, the Owner's Manual is available on your mobile phone for reference at all times.

(For assistance, contact Maruti Suzuki authorized workshop)

WARRANTY POLICY

Maruti Suzuki India Limited (hereinafter called "Maruti Suzuki"), warrants that each new Maruti Suzuki vehicle distributed in India by Maruti Suzuki and sold by a Maruti Suzuki authorized dealer will be free, under normal use and service, from any defects in material and workmanship at the time of manufacture SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS:

(1) Qualification:

To qualify for this warranty the vehicle must be delivered by a Maruti Suzuki authorized dealer and set-up, and serviced by a Maruti Suzuki authorized workshop.

(2) Term:

The term of this warranty shall be Thirty-Six (36) months or 1,00,000 kilometers (whichever occurs first) from the date of invoice to the first owner, except for the following parts for which the term is as under:

NOTE:

Maruti Suzuki offers warranty for the below parts in vehicle, if equipped, as follows:

- *Lithium-ion battery, Integrated Starter Generator (ISG), Hybrid ECU, Inverter / Converter Unit, Power Management ECU- Sixty (60) months or 1,00,000 kilometers (whichever occurs first).*
- *Hybrid Electric Vehicle (HEV) Battery- Ninety six (96) months or 1,60,000 kilometers (whichever occurs first).*
- *Lead acid battery – Twenty four (24) months or 40,000 kilometers (whichever occurs first).*

(3) Maruti Suzuki Warranty Obligation:

If any defect(s) should be found in a Maruti Suzuki vehicle within the term stipulated above, Maruti Suzuki's only obligation is to repair or replace at its sole discretion any part shown to be defective, with a new part or the equivalent at no cost to the owner for parts or labor, when Maruti Suzuki acknowledges that such a defect is attributable to faulty material or workmanship at the time of manufacture. Such defective parts, which have been replaced, will become the property of Maruti Suzuki. The owner is responsible for any repair or replacements which are not covered by this warranty. The decision of Maruti Suzuki shall be final & binding.

(4) Limitation:

This warranty shall not apply to:

- (a) Normal maintenance service required other than the three free services, including without limitation, oil and fluid changes, consumables, headlight aiming, fastener retightening, wheel balancing, wheel alignment and tyre rotation, cleaning of injectors, adjustments of clutch and valve clearance.
- (b) The normal wear of parts including without limitation, bulbs, tyres* and tubes, spark plugs, belts, hoses, filters, wiper blades, brushes, contact points, fuses, clutch disc, brake shoes, brake pads, cable and all rubber parts (except oil seal and glass run).
(* - If there is a complaint related to tyre, the customer may contact respective tyre manufacturer.)
- (c) Any vehicle which has been used for competition, rallies or racing.
- (d) Any repairs or replacement arising from accidents or collision.

-
- (e) Any defect/ damage caused by misuse, negligence, abnormal use, insufficient care, vandalism, theft, riot, fire, flooding - not limited to entry of water in the components resulting in engine seizure, hydrostatic lock, etc. or external damages to the body/ components.
 - (f) Any damage resulting due to usage of adulterated fuel/ lubricants/ oil/ coolant/ fluids/ polishing products and fuel/ lubricants/ oil/ coolant/ fluids used other than those specified in the Owner's Manual.
 - (g) Any vehicle which has been modified or altered, including without limitation, the installation of performance accessories, enlargements of lights, other changes and external/ consequential reasons.
 - (h) Any vehicle on which parts or accessories not approved by Maruti Suzuki (Non-MSGA, Non-MSGP) have been used.
 - (i) Any vehicle which has not been operated in accordance with the operating instructions in this Owner's Manual.
 - (j) Any vehicle which has not received the service inspections prescribed in this Owner's Manual.
 - (k) Any vehicle which has been assembled, disassembled, adjusted or repaired by other than a Maruti Suzuki authorized workshop.
 - (l) Any vehicle which has been used for purposes other than what it was designed for.
 - (m) Any damage or deterioration caused by airborne fallout, industrial fallout, acid rain, hail or hail storm, wind storm, lightning, bird droppings, rodents bite / rat bite and such other thing that result in damage to the vehicle.
 - (n) Insignificant defects / noise which do not affect the function of the vehicle including without limitation, sound, vibration and fluid seep.
 - (o) Any natural wear and tear including without limitation, ageing, wear & tear or deterioration such as discoloration, fading, deformation or blurring and fabric discoloration.
 - (p) Installation and usage of domestic LPG gas/LPG Cylinder.
 - (q) V-belts, hoses and gas leaks.
 - (r) Any vehicle retrofitted with LPG/CNG kits.
 - (s) Repainting including patchwork, bodywork and mouldings and interior trims.
 - (t) Corrosion, rusting of body parts and/ or components.
 - (u) Any vehicle on which odometer has been changed unauthorisedly or odometer reading has been modified/ tampered with/ or not matching the service records.
 - (v) The damage(s) caused to the vehicle being unattended despite knowledge that the defect exists and ignorance by the owner/ user of the vehicle.
 - (w) Any damage(s) caused to vehicle including battery/ tyre due to improper maintenance or prolonged parking of the vehicle in idle condition for long duration.
 - (x) Any vehicle on which the retro-fitment is not authorized and/ or type approved as per the standards prescribed by the relevant authority including but not limited to Automotive Standards of India.
 - (y) Any vehicle on which the retro-fitment is such which directly or indirectly causes any damage to the vehicle or affects the functions of the vehicle in any manner whatsoever.

(5) Extent of Warranty:

This warranty is the entire written warranty given by Maruti Suzuki for Maruti Suzuki vehicles and no dealer or its or his agent or employee is authorized to extend or enlarge this warranty and no dealer or its or his agent or employee is authorized to make any oral warranty or representation or assurance on behalf of Maruti Suzuki.

Maruti Suzuki reserves the right to add any improvements or change the design of any model at any time with no obligation to make the same changes on units previously sold.

(6) Warranty Service:

To obtain warranty service, the complete vehicle must be presented at the owner's expenses to Maruti Suzuki authorized workshop.

The customer shall be responsible for his belongings or accessories fitted in the vehicle at the time of presenting the vehicle for service and no claim shall be entertained in any manner under any circumstances.

(7) Owner's Warranty Obligations:

NOTICE
The owner shall not use the vehicle in a damaged condition and report the same immediately to the nearest Maruti Suzuki authorized workshop. This would result in early inspection and repair of the vehicle and any possible harm to the person or aggravation of damage to the vehicle can be prevented.

It is responsibility of each owner to:

- Have performed, at his own expenses, by a Maruti Suzuki authorized workshop all the service inspections specified in the Owner's Manual described in "INSPECTION AND MAINTENANCE" section.
- Should you resell the vehicle, please guide the new users/owners to download this manual (from the "Maruti Suzuki" mobile application with your registered mobile number). Also the soft copy of the manual must be passed on to new users/owners when resold or otherwise transferred.

If the Owner's Manual is lost due to any reason, the owner or user may download a soft copy of the same (from the "Maruti Suzuki" mobile application with the mobile number) and save it for easy access at any point of time".

(8) Disclaimer of Consequential Damage:

Maruti Suzuki assumes no responsibility for loss of vehicle, loss of time, inconvenience or any other indirect incidental or consequential damage resulting from the vehicle not being available to the owner because of any defect covered by this warranty.

(9) Change of Owner

Even if ownership of the vehicle changes, the remaining warranty period is effective for the new owner.

This warranty is applicable only in India and not transferable to any other country.

NOTE:


Notwithstanding the warranty obligations, Maruti Suzuki may reuse reworked (refurbished) parts for undertaking rectification of recalled vehicles in terms of applicable laws.

TABLE OF CONTENTS

FOR SAFE DRIVING	1
BEFORE DRIVING	2
OPERATING YOUR VEHICLE	3
DRIVING TIPS	4
OTHER CONTROLS AND EQUIPMENT	5
INSPECTION AND MAINTENANCE	6
EMERGENCY SERVICE	7
APPEARANCE CARE	8
SPECIFICATIONS	9
SERVICE NETWORK	10


FOR SAFE DRIVING

Floor Mats	1-1
Front Seats	1-1
Rear Seats	1-3
Seat Belts and Child Restraint Systems	1-8
Child restraint system	1-20
Supplemental Restraint System (airbags)	1-27
Exhaust Gas Warning	1-40

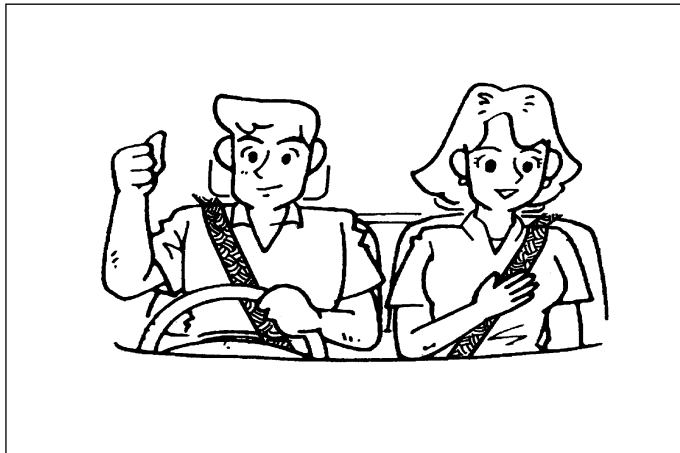

65D231S

Floor Mats

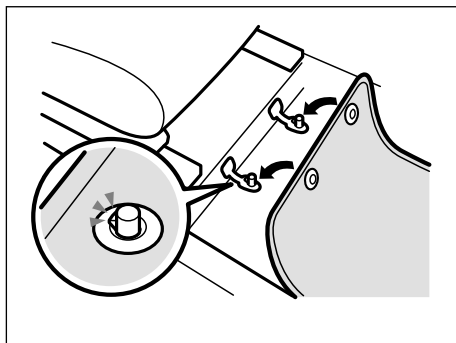

60MK020

To prevent the driver's side floor mat from sliding forward and possibly interfering with the operation of the pedals, MARUTI SUZUKI genuine floor mats are recommended.

Whenever you put the driver's side floor mat back in the vehicle after it has been removed, be sure to hook the floor mat grommets to the fasteners and position the floor mat properly in the footwell.

When you replace the floor mats in your vehicle with a different type such as all-weather floor mats, we highly recommend using MARUTI SUZUKI genuine floor mats for proper fitting.

WARNING

Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.

Description of warning label



- Check that the floor mat grommets are hooked to the fasteners.



- Never stack floor mats because it may prevent from securing to the fasteners and cause sliding forward.



- For more details, read this owner's manual.

- Never use a floor mat which does not fit the floor contours.

Front Seats

Seat Adjustment

WARNING

Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Make sure that the driver's seat and seatback are properly adjusted before you start driving.

WARNING

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, make sure that the seats are adjusted before the seat belts are fastened.

WARNING


Do not place any object under the front seat. If an object becomes caught under the front seat, the following may occur.

- The seat will not be latched.
- Also the lithium-ion battery located under the front left side seat, in a model equipped with ENG A-STOP system, will be damaged.

⚠ WARNING

Do not leave cigarette lighters or spray cans on the floor. If a cigarette lighter or spray can is on the floor, it may light accidentally when luggage is loaded or the seat is adjusted, causing a fire.

Adjusting Seat Position

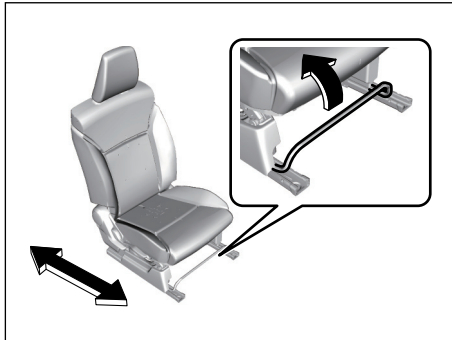

73R0032

The adjustment lever for each front seat is located under the front of the seat. To adjust the seat position, pull up on the adjustment lever and slide the seat forward or rearward.

After adjustment, try to move the seat forward and rearward to ensure that it is securely latched.


Adjusting Seatbacks

⚠ WARNING

All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

NOTE:


To operate the seat back smoothly, pull the seat back adjustment lever in upward direction. Ensure to move seat back only after lever is moved to fully up position. After adjustment of seat back, release the lever gently. Check that seat back is locked by moving it forward and backward.

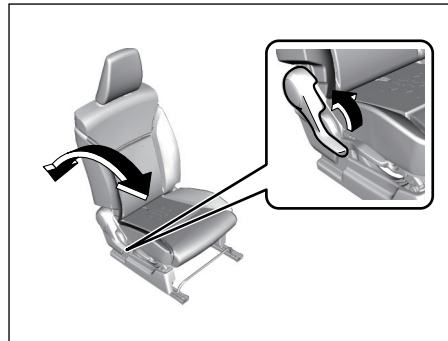

72R0133

To adjust the seatback angle of front seats, pull up the lever on the outboard side of the seat, move the seatback to the desired position, and release the lever to lock the seatback in place.

Head Restraints

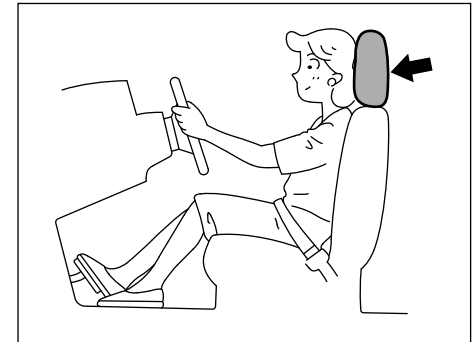

63J246

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident. Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.


FOR SAFE DRIVING

WARNING

- Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.

NOTE:

It may be necessary to recline the seat back to provide enough overhead clearance to remove the head restraint.

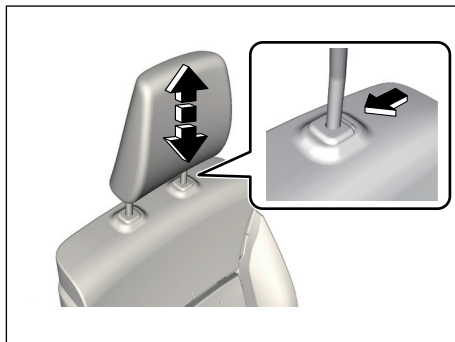

73R0035

To raise the front head restraint, pull upward on the restraint until it clicks. To lower the restraint, push down on the restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.

Rear Seats Seat Adjustment

WARNING

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, make sure that the seats are adjusted before the seat belts are fastened.

Adjusting Seat Position (for 2nd row seats)



75U74EN010004

The adjustment levers for 2nd row seats are located under the front of the seats. To adjust the seat position, pull up on the adjustment lever and slide the seat forward or rearward.

After adjustment, try to move the seat forward and rearward to ensure that it is securely latched.

NOTICE

When the 3rd row seat is folded forward, adjust the 2nd row seat not to reach the 3rd row seat.

Adjusting Seatbacks


WARNING

All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

NOTE:

To operate the seat back smoothly, pull the seat back adjustment lever in upward direction. Ensure to move seat back only after lever is moved to fully up position. After adjustment of seat back, release the lever gently. Check that seat back is locked by moving it forward and backward.


For 2nd row seats

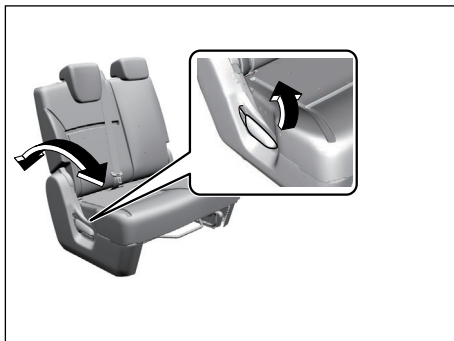

75U74EN010005

To adjust the seatback angle of 2nd row seats, pull up the lever on the outboard side of the seat, move the seatback to the desired position, and release the lever to lock the seatback in place.

For 3rd row seats

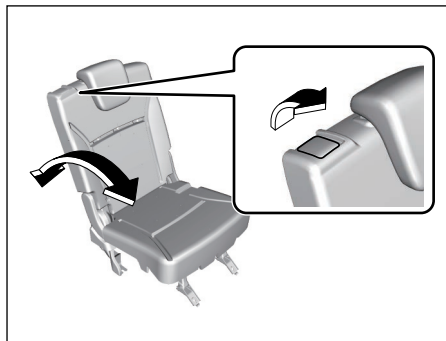

73RS017

To adjust the seatback angle of 3rd row seats, lift up the release lever, move the seatback to the desired position, and return the lever to lock the seatback in place.

WARNING


Do not pull down the backrest more than required, the seat belt cannot show full effect.

NOTICE

Adjust the 3rd row seat after getting down from the seat. If the release lever is pulled while being seated, the backrest will suddenly collapse to max angle.

Pull the release lever fully. If the seat is made to collapse without the lock being released, movement of lock will become heavy.

Walk-in Type Seats (for 2nd row seats)

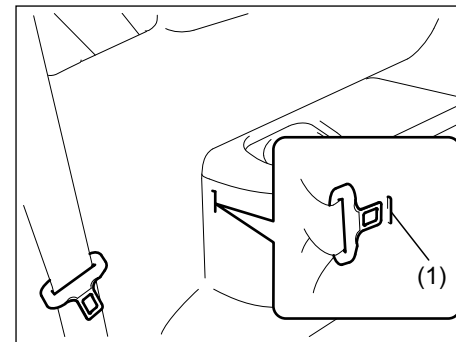


73R0038

NOTE:

To enter to or exit from the 3rd row seat, insert the tongue plate of the buckle into the part (1) before moving the 2nd row seat.

FOR SAFE DRIVING

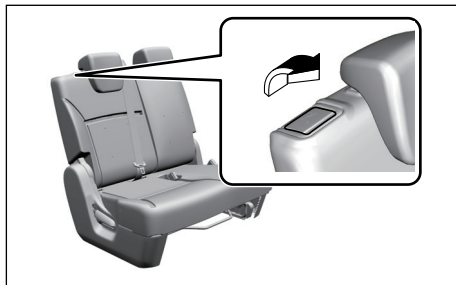

75U74EN010006

The walk-in type seat can be moved to provide easy entry to and exit from the 3rd row seats. When the release lever is pulled up, the seat back falls down to the specified angle and the walk-in seat can be moved.

At this time, do not apply excessive force to the seat back. The seat back may be damaged.

WARNING

- After using the walk-in function, be sure to return the folded seat back to an upright position.
- Before returning a walk-in seat to its normal seating position, make sure that the feet of the passenger in the 3rd row seat are out of the way.
- After returning the seat to its normal seating position, make sure it is securely latched.

NOTICE

Release lever is meant for easy entry purpose only. Not to be used for adjusting seatback.

Head Restraints

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident.

WARNING


- Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.

NOTE:

It may be necessary to fold forward the seatback to provide enough overhead clearance to remove the head restraint.


Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

2nd row seats (outer position)

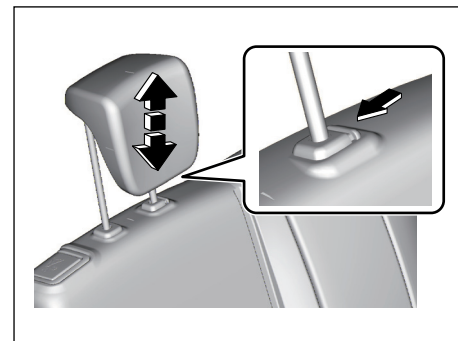

72R0134

2nd row seats (center position)

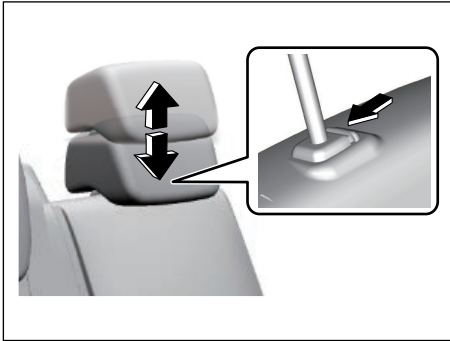


75U74EN010007

When using the rear center head restraint, pull it up and lock it securely before driving.

WARNING

Do not allow anyone to sit in the rear center seat with the rear center head restraint removed or in stowed position.

3rd row seats

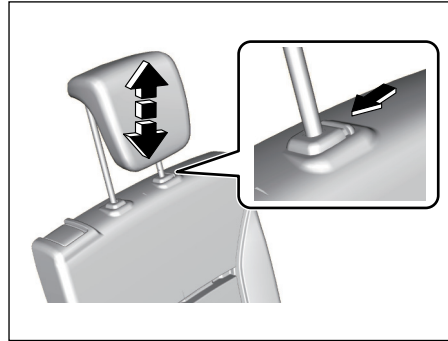

73R0040

To raise the rear head restraint, pull upward on the restraint until it clicks. To lower the restraint, push down on the restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.


When installing a child restraint system, raise the head restraint to the most upper position.

Folding Rear Seats

The rear seat of your vehicle can be folded forward to provide additional cargo space.

2nd row seats

To fold the 2nd row seat forward:

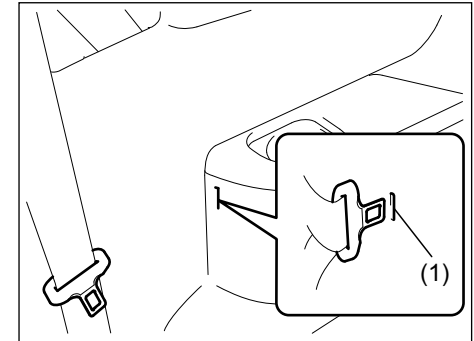

73R0038

- 1) Insert the tongue plate of the buckle unto the part (1)

FOR SAFE DRIVING

NOTICE

- When you move a seatback, make sure the tongue plate of the buckle is inserted in the seat belt catch hole so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.
- Make sure the belt webbing is not twisted.

- 2) Lower the head restraint fully.
- 3) Store the seat belt buckles in the seat cushion slit.



75U74EN010003

- 4) Pull up the lever on the outboard side of the seat, and fold the seatback forward.

NOTICE

When the 2nd row seat head restraint reaches the front seatback, slide the front seat forward.


⚠ WARNING

If you need to carry cargo in the passenger compartment with the 2nd row seatback folded forward, be sure to secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatback.

To return the seat to the normal position, follow the procedure below.

NOTICE

When you move a seatback, make sure the tongue plate of the buckle is inserted in the seat belt catch hole so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

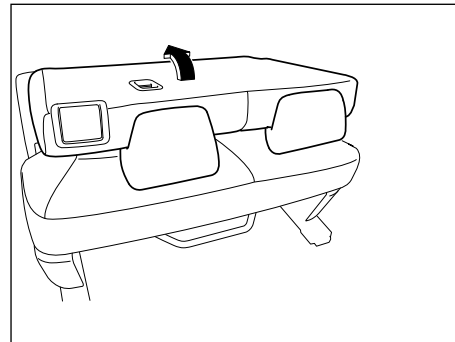

75U74EN010008

Raise the seatback until it locks into place.

NOTE:


When the seatback is locked in the folded position, pull up the lever on the outboard side of the seat to unlatch the seatback.

After returning the seat, try moving the seatback to make sure they are securely latched.

3rd row seats


To fold the 3rd row seat forward:

- 1) Lower the head restraint fully.

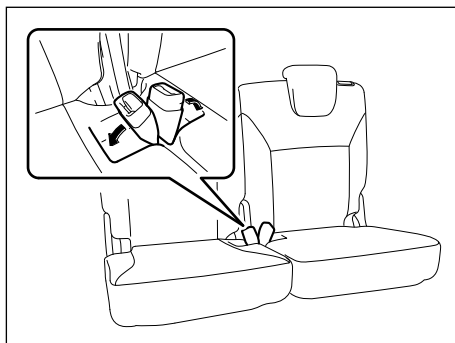

73R0207

- 2) Stow the seat belt buckles of the right and left seating position into the pocket of the seat cushion as shown in the illustration.

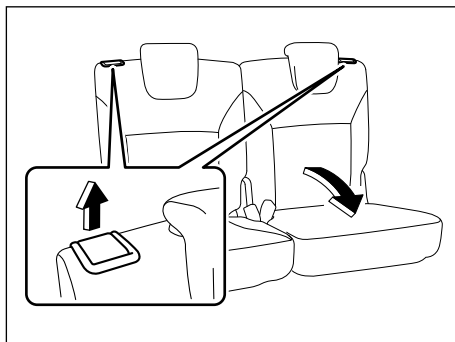

73R0007

- 3) Lift up the release lever on the top of seat, and fold the seatback forward.

NOTICE

When the 3rd row seat head restraint reaches the 2nd row seatback, slide the 2nd row seat forward.


NOTICE

When you are not using a seat belt, stow the seat belt buckles of the right and left seating position into the pocket first. This helps prevent being caught by the seat and being damaged.

⚠ WARNING

If you need to carry cargo in the passenger compartment with the 3rd row seatback folded forward, be sure to secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatback.

To return the seat to the normal position, follow the procedure below.

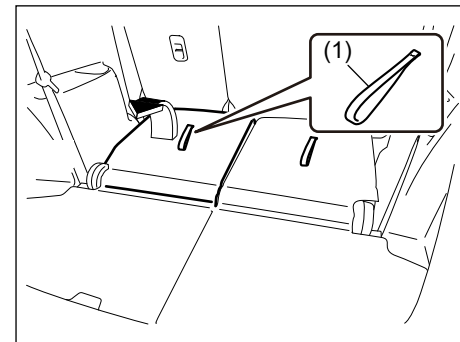

73R0008

Raise the seatback until it locks into place.

When you raise the seat from back of it, pull the strap (1).


NOTICE

Do not allow items in the luggage box to extend above the top of the luggage box. Otherwise, the luggage box or cover may be damaged.

After returning the seat, try moving the seatback to make sure they are securely latched.

FOR SAFE DRIVING

Seat Belts and Child Restraint Systems

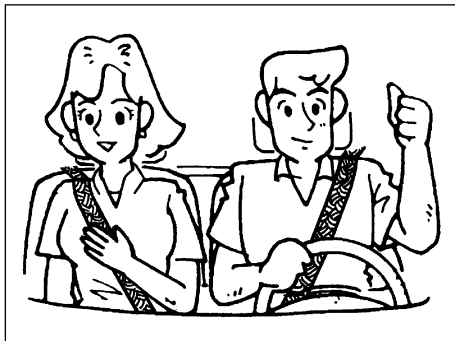


65D231

WARNING

Wear Your Seat Belts at All Times.

WARNING

An airbag supplements, or adds to, the frontal collision protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times even if driving for a very short distance, whether or not an airbag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a collision.

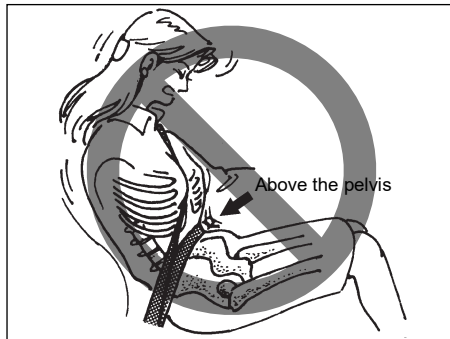


65D606

WARNING


Do not modify, remove, disassemble seat belts. Doing so may prevent them from functioning properly and cause the risk of severe injury or death in the event of a collision

WARNING

- Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.
 - Seat belts should always be adjusted as follows:
 - the lap portion of the belt should be worn low across the pelvis, not across the waist.
 - the shoulder straps should be worn on the outside shoulder only, and never under the arm.
 - the shoulder straps should be away from your face and neck, but not falling off your shoulder.
- (Continued)

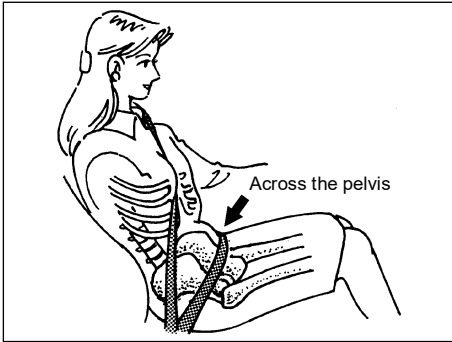

65D201

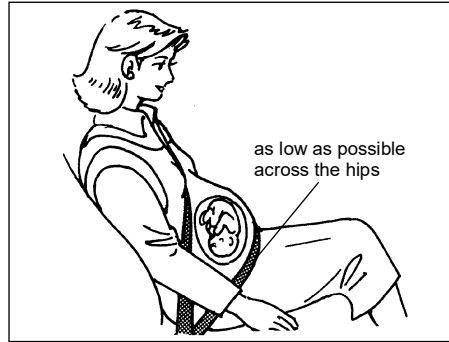

65D199



65D609

⚠ WARNING

(Continued)

- Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than one which is snug.
- Ensure that all seat belts are worn correctly. An improperly worn seat belt increases the risk of injury or death if a collision occurs
- Check that seat belt latch plate (tongue) is inserted into the proper buckle especially in the rear seats. It is not possible to insert into the wrong buckles in the rear seats.

(Continued)

⚠ WARNING

(Continued)

- Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the diagram.
- Do not wear your seat belt over hard or breakable objects in your pockets or on your clothing. If an accident occurs, objects such as glasses, pens, etc. under the seat belt can cause injury.

(Continued)

⚠ WARNING

(Continued)

- Do not hold a child on a passenger's lap. Even if the passenger holds the child tightly, he/she would not be supported enough in the event of an accident and it could result in a serious injury of the child.
- Never use the same seat belt on more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.

(Continued)

WARNING

(Continued)

- Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated, or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.
- Children age 12 and under should ride properly restrained in the rear seat.
- Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Make sure that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.
- For children, if the shoulder belt irritates the neck or face, move the child closer to the center of the vehicle.

(Continued)

WARNING

(Continued)


- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- Do not insert any items such as coins, clips, etc. into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

Lap-Shoulder Belt


Emergency Locking Retractor (ELR)

The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this happens, let the belt go back to unlock it, and then pull the belt across your body more slowly.

Safety reminder

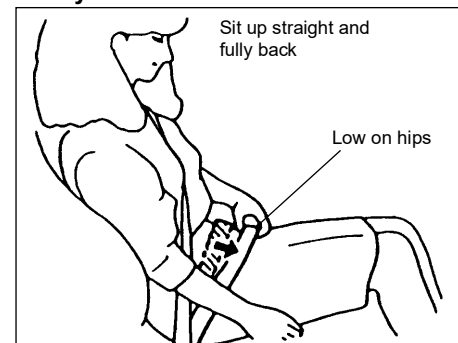


60A038

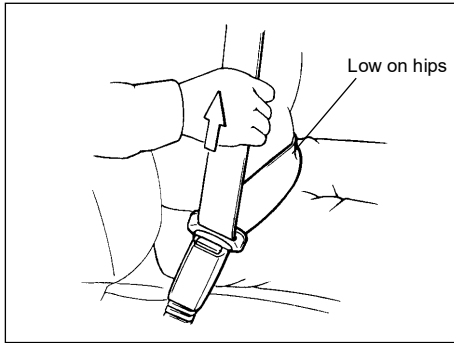

60A040


To reduce the risk of sliding under the belt during a collision, position the lap portion of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length of the diagonal shoulder strap adjusts itself to allow freedom of movement.

All Seat Belts

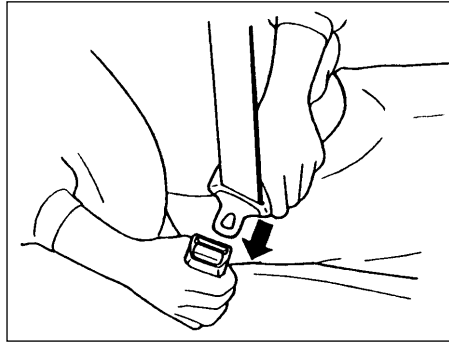

60A036

To fasten the seat belt, sit up straight and well back in the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a "click". After pressing the latch plate into the buckle, pull the seat belt to make sure it is securely latched.

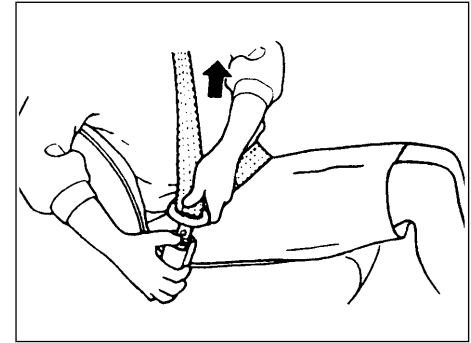


60A039

To unfasten the seat belt, push the button on the buckle and retract the belt slowly while attaching a hand to the belt or/and the latch plate.

FOR SAFE DRIVING

Seat belt reminder

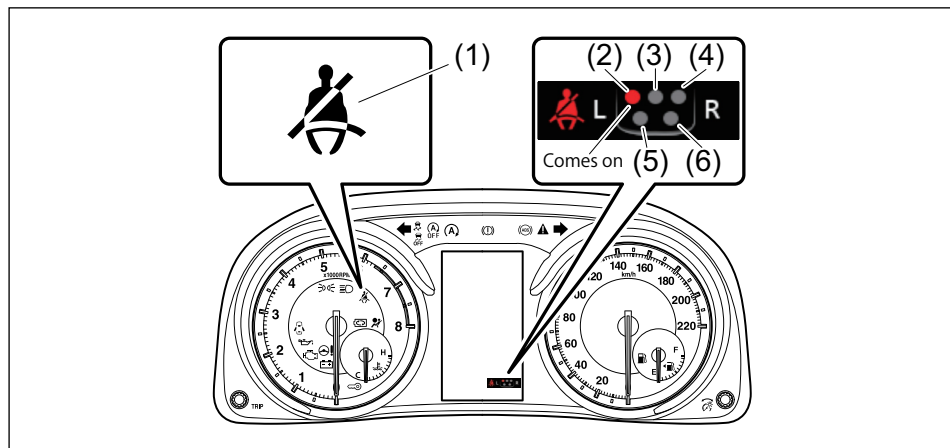

72RM01002

- (1) Driver's seat belt reminder light / front passenger's seat belt reminder light
- (2) 2nd row passenger's seat belt reminder light (2nd row left)
- (3) 2nd row passenger's seat belt reminder light (2nd row center)
- (4) 2nd row passenger's seat belt reminder light (2nd row right)
- (5) 3rd row passenger's seat belt reminder light (3rd row left)
- (6) 3rd row passenger's seat belt reminder light (3rd row right)

For more details, refer to the explanation as follows..

⚠ WARNING

It is absolutely essential that the driver, front passenger, 2nd row passenger* and 3rd row passenger* wear their seat belts at all times. Persons who are not wearing seat belts have a much greater risk of injury if an accident occurs. Make a regular habit of buckling your seat belt before starting the engine.

NOTE:

- Along with the seat belt reminder light, a reminder message shall also come on the information display (if equipped), for unrestrained driver and/or front passenger.
- The driver's seat belt reminder light / front passenger's seat belt reminder light is for both the driver and front passenger.

Driver's seat belt reminder

If the driver's seat belt remains unbuckled when the ignition switch is turned to "ON" position, the reminder works as follows:


- 1) The driver's seat belt reminder light will come on. The front passenger's seat belt reminder light will also come on if a front passenger does not fasten his/her seat belt.
- 2) After the vehicle's speed has reached about 15 km/h, the driver's or front passenger's seat belt reminder light will blink and a buzzer will sound for about 95 seconds.
- 3) The reminder light will remain on until the driver's or front passenger's seat belt is buckled.

If the driver or front passenger has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from step 1) or step 2) according to the vehicle's speed. When the vehicle's speed is less than 15 km/h, the reminder will start from Step 1). When the vehicle's speed is more than 15 km/h, the reminder will start from Step 2).

The reminder will be automatically canceled when the driver's seat belt is buckled or the ignition switch is turned to "LOCK" position.

Front passenger's seat belt reminder

If there is a person sitting in the front passenger seat and the front passenger seat belt is unbuckled when the ignition switch is turned to "ON" position, the front passenger's seat belt reminder will activate.

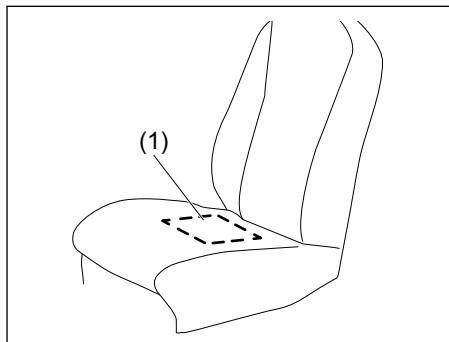

72RS2008

- (1) The sensor of the front passenger's seat belt reminder

The seat belt reminder sensor (1) detects whether a person is sitting in the front seat. The sensor of the front passenger's seat belt reminder is located in the seat cushion. The front passenger's seat belt reminder works in the same manner as the driver's seat belt reminder.

⚠ CAUTION

- Do not spill liquid or semi-solid on the front passenger's seat. If you spill it on the front passenger's seat, immediately wipe it dry with a soft cloth. Contact of liquid with sensor may impact the function of seat belt reminder sensor.
- Do not place any sharp or heavy object on passenger seat which can penetrate through seat upholstery and can cause damage to sensor.

NOTICE

- The sensor of the front passenger's seat belt reminder is located in the seat cushion. If heavy or sharp objects are put on the seat cushion, or a removal, disassembly and modification of the passenger's seat are performed, the sensor may not work properly or can be damaged. Do not put heavy or sharp objects on the seat cushion. Do not remove, disassemble and modify the passenger's seat.
- Depending on the variety of seat cover, operation of the sensor may be adversely affected. Maruti Suzuki highly recommends that you use Maruti Suzuki genuine seat cover exclusively for this vehicle. If a seat cover is installed, consult with a Maruti Suzuki authorised workshop.
- If you spill liquid such as liquid aromatics, soft drinks or juice on the front passenger's seat cushion, the sensor of the front passenger's seat belt reminder located in the seat cushion can be damaged. Immediately wipe it dry with a soft cloth when spilled.

(Continued)

NOTICE

(Continued)

- **When sitting on the front passenger's seat, it is very important that the passenger sits upright, leaning against the seat backrest and centered on the seat cushion in order for the seatbelt reminder system to function effectively. An occupant sitting improperly (slouches, turns sideways, sits forward or sideways) may hamper the functioning of this system as it may not detect the occupant.**

NOTE:

- *If you put an object on the passenger's seat, the weight of the object will be sensed by the sensor and the front passenger's seat belt reminder light will come on and then the interior buzzer may beep.*
- *If a child or a small sized person sit on the front passenger's seat or the cushion is put on the front passenger's seat, the weight will not be sensed by the sensor and the interior buzzer may not beep.*

Rear passenger's seat belt reminder

The rear passenger's seat belt reminder lights in the information display remind the rear passengers to fasten their seat belts.


Whether or not a passenger is seated, the rear seat belt reminder system works as follows, when the ignition switch is turned to "ON" position:

- 1) Reminder light will turn ON for the non buckled seats and continue for vehicle speed below 15 km/h.
- 2) When vehicle speed is above 15 km/h, reminder light will remain ON for the non-buckled seats for about 65 seconds and then turn OFF.
- 3) Further, when a buckled seat belt is unbuckled, the corresponding reminder light will turn ON. Above 15 km/h, the reminder light will blink (about 65 seconds) along with a buzzer sound (about 35 seconds). The reminder light will remain ON until the seat belt is buckled.

If rear door is opened in vehicle stationary condition, then reminder system will start from step 1.

The reminder will be automatically canceled when all the rear seat belts are buckled or the ignition switch is turned to "LOCK" position.

Shoulder anchor height adjuster (only for front seats)

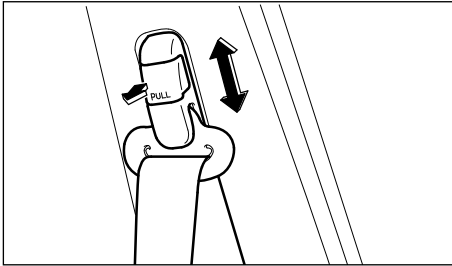


64J198

Adjust the shoulder anchor height so that the shoulder belt rides on the center of the outboard shoulder. To move upward, slide the anchor up. To move downward, slide the anchor down while pulling the lock knob out. After adjustment, check that the anchor is securely locked.

⚠ WARNING

Check that the shoulder belt is positioned on the center of the outside shoulder. The belt should be away from your face and neck, but not falling off your shoulder. Misadjustment of the belt could reduce the effectiveness of the seat belt in a collision.

Seat Belt Holder (for 2nd row seats)

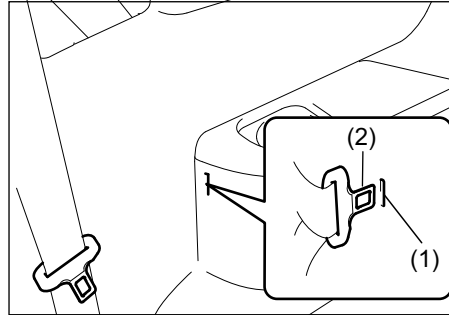

75U74EN010012

Rear outside seat belt holder (1) is provided on the lateral face beside the rear seat as shown in the illustration.

When the rear seat belt is not fastened, insert the tongue plate (2) of the outboard lap-shoulder belts into the holder (1) beside the seat.

When the rear seat belt is fastened, remove the tongue plate (2) of the outboard lap-shoulder belts from the holder (1) beside the seat.


NOTE:

To enter to or exit from the 3rd row seat, insert the tongue plate of the buckle into the part (1) before moving the 2nd row seat.

NOTICE

When you move a seatback, make sure the tongue plate of the buckle is inserted in the seat belt catch hole so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

Seat Belt Inspection

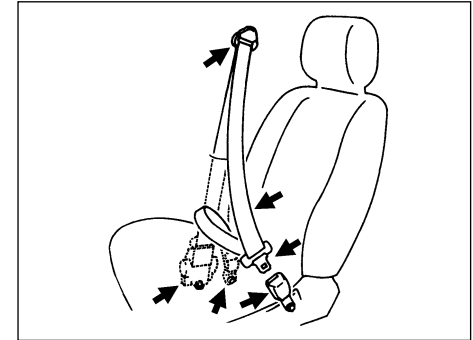


65D209S

Periodically inspect the seat belts to make sure they work properly and are not damaged. Check the webbing, buckles, latch plates, retractors, anchorages, and guide loops. Replace any seat belts which do not work properly or are damaged.

⚠ WARNING

Inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly even which was not in use during a collision must be replaced if the seat belt pretensioners were activated. The pretensioners and the load limiter only function once. In case they did not activate, consult with a Maruti Suzuki authorised workshop

Seat belt pretensioner system (only for front seats)

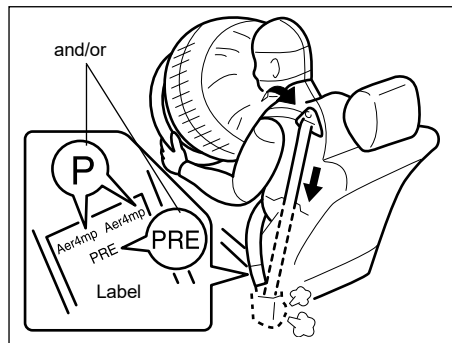

⚠ WARNING

This section describes your Maruti Suzuki vehicle's seat belt pretensioner system. Read and follow all these instructions carefully to minimize your risk of severe injury or death.

To determine if your vehicle is equipped with a seat belt pretensioner system at the front seating positions, check the label on the seat belt at the bottom part. If the letters "p" and/or "PRE" appear as illustrated, your vehicle is equipped with the seat belt pretensioner system. You can use the pretensioner seat belts in the same manner as ordinary seat belts.

Read this section and "Supplemental restraint system (airbags)" section to learn more about the pretensioner system.

The seat belt pretensioner system works with the supplemental restraint system (air bags). The collision sensors and the electronic controller of the airbag system also control the seat belt pretensioners. The pretensioners are triggered only when there is a frontal collision severe enough to trigger the airbags and the seat belts are fastened. For precautions and general information including servicing the pretensioner system, refer to "Supplemental restraint system (airbags)" section in addition to this "Seat belt pretensioner system" section, and follow all those precautions.

The pretensioner is located in each front seat belt retractor. The pretensioner tightens the seat belt so the belt fits the occupant's body more snugly in the event of a frontal collision. The retractors will remain locked after the pretensioners are activated. Upon activation, some noise will occur and some smoke may be released.

These conditions are not harmful and do not indicate a fire in the vehicle.

The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not a pretensioner is equipped at their seating position, to minimize the risk of severe injury or death in the event of a collision.

Sit fully back in the seat; sit up straight; do not lean forward or sideways. Adjust the belt so the lap portion of the belt is worn low across the pelvis, not across the waist. Please refer to "Seat adjustment" section and the instructions and precautions about the seat belts in this "Seat belts and child restraint systems" section for details on proper seat and seat belt adjustments.

Please note that the pretensioners along with the airbags will activate in severe frontal collisions. They are not designed to activate in rear impacts, roll-overs, or minor frontal collisions. The pretensioners can be activated only once. If the pretensioners are activated (that is, if the airbags are activated), have the pretensioner system serviced by a Maruti Suzuki authorised workshop as soon as possible.

The pretensioner system of the airbag system may not work properly if any of the following conditions occur:

- 1) If the airbag warning light on the instrument cluster does not come on briefly, when the ignition switch is turned to the "ON" position.

- 2) If the airbag light comes on and stays on for more than 10 seconds, when the ignition switch is turned to the "ON" position.
- 3) If the airbag light comes on while driving.


Have both systems inspected by a Maruti Suzuki authorised workshop as soon as possible.

Service on or around the pretensioner system components or wiring must be performed only by a Maruti Suzuki authorised workshop who is specially trained. Improper service could result in unintended activation of pretensioners or could render the pretensioner inoperative. Either of these two conditions may result in personal injury.

To prevent damage or unintended activation of the pretensioners, check that the lead-acid battery is disconnected and the ignition switch has been in LOCK position for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle.


Do not touch pretensioner system components or wiring. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow. When scrapping your Maruti Suzuki vehicle, ask a Maruti Suzuki authorised workshop, body repair shop, or scrap yard for assistance.

Seat Belt Force Limiter System (Only for Front Seat)

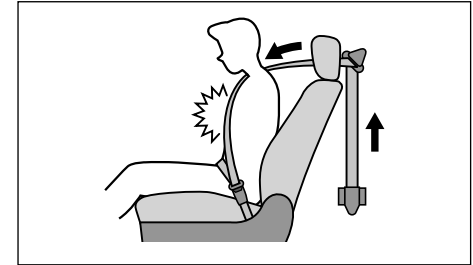

69RHS167

In the event of a strong impact coming from the front, the seat belt force limiter operates in two stages to reduce a force to the shoulder strap, thus lessening the impact being sustained by the front passengers.

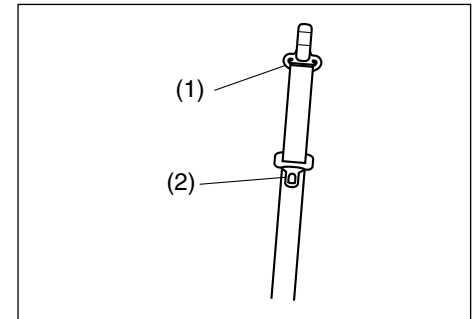


82K179

WARNING

If the seat belt sustains strong impact, the resin of the shoulder anchor part (1) and the tongue plate part (2) could soften due to heavy friction, thus sticking to the seat belt, making the belt slide less easily. In such a case, the seat belt may not provide the best performance, resulting in severe injury in case of emergency. Have the seat belt replaced by a Maruti Suzuki authorised workshop.


Child Restraint Systems

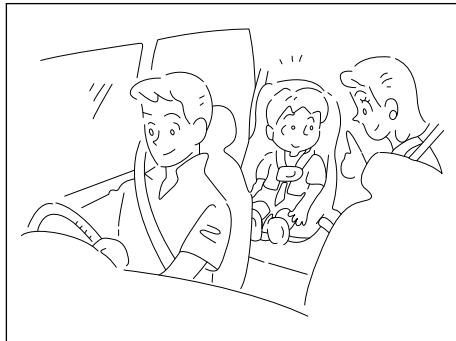

60G332S


The following types of child restraint system are available generally.

Infant restraint - rear seat only

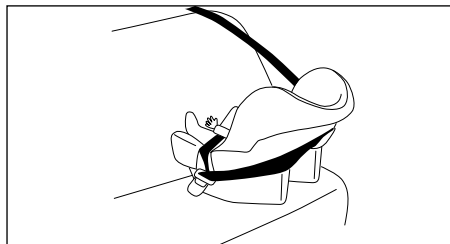

80JC007

Child restraint

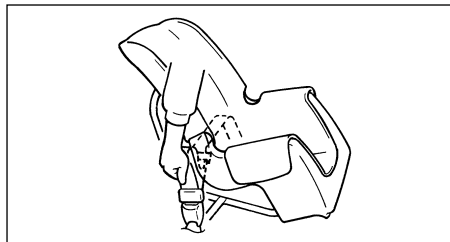

80JC016

Booster seat



80JC008

Maruti Suzuki highly recommends that you use a child restraint system to restrain infants and small children. Many different types of child restraint systems are available; check that the restraint system you select meets applicable safety standards.

All child restraint systems are designed to be secured in vehicle seats either by seat belts (the lap portion of lap shoulder belts) or by special rigid lower anchor bars built into the seat. Whenever possible, Maruti Suzuki recommends that child restraint systems be installed on the rear seat. According to accident statistics, children are safer when properly restrained in rear seating positions than in front seating positions.

(For Countries applied for UN Regulation No.16)

When purchasing a child restraint and install it to your Maruti SUZUKI vehicle, refer to the information about suitability for child restraints shown in "Child Restraint System for Countries applied for UN Regulation No.16" in this section.

NOTE:

Observe any statutory regulation about child restraints.

⚠ WARNING

- Do not install a rearward facing child restraint in the front passenger's seat. If the passenger's front airbag inflates, a child in a rearward facing child restraint could be killed or severely injured. The back of a rearward facing child restraint would be too close to the inflating airbag.



61M0241

⚠ WARNING

When installing a child restraint system to the rear seat, touching the child's foot or the child restraint system to the seatback of the front seat can cause serious injury to the child in the event of an accident. Adjust the front seat so that it does not touch the child or the child restraint system.

⚠ WARNING

- If you install a child restraint system in the 2nd row seat, slide the seat installed the child restraint system as far back as possible. So that, the child's feet do not contact the front seatback. These will help avoid injury to the child in the event of an accident.
- If child restraint systems are not installed properly, children or other occupants could be seriously injured in the event of an accident. Secure the child restraint system firmly according to both this manual and the instruction provided by child restraint system's manufacturer.
- If the child is not secured properly in the child restraint system, it could cause serious injury to the child in the event of an accident. Use the child restraint system correctly following the instruction provided by child restraint system's manufacturer.



65D608D

Child restraint system**⚠ CAUTION**

Adjust the height of the head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the head restraint is fitted, the seat head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improperly, a child sitting in it could be injured in a collision. (Refer to "Installation with lap/shoulder seat belts" section, "Installation with ISO-FIX type anchorages" section and "Installation of child restraint with top tether" section in this section for details.)

FOR SAFE DRIVING

Child restraint system for India

Child restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below. Whenever you carry children up to 12 years of age, properly use the child restraints which conform to AIS 072, the standard for child restraints, referring to the table.

MASS GROUP	Seating position (or other site)				
	Front Passenger	Rear Outboard	Rear Center	Intermediate Outboard	Intermediate Center
Group 0 Up to 10 kg	X	X	N.A.	U	U
Group 0+ Up to 13 kg	X	X	N.A.	U	U
Group I 9 to 18 kg	X	X	N.A.	U	U
Group II 15 to 25 kg	X	X	N.A.	U	U
Group III 22 to 36 kg	X	X	N.A.	U	U

Key of letters to be inserted in the above table:

U = Suitable for 'universal' category restraints approved for use in this mass group

X = Seat position not suitable for children in this mass group

N.A = Seat position not available for children in this mass group.

NOTE:

- 'universal' is the category in the AIS 072.
- 'Outboard' indicates window side seat.

Installation with lap-shoulder seat belts


⚠ CAUTION

If your vehicle is equipped with the rear head restraint, adjust the height of the head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the seatback is fitted, the seat head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.

NOTE:

Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

ELR type belt

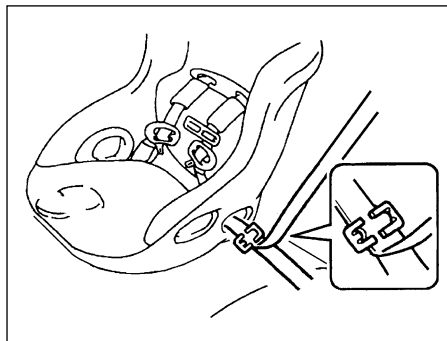


80JC021

Install your child restraint system according to the instructions provided by the child restraint system manufacturer.

Check that the seat belt is securely latched. Move the child restraint system in all directions to check that it is securely installed. When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of your child's body.

Installation with ISOFIX type anchorages

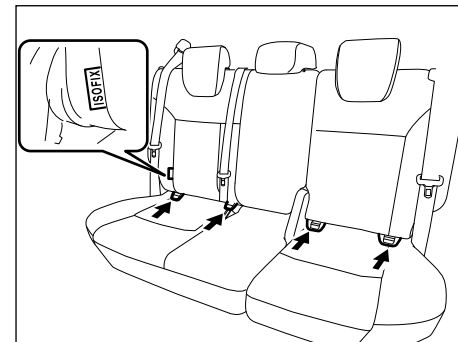

75U74EN010009A


Your vehicle is equipped with the lower anchorages in the 2nd row seat outboard seating positions for securing a ISOFIX type of child restraints with the connecting bars. The lower anchorages are located where the rear of the seat cushion meets the bottom of the seatback.

⚠ WARNING

Install the ISOFIX type of child restraint(s) in the only outboard seating positions, not in the central position for the 2nd row seat.

FOR SAFE DRIVING

Install the ISOFIX type child restraint system according to the instructions provided by the child restraint system manufacturer. After installation, try moving the child restraint system in all directions especially forward to check that connecting bars are securely latched to the anchorages.

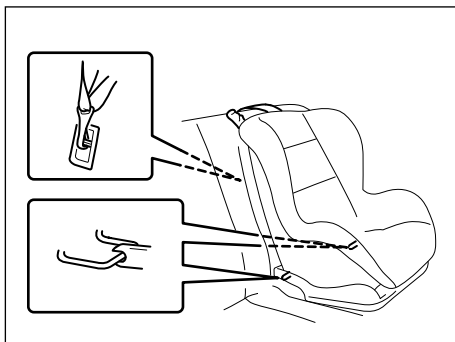

Your vehicle is equipped with the top tether anchorages. Use the top tether strap of the child restraint according to the instructions provided by the child restraint system manufacturer.

Here is a general instruction:


⚠ CAUTION

If your vehicle is equipped with the rear head restraint, adjust the height of the rear head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the seatback is fitted, the 2nd row seat head restraint should not be removed. If the rear head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint.


If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.

NOTE:


Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

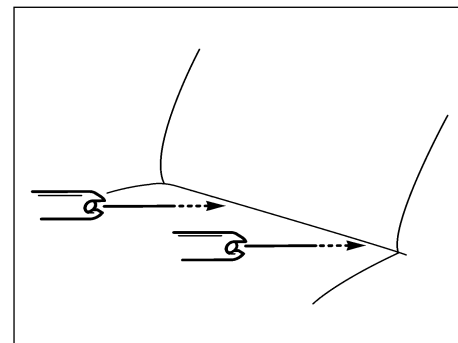


- 1) Place the child restraint in the 2nd row seat, inserting the connecting bars to the anchorages between the seat cushion and the seatback.

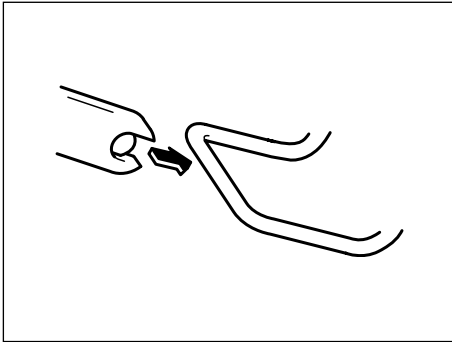

68LM268

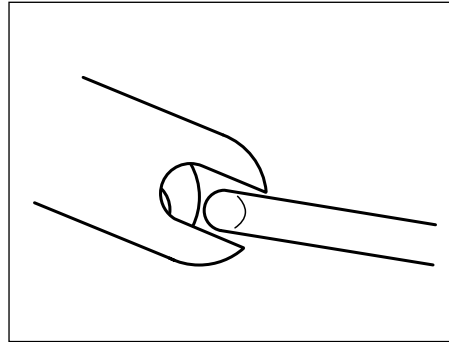

54G184

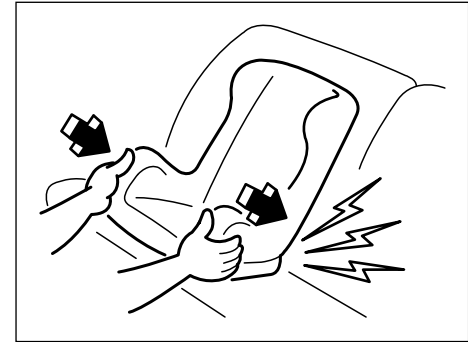

54G185

- 2) Use your hands to carefully align the connecting bar tips with the anchorages. Take care not to pinch your fingers.
- 3) Push the child restraint toward the anchorages so that the connecting bar tips are partially hooked to the anchorages. Use your hands to confirm the position.
- 4) Grasp the front of the child restraint and push the child restraint forcefully to latch the connecting bars. Check that they are securely latched by trying to move the child restraint system in all directions, especially forward.
- 5) Attach the top tether strap referring to "Installation of child restraint with top tether" section. When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of your child's body.

NOTICE

When installing a child restraint system to the 2nd row seat, slide the seat installed the child restraint system as far back as possible.

FOR SAFE DRIVING

Installation of child restraint with top tether


CAUTION

If your vehicle is equipped with the rear head restraint, adjust the height of the rear head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the seatback is fitted, the 2nd row seat head restraint should not be removed. If the rear head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint.

If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.

NOTE:


Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

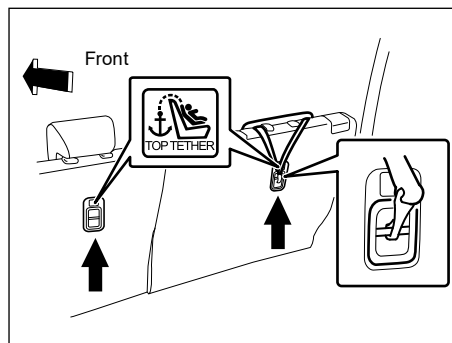

73R0175

Some child restraint systems require the use of a top tether strap. Top tether anchorage brackets are provided in your vehicle at the locations shown in the illustrations. The number of the top tether anchorage brackets provided in your vehicle depends on the vehicle specification. Install the child restraint system as follows:

- 1) Secure the child restraint on the 2nd row seat using the procedure described above for securing a restraint system that does not require a top tether strap.
- 2) Hook the top tether strap to the top tether anchorage bracket and tighten the top tether strap according to the instructions provided by the child restraint system manufacturer. Attach the top tether strap to the corresponding top tether anchorage bracket located directly behind the child restraint.

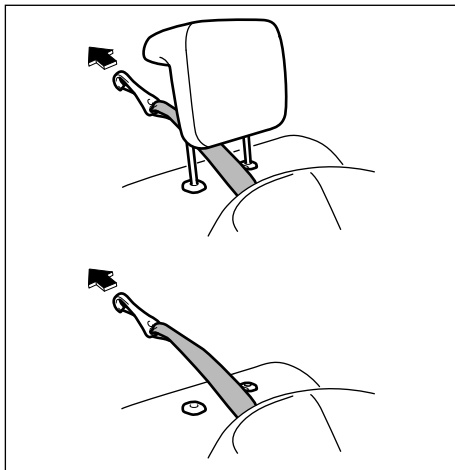

73R0176

NOTE:

Maruti Suzuki recommends use of Maruti Suzuki Genuine accessory of "Child seat, ISOFIX"

- 3) When routing the top tether strap, pass the top tether strap as shown in the illustration. (Refer to "Head restraints" section for details on how to adjust the height of head restraint or remove it.)
- 4) Check that cargo does not interfere with routing of the top tether strap.

NOTICE

When installing a child restraint system to the 2nd row seat, adjust the front seat position so that the front seat does not interfere with the child restraint system.

FOR SAFE DRIVING


Supplemental Restraint System (airbags)

WARNING

This section of the owner's manual describes the protection provided by your Maruti Suzuki's supplemental restraint system (airbags). Please read and follow all these instructions carefully to minimize your risk of severe injury or death in the event of a collision.

Your vehicle is equipped with a Supplemental Restraint System consisting of the following components in addition to a lap-shoulder belt at each front seating position.

1. Driver's front airbag module
2. Front passenger's front airbag module
3. Front seat belt pretensioners
4. Airbag controller
5. Forward collision sensor
6. Side airbag module
7. Side crash sensor
8. Side curtain airbag module

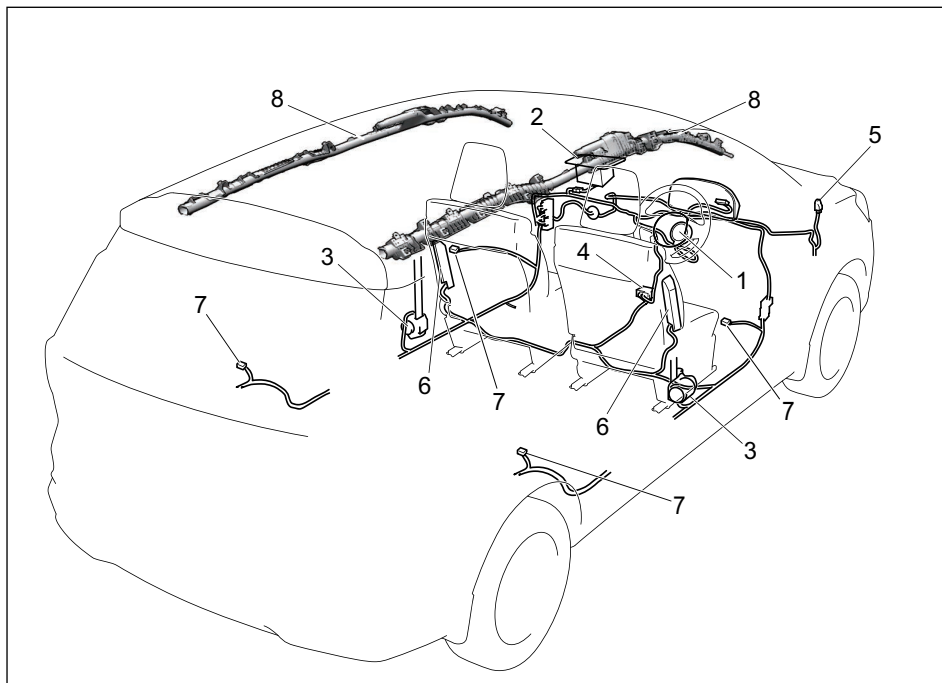

75U74EN010002A

⚠ WARNING

An airbag supplements or adds to the collision protection offered by seat belts. The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not an airbag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a collision.

AIRBAG warning light



63J030

If the "AIRBAG" light on the instrument cluster does not blink or come on when the ignition switch is first turned to the ON position, or the ignition mode is first changed to "ON", or the "AIRBAG" light stays on, or comes on while driving, the airbag system (or the seat belt pretensioner system) may not work properly. Have the airbag system inspected by Maruti Suzuki authorised workshop as soon as possible.

Airbag symbol meaning



72M00150

You may find this label on the sun visor.

⚠ WARNING

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

⚠ WARNING

If the AIRBAG light in the instrument cluster ever comes on and stays on, it means that something may be wrong with the airbag system. If this ever happens, have the vehicle serviced immediately, because the airbags may not offer the protection for which they were designed.

Description of warning label

Symbol	Symbol meaning
	Do not install a rearward facing child restraint system to the front passenger's seat equipped with an airbag.
	If the front passenger's seat airbag were to be deployed, a major impact could be applied to a rear-facing child restraint system and the child.
	For more details, read this owner's manual.

WARNING


- If the airbag-related parts are replaced or repaired, which has an impact on the airbag functions, the airbag may activate unnecessarily or may not activate when necessary.

The following situations may give a negative impact to the airbag system.

In these cases, consult Maruti Suzuki authorised workshop beforehand.

- Removing the steering wheel, repairing the areas around the steering wheel, etc.
- Center console repair, repairs around the instrument cluster, repairs under the front seat, and repairs of electrical wiring
- Installation of audio equipment, etc.
- Sheet metal painting and repairs around the dashboard
- Replacement of the front seat and repairs around the seat
- Repairs around the front pillar, the back pillar or the roof side
- Repairs around the center pillar

Front Airbags

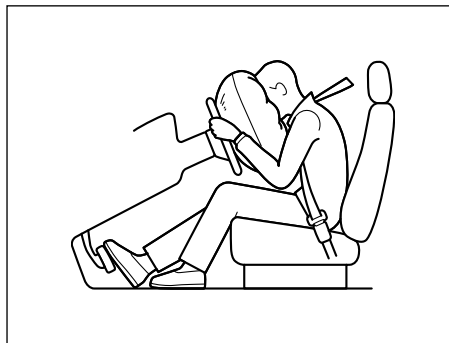

63J113

Front airbag is designed to inflate in severe frontal collisions when the ignition switch is in "ON" position or the ignition mode is "ON".


NOTE:

In a frontal angle collision, the side airbags (if equipped) may inflate.

Front airbag is not designed to inflate in rear impacts, side impacts, rollovers or minor frontal collisions, since they would offer no protection in those types of accidents. Remember, since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.


Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

Driver's front airbag

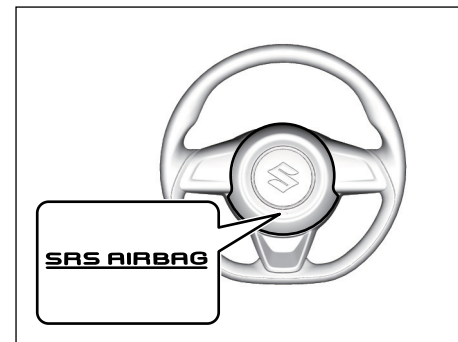

73R0009

Front passenger's front airbag

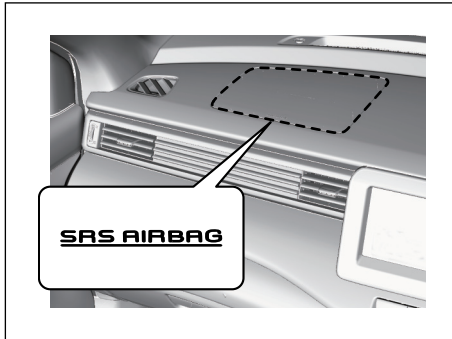

72R0143


The driver's front airbag is located behind the center pad of the steering wheel and the front passenger's front airbag is located behind the passenger's side of the dashboard. The words "SRS AIRBAG" are molded into the airbag covers to identify the location of the airbags.

⚠ WARNING

- Do not install a rearward facing child restraint in the front passenger's seat. If the passenger's front airbag inflates, a child in a rearward facing child restraint could be killed or severely injured. The back of a rearward facing child restraint would be too close to the inflating airbag.
- If the airbag stored place is damaged or cracked, the airbag system may not work properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by a Maruti Suzuki authorised workshop.


Refer to "Seat belts and child restraint systems" section for details on securing your child.

Conditions of front airbags deployment (inflation)

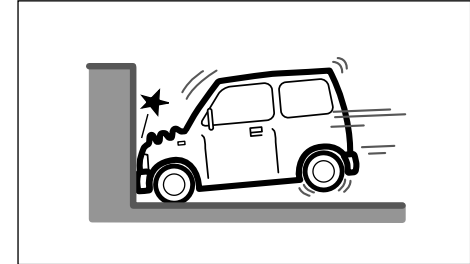

80J097

- Frontal collision with a fixed wall that does not move or deform at more than about 25 km/h

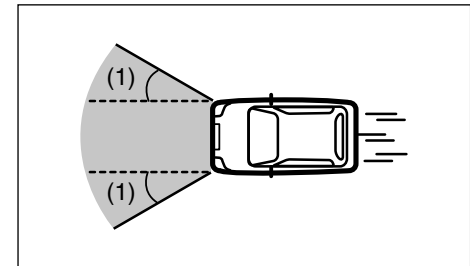


80J098E

- Strong impact equivalent to frontal collision such as above at left and right angles of about 30 degrees (1) or less from the front of your vehicle

FOR SAFE DRIVING


Conditions of front airbags may inflate

Receiving a strong impact to the lower body of your vehicle, the front airbags may inflate.

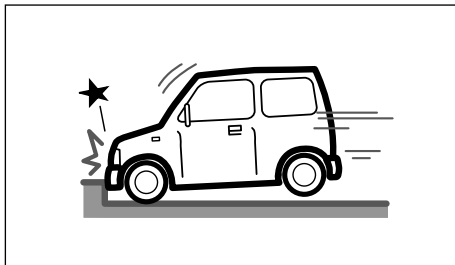


80J099

- Hitting a curb or medial strip

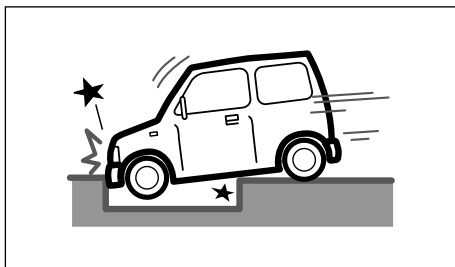

80J100E

- Falling into a deep hole or ditch

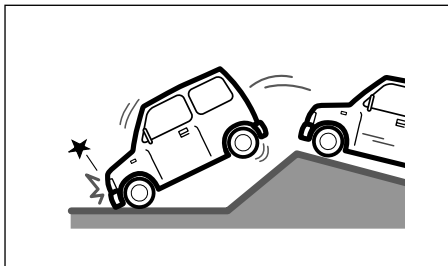


80J101

- Landing hard or falling

Front airbags may not inflate


The front airbags may not inflate when a strong impact has not occurred since the collision object was easy to be deformed or moved, or the collided portion of your vehicle was easy to be deformed.

Also, front airbags may not inflate in many cases when the collision angle is greater than about 30 degrees at left and right angles from the front of your vehicle. Also, in certain collisions at low speed, the airbags may not inflate.

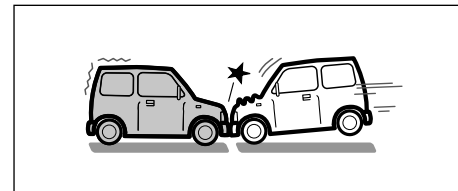


80J102

- Frontal collision to a stopped vehicle at less than about 50 km/h

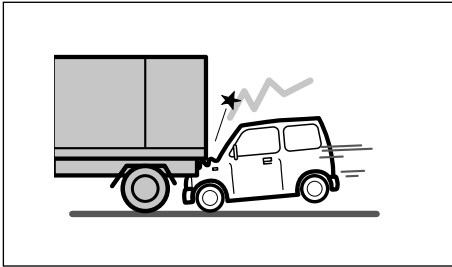


80J103

- Collision that the front of your vehicle goes under the bed of a truck etc.

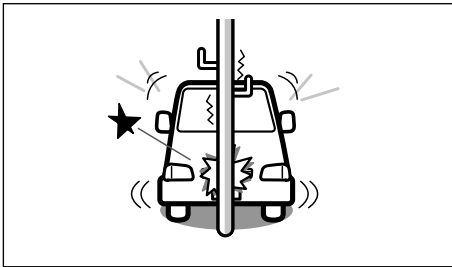


80J104

- Collision with a utility pole or stumpage

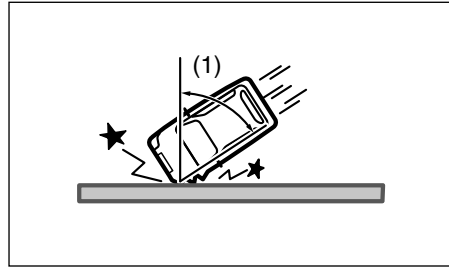

80J105E

- Collision with a fixed wall or guardrail at left and right angles of greater than about 30 degrees (1) from the front of your vehicle

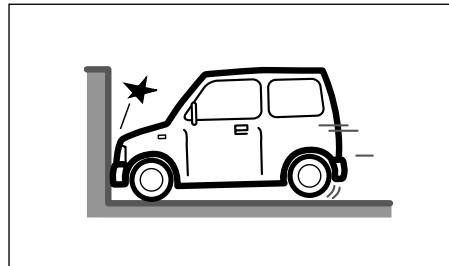


80J106

- Frontal collision with a fixed wall that does not move or deform at less than about 25 km/h


Front airbags do not inflate

Front airbags do not inflate in rear impacts, side impacts or rollovers, etc. However, these might inflate in a strong impact.

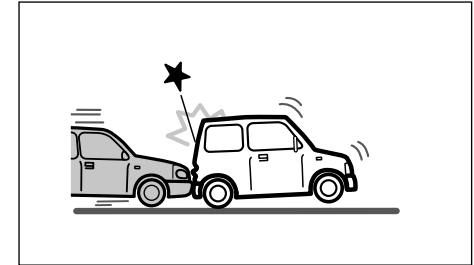


80J120

- Impact from the rear

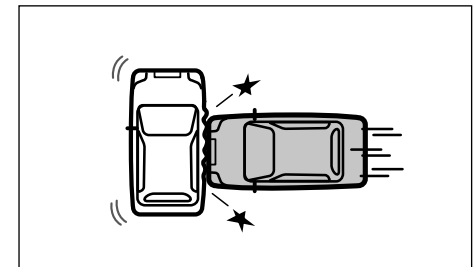

80J119

- Impact from the side

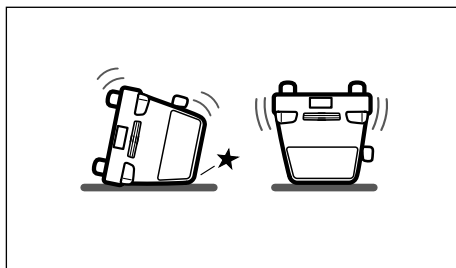


80J110

- Vehicle rollover

Side Airbags and Side Curtain Airbags

EXAMPLE

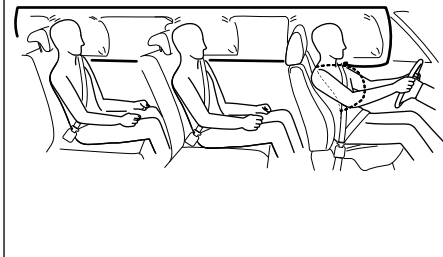


75U74EN010010

Side airbags are designed to inflate in severe side impact collisions when the ignition switch is in “ON” position or the ignition mode is “ON”.

Side airbags and side curtain airbags are not designed to inflate in frontal or rear collisions, rollovers or minor side collisions, since they would offer no protection in those types of accidents. Only the side airbag and side curtain airbag on the side of the vehicle that is struck will inflate. However, in a frontal angle collision, the side airbags and side curtain airbags may inflate. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

Side airbags

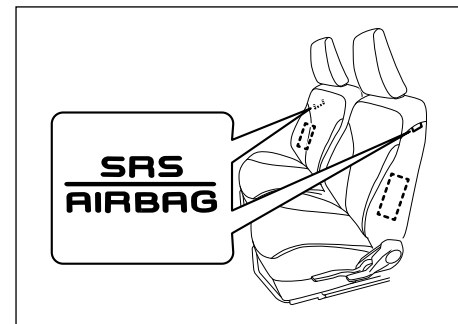


72RH4039

Side airbags are located in the part of the front seatbacks closest to the doors. The “SRS AIRBAG” labels are attached to the seatbacks to identify the location of the side airbags.

WARNING

If the area where the airbag is stored is damaged or cracked, the airbag system may not function properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by a Maruti Suzuki authorised workshop.

Side curtain airbags

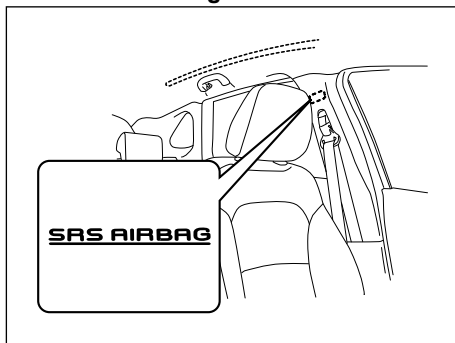


76TS20370

Side curtain airbags are located in the roof lining. The words “SRS AIRBAG” are molded into the pillar to identify the location of the side curtain airbags.

WARNING

If the area where the airbag is stored is damaged or cracked, the airbag system may not function properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by a Maruti Suzuki authorised workshop.

Conditions of side airbags and side curtain airbags deployment (inflation)

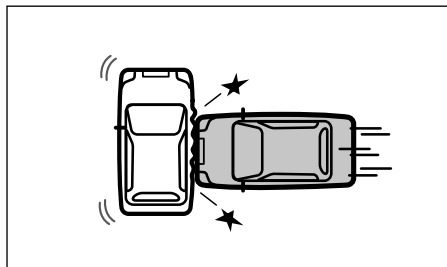


80J119

- Impacts from the side at about a right angle by a general passenger car to your vehicle at more than about 30 km/h or in a greater impact


Side airbags and side curtain airbags may inflate in a strong impact

Side airbags and side curtain airbags may inflate even in a frontal collision, if there is a strong impact to the lateral direction.

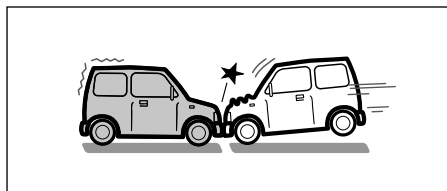


80J102

- Frontal collision

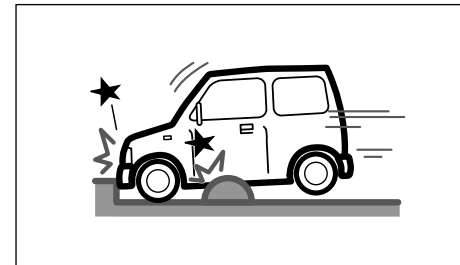

52RM20730


- Hitting a curb or bump

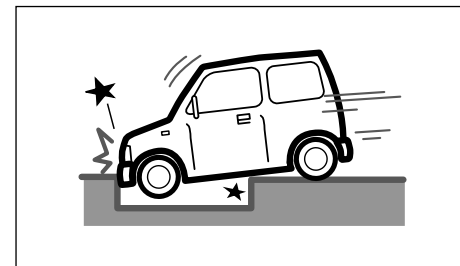

80J100E

- Falling into a deep hole or ditch


FOR SAFE DRIVING

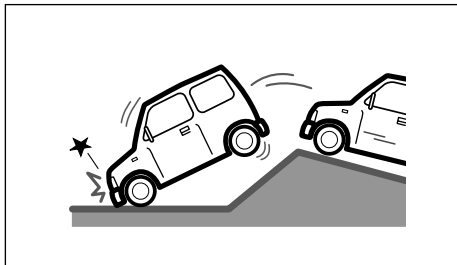

80J101


- Landing hard or falling

Side airbags and side curtain airbags may not inflate

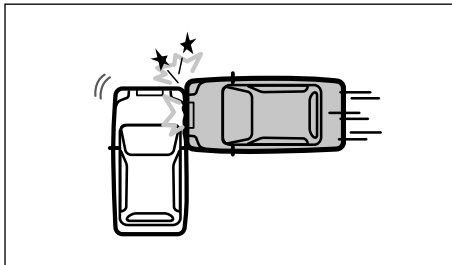


80J121

- Impact from the side to the vehicle body other than the passenger compartment

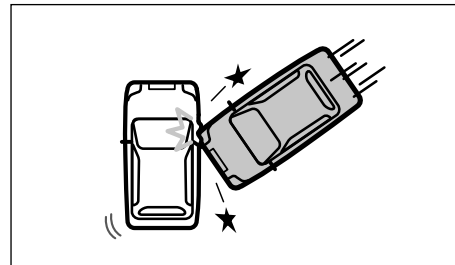


80J123

- Impact from the side at an oblique angle

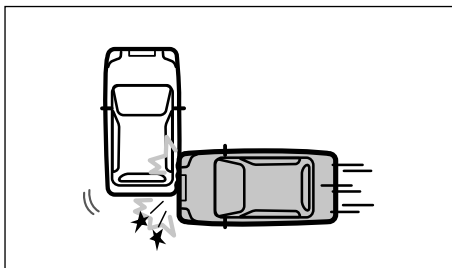


80J122

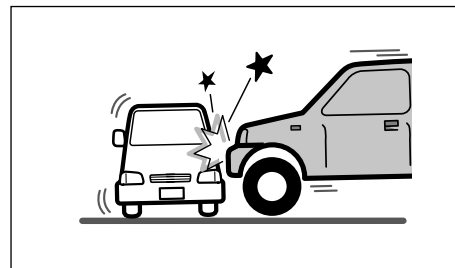


80J124

- Impact from the side by a high hood vehicle

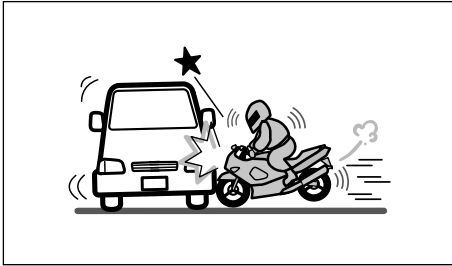

80J125


- Impact from the side by a motorcycle or bicycle

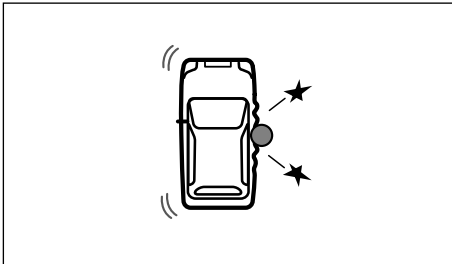

80J126


- Collision with a utility pole or stumpage

Side airbags and side curtain airbags do not inflate

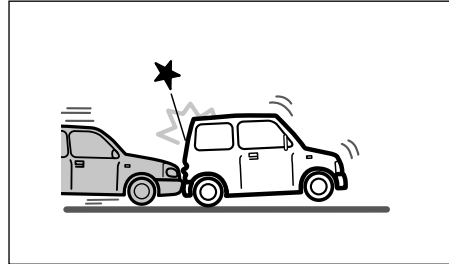

80J120

- Impact from the rear

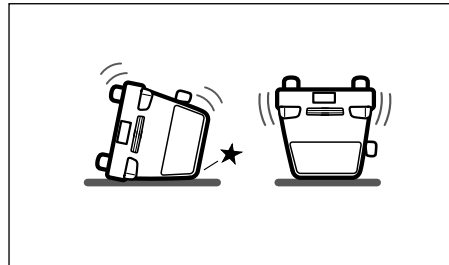

80J110

- Vehicle rollover

How the System Works

In a frontal collision, the crash sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal collision, the controller will trigger the inflators. If your vehicle is equipped with side airbags and side curtain airbags, crash sensors will detect a side collision, and if the controller judges that the side collision is severe enough, it will trigger the side airbag and side curtain airbag inflators. The inflators inflate the appropriate airbags with nitrogen or argon gas. The inflated airbags provide a cushion for your head (front airbags and side curtain airbags only) and upper body. The airbag inflates and deflates so quickly that you may not even realize that it has activated. The airbag will neither hinder your view nor make it harder to exit the vehicle.

Airbags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the airbag may irritate bare skin, such as the facial area against a front airbag. Wash off any residue as soon as possible to prevent skin irritation. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however, that some airbag components may be hot for a while after inflation.

FOR SAFE DRIVING


A seat belt helps keep you in the proper position for maximum protection when an airbag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel or dashboard. Front occupants should not lean on or sleep against the door. Refer to "Seat adjustment" section and "Seat belts and child restraint systems" section in this section for details on proper seat and seat belt adjustments.



65D610



65D608

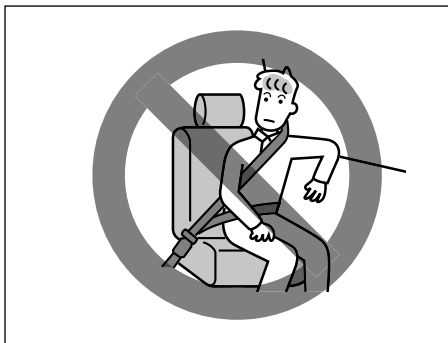

59RN02190

WARNING

- The driver should not lean over the steering wheel. The front passenger should not rest his or her body against the dashboard where a front airbag is mounted or a child should not stand in front of the dashboard. Otherwise, he or she will get too close to the dashboard. For vehicles with side airbags and side curtain airbag, occupants should not lean on or sleep against the door. In these situations, the out-of-position occupant would be too close to an inflating airbag, and may suffer severe injury.

(Continued)

⚠ WARNING

(Continued)

- Do not attach any objects to, or place any objects over, the steering wheel or dashboard. Do not place any objects between the airbag and the driver or front passenger. These objects may interfere with airbag operation or may be propelled by the airbag in the event of a collision. Also, these objects may move when you start moving vehicle or while vehicle is moving, they may interfere with driver's view or safe driving. In each conditions may cause severe injury.
- For vehicles with side airbags, do not use non-genuine seat covers on the front seats, because non-genuine seat covers may obstruct the inflation of side airbags. Maruti Suzuki highly recommends Maruti Suzuki-genuine seat covers to be used when covering the front seats of such vehicles with side airbags. Also, near the door, do not place cup holders, hangers or any other objects and do not lean an umbrella, as these objects could be propelled by the airbag in the event of a collision. Either of these conditions may cause severe injury.


(Continued)

⚠ WARNING

(Continued)

- Do not strike or apply significant levels of impact to the airbag component areas. It can cause the air bags to malfunction.
- Even though your vehicle is damaged by a collision, it may not be severe enough to trigger front, side or side curtain airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by Maruti Suzuki authorised workshop to ensure that it works properly.
- If the original function of air bag system is damaged, air bag may not function effectively and fully in case of an emergency.

(Continued)

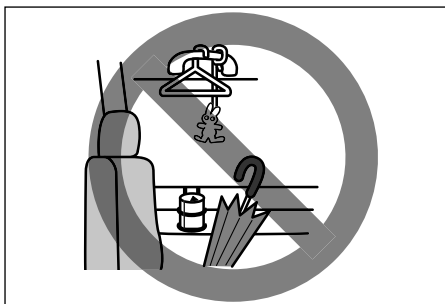

74TBX02089

⚠ WARNING

(Continued)

- Do not modify the system in any way including replacing the steering wheel, placing stickers on the steering wheel pad, painting the steering wheel, or covering the steering wheel with a cover.
- Do not place stickers on or paint the instrument panel. Do not install and set up accessories, air fresheners, ETC readers, or portable navigation systems. Do not stand umbrellas or similar in front of airbags.
- Excluding genuine Maruti Suzuki parts, do not attach accessories to the front windshield or the rearview mirror.
- Immediately after an airbag is activated, the airbag components may become hot and this may cause burn injury.
- Do not touch the airbag components immediately after an airbag is activated.

CAUTION

Airbags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the airbag may irritate bare skin, such as the facial area against a front airbag. Wash off any residue as soon as possible to prevent skin irritation. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however, that some airbag components may be hot for a while after inflation. This may cause burn injury.

Your vehicle is equipped with a diagnostic module which records information about the airbag system if the airbags deploy in a collision. The module records information about overall system status, which sensors activated the deployment, and for a certain vehicle only, whether the driver's seat belt was in use.

Servicing the airbag system

If the airbags inflate, have the airbags and related components replaced by a Maruti Suzuki authorised workshop as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the airbag controller could be damaged. If it does, have the airbag system inspected by the Maruti Suzuki authorised workshop as soon as possible.

Special procedures are required for servicing or replacing an airbag. For that reason, only a Maruti Suzuki authorised workshop should be allowed to service or replace your airbags. Please remind anyone who services your Maruti Suzuki vehicle that it has airbags.

Service on or around airbag components or wiring must be performed only by a Maruti Suzuki authorised workshop. Improper service could result in unintended airbag deployment or could render the airbag inoperative. Either of these two conditions may result in severe injury.

To prevent damage or unintended inflation of the airbag system, be sure the lead-acid battery is disconnected and the ignition switch has been in the LOCK position for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle. Do not touch airbag system components or wires. The wires are wrapped with yellow tape or yellow tubing,


and the couplers are yellow for easy identification.

Scrapping a vehicle that has an uninflated airbag can be hazardous. Ask your dealer, body repair shop or scrap yard for help with disposal.

CAUTION

If you do not handle the airbags properly, they may inflate unexpectedly, resulting in personal injury. When scrapping the airbags or the vehicle that has the airbags, consult a Maruti Suzuki authorised workshop.

Exhaust Gas Warning

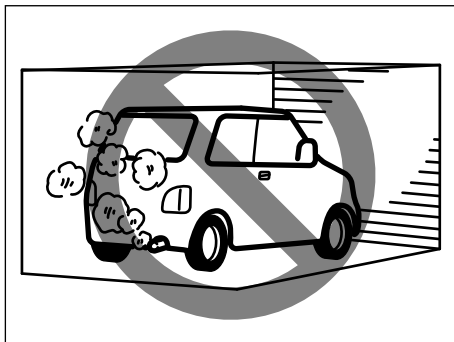

52D334

WARNING

Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, be sure to take the following precautions to help prevent carbon monoxide from entering your vehicle.

- Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon monoxide in cabin and may lead to suffocation or breathing problems and lead to death.

(Continued)

WARNING

(Continued)

- Do not park with the engine running for a long period of time, even in an open area. In case of long periods, danger of choking and death on being inside the vehicle is a possibility when the engine is running. If it is necessary to sit for a short time in a parked vehicle with the engine running, make sure the air intake selector is set to "FRESH AIR" and the blower is at high speed.
- Avoid operating the vehicle with the tailgate or trunk open. If it is necessary to operate the vehicle with the tailgate or trunk open, make sure all windows are closed, and the blower is at high speed with the air intake selector set to "FRESH AIR".
- To allow proper operation of your vehicle's ventilation system, keep the air inlet grille in front of the windshield clear of snow, leaves or other obstructions at all times.
- Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.


(Continued)

WARNING

(Continued)

- Have the exhaust system inspected periodically for damage and leaks. Any damage or leaks should be repaired immediately.

FOR SAFE DRIVING

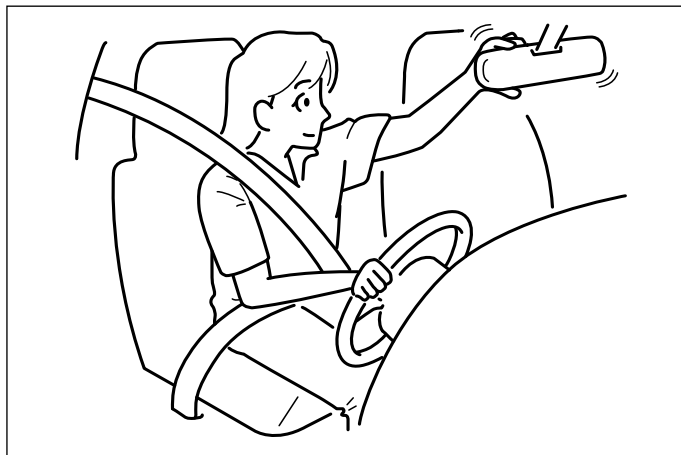


60G404

BEFORE DRIVING

Keys	2-1
Door Locks	2-2
Keyless entry system transmitter	2-5
Theft Deterrent Alarm System (if equipped)	2-8
Theft deterrent light (if equipped).....	2-10
Windows	2-11
Mirrors	2-13
Instrument Cluster	2-16
Speedometer	2-17
Tachometer	2-17
Fuel gauge	2-17
Temperature Gauge (if equipped).....	2-18
Brightness Control	2-18
Information Display	2-19
Warning and Indicator Lights	2-35
Lighting Control Lever	2-42
Headlight Leveling Switch	2-44
Turn Signal Control Lever	2-44
Hazard Warning Switch	2-46
Windshield Wiper and Washer Lever	2-46
Tilt Steering Lock Lever	2-48
Horn	2-48
Vehicle Loading	2-49
Trailer Towing your vehicle	2-49

BEFORE DRIVING

Keys

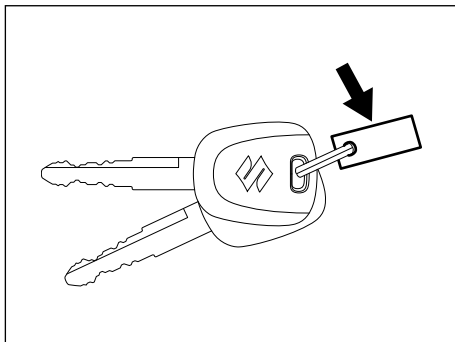

73R0130

Your vehicle comes with a pair of identical keys. Keep the spare key in a safe place. One key can open all of the locks on the vehicle.


The key identification number is stamped on a metal tag provided with the keys or on the keys. Keep the tag (if equipped) in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.

KEY NUMBER:

Immobilizer System

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system.

The engine can be started only with your vehicle's original immobilizer ignition key, which has an electronic identification code programmed in it. The key communicates the identification code to the vehicle when the ignition switch is turned "ON". If you need to make spare keys, see a Maruti Suzuki authorised workshop. The vehicle must be programmed with the correct identification code for the spare. A key made by an ordinary locksmith will not work.

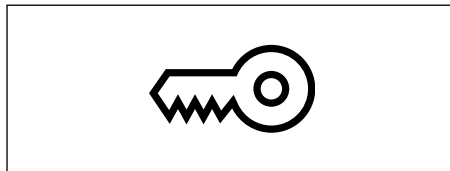

80JM122

If the immobilizer warning light blinks when the ignition switch is in "ON" position, the engine will not start.

If this light blinks, turn the ignition switch to LOCK position, and then turn it back to ON position.

If the light still blinks after the ignition switch is turned back to ON position, there may be something wrong with your key or with the immobilizer system. Ask a Maruti Suzuki authorised workshop to have the system inspected.

NOTE:

- If you lose your immobilizer ignition key, ask a Maruti Suzuki authorised workshop as soon as possible to deactivate the lost one, and to make a new key.
- If you own other vehicles with immobilizer keys, keep those keys away from the ignition switch when using your MARUTI SUZUKI vehicle. Otherwise, or the engine may not be started because they may interfere with your MARUTI SUZUKI vehicle's immobilizer system.
- If you attach any metal objects to the immobilizer key, it may not start the engine.

NOTICE

The immobilizer key are sensitive electronic instruments.

To avoid damaging them:

- Do not expose them to impacts, moisture or high temperature such as on the dashboard under direct sunlight.
- Keep them away from magnetic objects.


NOTICE

Do not modify or remove the immobilizer system. If modified or removed, the system cannot be properly operated.

This immobilizer system is maintenance-free.

Ignition Key Reminder

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

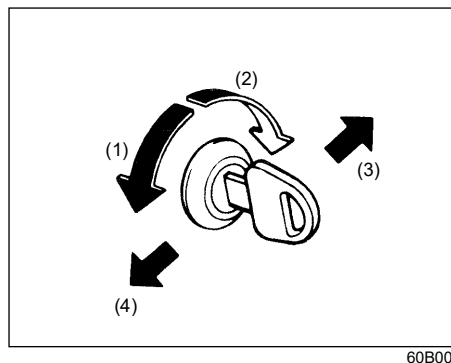Door Locks**Side Door Locks**


60B008

- (1) UNLOCK
- (2) LOCK
- (3) Front
- (4) Rear

To lock a front door from outside the vehicle:

- Insert the key and turn the top of the key toward the front of the vehicle, or
- Turn the lock knob forward, then pull and hold the door handle as you close the door.

To unlock a front door from outside the vehicle, insert the key and turn the top of the key toward the rear of the vehicle.

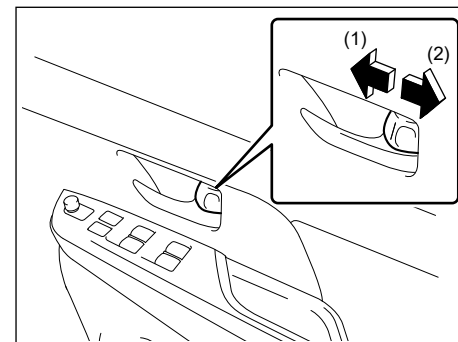

73R0001

- (1) LOCK
- (2) UNLOCK

To lock a door from inside the vehicle, turn the lock knob forward. Turn the lock knob rearward to unlock the door.


To lock a rear door from outside the vehicle, turn the lock knob forward and close the door. You do not need to pull and hold the door handle as you close the door.

NOTE:

Be sure to hold the door handle when you close a locked front door, or the door will not remain locked.

BEFORE DRIVING

Central Door Locking System

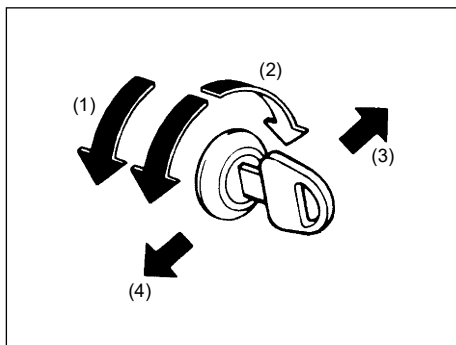

54G294


- (1) UNLOCK
- (2) LOCK
- (3) Front
- (4) Rear

You can lock and unlock all doors (including the tailgate) simultaneously by using the key in the driver's door lock.

To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle once.

To unlock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle twice.

To unlock the driver's door only, insert the key in that door lock and turn the top of the key toward the rear of the vehicle once.

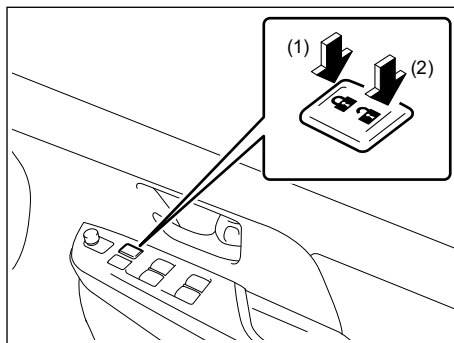

73R0002

- (1) LOCK
- (2) UNLOCK

You can also lock or unlock all doors by depressing the front or rear of the switch, respectively.

NOTE:

- You can also lock or unlock all doors by operating the transmitter. Refer to Keyless entry system transmitter in this section.

NOTE:


- All doors are automatically unlocked when you turn the ignition switch to the "LOCK" position and pull out the key.
- All doors are automatically locked for safety when the vehicle speed reaches 15 km/h.
- You can change the automatic locking or unlocking function mentioned above via

the setting mode of the information display. For details on how to use the information display, refer to "Information display" in this section.

Tailgate

WARNING

Always make sure that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.

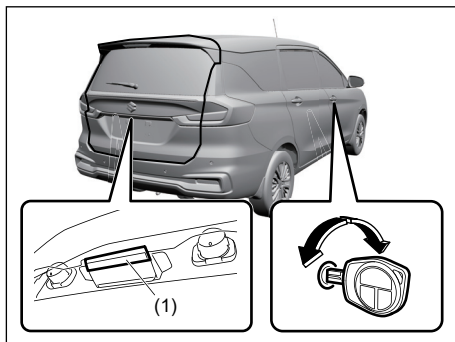

75U74EN020010

(1) Tailgate handle


You can lock and unlock the tailgate by using the key in the driver's door lock.

To open the tailgate, pull up the tailgate handle (1) and lift the tailgate.

If you cannot unlock the tailgate by using

the key in the driver's door lock due to a discharged lead-acid battery or malfunction, follow the procedure below to unlatch the tailgate from inside the vehicle.

- 1) Fold the rear seat forward for easier access. Refer to "Folding rear seats" section for details on how to fold the rear seat forward.

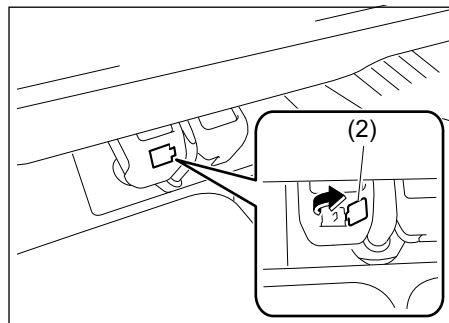


73R0020

- 2) Open the cover (2) in the lock mechanism of the tailgate.

NOTE:

Be careful not to lose the cover (2) because it is small and detachable.

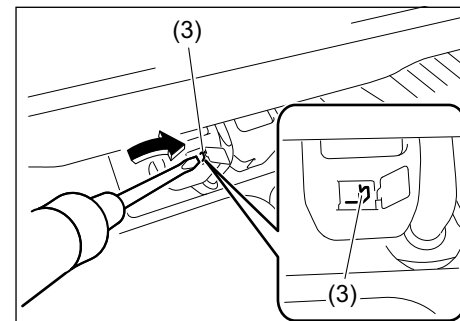

73R0021

- 3) Move the lever (3) in arrow direction by using a flat-bladed screwdriver to unlock the tailgate.
- 4) Push open the tailgate from inside. The tailgate will be latched again by simply closing the tailgate.


If the tailgate cannot be unlatched by pulling up the tailgate handle, have the vehicle inspected by a Maruti Suzuki authorised workshop.

CAUTION

Check that there is no one near the tailgate when pushing open the tailgate from inside the vehicle.

BEFORE DRIVING


Keyless entry system transmitter

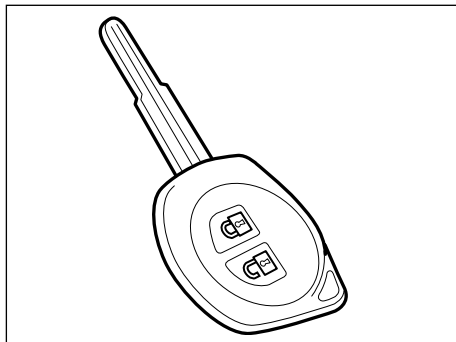

73RM02001

Your vehicle is equipped with a keyless entry system transmitter. The transmitter has only a keyless entry function. For details, refer to the following explanations.

Keyless Entry System Transmitter

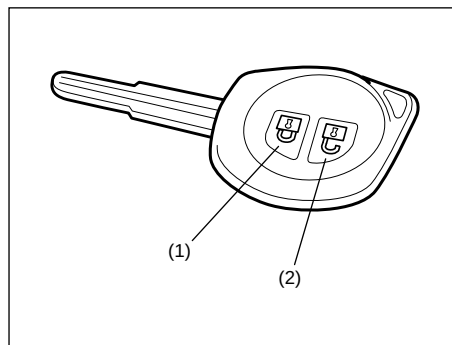

72R0148

- (1) LOCK button
- (2) UNLOCK button

You can lock or unlock all doors (including the tailgate) simultaneously by operating the transmitter near the vehicle.

Central door locking system

- To lock all doors, push LOCK button (1) once.
- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

NOTE:

You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

When the doors are unlocked:

- The turn signal lights will flash twice and the siren will sound twice when unlocked.
- If the interior light switch is in the "DOOR" position, the interior light will turn on for 15 seconds and then fade out. If you insert the key into the ignition switch during this time, the light will start to fade out immediately.

Be sure the doors are locked after you operate the LOCK button (1).

NOTE:

If no door is opened within about 30 seconds after the UNLOCK button (2) is oper-

ated, the doors will automatically lock again.

NOTE:

- If the security system was triggered due to an unauthorized entry into the vehicle and then you unlock the doors using the transmitter, the siren will sound 4 times to remind you. If this happens, check whether your vehicle has been broken into while you were away from it.
- Once you push both of the LOCK button (1) and UNLOCK button (2), then you push one of the buttons within 5 seconds, the siren will not sound.

NOTE:

- The maximum operating distance of the keyless entry system transmitter is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the transmitter, if the ignition key is inserted in the ignition switch.
- When any door is open, the door locks can be operated only unlock with the transmitter.
- If you lose one of the transmitters, ask a Maruti Suzuki workshop as soon as possible for a replacement. Be sure to have your dealer program the new transmitter code in your vehicle's memory so that the old code is erased.

NOTICE

The transmitter is a sensitive electronic instrument. To avoid damaging the transmitter:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the transmitter away from magnetic objects such as a television.

Car locator alarm function

This function is to get the attention of others. Push both of the LOCK button (1) and UNLOCK button (2) for more than 3 seconds. The turn signal lights will blink for about 27.5 seconds. Also, the siren will sound for about 27.5 seconds at the same time. To cancel the car locator alarm, press any button (LOCK or UNLOCK). You can also cancel the car locator alarm by turning the ignition switch to "ON" position.

NOTE:

The car locator alarm function will not activate when the key is in the ignition switch.


Battery replacement

If the transmitter becomes unreliable, replace the battery.

NOTE:

You may damage the transmitter when replacing its battery. Asking Maruti Suzuki authorised workshop is recommended.


To replace the battery of the transmitter:

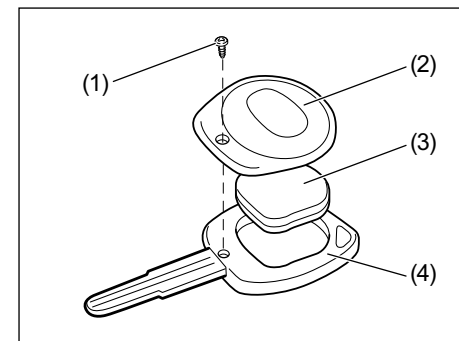

74TBX03055

- 1) Remove the screw (1), and open the transmitter cover (2).
- 2) Remove the transmitter (3) from the transmitter holder (4).

BEFORE DRIVING

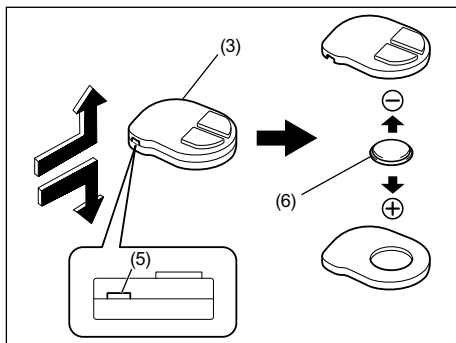

(6) Lithium disc type battery: CR1616

- 3) Separate the case up and down while applying force to the slot (5) on the side of the transmitter (3).
- 4) Replace the battery (6) so its + terminal faces the "+" mark of the transmitter.
- 5) Close the case and install it into the transmitter holder (4).
- 6) Close the transmitter cover (2), install and tighten the screw (1).
- 7) Make sure the door locks can be operated with the transmitter.
- 8) Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.

⚠ WARNING


Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

NOTICE

- The transmitter is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.
- When replacing the battery by yourself, the transmitter controller could be damaged affected by static electricity. Discharge the static electricity built up in your body by touching metal before replacing the battery.

NOTE:

Used batteries must be disposed of properly according to applicable rules or regulations and must not be disposed of with ordinary household trash.

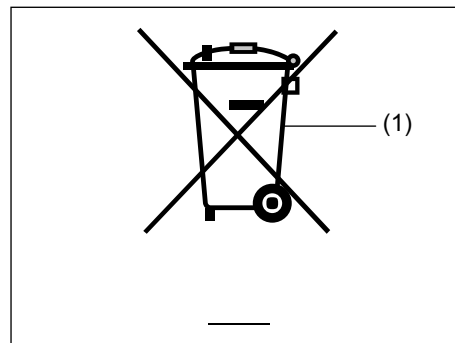

(1) Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that a used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate battery disposal. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult a Maruti Suzuki authorised workshop.

Theft Deterrent Alarm System (if equipped)

The security system sets after you close the all doors, engine hood. For the system to armed, you must lock the all doors with the keyless entry system transmitter.

Once the system is armed, any attempt to open a door by using any other means (*) than the keyless entry system transmitter, or open the engine hood will cause the alarm to be triggered.

* These means include the following:

- The key
- The lock knob on a door
- The power door locking switch

Also, in case that you have set the shock sensor to enabled state and set sensitivity of the pre-warning function and full blast warning function to a level other than 0, the alarm will be triggered if any attempt to tamper with the vehicle. The shock sensor can be selected enabled or disabled state, and sensitivity of each warning can be adjusted as desired. To set the shock sensor, ask your Maruti Suzuki authorised workshop or use the setting mode of the information display.

NOTE:

- *The default setting of the shock sensor is in the disabled state. Set to the enabled state and adjust sensitivity of each warning according to your preference. For details on how to use the information display, refer to “Information display” in this section.*
- *Your dealer may have already set the shock sensor of the vehicle to the enabled state before you purchase it. Consult your dealer for further information.*

NOTE:

- *The theft deterrent alarm system generates alarms when any of the predetermined conditions is met. However, the system does not have any function of blocking unauthorized entry into your vehicle.*
- *Always use the keyless entry system transmitter to unlock the doors when the theft deterrent alarm system has been armed. Using a key instead will trigger the alarm.*
- *If a person who does not know the theft deterrent alarm system is going to drive your vehicle, we recommend you explain the system and its operation to the person, or disable the system beforehand. Mistakenly triggering the alarm may cause a nuisance to others.*
- *Even if the theft deterrent alarm system is armed, you should still be careful to guard against theft. Do not leave money or things of value in your vehicle.*

NOTICE

Do not modify or remove the theft deterrent alarm system. If modified or removed, the system cannot be properly operated.


The theft deterrent alarm system is maintenance-free.

BEFORE DRIVING

How to arm the theft deterrent alarm system

With the all door (including engine hood and tailgate) closed, use the keyless entry system transmitter, to lock all the doors. The theft deterrent alarm system will be armed.

While the system is being armed, the indicator (1) continues to blink at intervals of approximately 2 seconds.

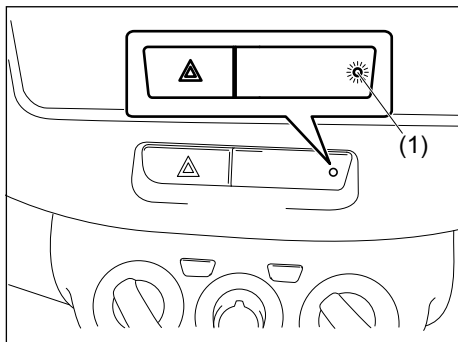

73R0025

NOTE:

- To prevent the alarm from being accidentally triggered, avoid arming it while anyone remains inside the vehicle. The alarm will be triggered if any person inside opens the door, tailgate, engine hood, or swings the vehicle (if the shock sensor is in the enabled state).
- The theft deterrent alarm system is not armed when all doors are locked using the key from outside, or using the door lock levers or the power door locking switch from inside.
- If any door is not operated within approximately 30 seconds after the doors have been unlocked using the keyless entry system transmitter, the doors are automatically locked again. When the doors are locked, the security system will be armed if the system is in the enabled state.

How to disarm the theft deterrent alarm system

Simply unlock the doors using the keyless push start system remote controller, the request switch or the keyless entry system transmitter. The theft deterrent light will go out, indicating that the theft deterrent alarm system is disarmed.

How to stop the alarm

Should the alarm be triggered accidentally, unlock the doors using the keyless entry system transmitter, or turn the ignition switch to "ON" position. The alarm will then stop.

NOTE:

- Even after the alarm has stopped, if you lock the doors using keyless entry system transmitter, the theft deterrent alarm system will be rearmed.
- If you disconnect the lead-acid battery while the theft deterrent alarm system is in the armed condition or the alarm is actually in operation, the alarm will be triggered or retriggered when the lead-acid battery is then reconnected, although, in the latter case, the alarm remains stopped for the period between disconnection and reconnection of the lead-acid battery.
- Even after the alarm has stopped at the end of the predetermined operation time, it will be triggered again if any of the doors, tailgate or engine hood is opened, or the vehicle feels a shock (if the shock sensor is in the enabled state), without disarming the theft deterrent alarm system.

Checking whether the alarm has been triggered during parking

If the alarm was triggered due to an unauthorized entry into the vehicle and you turn the ignition switch to ON position, the security system indicator will blink rapidly for about 8 seconds and a buzzer will beep 4 times during this period. If this happens, check whether your vehicle has been broken into while you were away from it.


Security system indication

- If any of the doors or tailgate are opened without unlocking by the keyless entry system transmitter, all turn signal lights start to blink and the interior buzzer beeps intermittently. After 5 seconds, the siren will sound for about 27.5 seconds. The security system indicator continues to blink during this time.
- If the engine hood is opened, all turn signal lights blink, and the siren sounds for about 27.5 seconds. The security system indicator continues to blink during this time. (If the shock sensor is in the enabled state.)
- If the vehicle feels a shock higher than the pre-warning sensitivity, the siren sounds for about 2 seconds (pre-warning). If the vehicle feel a shock higher than the full blast warning sensitivity, the siren sounds for about 5 seconds (full blast warning). The security system indicator continues to blink during this time.

NOTE:

If you set the full blast warning sensitivity higher than the pre-warning sensitivity in the setting mode of the information display, or the vehicle feels such shock as to be able to trigger the full blast warning, the full blast warning will be triggered preferentially. In this case, the pre-warning will not be triggered.

Theft deterrent light (if equipped)

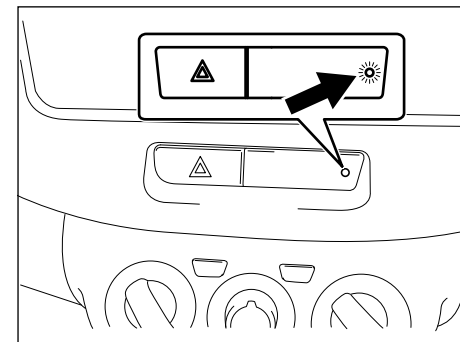

73R0178

This light will blink with the ignition switch in LOCK or ACC position. The blinking light is intended to deter theft by leading others to believe that the vehicle is equipped with a security system.

NOTE:

For the theft deterrent alarm system, refer to "Theft deterrent alarm system (if equipped)" in this section.


BEFORE DRIVING

Windows

Power Window Controls

The power windows can only be operated when the ignition switch is in the ON position.


Driver's side

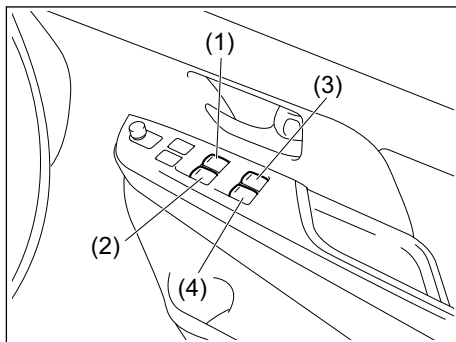

73R0004


The driver's door has a switch (1) to operate the driver's window, and a switch (2) to operate the front passenger's window or there are switches (3), (4), to operate the rear right and left passenger windows, respectively.

Passenger's door / rear door

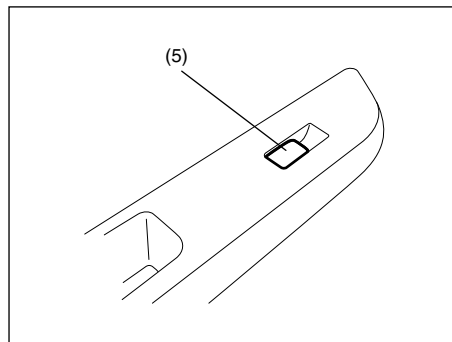

74LHT0205

The passenger's door has a switch (5) to operate the passenger's window.

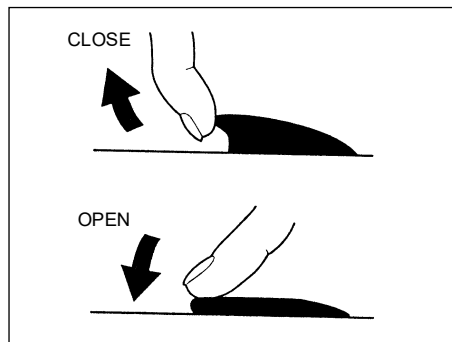


81A009

To open a window, push the top part of the switch. To close the window, lift up the top part of the switch.

The driver's window has AUTO-DOWN and AUTO-UP features for greater convenience (at toll booths or drive-through restaurants, for example). These features allow the driver to open the window without holding the window switch in DOWN or UP position. Press down or lift up the driver's window switch completely and release it. To stop the window before it reaches the FULL-DOWN or FULL-UP position, pull up or push down the switch briefly.

Lock switch

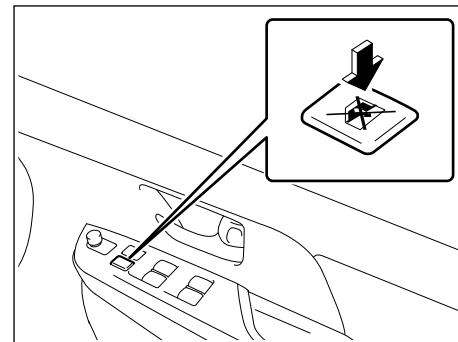

73R0005

The driver's door also has a lock switch for the passenger's windows. When you push in the lock switch, the passenger's windows cannot be raised or lowered by operating any of the switches (2), (3), (4) or (5). To restore normal operation, release the lock switch by pushing again.

⚠ WARNING

- When opening or closing a window, a part of body such as hands, legs and neck may be caught by the window and an accident may occur.
- When you operate the electric window controls from the outside of the window, your hands or neck may be caught by the window and an accident may occur. Do not operate the electric window controls from the outside of the window.
- You should always lock the passenger's window operation when there are children in the vehicle. Children can be seriously injured if they get part of their body caught by the window during operation.
- To avoid injuring an occupant by window entrapment, check that no part of the occupant's body such as hands or head is in the path of the power windows when closing them.
- Always remove the ignition key or take the keyless push start system remote controller with you when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could use the power window switches and get trapped by the window.

NOTE:

If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.

Pinching Prevention Function (if equipped)

The driver's window is equipped with a pinching prevention function. This function detects a foreign object that is caught in the window as it is being closed by AUTO-UP feature, which allows you to close the window without holding the window switch in UP position, and stops the window from closing to prevent damage.

⚠ WARNING

To avoid injuring an occupant by window entrapment, check that no part of the occupant's body such as hands or head is in the path of the electric window when closing it. This function may not detect an object due to the size, hardness, or position of the object being caught in the closing window.

⚠ CAUTION

- The pinching prevention function does not operate while you are holding the window switch in UP position.
- The pinching prevention function may not detect an object caught in the window just before the window is fully closed.

NOTE:

Even if you cannot close the window by the AUTO-UP feature because there may be something wrong with the pinching prevention function, you can close the window by holding the window switch in UP position. If you drive in extreme off-road condition, the pinching prevention function may operate accidentally because the window reacts to vehicle jolting.

Pinching prevention function initialization

When you disconnect and reconnect the lead-acid battery or replace the fuse, the function will be deactivated. In this condition, the AUTO-DOWN feature will be deactivated, while the AUTO-UP feature may remain activated. The pinching prevention function needs to be initialized.

To initialize the pinching prevention function, use the following procedure:

- 1) Turn the ignition switch to "ON" position.

BEFORE DRIVING

- 2) Open the driver's window fully by holding the window switch in DOWN position.
- 3) Close the driver's window by holding the switch in UP position, and keep holding the switch for 2 seconds after the window is fully closed.
- 4) Check the driver's window to see if the AUTO-DOWN/UP feature works.

⚠ WARNING

Whenever you disconnect and reconnect the lead-acid battery or replace the fuse, the pinching prevention function needs to be initialized. The pinching prevention function will not be activated until the initialization is completed.


If the AUTO-DOWN/UP feature will not work after initialization, there might be something wrong with the pinching prevention function. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

Mirrors

⚠ WARNING

Failure to observe following points may result in loss of vehicle control and cause an accident, leading to death or serious injury. Always follow below points while driving.

- Do not adjust the mirrors while driving.
- Always unfold all the outside rearview mirrors and adjust properly before driving.
- Do not place objects in the rear of the vehicle which may hinder visibility or interfere with your vision from the rear window glass.

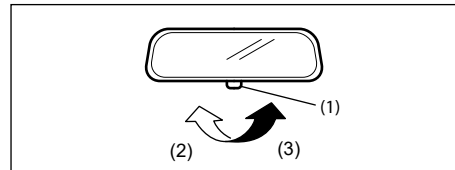

68LMT0206


- (2) Day driving
(3) Night driving

To adjust the mirror, set the selector tab (1) to the day position, and then move the mirror up, down or sideways by hand to obtain the best view.

When driving at night, you can move the selector tab to the night position to reduce glare from the headlights of vehicles behind you.

Inside Rearview Mirror

You can adjust the inside rearview mirror by hand to see the rear of your vehicle in the mirror.

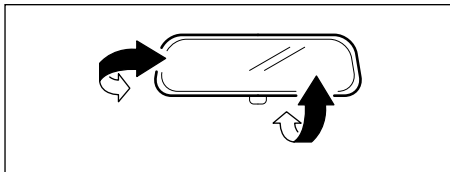

68LMT0205

⚠ WARNING


- Always adjust the mirror with the selector set to the day position.
- Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you. Be aware that in this position you may not be able to see some objects that could be seen in the day position.

⚠ CAUTION

Do not modify the inside rearview mirror or install a non-genuine wide mirror. It could result in injury during accident.

Outside Rearview Mirrors**⚠ WARNING**

Be careful when judging the size or distance of a vehicle or other object seen in the side convex mirror. Be aware that objects look smaller and appear farther away than when seen in a flat mirror.

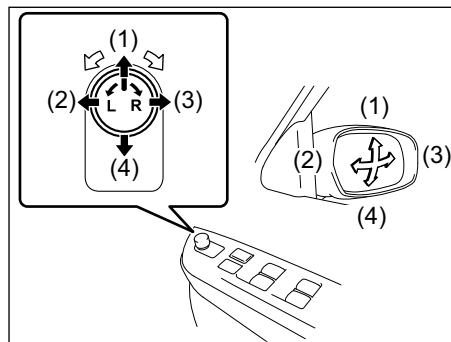

73R0030

The switch to control the electric mirrors is located on the driver's door panel. You can adjust the mirrors when the ignition switch is in "ACC" or "ON" position. To adjust the mirrors:


- 1) Rotate the selector switch to the left or right to select the mirror you wish to adjust.
- 2) Push the side of the switch to the direction in which you wish to move the mirror.
- 3) Return the selector switch to the center position to prevent unintended mirror movement.

NOTICE

- The electric type outside rearview mirror operates even though the ignition switch is in the ACC position. However, to prevent unnecessary battery discharge, do not adjust the mirrors longer than necessary while the engine is not running.
- The mirrors stop moving when they reach the maximum adjusting angles, but the motor continues to operate while the switch is pressed. Do not continue to press the switch in such a situation as the motor may be damaged.
- Do not attempt to adjust the outside rearview mirror by hand which may cause damage to the motor.
- Do not fold the electrical foldable outside rearview mirror by hand. It could cause motor failure.

BEFORE DRIVING

Outside Rearview Mirrors Folding Switch

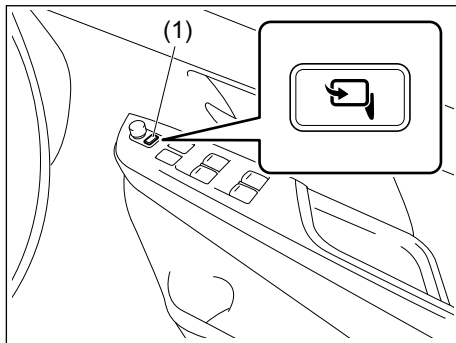

You can fold the mirrors when you park the vehicle in a narrow space. When the ignition switch is in the ACC or ON position, push the folding switch (1) to fold and unfold the mirrors.

Make sure the mirrors are completely unfolded before you start driving.

CAUTION

Moving mirrors can pinch and injure a hand. Do not allow any one's hand to get near the mirrors when folding and unfolding the mirrors.

NOTE:


- If you press the folding switch to open the outside rearview mirrors and simultaneously start the engine, then the out-

side rearview mirrors may get stuck during that moment. To open the outside rearview mirrors completely, again press the folding switch after starting the engine.

- Slight time difference in opening of both outside rearview mirrors is due to angular positioning of the driver seat.

Instrument Cluster


- | | | |
|----------------|------------------------------------|---------------------------------|
| 1. Speedometer | 4. Temperature gauge (if equipped) | 7. Indicator selector knob |
| 2. Tachometer | 5. Information display | 8. Warning and indicator lights |
| 3. Fuel gauge | 6. Trip meter selector knob | |

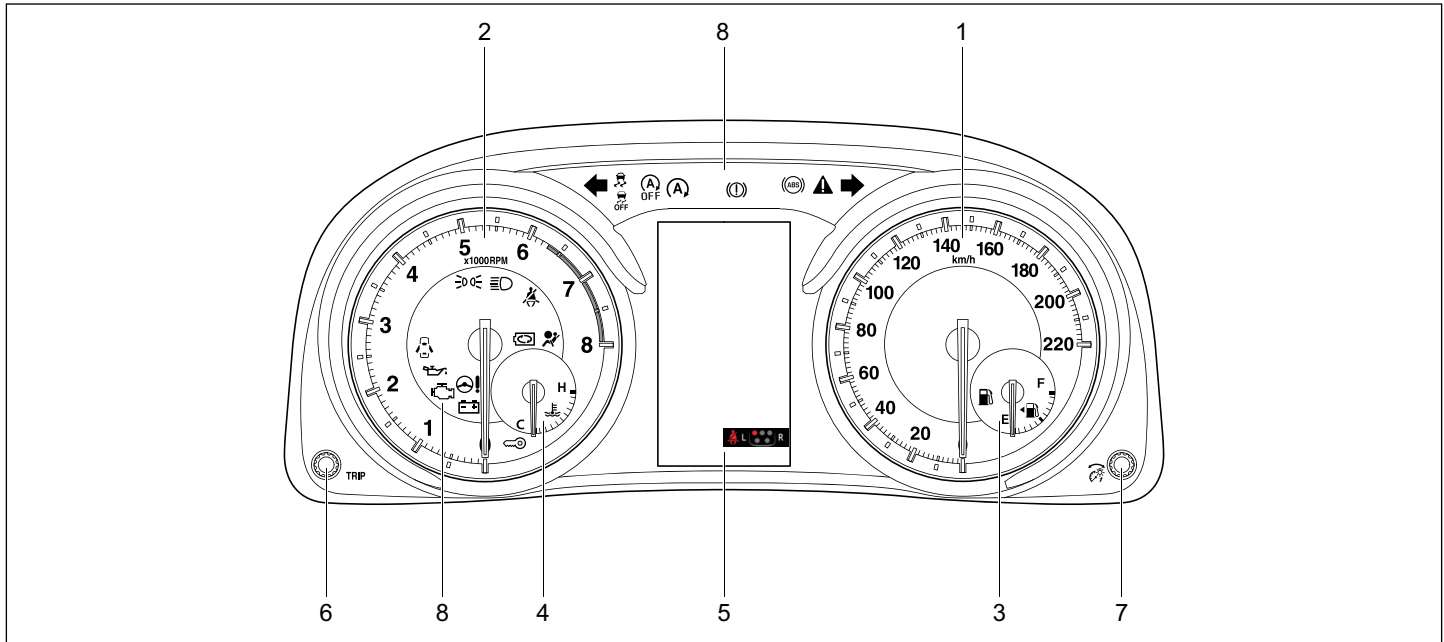

72RM02024

BEFORE DRIVING

Speedometer

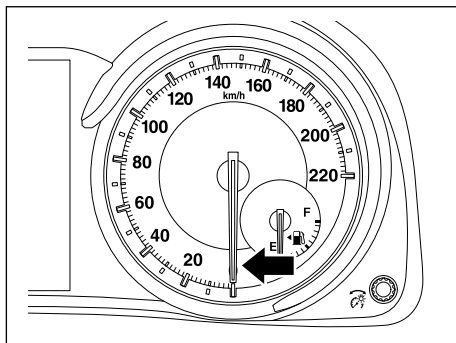


72R0056

The speedometer indicates vehicle speed in km/h.

NOTE:

Maximum speed of the vehicle is 80 km/hr as per government regulation.

Tachometer

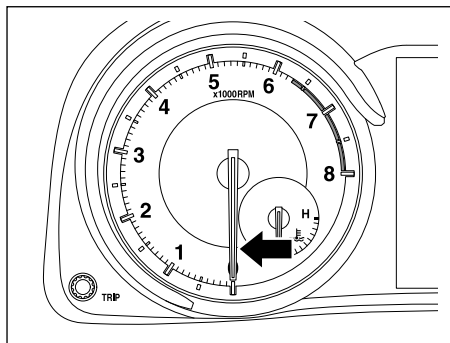


72R0057

The tachometer indicates engine speed in revolutions per minute.

NOTICE

Never drive the vehicle with the engine revving in the red zone or severe engine damage can result. Keep the engine speed below the red zone even when downshifting to a lower gear position. Refer to “Downshifting maximum allowable speeds” in the “OPERATING YOUR VEHICLE” section.

Fuel gauge

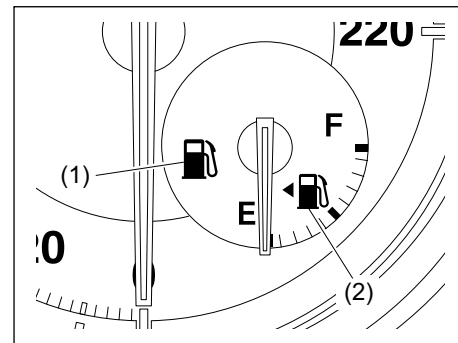

72R0058

When the ignition switch is in “ON” position, this gauge gives a rough indication of the amount of fuel in the fuel tank. “F” stands for full and “E” stands for empty.

If the indicator approaches a low level (near “E”) on fuel gauge, refill the tank as soon as possible.

NOTE:

The indicator moves a little depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

If the low fuel warning light (1) comes on, refill the fuel tank as soon as possible.

NOTE:

The activation point of the low fuel warning light (1) varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel movement in the tank.


Refer to “Low fuel warning light” in “Warning and indicator lights” in this section for details.

The mark (2) indicates that the fuel filler door is located on the left side of the vehicle.

NOTICE

To minimize the possibility of damage to catalytic converter or other components of the vehicle, avoid driving the vehicle near empty fuel tank level.

Temperature Gauge (if equipped)

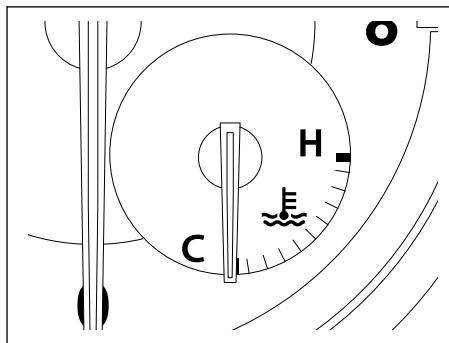


72R0059

When the ignition switch is in “ON” position, this gauge indicates the engine coolant temperature. Under normal driving conditions, the indicator should stay within the normal, acceptable temperature range between “H” and “C”. If the indicator approaches “H”, overheating is indicated. Follow the instructions for engine overheating in “EMERGENCY SERVICE” section.


NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

Brightness Control

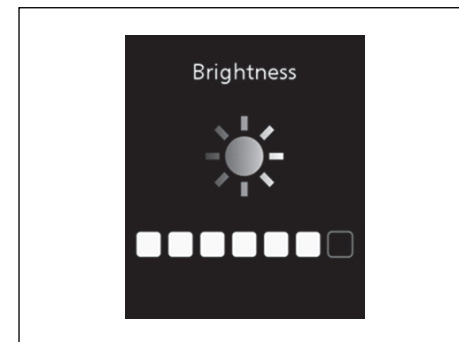

72R0063

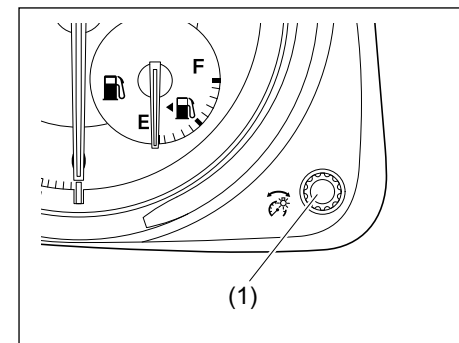

72R0060

BEFORE DRIVING

When the ignition switch is turned “ON”, the instrument panel lights come on.

Your vehicle has a system to automatically dim the brightness of the instrument panel lights when the position lights or headlights are on.

You can adjust the meter illumination brightness regardless of whether the position lights or headlights are off or on.

To increase the brightness of the instrument panel lights, turn the brightness control knob (1) clockwise.

To reduce the brightness of the instrument panel lights, turn the brightness control knob (1) counterclockwise.

WARNING

Do not adjust the brightness of the instrument panel lights while driving. Otherwise, you could lose control of the vehicle.

NOTE:

- If you do not turn the brightness control knob within several seconds of activating, the brightness control display will be canceled automatically.
- When you reconnect the lead-acid battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.


NOTE:

If you adjust to the maximum brightness level when the position lights or headlights are on, the following functions will be canceled.

- The function which automatically dims the brightness of instrument panel lights.
- The function which operates with the brightness control, except maximum brightness level.


Information Display

The information display is shown when the ignition switch is in “ON” position.

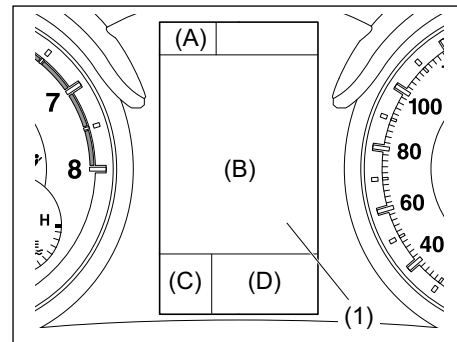

72RM02023

(1) Information display

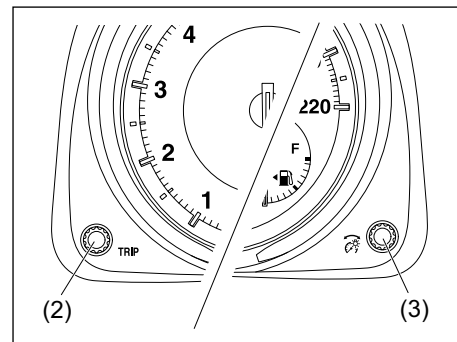

72R0062

(2) Trip meter selector knob

(3) Indicator selector knob

The information display shows the following information.

Display (A)

Clock

Display (B)


Fuel consumption / Driving range / Average speed / Driving time / Clock and date / Motion / Torque and power / Accelerator and brake / Energy flow / Total idling stop time and Total idling fuel saved

Display (C)

Gearshift indicator

Display (D)

Odometer and Trip meter

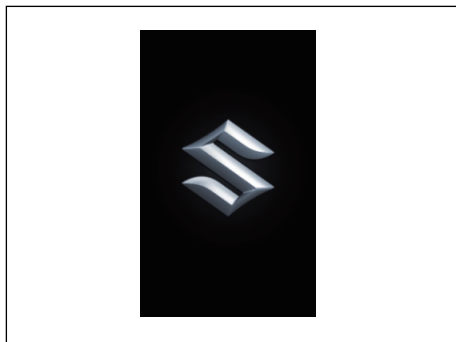

72R0135

When the ignition switch is turned "ON", the message shown in the above illustration

will appear on the display for several seconds.

Some warning and indicator messages may appear on the display when the ignition switch is in "ACC" or "LOCK" position.

Clock

When the ignition switch is in "ON" position, the display (A) shows the time.

To set the clock, follow "Setting mode" instructions in this section.


⚠ WARNING

**If you attempt to adjust the display while driving, you could lose control of the vehicle.
Do not attempt to adjust the display while driving.**

Fuel Consumption / Driving Range / Average Speed / Driving Time / Total Idling Stop Time and Total Idling Fuel Saved / Clock and Date / Motion / Torque and Power / Accelerator and Brake / Energy flow (if equipped)

When there are no warning or indicator messages on the display (B), you can select one of the following indications to appear on the display: instantaneous fuel consumption, average fuel consumption, driving range, average speed, driving time, total idling stop time and total idling fuel saved, clock and date, motion, torque and power, accelerator and brake, energy flow or no indication.

BEFORE DRIVING

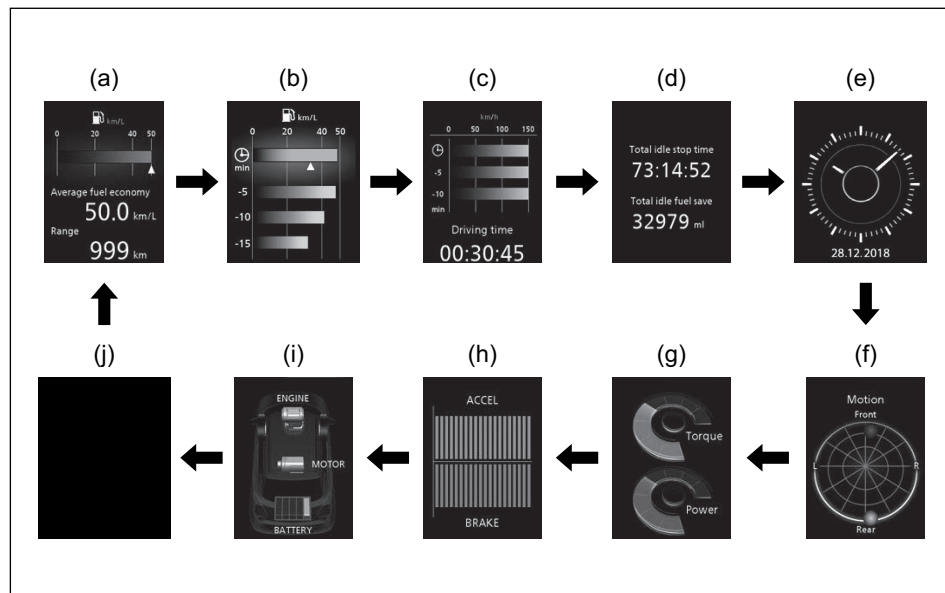

72R0064

To switch the display indication, push the indicator selector knob (3) quickly.


NOTE:

The value of instantaneous fuel consumption, average fuel consumption, driving range, average speed, total idling fuel saved, motion, torque and power, accelerator and brake and energy flow shown on the display are affected by the following conditions;

- road condition
- surrounding traffic condition
- driving condition
- vehicle condition
- a malfunction which causes the malfunction indicator light to come on or blink

Instantaneous fuel consumption

The display shows instantaneous fuel consumption with a bar graph only when the vehicle is moving.

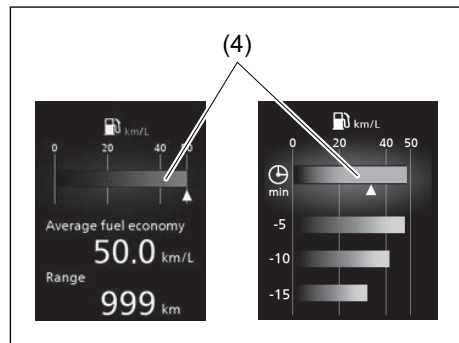

52RM21070

(4) Instantaneous fuel consumption

NOTE:


- The display does not show the bar graph unless the vehicle is moving.
- Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km, km/L, MPG (UK).
- The indicated maximum value of instantaneous fuel consumption is one of the followings. No more than the maximum value will be indicated on the display even if the actual instantaneous fuel consumption is higher.
 - For L/100km setting: 30
 - For km/L setting: 50

- For MPG (UK) setting: 80
- The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.
- The display shows estimated values. Indications may not be the same as actual values.

Average fuel consumption / 5-minute average fuel consumption / 1-driving cycle average fuel consumption

Average fuel consumption from previous reset and 5-minute average fuel consumption, and 1-driving cycle average fuel consumption are shown.

(Average fuel consumption)

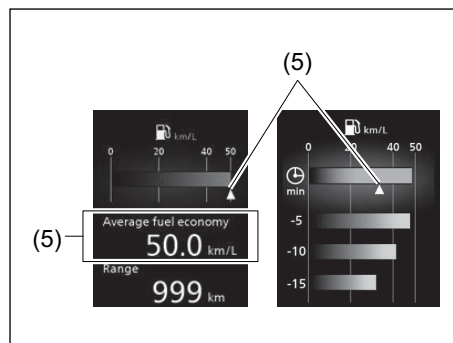

52RM21080

(5) Average fuel consumption

If you selected average fuel consumption the last time you drove the vehicle, the display shows the last value of average fuel consumption from previous driving when the ignition switch is turned "ON". Unless you reset the value of average fuel consumption, the display indicates the value of average fuel consumption based on the average fuel consumption during previous driving.

NOTE:

When you reconnect the negative (-) terminal to the lead-acid battery, the value of average fuel consumption will be shown after driving for a period of time.

You can select the timing to reset the value of average fuel consumption by one of the following three methods;

- Reset after refuel: the value of average fuel consumption will be reset automatically by refueling.
- Reset with trip meter A: the value of average fuel consumption will be reset automatically by resetting trip meter A.
- Reset manually: the value of average fuel consumption will be reset by pushing and holding the indicator selector knob (3) when the display indicates the average fuel consumption.


To change the timing to reset the value of average fuel consumption, refer to "Setting mode" in this section.

BEFORE DRIVING

NOTE:


If you add only a small amount of fuel when you select "Reset after refuel", the average fuel consumption value may not be reset.

(5-minute average fuel consumption)

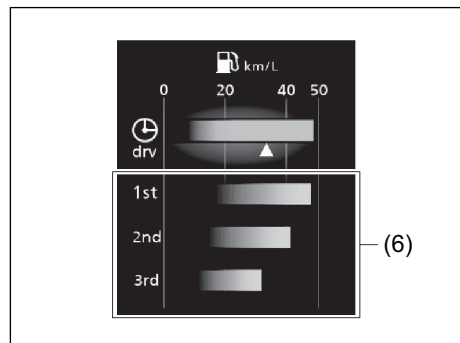

(6) 5-minute average fuel consumption


(1-driving cycle average fuel consumption)

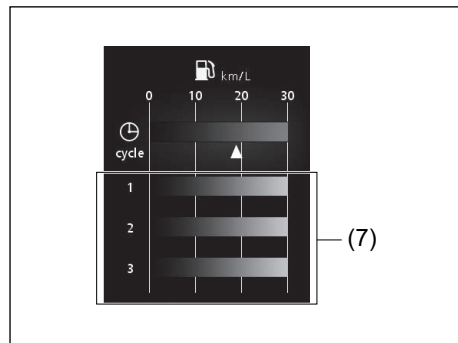

(7) 1-driving cycle average fuel consumption

You can check transition of average fuel consumption every 5 minutes from 15 minutes before up to now. Also, you can check transition of average fuel consumption the past 3 driving cycles. Time indication and driving cycle indication can be changed. For details, refer to "Setting mode" in this section.

Driving range

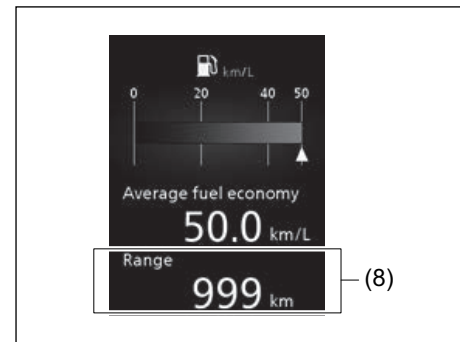

(8) Driving range

If you selected driving range the last time you drove the vehicle, the display indicates "---" for a few seconds and then indicates the current driving range when the ignition switch is turned "ON".

The driving range shown in the display is an indicative unit of the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions and current fuel level in the fuel tank.

When the low fuel warning light comes on, the display "---" will appear. If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

When you refuel, the driving range is updated. However, if you only add a small amount of fuel, the correct value will not be displayed.


NOTE:

- If you refuel when the ignition switch is in "ON" position, the driving range may not indicate the correct value.
- When you reconnect the negative (–) terminal to the lead-acid battery, the value of driving range will be shown after driving for a period of time.
- If there are substantial changes in the driving pattern or vehicle usage, the displayed range may vary significantly

Average speed / 5-minute average speed

Average speed from previous reset and 5-minute average speed are shown.

(Average speed)

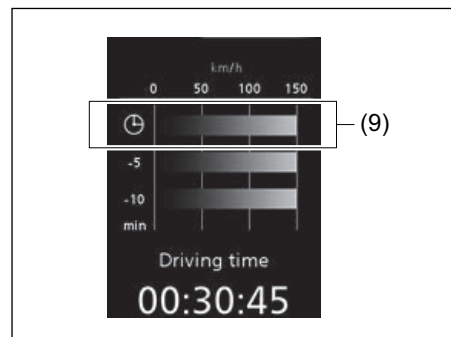

52RM21100

(9) Average speed

If you selected average speed the last time you drove the vehicle, the display indicates the last value of average speed from previous driving when the ignition switch is turned "ON". Unless you reset the value of average speed, the display indicates the value of average speed which includes average speed during previous driving.


To reset the value of average speed, push and hold the indicator selector knob (3) for about 2 seconds when the display indicates an average speed. The display

shows "---" and then indicates a new average speed after driving for a short time.

NOTE:

When you reconnect the negative (–) terminal to the lead-acid battery, the value of average speed will be shown after driving for a period of time.

(5-minute average speed)

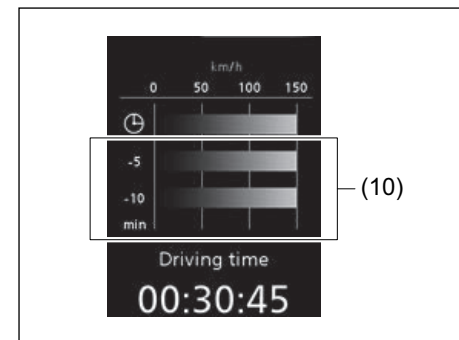


52RM21110

(10) 5-minute average speed

You can check transition of 5-minute average speed every 5 minutes from 10 minutes before up to now.

BEFORE DRIVING

Driving time

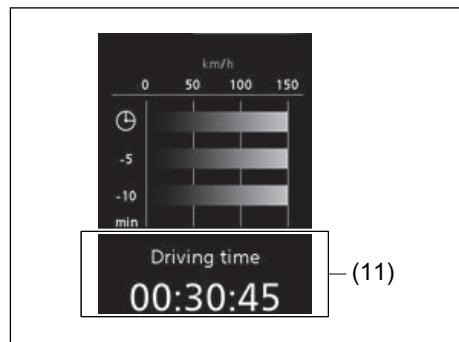

52RM21120


(11) Driving time

Driving time from previous reset is shown. To reset the driving time, push and hold the indicator selector knob (3) for about 2 seconds when the display indicates a driving time. The display shows “---” and then indicates a new driving time after driving for a short time.

NOTE:

- Disconnection of the lead-acid battery negative (-) terminal will reset the indication of the driving time.
- The indicated maximum value of driving time is 99:59:59. No more than this value will be indicated on the display until you reset the driving time.

Total idling stop time and total idling fuel saved

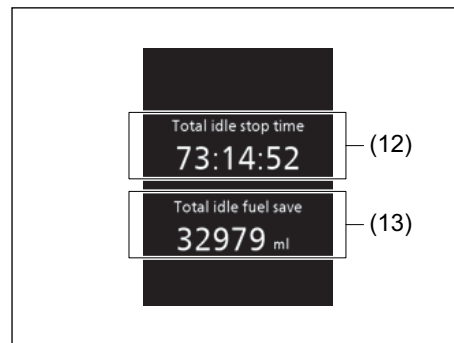

52RM217

(12) Total idling stop time
(13) Total idling fuel saved

The display shows the total length (in hours, minutes and seconds) of engine stopping time and the total amount (in milliliters) of fuel conservation by ENG ASTOP system since the indication was reset.

- To reset the total idling stop time and the total idling fuel saved, push and hold the indicator selector knob (3) for a while when the display shows the total idling stop time and the total idling fuel saved.

NOTE:


- The indicated maximum value of the total idling stop time is 99:59:59 and this value is fixed until it is reset.
- When you reconnect the negative (-) terminal to the lead-acid battery, the

value of the total idling stop time and the total idling fuel saved will be reset.

Clock and date

Date and time are shown. For the setting procedure, refer to “Setting mode” in this section.

Motion

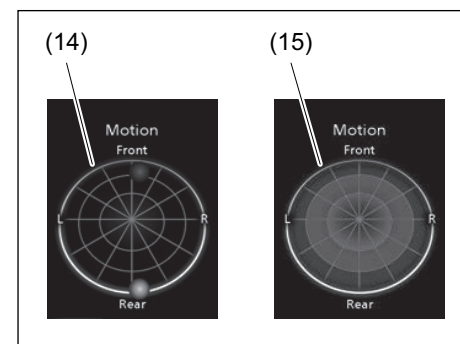

52RM218

The meter indication is different depending on whether the vehicle is stopped or running.

When driving, real time movement of imaginal G position (center of gravity) is displayed on the globe (14), which is resultant with inertia force.

When stopped, historical data of imaginal G positions applied to the vehicle body during the driving is shown as a graph (15).

G position history graph when the vehicle stopped can be changed to indicate or hide. For details, refer to "Setting mode" in this section.

WARNING

Do not look in the display intensively while driving. Doing so may result in an accident.

NOTE:

- If G position history graph at the vehicle stopped has been set in indication mode, the graph (15) is shown for several seconds when you turn the ignition switch to "LOCK" position after driving.
- The graph is shown approximately and the actual movement may differ.

Torque and power


Present engine torque and power are shown.

Accelerator and brake

Present accelerator pedal depressing degree and brake line pressure are shown. The display is selectable to indicate or not to indicate. For details, refer to "Setting mode" in this section.

Energy flow (if equipped)


The state of SHVS operation can be checked on the information display. For details, refer to "SHVS (Smart Hybrid Vehicle by Suzuki)" in "OPERATING YOUR VEHICLE" section.

Information display	Description
 72R0138	When the vehicle is running, ISG (Integrated Starter Generator) assists engine power as an electric motor.
 72R0139	When the vehicle is powered by the engine.
 72R0140	When decelerating your vehicle, the ISG generates electricity without engine power.
 72R0141	When the engine automatically stops by the ENG A-STOP system.


BEFORE DRIVING

Information shown after driving

When you turn the ignition switch to LOCK position, the following information appears for several seconds on the information display.

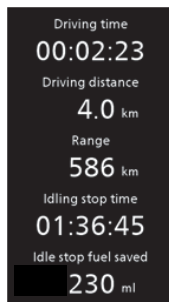


Driving time
00:02:23
Driving distance
4.0 km
Range
586 km
Idling stop time
01:36:45
Idle stop fuel saved
230 ml

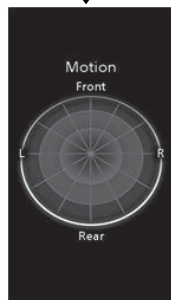

52RM21140

Gearshift Indicator

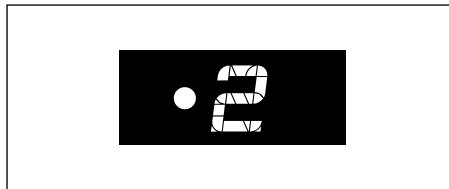

Gearshift Indicator

Refer to "Gearshift indicator" in "OPERATING YOUR VEHICLE" section.

Odometer / Trip meter

The display (D) shows the odometer and trip meter.

The odometer records the total distance the vehicle has been driven.

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use trip meter A or trip meter B independently.

To switch the display indication (D), push the trip meter selector knob (2) quickly.

To reset the trip meter, push and hold the trip meter selector knob (2) for about 2 seconds when the display shows the trip meter.


NOTICE

Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

Setting Mode

When the ignition switch is in "ON" position and the vehicle is stationary, you can enter into the setting mode of the information display by pushing and holding the indicator selector knob (3) for more than 3 seconds.

- To select the setting item that you want to change, turn the indicator selector knob (3) left or right.
- To change the setting, push the indicator selector knob (3).
- To exit the setting mode, select "Back" and push the indicator selector knob (3).

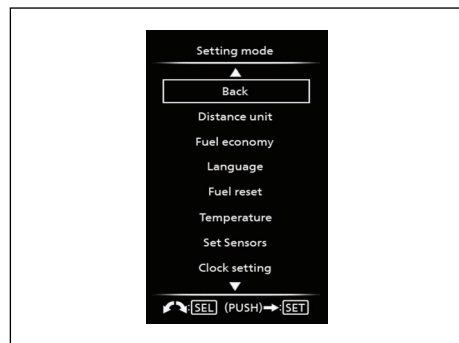

72R0142

NOTE:

The currently selected setting item is surrounded by a frame.

NOTE:

- If you push and hold the indicator selector knob (3) to enter into the setting mode when the display (B) shows average fuel consumption, average speed, driving time, total idling stop time and total idling fuel saved (if equipped), the value will be reset simultaneously. If you do not want to reset the value, push the indicator selector knob quickly to switch the indication of the display.
- If you turn the ignition switch or start to move the vehicle when the display is in the setting mode, the setting mode will be canceled automatically.

Distance unit

(Odometer / trip meter / driving range / average speed distance unit setting)

You can change the units in which odometer / trip meter / driving range / average speed distance is displayed.

Fuel economy

(Fuel consumption unit setting)

You can change the units that fuel consumption is displayed in.

Language (if equipped)

You can change the language of the information display.

Fuel reset

(Average fuel consumption reset setting)

You can change when the value of average fuel consumption is reset.

Temperature

(Temperature unit setting) (if equipped)

You can change the units that temperature is displayed in.

- To change the temperature unit, select "Temperature" in "Setting mode". Then, select "°C" or "°F".

BEFORE DRIVING

Clock setting (if equipped)

(Adjusting the clock)

- Adjust the clock by selecting "Clock setting" in "Setting mode". Then, select "Adjust clock".
- To change the hour indication, turn the indicator selector knob (3) left or right repeatedly when the hour indication blinks. To change the hour indication quickly, turn and hold the indicator selector knob (3). To set the hour indication, push the indicator selector knob (3) and the minute indication blinks.
- To change the minute indication, turn the indicator selector knob (3) left or right repeatedly when the minute indication blinks. To change the minute indication quickly, turn and hold the indicator selector knob (3). To set the minute indication, push the indicator selector knob (3).

(Selecting 12H/24H format)

- Switch the time indication between 12-hour and 24-hour format by selecting "Clock setting" in "Setting mode". Then, select "12H" or "24H".

(Adjusting the date)

- Adjust the date by selecting "Clock setting" in "Setting mode". Then select "Adjust date".
- To adjust year, month and day, operate the indicator selector knob (3) in the same way as adjusting the clock.

Set sensors

(Parking sensor setting)

The parking sensor can be switched between the normal mode and trailer mode.

Door lock (Door lock setting)

(Door unlock)

- All Doors: Unlock all doors by turning the key, or operating the keyless entry system transmitter once
- Driver Door: Unlock all doors by turning the key, or operating the keyless entry system transmitter, twice (default setting)

(Auto lock)

- Manual Lock: Disable the automatic door locking function
- Speed Syncro: Lock all doors when the vehicle speed reaches 15 km/h (default setting)

(Auto unlock)

- Syncro Off: Disable the automatic door unlocking function.
- IG-OFF Sync: Unlock all doors when the key is pulled out from the ignition switch.

(Alarm)

- You can turn off or on the siren sound when the door(s) is(are) locked or unlocked.

Lights

(Lane change setting)

The turn signal and its indicator can be set whether they flash three times even if you return the turn signal control lever immediately after moving it.

Antitheft

(Shock sensor system setting)

You can change the on/off of the shock sensor.

(Shock sensor P setting)

You can adjust the pre-warning sensitivity of shock sensor.

(Shock sensor F setting)

You can adjust the full blast warning sensitivity of shock sensor.

Display item (if equipped)

("Car color" setting)

You can change the car color of the information display.

("Calendar dis" setting)

You can select whether you show the calendar on the information display or not.

("Calendar form" setting)

You can change the calendar form of the information display.

To change the calendar form, select "Calendar form" in "Display item". Then, select the display order of date, month and year.

("Fuel eco hist" setting)

Transitional indication of average fuel consumption can be switched to time indication and driving cycle indication.

("Motion hist" setting)

Indication of G position history graph at the vehicle stopped can be selected to enable or disable.

("Idling disp" setting)

Display of ENG A-STOP operation with the ignition switch in LOCK position is selectable to indicate or not to indicate.

("Idling warn" setting)

You can switch whether the information display shows the warning and indicator messages related on the ENG A-STOP system.

("Pedal op disp" setting)

Display of "Accelerator and brake" is selectable to indicate or not to indicate.

("Regen disp" setting)

You can choose that deceleration energy regenerating indicator light comes on or does not come on.

Default**(initialization setting)**

If you select "YES" and push the indicator selector knob (3), all settings will be reinitialized.

Warning and Indicator Messages

The display shows warning and indicator messages to let you know about certain vehicle problems.

A tone may also sound to alert you.

If warning and indicator messages appear on the display, follow the messages.

Master warning indicator light

80P0382

When the display shows warning and indicator messages, the master warning indicator light may also blink.

NOTE:

- When the problem that causes a message to appear is corrected, the message will disappear.
- If a message is displayed, and other problems requiring a message occur, the message for each of the problems will be alternately displayed about every 5 seconds.
- When you push and hold the indicator selector knob (2) for about 2 seconds while a message is displayed, the message will disappear temporarily. If the problem that caused the message is not corrected, the message will appear again after 5 seconds.


BEFORE DRIVING

Warning and indicator messages

All model


Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 72R0069	Blinks (only while vehicle is in motion) 	Beep (one time from interior buzzer; only while vehicle is in motion)	A door or tailgate is not properly closed. Stop the vehicle in a safe place and close the door or tailgate properly. (#1)
 52RS005	Blinks 	Continuous beep (from interior buzzer)	The parking brake is not released. Stop the vehicle in a safe place and release the parking brake.

(#1) This message will disappear after a while even if the problem that caused the message to appear is not corrected.

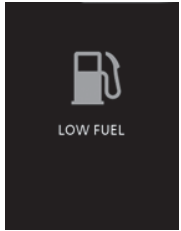Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 52RM21170	Blinks 	Continuous beep (from interior buzzer)	The headlights and/or the position lights are left on. Turn them off.
 52RM21180	Off	Beep (one time from interior buzzer)	Fuel is low. Refill it immediately. (#1)

(#1) This message will disappear after a while even if the problem that caused the message to appear is not corrected.

BEFORE DRIVING

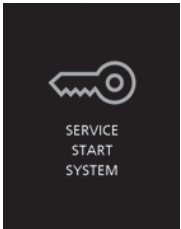 52RM21240	Blinks 	Beep (one time from interior buzzer)	There is a problem with the immobilizer. Also, the vehicle lead-acid battery voltage may be decreased. When the message is displayed even if you start the engine with normal voltage of the vehicle lead-acid battery, have your vehicle inspected by a Maruti Suzuki authorised workshop.
 52RM21230	Blinks 	Beep (one time from interior buzzer)	There is a problem with the steering lock system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.

Vehicle with ESP® system


Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 52RM21340	Blinks 	Beep (one time from interior buzzer)	There may be a problem with ESP® system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.
Hill hold control system  52RM21350	Blinks 	Beep (one time from interior buzzer)	There may be a problem with hill hold control system (if equipped). Have your vehicle inspected by a Maruti Suzuki authorised workshop.

ESP® is a registered trademark of Mercedes-Benz Group AG.

BEFORE DRIVING

Warning and Indicator Lights

Brake System Warning Light

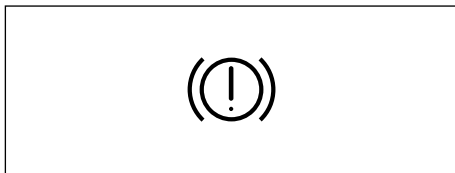

82K170

Three different types of operations exist depending on the vehicle's specification.

- The light comes on briefly when the ignition switch is turned "ON".
- The light comes on when the parking brake is engaged with the ignition switch in "ON" position.
- The light comes on under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (proportioning valve function) of the ABS system fails.

If the brake system warning light comes on while you are driving the vehicle, it may mean that there is something wrong with the vehicle's brake system.

If this happens:

- 1) Pull off the road and stop carefully.

WARNING

Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.

- 2) Test the brakes by carefully starting and stopping the vehicle on the shoulder of the road.
- 3) If you determine that it is safe, drive the vehicle cautiously at low speed to the nearest Maruti Suzuki authorised workshop for repairs or tow the vehicle to the nearest a Maruti Suzuki authorised workshop for repairs.

WARNING

If any of the following conditions occur, you should immediately ask a Maruti Suzuki authorised workshop to inspect the brake system.

- If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.
- If the brake system warning light does not come on when the ignition switch is turned "ON".
- If the brake system warning light comes on at any time during vehicle operation.

NOTE:

Because the brake system is self-adjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.

NOTE:

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.

Anti-Lock Brake System (ABS) Warning Light



65D529

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

If the light stays on, or comes on when driving, there may be something wrong with the ABS.

If this happens:

- 1) Pull off the road and stop carefully.
- 2) Turn the ignition switch to LOCK position and then start the engine again.

If the warning light comes on briefly and then turns off, the system is normal. If the warning light still stays on, something is wrong with the system.

If the light and the brake system warning light stay on or come on simultaneously when driving, your ABS system is equipped with the rear brake force control function (proportioning valve function) and there may be something wrong with both the rear brake force control function and then anti-lock function of the ABS system.

If one of the above occurs, have the system inspected by a Maruti Suzuki authorised workshop.

If the ABS becomes inoperative, the brake system will function as an ordinary brake system that does not have this ABS system.

For details of ABS system, refer to "Anti-Lock Brake System (ABS)" in "OPERATING YOUR VEHICLE" section.

Engine Oil Pressure Warning Light



50G051

When the ignition switch is turned "ON" or, this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is insufficient oil pressure. If the light comes on when driving, pull off the road as soon as you can and stop the engine.

Check the oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by a Maruti Suzuki authorised workshop before you drive the vehicle again.

NOTICE

- If you operate the engine with this light on, severe engine damage can result.
- Do not rely on the engine oil pressure warning light to indicate the need to add oil. Periodically check the engine oil level.

BEFORE DRIVING

ESP® Warning Light (if equipped)



52KM133

ESP® is a registered trademark of Daimler AG.

This light blinks 5 times per second when one of the following systems is activated.

- Stability control system
- Traction control system

If this light blinks, drive carefully.

When the ignition switch is turned “ON”, the light comes on briefly so you can check that the light is working. If the light stays on or comes on when driving, there may be something wrong with the ESP® systems (other than ABS). You should have the system inspected by a Maruti Suzuki authorised workshop.

For details of the ESP® systems, refer to “Electronic Stability Program (ESP®) (if equipped)” in “OPERATING YOUR VEHICLE” section.

WARNING

The ESP® systems cannot prevent accidents. Always drive carefully.

ESP® OFF Indicator Light (if equipped)




73R0196

When the ignition switch is turned “ON”, this light comes on briefly so you can check that the light is working.

When the ESP® OFF switch is pushed to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light comes on and stays on.

For details of the ESP® systems, refer to “Electronic Stability Program (ESP®) (if equipped)” in “OPERATING YOUR VEHICLE” section.

Engine coolant temperature warning light (if equipped)

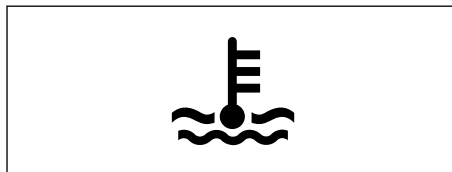

69RH179

When the ignition switch is turned “ON”, this light comes on briefly so you can check that the light is working.

This indicator has the following two following functions.

Low engine coolant temperature light (blue color)

This light stays on while the engine is still cold and goes off when the engine has warmed up.


If this light blinks, there is a problem with the system. Have your vehicle inspected by an authorized Maruti Suzuki workshop.

High engine coolant temperature warning light (red color)

If this light blinks while driving, it means the engine is running hot. Avoid driving conditions that may lead to actual overheating. If the light stays on without blinking, then the engine is overheating. Follow the instructions in “Engine trouble: Overheating” of “EMERGENCY SERVICE” section.

NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

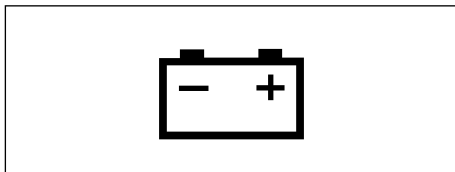Charge Warning Light

50G052

When the ignition switch is turned "ON", this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is something wrong with the lead-acid battery charging system. If the light comes on when the engine is running, the charging system should be inspected immediately by a Maruti Suzuki authorised workshop.

Driver's Seat Belt Reminder Light / Front Passenger's Seat Belt Reminder Light

60G049

When the driver or front passenger does not buckle his or her seat belt, this light will come on and/or blink.

For details of the seat belt reminder, refer to "Seat Belts and Child Restraint Systems" in "FOR SAFE DRIVING" section.

Rear Passenger's Seat Belt Reminder Light**Instrument Cluster**

72RM02003

The reminder lights remind the rear passengers to fasten their seat belts.

For details of the seat belt reminder, refer to "Seat Belt Reminder" in "FOR SAFE DRIVING" section.

AIRBAG Warning Light

63J030

When the ignition switch is turned "ON", this light comes on for several seconds so you can check that the light is working.


The light will come on and stay on if there is a problem in the airbag system or the seat belt pretensioner system.

⚠ WARNING

If the Airbag warning light does not blink or come on briefly when the ignition switch is turned "ON", stays on for more than 10 seconds, or comes on while driving, the airbag system or the seat belt pretensioner system may not work properly, which could result in serious injury in the event of a collision. Have both systems inspected by a Maruti Suzuki authorised workshop.

BEFORE DRIVING

Malfunction Indicator Light

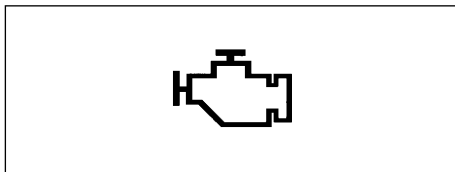

65D530

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument cluster to indicate when it is necessary to have the emission control system serviced. When the ignition switch is turned "ON", this light comes on. When the engine is started, the light goes out.

If the malfunction indicator light comes on or blinks when the engine is running, there is a damage in the emission control system.

Bring the vehicle to a Maruti Suzuki authorised workshop to have the damage fixed.

CAUTION


If this light blinks, stop your vehicle immediately in a safe place to avoid catalyst's melting problem since there may be a misfire in the engine.

- Do not drive or stop over such as withered grasses.
- Drive slowly if required to move the vehicle.

NOTICE

Continuing to drive the vehicle when the malfunction indicator light is on or blinking can cause permanent damage to the vehicle's emission control system, and can affect fuel economy and driveability.

Immobilizer Warning Light

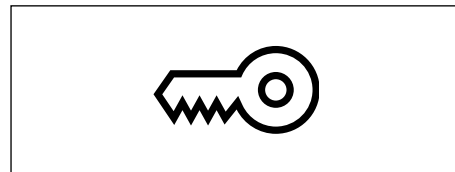


80JM122

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

If this light blinks or stays on, there is a problem with the system.

If this light still blinks or stays on even if you start the engine with normal voltage of the vehicle battery, ask a Maruti Suzuki authorised workshop to have the system inspected.

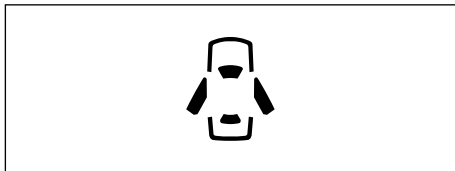Open Door Warning Light

54G391

This light remains on until all doors (including the tailgate) are completely closed.

If any door (including the tailgate) is open when the vehicle is moving, a ding sounds to remind you to close all doors completely.

Low Fuel Warning Light

54G343

If this light comes on, refuel the fuel tank as soon as possible.

When this light comes on, a ding sounds once to remind you to refuel. If you do not refuel, a ding sounds every time when the ignition switch is turned "ON".

NOTE:

The activation point of this light varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel movement in the tank.

Electric Power Steering Light

79J039

When the ignition switch is turned "ON", this light comes on. When the engine is started, the light goes out.

If this light comes on while driving, the power steering system may not work properly. Have the system inspected by a Maruti Suzuki authorised workshop.

NOTE:

The following steering wheel operations may gradually take more effort while parking or driving at a very low speed. This is not a malfunction of the steering system, but the power steering control system limits the power assist in order to prevent it from overheating.

- *The steering wheel is operated very often.*
- *The steering wheel is kept in a fully turned position for a long while.*

When the power steering control system cool down, the power steering system will return to its original condition.

However, repeating these operations could cause damage to the power steering system.

BEFORE DRIVING

- This light comes on when continuing period of time of limiting the power assist in order to prevent from overheating.


NOTE:

If the power steering system does not work properly, it will require greater effort to steer, but you still will be able to steer.

NOTE:

If the steering is operated, you may hear noise caused by electric power steering operation. This is normal and indicates that the power steering system works properly.

Turn Signal Indicators

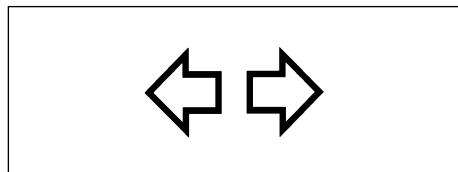

50G055


When you turn on the left or right turn signals, the corresponding green arrow on the instrument panel will blink along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will blink along with all of the turn signal lights.

NOTE:

If any abnormality of the turn signals is observed, such as fast blinking, there may be malfunction in the turn signal system.

Ask your Maruti Suzuki authorized workshop to inspect the system.


Main Beam (high beam) Indicator Light

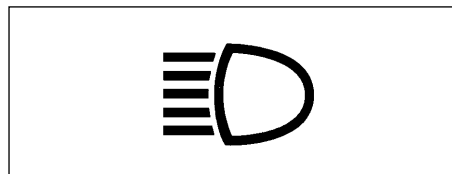

50G056

This indicator comes on when headlight main beams (high beams) are turned on.


Illumination Indicator Light

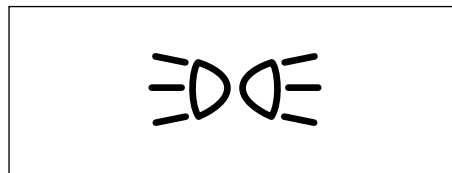

64J045

This indicator light comes on while the position lights, tail light and/or the headlights are on.

ENG A-STOP Indicator Light (if equipped)

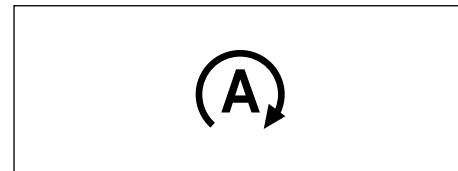


72M00032

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

When the engine stops automatically, this light comes on.

For details, refer to "ENG A-STOP System (Engine Auto Stop Start System)" in "OPERATING YOUR VEHICLE" section..

ENG A-STOP OFF Light (if equipped)

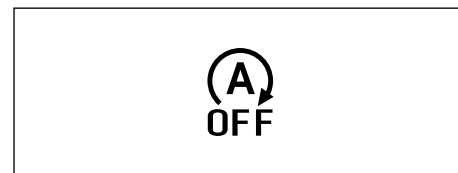

72M00159

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on briefly so you can check that the light is working.

When you push the ENG A-STOP OFF switch, this light comes on.


The ENG A-STOP OFF indicator light blinks under the following conditions:

- If there is something wrong with the ENG A-STOP system
- If there is something wrong with the lithium-ion battery
- When the lead-acid battery is due for replacement

If the ENG A-STOP OFF indicator light blinks, have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.

For details, refer to “ENG A-STOP OFF light” in the “OPERATING YOUR VEHICLE” section.

Deceleration Energy Regenerating Indicator Light (if equipped)

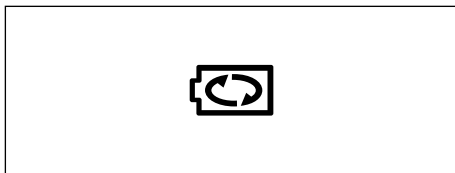

72M00168

When the ignition switch is turned to “ON” position, this light comes on briefly so you can check that the light is working.

When the deceleration energy regenerating function is working, this light comes on.

For details, refer to “SHVS (Smart Hybrid

Vehicle by Suzuki)” in “OPERATING YOUR VEHICLE” section.

Master Warning Indicator Light (if equipped)




80P0382

When the ignition switch is turned “ON”, this light comes on briefly so you can check that the light is working.

When the information display shows warning and indicator messages, this indicator light may also blink.

For details, refer to “Information display” in this section.

Lighting Control Lever

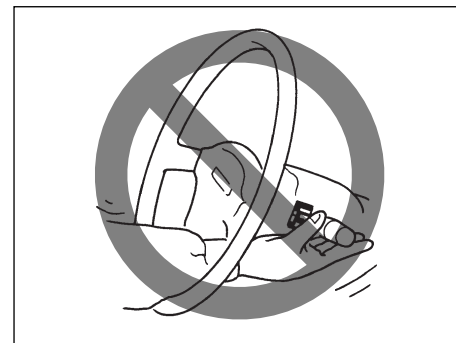


65D611

⚠ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

BEFORE DRIVING

Lighting Operation

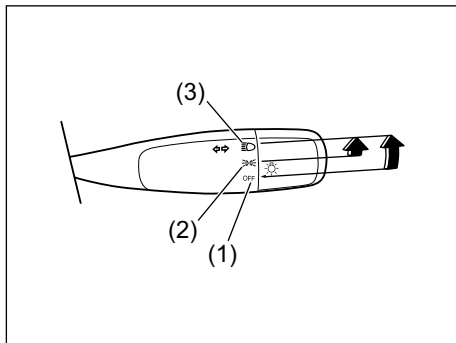

To turn the lights on or off, twist the knob on the end of the lever. There are three positions:

OFF (1)


All lights are off.

☞☞ (2)

Front position lights, tail lights, license plate light and instrument lights are on, but headlights are off.

☞☞☞ (3)

Front position lights, tail lights, license plate light, instrument lights and headlights are on.

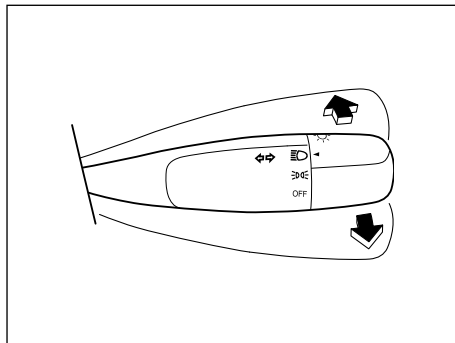

With the headlights on, push the lever forward to switch to the high beams (main beams) or pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument cluster will come on. To momentarily activate the high beams (main beams) as a passing signal, pull the lever slightly toward you and release it when you have completed the signal.


Light Reminder Buzzer

The interior buzzer continuously beeps if you open the driver's door without turning off the headlights and position lights. This function is triggered under the following condition:

The headlights and/or position lights are on even after the ignition switch is turned to "LOCK" position.

The buzzer stops sounding when you turn off the headlights and position lights.

Headlight Leveling Switch

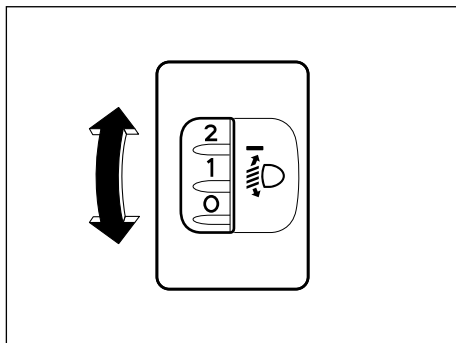


75RM008

Level the headlight beam according to the load condition of your vehicle by turning this switch. The chart shows the appropriate switch position for different vehicle-load conditions.

Loading Conditions	Switch Position	
	Except CNG model	CNG model
Driver (1 Seat)	0	0
Driver + Co-Driver (2 Seats)	0.5	0.5
Driver + Co-Driver + 3rd row 2 Seats (Total-4 Seats)	2	1.5
All Passengers (7 Seats)	2.5	2
All Passengers + Cargo (Evenly distributed load in luggage boot)	3	2
Driver + Cargo (Evenly distributed load in luggage boot)	4.5	4

Turn Signal Control Lever

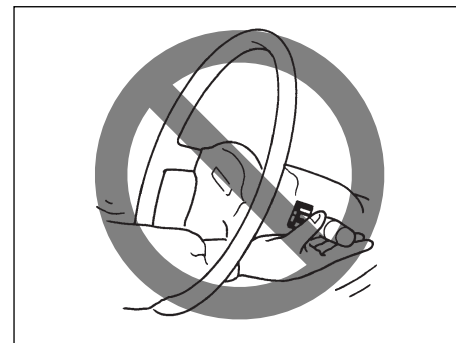

65D611

WARNING


To avoid possible injury, do not operate controls by reaching through the steering wheel.

BEFORE DRIVING

Turn Signal Operation

With the ignition switch in "ON" position, move the lever upward or downward to activate the right or left turn signals.

Normal turn signal

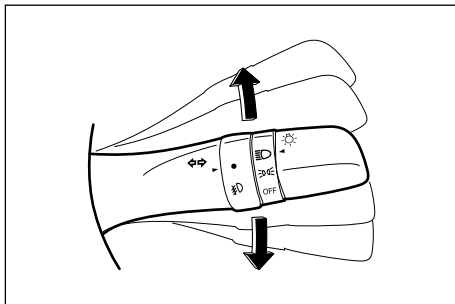

73R0059


- Move the turn signal control lever (1) as follows:
 - Turning left: Move the lever upward.
 - Turning right: Move the lever downward
- When you move the lever, the turn signal lights and the turn signal light indicators on the instrument cluster will flash simultaneously.
- When the turn is completed, the signal will cancel and the lever will return to its normal position.
- When you move the lever to its original position, the turn signal lights as well as the turn signal light indicators on the instrument cluster will be turned off.

- The turn signal control lever in the illustration is a typical example; the actual equipment depends on the vehicle type.

NOTE:

If the angle by which you turn the steering wheel is small, the lever will not return automatically to its original position. In this case, return the lever to its original position manually.

Lane change signal

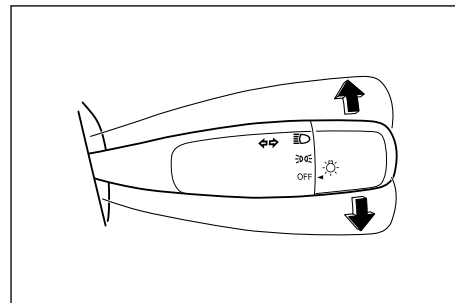

60MK014

Move the lever partially upward or downward to turn right or left and hold the lever in the moved position.


- The turn signal and its indicator flash while the lever is held at the moved position.
- The turn signal and its indicator flash 3 times even if you returned the lever immediately after the activation.

NOTE:

- *The turn signal and its indicator can be set whether they flash 3 times after the turn signal lever is returned via the information display. Refer to "Information display" in this section.*

You can customize the setting for the number of flashing times of the turn signal and its indicator (1 to 4 times). Please ask a Maruti Suzuki authorised workshop for the customization.

Hazard Warning Switch

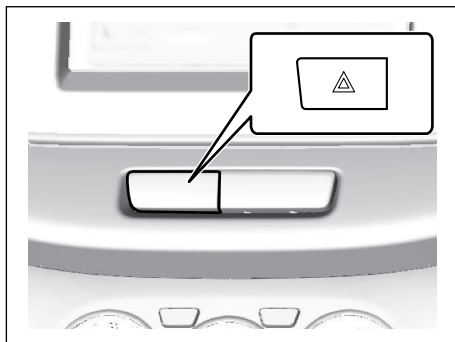

73R0011


Push the hazard warning switch to activate the hazard warning lights. All turn signal lights and both turn signal indicators will flash simultaneously. To turn off the lights, push the switch again.

Use the hazard warning lights to warn other drivers of possible risk of traffic hazard when you park your vehicle in case of emergency.

NOTICE

If you keep the hazard warning lights turned on for long period of time without the engine running, the lead-acid battery may run out. Do not keep the hazard warning lights on for long hours without the engine running.

Windshield Wiper and Washer Lever

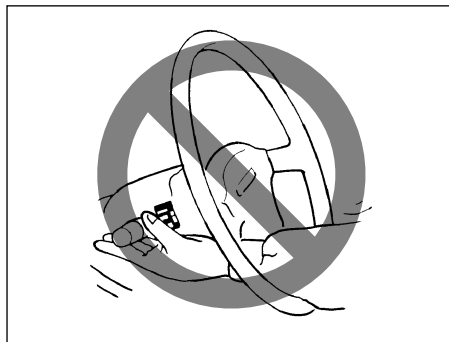

57L21128

⚠ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Wiper and Washer Operation

When the ignition switch is in "ON" position, you can use the wiper/washer lever or switch.

When the wipers are under heavy load such as covered by snow, the breaker will be activated and the wipers will stop operating to protect the wiper motor from overheating.


If the wiper stops during operation, do the following methods.

- 1) Stop the vehicle in a safe place, and turn the engine off.
- 2) Move the wiper lever and switch to "OFF" position.
- 3) Remove obstacles such as snow on the wipers.
- 4) After a while, when the temperature of the wiper motor becomes low enough, the breaker will be reset automatically and the wipers will be able to use.

If you cannot use the wipers after a while, there may be another problem. Ask a Maruti Suzuki authorised workshop to have the wipers inspected.

BEFORE DRIVING

Windshield Wipers

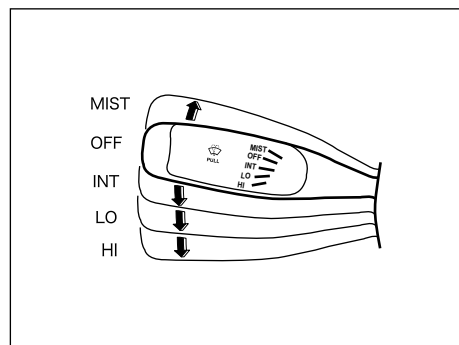


74LM02008

To turn the windshield wipers on, move the lever down to one of the three operating positions. In "INT" position, the wipers operate intermittently. "INT" position is very convenient for driving in mist or light rain. In "LO" position, the wipers operate at a steady low speed. In "HI" position, the wipers operate at a steady high speed. To turn off the wipers, move the lever back to "OFF" position.

Move the lever up and hold it to "MIST" position, the windshield wipers will turn on continuously at low speed.

Windshield Washer

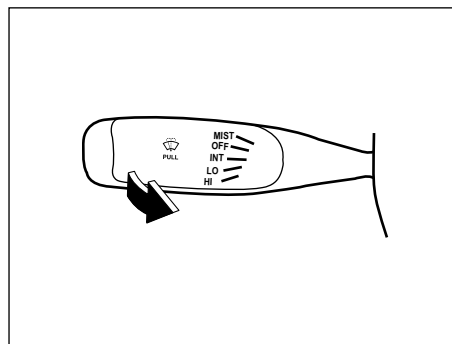

74LM02009

To spray windshield washer fluid, pull the lever toward you. The windshield wipers will automatically turn on at low speed if they are not already on and "INT" position is equipped.

WARNING


- To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.
- Do not use radiator antifreeze solution in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also damage your vehicle's paint.

NOTICE

To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:

- Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.
- Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.
- Clear ice or packed snow from the wiper blades before using the wipers.
- Check the washer fluid level regularly. Check it often when the weather is bad.
- Only fill the washer fluid reservoir 3/4 full during cold weather to allow room for expansion if the temperature falls low enough to freeze the solution.

Tilt Steering Lock Lever

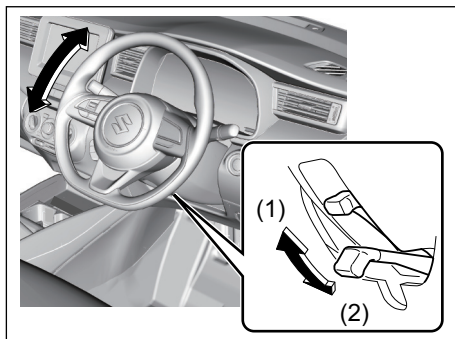

75U74EN020011

- (1) LOCK
- (2) UNLOCK


The lock lever is located under the steering column. To adjust the steering wheel height:

- 1) Push down the lock lever to unlock the steering column.
- 2) Adjust the steering wheel to the desired height and lock the steering column by pulling up the lock lever.
- 3) Try moving the steering wheel up and down to make sure it is securely locked in position.

WARNING

Never attempt to adjust the steering wheel while the vehicle is moving or you could lose control of the vehicle.

Horn

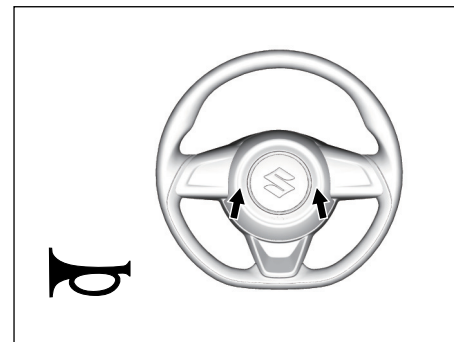

73R0062

Press the horn button of the steering wheel to sound the horn. The horn will sound with the ignition switch in any position.

BEFORE DRIVING

Vehicle Loading

Your vehicle was designed for specific weight capacities. The weight capacities of your vehicle are indicated by the Gross Vehicle Weight Rating (GVWR) and the Permissible maximum Axle Weight (PAW, front and rear). The GVWR and PAW (front and rear) are listed in "SPECIFICATIONS" section.

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).

PAW – (Front and Rear) Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle. Compare these weights to the GVWR and PAW (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.

WARNING


Never overload your vehicle. The gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories, cargo plus trailer nose weight if towing a trailer) must never exceed the Gross Vehicle Weight Rating (GVWR). In addition, never distribute a load so that the weight on either the front or rear axle exceeds the Permissible maximum Axle Weight (PAW).

WARNING

Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.

Trailer Towing your vehicle

Your MARUTI SUZUKI was originally designed to carry people and a normal amount of cargo, not to tow a trailer.

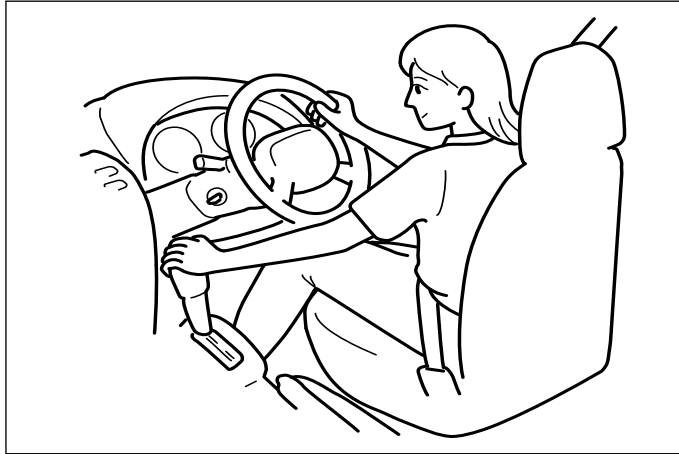

60G408

OPERATING YOUR VEHICLE

Daily Inspection Checklist	3-1
Engine Oil Consumption	3-2
Ignition Switch	3-2
Parking Brake Lever	3-4
Pedal	3-5
Starting / Stopping Engine	3-6
Using the Transmission	3-7
Gearshift Indicator	3-8
SHVS (Smart Hybrid Vehicle by Suzuki) (if equipped)	3-9
ENG A-STOP System (Engine Auto Stop Start System) (if equipped)	3-12
Parking Sensors	3-21
Braking	3-26
Electronic stability program (ESP®) (if equipped)	3-28

OPERATING YOUR VEHICLE

Daily Inspection Checklist

Before Driving



60A187S

- 1) Make sure that windows, mirrors, lights and reflectors are clean and unobstructed.
- 2) Visually check the tyres for the following points:
 - the depth of the tread groove
 - abnormal wear, cracks and damage
 - loose wheel nuts
 - existence of foreign material such as nails, stones, etc.

Refer to “Tyres” in “INSPECTION AND MAINTENANCE” section for details.

- 3) Look for fluid and oil leakage.

NOTE:

It is normal for water to drip from the air conditioning system while and after use.

- 4) Make sure the hood is fully closed and latched.
- 5) Check the headlights, turn signal lights, brake lights and horn for proper operation.
- 6) Adjust the seat and head restraint (if equipped).
- 7) Check the brake pedal feeling and the adjustment condition for the parking brake lever or pedal. Refer to “Brakes” in “INSPECTION AND MAINTENANCE” section for details.
- 8) Adjust the mirrors.
- 9) Make sure that you and all passengers have properly fastened the seat belts.
- 10) Make sure that all warning lights come on as the ignition switch is turned to ON position or the ignition switch is turned “ON”.
- 11) Check all gauges.
- 12) Make sure that the BRAKE SYSTEM WARNING light turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank, or before a long distance driving (like highway driving) perform the following under-hood checks:

- 1) Engine oil level
- 2) Coolant level
- 3) Brake fluid level
- 4) Battery fluid (acid) level
- 5) Windshield washer fluid level
- 6) Hood latch operation

Pull the hood release handle inside the vehicle. Make sure that you cannot open the hood all the way without releasing the secondary latch. Be sure to close the hood securely after checking for proper latch operation. See the item “All latches, hinges and locks” of “CHASSIS AND BODY” in “Periodic Maintenance Schedule” in “INSPECTION AND MAINTENANCE” section for lubrication schedule.

WARNING

Make sure the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

Once a month, or each time you fill your fuel tank, check the tyre pressure using a tyre pressure gauge. Also check the tyre pressure of the spare tyre.

Engine Oil Consumption

It is normal for the engine to consume some engine oil during normal vehicle operation.

The amount of engine oil consumption depends on viscosity and quality of the oil and your driving conditions.

More oil is consumed during high-speed driving and when there is frequent acceleration and deceleration. Under high loads, your engine also will consume more oil.

A new engine also consumes more oil, since its pistons, piston rings and cylinder walls have not yet become conditioned. New engines reach the normal level of oil consumption only after approximately 5000 km driving.

Oil consumption:


Max. 1.0 L per 1000 km

When judging the amount of oil consumption, note that the oil may become diluted and it is difficult to judge the accurate oil level.

As an example, if a vehicle is used for repeated short trips, and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km or more of driving. This is because the oil is gradually becoming diluted with fuel or moisture, making it appear that the oil level has not changed.

You should also be aware that the diluting ingredients evaporate out when the vehicle is subsequently driven at high speeds, such as on an expressway, making it appear that oil is excessively consumed after high-speed driving.

Ignition Switch

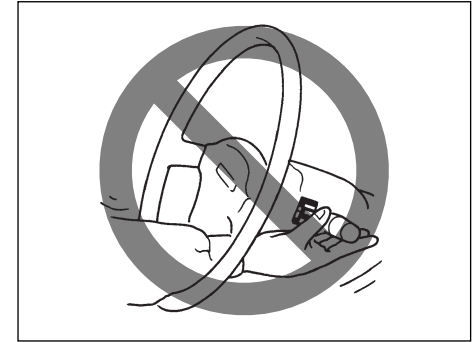


65D611

WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

OPERATING YOUR VEHICLE

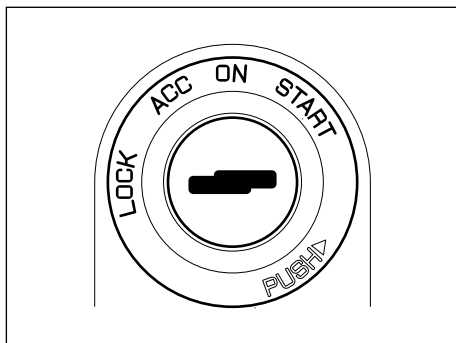


68PH00310

The ignition switch has the following four positions:

LOCK

This is the normal parking position. It is the only position in which the key can be removed.

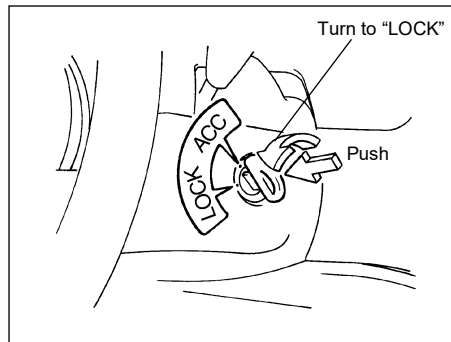

60G033

- You must push in the key to turn it to LOCK position. It locks the ignition, and prevents normal use of the steering wheel after the key is removed.

To release the steering lock, insert the key and turn it clockwise to one of the other positions. If you have trouble turning the key to unlock the steering wheel, try turning the steering wheel slightly to the right or left while turning the key.

ACC

Accessories such as the radio can operate, but the engine is off.

ON


This is the normal operating position. All electrical systems are on.

START

This is the position for starting the engine using the starter motor. The key should be released from this position as soon as the engine starts.

Ignition key reminder

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

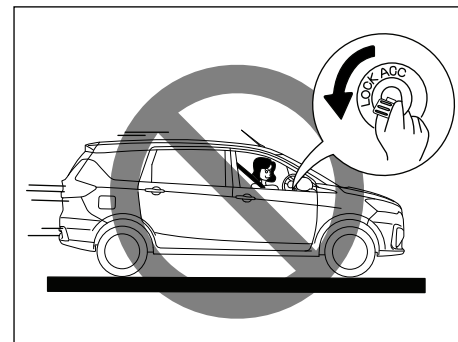

72RM03004

⚠ WARNING

- Never return the ignition switch to the LOCK position and remove the ignition key while the vehicle is moving. The steering wheel will lock and you will not be able to steer the vehicle.

(Continued)


⚠ WARNING

- Always return the ignition switch to LOCK position and remove the ignition key when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children may be able to start the vehicle or shift the transmission into neutral, which could result in an accident. There is also a danger that children may injure themselves by playing with the power windows or other moving features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

NOTICE

- Do not leave the ignition switch in ON position if the engine is not running as the lead-acid battery will discharge.
- Do not crank the engine for more than 12 seconds at a time. If the engine does not start on the first try, wait 15 seconds before trying again. If the engine does not start after several attempts, check the fuel and ignition systems or consult a Maruti Suzuki authorised workshop.

Parking Brake Lever

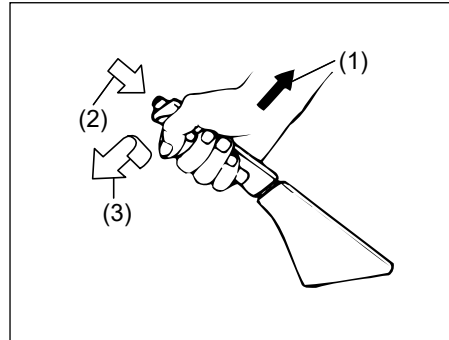

54G039

- (1) To set
- (2) To release
- (3) To release

The parking brake lever is located between the front seats. To set the parking brake, depress the brake pedal and pull the parking brake lever all the way up. To release the parking brake, depress the brake pedal and pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.

⚠ WARNING

- Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.
- If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.
- When parking on an uphill, turn the steering wheel so that the front wheels point to the center of the road.
- When parking on a downhill, turn the steering wheel so that the front wheels point to the curb.

OPERATING YOUR VEHICLE

WARNING

Whenever parking, make sure the gearshift lever is in 1st gear or "R" (Reverse). Remember, even though the transmission is in gear, you must set the parking brake fully.

WARNING

When parking the vehicle in extremely cold weather, the following procedure should be used:

- 1) Set the parking brake.
- 2) Turn off the engine, then shift into reverse or first gear.
- 3) Get out of the vehicle and put chocks under the wheels.
- 4) Release the parking brake. When you return to your vehicle, you must remember to first set the parking brake, then remove the wheel chocks.

WARNING

Do not leave cigarette lighters, spray cans, soft drink cans or plastic articles (such as glasses, CD cases, etc.) in sun-heated vehicle. The temperature inside the vehicle may cause as follows:

- Gas may leak from a cigarette lighter or spray can and may lead to a fire.
- The glasses, plastic cards or CD cases, etc. may deform or crack.
- Soft drink cans may fracture.




69RHS175

Parking Brake Reminder Buzzer

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without fully releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.

Pedal

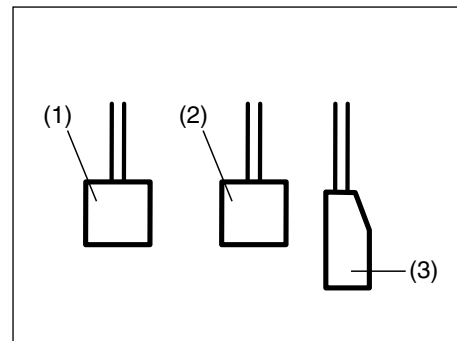

80J2121

Clutch Pedal (1)

A clutch pedal is used to disengage the driving force to the wheels when starting the engine, stopping, or shifting the gearshift lever. Depressing the pedal disengages the clutch.

WARNING

Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

Brake Pedal (2)

Your vehicle is equipped with front disc brakes and rear drum brakes. Depressing the brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as temperature, humidity, snow or dust, etc.

WARNING

If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by a Maruti Suzuki authorised workshop.

WARNING


Do not apply brakes continuously or rest your foot on the brake pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.

Accelerator Pedal (3)

An accelerator pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.

Starting / Stopping Engine

Starting Engine

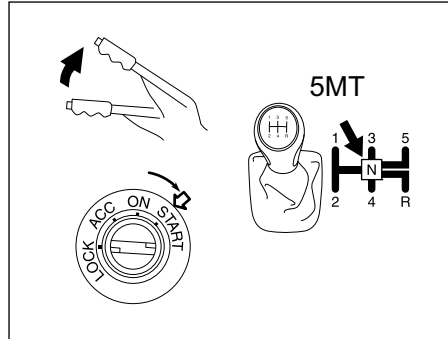

- 1) Check that the parking brake is set fully.
- 2) Turn off such loads as the headlights and air conditioning system to facilitate starting of the engine.
- 3) Shift into "N" (Neutral). Hold the clutch pedal and brake pedal fully depressed.
- 4) With your foot taken off accelerator pedal, crank the engine by turning the ignition key to "START". Release the key immediately after the engine has started.

WARNING

Make sure that the parking brake is set fully and the transmission is in Neutral before attempting to start the engine.

NOTICE

For protection of a lead-acid battery and a starter motor, do not use the starter motor by turning the key to "START" for more than 12 seconds at a time. If the engine does not start, turn the key to "LOCK" position and wait for more than 30 seconds before trying again. If the engine does not start after several attempts, consult a Maruti Suzuki authorised workshop.

Starting a Cold and Warm Engine

With your foot taken off the accelerator pedal, crank the engine by turning the ignition key to "START". Release the key when the engine starts.

NOTICE


- **Stop turning the starter immediately after the engine has started or the starter system can be damaged.**
- **Do not use the starter motor for more than 12 seconds at a time. If the engine does not start, wait 15 seconds before trying again. If the engine does not start after several attempts, check the fuel and ignition systems or consult a Maruti Suzuki authorised workshop.**

OPERATING YOUR VEHICLE

Using the Transmission

⚠ WARNING

Do not hang any items on the gear-shift lever and do not use the gear-shift lever as a handrest. Otherwise, it could prevent proper operation of the gearshift lever and cause its malfunction, resulting in an accident.

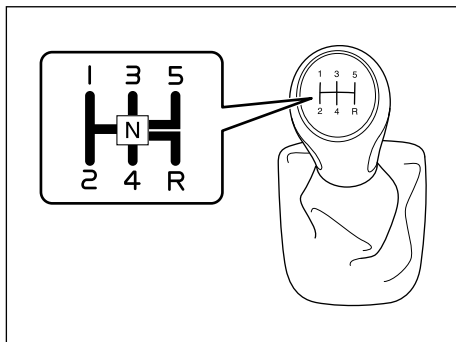

73R0014

Starting off

To start off, depress the clutch pedal all the way to the floor and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine's sound, slowly press the accelerator while continuing to gradually release the clutch.

Shifting

All forward gears are synchronized, which provides for quiet and easy shifting. Always depress the clutch pedal all the way to the floor before shifting gears. Keep the engine speed does not rise into the red zone of the tachometer.

Downshifting maximum allowable speeds

Downshifting	km/h
2nd to 1st	20
3rd to 2nd	75
4th to 3rd	110
5th to 4th	150*

***NOTE:**

You may not accelerate to the maximum allowable speed because of the driving situation and/or the vehicle condition.

NOTICE

Do not downshift to a lower gear at the speed faster than the maximum allowable speeds for the next lower speed, or severe damage to engine and transmission can result.

⚠ WARNING

- Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking. Avoid riding the brakes or they may overheat, resulting in brake failure.
- When driving on slippery roads, slow down before downshifting. Excessive and/or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.

NOTICE

Make sure that the vehicle is completely stationary before you shift into reverse.

NOTE:

If it is difficult to engage reverse gear [R], follow below procedure.

1. Put gear lever in neutral [N].
2. Release clutch pedal once.
3. Again depress the clutch pedal and shift from [N] to [R].

NOTICE

- To help avoid clutch damage, do not use the clutch pedal as a foot-rest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.
- When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and cause negative effect to smooth shifting.

NOTICE

If frequently driving at low speed using a high gear position, the life cycle of the clutch may be reduced.

Gearshift Indicator



72RH4027

In the following cases, the gearshift indicator is indicated on the information display when the ignition switch is in "ON" position.

- When the gearshift lever is in a position other than "N" (Neutral).

The electronic control system monitors driving condition (such as vehicle speed and/or engine revolution), and it shows which gear position is optimal for your driving with the indication on the display.

If UP/DOWN arrow is indicated on the display while driving, we recommend you to shift up or down the gear until the arrow disappears. It is the optimal gear position for a driving condition that reduces the over revolution and stress to the engine, and improves fuel consumption.

For details on how to use the transmission, refer to "Using the Transmission" in this section.

⚠ WARNING

The gearshift indicator is designed to indicate optimal gear position for your driving, however, a driver will not be relieved from the duty of care of driving operation or gear change with this indicator.

To drive safe, do not gaze the gearshift indicator, pay attention to your driving situation and shift up or down if necessary.

NOTE:

- The gearshift indicator is not indicated when the gear position is in "N" (Neutral).
- If you depress the clutch pedal while UP/DOWN arrow is indicated, the indication will disappear.
- In ordinary driving, UP arrow will disappear when you release your foot from the accelerator pedal.
- The indication of gearshift indicator timing may differ depending on the vehicle condition and/or driving situation even in the same vehicle speed and engine revolution.
- If any of the electrical systems such as the ESP[®] is working, the gearshift indicator will disappear temporarily.

OPERATING YOUR VEHICLE

Example of the gearshift indicator

Indication	Description
	Lower gear position is selected for the vehicle speed and/or engine revolution. Changing to a higher gear position is recommended. • In this case, shifting up to 4th gear position is recommended.
	Current gear position is optimal for the vehicle speed and/or engine revolution. • In this case, 3rd gear position is the best.
	Higher gear position is selected for the vehicle speed and/or engine revolution. Changing to a lower gear position is recommended. • In this case, shifting down to 2nd gear position is recommended.

SHVS (Smart Hybrid Vehicle by Suzuki) (if equipped)

SHVS has an Integrated Starter Generator (ISG) instead of conventional generator to get a better fuel consumption.

Integrated Starter Generator (ISG) is a generator which incorporated a motor function.


The ISG has the following 3 functions.

- Deceleration energy regenerating function
- Engine power assist function
- Starter motor function

WARNING

Dripping engine oil, brake fluid and coolant, etc. to the ISG may cause a fire or malfunction. Do not spill them when pouring.

Deceleration Energy Regenerating Function

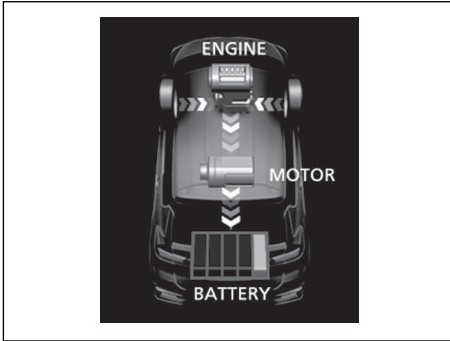

While decelerating your vehicle, the ISG generates electricity without engine power. This reduces engine loads and improves fuel consumption.


While decelerating your vehicle, deceleration energy regenerating function will be activated when the following conditions are satisfied.

- Gearshift lever is not in “N” (Neutral).
- Clutch pedal is not depressed.
- Engine speed is more than 950 rpm.
- Inside temperature of lead-acid battery is in normal condition.
- Lithium-ion battery is not fully charged and inside temperature is in normal condition.
- etc.

NOTE:

The deceleration energy regenerating function may not work depending on vehicle conditions.

Engine Power Assist Function

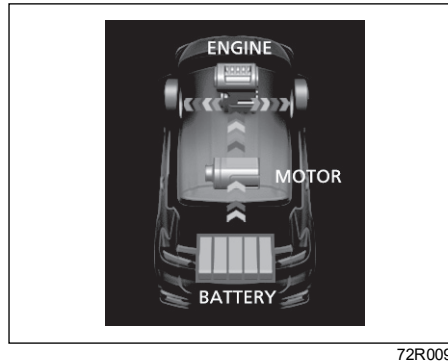

While the vehicle is running, ISG assists engine power as a motor in the following limited condition. This reduces engine loads and improves fuel consumption.

While the vehicle is running with the engine speed at approximately 4000 rpm or less, engine power assist function will be activated when all of the following conditions are satisfied.


- SHVS system and ENG A-STOP system are working properly. (“ENG A-STOP OFF” indicator light is not blinking.)
- Clutch pedal is not depressed.
- ESP® (if equipped) is not activated.
- Accelerator pedal is excessively depressed.
- Lead-acid battery and lithium-ion battery are fully charged and each inside temperature is in normal condition.
- Engine coolant temperature is in normal condition.
- ISG inside temperature is in normal condition.

NOTE:

- *The engine power assist function may not work depending on vehicle conditions.*

OPERATING YOUR VEHICLE

Starter Motor Function

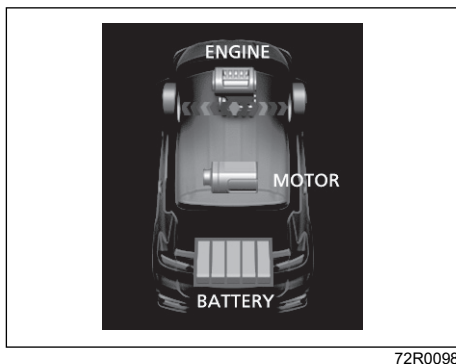

After the engine auto stop by the ENG A-STOP system, the engine will be restarted using a cranking power of the ISG.

The starting with the ISG is quiet compared with starting by the conventional starter motor.

Lithium-ion Battery Indication




The segments in the lithium-ion battery indicator (1) give an approximate indication of the charge of the lithium-ion battery. The number of segments that appear in the indication increases or decreases with the charge of the lithium-ion battery.

NOTE:

The indicator gives an approximate indication. The indication may be delayed or differ from the actual charge of the lithium-ion battery under certain conditions, for example, when the outside temperature is low.

Also, the minimum segment is 1 bar and the bar will never be 0. Even when 1 bar is shown, the battery level may be close to be flat.


Deceleration Energy Regenerating Indicator Light

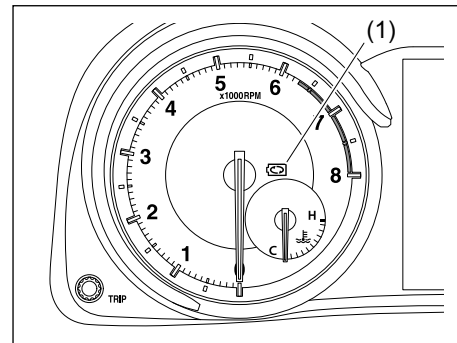

When the deceleration energy regenerating function is working, the deceleration energy regenerating indicator light (1) comes on.

NOTE:

If the gearshift lever is in the "N" (Neutral) position, this light does not come on.

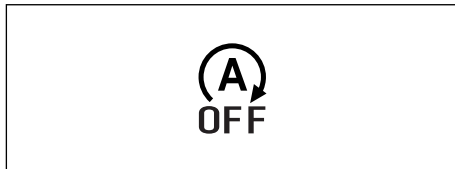ENG A-STOP OFF Light (if equipped)

56RM03012

If this indicator blinks when driving, there may be something wrong with the ENG A-STOP system or the SHVS system. You should have the system inspected by a Maruti Suzuki authorised workshop.

ENG A-STOP System (Engine Auto Stop Start System) (if equipped)

The ENG A-STOP system (engine auto stop start system) automatically stops the engine while waiting briefly at a traffic light, etc., and automatically restarts the engine afterward. This system helps reduce emissions, improve fuel consumption and lower engine noise.

This system stops the engine temporarily under specific conditions. Before parking the vehicle for an extended period of time or leaving the vehicle, properly apply the parking brake and stop the engine with the ignition switch.

Once the specific conditions are met, the engine will stop automatically after the vehicle has stopped. However, the engine will not be stopped automatically until confirmation of the system function is finished.

⚠ CAUTION

- Do not get out of the vehicle while the engine is automatically stopped by the ENG A-STOP system. Doing so may lead to an accident.
 - If the driver's seat belt is unfastened or the driver's door is opened, the engine will restart.
- If the engine does not restart automatically after having been stopped automatically by the ENG A-STOP system, turn the ignition switch to start the engine. Trying to move the vehicle when the engine has not yet restarted requires a strong force to turn the steering wheel or depress the brake pedal, potentially leading to an accident.


OPERATING YOUR VEHICLE

NOTICE

The vehicle equipped with this system uses a dedicated high-performance lead-acid battery that supports ENG A-STOP system. Accordingly, observe the instructions listed below. If these instructions are not observed, the system may not actuate properly or the lead-acid battery may die prematurely.

- When replacing the lead-acid battery, use a Maruti Suzuki genuine battery specified in the Specification.
- Do not draw power from the lead-acid battery terminals for electrical products.
- If the vehicle key is in "ACC" position for extended duration, the vehicle may enter a state where the Audio / Navigation equipment may shut off. In any such event, turn the key to OFF position, and after that start the engine and let both the batteries charge for at least 30 Minutes. It is to enable better functioning of both the batteries.

Lithium-ion Battery

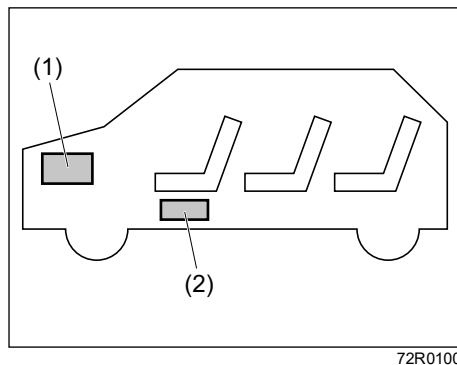

- (1) Battery (lead-acid battery)
(2) Lithium-ion battery

This lithium-ion battery is used exclusively for the vehicle equipped with ENG A-STOP system or SHVS, and located below the front left side seat.

- Just like a battery (lead-acid battery), the lithium-ion battery also discharges gradually. To prevent the lithium-ion battery from dying, you must charge the lithium-ion battery by driving continuously for at least 30 minutes once a month.
- Vehicle should not be left with ignition in ON or ACC position, for extended periods of time.
- Do not add any external load to lithium-ion battery.
- The lithium-ion battery is maintenance-free.

- To replace or dispose of the lithium-ion battery, consult a Maruti Suzuki authorised workshop.

⚠ WARNING

Wrong handling of the lithium-ion battery may result in fire, electric shock or system malfunction. Accordingly, observe the instructions listed below:

- Do not dismount or disassemble the lithium-ion battery.
- Do not let the lithium-ion battery come in contact with water or other liquids.
- Do not apply strong impact on the lithium-ion battery.
- Do not step on the lithium-ion battery or put articles on the lithium-ion battery.
- Do not disconnect the lithium-ion battery terminals or draw power from the terminals for electrical products.
- If lithium-ion battery gets submerged under water, it can lead to fire.


NOTE:

Lithium-ion battery, if not disposed in an eco-friendly manner and in accordance with the applicable laws, may pose safety and environmental hazard. Maruti Suzuki ensures proper disposal of this battery through established channels in an eco-

friendly manner. Owner shall return this lithium-ion battery to Maruti Suzuki authorized dealerships as soon as it is not fit for use in vehicle. Once the owner returns the lithium-ion battery, Maruti Suzuki will ensure proper disposal in compliance with the laws to avoid legal implications to owners. If batteries are not returned to Maruti Suzuki, it will become owners' responsibility and accountability to ensure proper disposal in accordance with the applicable laws. Maruti Suzuki will not take any responsibility for consequences such as accidents or damages arising due to the abandonment, resale, inappropriate use, modification, dismantling and improper disposal of Lithium-ion battery. Contact your nearby Maruti Suzuki authorized workshop to dispose the used lithium-ion battery. 'Battery Recycling Information' and necessary handling instructions are also affixed on the battery pack. For more information, connect Maruti Suzuki customer care.

Automatic Stopping/Restarting of the Engine

- 1) With the brake pedal depressed, decelerate the vehicle.

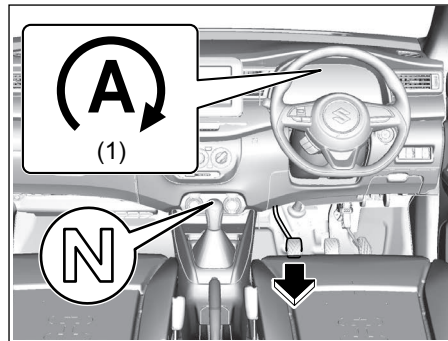

72R0101

- 2) After the vehicle has stopped with the clutch pedal depressed and the gearshift lever shifted to "N", and then release the clutch pedal, the engine will stop automatically. The ENG A-STOP indicator light (green) (1) will come on.

- The ENG A-STOP system will not stop the engine automatically if all the automatic engine stop conditions are not met. For details, refer to the section, "Conditions to stop the engine automatically".
- During the automatic engine stop, the engine may shut down, accompanied by an interior buzzer or restarted, to ensure safety. For details, refer to the section, "Precautions of when the engine is stopped automatically".

NOTICE


During the automatic engine stop, do not shift the gearshift lever to a position other than "N" without depressing the clutch pedal. If the gear shift lever is in a position other than "N", the engine will not restart automatically even if the clutch pedal is depressed.

OPERATING YOUR VEHICLE

NOTE:

The ENG A-STOP system will not operate and engine does not stop automatically under the following conditions:

- Engine auto stop function will be ready once the vehicle runs at a speed exceeding 6km/h after restart of the engine.
- The audio and other electrical component can be used during the automatic engine stop, but the air conditioner will switch to the fan mode.

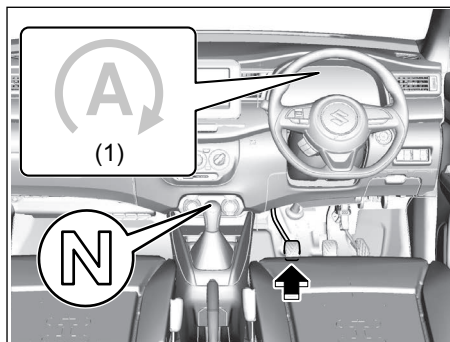

72R0102

- 3) Regardless of whether the vehicle has stopped or not, depressing the clutch pedal will restart the engine and ENG A-STOP indicator light (green) (1) will go off.

While the engine is stopped automatically, depressing the clutch pedal will restart the engine consuming fuel. Therefore, for fuel economy, it is recommended to depress the clutch pedal just before the vehicle start.

- Without depressing the clutch pedal, the engine may restart automatically if the automatic engine restart conditions are met.

For details, refer to the section, "Conditions to restart the engine automatically".

OPERATING YOUR VEHICLE

Precautions of when the engine is stopped automatically

WARNING

Do not perform any of the following operations while the engine has been stopped automatically. This may result in an accident.

Operation/Vehicle Condition	Solution
Engine hood opened • The interior buzzer sounds intermittently. • After the engine is stopped automatically, it stalls. • The ENG A-STOP indicator light (green) goes off.	To restart the engine, follow the procedure below. 1) Set the parking brake firmly, and then place the gearshift lever in the "N" position. 2) Securely close the engine hood. 3) Turn the ignition switch to restart the engine.
Driver's seat belt unfastened or driver's door opened • The engine is restarted automatically. • The ENG A-STOP indicator light (green) blinks 5 times, then goes off.	Fasten the driver's seat belt and/or close the driver's door.
Gearshift lever shifted to a position other than "N" without depressing the clutch pedal, driver's seat belt unfastened and driver's door opened • The interior buzzer sounds intermittently. • After the engine is stopped automatically, it stalls. • The ENG A-STOP indicator light (green) goes off.	To restart the engine, follow the procedure below. 1) Set the parking brake firmly, and then place the gearshift lever in the "N" position. 2) Close the door and buckle the seat belt. 3) Turn the ignition switch to restart the engine.

NOTE:

The following indicator lights in the instrument cluster do not come on when the engine is stopped automatically.

- *Malfuction indicator light, electric power steering light, engine oil pressure warning light, charge warning light*

OPERATING YOUR VEHICLE

Operating conditions of ENG A-STOP system

Standby conditions

If all of the following conditions are met while driving, the automatic engine stop will be permitted.

When the engine is started	• The engine is started with the engine hood securely closed.
When driving	• The ENG A-STOP system is not deactivated (OFF). • The battery is charged more than a certain amount, and the temperature inside the battery is within the specified range. (#1) • The engine coolant temperature is within the specified range. • The driver's seat belt is fastened. • The driver's door is securely closed. • The engine hood is securely closed. • There is no signal to prevent stopping the engine from any electronic control systems other than the ENG A-STOP system. (#2)

#1: If the battery is discharged, for example, if the vehicle has not been used for a long time or electrical components, such as the navigation system or audio system, have not been used for a long time while the engine was stopped, it may take some time until the system can be in standby.

#2: If any of the warning and indicator lights affecting the ENG A-STOP system come on, the engine will not be stopped automatically.

Conditions to stop the engine automatically

If all of the following conditions are met while the standby conditions are met, the engine is stopped automatically when the vehicle is decelerating before stopping or when the vehicle is stopped.

When the vehicle is stopped	• The ABS or ESP[®] system has not been activated. • Brake booster vacuum pressure is normal. • The gearshift lever is in “N” position. • The clutch pedal is released.
-----------------------------	--

OPERATING YOUR VEHICLE

Conditions to restart the engine automatically

If any of the following vehicle conditions occur or operations are performed while the engine is stopped automatically, the engine is restarted automatically and the ENG A-STOP indicator light (green) goes off.

Common	• The ENG A-STOP system is deactivated (OFF). • The battery continues to be discharged. (#1) • Brake booster vacuum pressure is low. (#1) • A malfunction was detected in this system. (#2) • The temperature of the air from the outlets changes greatly, or the cooling and heating performance is insufficient. (#1) • The temperature selector was greatly set toward COOL while cooling or greatly set toward HOT while heating. (#1) • The defroster is turned on. (#1) • The ABS or ESP[®] system is activated. • The clutch pedal is depressed.
When the vehicle is stopped	• The driver's seat belt is unfastened. (#1) • The driver's door is opened. (#1) • The vehicle is moving along a slope. (#1) • Some time (about 3 minutes) has passed since the engine was stopped automatically. (#1)


#1: After the ENG A-STOP indicator light (green) blinks, it goes off. Also, the interior buzzer may sound at the same time.

#2: Depending on the situations of malfunction, it is a normal restart or the restart as #1.

ENG A-STOP OFF Switch (if equipped)

The ENG A-STOP system can be deactivated.

- To deactivate the system, press the ENG A-STOP OFF switch (1) to turn on ENG A-STOP OFF light (2).
- To activate the system once again, press the switch (1) again to turn off the indicator.
- Every time the engine is stopped manually, the system is enabled again and the ENG A-STOP OFF light (2) goes off.

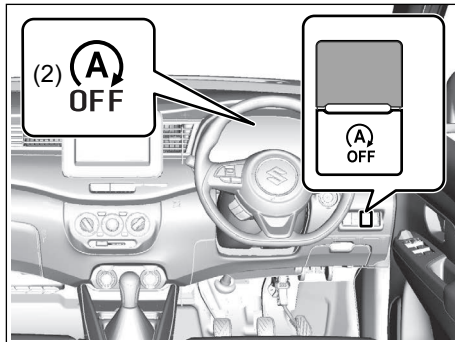


72RM03006

NOTE:

Pressing the ENG A-STOP OFF switch (1) during the automatic engine stop will restart the engine automatically and the ENG A-STOP OFF light (2) will come on.

ENG A-STOP OFF Light (if equipped)

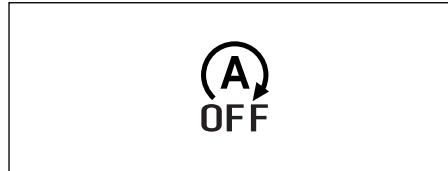

56RM03012

This indicator comes on in the information display.

- This indicator comes on when the ENG A-STOP system is deactivated.
- The indicator blinks when the ignition switch is turned to "ON" position, if one of the conditions listed below is met.
(The ENG A-STOP system or the SHVS system does not actuate correctly while the indicator is blinking.) Have the system inspected immediately by Maruti Suzuki authorised workshop. If there is something wrong with the ENG A-STOP system, SHVS system or the lithium-ion battery.
 - An engine component (ISG) or the lead-acid battery is due for replacement.


NOTE:

If the indicator blinks during the automatic engine stop, the engine may shut down.

OPERATING YOUR VEHICLE

Parking Sensors

Information Display Symbol

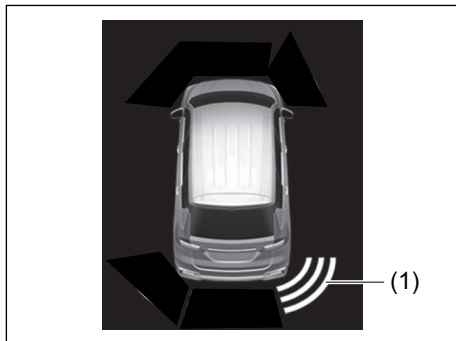

72R0035

(1) Symbol representing an obstacle detected by parking sensor*

* This symbol shows that an obstacle is located on the right rear of vehicle.

- The parking sensor system uses ultrasonic sensors to detect obstacles near the rear bumper. If obstacles are sensed while you are parking or moving the vehicle slowly, the system warns you by sounding a buzzer and displaying symbols representing the obstacles on the information display in the instrument cluster.
- The system emits an ultrasonic wave and the relevant sensor detects the return of the wave reflected by an obsta-


cle. The system measures the time taken by the ultrasonic wave to reach the obstacle and return from it, from which it determines the obstacle's position.

- The parking sensor function can be used when the ignition switch is turned "ON", the gearshift lever is in R position. This function is helpful in the following cases: pulling over to the curb; parallel-parking the vehicle; steering the vehicle into a garage; driving along an alley; and moving slowly in a place with obstacles.

⚠ WARNING

- **The parking sensor warns you of obstacles with buzzers and by showing you the location of the obstacles on the information display (if equipped). However, you must still pay full attention yourself while driving.**
- **The sensors can detect obstacles only within a limited area and only when the vehicle is moving within a limited speed range. So, in tricky areas, you must move the vehicle slowly while checking around it using your direct vision or rearview mirrors. There is increased risk of an accident if you control the vehicle relying only on the parking sensor.**

Sensor Locations

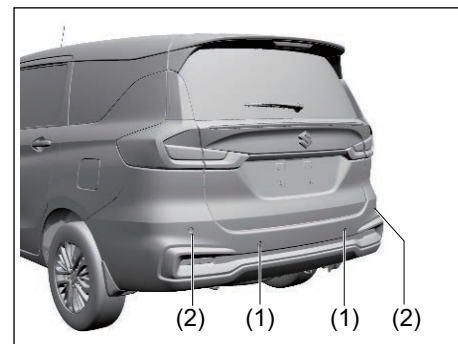

75U74EN030001

- (1) Rear center sensors (2 places)
(2) Rear corner sensors (2 places)

NOTICE

- **Avoid hitting the sensor areas or directing the nozzle of a high-pressure car washer onto the sensor areas. Otherwise, the sensors may be damaged.**
- **If the bumper hits a hard object, the sensors on it may not work properly. If this occurs, have the sensors inspected by a Maruti Suzuki authorised workshop.**


OPERATING YOUR VEHICLE

Working sensors

The sensors that work depends on the position of the gearshift lever as follows:

Gearshift lever position		R	N, 1st - 5th
Rear sensors	Center	On	Off
	Corner	On	Off

Approximate areas where obstacles can be detected

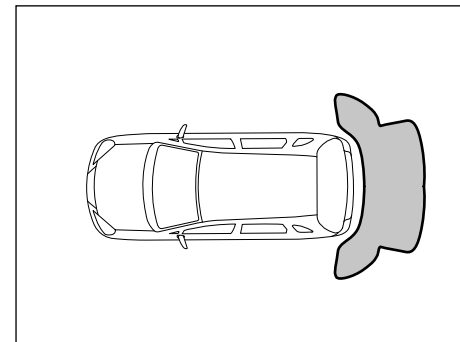

60MH126

- An obstacle within about 20 cm (8 in) from a sensor or just below a sensor is not detectable.
- The sensors can detect an obstacle up to about 1.5 m (5 ft) from the rear of vehicle.

WARNING

- Under the following conditions, the parking sensor system may not work normally because the sensors cannot detect obstacles correctly.
 - Sensors are covered with mud, ice or other materials. (Such materials must be removed for normal operation.)
 - Sensors are wet from water splashes or heavy rain.
 - Sensors are covered by a hand, sticker, accessory, etc.
 - There is an accessory or other object attached within the sensor's sensing area.
 - Items such as tow hooks, commercially available corner poles, radio antenna, etc. are installed on the bumper.
 - The height of the bumper is changed due to alteration to the suspension or other causes.
 - The sensor areas are extremely hot from direct sunlight or cold due to freezing weather.
 - The vehicle is on a rough surface, slope, gravel road or grass field.
 - The vehicle is at a steep angle.

(Continued)

WARNING

(Continued)


- Sensors have intercepted ultrasonic noise from another vehicle's horn, engine, air braking system (large vehicles), or parking sensor.
- Obstacles are too close to the sensors.
- Sensors are at an angle to a highly reflective object such as glass. (Ultrasonic waves are not reflected back from the obstacle.)
- Sensors may not be able to correctly detect the following types of obstacles:
 - Objects made of a thin material like wire netting and ropes
 - Square-shaped curbstones or other objects with sharp edges
 - Tall objects with a large upper part like a road sign
 - Low-profile objects such as curbstones
 - Sound-absorbing objects such as cotton and snow

NOTE:

- *Thin poles or obstacles lower than the sensors may become undetectable as the vehicle moves closer to them even if they have been detected from longer distances.*
- *The system may calculate the distance to a road sign or similar obstacle to be shorter than the actual distance.*

Obstacle Indication by Parking Sensor

Information display symbol
(if equipped)

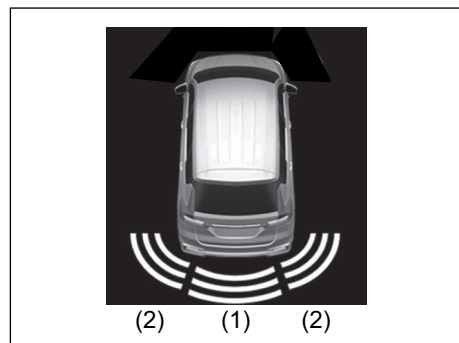

72R0037

- (1) Obstacle detected by rear center sensors
- (2) Obstacle detected by rear corner sensors

Upon detecting an obstacle, the parking sensor causes an interior buzzer to sound and a symbol representing the obstacle appears on the information display in the instrument cluster (if equipped).

- A different symbol is displayed depending on the direction and distance of the obstacle. (if equipped)
- A buzzer located behind the rear seat sounds when a sensor at the rear detects an obstacle.

- Warnings when obstacles are detected by corner sensors

Distance (approx.)	Buzzer	Symbol (if equipped)
45 – 60 cm	Short beeps at short intervals	Three lines
35 – 45 cm	Short beeps at very short intervals	Two lines
Less than 35 cm	Continuous beep	One line

- Warnings when obstacles are detected by center sensors

Distance (approx.)	Buzzer	Symbol (if equipped)
60 – 150 cm	Short beeps at long intervals	Three lines
45 – 60 cm	Short beeps at short intervals	
35 – 45 cm	Short beeps at very short intervals	Two lines
Less than 35 cm	Continuous beep	One line

NOTE:

- Symbols are displayed with a short delay after the detection of obstacles.
- If the system detects multiple obstacles simultaneously, the display shows all of their positions using the corresponding symbols. However, the buzzers will sound only for the nearest obstacles.

OPERATING YOUR VEHICLE

Set sensors

You can select either the normal or trailer mode of the parking sensor via the information display. Refer to "Information display" in "BEFORE DRIVING" section.

Normal mode

All sensors operate. Use this mode under normal conditions.

Trailer mode

The rear corner and rear center sensors are inhibited from operating. Use this mode when towing a trailer.

NOTICE

Check that the normal mode is selected with the parking sensor when steering the vehicle into a garage. If the parking sensor is left in the trailer mode, the rear corner and rear center sensors are not functioning.

Warning and Indicator Messages



Vehicle without the information display symbol

If there is a problem or warning regarding the parking sensor system, a buzzer informs it. Follow its instruction.


- The buzzer sounds intermittently. The indicated sensor is contaminated. Wipe it clean with a soft cloth. If the buzzer does not stop after wiping, there may be a problem with the parking sensor system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.

Vehicle with the information display symbol

If there is a problem or warning regarding the parking sensor system, a message is displayed on the information display in the instrument cluster, and a symbol blinks and the buzzer sounds. If a message is displayed, follow its instruction.

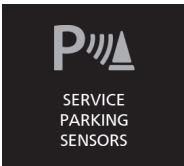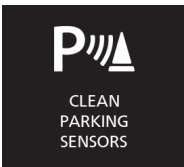Message	Symbol	Buzzer	Probable cause and remedy
 68PH02303	Two blinking lines in a sensor location.	Series of double beeps	There may be a problem with the parking sensor system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.
 68PH02304	One blinking line in a sensor location.	Series of single beeps	The indicated sensor is contaminated. Wipe it clean with a soft cloth.

Braking

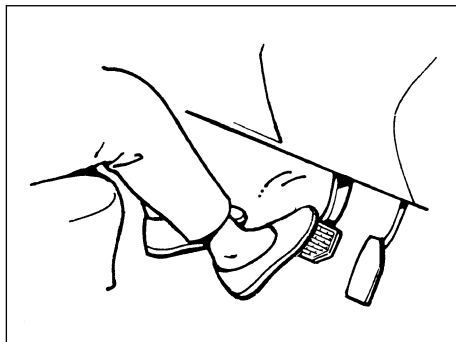

60G165S

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h will be approximately 4 times greater than the braking distance needed at 30 km/h. Start to depress the brake pedal when there is plenty of distance between your vehicle and the stopping point, and slow down gradually.

WARNING

If water gets into the brake devices, brake performance may become poor and unpredictable. After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Power-Assisted Brakes

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the pedal.

WARNING

Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.

Brake assist system

When you step on the brake pedal, the brake assist system determines it to be an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

NOTE:

If you quickly and forcefully depress the brakes, you may hear a clicking sound in the brake pedal. This is normal and indicates that the brake assist system is activated properly.

OPERATING YOUR VEHICLE

Anti-Lock Brake System (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.


The ABS works automatically, so you do not need any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that the wheels are locking up. You may feel the brake pedal moves a little while the ABS is operating.

NOTE:


- *The ABS will not work if vehicle speed is under about 9 km/h.*
- *If the ABS system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.*
- *You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.*

WARNING

- **On some types of loose surfaces (such as gravel, snow-covered roads, etc.), the stopping distance required for a vehicle with ABS may be slightly greater than the one required for a comparable vehicle with a conventional brake system. With a conventional brake system, skidding tyres are able to plow the gravel or snow layer, shortening the stopping distance. ABS minimizes this resistance effect. Allow for extra stopping distance when driving on loose surfaces.**
- **On regular paved roads, some drivers may be able to obtain slightly shorter stopping distances with conventional brake systems than with ABS.**
- **In both of the above conditions, ABS will still offer the advantage of helping you maintain directional control. However, remember that ABS will not compensate for bad road or weather conditions or poor driver judgment. Use good judgment and do not drive too fast.**



(1)



(2)

54MN069

- (1) ABS warning light
(2) Brake system warning light

⚠ WARNING

- If the ABS warning light (1) on the instrument panel comes on and stays on while driving, there may be a problem with the ABS system. Ask a Maruti Suzuki authorised workshop to inspect the ABS system immediately. If the ABS system becomes inoperative, the brake system will function as an ordinary brake system that has no ABS.
- If the ABS warning light (1) and the Brake system warning light (2) on the instrument panel simultaneously stays on or comes on while driving, both anti-lock function and rear brake force control function (proportioning valve function) of the ABS system may have failed. If so, the rear wheels may easily skid or the vehicle can even spin in the worst case when braking on a slippery road or when hard braking even on a dry paved road. Ask a Maruti Suzuki authorised workshop to inspect the ABS system immediately. Drive carefully, avoiding hard braking as much as possible.

How the ABS Works

A computer continuously monitors wheel speed. The computer compares the changes in wheel speed when braking. If the wheels slow suddenly, indicating a skidding situation, the computer will change braking pressure several times each second to prevent the wheels from locking. When you start your vehicle or when you accelerate after a hard stop, you may hear a momentary motor or clicking noise as the system resets or checks itself. This is absolutely normal and indicate that ABS is functioning properly.

⚠ WARNING

The ABS may not work properly if tyres or wheels other than those specified in the owner's manual are used. This is because the ABS works by comparing changes in wheel speed. When replacing tyres or wheels, use only the size and type specified in this owner's manual.

Electronic stability program (ESP®) (if equipped)

ESP® is a registered trademark of Mercedes-Benz Group AG.

The Electronic Stability Program (ESP®) helps to control the vehicle during cornering if front wheels or rear wheels skid. It also assists you in maintaining traction while accelerating on loose or slippery road surfaces. It does this by regulating the engine's output, and by selectively applying the brakes. In addition, ESP® helps to avoid skidding by controlling braking pressure.

⚠ WARNING

The ESP® cannot enhance the vehicle's driving stability in all situations and does not control your vehicle's entire braking system. The ESP® cannot prevent accidents, including those resulting from excessive speed in turns, or hydroplaning. Only safe and attentive drive can prevent accidents. The capabilities of an ESP®-equipped vehicle must never be used as a substitute for careful driving.

OPERATING YOUR VEHICLE

The ESP® totally manages following four systems, (stability control, traction control, ABS and Brake assist) to help enhance vehicle stability in response to various driving conditions;

Stability control system

The vehicle stability control system helps provide integrated control of systems such as anti-lock brakes, traction control, engine control, etc. This system automatically controls the brakes and engine to help prevent the vehicle from skidding when cornering on a slippery road surface or when turning the steering wheel abruptly.

Traction control system

The traction control system automatically helps prevent the spinning of wheels when the vehicle is started or accelerated on slippery road surfaces. The system operates only if it senses that some of the wheels are spinning or beginning to lose traction. When this happens, the system operates the front or rear brakes and reduces engine power to limit wheel spin.

NOTE:

You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

Anti-Lock Brake System (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard. The ABS works automatically, so you do not have to use any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that wheels are locking up. You may feel the brake pedal pulsate while the ABS is operating. (For more information on ABS, see "Braking" in this section.)

NOTE:

- *The ABS will not work if vehicle speed is under about 9 km/h.*

If the ABS system is activated, you may hear a clunking noise or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly

Brake assist system

When you step on the brake pedal, the brake assist system determines it to be an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

NOTE:

If you quickly and forcefully depress the brakes, you may hear a clicking sound in the brake pedal. This is normal and indicates that the brake assist system is activated properly.

WARNING

- **The ESP® may not work properly if tyres or wheels other than those specified in the owner's manual are used. When replacing tyres or wheels, use only the size and type specified in this owner's manual.**
- **The ESP® may not work properly if tyres are not inflated to the recommended tyre pressure.**
- **The ESP® may not work properly if tyres are fitted with snow chains.**
- **The ESP® may not work properly if the tyres are excessively worn. Replace tyres when the tread wear indicators in the grooves appear on the tread surface.**
- **The ESP® is not a substitute for winter tyres or snow chains on a snow-covered road.**

WARNING

- The ESP[®] may not work properly if engine related parts such as the muffler are not equivalent to standard equipment or are extremely deteriorated.
- Do not modify the vehicle's suspension since the ESP[®] may not work properly.

NOTE:

- If the ESP[®] system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.
- You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

The ESP[®] indicator lights are described below:

ESP[®] warning light



52KM133

This light blinks 5 times per second when one of the following systems is activated.

- Stability control system
- Traction control system

If this light blinks, drive carefully.

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on briefly so you can check that the light is working.

NOTICE

If the ESP[®] warning light comes on and stays on while driving, there may be a malfunction of the ESP[®] systems (other than ABS). You should have the systems inspected by a Maruti Suzuki authorised workshop.

NOTE:

When the ESP[®] warning light comes on and stays on while driving, indicating a malfunction of the ESP[®] systems (other than ABS), the brake system will function as an ordinary ABS with no additional ESP[®] functions.

ESP[®] OFF indicator light




73R0196

You should turn the ESP[®] on during your ordinary driving, so that you have the benefits of all of the ESP[®] systems.

It may be required to turn the ESP[®] systems (other than ABS) off if your vehicle is stuck in sand, mud, or snow, where wheel spin is necessary.

OPERATING YOUR VEHICLE

ESP® OFF switch

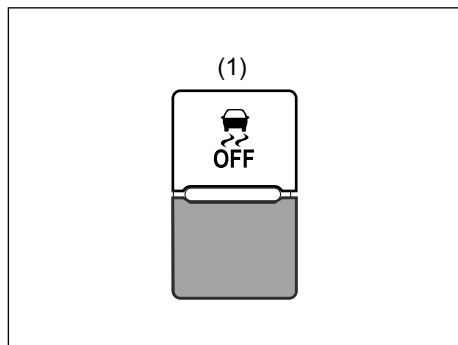

75U74EN050025

(1) ESP® OFF switch

When the ESP® OFF switch located at the instrument panel is pushed and held to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light in the instrument cluster comes on.

When you have turned the ESP® systems (other than ABS) off, turn them back on before resuming ordinary driving.

When you push the ESP® OFF switch again, the ESP® OFF indicator light will go out and all of the ESP® systems will be activated.

ABS warning light / brake system warning light

See "Braking" in this section.

Hill hold control system (if equipped)

The hill hold control system is designed to assist you in starting to move up hills. When you start to move up a hill, the system helps to prevent the vehicle from rolling downward (for approximately 2 seconds) while you move your foot from the brake pedal to the accelerator pedal.

⚠ WARNING

- Do not rely excessively on the hill hold control system. The hill hold control system may not prevent the vehicle from rolling downward on a hill under all load or road conditions. Always be prepared to depress the brake pedal to prevent the vehicle from rolling downward. Failure to pay attention and depress the brake pedal to hold the vehicle on a hill when necessary, may result in loss of control or an accident.
- The hill hold control system is not designed to stop the vehicle on a hill.
- After you release your foot from the brake pedal, accelerate the vehicle to move up immediately. If you release your foot from the brake pedal over 2 seconds, the hill hold control system will be canceled. If so, the vehicle may roll downward, which can result in an accident depending on the degree of slope. And, the engine may stall and the power assist for the steering and brakes will not work so steering and braking will be much harder than usual which can result in an accident or vehicle damage.

The hill hold control system activates for a maximum of about 2 seconds if your foot is moved from the brake pedal when the following conditions are all met.

- 1) The gearshift lever is in a forward gear or reverse gear.
- 2) The parking brake is released.
- 3) The vehicle is on an upward incline.


On models equipped with the ENG ASTOP system, the hill hold control system is activated when the engine is restarted after being stopped automatically, even if the previous conditions are not met.

NOTE:

When the hill hold control system is activated, the following conditions may be found, but this is not a malfunction.

- *You may hear a sound from the engine room.*
- *As brake pedal becomes heavy, it may be difficult for you to depress it.*

MEMO

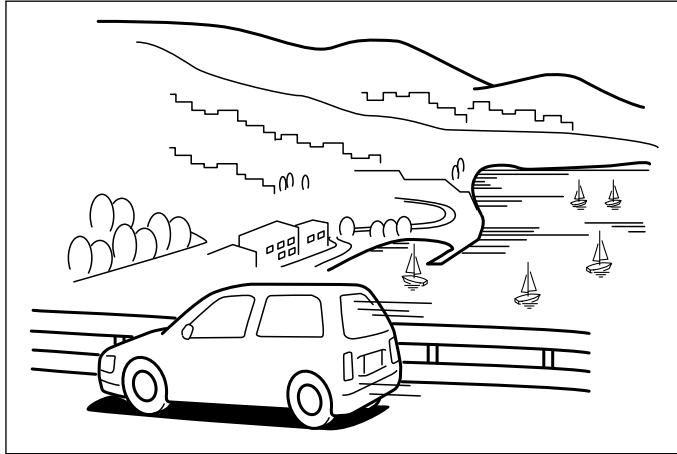


60G409

DRIVING TIPS

Running-in	4-1
Catalytic Converter	4-1
Improving Fuel Economy	4-2
Highway Driving	4-3
Driving on Hills	4-3
Driving on Slippery Roads	4-4
Off-road Driving	4-6
When Encountering a Flooded Area	4-6
Do's and Dont's for safe driving	4-7
Margin for safety	4-9

DRIVING TIPS

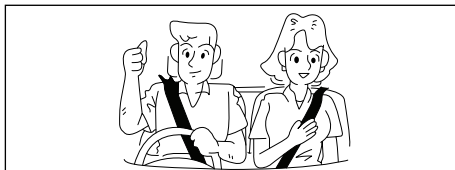

55RM04002

WARNING

- **Fasten Your Seat Belts at All Times.** Even though airbags are equipped at the front seating positions, the driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to “Seat Belts and Child Restraint Systems” section for instructions on proper use of the seat belts.
- **Never drive while under the influence of alcohol or other drugs.** Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to yourself and others. You should also avoid driving when you are tired, sick, irritated, or under stress.


Running-in

NOTICE

The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the first 960 km of vehicle operation.

- After starting, do not race the engine. Warm it up gradually.
- Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.
- Start off from a stop slowly. Avoid full throttle starts.
- Avoid hard braking, especially during the first 320 km (200 miles) of driving.
- Do not drive slowly with the transmission in a high gear.
- Drive the vehicle at moderate engine speeds.

Catalytic Converter

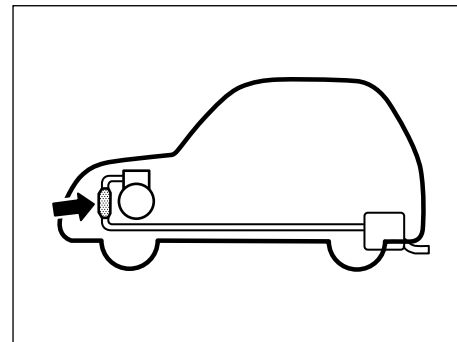

80G106

The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However, it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalytic converter. This may result in permanent heat damage to the catalytic converter and other vehicle components.

NOTICE

To minimize the possibility of catalytic converter or other vehicle damage:

- Maintain the engine in the proper operating condition.
- In the event of an engine malfunction, particularly one involving engine misfiring or other apparent loss of performance, have the vehicle serviced promptly.
- Do not turn off the engine or interrupt the ignition when the transmission is in gear and the vehicle is in motion.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.
- Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.
- Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.
- Do not allow the fuel tank to get near the empty level.
- Avoid driving your vehicle at excessively high engine speed in or around the red zone of the tachometer.



54G584S

⚠ WARNING

Be careful where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

Improving Fuel Economy

NOTE:

Fuel economy (mileage) of the vehicle may vary due to several factors i.e., driving habits - gear change pattern, usage of A.C., Air pressure in the tyres, wind speed, traffic conditions, fuel quality- non adulterated standard fuel, maintenance of vehicle, road conditions, braking etc.

The following instructions will help you improve fuel economy.

Avoid excessive idling

If you park your vehicle for more than one minute, stop the engine and start it again later. When warming up a cold engine, do not allow the engine to idle or apply full throttle until the engine has reached operating temperature. Allow the engine to warm up by driving.

Avoid “fast” starts

Fast starts away from lights or stop signs will consume fuel unnecessarily and shorten engine life. Start off slowly.

Avoid unnecessary stops


Avoid unnecessary deceleration and stopping. Try to maintain a moderate, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.

Keep a steady cruising speed

Drive at a constant speed that road and traffic conditions will permit.

DRIVING TIPS

Keep the air cleaner clean

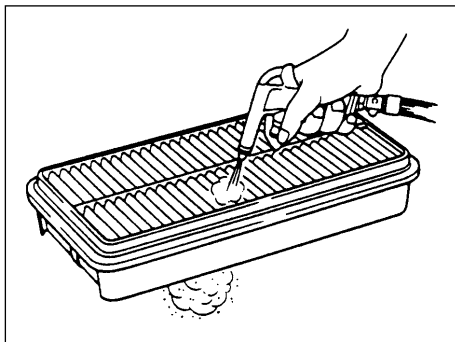

60A183S

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

Keep weight to a minimum

The heavier the load is, the more fuel the vehicle consumes. Unload any unnecessary luggage or cargo.

Keep tyre pressures correct


Under-inflation of the tyres can waste fuel due to increased rolling resistance of the tyres. Keep your tyres inflated to the correct pressure shown in the label on driver's door lock pillar.

Highway Driving

When driving at highway speeds, pay attention to the following:

- Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping point to allow for the extra stopping distance.
- On rainy days, hydroplaning can occur. Hydroplaning is the loss of direct contact between the road surface and the vehicle's tyres due to a water film forming between them. Steering or braking the vehicle during hydroplaning can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.

Driving on Hills

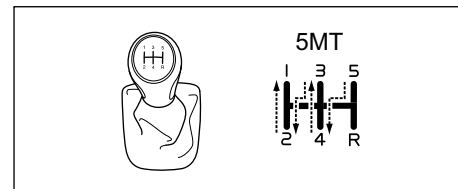

72RH4014

- When climbing steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine will again be operating in its higher power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine should be used for braking by shifting to the next lower gear.

While moving uphill/ gradient from a standstill condition

- Apply the parking brake firmly so that the vehicle does not roll backwards.
- Depress the clutch pedal and shift the gearshift lever to 1st select position.
- Do not slip the clutch.
- When ready to start, press accelerator pedal and slowly release the clutch pedal simultaneously. When the vehicle starts to move, gradually release the parking brake.


WARNING

Do not hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.

NOTICE

When descending a downhill, Never turn the ignition key to "LOCK" position. Emission control system damage may result.

Driving on Slippery Roads

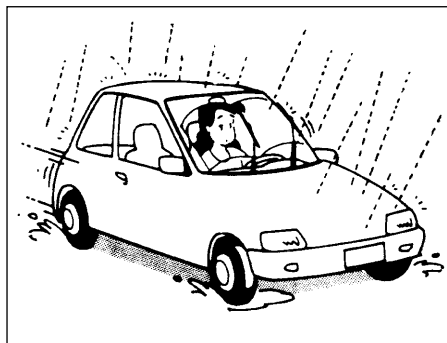

60G089S

On wet roads, you should drive at a lower speed than you do on dry roads due to possible slippage of tyres during braking. When driving on icy, snow-covered, or muddy roads, reduce your speed and avoid sudden acceleration, abrupt braking, or sharp steering movements.

Snow Chains

Snow chains should only be used if they are needed to increase traction or are required by law. Make sure that the chains you use are the correct size for your vehicle's tyres. Also make sure that there is enough clearance between the fenders and the chains as installed on the tyres.

Install the chains on the front tyres tightly, according to the chain manufacturer's instructions. Retighten the chains after driving about 1.0 km if necessary. With the chains installed, drive slowly.

NOTICE

- **If you hear the chains hitting against the vehicle body while driving, stop and tighten them.**
- **If your vehicle is equipped with full wheel caps, remove the wheel caps before installing the chains or the wheel caps can be damaged by the chain bands.**

DRIVING TIPS

Stuck Vehicle

If your vehicle gets stuck in snow, mud, or sand, follow the directions below:

- 1) Shift the transmission back and forth between first gear and reverse. This will create a rocking motion which may give you enough momentum to free the vehicle. Press gently on the accelerator to keep wheel spinning to a minimum wheel rpm. Remove your foot from the accelerator while shifting. Do not race the engine. Excessive wheel spin will cause the tyres to dig deeper, making it more difficult to free the vehicle.

NOTE:

If your vehicle is equipped with the ESP®, you may have to turn the ESP® system off in order to allow spinning the wheels.


- 2) If your vehicle remains stuck after a few minutes of rocking, we recommend you to consult a Maruti Suzuki authorised workshop or a roadside assistance service. If a towing service is not available in an emergency, your vehicle may be temporarily towed by other vehicle with a towing cable or chain secured to the towing eye either on the front of the vehicle or on the rear of the vehicle. Refer to "Frame Hooks" in "OTHER CONTROLS AND EQUIPMENT" section.

⚠ WARNING

Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h on the speedometer. Personal injury and/or vehicle damage may result from spinning the wheels too fast.

NOTICE

Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating or transmission damage.

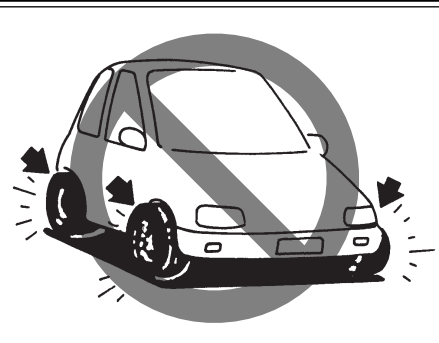

54G638S

⚠ WARNING

In addition to following the driving tips in this section, it is important to observe the following precautions.

- Make sure your tyres are in good condition and always maintain the specified tyre pressure. Refer to "Tyres" in the "INSPECTION AND MAINTENANCE" section for details.
- Do not use tyres other than those specified by MARUTI SUZUKI. Never use different sizes or types of tyres on the front and rear wheels. For information regarding the specified tyres, refer to the tyre information label located on the driver's door lock pillar.
- Never use oversized tyres or special shock absorbers and springs to raise (jack up) your vehicle. This will change the handling characteristics. Oversized tyres may also rub against the fender over bumps, causing vehicle damage or tyre failure.

(Continued)

⚠ WARNING

(Continued)

- After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Off-road Driving**Do not drive in the field covered with grown grass**

If you drive in the field covered with grass, it may cause accident or vehicle damage by getting caught in grown grass.

NOTICE

If the following cases, the bumper or the lower part of the vehicle could get damaged. Ensure proper care.

- Entering the areas where there is uneven road surface, such as road shoulder
- Driving on roads with grooves, bumps or potholes

When Encountering a Flooded Area

80J042

Avoid driving in a flooded area or a deep puddle. If driving in a flooded area is unavoidable, go slowly in the lowest gear. In case that you have driven in a flooded area, stop the vehicle in a safe place while checking the brake effectiveness. Then, ask a Maruti Suzuki authorised workshop to check the following inspection items.

- Function of brake
- Function of electrical components
- Changes of oil level and quality for engine, transmission and differential. In case that the oil is turbid whitely, water has been mixed in the oil and an oil change is required.
- Lubricant condition of the bearings, suspension joints, etc.

NOTICE

Avoid driving in a flooded area or a deep puddle. It may cause an engine stall, short in electrical components, engine and transmission damages, etc.

If the vehicle get stuck in deep water do not start the engine.

DRIVING TIPS


Do's and Dont's for safe driving

Exercise care in handling your vehicle. Be conscious of not only your own safety but also the safety of others on the road, and thus enjoy the best and most comfortable driving experience.

Following are basic rules for safe driving. Read them carefully for good understanding of the content so that you can enjoy safe and pleasant driving in your vehicle.

Starting


- 1) Adjust the driver's seat for the proper driving posture.
- 2) Adjust the rear view mirror so as to obtain the best possible rear view.

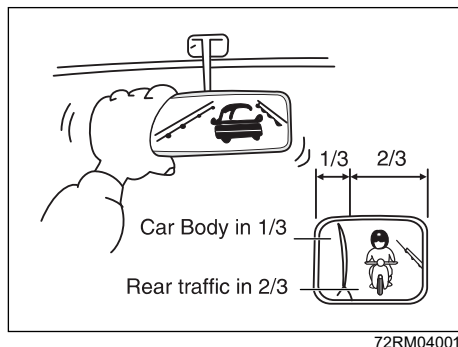

- 3) Before moving, look around your vehicle to confirm safety.
- 4) Don't accelerate suddenly, since it is dangerous and wastes fuel.

General Driving


- 1) Be sure to stop before a stop light or stop sign. When moving into an intersection without any traffic lights or signs, drive slowly to confirm safety.
- 2) Always follow other vehicles at a safe distance in order to prevent a rear-end collision, in case the vehicle ahead makes a sudden stop.

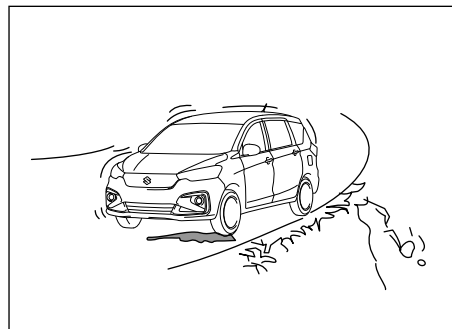

72RM04002

- 3) Turn on the turn signal at least 30 meters before making a turn or changing the lane so as not to be hit.
- 4) Before entering a corner, decelerate to a safe speed. Don't apply brakes during cornering, or skidding may occur.


- 5) When overtaking other vehicles, watch out for oncoming vehicles and carefully ensure safety.
- 6) Don't attempt zigzag driving as it will hinder your control over the vehicle and may cause an accident.
- 7) Avoid reckless high speed driving and try to drive at a safe speed suitable for the road conditions while maintaining a constant speed.
- 8) The higher the speed, the narrower the driver's visual range becomes. In such a state, it is difficult to anticipate any hazard and the driver feels fatigued.

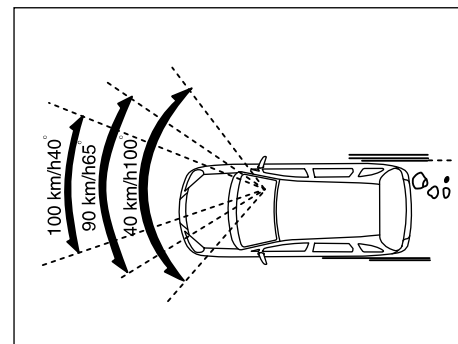

72RM04003


- 9) Do not attempt sharp handling during high speed driving. You may lose your control over your vehicle.
- 10) When overtaking or changing lanes while driving at a high speed, keep ample vehicle-to-vehicle distance.

Braking

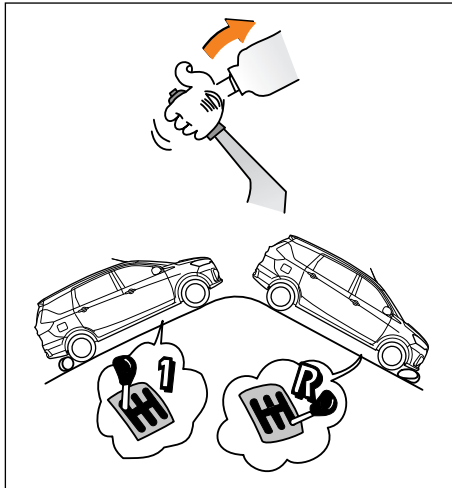

72RM04004

- 1) Use the parking brake when parking your vehicle and shift the gear shift lever into the first gear or reverse gear position for the sake of safety.
- 2) Don't use hand-braking unless unavoidable. It causes the vehicle to skid and a collision may occur. It is especially dangerous when the tires are worn out as they skid more.

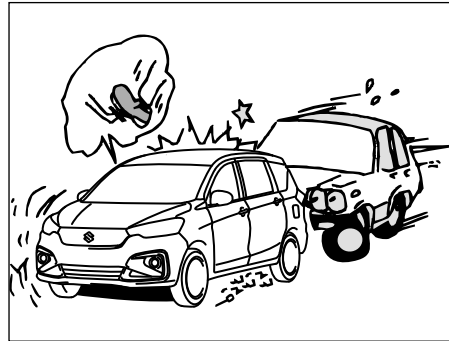

72RM04005


Use foot brake in three stages

1. Warn the vehicle behind you.
 2. Gradually apply the brake.
 3. Bring the vehicle to a halt.
- 3) When driving downhill, try not to apply the brake but use the engine brake effectively. Overuse of the foot-brake may result in reduction of brake effectiveness.

Long Distance Driving


- 1) Be sure to perform safety checks before starting a trip.
- 2) Take rest at regular intervals to prevent accidents which may occur due to feeling sleepy or tired.

Night Time Driving

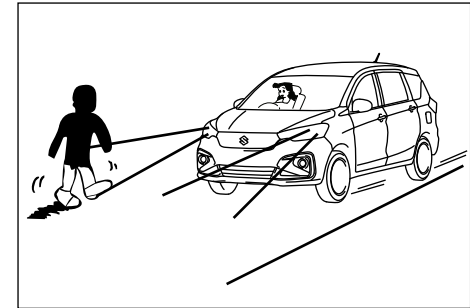

72RM04006

- 1) Drive at lower speeds during the night than in the daytime, as the visual range is restricted at night.
- 2) Avoid overtaking other vehicles at night. Darkness bothers your sense of speed and hinders your judgment of vehicle-to-vehicle distance.

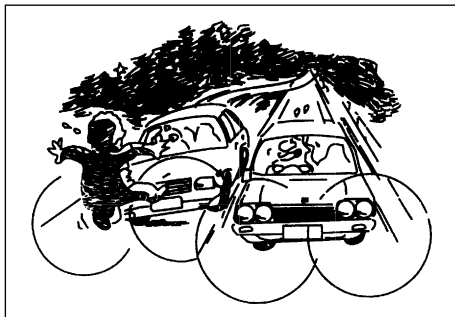

72F-08-021

- 3) Don't use headlights on high beam unless its use is inevitable. It may cause visual impairment to the driver of the oncoming vehicle or the vehicle ahead of you, which may cause an accident.
- 4) Always keep the window glasses clean. Don't operate the windshield wiper when the windshield glass is dry else the wiper blade and glass may get damaged.

Margin for safety


It is important to allow yourself a margin for safety during driving so that you can cope with erroneous or unexpected driving of other drivers. For that, observe the following.

- Drive at a safe speed.
- Maintain a sufficient distance between your vehicle and the vehicle ahead.
- Don't force yourself to overtake other vehicles.
- Don't accelerate suddenly, steer sharply or stop suddenly.
- Keep ample gaps between driving schedules.
- Observe traffic rules and regulations.

Conclusion

A perfect driver does not exist. The endeavour of every motorist should be to strive for perfection. Safety consciousness not only ensures your safety and the safety of other road users, it also helps reduce the wear and tear on your vehicle, lengthens its life, gives better fuel efficiency and ensures a comfortable driving experience.

Follow the do's and don'ts listed, and driving will never be the same again.

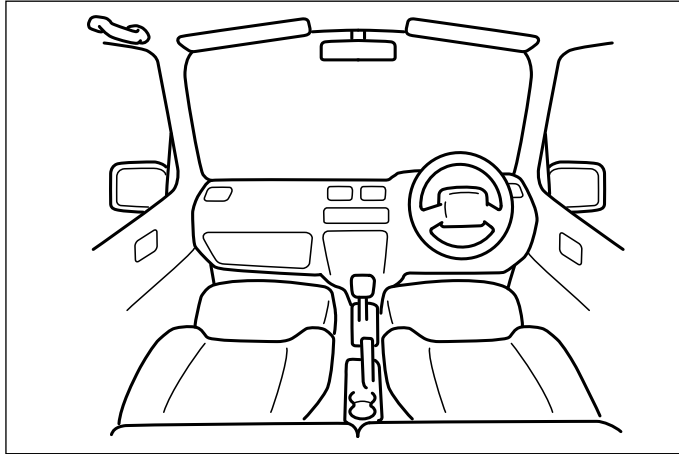

60G407


OTHER CONTROLS AND EQUIPMENT

Heating and Air Conditioning System	5-1
Manual Heating and Air Conditioning System	5-4
Radio Antenna	5-10
Installation of Radio Frequency Transmitters	5-10
Audio System	5-10
Fuel Filler Opening	5-46
Engine Hood	5-49
Sun Visor	5-51
Interior Light	5-52
Accessory Socket	5-54
Assist Grips	5-54
Glove Box	5-55
AUX/USB Socket (if equipped)/	
USB Socket (if equipped)	5-56
USB Charging Socket (if equipped)	5-56
Cup Holder and Storage Area	5-57
Footrest	5-60
Front Seat Back Pocket (if equipped)	5-60
Luggage Box (if equipped)	5-60
Frame Hooks	5-61

OTHER CONTROLS AND EQUIPMENT

Heating and Air Conditioning System

Air Outlet

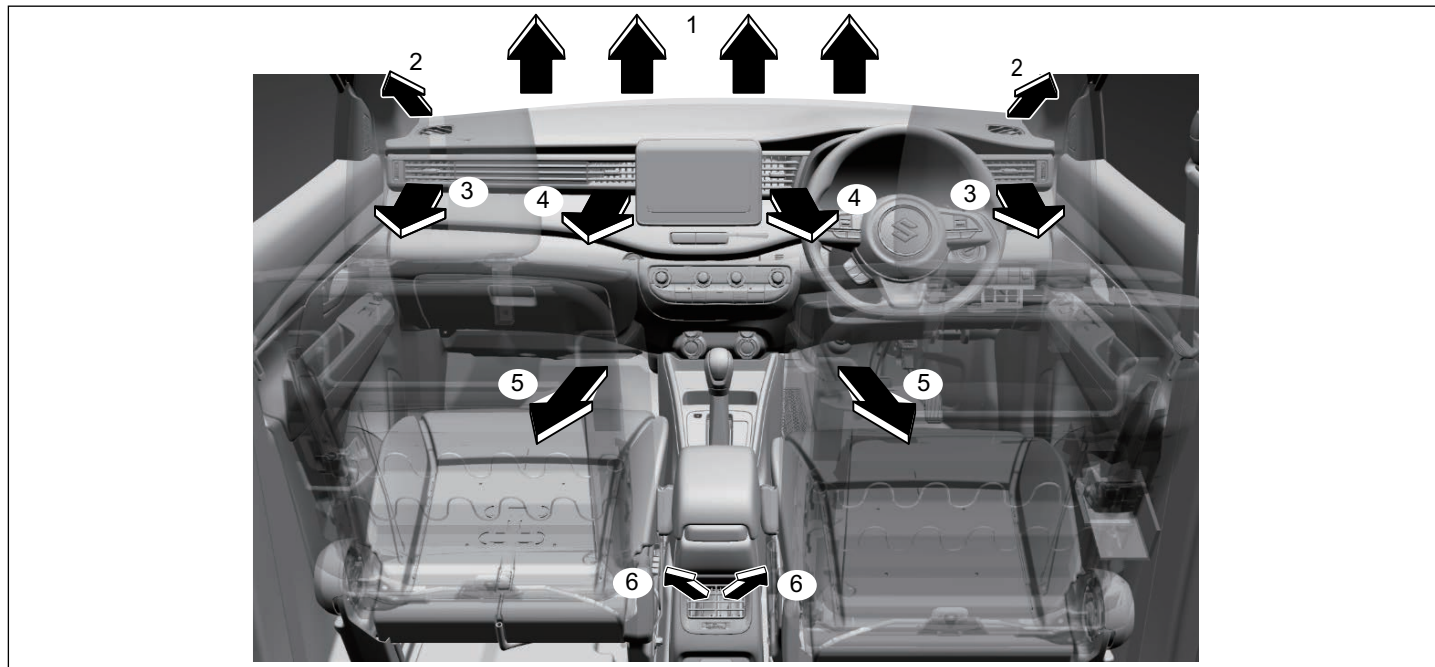


75U74EN050021

- 1. Windshield defroster outlet
- 2. Side defroster outlet
- 3. Side outlet

- 4. Center outlet
- 5. Floor outlet
- 6. Rear outlet

OTHER CONTROLS AND EQUIPMENT

Center outlet

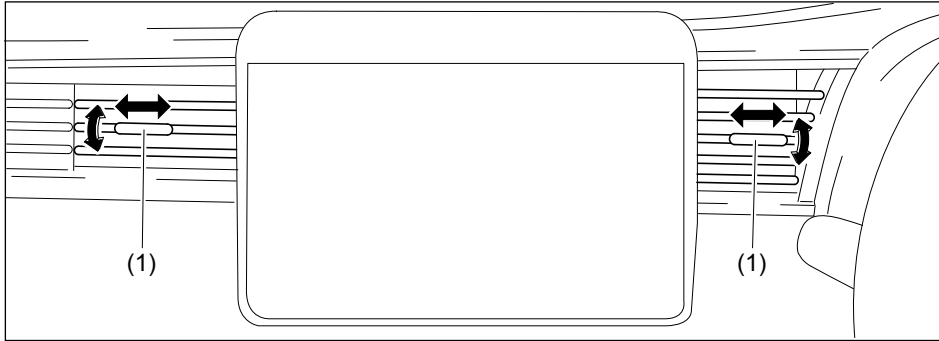


73R0075

Move the knob (1) vertically or horizontally to adjust the direction of air flow as desired.


CAUTION

Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.

Side outlet and rear outlet (if equipped)

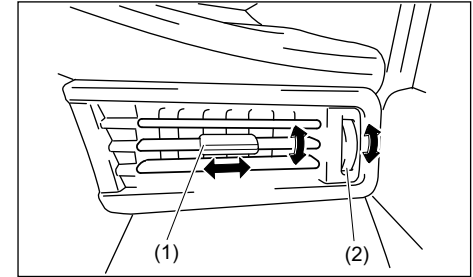

73R0076

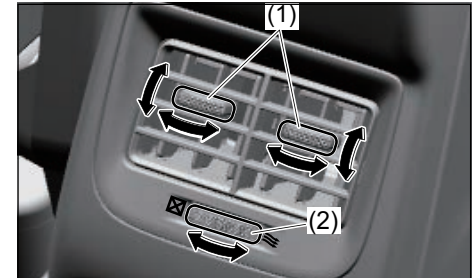

75U01ER050004

When open, air comes out regardless of the air flow selector position.

Move the knob (1) vertically or horizontally, to adjust the direction of air flow as desired.

The side outlet opens when you turn the dial (2) upward and closes when you turn it downward.


OTHER CONTROLS AND EQUIPMENT

The rear outlet (if equipped) opens when you turn the dial (2) to the right and closes when you turn it to the most left.

⚠ CAUTION


Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.

Rear air conditioning system (if equipped)

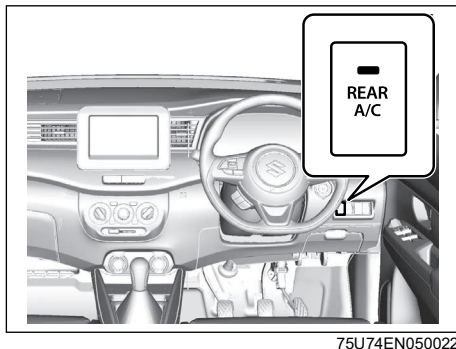

To turn on the rear air conditioning system, push in "REAR A/C" switch located on the

instrument panel and the indicator in the switch turns on.

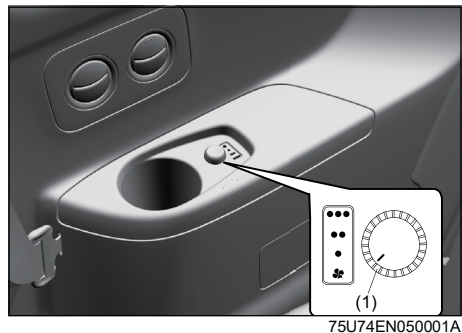


And set the rear blower speed selector (1) to a position other than off.

Side outlet for 3rd row seat



The side outlet is located only on the right side panel near the 3rd row seat.

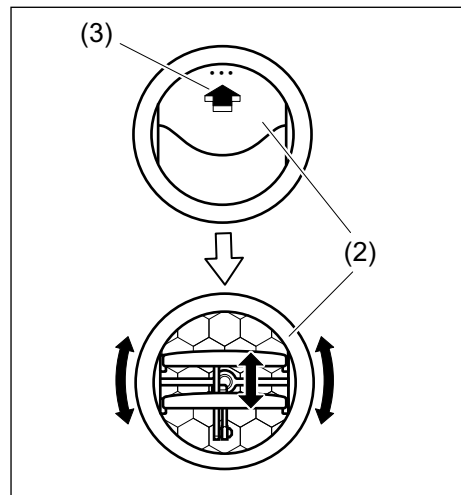


To open the louver (2), push the arrow part (3) as shown in the illustration. To adjust the direction of the air flow, move up or down or turn the opened louver (2).

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature. Less operation of the compressor results in better fuel economy.

Manual Heating and Air Conditioning System

Description of Controls

1. Temperature selector
2. Blower speed selector
3. Air intake selector
4. Air flow selector
5. Air conditioning switch

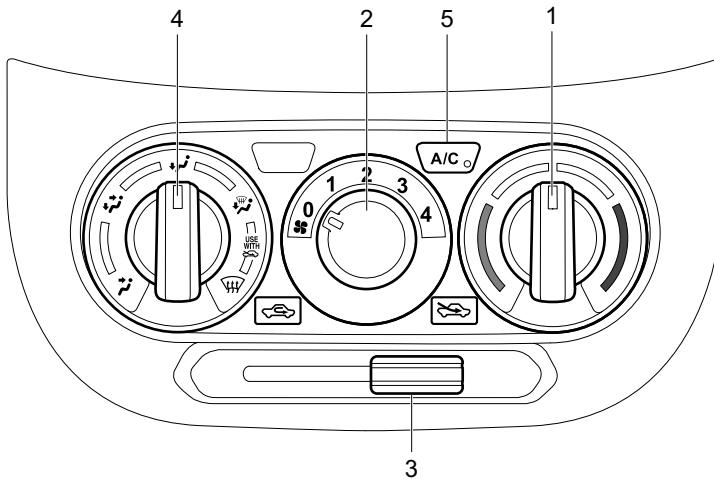

72R0015

OTHER CONTROLS AND EQUIPMENT


Temperature selector (1)

This is used to adjust the temperature.

Blower speed selector (2)

This is used to turn on the blower and to select blower speed.

Air intake selector (3)

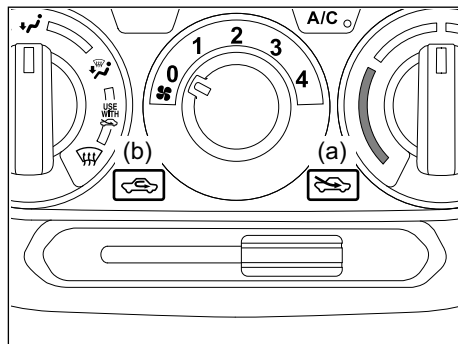

This selector is used to select the following modes.

FRESH AIR (a)


When this mode is selected by moving the lever to right, outside air comes in.

RECIRCULATED AIR (b)

When this mode is selected by moving the lever to left, outside air is shut out and inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as in a tunnel, or when attempting to quickly cool down / warm up the interior or to reduce unwanted odor from entering the vehicle.

NOTE:

If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle may become contaminated and the windows tend to get misted. Therefore, you should select FRESH AIR whenever possible.

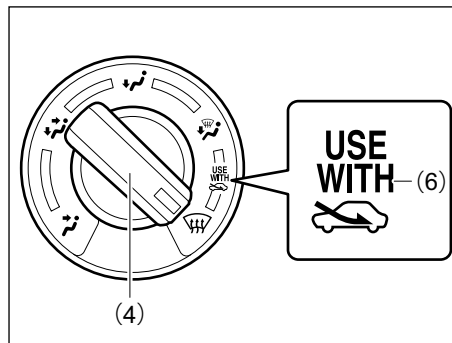


NOTE:

The mark of "USE WITH" (6)


To clear fog on the windshield and/or the side windows quickly, set the air flow selector (4) to "HEAT & DEFROST" or "DEFROST" and air intake selector (3) to "FRESH AIR". These positioning will clear the fogged windshield and/or the side windows faster than the "RECIRCULATED AIR".

Air flow selector (4)

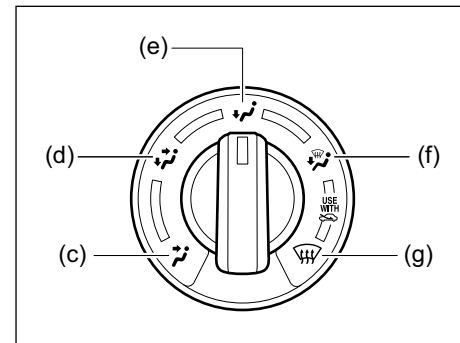

This is used to select one of the following functions.


VENTILATION (c)

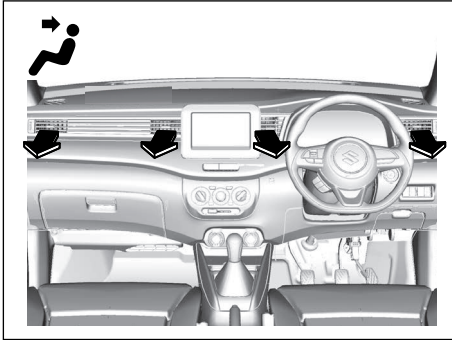

75U74EN050012

Temperature-controlled air comes out of the center and side outlets.


BI-LEVEL (d)

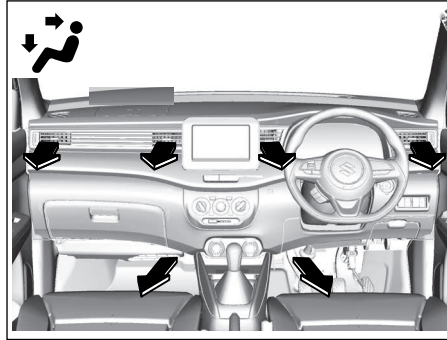

75U74EN050013

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.

HEAT (e)

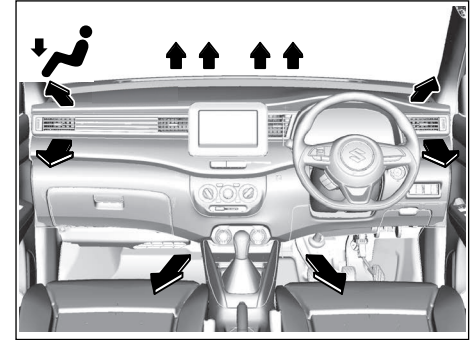


72R0017

Temperature-controlled air comes out of the floor and side outlets, also comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.

OTHER CONTROLS AND EQUIPMENT


HEAT & DEFROST (f)

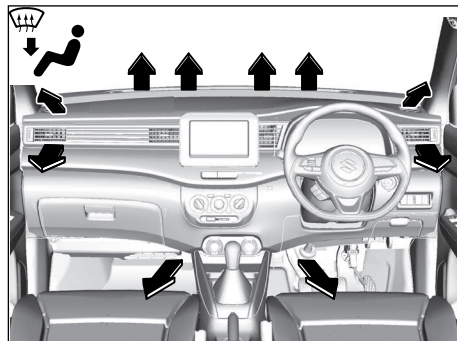

72R0018

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.

DEFROST (g)

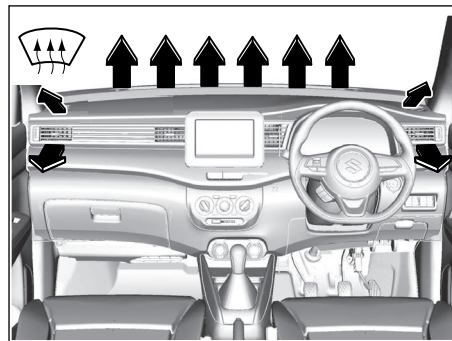

75U74EN050014

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

Air conditioning switch (5)

To turn on the air conditioning system, set the blower speed selector to a position other than off and push in "A/C" switch. With this "A/C" switch operation, a indicator light will come on when the air conditioning system is working. To turn off the air conditioning system, push "A/C" switch again.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature.

Less operation of the compressor results in better fuel economy.

System Operating Instructions

Natural ventilation

Select VENTILATION and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to off. Fresh air will flow through the vehicle during driving.

Forced ventilation

The base settings are the same as for natural ventilation except you set the blower speed selector to a position other than off.

Normal heating (using outside air)

Select HEAT and FRESH AIR, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases heating efficiency.

Quick heating (using recirculated air)

The base settings are the same as for normal heating except you select RECIRCULATED AIR. If you use this heating method for an extended period of time, the air in the vehicle can become contaminated and the windows can become misty. Therefore, use this method only for quick heating and change to the normal heating method as soon as possible.

Head cooled/Feet warmed heating

Select BI-LEVEL and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position. Unless the temperature selector is in the fully cold position or fully hot position, the air that comes out of the center and side outlets will be cooler than the air that comes out of the floor outlets.

Normal cooling

Set the air flow selector to VENTILATION, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position, and turn on "A/C" switch. Setting the blower speed selector to a higher blower speed position increases cooling efficiency.

You can switch the air intake selector to either FRESH AIR or RECIRCULATED AIR as you desire. Choosing RECIRCULATED AIR increases cooling efficiency.

Quick cooling (using recirculated air)

The base settings are the same as for normal cooling except you select RECIRCULATED AIR and the highest blower speed.

NOTE:

- If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle can become contaminated and the windows tend to get misted. Therefore, you should select FRESH AIR whenever possible.


- If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly while you operate the air conditioner with the air intake selector at FRESH AIR and the blower at high speed.

Dehumidifying

Set the air flow selector to a desired air flow selector position, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Also select FRESH AIR and turn on "A/C" switch.

NOTE:

Because the air conditioner dehumidifies the air, turning it on will help keep the windows clear, even when blowing heated air using DEFROST or HEAT & DEFROST functions.

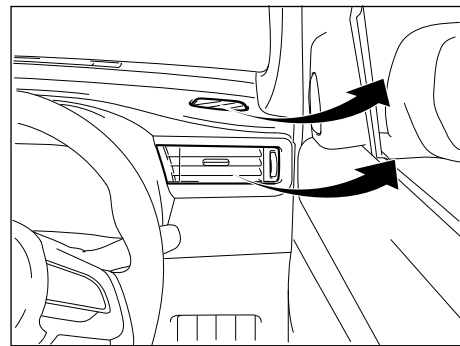

72R0012

OTHER CONTROLS AND EQUIPMENT

NOTE:

If you need maximum defrosting:

- *select DEFROST and FRESH AIR,*
- *set the blower speed selector to high,*
- *adjust the temperature selector to the hot end,*
- *turn on "A/C" switch, and*
- *adjust the side outlets so the air blows on the side windows.*

Models with ENG A-STOP System (if equipped)

- If the air conditioning performance can no longer perform at a sufficient level due to automatically stopping the engine, press the "ENG A-STOP OFF" switch to deactivate the ENG A-STOP system. (The engine will automatically restart and the air conditioning performance will be restored.)
- If the windshield and/or the driver's side/passenger side door windows are fogged during automatically stopping the engine, stop the ENG A-STOP system and restart the engine. Then, turn the air flow selector (4) to change the air flow to the "Heat & defrost" or "Defrost" position to defog the windows.

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in "Maintenance schedule" in "INSPECTION AND MAINTENANCE" section.

In dusty conditions, if temperature selector, air flow selector and air intake selector knobs are not operated, knob operation may become hard. Operate knobs end to end, at least 2-3 times once a month, for smooth operation of the knobs. More frequent operation is recommended if dust condition is severe.


NOTE:

Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called "R-134a". R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

Radio Antenna

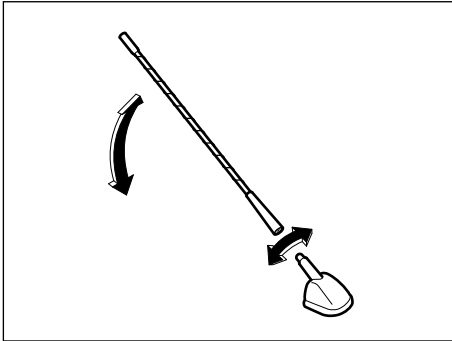

68KH052

The radio antenna on the roof is removable. To remove the antenna, turn it counterclockwise. To reinstall the antenna, turn it clockwise firmly by hand.

NOTE:

Adjust the antenna angle to maximum for optimum radio reception.

NOTICE

To avoid damage to the radio antenna:

- Remove the antenna when using an automatic car wash.
- Remove the antenna when the antenna hits anything such as a low ceiling in a parking garage or putting a car cover over your vehicle.

Installation of Radio Frequency Transmitters

We recommend that you always ask a Maruti Suzuki authorised workshop about frequency band, max output power, antenna position at vehicle and specific conditions for installation and/or use before installing a radio transmitter in your vehicle. Such equipments may cause the electronic control system to malfunction if they are incorrectly installed or they are not suited for the vehicle.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios or any other wireless transmitters may cause electronic interference with your vehicle's ignition system or any other electrical systems resulting in vehicle performance problems. Consult a Maruti Suzuki authorised workshop for advice.

Audio System Safety Information

⚠ WARNING

If you pay too much attention to operating the audio system or watching the audio system display while driving, an accident can occur. If you set the sound volume too loud, it could prevent you from being aware of road and traffic conditions.

- Keep your eyes on the road and your mind on the drive. Avoid paying too much attention to operating the audio system or watching the audio system display.
- Familiarize yourself with the audio system controls and operation of the audio system before driving.
- Preset your favorite radio stations before driving so that you can quickly tune to them using the presets.
- Set the sound volume to a level that will allow you to continue to be aware of surrounding road and traffic conditions while driving.

OTHER CONTROLS AND EQUIPMENT

NOTICE

While the engine is stopped, using the navigation or audio equipment for a long period of time may cause the lead-acid battery to run out. Do not use the navigation or audio equipment for a long period of time while the engine is stopped.

Bluetooth®


The Bluetooth® word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Inc.

Stop using this unit and a Bluetooth® ready device whenever requested.

This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.

You should stop using this unit immediately whenever you are notified that your unit disturbs other wireless communication.

Basic Operations

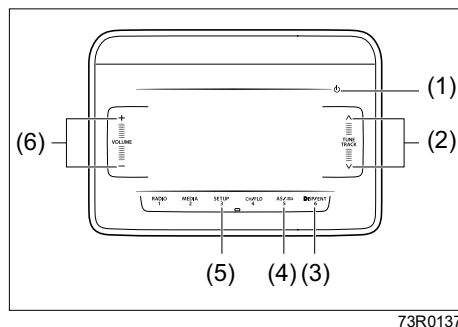

- (1) POWER button
- (2) "TUNE/TRACK" Up/Down button
- (3) "ENTER" button
- (4) BACK button
- (5) "SETUP" button
- (6) "VOLUME" button

Turning power on/off

Touch the POWER button (1).

The audio system starts in the function mode it was in when the power was turned off last.

- Touching the POWER button (1) for 1 second or longer can turn off the audio system.

Slide touch operation

Operate several functions with the slide touch operation. Touch the panel and slide up or down with your finger for increase/decrease or up/down operation.

NOTE:

Pay caution to the following content regarding slide touch operation:

- The touch button may not operate properly when the touch panel or your fingers are wet. Remove any liquid before operating.
- Depending on the operation method it may react without touching.
- It may not react properly when operated with gloves on.
- When metal objects are placed near the touch panel it may cause a malfunction.
- Do not attach protective film. Otherwise, the touch panel may not operate properly.

Functions available with the slide touch operation

Mode	Function		
Common	Volume up/down	O	–
	Item selection	–	O
Radio	TUNE up/down	–	O
USB	File up/down	–	O
	Folder up/down (folder operation mode)	–	O
iPod	TRACK up/down	–	O
	Category selection (iPod menu)	–	O
Bluetooth® audio	TRACK up/down	–	O
	Group up/down (Group operation mode)	–	O
Hands-free	Reception/ringtone/incoming call volume up/down	O	–
	Switching pages of the speed dial selection screen	–	O

OTHER CONTROLS AND EQUIPMENT

Adjusting the volume

Touch or slide the "VOLUME" button (6).

- To increase the volume, touch  or slide upwards.
- To decrease the volume, touch  or slide downwards.

NOTE:

While driving, adjust the volume to an extent that sound and/or noise coming from outside can be heard.

Sound settings

- 1) Touch the SETUP button (5).
 - Touch for 1 second or longer when using radio mode.
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), select "Sound", and touch the "ENTER" button (3).
 - The sound setting screen will be displayed.
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (2), select the desired item, and touch the "ENTER" button (3).
 - The sound settings will change as follows:
 - EQ ↔ Bass ↔ Treble ↔ Balance ↔ Fader ↔ AVC

Preset EQ

The preset EQ can set various types of sounds depending on the type of music.

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (2) from the "Sound" screen, select "EQ", and touch the "ENTER" button (3).
 - 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), select the desired item, and touch the "ENTER" button (3).
- The preset EQ settings will change as follows:
Off (Flat) ↔ Jazz ↔ Rock ↔ Pop ↔ Classic ↔ Hip-hop

Adjusting bass/treble/balance /fader

The preset EQ can set various types of sounds depending on the type of music.

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (2) from the "Sound" screen, select "Bass", "Treble", "Balance", or "Fader" and touch the "ENTER" button (3).
 - 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), adjust to the desired settings and touch the "ENTER" button (3).
- "Bass"/"Treble":
 - Can be adjusted in stages from -6 to 0 to +6.
 - Touch  to emphasize the low or high sounds, and touch  to quiet.
 - "Balance":
 - Can be adjusted in 9 stages left to right.
 - Touch  to emphasize the right speaker, and touch  to emphasize the left speaker.
 - "Fader":
 - Can be adjusted in 9 stages back to front.
 - Touch  to emphasize the front speaker, and touch  to emphasize the rear speaker.

Adjusting the AVC (Auto volume control)

The Auto Volume Control (AVC) function automatically adjusts (increases/decreases) the sound volume in accordance with vehicle speed. The AVC control is provided with three selectable levels (LEVEL OFF, 1, 2, 3). The range of volume adjustment increases together with the LEVEL number.

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (2) from the "Sound" screen, select "AVC", and touch the "ENTER" button (3).
 - 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), select the desired level, and touch the "ENTER" button (3).
- The AVC will change as follows:
Off ↔ Level 1 ↔ Level 2 ↔ Level 3

Switching the mode

Press the "MEDIA" button (7) for 1 second or more in radio mode. You can switch the radio mode to media mode. Touch the "RADIO" button (8) in media mode. You can switch the media mode to radio mode.

System settings

Change the "Beep", "Slide", and "SW Sensitivity" settings.

- 1) Touch the SETUP button (5).
- Touch for 1 second or longer when using radio mode.
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), select "System", and touch the "ENTER" button (3).
- The system setting screen will be displayed.
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (2), select the desired item, and touch the "ENTER" button (3).
- The system settings will change as follows:
Beep ↔ Slide ↔ SW Sensitivity

OTHER CONTROLS AND EQUIPMENT

BEEP on/off

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (2) from the "System" screen, select "Beep", and touch the "ENTER" button (3).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), select on or off, and touch the "ENTER" button (3).

Slide touch operation settings

Turn the slide operation on/off.

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (2) from the "System" screen, select "Slide", and touch the "ENTER" button (3).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), select on or off, and touch the "ENTER" button (3).

Touch panel sensitivity settings


Change the touch panel sensitivity.

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (2) from the "System" screen, select "SW Sensitivity", and touch the "ENTER" button (3).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), select Low or High, and touch the "ENTER" button (3).

NOTE:

If the touch button sensitivity is too high, set to "Low".

Radio

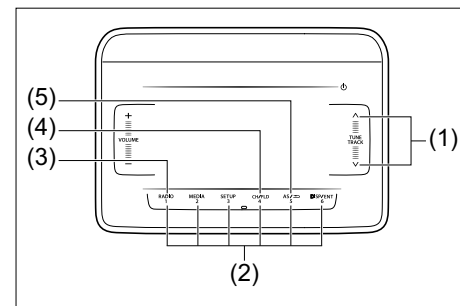


- (1) "TUNE/TRACK" Up/Down button
- (2) Preset button
- (3) "RADIO" button*1
- (4) "CH" (channel) button
- (5) "AS" (auto store) button

*1 Use this button to switch between manual preset and auto preset.


Display

Manual preset

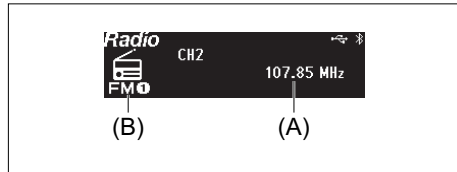

73R0139

Auto preset

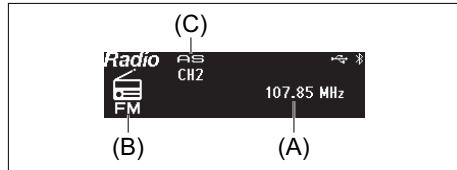

73R0140

(A) Frequency

(B) Band

(C) Auto Store mode display

NOTE:

Radio Reception

Radio reception can be affected by environment, atmospheric conditions, or radio signal's power and distance from the station. Nearby mountains and buildings may interfere or deflect radio reception, causing poor reception. Poor reception or radio static can also be caused by electric current from overhead wires or high voltage power lines.

Selecting the band

- 1) Touch the "RADIO" button (3) for 1 second or longer.
- Each time the button is touched, the mode will change as follows:
 - AM → FM1 → FM2 → AM (AS) → FM (AS)

Seek tuning

- 1) Touch the "TUNE/TRACK" Up/Down button (1) for 1 second or longer.
- The audio system stops searching for a station at a frequency where a broadcast station is available.

Manual tuning

- 1) Touch the "TUNE/TRACK" Up/Down button (1) to select the desired station.

Storing the station

Manual store

- 1) Select the station and frequency.
- 2) Touch and hold the "CH" button (4) for at least 1 second.
- 3) Hold down a desired button ([1] to [6]) of the Preset buttons (2) to which you want to store the station for 2 seconds or longer.

NOTE:

6 stations can be stored for AM, and 6 stations for each of FM1 and FM2, thus 18 stations can be stored in total.

Auto store

- 1) Touch the "AS" button (5) for 1 second or longer.
- Start searching from a station whose frequency is the lowest. When a broadcast station that can be received with a sufficient strength is discovered, it will be assigned to the AM (AS)/FM (AS) band's preset button (2). Once this process is completed the tuner will return to the first stored broadcast station.

NOTE:

- Auto store can be released by touching the "AS" button (5) while auto store is under way.
- When the auto store is performed, the station previously stored in the memory at the position is overwritten.
- 6 stations can be preset for FM, and 6 stations for AM in auto store mode.

OTHER CONTROLS AND EQUIPMENT

Select from the preset channels

Manual preset channel

- 1) Select the radio station and frequency.
- 2) Touch the “CH” button (4) for 1 second or longer.
- 3) Touch a desired button ([1] to [6]) of the Preset buttons (2).


NOTE:

Touch and hold the “CH” button (4) for at least one second to select from the preset channel list.

Auto preset channel


- 1) Touch the “RADIO” button (3) for 1 second or longer and select AM (AS) or FM (AS).
- 2) Touch the “CH” button (4) for 1 second or longer.
 - The preset channel list is displayed.
- 3) Touch a desired button ([1] to [6]) of the Preset buttons (2).

USB

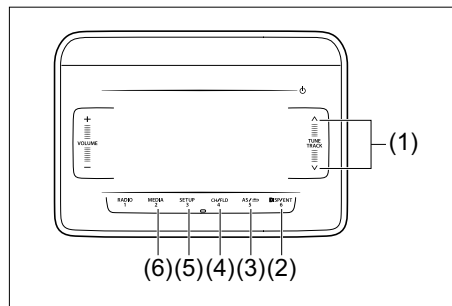

73R0141

Display

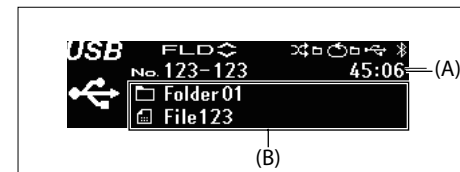

73R0142

(A) Play time

(B) Text information display

⚠ WARNING

Do not connect any USB device other than a USB memory or a USB audio player. Do not connect multiple USB devices to the USB connector using a USB hub, etc. Supplying power to multiple USB devices from the connector could cause overheating and smoking.

Selecting a USB device mode

- 1) Touch the "MEDIA" button (6).
- Each time the button is touched, the mode will change as follows:
USB (iPod) (if equipped) → Bluetooth® audio (if equipped) → AUX (if equipped)...

Fast forwarding/Rewinding a track

- 1) Hold down the "TUNE/TRACK" Up/Down button (1).
- : Hold down the Up button for 1 second or longer to fast forward the track.
- : Hold down the Down button for 1 second or longer to fast rewind the track.
- Releasing the button can stop the fast forwarding/rewinding.

Selecting a track

- 1) Touch the "TUNE/TRACK" Up/Down button (1).
- : Touch the Up button to listen to the next track.
- : When the Down button is touched once, the track currently being played will start from the beginning again. Touch the Down button twice to listen to the previous track.

Selecting a folder

- 1) Touch the "FLD" (folder operation) button (4).
- 2) Touch the "TUNE/TRACK" Up/Down button (1).
- : Touch the Up button to move to the next folder.
- : Touch the Down button to move to the previous folder.

Repeat playback

- 1) Touch the SETUP (random/repeat) button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Repeat", and touch the "DISP/ENTER" button (2).
- Each time the "DISP/ENTER" button (2) is touched, the mode will change as follows:
Off → One song repeat → Folder repeat ...

Random playback

- 1) Touch the SETUP (random/repeat) button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Random", and touch the "DISP/ENTER" button (2). Each time the "DISP/ENTER" button (2) is touched, the mode will change as follows:
Off → Folder random → All random ...

Display change

- 1) Touch the "DISP/ENTER" button (2).
- Each time the button is touched, display will change as follows:
MP3/AAC:
Artist name/Track title → Album name/Track title → Folder name/File name...
WMA:
Artist name/Track title → Folder name/File name ...

NOTE:

- "NO TITLE" will be displayed when there is no text information in the USB device currently being played.
- "..." is displayed if all text data cannot be displayed. Touch and hold the "DISP/ENTER" button (2) for at least 1 second to automatically display the rest of the text data.

OTHER CONTROLS AND EQUIPMENT

Notes on USB device

Compatible USB devices

- USB Mass Storage Class
For details as to whether your USB memory/USB Audio is compatible with USB Mass Storage Class, please contact the USB memory/USB Audio manufacturer.
- Audio file
MP3 (.mp3)/WMA (.wma)/AAC (.m4a)/AAC (.aac)
- File System
FAT 12/16/32, VFAT (supporting long file name)
- USB Standard Compatibility
1.1/2.0 Full Speed
- If a USB hub or extension cable is connected to the audio system, it may not be recognized. In this case, directly connect the USB device to the audio system.
- Devices such as MP3 players/mobile phones/digital cameras may not be recognized as audio systems for playing music.

USB device connection

- When connecting a USB device, make sure that the connector is pushed all the way into the port.
- Depending on the USB flash drive that you are using, (non-brand product, USB flash drive that has been externally damaged) it may disable connection or cause unstable operation.
- Do not leave the USB device for long periods of time in places inside the vehicle where the temperature can rise too high.
- Back up any important data beforehand. We cannot accept responsibility for any lost data.
- It is recommended not to connect a USB device that contains data files other than MP3/WMA format.

Recording MP3/WMA/AAC files on a USB device

- Playback or display may not be possible depending on the type of USB device in use or the condition of the recording.
- Depending on the connected USB memory, the files may be played in different order from the order that the files were stored.
- The DRM (Digital Rights Management) file cannot be played.

Compression formats

MP3

- Bit rate
MPEG1 Audio Layer III: 32 up to 320 kbps
MPEG2 Audio Layer III: 8 up to 160 kbps
MPEG2.5 Audio Layer III: 8 up to 160 kbps
VBR: up to 384 kbps (MAX.)
- Sampling frequency
MPEG1 Audio Layer III: 32/44.1/48 kHz
MPEG2 Audio Layer III: 16/22.05/24 kHz
MPEG2.5 Audio Layer III: 8/11.025/12 kHz
- Channel
Stereo/Joint stereo/Dual channel/Monaural
- ID3 tag
ID3v1.x/ID3v2.x

WMA

- Windows Media Audio Ver.7/Ver.8/Ver.9
Standard compliant
- Bit rate: 32 up to 320 kbps
- VBR: up to 384 kbps (MAX.)
- Sampling frequency: 32/44.1/48 kHz
- WMA tag: Ver.8.0
- Channel: 2 Channels

AAC

- Bit rate: 16 up to 320 kbps
- VBR: up to 320 kbps (MAX.)
- Sampling frequency: 32/44.1/48 kHz
- AAC tag: iTunes m4a metadata


Maximum number of files/folders

- Maximum number of files: 2500
- Maximum number of files in a folder: 255
- Maximum number of folders: 255
 - Root folder and empty folder are included.
- Maximum depth of tree structure: 8

NOTICE


Never use “.mp3”, “.wma” or “.m4a” as a file name extension if it is not in the MP3/WMA/AAC format file. Failure to observe this may result in damage to the speaker due to noise production.

iPod

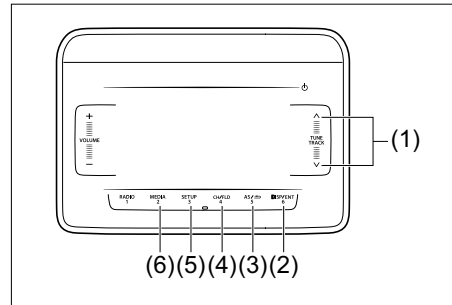

- (1) “TUNE/TRACK” Up/Down button
- (2) “DISP/ENTER” button
- (3) BACK button
- (4) “FLD” (iPod menu) button
- (5) SETUP (shuffle/repeat) button
- (6) “MEDIA” button

Display

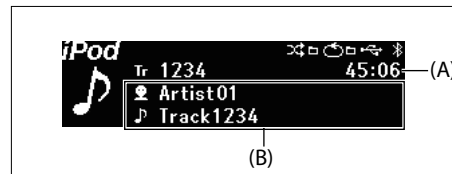

- (A) Play time
- (B) Text information display

Selecting an iPod mode

- 1) Touch the “MEDIA” button (6).
- Each time the button is touched, the mode will change as follows:
USB (iPod) (if equipped) → Bluetooth® audio (if equipped) → AUX (if equipped)

Fast forwarding/Rewinding a track

- 1) Hold down the “TUNE/TRACK” Up/Down button (1).
- : Hold down the Up button for 1 second or longer to fast forward the track.
 - : Hold down the Down button for 1 second or longer to fast rewind the track.
 - Releasing the button can stop the fast forwarding/rewinding.

Selecting a track

- 1) Touch the “TUNE/TRACK” Up/Down button (1).
- : Touch the Up button to listen to the next track.
 - : When the track currently being played once, the track currently being played will start from the beginning again. Touch the Down button twice to listen to the previous track.

OTHER CONTROLS AND EQUIPMENT

Select a category

- 1) Touch the “FLD” (iPod menu) button (4).
 - 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select the desired category, and touch the “DISP/ENTER” button (2).
- The Song selection mode for each category will be displayed as follows.
 - Playlists: Playlists → Songs
 - Artists: Artists → Albums → Songs
 - Songs: Songs
 - Genres: Genres → Artists → Albums → Songs
 - Radio: Station
 - Audiobooks: Audiobooks
 - Podcasts: Podcasts → Episodes
 - i Tunes U: i Tunes U → Episodes

NOTE:

Categories is not displayed if the no files in the category.

Repeat playback

- 1) Touch the SETUP (shuffle/repeat) button (5).
 - 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Repeat”, and touch the “DISP/ENTER” button (2).
- Touch the “DISP/ENTER” button (2). Each time the button is touched, display will change as follows:
The repeat mode will vary depending on your device.
Off → 1 song repeat → All repeat ...

Random playback

- 1) Touch the SETUP (shuffle/repeat) button (5).
 - 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Shuffle”, and touch the “DISP/ENTER” button (2).
- Touch the “DISP/ENTER” button (2). Each time the button is touched, display will change as follows:
Off → Shuffle → Album shuffle ...

Display change

- 1) Touch the “DISP/ENTER” button (2).
- Each time the button is touched, display will change as follows:
Artist name/Track title → Album name/Track title → Playlist name/Track title ...

NOTE:

- “NO TITLE” is displayed if the file currently being played has no text data.
- “...” is displayed if all text data cannot be displayed. Touch and hold the “DISP/ENTER” button (2) for at least one second to automatically display the rest of the text data.
- “Playlist name/song name” is only displayed by the “FLD” (Menu) button (4) when music is selected from Playlists.

Notes on iPod

Made for iPod

- iPod touch:
 - iPod touch (6th generation)
- iPhone:
 - i Phone 5s
 - i Phone 6
 - i Phone 6 Plus
 - i Phone 6s
 - i Phone 6s Plus
 - i Phone SE
 - i Phone 7
 - i Phone 7 Plus

NOTE:

Some functions may not be available depending on the model of iPod.


iPod



73R0217

- “Made for iPod” and “Made for iPhone” means that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this unit or its compliance with safety and regulatory standards.
- Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- Lightning is a trademark of Apple Inc.

AUX

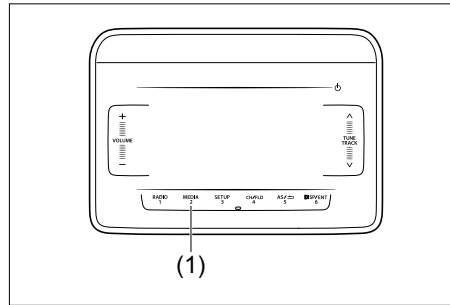

73R0145

(1) “MEDIA” button

Display



73R0146

NOTICE

- Before connection, mute the unit, and also keep the volume of the auxiliary audio source within a range that will not cause distortion.
- When the audio source is turned off, noise may be emitted. Be sure to turn off the unit or switch to another mode before turning off the audio source.

AUX selection


- 1) Touch the “MEDIA” button (1).
- Each time the button is touched, the mode will change as follows:
USB (iPod) (if equipped) → Bluetooth® audio (if equipped) → AUX (if equipped)

NOTE:


- Please consult your place of purchase for details about whether a given auxiliary audio source can be connected and the proper auxiliary cord to use.

OTHER CONTROLS AND EQUIPMENT

Setting of Bluetooth® devices

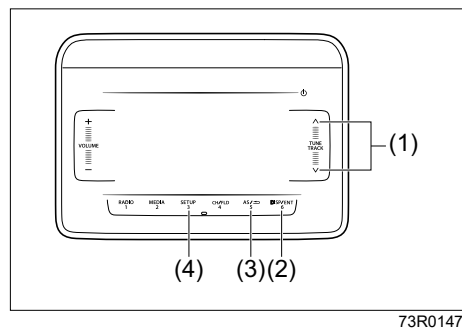

Steering switch (if equipped)

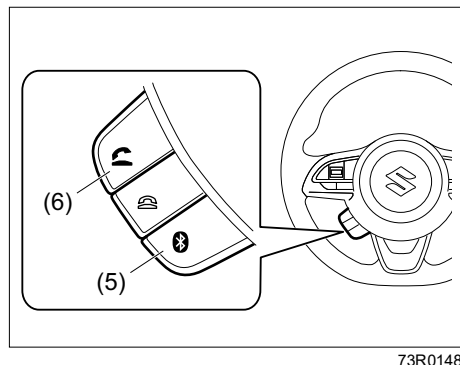

- (1) "TUNE/TRACK" Up/Down button
- (2) "ENTER" button
- (3) BACK button
- (4) SETUP button
- (5) Bluetooth® button
- (6) Off-hook button

⚠ CAUTION

Do not register or set the Bluetooth® device while driving. Stop your vehicle in a safe area before registering the device.

Registration of Bluetooth® devices

To use Bluetooth® devices (Bluetooth® audio or mobile phone) on the audio system, it is required to register the Bluetooth® devices to the audio system. Up to 5 Bluetooth® devices can be registered.

NOTE:

- Certain functions cannot be used depending on the Bluetooth® device.
- Refer to the user manual included with your device regarding the operation method of Bluetooth® devices.
- Some Bluetooth® enabled phones may not be compatible fully and or partially with the audio unit.
- Bluetooth® / Telephone setup mode can be entered only when the vehicle is stationary.
- If the pairing cannot be established, the connection operation is canceled. For the Bluetooth® device pairing method, refer to the user manual included with your device or try pairing again.

- 1) The Bluetooth® setting screen will be displayed.
- From the panel button: Touch the SETUP button (4). Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
- From the steering switch: Press the Bluetooth® button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Pairing", and touch the "ENTER" button (2).
- The passkey will be displayed.

- 4) Operate and register the Bluetooth® device.

Secure Simple Pairing (SSP) incompatible Bluetooth® device:
Enter the passkey into the Bluetooth® device.

Secure Simple Pairing (SSP) compatible Bluetooth® device:
Select "Yes" to register the Bluetooth® device.

- It is possible to automatically register devices depending on the type of Bluetooth® device.

NOTE:

- *If the Bluetooth® device contains music player and mobile phone function, both functions will be registered simultaneously. When deleting a Bluetooth® device, both functions will be deleted simultaneously.*
- *If a mobile phone is not registered and the off-hook button (6) is pressed and the telephone mode is selected, it will automatically switch to "Pairing".*
- *When pairing with a mobile phone is established, it is possible to automatically transfer the phonebook and call history. If you wish to conduct an automatic transfer press "YES" and if not, press "NO".*

Set from the list of mobile phones

The list of paired mobile phones is displayed and the various settings can be changed.

- 1) The Bluetooth® setting screen will be displayed.

- From the panel button: Touch the SETUP button (4). Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (2).

- From the steering switch: Press the Bluetooth® button (5).

- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).

- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "List Phone", and touch the "ENTER" button (2).

Connect a registered mobile phone

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "List Phone" screen, select the name of the desired mobile phone, and touch the "ENTER" button (2).

- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Select", and touch the "ENTER" button (2).

Disconnect a connected mobile phone

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "List Phone" screen, select the name of the desired mobile phone, and touch the "ENTER" button (2).

- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Disconnect", and touch the "ENTER" button (2).

- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (2).

Delete a registered mobile phone

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "List Phone" screen, select the name of the desired mobile phone, and touch the "ENTER" button (2).

- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Delete", and touch the "ENTER" button (2).

- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (2).

Set from the Bluetooth® audio list

The list of paired Bluetooth® audio is displayed and the various settings can be changed.

- 1) The Bluetooth® setting screen will be displayed.

- From the panel button: Touch the SETUP button (4). Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (2).

- From the steering switch: Press the Bluetooth® button (5).

- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).

OTHER CONTROLS AND EQUIPMENT

- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "List Audio", and touch the "ENTER" button (2).

Connect a registered Bluetooth® audio

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth® audio, and touch the "ENTER" button (2).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Select", and touch the "ENTER" button (2).

Disconnect a registered Bluetooth® audio

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth® audio, and touch the "ENTER" button (2).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Disconnect", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (2).

Delete a registered Bluetooth® audio

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth® audio, and touch the "ENTER" button (2).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Delete", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (2).

NOTE:

- *In case audio device does not re-connect after following above steps, delete your audio device from registered list of audio by following steps 1) to 3) of "Delete a registered Bluetooth® audio" mentioned above. Register the audio device again by referring to "Registration of Bluetooth® devices" and follow steps 1) to 4).*
- *Some audio device may not re-connect automatically. For such cases, follow steps 1) to 2) of "Connect a registered Bluetooth® audio" mentioned in further pages of this section.*

Select a connection method

It is possible to switch connection methods when the Bluetooth® audio is registered to the audio system and the audio system and Bluetooth® audio are not connected.

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth® audio, and touch the "ENTER" button (2).
 - 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Connect Method", and touch the "ENTER" button (2).
 - 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the connection method, and touch the "ENTER" button (2).
- From Vehicle:
Operate from the audio system to connect to the Bluetooth® device.
 - From Audio:
Operate from the Bluetooth® device to connect to the audio system.

Change of Passkey

- 1) The Bluetooth® setting screen will be displayed.
 - From the panel button: Touch the SETUP button (4). Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Bluetooth”, and touch the “ENTER” button (2).
 - From the steering switch: Press the Bluetooth® button (5).
- 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Setup Bluetooth”, and touch the “ENTER” button (2).
- 3) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Passkey”, and touch the “ENTER” button (2).
- 4) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “YES”, and touch the “ENTER” button (2).
- 5) Touch or slide the “TUNE/TRACK” Up/Down button (1), select a number between 0 and 9, and touch the “ENTER” button (2).
Repeat this operation several times.
- Enter the passkey one digit by one digit.
- The passkey must be between 4 to 8 digits.
- In order to cancel the number that you entered and return to the previous digit, touch the BACK button (3).
- If you do not enter a number that is 4 or more digits and re-touch the “ENTER” button (2), the passkey will be registered.

Automatic connection with the Bluetooth® device

If the “Bluetooth Power” is set to ON, turning the ignition switch to ACC will automatically connect the registered Bluetooth® device.

- With the automatic connection, the Bluetooth® device that was connected last will be prioritized.
- 1) The Bluetooth® setting screen will be displayed.
 - From the panel button: Touch the SETUP button (4). Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Bluetooth”, and touch the “ENTER” button (2).
 - From the steering switch: Press the Bluetooth button (5).
 - 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Setup Bluetooth”, and touch the “ENTER” button (2).
 - 3) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Bluetooth Power”, and touch the “ENTER” button (2).
 - Touch or slide the “TUNE/TRACK” Up/Down button (1), select “On” or “Off”, and touch the “ENTER” button (2).

NOTE:

- When “Bluetooth Power” is set to “OFF”, the audio system disconnects from the registered Bluetooth® device.
- If “Bluetooth Power” is set to “Off”, the audio system will not automatically

reconnect the next time the ignition is switched on.

The device status will be displayed

- 1) The Bluetooth® setting screen will be displayed.
 - From the panel button: Touch the SETUP button (4). Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Bluetooth”, and touch the “ENTER” button (2).
 - From the steering switch: Press the Bluetooth button (5).
- 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Setup Bluetooth”, and touch the “ENTER” button (2).
- 3) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Bluetooth Info”, and touch the “ENTER” button (2).
- 4) Touch or slide the “TUNE/TRACK” Up/Down button (1), select the desired status, and touch the “ENTER” button (2).
- To display the device name, select “Device Name”.
- To display the device address, select “Device Address”.

OTHER CONTROLS AND EQUIPMENT

Initialize

It is possible to initialize the audio system's Bluetooth® settings or device information.

⚠ CAUTION

- **Do not initialize the settings while driving. Stop your vehicle in a safe area before initializing the device.**
- **Initialize with caution. Initialized settings and history cannot be restored.**

- 1) The Bluetooth® setting screen will be displayed.
 - From the panel button: Touch the SETUP button (4). Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
 - From the steering switch: Press the Bluetooth button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Initialize", and touch the "ENTER" button (2).
- 4) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the item that you want to initialize item, and touch the "ENTER" button (2).
 - HF Sound Setting:
 - Reception/ringtone volume
 - Incoming call volume
- 5) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (2).
 - Vehicle Passkey
 - All Initialize:
 - Reception/ringtone volume
 - Incoming call volume
 - Bluetooth audio volume
 - Pairing registration
 - Phonebook/history
 - Speed dial
 - Connect Method
 - Bluetooth Power
 - Auto Transfer

Device

Info:

Notes on Bluetooth®



73R0209

- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Denso Ten Limited is under license. Other trademarks and trade names are those of their respective owners.

This telecommunication equipment conforms to the requirements of the National Telecommunications Commission.
- Stop using this unit and a Bluetooth® ready device whenever requested. This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios. You should stop using this unit immediately whenever you are notified that your unit disturbs other wireless communication.

Profile


- SSP (Secure Simple Pairing)
- PBAP (Phone Book Access Profile)
- OPP (Object Push Profile)
- HFP (Hand-Free Profile)
- A2DP (Advanced Audio Distribution Profile)
- AVRCP (Audio/Video Remote Control Profile)

Disclaimer for Bluetooth® function

- Depending on the mobile phone models, some phones may not be compatible fully or partially (some function may be restricted).
- Media playback through third-party applications may have limited support.
- Playback, display contents, connectivity or voice quality etc. may get affected depending on circumstances.
- After the ignition switch is turned to the "ON" position, the audio system takes few seconds to detect and connect to the Bluetooth® device (if already paired).
- Make sure that you are aware of all applicable local laws and accordingly use Bluetooth® device.


Bluetooth® hands-free (if equipped)

To use Bluetooth® devices (Bluetooth® audio or mobile phone) on the audio system, it is required to register the Bluetooth® devices to the audio system by "Bluetooth Settings".

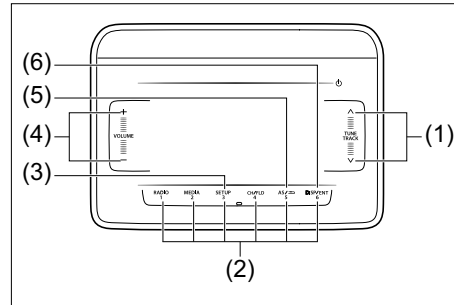


73R0150

Display

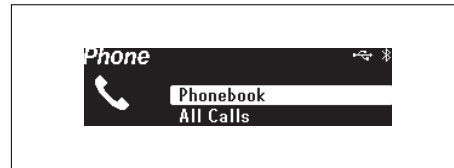


73R0151

Steering switch

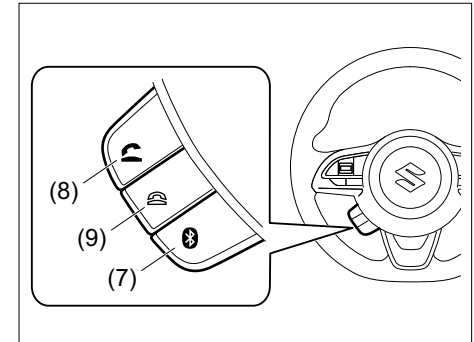

73R0152

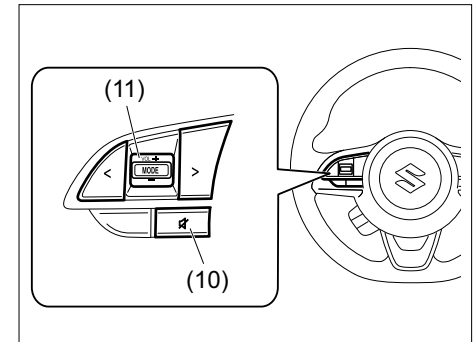

73R0153

- (1) "TUNE/TRACK" Up/Down button
- (2) Speed dial button (1-6)
- (3) SETUP button
- (4) "VOLUME" button

OTHER CONTROLS AND EQUIPMENT

- (5) BACK button
- (6) "ENTER" button
- (7) Bluetooth® setting button
- (8) Off-hook button
- (9) On-hook button
- (10) Mute button
- (11) "VOL" (volume) button

NOTICE

- **Do not leave your mobile phone inside your vehicle. If the temperature inside the vehicle increases, it may damage your mobile phone.**
- **When disposing your vehicle, make sure to delete all personal information saved to the audio system.**
- **The following hands-free data must be deleted from the audio system.**
 - Speed dial
 - Reception history/Incoming call history
 - Bluetooth® phonebook data

NOTE:

- Please keep your phone volume low. The person's voice who you are talking to may be heard outside of the vehicle and increase the voice echo. When talking on the phone, speak clearly towards the microphone.
- In the following cases, your voice may not be heard clearly by the person on the other line:
 - When driving on unpaved roads. (If there is loud traffic noise.)

- When driving at high speeds.
- When driving with the window open.
- If the air conditioner is blowing directly towards the microphone.
- When the sound of the air conditioner fan is loud.
- When there is an adverse effect to the sound quality of the phone or network that you are using.
- *The audio system may not function under the following conditions.*
 - When the phone power is not turned on.
 - When the mobile phone is out of service.
 - When the mobile phone is not connected.
 - When the mobile phone battery is low
- *The Bluetooth's hands-free operation is dependent upon the mobile phone's compatibility.*
- *The Bluetooth's hands-free performance is affected by the driving conditions of mobile phone networks, handsets and vehicles.*
- *The audio system's performance may be restricted due to the model of your mobile phone.*

It is possible to register a mobile phone and register the phone number to the audio system as follows:

- Up to 1,000 phone numbers can be saved for every registered mobile phone.
- Up to 30 phone numbers can be saved to the call history menu (missed calls/incoming/outgoing calls.)
 - When the call history exceeds 30 calls, they are deleted from the oldest one first, and the latest call history information is displayed in descending order.
- Up to 6 phone numbers can be saved to the speed dial list.

Answer the phone

- 1) Press the off-hook button (8).
- When you press the on-hook button (9) during an incoming call, you can block the call. (Only for compatible phone units)

NOTE:

- If you receive a call from a registered phone, the caller's name will appear on the screen.
- If you receive a call from an unregistered phone, only the caller's phone number will appear on the screen.

Hang up the phone

- 1) When the call is finished, press the on-hook button (9).

Make a call on call waiting

When the screen is displayed during a call, it is possible to hold the call and answer the other incoming call.

- 1) When an incoming call is received during a call, press the off-hook button (8).
- When the call is on hold, it will connect to the other incoming call.
- To end the call waiting, press the off-hook button (8).
- When the call waiting is completed, the call on hold will connect.
- When switching the caller, press the off-hook button (8) again while using the call waiting.

NOTE:

This function can only be used with phone units that are compatible with call waiting.

Mute the ringtone volume

- 1) Press the mute button (10).
- To deactivate the mute volume, press the mute button (10).

Adjust the volume

Adjust the reception volume

- 1) Touch or slide the "VOLUME" button (4) or press the "VOL" button (11) during a call.
- To increase the volume, touch  or slide upwards.
- To decrease the volume, touch  or slide downwards.

NOTE:

The volume and microphone sensitivity settings vary depending on the specifications of each mobile phone.

Adjust the ringtone volume

- 1) Touch or slide the "VOLUME" button (4) or press the "VOL" button (11) during an incoming call.
- To increase the volume, touch  or slide upwards.
- To decrease the volume, touch  or slide downwards.

Adjust the volume with the Bluetooth® settings

- 1) Display the Bluetooth® setup menu.
- From the panel button:
Touch the SETUP button (3).
Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
- From the steering switch:
Press the Bluetooth® button (7).

- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "HF Sound Setting", and touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the item that you want to adjust, and touch the "ENTER" button (6).
- Call Volume: Reception/ringtone volume
- Ringtone Volume: Incoming call volume
- 5) Touch or slide the "VOLUME" button (4).
- To increase the volume, touch  or slide upwards.
- To decrease the volume, touch  or slide downwards.

Make a call

Press the off-hook button (8) to enter the telephone mode.

OTHER CONTROLS AND EQUIPMENT

Use the phonebook

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Phonebook", and touch the "ENTER" button (6).
 - 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the desired initials, and touch the "ENTER" button (6).
 - 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the contact number, and touch the "ENTER" button (6).
- If there are multiple phone numbers for a single contact, touch or slide the "TUNE/TRACK" Up/Down button (1), select the phone number, and touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Yes", and touch the "ENTER" button (6) or press the off-hook button (8).

Use the call history

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "All Calls," "Missed Calls", "Incoming Calls" or "Outgoing Calls" and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the contact number, and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Yes", and touch the "ENTER" button (6) or press the off-hook button (8).

Use the speed dial

- 1) Press the Off-hook button (8) for 1 second or longer.
- 2) Touch the desired speed dial button (2) (1-6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and then touch the "ENTER" button (6) or press the Off-hook button (8).

NOTE:

Speed dial numbers must be registered before this function can be used.

Transfer/delete the phonebook

- 1) Display the Bluetooth® setup menu.
 - From the panel button: Touch the SETUP button (3). Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
 - From the steering switch: Press the Bluetooth® button (7).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Phonebook", and touch the "ENTER" button (6).

Transfer all contacts from your mobile phone

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "Setup Phonebook" screen, select "Add Contacts", and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Overwrite All", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (6).

Transfer 1 contact from your mobile phone

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "Setup Phonebook" screen, select "Add Contacts", and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Add One Contact", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (6).

Delete the registered phonebook

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "Setup Phonebook" screen, select "Delete Contacts", and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the desired initials from the list or "All", and touch the "ENTER" button (6).
- When you select "All", it will transition to step 4.
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the desired name from the list, and touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (6).

Transfer/delete the call history

- 1) Display the Bluetooth® setup menu.
 - From the panel button: Touch the SETUP button (3). Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
 - From the steering switch: Press the Bluetooth® button (7).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Call History", and touch the "ENTER" button (6).

Transfer the call history

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "Setup Call History" screen, select "Overwrite History", and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (6).

Delete the call history

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "Setup Call History" screen, select "Delete History", and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "All Calls", "Missed Calls", "Incoming Calls" or "Outgoing Calls" and touch the "ENTER" button (6).
- 3) Touch or slide the TUNE/TRACK Up/Down button (1), select the desired data from the history or select "All", and then touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (6).

Registration / deletion of speed dial

- 1) Display the Bluetooth® setup menu.
 - From the panel button: Touch the SETUP button (3). Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
 - From the steering switch: Press the Bluetooth® button (7).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Speed Dials", and touch the "ENTER" button (6).

OTHER CONTROLS AND EQUIPMENT

Registration in speed dial

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "Setup Speed Dials" screen, select "Add Speed Dial", and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the phonebook or call history, and touch the "ENTER" button (6).
- When you select the call history, it will transition to step 4.
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the desired initials from the list and touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the contact number, and touch the "ENTER" button (6).
- If there are multiple phone numbers for a single contact, touch or slide the "TUNE/TRACK" Up/Down button (1), select the phone number, and touch the "ENTER" button (6).
- 5) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the speed dial number that you want to register, and touch the "ENTER" button (6).

Deletion of speed dial

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "Setup Speed Dials" screen, select "Delete Speed Dials", and touch the "ENTER" button (6).

- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the speed dial number that you want to delete, and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (6).


Automatic transfer of the phonebook/call history

When registering the mobile phone, you can select to automatically transfer the phonebook and call history from your device. Select according to the following steps.

- 1) Display the Bluetooth® setup menu.
 - From the panel button: Touch the SETUP button (3). Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
 - From the steering switch: Press the Bluetooth® button (7).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Auto Transfer", and touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "On" or "Off", and touch the "ENTER" button (6).

Bluetooth® audio


To use Bluetooth® devices (Bluetooth® audio or mobile phone) on the audio system, it is required to register the Bluetooth® devices to the audio system by "Bluetooth® Settings".

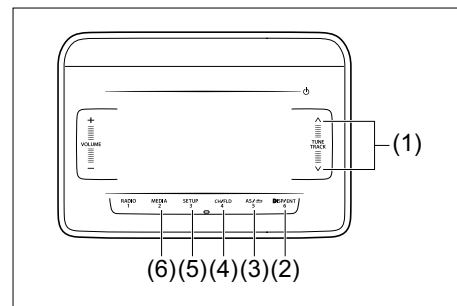

73R0141

- (1) "TUNE/TRACK" Up/Down button
- (2) "DISP/ENTER" button
- (3) BACK button
- (4) "FLD" (group operation) button
- (5) SETUP (random/repeat) button
- (6) "MEDIA" button

Display

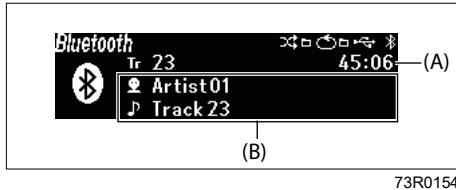

(A) Playback time

(B) Text information display

NOTE:

Some functions may not be usable on some Bluetooth® devices.

Selecting the Bluetooth® audio

- 1) Touch the "MEDIA" button (6).
- Touch the "MEDIA" button (6). Each time the button is touched, the mode will change as follows:
USB (iPod) (if equipped) → Bluetooth® audio (if equipped) → AUX (if equipped)

Fast forwarding/Rewinding a track

- 1) Hold down the "TUNE/TRACK" Up/Down button (1).
- : Hold down the Up button for 1 second or longer to fast forward the track.
- : Hold down the Down button for 1 second or longer to fast rewind the track.
- Releasing the button can stop the fast forwarding/rewinding.

Selecting a track

- 1) Touch the "TUNE/TRACK" Up/Down button (1).
- : Touch the Up button to listen to the next track.
- : When the Down button is touched once, the track currently being played will start from the beginning again. Touch the Down button twice to listen to the previous track.

Selecting a group (only for supported models)

- 1) Touch the "FLD" (group operation) button (4).
- 2) Touch the "TUNE/TRACK" Up/Down button (1).
- : Touch the Up button to go to the next group.
- : Touch the Down button to go to the previous group.

Repeat playback

- 1) Touch the SETUP (random/repeat) button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Repeat", and touch the "DISP/ENTER" button (2).
- Each time the "DISP/ENTER" button (2) is touched, display will change as follows:
Off → One song repeat → Group repeat ...

Random playback

- 1) Touch the SETUP (random/repeat) button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Random", and touch the "DISP/ENTER" button (2)
- Each time the "DISP/ENTER" button (2) is touched, display will change as follows:
Off → Group random → All random...

Display change

- 1) Touch the "DISP/ENTER" button (2).
- Each time the button is touched, display will change as follows:
Artist name/Track title → Album name/Track title ...

NOTE:

- "NO TITLE" will be displayed when there is no text information in the USB device currently being played.
- "... " is displayed if all text data cannot be displayed. Touch and hold the "DISP/ENTER" button (2) for at least one second to automatically display the rest of the text data.


OTHER CONTROLS AND EQUIPMENT

Anti-Theft Feature

The anti-theft function is intended to discourage thefts, such as that the audio system becomes inoperable when it is installed on other vehicles.

This function works by entering a Personal Identification Number (PIN).

When the unit is disconnected from its power source, such as when the audio system is removed or the lead-acid battery is disconnected, the unit will become inoperable until the PIN is reentered.

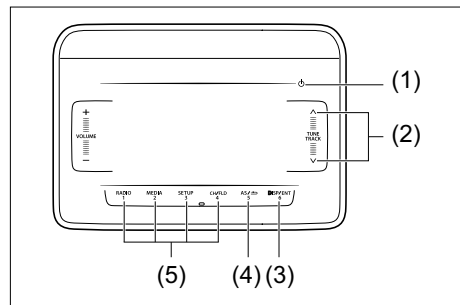

73R0155

- (1) POWER button
- (2) List selection button
- (3) "ENTER" button
- (4) BACK button
- (5) PIN entry button (1-4)

Display



73R0156

Setting the Anti-Theft Function

- 1) Touch the POWER button (1) for 1 second or longer to power off the audio system.
- 2) Hold down the button numbered [1] of the PIN entry button (5) and the "ENTER" button (3) and touch the POWER button (1).
 - "SECURITY" will be displayed.
- 3) Hold down the Up button of the List selection button (2)  and the button numbered [1] of the PIN entry button (5).
 - "----" will be displayed.
- 4) Enter a 4-digit number to be registered as PIN using the buttons numbered [1] - [4] of the PIN entry button (5).
- 5) Touch the "ENTER" button (3) for 1 second or longer.
 - "COMPLETE" will be displayed, and the power will turn off after 3 seconds.

NOTE:

Take a note of the registered PIN and keep it for the future use.

Canceling the anti-theft feature

To cancel the anti-theft function, delete the registered PIN.

- 1) Touch the POWER button (1) for 1 second or longer to power off the audio system.
- 2) Hold down the buttons numbered [1] of the PIN entry button (5) and the "ENTER" button (3) and touch the POWER button (1).
 - "PIN ENTRY" will be displayed.
- 3) Hold down the Up button of the List selection button (2)  and the button numbered [1] of the PIN entry button (5).
 - "----" will be displayed.
- 4) Enter a 4-digit number to be registered as PIN using the buttons numbered [1] - [4] of the PIN entry button (5).
- 5) Touch the "ENTER" button (3) for 1 second or longer.
 - If an incorrect PIN is entered, "ERROR* (ERR Number)" will be displayed for 3 seconds, then the audio system will go back to step 2.
 - "----" is displayed on the screen, and the power will turn off after 3 seconds.

NOTE:

- To change your PIN, first delete your current PIN, then set a new one.
- If an incorrect PIN is entered 10 times or more, "HELP" will be displayed and the audio system will become inoperable. In this case, contact a Maruti Suzuki authorised workshop.


Confirming the Personal Identification Number (PIN)

When the main power source is disconnected such as when the lead-acid battery is replaced, etc, it is required to enter the PIN to make the unit operable again.

- 1) Set the ignition switch to the ACC position.
- “SECURITY” will be displayed.
- 2) Hold down the Up button of the List selection button (2)  and the button numbered [1] of the PIN entry button (5).
- “----” will be displayed.
- 3) Enter the registered 4-digit PIN number using the buttons numbered [1] - [4] of the PIN entry button (5).
- 4) Touch the “ENTER” button (3) for 1 second or longer.
- If an incorrect PIN is entered, “ERROR* (ERR Number)” will be displayed for 3 seconds, then the audio system will go back to step 2.
- After 3 seconds, the power of the audio system will be turned off automatically and it will become operable again.

Steering Switch (if equipped)

Use the steering wheel button to operate the basic functions of the audio system.

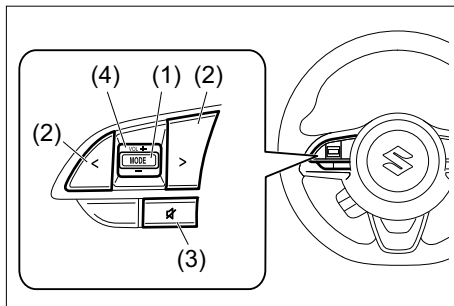

73R0157

- (1) MODE button
- (2) Selection button
 - Selecting the radio station
 - Selecting the track (USB (iPod), Bluetooth® audio mode)
- (3) Mute button
- (4) “VOL” (volume) button

MODE button (1)

- Each time the button is pressed, the mode will change as follows:
 AM → FM1 → FM2 → USB (iPod) (if equipped) → Bluetooth® audio (if equipped) → AUX (if equipped)

Selection button (2)

- FM1, FM2, AM mode:
 - Press > to transfer to the next preset channel.
 - Press < to transfer to the previous preset channel.
 - Press > for 1 second or longer, it will search for receivable stations at a high frequency.
 - Press < for 1 second or longer, it will search for receivable stations at a low frequency.
- USB (iPod), Bluetooth® audio mode:
 - Press > to transfer to the next song. With the folder operation mode, it will transfer to the next folder.
 - Press < to return to the beginning of the currently playing song. Pressing it twice consecutively will return to the previous song. With the folder operation mode, it will return to the previous folder.
 - Press > for 1 second or longer to fast-forward the song. When the button is released, it will stop fast-forwarding.
 - Press < for 1 second or longer to rewind the song. Releasing the button can stop rewinding.

OTHER CONTROLS AND EQUIPMENT

Mute button (3)

- Hands-free mode
Each time you press the button the mute will switch from ON/OFF.
- USB (iPod), Bluetooth® audio mode:
Press the button during playback to temporarily stop the playback.

“VOL” button (4)

- Hands-free mode:
 - Press  during an outgoing or incoming call, the reception/ringtone sound will increase.
 - Press  during an outgoing or incoming call, the reception/ringtone sound will decrease.
 - Press  during an outgoing call, the ringtone sound will increase.
 - Press  during an outgoing call, the ringtone sound will decrease.
- Radio, USB (iPod), Bluetooth® audio, AUX mode:
Press , the volume will increase.
Press , the volume will decrease.

NOTE:

Due to poor quality of FM/AM signal, some disturbance/noise may be heard from speakers. It is recommended to switch off the tuner system to prevent the said disturbance/noise in the speaker.

Remote Controller (if equipped)

CAUTION

Operational precautions regarding remote controller use:

- Because of its small size and light weight, use the remote controller with care. Dropping the remote controller or hitting it against hard surfaces may degrade the battery and cause malfunction.
- Do not expose the remote controller to humidity, dust, or moisture. Do not subject the remote controller to shock.
- Do not place the remote controller on the dashboard or other places that can be exposed to high temperatures, such as near heater vents. Exposing the remote controller to conditions in which it may overheat may cause the case to deform or other issues.
- Do not operate the remote controller while driving. Doing so may result in an accident.
- Direct the remote controller towards the remote controller receiver when using the remote controller.

(Continued)

CAUTION

(Continued)


- The receiver may not operate correctly when exposed to direct sunlight or other sources of bright light.
- Remove the battery from the remote controller if the remote controller will not be used for extended periods of time.

CAUTION

Cleaning the remote controller:

- Use a dry cloth to clean the remote controller. If the remote controller becomes excessively soiled, use a cloth dampened lightly with a diluted liquid detergent.
- Never use organic solvents, such as benzene cleanser or thinner. Use of these substances will damage the case and finish.


Before using the remote controller

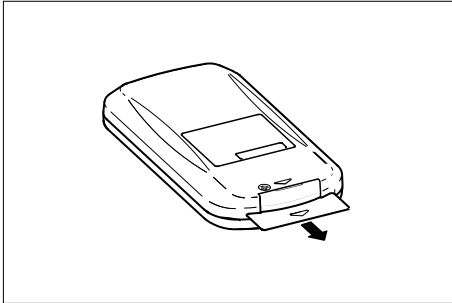

72R0091

- 1) Pull out the battery insulated sheet tab from the remote controller in the direction indicated by the arrow.

Remote controller operation

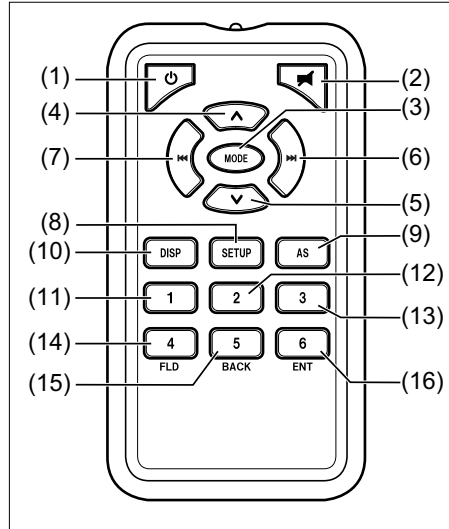

72R0092

OTHER CONTROLS AND EQUIPMENT

No.	Button	Function
(1)		POWER button: • Turns the power to the audio system on / off (press and hold)
(2)		Mute button: • Sound mute on / off
(3)		MODE button: • Switches between audio sources – The mode changes in the following order each time the button is pressed: AM → FM1 → FM2 → USB (iPod) (if equipped) → Bluetooth® audio → AUX (if equipped) ... <i>NOTE:</i> <i>“No Audio” will be displayed when there is no Bluetooth device connected.</i>
(4)		Volume buttons: • Volume up / Continuous volume up (press and hold)
(5)		Volume buttons: • Volume down / Continuous volume down (press and hold)

No.	Button	Function
(6)		TUNE/TRACK up button: • RADIO: - Tune up / Seek up (press and hold) • USB, iPod, and Bluetooth® audio: – Normal mode: Track (file) up / Fast up (press and hold) – FLD mode (USB and Bluetooth® audio): Folder (Group) up / Fast up (press and hold) – FLD mode (iPod): List up / Continuous list up (press and hold) • FUNCTION mode (various settings): - Configures functions / Change values
(7)		TUNE/TRACK down button: • RADIO: - Tune down / Seek down (press and hold) • USB, iPod, and Bluetooth® audio: – Normal mode: Track (file) down / Fast down (press and hold) – FLD mode (USB and Bluetooth® audio): Folder (Group) down / Fast down (press and hold) – FLD mode (iPod): List down / Continuous list down (press and hold) • FUNCTION mode (various settings): - Configures functions / Change values
(8)		SETUP button: • Switch to the System setting mode
(9)		Auto Store button: • RADIO: - Switches between manual preset and AS mode / Auto Store (press and hold)
(10)		DISP button: • Changes text displays / Changes automatic text display pages (press and hold)
(11)		Preset [1] button: • RADIO: - Calls preset channels / Stores channel as preset (press and hold)


OTHER CONTROLS AND EQUIPMENT

No.	Button	Function
(12)		Preset [2] button: RADIO: Calls preset channels / Stores channel as preset (press and hold)
(13)		Preset [3] button: RADIO: Calls preset channels / Stores channel as preset (press and hold)
(14)		Preset [4] / FLD button: - RADIO: Calls preset channels / Stores channel as preset (press and hold) - USB, iPod, and Bluetooth audio: Switches between Folder operation / iPod menus / Group operation mode
(15)		Preset [5] / BACK button: - RADIO: Calls preset channels / Stores channel as preset (press and hold) - USB, iPod, Bluetooth® audio, and settings: Switches back to the previous screen
(16)		Preset [6] / ENTER button: - RADIO: Calls preset channels / Stores channel as preset (press and hold) - USB, iPod, Bluetooth® audio, and settings: Sets the selected item

Battery replacement


⚠ CAUTION

- Store batteries in their original packaging out of reach of children until ready for use. Discard used batteries immediately. Seek medical attention immediately if swallowed.
- Do not place batteries in locations near fire or exposed to direct sunlight. Doing so may result in fire, explosion, or excessive heat.
- Do not place the remote controller on the dashboard or other places that can be exposed to high temperatures.
- Accidentally replacing batteries with lithium-ion batteries may result in explosion. Always replace batteries with the same type.

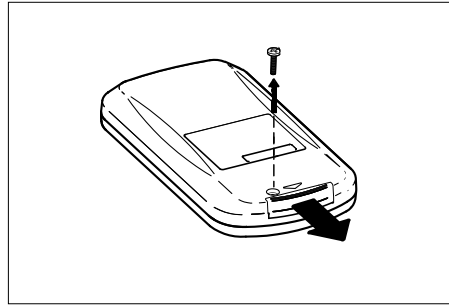


72R0088

- 1) Use a Phillips screwdriver (sold separately) of the proper size to remove the screw and pull out the battery slot cover in the direction indicated by the arrow.

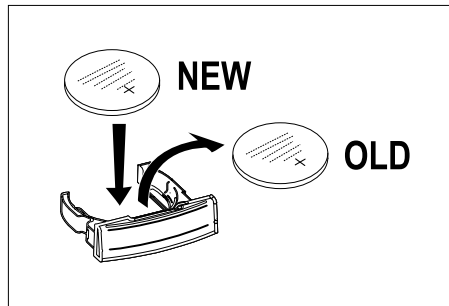

72R0089

- 2) Remove the old battery and place the new battery (CR2025) into the battery slot cover with the + mark facing upwards.

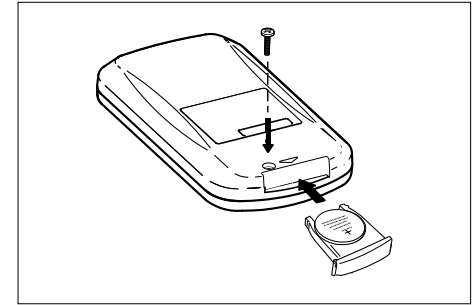

72R0090

- 3) Press the battery slot cover to the direction indicated by the arrow completely and then fully tighten the screw.

OTHER CONTROLS AND EQUIPMENT

Troubleshooting

When encountered a problem, check and follow the instructions as described below.

If the described suggestions do not solve the problem, it is recommended to take the unit to a Maruti Suzuki authorised workshop.

Problem	Possible cause	Possible solution
---------	----------------	-------------------

Common

Unable to operate	The security function is on.	When "SECURITY" is displayed, enter the ID. When "HELP" is displayed, contact a Maruti Suzuki authorised workshop.
Unable to turn on the power (no sound). (No sound is produced)	Fuse is blown.	Contact a Maruti Suzuki authorised workshop.

Radio

Much noise	It may not be exactly tuned in to the station.	Tune it in exactly to the station.
Unable to receive by auto tuning	There may be no station emitting signals powerful enough.	Pick up a station by manual tuning.

USB

Playback does not start when the USB device is connected.	There is no supported format file to play on this unit.	Check the file format.
	The current consumption of the USB device exceeds 1.0 A.	Use an USB device with a current consumption lower than 1.0 A.
Sound skips or noise produced	Sound skipping may occur when playing VBR (Variable Bit Rate) files.	It is not recommended to play VBR files.

Problem	Possible cause	Possible solution
Bluetooth®		
Pairing failed	The distance between this unit and the Bluetooth® ready device is too far, or a metallic object may be located between the Bluetooth® ready device and this unit.	Change the location of the Bluetooth® ready device.
	The Bluetooth® function of the Bluetooth® ready device is off.	Refer to the manual of the Bluetooth® ready device. (Some devices have the power saving function that automatically activates after a certain time.)
Unable to receive a call	Your current location may be out of service area.	Drive your vehicle to the service area of the phone.
The voice quality of hands-free is low (Distortion, noise etc.)	Another wireless device may be located near the unit.	Switch off the wireless device or keep it away from the unit.

Error Display Messages

The following messages (flashing) will be displayed onto the screen depending on the condition of the audio system.

Message	Description
Reading	When the USB device or iPod's file format is being read, this message will be displayed.
ERROR 1	When the USB device or iPod's reading error occurs, this message will be displayed. Reconnect the USB device or iPod's connection cable. When the Bluetooth® audio playback malfunction occurs, this message will be displayed. Check the Bluetooth® audio body.

OTHER CONTROLS AND EQUIPMENT

Message	Description
ERROR 2	When the USB device or iPod's communication error occurs, this message will be displayed. Reconnect the USB device or iPod's connection cable.
ERROR 3	When the USB device or iPod's issues are detected, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod body.
ERROR 4	If the USB device or iPod does not operate due to an over current, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod body.
ERROR 5	When the data playback fails with the USB device or iPod connected, or there are data unable to be transferred, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod body.
ERROR 6	When the USB HUB is connected, this message will be displayed. Disconnect the USB HUB.
UNSUPPORTED	When an unsupported USB device or iPod is connected, this message will be displayed. Connect the supported USB device or iPod.
No Music	When an empty USB device or a USB device containing files with the extension unable to be played is connected, this message will be displayed. Connect the USB device containing files with the playable extension.
No Songs	When an iPod is connected, this message will be displayed.

Fuel Filler Opening

Make sure to read "Refueling" in this section.

WARNING

Be sure to observe the following points when refueling. Otherwise, gasoline may catch a fire from fuel and it may cause a fire.


- Always stop the engine first.
- Close all the doors and windows when refueling.
- As gasoline is highly flammable, open sparks such as lit cigarettes are strictly prohibited.

Fuel Filler Door



75U74EN050003


The fuel filler cap is located on the left rear side of the vehicle.

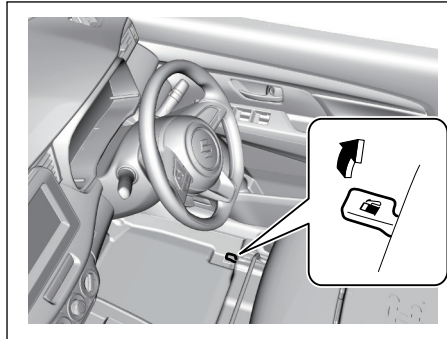

73R0084

Fuel Filler Cap

The fuel filler door can be unlocked by pulling up the opener lever located on the outboard lower side of the driver's seat and locked by simply closing the door.

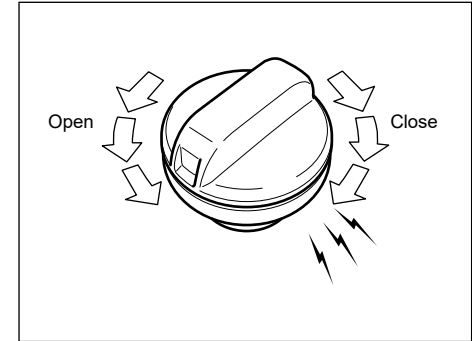


57L51093

To remove the fuel filler cap:

- 1) Stop the engine and close all the doors and windows while refueling.
- 2) Open the fuel filler door.
- 3) Remove the cap by turning it counter-clockwise.

OTHER CONTROLS AND EQUIPMENT

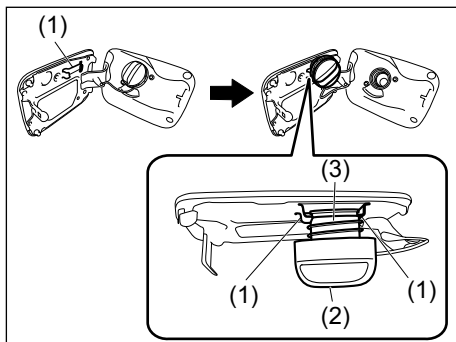

73R0085

NOTE:

The cap holder (1) holds the fuel filler cap (2) by hooking the groove (3) when refueling.

To reinstall the fuel filler cap:

- 1) Turn the cap clockwise until you hear several clicks.
- 2) Close the fuel filler door.

⚠ WARNING

- If you open the fuel filler cap suddenly, fuel may be under pressure and may spray out. Loosen the fuel filler cap slowly. After air deflating sound stops, open the fuel filler cap.
- If fuel spills out, an accident such as a fire may occur. Also, if you leave spilled fuel as it is, it may cause paint staining, discoloration or cracking. Be careful not to spill out fuel. If you spill it out, wipe it off with a soft cloth.
- If the fuel filler cap is not closed securely, it may cause fuel leakage or a fire. After refueling, close the fuel filler cap until you hear more than 2 clicks.
- If you use the fuel cap other than a genuine Maruti Suzuki cap, it may cause fuel leakage. Do not use the fuel cap other than a genuine Maruti Suzuki cap.

Refueling Watch Out for Fire



69RHS186

⚠ WARNING

Be sure to observe the following points when refueling. Otherwise, gasoline may catch a fire from fuel and it may cause a fire.

- Always stop the engine first.
- Close all the doors and windows when refueling.
- As gasoline is highly flammable, open sparks such as lit cigarettes are strictly prohibited.

When Refueling at a Self-service Gas Station

⚠ WARNING

When refueling at a self-service gas station, be sure to observe the following points.

- If substantial static electricity is accumulated within your body, a spark could ignite fuel vapors and possibly cause burns. Before opening the fuel filler cap, discharge any static electricity* that might have accumulated in your body, by touching a metal part of the vehicle body or the gas pump machine. In addition, do not re-enter the vehicle while refueling, as static electricity could be charged to your body again.
- Do not allow others who have not discharged their static electricity to come close to the fuel filler opening.

*Take special care when air is dry, as this can cause your body to become charged with static electricity more easily. In addition, wearing layers of clothing can generate static electricity due to the friction of the fibers.

(Continued)

⚠ WARNING


(Continued)

- If you open the fuel filler cap suddenly, fuel may be under pressure and may spray out. Loosen the fuel filler cap slowly. After air deflating sound stops, open the fuel filler cap.
- If you do not insert the fuel filler nozzle securely into the fuel filler opening, fuel may spill out. Insert the fuel filler nozzle securely into the fuel filler opening until it stops.
- Pull the gas pump filler nozzle lever until it stops.

(Continued)

⚠ WARNING

(Continued)

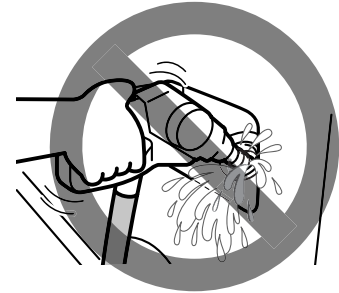

69RHS070

- If you continue to refuel after the automatic stop to top up the tank, fuel could overflow. When the automatic stop function of gas pump filler nozzle is activated, stop refueling.

*Depending on the type of gas pump machine being used, the automatic stop function could activate early and refueling might not be possible. Please follow the instructions of the employees at the gas station.

(Continued)

OTHER CONTROLS AND EQUIPMENT

WARNING

(Continued)

- If fuel spills out, an accident such as a fire may occur. Also, if you leave spilled fuel as it is, it may cause paint staining, discoloration or cracking. Be careful not to spill out fuel. If you spill it out, wipe it off with a soft cloth.
- If the fuel filler cap is not closed securely, it may cause fuel leakage or a fire. After refueling, return the fuel filler nozzle to its original position and close the fuel filler cap until you hear more than 2 clicks.
- Fuel contains substances harmful to the human body. Do not breathe in vaporized fuel.
- In addition, be sure to observe all the warnings posted at the gas station.

Use Unleaded Gasoline Only


NOTICE

Using leaded gasoline, low-quality gasoline or other types of fuel (such as alcohol and diesel oil) can cause harmful effects to the engine and fuel delivery system.
Do not use fuel other than unleaded gasoline.

Engine Hood

WARNING


- Never allow children to open or close the hood. Children may injure themselves because the hood is heavy. Contact with the engine compartment and related parts may cause burns when this area/these parts are hot.
- Do not allow children to be near the vehicle when opening the hood.
- Do not leave tools, cloths, and other objects, which were used to clean or perform maintenance and inspections, in the engine compartment. Doing so may cause operational failures or even the vehicle to catch fire when the engine compartment becomes hot.

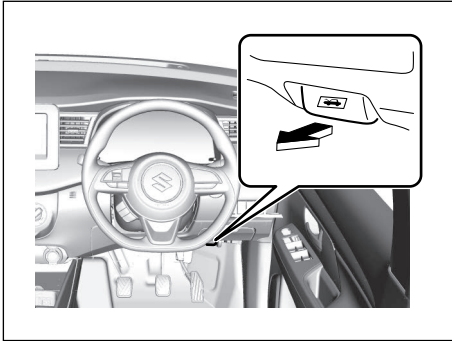

73R0086

To open the engine hood:

- 1) Pull the hood release handle located under the driver's side instrument panel in the outboard position. This will disengage the engine hood lock halfway.

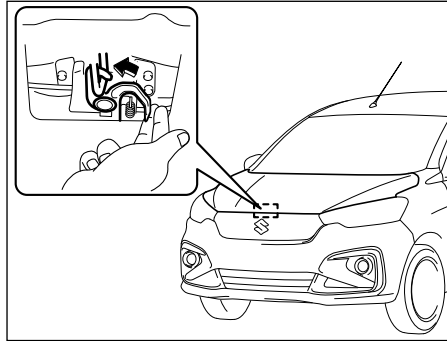

73R0087


- 2) Push the under-hood release lever upward with your finger, as shown in the illustration. While pushing the lever, lift up the engine hood.

⚠ CAUTION

The release lever and its peripheral, or engine hood can be hot enough to burn your finger right after driving. Touch after those becomes cool enough.

NOTICE

Check that the wiper arms are not raised before you lift up the engine hood to avoid damaging the wiper arms and the engine hood.

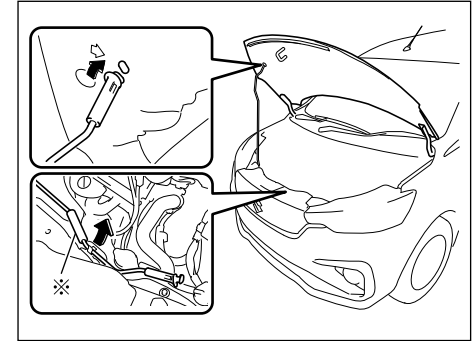

73R0088

- 3) While holding the hood, pull the prop rod out from the holding clip, and then insert the end of the rod into the designated hole.

⚠ CAUTION

- The prop rod can be hot enough to burn your finger right after driving. Touch the rod after it becomes cool enough.
- Insert the end of the rod into the hole securely. If the rod slips out, you may get caught in the closing hood.
- The rod may slip out when the hood is blown by wind. Be careful on windy days.


OTHER CONTROLS AND EQUIPMENT

NOTICE

Hold the part made in * when removing the bracket from the holder.

To close the engine hood:

- 1) Lift the hood up slightly and remove the prop rod from the hole. Put the prop rod back to the holding clip.

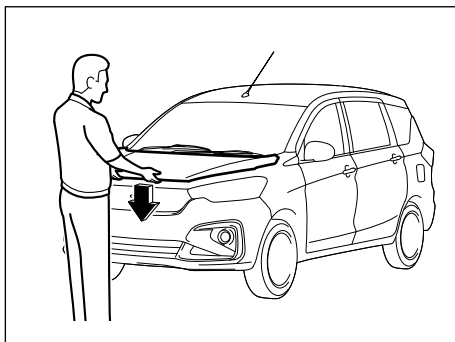

73R0158

- 2) Lower the hood to about 20 cm above the hood latch, and then let it drop down. Make sure the hood is securely latched after closing.

⚠ WARNING

Make sure the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.


⚠ CAUTION

To avoid injury, check that no part of the occupant's body such as hands or head is in the path of the hood when closing it.

NOTICE

Pushing on the hood from the top may damage it.

Sun Visor

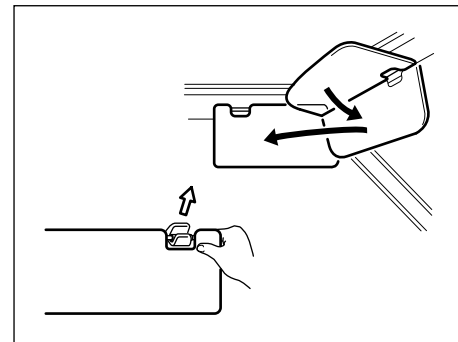


79J161

The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.

NOTICE

When unhooking and hooking a sun visor, handle it by the hard plastic parts or the sun visor can be damaged.

Card holder

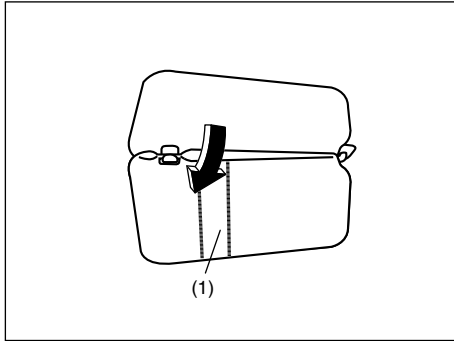

74LHT0516


(1) Card holder

You can put a card in the card holder (1) on the back of the sun visor.

NOTICE

When you park your vehicle outdoors in direct sunlight or in hot weather, do not leave plastic cards in the holder. The heat may distort them.

Vanity mirror (if equipped)

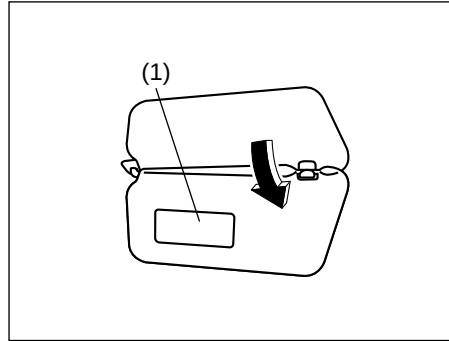

73R0167


(1) Vanity mirror

⚠ WARNING

- Do not use the vanity mirror while driving. Doing so may result in an accident due to failure to pay attention to the road in front of you.
- Do not place any weight on or come too close to the locations where an airbag is stored when using a vanity mirror. Doing so may cause the airbag to deploy and cause serious injury due to the impact of the airbag.

Interior Light


Front

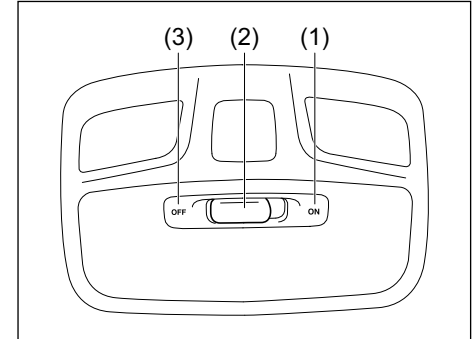

73R0090

OTHER CONTROLS AND EQUIPMENT

Rear

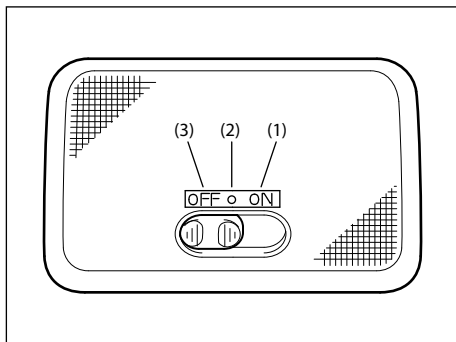

75U74EN050024

Interior light switch has three positions which function as described below:

ON (1)

The light comes on and stays on regardless of whether the door is open or closed.

NOTE:

The light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:


- The ignition switch is in "LOCK" position.
- The hazard warning lights, the position lights and the headlights are off.
- After 15 minutes from the light on.

DOOR (2)

- The light comes on when the door is opened. After closing all doors, the light will remain on for 15 seconds and then fade out. If you insert the key, the light will start to fade out immediately. After removing the key from the ignition switch, the light will turn on for 15 seconds and then fade out.
- When the ignition switch is in LOCK position, to prevent the lead-acid battery from discharging, the light will automatically be turned off when a period of 15 minutes has elapsed after any of the doors (including the tailgate) is opened and other operations are not done.

OFF (3)

The light remains off even when the door is opened.

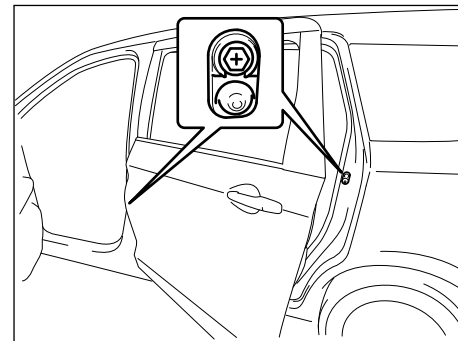


73R0091

NOTE:

The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber projection) at the door opening as shown, the door is involved in the lighting operation. The tailgate is also involved in this operation even without the rubber projection depending on the vehicle specification.

Accessory Socket

Center console

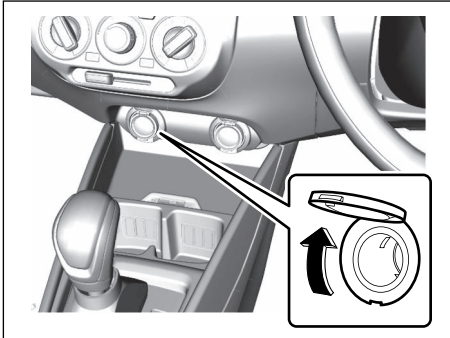

75U74EN050020

The accessory socket will work when the ignition switch is in ACC or ON position, or the ignition mode is "ACC" or "ON".

Each socket can be used to provide 12 volt / 120 watt / 10 ampere power for electrical accessories when used alone.

NOTICE

- Use of inappropriate electrical accessories can cause damage to your vehicle's electrical system. Check that any electrical accessories you use are designed to plug into this type of socket.
- Check that the cap remains on the socket when the socket is not in use.
- When the ignition switch is in "LOCK" position during using the accessory socket, the following accidents may occur;
 - the audio or navigation system does not turn off.
 - the keyless entry system does not work, etc.

If they occur, disconnect the item from the accessory socket and check whether the electrical equipments work properly.


If the problem persists, ask a Maruti Suzuki authorised workshop to have the system inspected.

⚠ WARNING

If you pay too much attention to operating the Accessory socket while driving, an accident can occur.

Assist Grips


Front Passenger's Seat / 2nd Row Seat

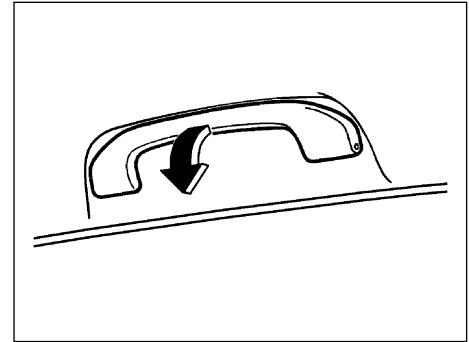

54G249

OTHER CONTROLS AND EQUIPMENT

3rd Row Seat

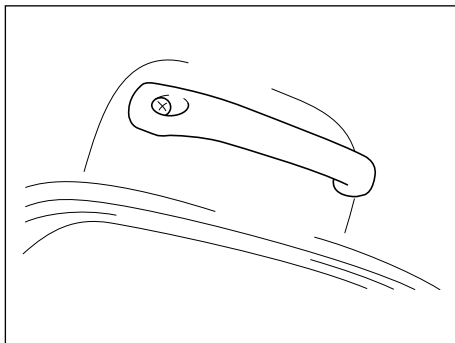

Assist grips are provided for convenience.

NOTICE

To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.

Glove Box



To open the glove box, pull the latch lever. To close it, push the lid until it latches securely.

⚠ WARNING

Never drive with the glove box lid open. It could cause injury if an accident occurs.


⚠ WARNING

Do not leave cigarette lighters or spray cans in the glove box. If a cigarette lighter or spray can is in a place such as the glove box, it may light accidentally when luggage is loaded, causing a fire.

⚠ WARNING

Do not drive the vehicle with the lid of glove box open.

AUX/USB Socket (if equipped) / USB Socket (if equipped)

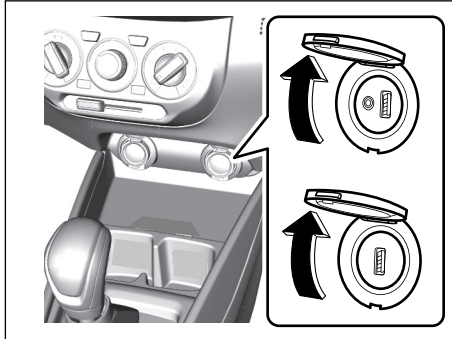

75U74EN050027

Connect your portable digital music player, etc. to this socket to enjoy music through the vehicle's audio system. Refer to "Audio system" in this section.

⚠ WARNING

If foreign material enters the USB socket, a malfunction or a short circuit may occur.
Always close the cover when the USB socket is not in use.

⚠ WARNING

If you pay too much attention to operating the AUX/USB socket while driving, an accident may occur.

⚠ WARNING

Do not put items in the vehicle that may fall or roll around in the vehicle while driving. Objects getting caught in the brake pedal or accelerator pedal may prevent proper operation of the pedals, which may result in an accident.

USB Charging Sockets (if equipped)

When the ignition mode is ACC or ON, you can charge your mobile device such as your smart phone by using the connecting cable (commercial item) connected to the two USB Charging Socket Type-C.

The total maximum output capacity of two sockets is 60 W.

The capacity of the first connected socket: 15 V / 3.0 A (45 W)*

The capacity of the subsequently connected socket depends on the capacity of the first connected socket.

* The maximum output capacity of the first connected socket is 45W, and the output capacity is automatically adjusted depending on the connected device.

⚠ WARNING

If any foreign material enters the USB charging socket, it may cause a malfunction or short circuit.

OTHER CONTROLS AND EQUIPMENT

Floor Console



75U74EN050005

NOTICE


Do not charge your mobile device for a long period of time, while the engine is stopped. Otherwise, the lead-acid battery may run out.

NOTE:

- The priority of the socket's output capacity varies depending on the supported voltage of the connected device and the vehicle conditions.
- The USB charging socket should be used only for charging.
- For some models, charging may pause. However, this is not a malfunction.
- Depending on the vehicle conditions such as the following examples, charging may temporarily pause.
 - When the inside temperature of the vehicle is high after parking the vehicle under the blazing sun
 - When the engine is started


Cup Holder and Storage Area

Front

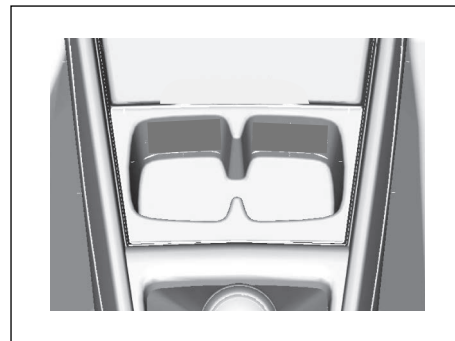

73R0097A

3rd Row Seats

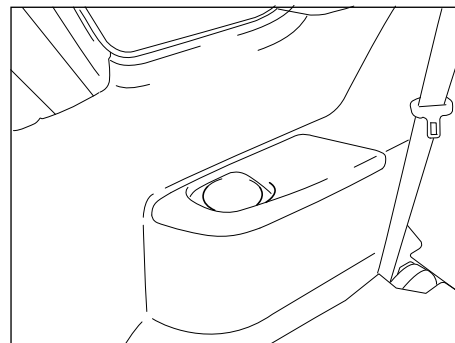

73R0098


WARNING

Failure to take the precautions listed below could cause personal injury or vehicle damage.

- Be careful when you are using the cup holders to hold a cup containing liquid. Spilling out hot liquid can cause burn injury. The lithium-ion battery is located under the front left side seat. Spilling liquids on the lithium-ion battery in models equipped with ENG A-STOP system or Smart Hybrid may cause a fire or electric shock or damage to the battery.
- Do not use the cup holders to hold sharp-edged, hard, or breakable objects. Objects in the cup holders may be thrown about during a sudden stop or impact, and could cause personal injury.
- Be careful not to spill liquid or insert any foreign materials into the moving part of the gearshift lever, or any electrical components. Liquid or foreign materials may damage these parts.
- If you spill, or drop liquid accidentally, have your vehicle inspected by a Maruti Suzuki authorised workshop.

Bottle Holder

Front seats

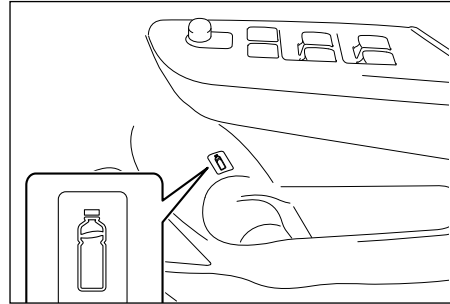


73R0099

NOTE:

Maruti Suzuki recommends to use maximum 1 liter capacity of bottle.

2nd row seats

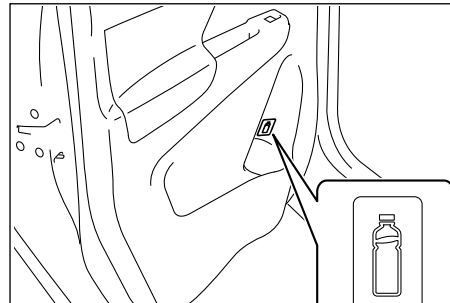


73R0100

You should hold a bottle with a cap in the holder.

Front Armrest with Console Box (if equipped)

NOTICE

To avoid damage to the armrest, do not lean on it or allow a child to sit on it.

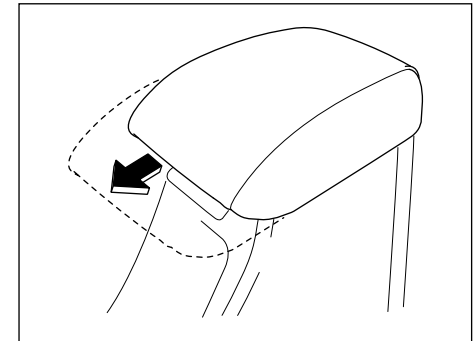


72R0044

The armrest can be slid forward.

OTHER CONTROLS AND EQUIPMENT

Console box

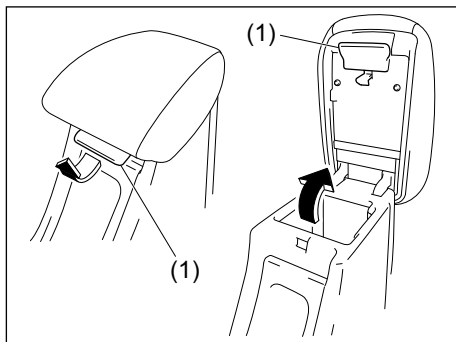


72R0045

Use this stowage for keeping small items. Open the compartment by raising the top lid while keeping the lever (1) up.

NOTE:

Always close the lid after you put something into or take something out of the box.

Bill/coin Holder

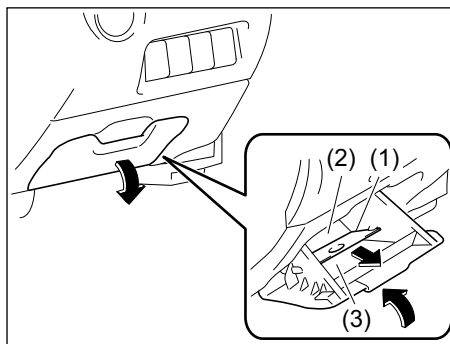

73R0216

Pull the upper of the holder downward to open the cover.


It is recommended to separate coins (2) and bills (3) with partition.

The holder can also be used after sliding out and removing the partition plate (1). Push the upper of the holder to close the cover.

WARNING

Never drive with the bill/coin holder lid open. It could cause injury if an accident occurs.


Footrest

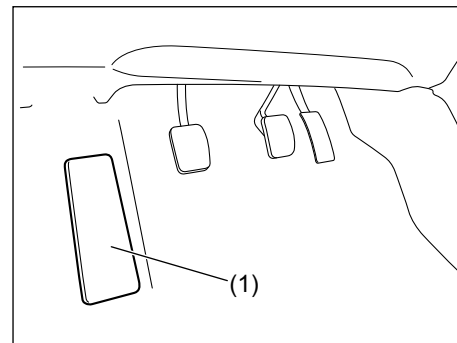

58MST0509

Use the footrest (1) as a support for your left foot only.

Front Seat Back Pocket (if equipped)

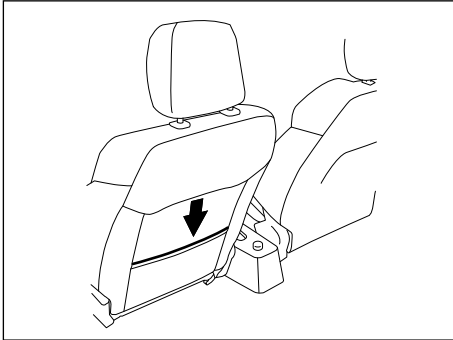


This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

CAUTION

Do not put hard or breakable objects in the pocket. If an accident occurs, objects such as bottles, cans, etc. can injure the occupants in the rear seat.

Luggage Box (if equipped)

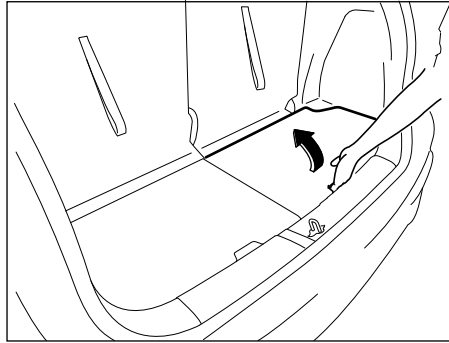

Insert your hands into the notches and lift up the luggage box cover to use the box.

WARNING

The luggage areas do not feature a structure that can accommodate people.

Do not allow a child to ride in such areas. Otherwise, there is the danger of accidents due to sudden braking, etc. Do not let a child play in luggage areas even while the vehicle is stopped on the road.

NOTICE

Do not allow items in the box to extend above the top of the box. Otherwise, the box or cover may be damaged.

NOTICE

Observe the following instructions, not to break the luggage box cover.

- Do not hold open the cover while driving.
- Do not apply any load to the cover while holding it open.

OTHER CONTROLS AND EQUIPMENT

Frame Hooks

It is not recommended that you use the frame hooks for towing another vehicle. They were originally designed to tow your vehicle in emergency situation.

If your vehicle needs to be towed in an emergency, refer to "Towing your vehicle" in "EMERGENCY SERVICE" section.


WARNING

Observe the following instructions when using frame hooks. The towing eye or vehicle body may break and cause serious injury or damage:

- Do not use the frame hooks for towing another vehicle.
- Avoid pulling the vehicle to get out of severe snowy, muddy or sandy conditions, sudden starts or erratic driving maneuvers which could cause excessive stress on the towing eye.

In such case, we recommend that you contact a professional service.

Front

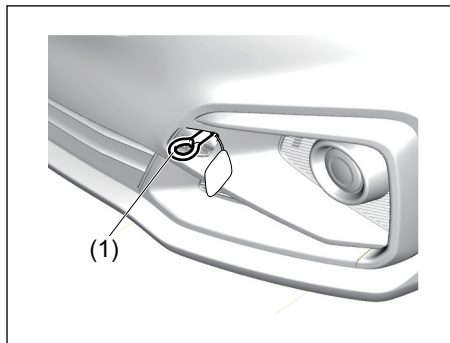


73R0183

The towing eye (1) is provided on the front of the vehicle for use in emergency situations and sea shipping purpose only.

NOTICE


To prevent damage to the vehicle, never use the towing eye (1) for trailer / train shipping.

To install the hook (1), follow the procedure below.

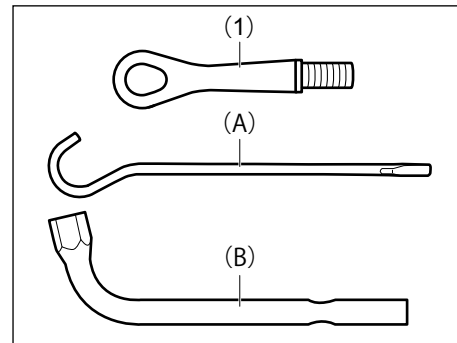

52RM50170

- 1) Pick up the towing eye (1), jack handle (A) and wheel wrench (B) stowed in the tool bag under the driver's seat.

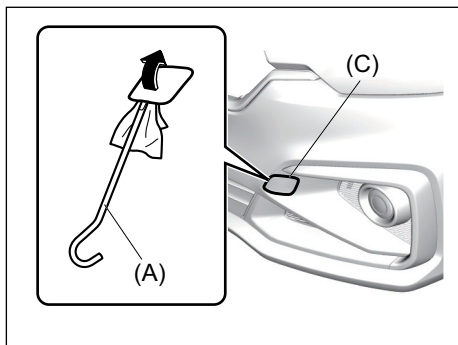


72RS2010

- 2) Remove the cover (C) by using a jack handle (A) covered with a soft cloth as shown in the illustration.

NOTE:

Do not use excessive force as it may damage the cover strap.

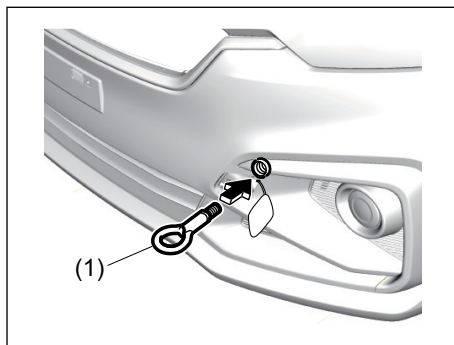


72RS2011

- 3) Install the towing eye (1) by hand.

NOTE:

It is recommended to secure the cover with tape to prevent damage during towing.

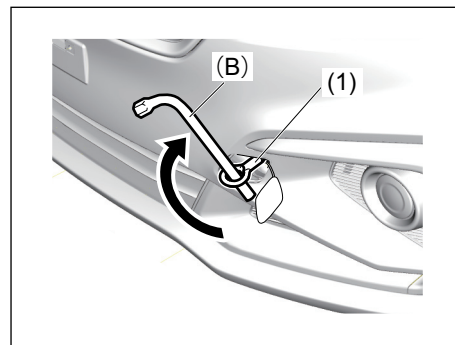


73R0185

- 4) To tighten the towing eye (1), turn it clockwise by using a wheel wrench (B) until the towing eye (1) is securely installed.

To remove the towing eye (1), reverse the installation procedure.

OTHER CONTROLS AND EQUIPMENT

Rear

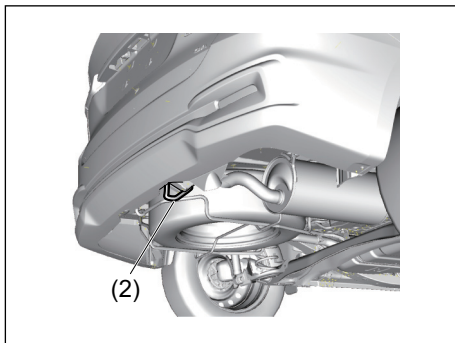


The frame hook (2) is provided on the rear of the vehicle for use in emergency situations and sea shipping purposes only.

NOTICE

To prevent damage to the vehicle, never use the frame hook (2) for trailer / train shipping.


Other Holes

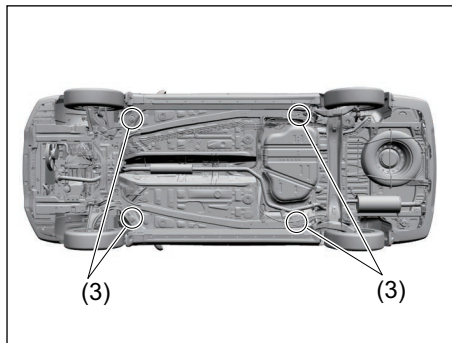

The frame holes (3) are provided only for transporting by a car carrier trailer.

NOTICE

Do not use the frame holes (3) for towing purpose. These holes may break and cause serious injury or damage.

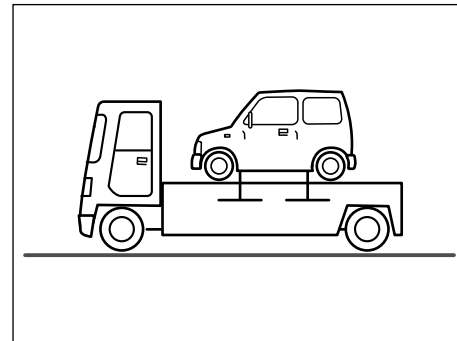


When using ropes to secure the vehicle, refer to the above figure.

CAUTION

Do not tighten the rope excessively. The vehicle may be damaged.

INSPECTION AND MAINTENANCE

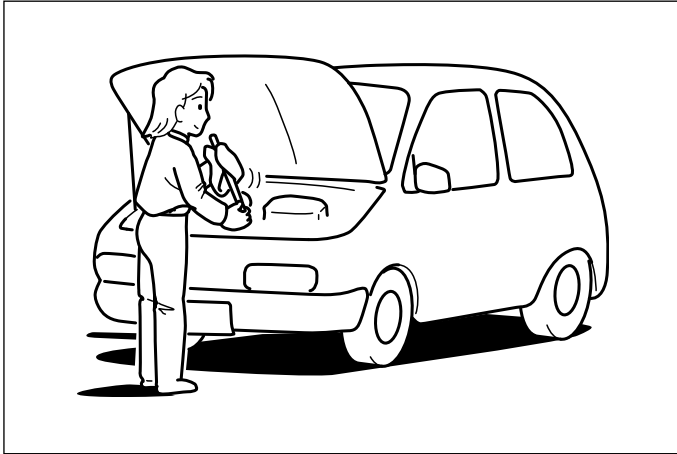

60G410

Maintenance Schedule	6-2
Periodic Maintenance Schedule	6-2
Drive Belt	6-6
Engine Oil and Filter	6-6
Engine Coolant	6-10
Air Cleaner	6-12
Spark Plugs	6-12
Gear Oil	6-12
Clutch	6-13
Brakes	6-14
Steering Wheel	6-17
Tires	6-17
Lead-acid Battery	6-20
Fuses	6-23
Headlight Aiming	6-27
Bulb Replacement	6-27
Wiper Blades	6-32
Windshield Washer Fluid	6-34
Air Conditioning System	6-35

INSPECTION AND MAINTENANCE

EXAMPLE



72SM06020

⚠ WARNING

Take extreme care when working on your vehicle to prevent accidental injury. Carefully observe the following precautions:

- To prevent damage or unintended activation of the airbag system or seat belt pretensioner system, be sure that the lead-acid battery is disconnected and the ignition switch has been in LOCK position for at least 90 seconds before performing any electrical service work on your MARUTI SUZUKI vehicle. Do not touch airbag system components, seat belt pretensioner system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

(Continued)

⚠ WARNING

(Continued)

- Do not leave the engine running in garages or other confined areas.
- When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.
- When it is necessary to perform service work with the engine running, make sure that the parking brake is set fully and the transmission is in Neutral.
- Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.
- Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.
- Do not allow smoking, sparks, or flames around fuel or the lead-acid battery. Flammable fumes are present.

(Continued)

⚠ WARNING

(Continued)

- Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.
- Be careful not to cause accidental short circuits between the positive and negative lead-acid battery terminals.
- Keep used oil, coolant, and other fluids away from children and pets. Dispose of used fluids properly; never pour them on the ground, into sewers, etc.

Maintenance Schedule

The following table shows the times when you should perform regular maintenance on your vehicle. This table shows in kilometers and months when you should perform inspections, adjustments, lubrication and other services.

WARNING

MARUTI SUZUKI recommends that maintenance on your Maruti Suzuki vehicle should be performed by a Maruti Suzuki authorised workshop.

NOTICE

Whenever it becomes necessary to replace parts on your vehicle, it is recommended that you use MARUTI SUZUKI genuine replacement parts or their equivalent.

Periodic Maintenance Schedule

“C”: Clean

“R”: Replace or Change

“I”: Inspect, clean, adjust, lubricate or replace as necessary

“L”: Lubricate

“T”: Tighten to Specified Torque

“O”: Rotate

NOTE:

- This table includes services as scheduled up to 80,000 km mileage. Beyond 80,000 km, carry out the same services at the same intervals respectively.
- For free inspection the cost of materials and consumables to be borne by customer.

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		FREE INSPECTION			PERIODIC MAINTENANCE AT COST							
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
ENGINE												
1-1	Generator drive Belt (Wear)	Non-ISG model	–	–	I	I	I	I	I	I	I	R
		ISG model	–	–	I	I	R	I	I	R	I	I
1-2	Water pump drive belt (Wear)		–	–	I	I	I	I	I	I	I	R
1-3	Engine Coolant SUZUKI LLC: Super (Blue) (#1,2)	First time only:	Replace at 100000 km or 60 months whichever comes first									
		Second time and after:	Replace every 40000 km or 24 months whichever comes first									
		Engine Coolant SUZUKI LLC: Standard (Yellow) (#1,3)		I	I	I	R	I	R	I	R	I
1-4	Engine oil, engine oil filter and drain plug gasket (Level, Leakage)		I	I	R	R	R	R	R	R	R	R
1-5	Cooling system hoses and connections (Leakage and Damage)		I	I	I	I	I	I	I	I	I	I
1-6	Engine Mounting & manifold fixing (Loose, Damage)		–	–	I	–	I	–	I	–	I	–
1-7	Exhaust System (Noise, Leakage etc.)		–	I	–	I	–	I	–	I	–	I
1-8	Positive Crank Case Ventilation System (Hoses, Connections and Valve)		–	I	–	I	–	I	–	I	–	I
IGNITION												
2-1	Ignition wire (Damage, Deterioration)		–	–	–	I	–	I	–	I	–	I
2-2	Spark Plug	Petrol	Replace after every 100000 km or 84 months whichever comes first									
		CNG	Replace after every 50000 km or 48 months whichever comes first									
FUEL												
3-1	Air cleaner filter element	Paved-road	Clean after every 5000 km Replace after every 40000 km									
		Dusty Condition	Clean after every 2500 km or as required. Replace after every 40000 km									
3-2	Fuel tank cap, fuel lines and connections (Leakage and Damage)		–	I	–	–	–	I	–	–	–	I
3-3	Fuel Filter		Replace after every 100000 km or 120 months whichever comes first									

#1: Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section.

The same type of coolant that is filled at the time of a brand new car should be used when you add or replace the coolant. Refer to "Engine coolant" in this section.

#2: Do not add SUZUKI LLC: Standard (Yellow) Coolant or distilled water or others when your vehicle is originally filled with SUZUKI LLC: Super (Blue) Coolant.

#3: When your vehicle is originally filled with SUZUKI LLC: Standard (Yellow) Coolant, follow the maintenance schedule of SUZUKI LLC: Standard (Yellow) Coolant.

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		km (x1000)	FREE INSPECTION			PERIODIC MAINTENANCE AT COST						
			1	5	10	20	30	40	50	60	70	80
			months	1	6	12	24	36	48	60	72	84
3-4	Fuel Tank		–	–	–	–	–		–	–	–	
CLUTCH AND TRANSMISSION												
4-1	Clutch fluid (Level, Leakage)											
			Replace after every 40000 km or 24 months whichever comes first									
4-2	Clutch slipping (Dragging or Excess Damage)											
4-3	Manual Transaxle Oil (Level, Leakage)											
4-4	Gear shifter (Operation)											
DRIVE SHAFT												
5-1	Drive shaft noise											
5-2	Drive shaft boot (boot damage)		–									
BRAKE												
6-1	Brake Fluid (Level, Leakage)											
			Replace after every 40000 km or 24 months whichever comes first									
6-2	Brake pedal (Pedal - wall clearance)											
6-3	Parking brake lever and cable (Play, Damage)											
6-4	Brake disc and pad (Wear)		–									
6-5	Brake drum and shoes (Wear)		–	–								
6-6	Brake hoses and pipes (Fluid leakage, Damage)											
6-7	Master cylinder, wheel cylinder and caliper piston (Fluid leakage, Boot/Seal damage)											
WHEEL												
7-1	Tires (Air pressure, Abnormal wear, Crack and Rotation)			I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O
7-2	Wheels (Damage)											
7-3	Front/Rear wheel bearing (Loose, Damage)											
FRONT / REAR SUSPENSION												
8-1	Suspension strut (Oil leakage, Damage)											
8-2	Suspension arms / Knuckle support and Torsion rods (Loose, Damage)		–									
8-3	Rear spring (Damage)											

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		FREE INSPECTION			PERIODIC MAINTENANCE AT COST							
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
8-4	Shock absorbers (Oil leakage, Damage)	I	I	I	I	I	I	I	I	I	I	I
8-5	All bolts and nuts (Loose)	–	T	T	T	T	T	T	T	T	T	T
STEERING												
9-1	Steering wheel (Play, Loose)	I	I	I	I	I	I	I	I	I	I	I
9-2	All rods and arms (Loose, Damage, Wear)	I	I	I	I	I	I	I	I	I	I	I
9-3	Tilt Steering (Operation)	I	I	I	I	I	I	I	I	I	I	I
ELECTRICAL												
10-1	Battery - electrolyte (Level, leakage) and voltage	I	I	I	I	I	I	I	I	I	I	I
10-2	Wiring harness connection (Loose, Damage)	–	I	I	I	I	I	I	I	I	I	I
10-3	Lighting system (Operation, Stains, Damage)	I	I	I	I	I	I	I	I	I	I	I
10-4	Wiper (Operation, Stains, Damage)	I	I	I	I	I	I	I	I	I	I	I
10-5	Horn (Operation)	I	I	I	I	I	I	I	I	I	I	I
10-6	AUX, USB and accessory socket (Operation)	–	I	I	I	I	I	I	I	I	I	I
BODY												
11-1	All chassis bolts and nuts (Tighten)	–	T	T	T	T	T	T	T	T	T	T
11-2	All latches, hinges and locks (Function)	I	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L
ROAD TEST												
12-1	Operation of Brakes, gear shifting and speedometer	I	I	I	I	I	I	I	I	I	I	I
12-2	Body and chassis noise	I	I	I	I	I	I	I	I	I	I	I
AIR CONDITIONER												
13-1	Tighten compressor mounting bolt	–	T	T	T	T	T	T	T	T	T	T
13-2	All hose joint (Check, Tighten)	I	I	I	I	I	I	I	I	I	I	I
13-3	Check functioning of Recirculating flap	I	I	I	I	I	I	I	I	I	I	I
13-4	Clean condenser with low pressure water	–	C	C	C	C	C	C	C	C	C	C
13-5	Check all mounting bolts	I	I	I	I	I	I	I	I	I	I	I
13-6	Air conditioner filter element	I	I	I	I	R	I	I	R	I	I	I

Drive Belt

⚠ WARNING

When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.


The drive belts tension is adjusted automatically. If the belt is too loose, insufficient battery charging, engine overheating, poor power steering, poor air conditioning, or excessive belt wear can result.

The belts should also be examined to ensure that they are not damaged.

If you need to replace or adjust the belt have it done by a Maruti Suzuki authorised workshop.

Engine Oil and Filter

Specified Oil

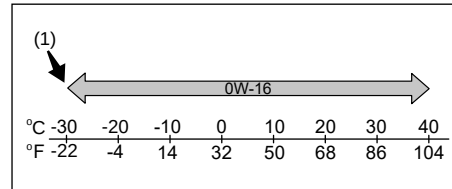

72RH4037

(1) Recommended

Be sure that the engine oil you use comes under the quality classification as listed below.

- API SN, SP
- ILSAC GF-6


Select the appropriate oil viscosity according to the above chart.

SAE 0W-16 (1) is the best choice for good fuel economy and good startability in cold weather.


NOTE:

- The replacement timing varies with the type of engine oil that you choose. Refer to "Maintenance schedule" in this section for corresponding maintenance schedule.
- We recommend that you use MARUTI SUZUKI genuine oil. To purchase it, see a Maruti Suzuki authorised workshop.

Oil Level Check

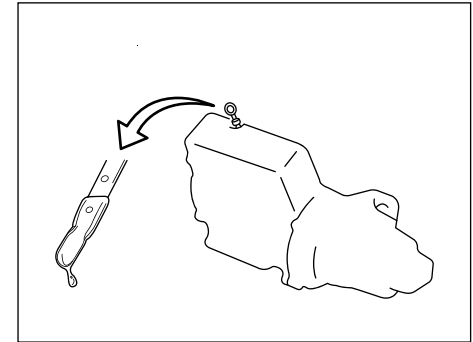

72R0117

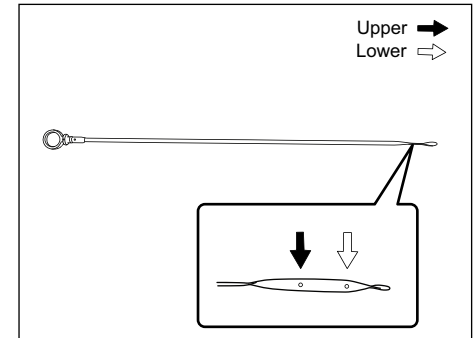

72R0118

INSPECTION AND MAINTENANCE


It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or at least 5 minutes after stopping the engine.

Pull out the oil dipstick, wipe oil off with a clean cloth, insert the dipstick all the way into the engine, then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower limit, add enough oil to raise the level to the upper limit.

NOTICE

Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

Refilling

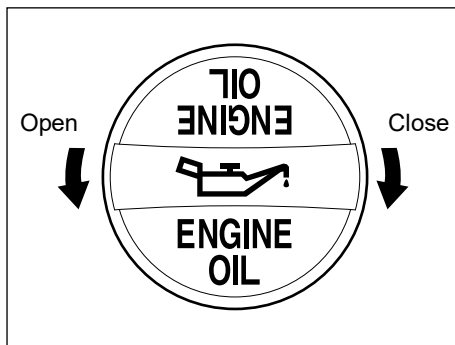


68PH00762

Remove the oil filler cap and pour oil slowly through the filler hole to bring the oil level to the upper limit on the dipstick. Be careful not to overfill the oil. Too much oil is almost as bad as too little oil. After refilling, start the engine and allow it to idle for about a minute. Stop the engine, wait about 5 minutes and check the oil level again.

Changing Engine Oil and Filter

Drain the engine oil while the engine is still warm.

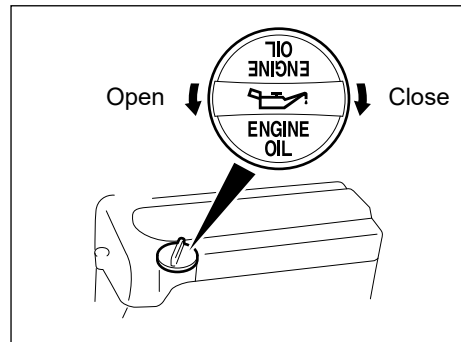


66RH001

- 1) Remove the oil filler cap.
- 2) Place a drain pan under the drain plug.
- 3) Using a wrench, remove the drain plug and drain the engine oil.

⚠ CAUTION

The engine oil temperature may be high enough to burn your fingers when the drain plug is loosened. Wait until the drain plug is cool enough to touch with your bare hands.

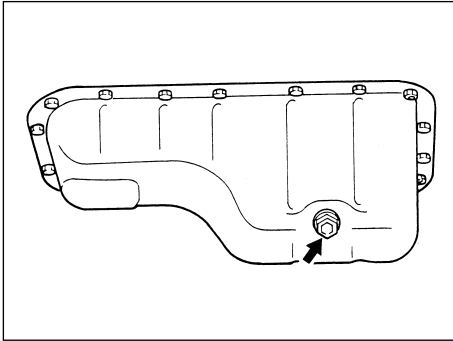

60G306

Tightening torque for drain plug
35 Nm (3.6 kg-m, 25.8 lb-ft)

WARNING

- Engine oil can be hazardous. Children and pets may be harmed by swallowing new or used oil. Keep new and used oil and used oil filters away from children and pets.
- Repeated, prolonged contact with used engine oil may cause skin cancer.
- Brief contact with used oil may irritate skin.

(Continued)

WARNING


(Continued)

- To minimize your exposure to used oil, wear a long-sleeve shirt and moisture-proof gloves (such as dishwashing gloves) when changing oil. If oil contacts your skin, wash thoroughly with soap and water.
- Launder any clothing or rags if it is with oil.
- Recycle or properly dispose of used oil and filters.

- 4) Reinstall the drain plug with new gasket. Tighten the plug with a wrench to the specified torque.

Oil Filter Replacement

- 1) Using an oil filter wrench, turn the oil filter counterclockwise and remove it.
- 2) Using a clean rag, wipe off the mounting surface on the engine where the new filter will be seated.
- 3) Smear a small amount of engine oil around the rubber gasket of the new oil filter.
- 4) Screw the new filter by hand until the filter gasket contacts the mounting surface.

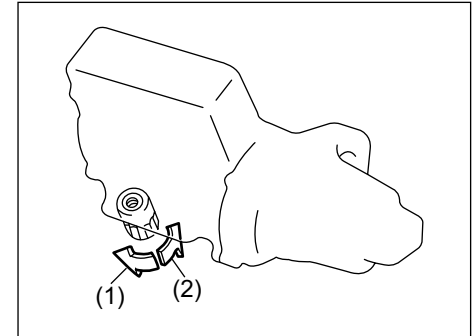


54G092

- (1) Loosen
- (2) Tighten

INSPECTION AND MAINTENANCE

Tightening (viewed from filter top)

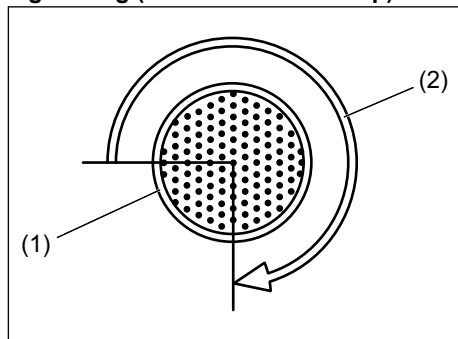

54G093

- (1) Oil filter
(2) 3/4 turn

NOTICE

To tighten the oil filter properly, it is important to accurately identify the position at which the filter gasket first contacts the mounting surface.

- 5) Tighten the filter as specified below from the point of contact with the mounting surface (or to the specified torque) using an oil filter wrench.

Tightening torque for oil filter

$\frac{3}{4}$ turn or
14 Nm (1.4 kg-m, 10.3 lb-ft)

NOTICE

To prevent oil leakage, make sure that the oil filter is tight, but do not over-tighten it.

Refill with Oil and Oil Leakage Check


- 1) Pour oil through the filler hole and install the filler cap. For the approximate capacity of the oil, refer to "Capacities" in "SPECIFICATIONS" section.
- 2) Start the engine and carefully check the oil filter and the drain plug for leakage. Run the engine at various speeds for at least 5 minutes.
- 3) Stop the engine and wait about 5 minutes. Check the oil level again and add oil if necessary. Check for leakage again.

NOTICE

- When replacing the oil filter, it is recommended that you use a MARUTI SUZUKI genuine replacement filter. If you use an aftermarket filter, make sure it is of equivalent quality and follow the manufacturer's instructions.
- Oil leakage from the periphery of the oil filter or drain plug indicate incorrect installation or gasket damage. If you find any leakage or are not sure that the filter has been properly tightened, have the vehicle inspected by a Maruti Suzuki authorised workshop.

Engine Coolant

Coolant Level Check

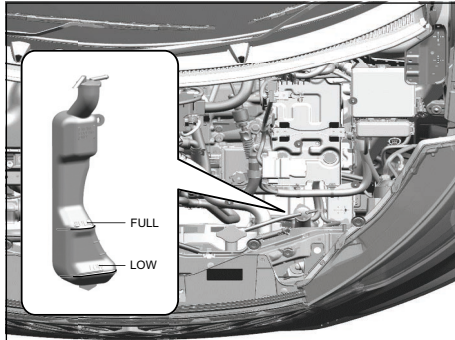

72R06002

Check the coolant level at the reservoir tank, not at the radiator. With the engine cool, the coolant level should be between "FULL" and "LOW" marks. If the coolant level is below "LOW" mark, coolant should be added.

Coolant addition and replacement

When you add the coolant, remove the reservoir tank cap and add coolant until the reservoir tank level reaches "FULL" mark while the engine is cool. Never fill the reservoir tank above "FULL" mark.

Since special procedures are required for coolant replacement, ask a Maruti Suzuki authorised workshop for this job.

⚠ WARNING

Swallowing engine coolant can cause severe injury or death. Inhaling coolant mist or vapors or getting coolant in your eyes could result in severe injury.

- Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician.
- Avoid inhaling coolant mist or hot vapors. If inhaled, remove to a fresh air area.
- If coolant gets in the eyes, flush with water and seek medical attention.
- Wash thoroughly after handling coolant.
- Keep engine coolant out of the reach of children and pets.

NOTICE

When putting the cap on the reservoir tank, line up the mark on the cap and the mark on the tank. Failure to follow this can result in coolant leakage.

Selection of coolant

To maintain optimum performance and durability of your engine, use MARUTI SUZUKI genuine coolant or equivalent.

This type of coolant is the best for cooling system for the following reasons:

- The coolant helps maintain proper engine temperature.
- It gives proper protection against freezing and boiling.
- It gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system. A Maruti Suzuki authorised workshop can help you select the proper coolant.

NOTICE

To avoid damaging your cooling system:

- Always use a high quality ethylene glycol base non-silicate type coolant diluted with distilled water at the correct mixture concentration.
- Do not add extra inhibitors or additives. They may not be compatible with your cooling system.
- Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/or the possibility of severe overheating and extensive engine/transmission damage. In case of coolant mix-up

(Continued)

INSPECTION AND MAINTENANCE

NOTICE


(Continued)

have your vehicle inspected by a Maruti Suzuki authorised workshop.

NOTE:

Maruti Suzuki highly recommends the use of Maruti Suzuki genuine coolant. Maruti Suzuki genuine coolant has been specially formulated for your Maruti Suzuki product and contributes to the desired vehicle performance and ideal driving experience.

Depending on the production period of your vehicle, the coolant type filled at the time of a brand new car differs. There are two coolant types, SUZUKI LLC: Super (Blue) Coolant and SUZUKI LLC: Standard (Yellow) Coolant. You can check the original coolant type in your vehicle by the color of the coolant in the reservoir tank (Refer below figure).

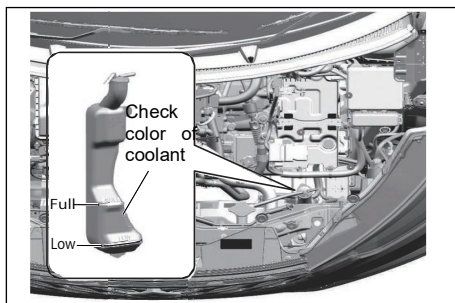

75U74EN060015

Coolant Color	Coolant Type
Blue	Suzuki LLC : Super
Yellow	Suzuki LLC : Standard

NOTE:

The same type of coolant that is filled at the time of a brand new car should be used when you add or replace the coolant.

SUZUKI LLC: Super (Blue) Coolant:

NOTICE

- This coolant is already diluted to the proper percentage. Do not dilute with distilled water additionally. Doing so may result in the possibility of freezing and/or overheating coolant.
- Do not add SUZUKI LLC: Standard (Yellow) Coolant or distilled water or others when your vehicle is originally filled with SUZUKI LLC: Super (Blue) Coolant. If such a case occurs, then get the vehicle inspected by a Maruti Suzuki authorised workshop.


SUZUKI LLC: Standard (Yellow) Coolant:

NOTICE

- The concentration of the mixture to be used shall be 30% antifreeze and 70% distilled water. Do not use straight coolant nor plain water.
- If the lowest ambient temperature in your area is expected to be -15°C (5°F) or below, use higher concentrations up to 60% following the instructions on the antifreeze container. Concentrations greater than 60% will cause overheating conditions.
- When your vehicle is originally filled with SUZUKI LLC: Standard (Yellow) Coolant, follow the maintenance schedule of SUZUKI LLC: Standard (Yellow) Coolant in this section. In case you replace with Suzuki LLC: Super (Blue) Coolant, then get the vehicle inspected by a Maruti Suzuki authorised workshop.

Air Cleaner

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

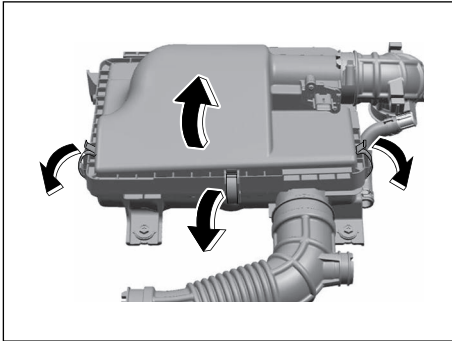

72RH4031

- 1) Unclamp the side and center clamps and remove the element from the air cleaner case. If it appears to be dirty, replace it with a new one.
- 2) Clamp the side and center clamps securely.

Spark Plugs

Spark plug replacement and inspection


Since special procedures, materials and tools are required, it is recommended that you trust this job to a Maruti Suzuki authorised workshop.

Gear Oil

Specified Gear Oil

When adding gear oil, use gear oil with the appropriate viscosity and grade as shown in the chart below.


We highly recommend you use:
"MARUTI GENUINE GEAR OIL 75W" gear oil.

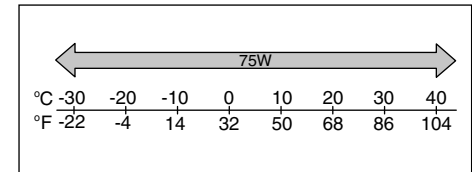

54PI20706

INSPECTION AND MAINTENANCE

Gear Oil Level Check

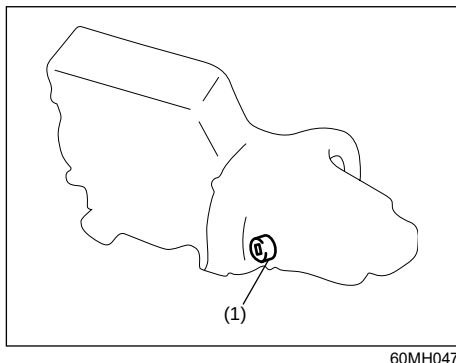

(1) Oil filler and level plug

To check the gear oil level, use the following procedure:

- 1) Park the vehicle on a level surface with the parking brake applied. Then, stop the engine.
- 2) Remove the oil filler and level plug (1).
- 3) If gear oil flows from the plug hole, the oil level is correct. Reinstall the plug. If gear oil does not flow from the plug hole, add oil through the filler plug hole until oil flows a little from the plug hole.
- 4) If the oil level is low, add gear oil through the oil filler and level plug hole (1) until the oil level reaches the bottom of the filler hole, then reinstall the plug.

Tightening torque for oil filler and level plug (1)

21 Nm (2.1 kg-m, 15.5 lb-ft)

CAUTION

After driving the vehicle, the gear oil temperature may be high enough to burn you. Wait until the oil filler and level plug is cool enough to touch with your bare hands before inspecting gear oil level.

NOTICE

When tightening the plug, apply the following sealing compound or equivalent to the plug threads to prevent oil leakage.


MARUTI SUZUKI Bond No. "1216E" or "1217G"

Gear Oil Change

Since special procedures, materials and tools are required, ask a Maruti Suzuki authorized workshop for this job.

Clutch

Clutch Pedal

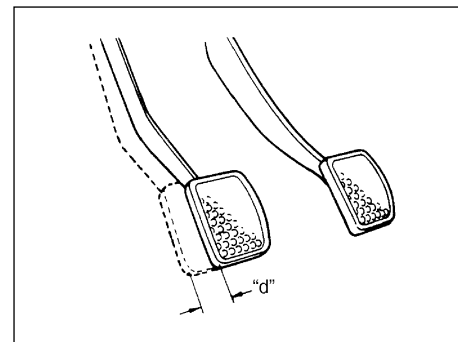


54G274

**Clutch pedal play "d":
MAX 10 mm**

Measure the clutch pedal play by moving the clutch pedal with your hand and measuring the distance it moves until you feel slight resistance. The play in the clutch pedal should be less than the specified values. If the play is more than the above, or clutch dragging is felt with the pedal fully depressed, have the clutch inspected by a Maruti Suzuki authorised workshop.

Clutch Fluid

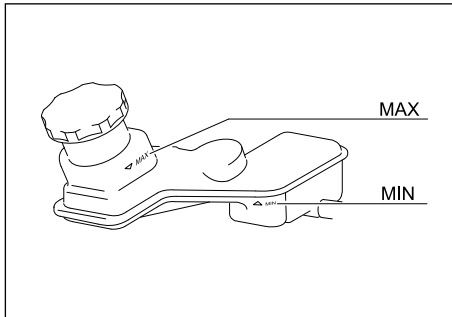

73R0115


Check the clutch pedal for smooth operation and clutch fluid level from time to time. If clutch dragging is felt with the pedal fully depressed, have the clutch inspected by your Maruti Suzuki authorised workshop. If the clutch fluid level is near the "MIN" line, fill it up to the "MAX" line with Maruti Suzuki Genuine Brake Fluid (MGBF) or DOT 3.

We highly recommend to use "Maruti Suzuki Genuine Brake Fluid" (MGBF).

NOTICE

Clutch fluid is supplied from brake fluid reservoir. If your clutch fluid level is increased or near the "MIN" line, there is a possibility of clutch or brake fluid leakage or abnormal wear of clutch. Have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.

Brakes Brake fluid

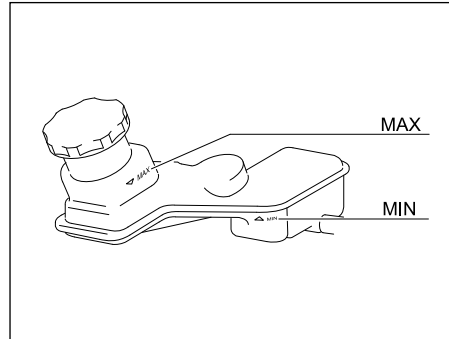

73R0116

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between "MAX" and "MIN" lines.

WARNING

Failure to follow the guidelines below can result in personal injury or serious damage to the brake system.

- If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument panel will come on (the engine must be running with the parking brake fully disengaged). Should the light come on,

(Continued)

WARNING

(Continued)

immediately ask a Maruti Suzuki authorised workshop to inspect the brake system.

- A rapid fluid loss indicates a leakage in the brake system which should be inspected by a Maruti Suzuki authorised workshop immediately.
- Do not use any fluid other than Maruti Genuine Brake Fluid (MGBF) or DOT3 brake fluid. Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.
- Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of reach of children and animals.

INSPECTION AND MAINTENANCE

NOTICE


- If your brake fluid level is near “MIN” line, there is a possibility of brake pad and/or shoe wear and brake fluid leakage. In this case, ask a Maruti Suzuki authorised workshop to inspect the brake system.
- Brake fluid can damage painted surfaces. Use caution when refilling the reservoir.

NOTE:

- The fluid level can be expected to gradually fall as the brake pad and/or shoe wear.
- Brake fluid absorbs water over time and brake fluid with high water content may cause vapor lock or brake system malfunction.
- Replace your brake fluid according to the maintenance schedule in your Owner's Manual.

Brake Pedal

Check if the brake pedal stops at the regular height without “spongy” feeling when you depress it. If not, have the brake system inspected by a Maruti Suzuki authorised workshop. If you doubt the brake pedal for the regular height, check it as follows:

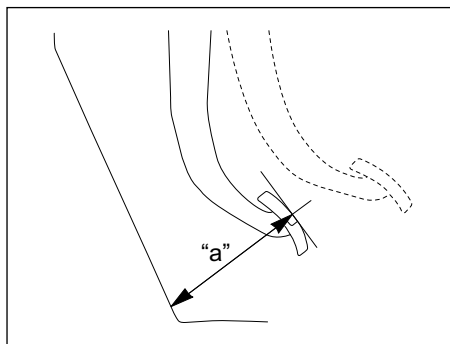

54G108


Pedal to floor carpet minimum distance “a”:
51 mm

With the engine running, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg (66 lbs) of force. The minimum distance required is as specified. Since your vehicle's brake system is self-adjusting, there is no need for pedal adjustment.

If the pedal to floor carpet distance as measured above is less than the minimum distance required, have your vehicle inspected by a Maruti Suzuki authorised workshop.

NOTE:

When measuring the distance between the brake pedal and floor wall, be sure not to include the floor mat or rubber on the floor wall in your measurement.

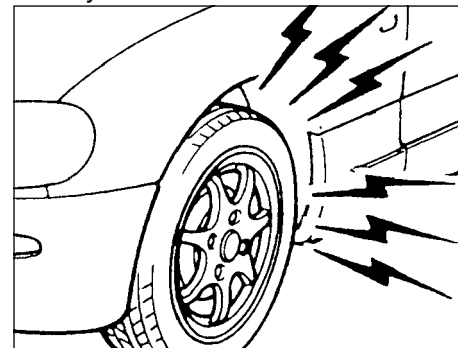

60G104S0

⚠ WARNING

If the brake pad lining becomes worn and it has reached its minimum thickness, squealing noise sounds during braking.


If you hear this noise, have the vehicle inspected immediately by a Maruti Suzuki authorised workshop. Continued driving with this condition can cause an accident.

⚠ CAUTION

If you experience any of the following problems with your vehicle's brake system, have the vehicle inspected immediately by a Maruti Suzuki authorised workshop.

- Poor braking performance
- Uneven braking (brakes not working uniformly on all wheels.)
- Excessive pedal travel
- Brake dragging

Parking Brake

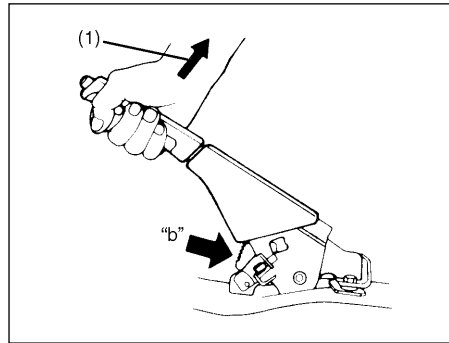

54G109

Ratchet tooth specification "b":
4th – 9th
Lever pull force (I):
200 N (20 kg)

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag is suspected even after the lever has been fully released, have the parking brake inspected and/or adjusted by a Maruti Suzuki authorised workshop.

Brake discs and brake drums

Brake disc


Brake location	Minimum thickness
Front wheels	20.0 mm

Brake drum

Brake location	Maximum inner diameter
Rear wheels	222 mm

If the measured thickness or inner diameter of the most worn part falls below or exceeds the value indicated above, the parts should be replaced with a new one. The measurement involves disassembling each brake and requires the use of a micrometer or caliper, which must be done according to the instructions described in the relevant service manual or available from the relevant repair information site.

Steering Wheel

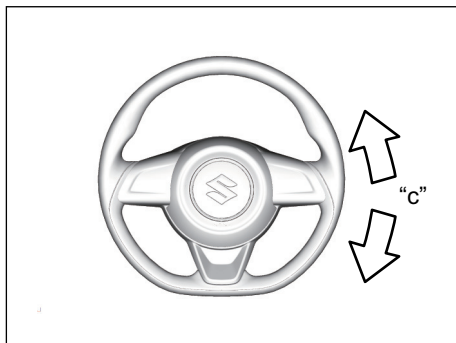


73R0117

Steering wheel play "c": 0 – 30 mm

Check the play of the steering wheel by gently turning it from left to right and measuring the distance that it moves before you feel slight resistance. The play should be between the specified values.

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is outside the specification or you find anything else to be wrong, an inspection must be performed by a Maruti Suzuki authorised workshop.

Tires

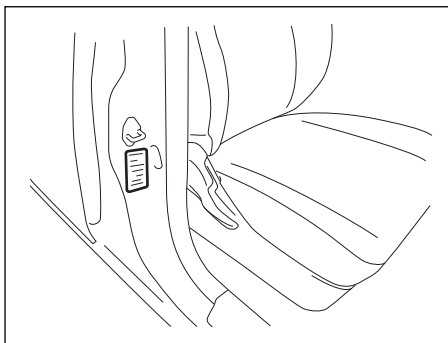

73R0118

The front and rear tire pressure specifications for your vehicle are listed in the tire information label. Both front and rear tires should have the specified tire pressure.


Tire Inspection

Inspect your vehicle's tires at least once a month or before long trip by performing the following checks:

- 1) Measure the air pressure with a tire gauge. Adjust the pressure if necessary. Remember to check the spare tire, too.

⚠ WARNING

- Air pressures should be checked when the tires are cold or you may get inaccurate readings.
- Check the inflation pressure from time to time while inflating the tire gradually, until the specified pressure is obtained.
- Never underinflate or over-inflate the tires. Underinflation can cause unusual handling characteristics or can cause the rim to slip on the tire bead, resulting in an accident or damage to the tire or rim. Overinflation can cause the tire to burst, resulting in personal injury. Overinflation can also cause unusual handling characteristics which may result in an accident.

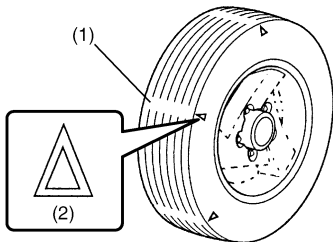

54G136

- (1) Tread wear indicator
- (2) Indicator location mark
- 2) Check that the depth of the tread groove is more than 1.6 mm (0.06 in.). To help you check this, the tires have molded-in tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is 1.6 mm (0.06 in.) or less and the tire should be replaced.
- 3) Check for abnormal wear, cracks and damage. Any tires with cracks or other damage should be replaced. If any tires show abnormal wear, have them inspected by a Maruti Suzuki authorised workshop.

⚠ CAUTION

Hitting curbs and running over rocks can damage tires and affect wheel alignment. Have tires and wheel alignment checked periodically by a Maruti Suzuki authorised workshop.

- 4) Check for loose wheel nuts.
- 5) Check that there are no nails, stones or other objects sticking into the tires.

⚠ WARNING

- Your MARUTI SUZUKI vehicle is equipped with tires which are all the same type and size. This is important to ensure proper steering and handling of the vehicle. Never mix tires of different size or type on the four wheels of your vehicle. The size and type of tires used should be only those approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.
- Replacing the wheels and tires equipped on your vehicle with certain combinations of aftermarket wheels and tires can significantly change the steering and handling characteristics of your vehicle.
- Therefore, use only those wheel and tire combinations approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.


NOTICE

Replacing the original tires with tires of a different size may result in false speedometer or odometer readings. Check with a Maruti Suzuki authorised workshop before purchasing replacement tires that differ in size from the original tires.

INSPECTION AND MAINTENANCE


Tire Rotation

5-tire rotation

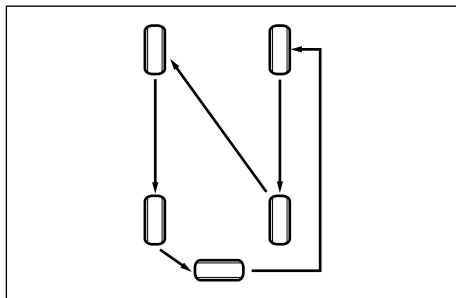

80JK040

4-tire rotation

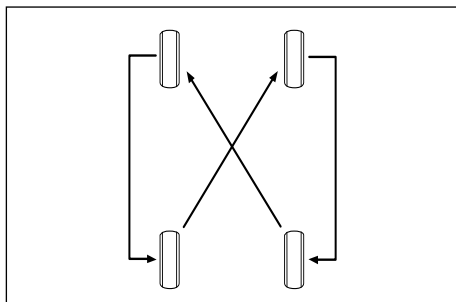

54G114

To avoid uneven wear of your tires and to prolong their life, rotate the tires as illustrated. Tires should be rotated every 10000 km. After rotation, adjust front and rear tire pressures to the specification listed in your vehicle's Tire Information Label.

Wheel Balancing

If the vehicle vibrates abnormally on smooth road, have the wheel balanced at Maruti Suzuki authorised workshop.

Wheel Alignment

In case of abnormal tire wear or pulling towards one side, have the wheel aligned at Maruti Suzuki authorised workshop.

Tubeless Tires (If equipped)

The vehicle is equipped with Tubeless Tires. In tubeless tire, a thin layer of butyl rubber is used for lining the inside of the tubeless tire. This layer is to prevent air loss and fulfilling the purpose of tube. The air pressure is maintained by the sealing between tire bead and wheel rim. Tubeless tires are having advantage of slow air loss and preventing sudden deflation while driving.

Care and maintenance tips for tubeless tires

- 1) Always maintain recommended inflation pressure. Driving continuously at low inflation pressure can lead to tire damage.
- 2) In case any leakage is found, check for any nail penetration/valve core damage

or rim bent. Damaged wheel must not be used.

- 3) In case tire has run at low pressure, it must be inspected for any defect.
- 4) Whenever new tire is fitted, replace the valve.
- 5) If continuous high speed driving is required, increase pressure of tires by 5 psi over recommended inflation pressure.
- 6) Never run the tire beyond TWI (Tread wear indicator). The tire is recommended to be replaced when the remaining tread has worn to this point. The indicators are spaced across the tread around the tire marked by a triangular symbol (TWI).
- 7) Always prefer tubeless tire mounting machine. In case of manual mounting tire/ wheel rim damage may occur.
- 8) In case of any problem, please get in touch with a Maruti Suzuki authorised workshop.

Lead-acid Battery

⚠ WARNING

- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the lead-acid battery or an explosion may occur. Never smoke when working in the vicinity of the lead-acid battery.
- When checking or servicing the lead-acid battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the lead-acid battery posts and the vehicle at the same time.
- To avoid harm to yourself or damage to your vehicle or lead-acid battery, follow the jump starting instructions in "EMERGENCY SERVICE" section of this manual if it is necessary to jump-start your vehicle.
- Diluted sulfuric acid spilled from lead-acid battery can cause blindness or severe burns. Use proper eye protection and gloves. Flush eyes or body with ample water and get medical care immediately if suffered. Keep batteries out of reach of children.

(Continued)


⚠ WARNING

(Continued)

- A lack of the electrolyte fluid could cause the danger of battery explosion due to overheating. Do not use the battery or do not charge the battery, with the fluid level below the lower limit.
- Loose connection of the battery terminals could cause fire or malfunction. When detaching the battery terminals and connecting them again, ensure a tight connection.

NOTICE

If your vehicle is equipped with the ENG A-STOP system and the battery which is exclusive for the ENG A-STOP system is used, only use the specified type of battery for ENG A-STOP system. Refer to "SPECIFICATIONS" section for details. Otherwise, you could damage your vehicle, and the ENG A-STOP system could not be available. If a vehicle battery has to be replaced, consult a Maruti Suzuki authorized workshop.

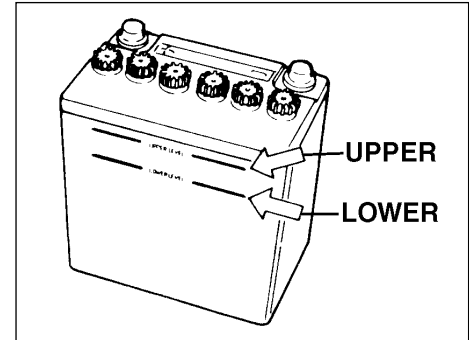

54G118

For maintenance-free battery (cap-less type), you need not add water. For traditional type battery, which has water filler caps, the level of the battery fluid must be kept between the "UPPER" and the "LOWER" level lines at all times. If the level is found to be below the "LOWER" level line, add distilled water to the "UPPER" level line. You should periodically check the battery, battery terminals, and battery hold-down bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.

If your vehicle is not going to be driven for a month or longer, disconnect the cable from the negative terminal of the battery to help prevent discharge.

INSPECTION AND MAINTENANCE

⚠ WARNING

If the battery is used with battery level being less than the lower level line "MIN", it may cause reduced battery life, an exothermic heat, or an explosion by hydrogen gas occurring from the battery. Do not use the battery with battery level being less than the lower level line "MIN".

NOTICE


If the battery liquid is added more than the upper level line "MAX", liquid may leak by vibrations during driving or liquid may spray out in some case depending on the condition of battery charging. These may cause damage to the parts near the battery. If the battery liquid over-spills, immediately wash away with water. Do not add the battery liquid more than the upper level line "MAX".

NOTE:

The battery liquid is consumed when the battery is used. If the level is found to be less than the center of upper level "MAX" and lower level "MIN", add distilled water till it reaches the upper level line "MAX".

Replacement of the battery

EXAMPLE

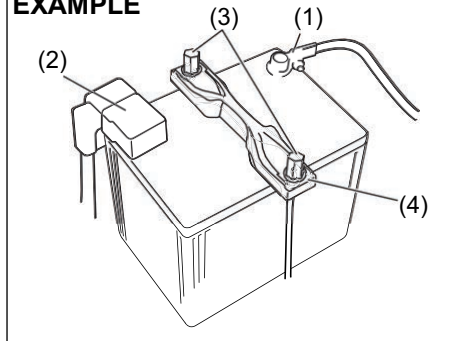


75U74EN060011

To remove the battery:

- 1) Disconnect the negative cable (1).
- 2) Disconnect the positive cable (2).
- 3) Remove the retainer nuts (3) and remove the retainer (4).
- 4) Remove the battery.

EXAMPLE (5)

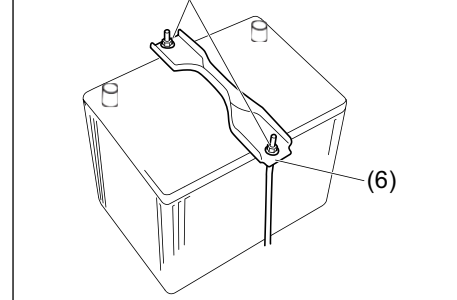

75U74EN060012

- 5) Remove the retainer nuts (5) and remove the retainer (6).

To install the battery:

- 1) Install the battery in the reverse order of removal.
- 2) Tighten the bracket bolt and battery cables securely.

NOTE:


- When the battery is disconnected, some of the vehicle's functions will be initialized and/or deactivated. These functions must be required to reset after the battery is reconnected.
- Do not disconnect the battery terminals for at least one minute after the ignition switch is turned to "LOCK" position.

⚠ WARNING

Batteries contain toxic substances including sulfuric acid and lead. They could have potential negative consequences for the environment and human health. Used batteries must be disposed of or recycled according to applicable rules or regulations and must not be disposed of with ordinary household trash. Make sure not to tip over the battery when you remove it from the vehicle. Otherwise, sulfuric acid could run out and you might get injured.

NOTICE

Do not use regular battery in ISG Vehicle. Use only Exide Conservo N55 battery, else it may deteriorate Smart Hybrid performance.

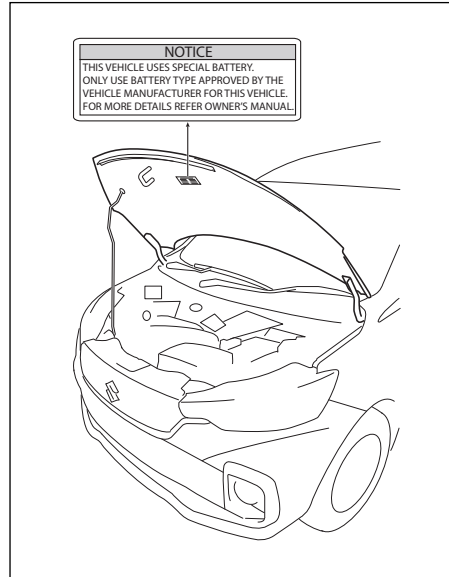


72SM06007

You may find this label on the inside of hood.

NOTICE

After stopping the engine, controller and system are operated for a while. Therefore, before removing the battery, wait for more than one minute after turning the ignition switch to "LOCK" position.

(Battery label)

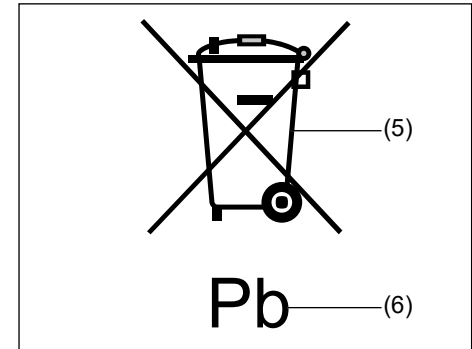

51KM042

(5) Crossed-out wheeled bin symbol

(6) Chemical symbol of "Pb"

The crossed-out wheeled bin symbol (5) located on the battery label indicates that the used battery should be collected separately from ordinary household trash. The chemical symbol of "Pb" (6) indicates the battery contains more than 0.004% lead. By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate trash handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult an Maruti Suzuki authorised workshop.

INSPECTION AND MAINTENANCE

Fuses

Your vehicle has three types of fuses, as described below:

Main fuse

The main fuse takes current directly from the lead-acid battery.

Primary fuses

These fuses are between the main fuse and individual fuses, and are for electrical load groups.

Individual fuses


These fuses are for individual electrical circuits.

To remove a fuse, use the fuse puller (1) provided in the relay box cover.


NOTE:

- "Blank" indicates that fuse is not applicable in the variant, even though name of fuse might be available on cover of fuse box of your vehicle.
- Some fuse may not be applicable to your vehicle according to the variant of vehicle, even though it is not mentioned as blank.

Relay box cover

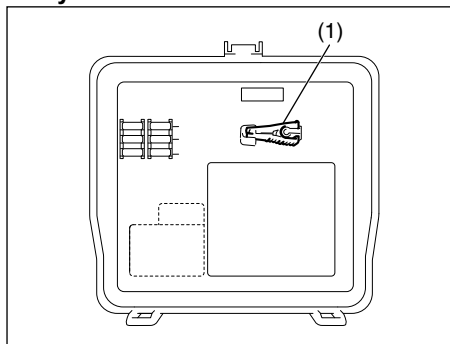


73R0204

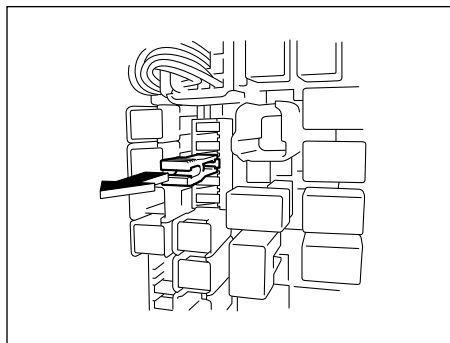

63J095


Fuses in Engine Compartment

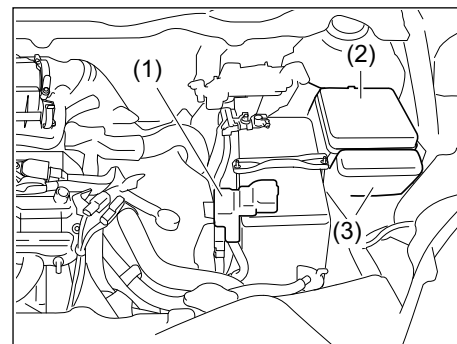

72RS2012


- (1) Main fuse box (FLB)
- (2) Relay box
- (3) Sub relay box (if equipped)

Main fuse box

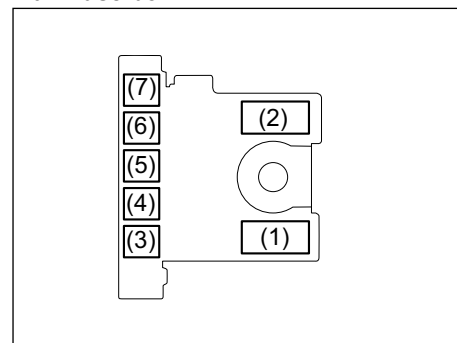


72RM06011

Relay box

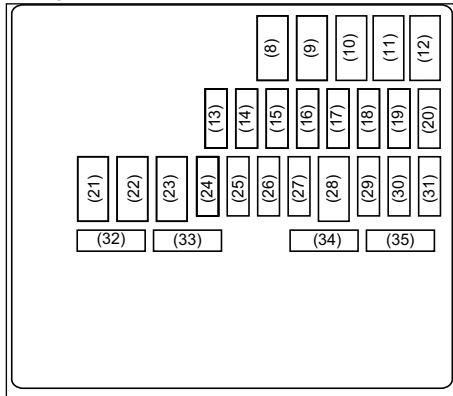

72RM06012

Sub relay box (if equipped)

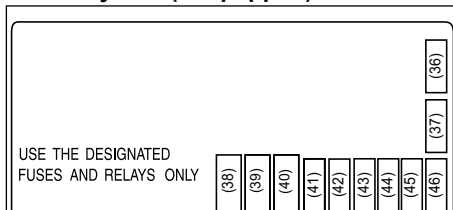

72RM06013

MAIN FUSE / PRIMARY FUSE

(1)	175 A	FL1
(2)	120 A	FL2
(3)	100 A	FL3


(4)	80 A	FL4
(5)	100 A	FL5
(6)	60 A	FL6
(7)	100 A	FL7
(8)	30 A	Starting motor
(9)	–	Blank
(10)	–	Blank
(11)	40 A	ABS motor
(12)	40 A	Ignition switch
(13)	30 A	Back up
(14)	–	Blank
(15)	20A	Front fog light
(16)	–	Blank
(17)	25 A	ABS SOL
(18)	15A	S/V
(19)	–	Blank
(20)	25A	Headlight HI
(21)	30 A	Radiator fan
(22)	–	Blank
(23)	–	Blank
(24)	7.5 A	CNG valve (if equipped)
(25)	15 A	Headlight (Left)

(26)	15 A	Headlight (Right)
(27)	–	Blank
(28)	50 A	Ignition switch -2
(29)	15A	Transmission
(30)	15 A	FI
(31)	10 A	Air compressor
(32)	–	Blank
(33)	5A	CNG Ignition 1 (if equipped)
(34)	5 A	Starting Signal
(35)	7.5 A	CNG (if equipped)
(36)	15 A	Headlight HI (Right)
(37)	15 A	Headlight HI (Left)
(38)	40 A	Blower fan
(39)	30 A	Rear air conditioner
(40)	10 A	Airbag-2
(41)	15 A	CHG-2
(42)	–	Blank
(43)	–	Blank
(44)	–	Blank
(45)	–	Blank
(46)	–	Blank

INSPECTION AND MAINTENANCE

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a MARUTI SUZUKI genuine replacement parts or equivalent for individual fuses.

To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in the back of the fuse box cover and in the relay box.

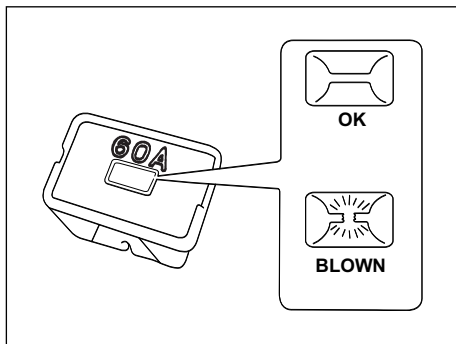

60G111

⚠ WARNING

If the main fuse or a primary fuse blows, have your vehicle inspected by a Maruti Suzuki authorised workshop. Always use a MARUTI SUZUKI genuine replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.


NOTE:

Make sure that the fuse box always carries spare fuses.

Fuses under Dashboard




73R0121

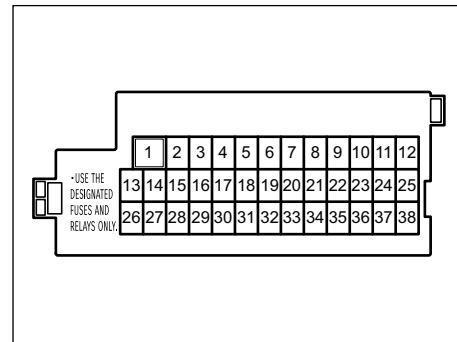

80P0185

PRIMARY FUSE		
(1)	30 A	Power window
(2)	10 A	Meter
(3)	15 A	Ignition coil
(4)	5 A	Ignition-1 signal 2
(5)	20 A	Shift
(6)	10A	CHG
(7)	10A	Steering lock 2
(8)	20 A	Door lock
(9)	15 A	Steering lock
(10)	10 A	Hazard
(11)	5 A	A-STOP
(12)	10A	Rear Fog
(13)	5 A	ABS control module
(14)	15 A	S/H
(15)	5 A	Ignition-1 signal 3
(16)	10 A	Dome light-2
(17)	5 A	Dome light
(18)	15 A	Radio
(19)	5 A	CONT
(20)	5 A	Key2

(21)	20 A	Power window timer
(22)	5 A	Key
(23)	15 A	Horn
(24)	5 A	Tail light (Left)
(25)	10 A	Tail light
(26)	10 A	Airbag
(27)	10 A	Ignition-1 signal
(28)	10 A	Back up light
(29)	5A	ACC3
(30)	20 A	Rear Defogger
(31)	10 A	Heated Mirror
(32)	15 A	ACC2
(33)	5 A	ACC
(34)	10 A	Wiper
(35)	5 A	Ignition-2 signal
(36)	15 A	Washer
(37)	25 A	Front wiper
(38)	10 A	Stop light

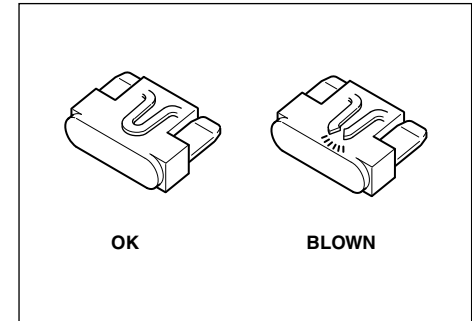

81A283

⚠ WARNING

- Always replace a blown fuse with a fuse of the same amperage and the same size which is equipped with your vehicle. Never use other objects than specified above to replace a blown fuse. Otherwise, wiring may burn out and it may cause a fire.
- If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected immediately by Maruti Suzuki authorised workshop

INSPECTION AND MAINTENANCE

NOTE:

According to the vehicle specifications, fuse setting may be different from the specifications which are shown in the above tables.

Headlight Aiming

Since special procedures are required, ask a Maruti Suzuki authorised workshop for this job.

Bulb Replacement

CAUTION

- Light bulbs can be hot enough to burn your finger right after turning off lights. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.
- The headlight bulbs are filled with pressurized halogen gas. They can burst and injure you if they are hit or dropped. Handle them carefully.
- To avoid injury by sharp-edged parts of the body, wear gloves and a long-sleeved shirt when replacing light bulbs.

NOTICE

The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.

NOTICE

- Frequent replacement of a bulb indicates the need for an inspection of the electrical system. This should be carried out by your Maruti Suzuki authorised workshop.
- During bulb replacement always use same bulb number as used in vehicle which is imprinted on the said bulb/unit and/or mentioned in SPECIFICATIONS.

NOTE:

The inner surface of lens such as the headlights or the rear combination lights may be clouded or dew condensation may occur by driving on a rainy day or washing the vehicle. This is a temporary phenomenon caused by temperature difference between the inside and the outside of the lights. (This is the same phenomenon as the windows are clouded on a rainy day.) Also, it sometimes seems that water gets into the lights because of waterdrop on the edge of the lens. This is a temporary phenomenon caused by water adherence to the outside of the lights. The above-mentioned phenomena are not vehicle malfunction. However, if water is piled up in the lights or large waterdrop adheres to the inner surface of lens, have your vehicle inspected by a Maruti Suzuki authorised workshop.

Non-disassembled type lights


Since the lights shown below are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any bulb is defective.

If you need to replace the assembly, ask your Maruti Suzuki authorised workshop.

- Tail/brake light
- Side turn signal light/hazard warning light on outside rearview mirrors
- High mount stop light

Headlight


Low beam

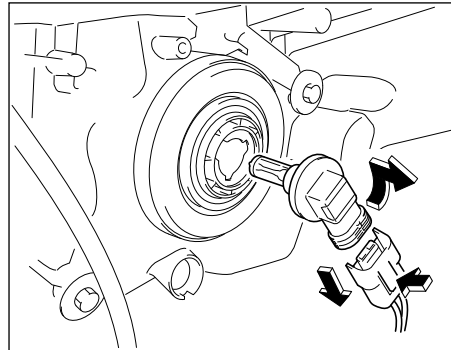

73R0123

Open the engine hood while the engine is stopped. Disconnect the coupler with pushing the lock release. Turn the bulb holder counterclockwise and remove it.

High beam

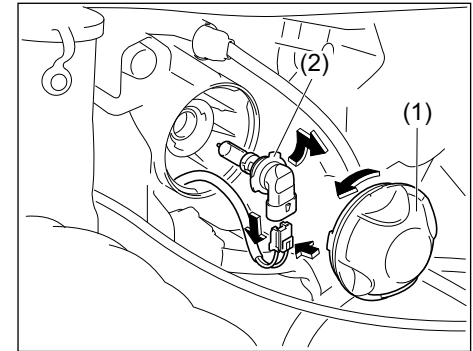

73R0134


Open the engine hood while the engine is stopped.

Turn the cover (1) counterclockwise and remove it.

Turn the bulb (2) holder counterclockwise and remove it. Disconnect the coupler with pushing the lock release.


INSPECTION AND MAINTENANCE

Front turn signal light Front position light

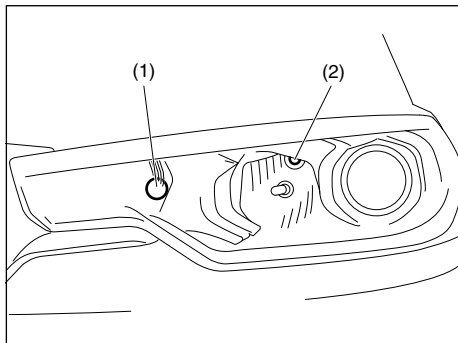


73R0124

- (1) Front turn signal light
(2) Front position light

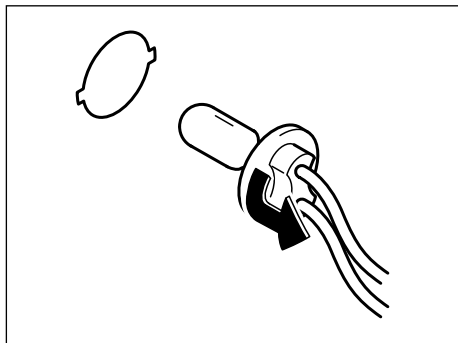

68PH0073

- 1) Open the engine hood while the engine is stopped. To remove the bulb holder of the front turn signal light or the front position light from the light housing, turn the holder counterclockwise and pull it out.

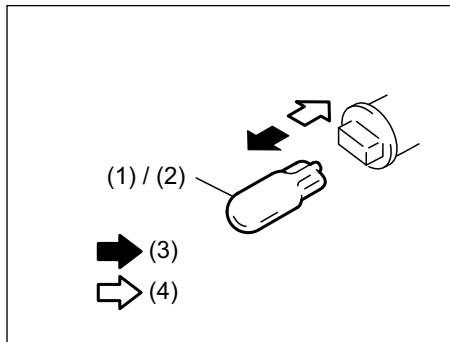

75U74EN060003

- (3) Removal
(4) Installation

- 2) To remove and install the bulb of the front turn signal light (1) or the front position light (2), simply pull out or push in the bulb.


Side Turn Signal Light

Outside rearview mirror type

LED is used. It is recommended that you take your vehicle to a Maruti Suzuki authorised workshop for bulb replacement since special procedures are required.

Rear combination light (tail, stop, turn signal, etc.)

For LED tail / brake light, it is recommended that you take your vehicle to a Maruti Suzuki authorised workshop for bulb replacement since special procedures are required.

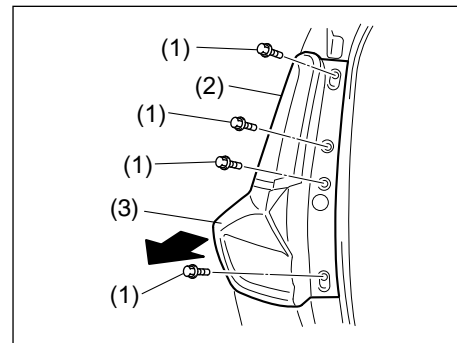


73R0186

With the tailgate opened, remove the bolts (1) and tail light (2), and then pull the rear combination light (3) firmly to the rearward.


NOTE:

When it is difficult to remove the rear combination lamp from the body at a low temperature (10 deg. C or less), pour water between the body and the rear combination lamp to make the removal smooth.

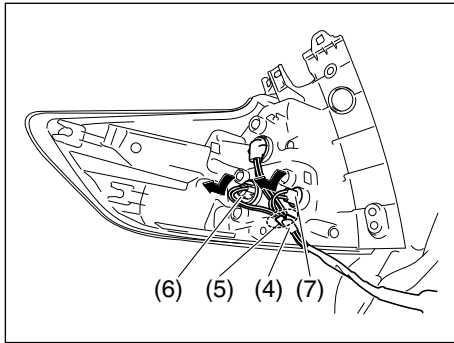

73R0187

- 1) Remove the wire (4) from a clamp (5).
- 2) To remove the bulb holder of the rear turn signal light (6) or the reversing light (7) from the light housing, turn the holder counterclockwise and pull it out.

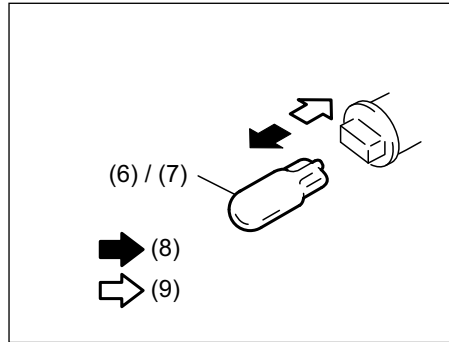


75U74EN060004

- (8) Removal
- (9) Installation


To remove the bulb of the rear turn signal light (6) from the bulb holder, push in the bulb and turn it counterclockwise.

To install a new bulb, push it in and turn it clockwise.

- 3) To remove and install the reversing light (7), simply pull out or push in the bulb.

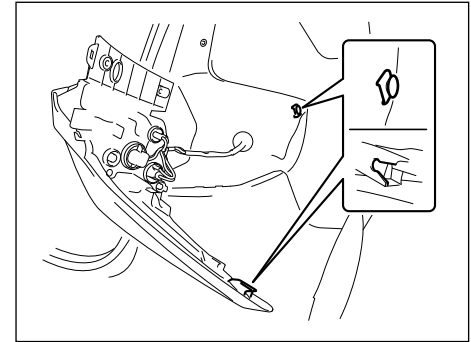

73R0188

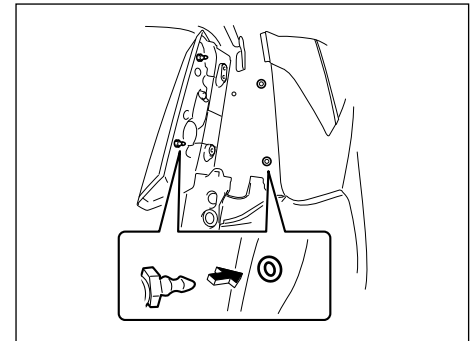


73R0189

NOTE:

When reinstalling the light housing, check that the clips are properly attached.


INSPECTION AND MAINTENANCE

License plate light

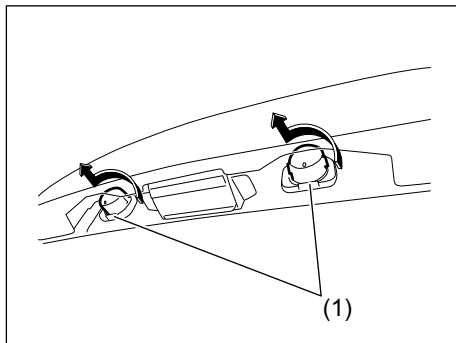

73R0211

- 1) Remove the cover (1) by turning it counterclockwise.

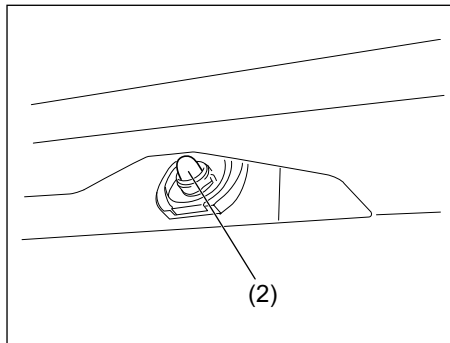

73R0192


- 2) To remove and install the bulb of the license plate light (2), simply pull out or push in the bulb.

High-mount stop light

LED is used. It is recommended that you take your vehicle to a Maruti Suzuki authorised workshop for bulb replacement since special procedures are required.


Interior Light

Front

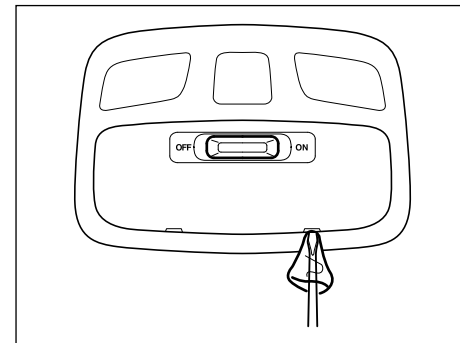

73R0212


Rear

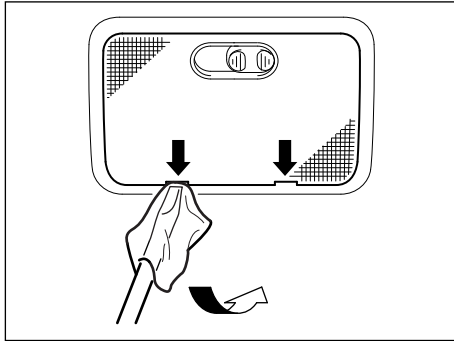

75U74EN060001

Remove the lens by using a flat-bladed screwdriver covered with a soft cloth as shown. To install it, simply push it back in. The bulb can be removed by simply pulling it out. When replacing the bulb, make sure that the contact springs are holding the bulb securely.

Wiper Blades

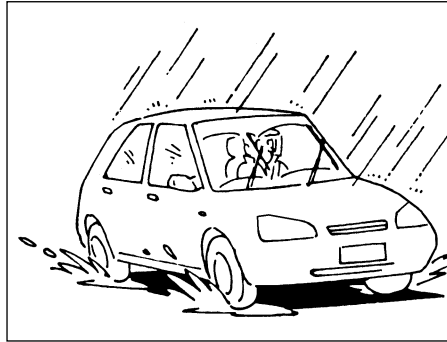

54G129

If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blades, follow the procedures below.

NOTICE


To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.

NOTE:

Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult a Maruti Suzuki authorised workshop for proper replacement method.

INSPECTION AND MAINTENANCE

For windshield wipers:

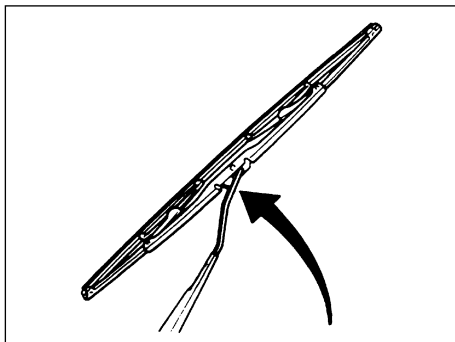


70G119

- 1) Hold the wiper arm away from the window.


NOTE:

When raising both of the front wiper arms, pull the driver's side wiper arm up first. When returning the wiper arms, lower the passenger's side wiper arm first. Otherwise, the wiper arms may interfere with each other.

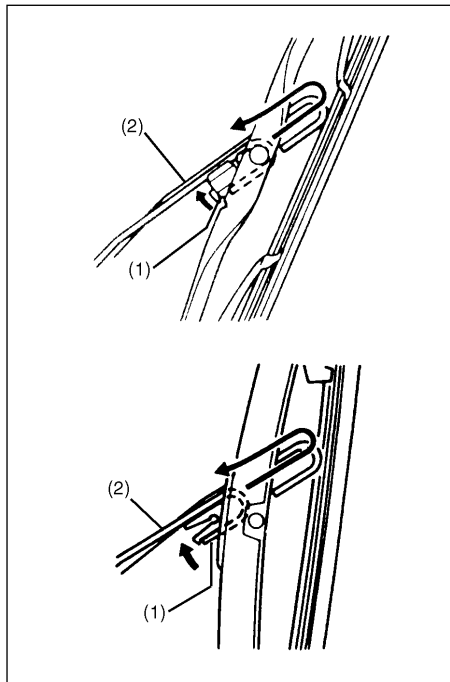


54G130

- 2) Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.
- 3) Unlock the lock end of the wiper blade and slide the blade out as shown.

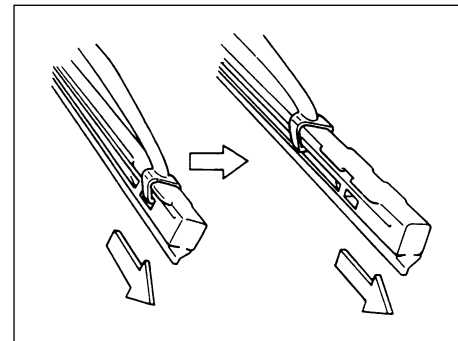


60A260

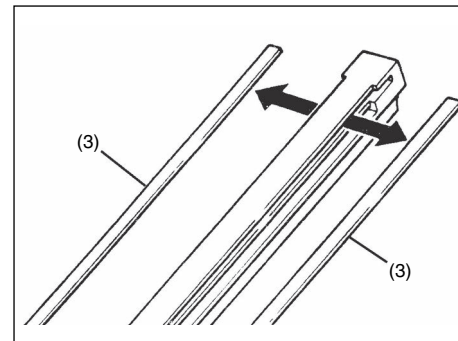


71LMT0708

(3) Retainer

- 4) If the new blade is provided without the two metal retainers (3), move them from the old blade to the new one.

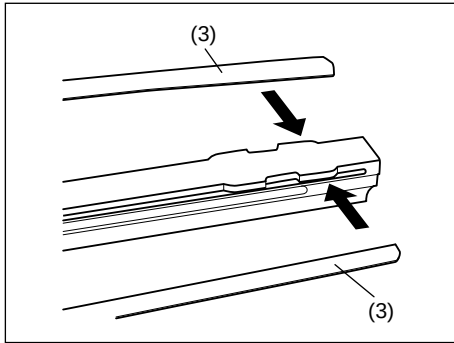

73R0194

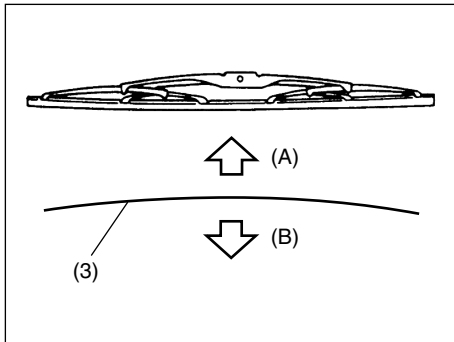


60MH072

(A) Up
(B) Down

NOTE:

When you install the metal retainers (3), make sure the direction of metal retainers as shown in the above illustrations.

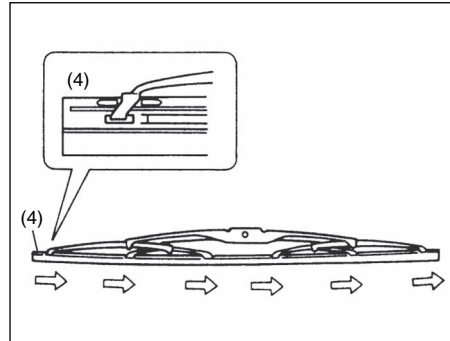


71LMT0707

(4) Locked end

- 5) Install the new blade in the reverse order of removal, with the locked end (4) positioned toward the wiper arm. Make sure the blade is properly retained by all the hooks. Lock the blade end into place.
- 6) Reinstall wiper frame to arm, making sure that the lock lever is snapped securely into the arm.

Windshield Washer Fluid

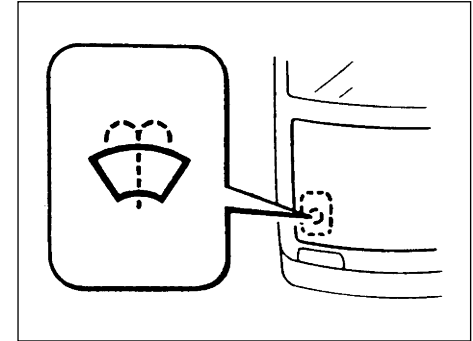

80JM078

Check that there is washer fluid in the tank. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

WARNING

Do not use radiator antifreeze solution in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also can damage your vehicle's paint.

NOTICE


- Damage may result if the washer motor is operated with no fluid in the washer tank.

Air Conditioning System

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.


Air conditioner filter replacement

Since special procedures are required, ask a Maruti Suzuki authorised workshop for this job.

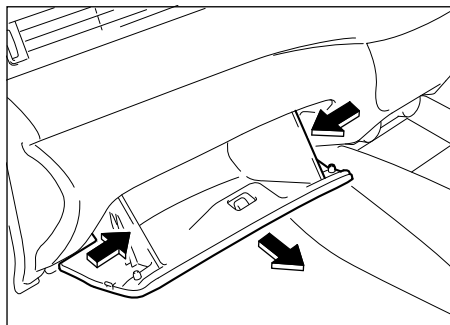

73R0201

- 1) To approach the air conditioner filter, remove the glove box by pressing both sides of the glove box inward and pulling it out.

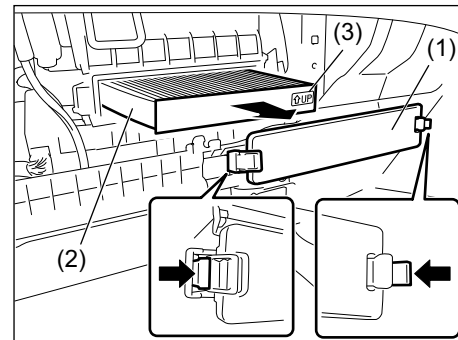


73R0202

- 2) Remove the cover (1) and pull out the air conditioner filter (2).

NOTE:

When you install a new filter, check that the UP mark (3) faces upward.

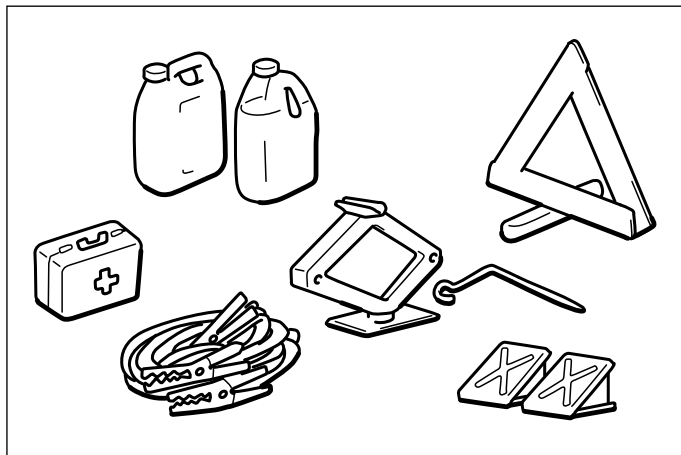


60G411


EMERGENCY SERVICE

Tyre Changing Tool	7-1
Jacking Instructions	7-4
Jump-Starting Instructions	7-9
Towing your vehicle	7-10
Engine trouble: Starter does not operate	7-11
Engine trouble: Does not start	7-11
Engine trouble: Overheating	7-11
Warning Triangle	7-12

Tyre Changing Tool

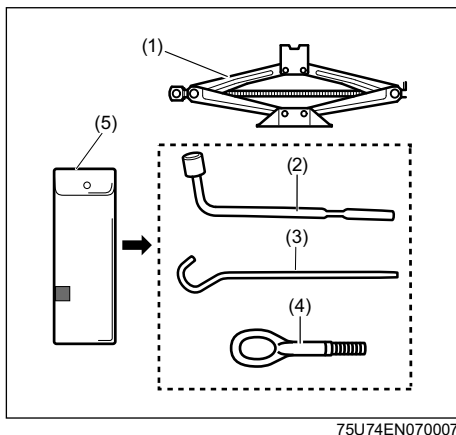


- (1) Jack
- (2) Wheel wrench
- (3) Jack handle
- (4) Towing Eye
- (5) Tool bag

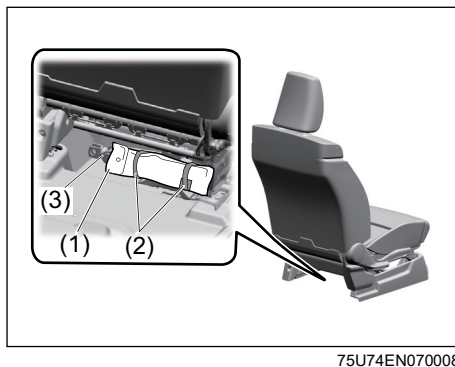

The tyre changing tools stowed in the tool bag (1) under the driver's seat.


Slide the driver's seat forward. Remove the fixing bands (2) from the tool bag (1) fixed to the jack (3) and take out the tool bag (1).

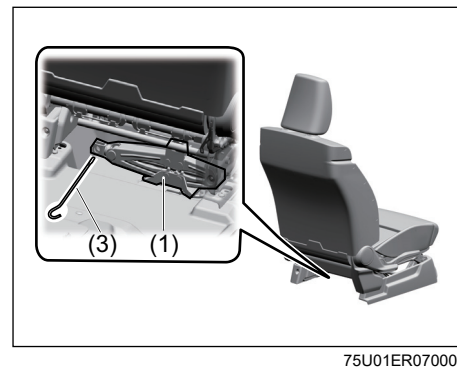

To remove the jack (1), turn the jack shaft (at the left side of the seat) counterclockwise by hand and pull the jack out of the storage bracket from the front side of the seat.


NOTE:

If it is difficult to turn the shaft by hand, use jack handle (3) as shown in the illustration.

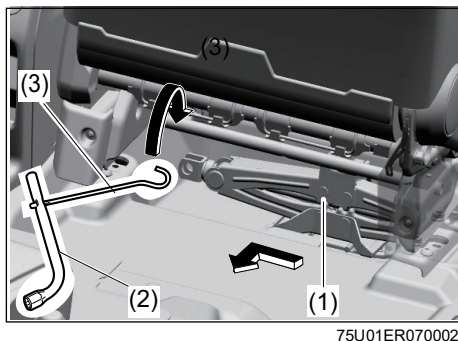


NOTE:


If you are difficult to use the jack handle (3), use jack handle and wheel wrench (2) as shown in the illustration.

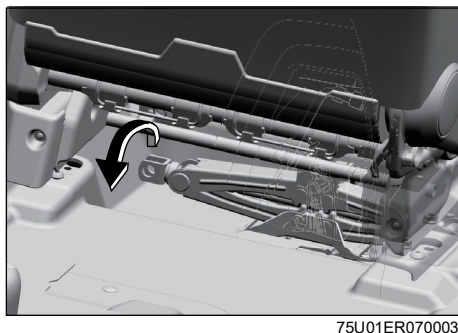


To stow the jack, place it in the storage bracket and turn the shaft clockwise with hand.

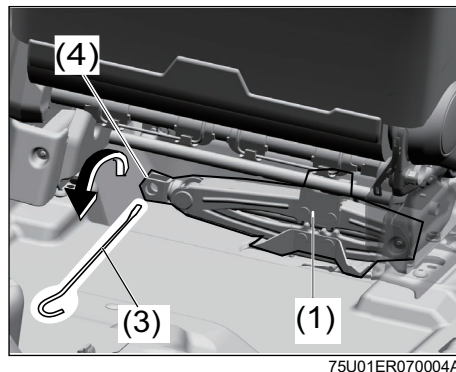

After temporarily holding the jack (1) until it contacts the storage bracket, turn the shaft (4) approximately 90° to 180° by using jack handle (3) to securely hold the jack in place.

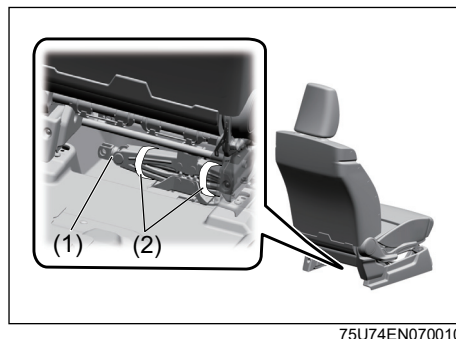

Set the fixing bands (2) to the jack (1) first on the positions as showing in the illustration.

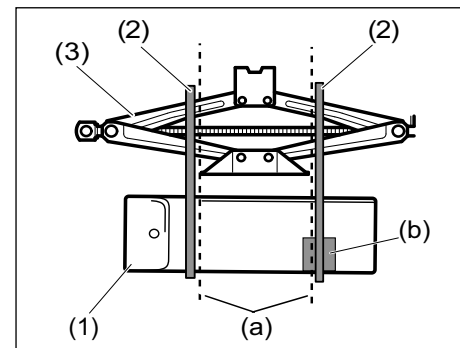

(a) Guidelines of the fixing positions of the fixing bands

(b) Marking of the tool bag for fixing


After using the tyre changing tools, put them back into the tool bag (1) and fix the tool bag (1) by using the fixing bands (2) that have already set to the jack (3) on the position (a) as showing in the illustration.

NOTE:

The fixing band should be align with the marking (b) of the tool bag.

EMERGENCY SERVICE

Stow the tool bag (1) at the original position under the driver's seat.

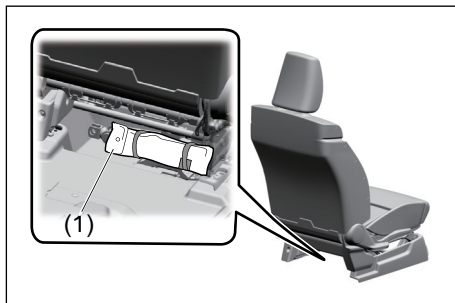

75U74EN070011

WARNING


After using the tyre changing tools, stow them securely or they can cause injury if an accident occurs.

CAUTION

The jack should be used only to change wheels. It is important to read the jacking instructions in this section before attempting to use the jack.

The spare tyre is stowed under the rear floor.

To remove the spare tyre:

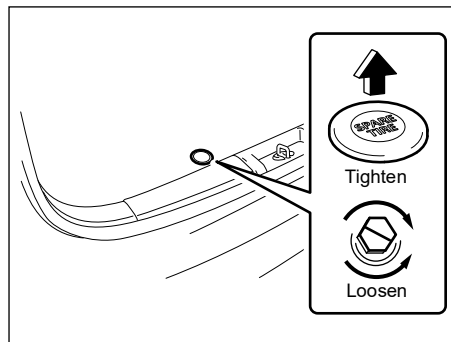


73R0127

- 1) Remove the cap and use a wheel wrench to loosen the hook bolt of the spare tyre holder. Then, rotate using the end of the jack handle.

NOTICE

Loose the spare tyre holder hook bolt until you can remove the hook by yourself. If the bolt is loosen too much, the hook might off and the spare tyre might drop off to the ground.

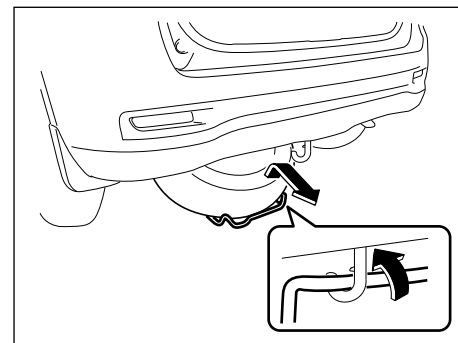

73R0128

- 2) Unhook the spare tyre holder and lower it slowly.
- 3) Remove the tyre.

To install the spare tyre:

- 1) Install the spare tyre facing up the outside of the wheel in the reverse order of removal.
- 2) Tighten the spare tyre holder hook bolt securely.

WARNING

Do not drive your vehicle with the loose spare tyre holder hook bolt, otherwise it may come loose or the spare tyre may drop off, which can result in an accident.

NOTICE


Tighten the spare tyre holder hook bolt securely. However, do not overtighten the bolt, it may be warped or broken.

Tightening torque for the spare tyre holder hook bolt
30 Nm (3.0 kg-m)

NOTICE

Make sure that the spare tire is fixed securely. Loosely fixed tire may cause noise during driving. However, do not overtighten the bolt, it may be warped or broken.

Jacking Instructions

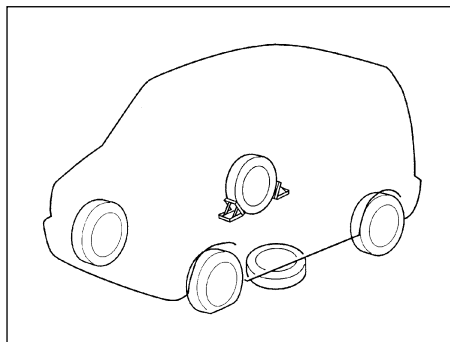

75F062


- 1) Place the vehicle on level, hard ground.
- 2) Set the parking brake firmly and shift into "R" (Reverse).

⚠ WARNING

- Shift into "R" (Reverse) when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.


- 3) Turn on the hazard warning switch if your vehicle is near traffic.
- 4) Block the front and rear of the wheel diagonally opposite of the wheel being lifted.

- 5) Place the spare tyre near the wheel being lifted as shown in the illustration in case the jack slips.

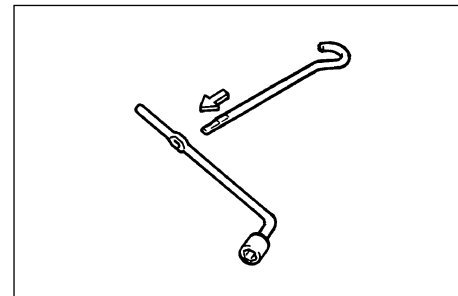


54G253

EMERGENCY SERVICE

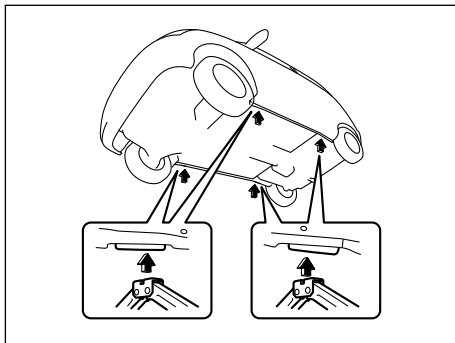

73R0190

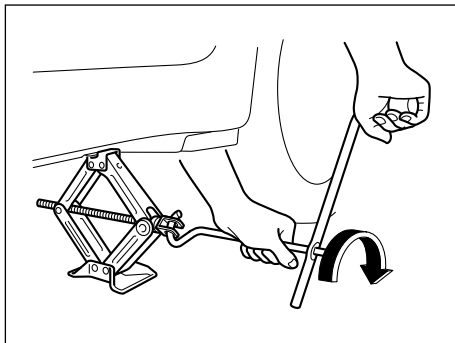

73R0191

- 6) Position the jack at an angle as shown in the illustration and raise the jack by turning the jack handle clockwise until the jack-head groove fits around the jacking bar beneath the vehicle body.


- 7) Continue to raise the jack slowly and smoothly until the tyre clears the ground. Do not raise the vehicle more than necessary.

WARNING

- Use the jack only to change wheels on level, hard ground.
- Never jack up the vehicle on an inclined surface.
- Never raise the vehicle with the jack in a location other than the specified jacking point (shown in the illustration) near the wheel to be changed. Especially, do not raise the vehicle with a jack at a part of the torsion beam which is located under the vehicle body, between rear wheels.
- Make sure that the jack is raised at least 51 mm (2 inches) before it contacts the flange. Use of the jack when it is within 51 mm (2 inches) of being fully collapsed may result in failure of the jack.
- Never get under the vehicle when it is supported by the jack.
- Never run the engine when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.

Raising vehicle with garage jack

- Apply the garage jack to one of the points indicated below.
- Always support the raised vehicle with jack stands (commercially available) at the points indicated below.

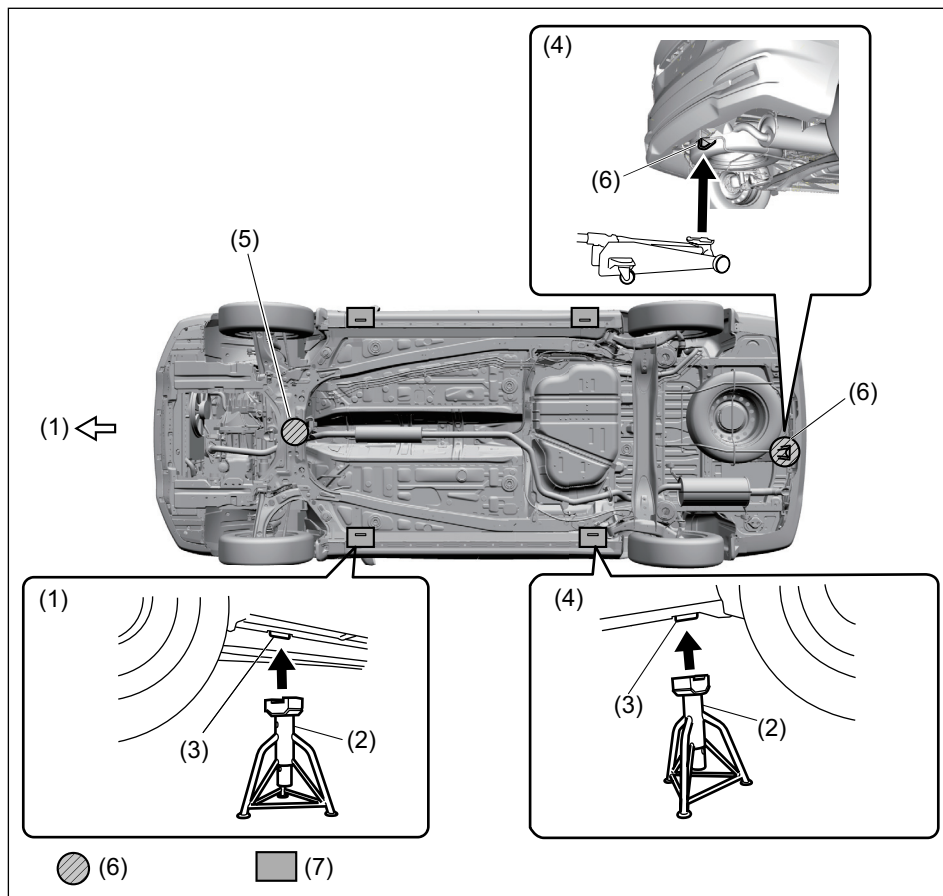

75U74E05000x

- (1) Front
- (2) Jack stand
- (3) Jacking point for onboard jack
- (4) Rear
- (5) Front suspension frame
- (6) Jacking point for garage jack
- (7) Application point for two-column lift and jack stand

⚠ WARNING


As the vehicle may get damaged or an accident may occur, observe the following points.

- Observe the designated points shown in the illustrations.
- When holding the lifted vehicle, use the rigid rack.
- When jacking up the front side or the rear side only, place a chock (commercially-available product) on front and back of the grounded tyre.

NOTICE

- Never apply a garage jack to the exhaust pipe or engine undercover and rear torsion beam.
- When you apply a garage jack to the rear jacking point, it may interfere with the rear bumper depending on the shape of the garage jack.

EMERGENCY SERVICE

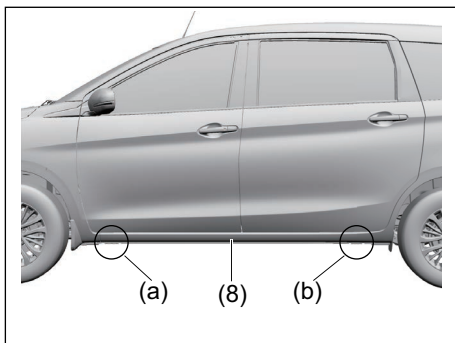

75U74EN070006

- (a) Specified position of jack stand for the front side
(b) Specified position of jack stand for the rear side

NOTICE

If you use the jack stand (2) in the condition that it touches the side skirt (8), the side skirt may be broken or damaged.

When using the jack stand, make sure that it does not touch the side skirt.

NOTE:

For more details, please contact a Maruti Suzuki authorised workshop.

Changing Wheels

⚠ WARNING

- Never change a wheel in traffic lane. Always move the vehicle off the road on level, hard ground away from traffic for changing a wheel. For any further assistance contact your nearest Maruti Suzuki authorised workshop.

To change a wheel, use the following procedure:

- 1) Remove the jack, tools and spare wheel from the vehicle.
- 2) Loosen, but do not remove the wheel nuts.
- 3) Jack up the vehicle (follow the jacking instructions in this section).


⚠ WARNING

- Shift into “R” (Reverse) when you jack up the vehicle.
- Never jack up the vehicle with the transmission in “N” (Neutral). Otherwise, unstable jack may cause an accident.

⚠ CAUTION


Immediately after the vehicle has been driven, the wheels, the wheel nuts and the area around the brakes might be extremely hot. Touching these areas may cause burn injury. Do not touch these areas, immediately after the vehicle has been driven.

- 4) Remove the wheel nuts and wheel.

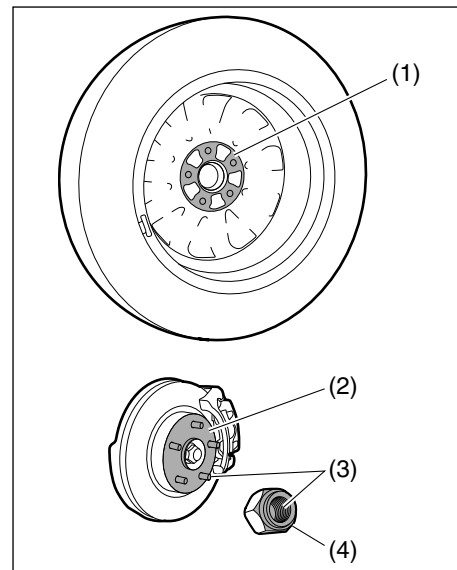

65J4033

- 5) Clean any mud or dirt off from the surface of the wheel (1), hub (2), thread part (3) and surface of the wheel nuts (4) with a clean cloth. Clean the hub carefully; it may be hot from driving.
- 6) Install the new wheel and replace the wheel nuts with their cone shaped end facing the wheel. Tighten each nut snugly by hand until the wheel is securely seated on the hub.

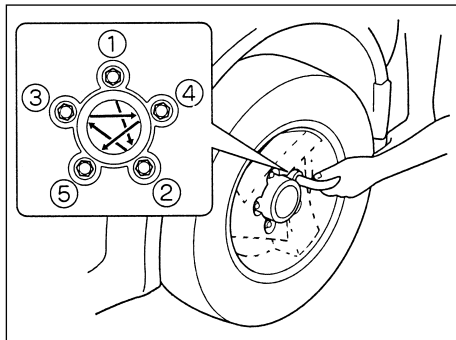

81A057


Tightening torque for wheel nuts 100 Nm (10.2 kg-m)

- 7) Lower the jack and fully tighten the nuts with a wheel wrench in numerical order as shown in the illustration.

⚠ WARNING

Use genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident. If you do not have a torque wrench, have the wheel nut torque checked by a Maruti Suzuki authorised workshop.

Full Wheel Cover

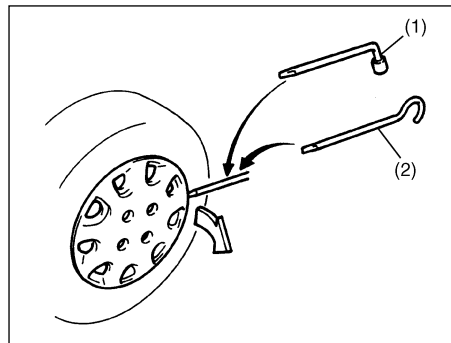


60G309

(1) or (2) Flat end tool

Your vehicle includes two tools, a lug wrench and a jack crank, one of which has a flat end.

Use the tool with the flat end to remove the full wheel cover, as shown in the illustration.

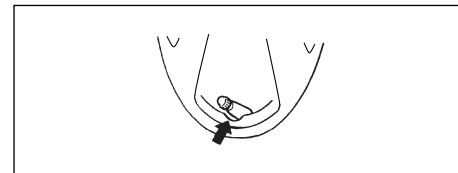

60MH074

When installing the cover, make sure that it is positioned so that it does not cover or foul the air valve.

After Changing Wheels

Stow the tyre changing tools (jack, jack handle and lug wrench) in place. Also, stow the flat tyre in the spare tyre stowed position. Refer to "Tyre Changing Tool" in this section.

NOTICE

Repair or replace the flat tyre immediately. If the flat tyre is placed in the spare tyre stowed position for long time, it can cause vehicle shakiness, noise, or scratches.

Jump-Starting Instructions

⚠ WARNING

- Never attempt to jump-start your vehicle if the lead-acid battery appears to be frozen. Lead-acid batteries in this condition may explode.
- When making jump lead connections, be certain that your hands and the jump leads remain clear from pulleys, belts or fans.
- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the lead-acid battery or an explosion may occur. Never smoke when working near the lead-acid battery.
- If the booster lead-acid battery you use for jump-starting is installed in another vehicle, make sure the two vehicles are not touching each other.
- If your lead-acid battery discharges repeatedly, for no apparent reason, have your vehicle inspected by a Maruti Suzuki authorised workshop.

(Continued)

⚠ WARNING

(Continued)


- To avoid harm to yourself or damage to your vehicle or lead-acid battery, follow the jump-starting instructions below. If you are in doubt, call for qualified road service.

NOTICE

Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter. Use jump leads to start a vehicle with a weak or flat battery.

Jump-Starting

- 1) Use only a 12-volt battery to jump-start your vehicle. Position the good 12-volt battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, check that two vehicles do not touch each other. Set the parking brakes fully on both vehicles.
- 2) Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).

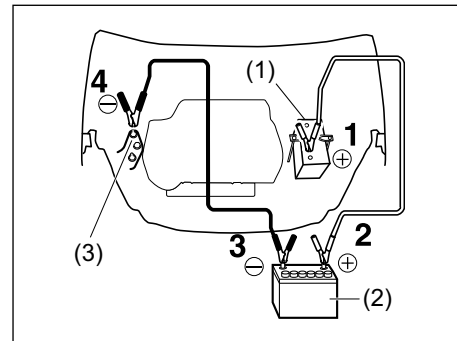

54P000804

3) Connect jump leads as follows:

1. Connect one end of the first jump lead to the positive (+) terminal of the discharged battery (1).
2. Connect the other end to the positive (+) terminal of the booster battery (2).
3. Connect one end of the second jump lead to the negative (-) terminal of the booster battery (2).
4. Make the final connection to an unpainted, heavy metal part (i.e. engine mount bolt (3)) of the engine of the vehicle with the discharged battery (1).

⚠ WARNING

Never connect the jump lead directly to the negative (–) terminal of the discharged lead-acid battery, or an explosion may occur.

⚠ CAUTION

Connect the jump lead to the engine mount bolt securely. If the jump lead disconnects from the engine mount bolt because of vibration at the start of the engine, the jump lead could be caught in the drive belts.

- 4) If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
- 5) Start the engine of the vehicle with the discharged lead-acid battery.
- 6) Remove the jump leads in the exact reverse order in which you connected them.

Towing your vehicle

If you need to have your vehicle towed, contact a professional service. Maruti Suzuki authorised workshop can provide you with detailed towing instructions.

NOTICE


Observe the following instructions when towing your vehicle.

- To help avoid damage to your vehicle during towing, proper equipment and towing procedures must be used.
- Using the frame hook, tow your vehicle on paved roads for short distances at low speed.

2-Wheel Drive (2WD)

The vehicle may be towed using either of the following methods.

- 1) From the front, with the front wheels lifted and the rear wheels on the ground. Before towing, make sure that the parking brake is released.
- 2) From the rear, with the rear wheels lifted and the front wheels on the ground, provided the steering and drivetrain are in operational condition. Before towing, make sure that transmission is in neutral, the steering wheel is unlocked the ignition key should be in "ACC" position, and the steering wheel is secured with a clamping device designed for towing service.

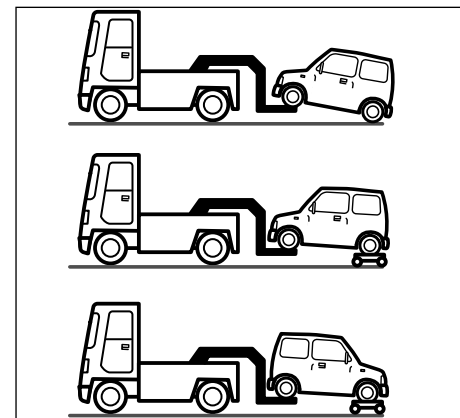

67T00160

NOTICE

The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.

Engine trouble: Starter does not operate

- 1) Try turning the ignition switch to "START" position with the headlights turned on to determine the lead-acid battery condition. If the headlights go excessively dim or go off, it usually means that either the lead-acid battery is discharged or the lead-acid battery terminal contact is poor. Recharge the lead-acid battery or correct lead-acid battery terminal contact as necessary.
- 2) If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by a Maruti Suzuki authorised workshop.

Engine trouble: Does not start

Make sure that your vehicle has enough fuel and lead-acid battery.

If the engine does not start under very cold condition, press the accelerator pedal all the way to the floor and hold it while cranking the engine.

Refer to "Starting / Stopping Engine in operating your vehicle section.

If the engine still does not start have your vehicle inspected at a Maruti Suzuki authorised workshop.

- Do not operate the starter motor for more than 12 seconds.

Engine trouble: Overheating

The engine could overheat temporarily under severe driving conditions. If the engine coolant temperature gauge indicates overheating during driving:


- 1) Turn off the air conditioner, if equipped.
- 2) Take the vehicle to a safe place and park.
- 3) Run the engine at a normal idle speed for a few minutes until the indicator is within the normal, acceptable temperature range between "H" and "C".

WARNING

If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to cool it. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.

If the temperature indication does not come down to within the normal, acceptable range:

- 1) Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.
- 2) Check the coolant level in the reservoir. If it is found to be lower than "LOW" line, check radiator, water pump and radiator hoses for leakage. If leakage that may cause overheating is found, do not run the engine until these problems have been corrected.
- 3) If leakage is not found, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to "Engine Coolant" in "INSPECTION AND MAINTENANCE" section.)

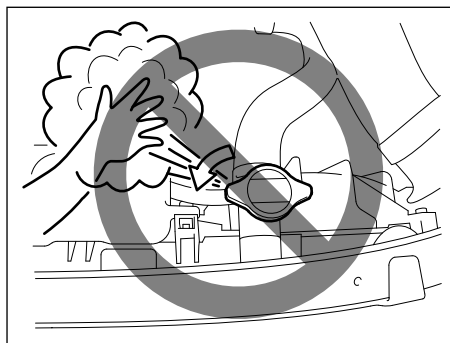


79J007

⚠ WARNING


- It is hazardous to remove the radiator cap (or degassing tank cap) when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.
- To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan and air-conditioner fan (if equipped). These electric fans can automatically turn on without warning.

Warning Triangle

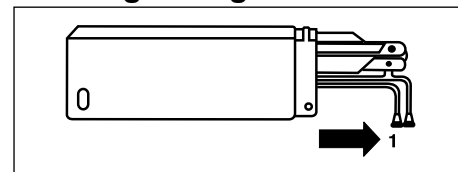

MH007001


In case of vehicle break-down or during emergency stopping, where, your vehicle could become a potential traffic hazard, keep the warning triangle, provided with your vehicle, on the road free from any obstacles behind your vehicle so as to warn the approaching traffic, at an approximate distance of 50-100 m. The reflecting side of the triangle should face the on coming traffic. Please activate the hazard warning lamps before alighting the vehicle to keep the warning triangle.

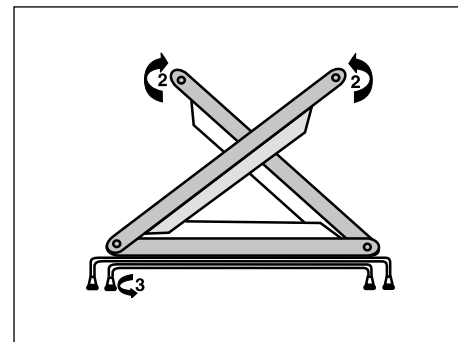

MHO-07-014

EMERGENCY SERVICE


- Remove the warning triangle carefully from the cover as shown by arrow 1.
- Open both the reflector arms as shown by arrow and lock the arms with each other with the clip provided in the right arm. Open the bottom stand in counter clock-wise direction as shown by arrow 3. Position the warning triangle behind the vehicle on a plain surface.
- Reverse the removal procedure for keeping inside the cover.
- Place the warning triangle below 3rd row seat.

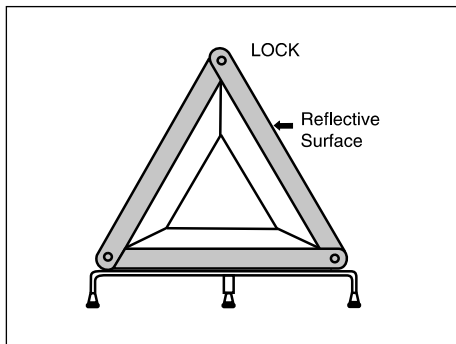

MHO-07-015

APPEARANCE CARE

Corrosion Prevention	8-1
Vehicle Cleaning	8-2

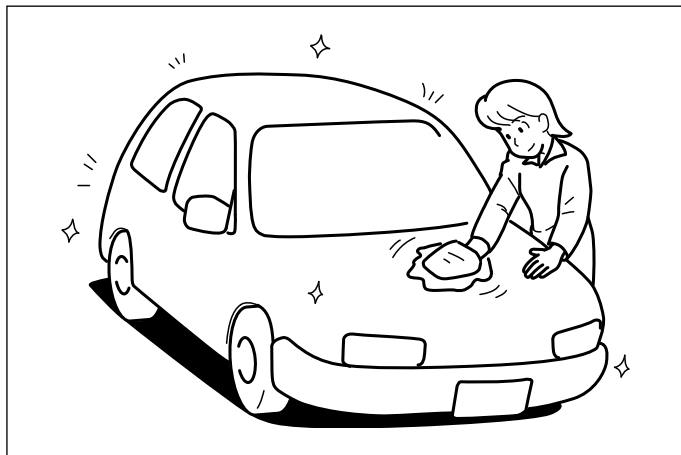

60G412

APPEARANCE CARE

Corrosion Prevention

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

Important Information about Corrosion

Common causes of corrosion

- 1) Accumulation of road salt, dirt, moisture, or chemicals in hard-to-reach areas of the vehicle underbody or frame.
- 2) Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.

Environmental conditions which accelerate corrosion

- 1) Road salt, dust control chemicals, sea breeze or industrial pollution will all accelerate the corrosion of metal.
- 2) High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.
- 3) Moisture in certain areas of a vehicle for an extended period of time may promote corrosion even though other body sections may be completely dry.
- 4) High temperatures will cause an accelerated rate of corrosion to parts of the vehicle which are not well-ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

How to Help Prevent Corrosion

Wash your vehicle frequently

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing. Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underside, as clean and dry as possible. If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the year.

For washing instructions, refer to "Vehicle Cleaning" section.

Remove foreign material deposits

Foreign material such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Be sure that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer's directions when using these special cleaners.

Repair finish damage

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a qualified body shop make the repair.

Keep passenger and luggage compartments clean

Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion. Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used for off-road driving or in wet weather.

Certain cargos such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If they are spilled or leaked, clean and dry the area immediately.

Park your vehicle in a dry, well-ventilated area

Do not park your vehicle in a damp, poorly ventilated area. If you often wash your vehicle in the garage and place it there in wet condition, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.

⚠ WARNING

Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter, exhaust pipes, etc. A fire could be started if the undercoating substance becomes overheated.

Vehicle Cleaning



76G044S

⚠ WARNING

When cleaning the interior or exterior of the vehicle, do not use flammable solvents such as lacquer thinners, gasoline and benzene. Also, do not use cleaning materials such as bleaches and strong household detergents. The materials could cause personal injury or damage to the vehicle.

APPEARANCE CARE

Cleaning Interior

Leather upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap or saddle soap solution, wipe dirt off with a clean damp soft cloth. To remove soap, wipe the areas again with a soft cloth dampened with water. Wipe the areas dry with a soft dry cloth. Repeat this until the dirt or stain is removed, or use a commercial leather cleaner for tougher dirt or stains. If you use a leather cleaner, carefully follow the manufacturer's instructions and precautions. Do not use solvent type cleaners or abrasive cleaners.

NOTE:

- *In order to keep leather upholstery looking good, it should be cleaned at least twice a year.*
- *If leather upholstery becomes wet, immediately wipe it dry with tissue paper or a soft cloth. Water may cause leather to harden and shrink if it is not wiped off.*
- *When parking on sunny days, select a shady place or use a sunshade. If leather upholstery is exposed to direct sunlight for a long time, it may discolor and shrink.*
- *As is common with natural materials, leather is inherently irregular in grain and cowhide has spots in its natural state. These do not affect the performance of the leather in any way.*

Vinyl upholstery

Prepare a solution of soap or mild detergent mixed with warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.

Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.

Fabric upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

CAUTION

- **Do not spill liquid or semi-solid on the front passenger's seat. If you spill it on the front passenger's seat, immediately wipe it dry with a soft cloth. Contact of liquid with sensor may impact the function of seat belt reminder sensor.**
- **Do not place any sharp or heavy object on passenger seat which can penetrate through seat upholstery and can cause damage to sensor.**

Fabric upholstery (For front passenger seat)

Do not use liquid for cleaning as it may penetrate the fabric and damage the seat sensor.

Seat belts

Clean seat belts with a mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric in the belts.

Vinyl floor mats

Ordinary dirt can be removed from vinyl with water or mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.

Carpets


Remove dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.

Instrument panel and console

Remove loose dirt with a vacuum cleaner. Gently wipe dirt off with a tightly squeezed damp clean cloth. Repeat this until the dirt is removed.

⚠ WARNING

Do not use chemical products that contain silicon to wipe electrical components such as the air conditioning system, audio, navigation system, or other switches. These will cause damage to the components. Do not spray water or any liquid directly on instrument cluster or any other electrical or electronic components. This may cause damage and/or lead to non-functioning of the part or may cause fire.

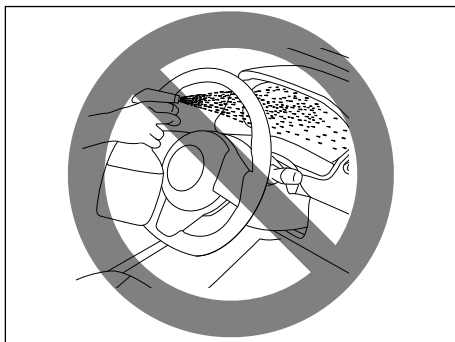

81RM08005

⚠ WARNING

- Do not spray the interior with water or other liquids. If the navigation equipment, audio components, switches, wiring under the floor, or other electrical parts become wet, there is a risk of fire or malfunction, and the SRS airbag system could fail to function normally. If you pour water or spill a drink in the vehicle, consult a Maruti Suzuki authorised workshop as soon as possible for inspection.

NOTICE

- Liquid such as liquid aromatics, soft drinks or juice may cause discoloration, wrinkles, and cracking to resin-based parts and textiles. Immediately wipe it dry with tissue paper or a soft cloth.
- Do not leave leather products with color, fur or vinyl products, etc. in your vehicle for long periods. It may cause discoloration or deterioration of interior.

Cleaning Exterior

NOTICE

- When repairing scratches on painted surfaces, consult a Maruti Suzuki authorised workshop. Using an inappropriate material for repair could cause damage to the paint.
- It is important that your vehicle be kept clean and free from dirt. Failure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.


Washing

⚠ WARNING

- Never attempt to wash and wax your vehicle with the engine running.
- When cleaning the underside of the body and fender, where there may be sharp-edged parts, wear gloves and a long-sleeved shirt to protect your hands and arms from being cut.
- After washing your vehicle, carefully test the brakes before driving to make sure they have maintained their normal effectiveness.

APPEARANCE CARE

Washing by hand

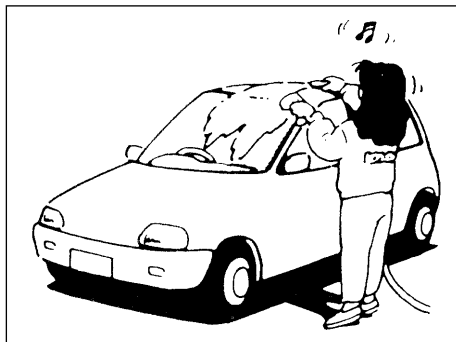

60B212S

When washing the vehicle, park it in the place where direct sunlight does not fall on it as much as possible and follow the instructions below:

- 1) Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.

NOTICE

When washing the vehicle:

- Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.
- To avoid damaging engine components, do not use pressurized water in the engine compartment.

- 2) Rinse the body to loosen the dirt. Remove dirt and mud from the body exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

NOTICE

To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Follow the above procedure.



81RM08006

- 3) Wash the entire exterior with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.

NOTICE

When using a commercial car wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.

- 4) Once the dirt has been completely removed, rinse off the detergent with running water.
- 5) Wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.
- 6) Check carefully for damage to painted surfaces. If there is any damage, touch up the damage following the procedure below:
 1. Clean all damaged spots and allow them to dry.
 2. Stir the paint and touch up the damaged spots lightly using a small brush.
 3. Allow the paint to dry completely.

Washing by an automatic car wash

NOTICE


- If you use an automatic car wash, check that your vehicle's body parts, such as antenna and spoilers, cannot be damaged. If you are in doubt, consult the car wash operator for advice.
- Do not wash a car with a roof end spoiler in an automatic car wash. It may get caught in the car wash and damage the spoiler.

Washing by a high-pressure cleaner

NOTICE

- If you use a high-pressure cleaner, keep away the nozzle from your vehicle sufficiently.
- Bringing the nozzle to your vehicle too close or pointing the nozzle to the opening of front grill or bumper etc. can cause damage and malfunction of the vehicle body and parts.
 - Pointing the nozzle to door glasses and door frames can allow water to enter the cabin.

Waxing

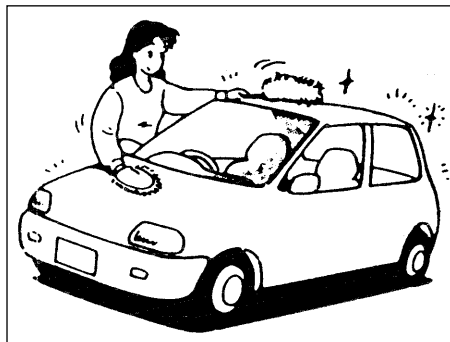

60B211S

After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.

- Only use waxes and polishes of good quality.
- When using waxes and polishes, observe the precautions specified by the manufacturers.

NOTE:

Do not use wax on plastic parts that are not coated. Waxing these surfaces could result in a whitened or uneven appearance.

NOTICE

- If water contacts the engine compartment, it may cause the engine malfunction or the electrical components to fail. Do not apply water to the engine compartment when washing the vehicle.

(Continued)




84S09240

NOTICE

(Continued)

- When washing or waxing the vehicle, do not lean on the vehicle body or do not push it hard. This might cause it to deform.

MEMO

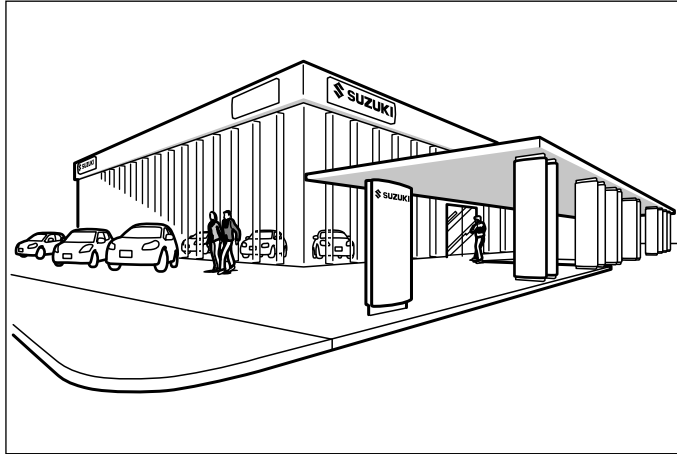

81MM01001


SPECIFICATIONS

Vehicle Identification	9-1
FASTag (if equipped)	9-1
High security Registration Plate (HSRP)	9-2
Provision for AIS140: Intelligent Transportation	
System (ITS)	9-3
Fuel Recommendation	9-4
SPECIFICATIONS	9-5


SPECIFICATIONS

Vehicle Identification

Chassis Serial Number

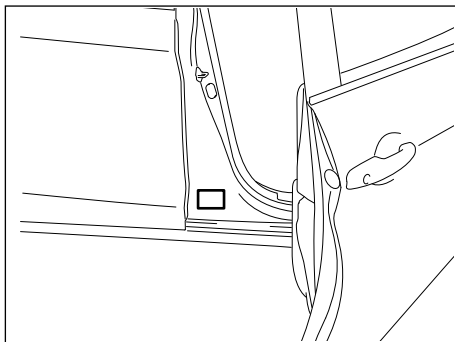

73R0135

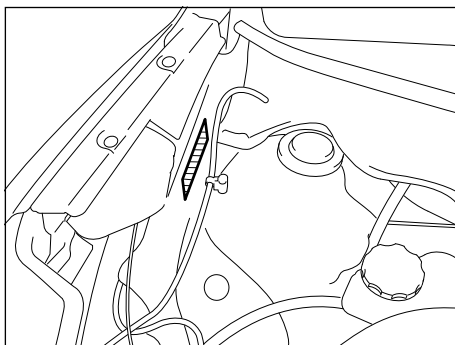


73R0136

The chassis and/or engine serial numbers are used to register the vehicle. They are

also used to assist a Maruti Suzuki authorised workshop when ordering or referring to special service information. Whenever you have occasion to consult a Maruti Suzuki authorised workshop, remember to identify your vehicle with this number. Should you find the number difficult to read, you will also find it on the identification plate.

Engine Serial Number

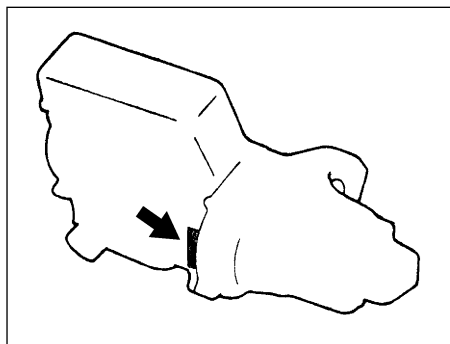


60G128

The engine serial number is stamped on the cylinder block as shown in the illustration.


FASTag (if equipped)

As per Ministry of Road Transport and Highways, the FASTag (1) is mandatory for each vehicle for the purpose of electronic toll collection or any other purpose as may be defined by the Government of India. In case of any damage to FASTag or replacement of front windscreen, please contact your nearest Maruti Suzuki authorised workshop.

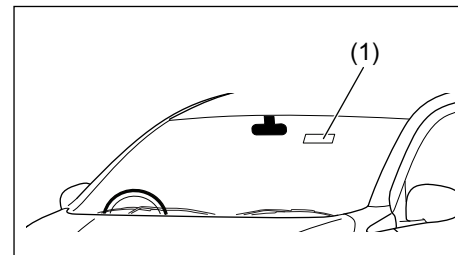

72RM09001

As seen from inside of the vehicle

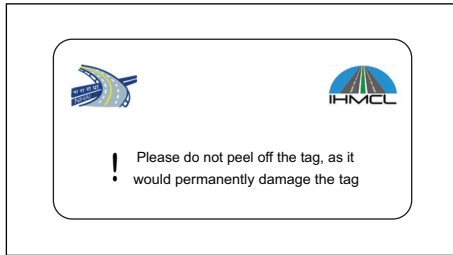


64MM01002

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

As seen from outside of the vehicle

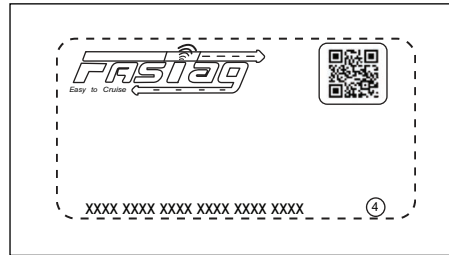

64MM01003

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

NOTE:

- Any attempt to remove the tag from the windscreen will result in permanent damage to the tag.
- Use of chemical cleaners to clean the windscreen area where the tag is mounted can damage the tag.
- Use of any sharp objects on the tag can damage the tag.


High Security Registration Plate (HSRP)

As per Ministry of Road Transport and Highways, every new vehicle must have HSRP.

HSRP contains:

- Front and rear HSRP, which will be fitted with 2 snap-locks each on number plate area.
- Third license plate on front windshield.

Third License Plate

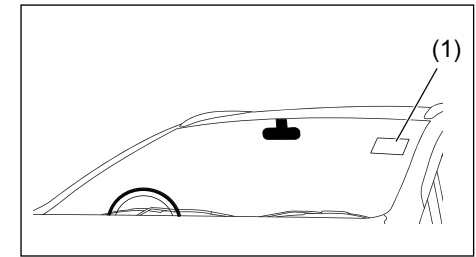


64MM01005

(1) Third license plate

SPECIFICATIONS

Third license plate - As seen from outside of the vehicle

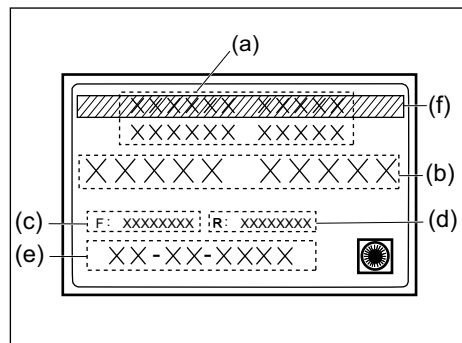

72RM09002

- (a) HSRP issuing authority name
- (a) Vehicle registration number
- (a) Unique laser number - Front plate
- (a) Unique laser number - Rear plate
- (a) Date of 1st registration
(in DD-MM-YYYY format)
- (a) Green strip (BS6 vehicle)

NOTE:


The picture shown is for indicative purpose only. Internal structure of actual label mounted on vehicle may be different.

NOTE:

- Any attempt to remove the third license plate from the windscreen will result in permanent damage to the label.

- Use of chemical cleaners to clean the windscreen area where the label is mounted can damage the same.
- Use of any sharp objects on the label can damage the label.
- In the event of any replacement of the third license plate may please contact the approved authority.

Third license plate - As seen from inside of the vehicle

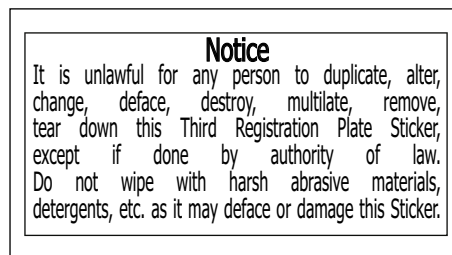

64MM01009

NOTE:

The picture shown is for indicative purpose only.


NOTE:

Color of third license plate (back) is as per HSRP regulation as defined by Ministry of Road Transport and highways.

Provision for AIS140: Intelligent Transportation System (ITS)

This vehicle has provision of Power Connector for fitment of AIS140 ITS device.

Power connector is located under the dashboard as shown in below illustration.

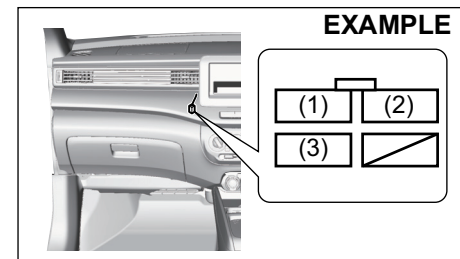

72RM10001

Power connector description

(1)	Battery
(2)	Ground
(3)	Ignition signal

Fuel Recommendation

Petrol Engine

To avoid damaging catalytic converter, you must use unleaded gasoline with an octane number (RON) of 91 or higher.

Gasoline/Ethanol blends

Blends of unleaded gasoline and ethanol, also known as gasohol, are commercially available in the country and can vary with location. Gasoline Ethanol blend up to E20 can be used as fuel for this vehicle.

Gasoline containing MTBE

Unleaded gasoline containing MTBE (methyl tertiary butyl ether) may be used in your vehicle if the MTBE content is not greater than 15%. This oxygenated fuel does not contain alcohol.

CAUTION

Use of Spurious, low quality, adulterated fuel can cause damage to the engine & engine auxiliaries, affect functioning of engine and degrade engine performance including but not limited to seizure.

NOTICE

- The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative non-automatic system.
- Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

SPECIFICATIONS

SPECIFICATIONS

NOTE:

Specifications are subject to change without notice.

ITEM: Dimensions [#]		UNIT: mm
Overall length		4435
Overall width		1735
Overall height		1690
Wheelbase		2740
Track	Front	1510
	Rear	1520

ITEM: Mass (weight)*		UNIT: Kg	K15C ISG 5MT
Curb mass (weight)			1190
Gross vehicle mass (weight) rating			1760
Permissible maximum Axle Weight	Front		850
	Rear		965

- Details mentioned are related to all vehicle variants of Petrol and CNG.

* - Details mentioned are related to Petrol engine variants only. For CNG , may please refer to the CNG supplementary manual.

ITEM: Engine	
Type	K15C
Number of cylinders	4
Bore	74.0 mm
Stroke	85.0 mm
Piston displacement	1462 cm ³ (1462 cc)
Compression ratio	12.0 : 1

ITEM: Electrical		
Standard spark plug		NGK ILZKR6Q11
Lead-acid battery	Petrol	12V ISS N-55* ¹
	CNG	12V 34B19L
Lithium-ion battery		Maintenance free* ²
Fuses		See “INSPECTION AND MAINTENANCE” section.

*1 When battery replacement is necessary, use only N55 (Exide Conservo) battery. Else it may deteriorate performance of Smart Hybrid system.

*2 If the lithium-ion battery is completely discharged, the battery cannot be recharged. When replacing or disposing the lithium-ion battery, consult your Maruti Suzuki authorised workshop.

SPECIFICATIONS

ITEM: Lights		WATTAGE	BULB No.
Headlight	High beam	12V 60W/65W	HB3
	Low beam	12V 55W	H11
Turn signal light	Front	12V 21W	WY21W
	Rear	12V 21W	PY21W
Side turn signal light (on outside rearview mirror) ^{*1}		LED	
Position light		12V 5W	W5W
Tail/brake light ^{*1}		LED	
License plate light		12V 5W	W5W
Reversing light		12V 16W	W16W
Interior light		12V 10W	—
High mount stop light ^{*1}		LED	

ITEM: Wheels and Tyres	
Tyre size, front, rear and spare	185/65R15 88H ^{*2}
Rim size	15X5 1/2J
Tyre pressures	For the specified tyre pressure, see the Tyre Information Label located on the driver's door lock pillar.

- If you need to replace the following bulbs indicated in the above table, consult your Maruti Suzuki authorised workshop.

^{*1} Since the lights are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any light is defective.

^{*2} If you cannot prepare tyres with the specified load index rate and speed symbol, prepare tyres with higher load index rate and speed symbol.

ITEM: Capacities (approx.)		
Coolant (including reservoir tank)	"SUZUKI LLC: Super (Blue) Coolant" *1 "SUZUKI LLC: Standard (Yellow) Coolant" *1	4.5 L
Fuel tank	See "Fuel" in this section.	45 L [#]
Engine oil	Classification: API SN or SP ILSAC GF-6 Viscosity: SAE 0W-16	3.3 L (replacement with oil filter)
Transmission oil	"MARUTI GENUINE GEAR OIL 75W"	2.6 L
Brake fluid / Clutch fluid	MARUTI GENUINE BRAKE FLUID (MGBF) or DOT 3.	Refill to the proper oil level according to the instructions in "INSPECTION AND MAINTENANCE" section.

*1: The recommended coolant varies depending on your vehicle. Refer to "INSPECTION AND MAINTENANCE" section.

: The fuel tank capacity is slightly more than the recommended quantity of fuel that you can fill. The additional voluminous space is provided for safety and scientific reasons.

SERVICE NETWORK (AS ON 31.01.2026)

- MARUTI SUZUKI AUTHORISED DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS
- MARUTI SUZUKI NEXA DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS
- MARUTI SERVICE MASTER (MSM) : SERVICE, WARRANTY & SPARE PARTS
- MARUTI SERVICE ZONE (MSZ) : SERVICE, WARRANTY & SPARE PARTS
- MARUTI AUTHORISED SERVICE STATIONS (MASSs) : 'A' CATEGORY MASSs (**MARKED)
Free & paid Service, Major repairs & Accidental repairs
- 'B' CATEGORY MASSs (* MARKED)
Free & paid Service & Major repairs
- 'C' CATEGORY MASSs (##MARKED)
Free & paid Service & Minor repairs
- 'D' CATEGORY MASSs (#MARKED)
Free Service & Minor repairs

NOTE:

Certain MASSs are not authorised to undertake Warranty jobs. Customers are requested to approach only Maruti Suzuki Authorised Dealer Workshop / Maruti Suzuki Nexa Dealer Workshop / Maruti Service Master / Maruti Service Zone for Warranty jobs.

The charges and services may vary depending upon service network and location.

For latest Service Network details kindly visit www.marutisuzuki.com or contact our regional office / area office as mentioned below.

REGIONAL OFFICE	AREA COVERED
REGIONAL OFFICE (NORTH-I) MARUTI SUZUKI INDIA LIMITED 2nd FLOOR, 157 DIVINE , RAJPUR ROAD, DEHRADUN, UTTARAKHAND - 248001 PH:- 0135-2738549	UTTARAKHAND AND PART OF U.P.
REGIONAL OFFICE (NORTH-II) MARUTI SUZUKI INDIA LIMITED SCO: 39-40, SECTOR 8C, MADHYA MARG, CHANDIGARH - 160009 PH. NO.- 0172-2780056	PUNJAB, CHANDIGARH, PANCHKULA, ZIRAKPUR, MOHALI, JAMMU AND KASHMIR & LADAKH
REGIONAL OFFICE (NORTH-III) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, SUMMIT, PLOT NO. TCG 3/3, VIBHUTI KHAND, GOMTI NAGAR – LUCKNOW - 226010	PART OF U.P.
REGIONAL OFFICE (NORTH-IV) MARUTI SUZUKI INDIA LIMITED S.C.O. 81, FIRST FLOOR, SECTOR 5, PANCHKULA (HARYANA)-134109 PH : (0172) 2590056, 2580056	PART OF HARYANA AND HIMACHAL PRADESH
REGIONAL OFFICE (EAST-I) MARUTI SUZUKI INDIA LIMITED PLOT NO ID15, ACTION AREA ID, NEW TOWN KOLKATA-700156	WEST BENGAL, SIKKIM, ANDAMAN & NICOBAR
REGIONAL OFFICE (EAST-II) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, ROHINI, OPP. HOTEL APSARA, 56, CIRCULAR ROAD, LALPUR RANCHI - 834001, JHARKHAND PH.: - 0651-2563931/61	BIHAR, JHARKHAND
REGIONAL OFFICE (EAST-III) MARUTI SUZUKI INDIA LIMITED 5A, 5TH FLOOR, PEACE ENCLAVE 724, ULUBARI, G.S.ROAD, GUWAHATI-781007 (ASSAM) TELE: 0361-2734308/10/11/12	ARUNACHAL PRADESH, ASSAM, MANIPUR, MEGHALYA, MIZORAM, NAGALAND, TRIPURA

SERVICE NETWORK (AS ON 31.01.2026)

REGIONAL OFFICE (WEST-I) MARUTI SUZUKI INDIA LIMITED Plot No-GEN 25 + 25 B/2,TTC INDUSTRIAL AREA,PAWANE VILLAGE,THANE BELAPUR ROAD,NAVI MUMBAI- 400705 PH NO-022 45042300	PART OF MAHARASHTRA AND GOA
REGIONAL OFFICE (WEST-II) MARUTI SUZUKI INDIA LIMITED SACRED WORLD, 7TH FLOOR, NORTH BLOCK, UNIT NUMBER 708-715; JAGTAP CHOWK, WANAWADI, PUNE – 411 040 (MAHARASHTRA) PH. (020) 26856037 / 38 / 39	PART OF MAHARASHTRA
REGIONAL OFFICE (WEST-III) MARUTI SUZUKI INDIA LIMITED 211-213, 2ND FLOOR, ISCON MALL, ABOVE STAR INDIA BAZAR, SATELLITE, AHMEDABAD - 380015 PH NO - 079 – 40036660	GUJARAT, DADRA & NAGAR HAVELI, DAMAN AND DIU
REGIONAL OFFICE (SOUTH-I) MARUTI SUZUKI INDIA LIMITED 10th Floor, Block A, Global Infocity Park, No.40, Anna Nedunchalai, Kandanchavadi, Perungudi, Chennai, Tamil Nadu – 600096 PH. - 044 - 28233050 – 53	TAMILNADU AND PONDICHERY
REGIONAL OFFICE (SOUTH-II) MARUTI SUZUKI INDIA LIMITED #204, 2ND FLOOR, EMBASSY CLASSIC BUILDING,VITTAL MALLYA ROAD,BANGALORE- 560001, KARNATAKA. PH: (080) 41120018	KARNATAKA
REGIONAL OFFICE (SOUTH-III) MARUTI SUZUKI INDIA LIMITED 2ND FLOOR, TUTUS TOWERS, 32/1787 NH47- BYE PASS, PADIVATTOM, COCHIN- 682024	KERALA
REGIONAL OFFICE (SOUTH EAST-I) MARUTI SUZUKI INDIA LIMITED 101-102 FIRST FLOOR MAHAVIR CHAMBERS, LIBERTY SQUARE STANZA, HIMAYATH NAGAR, HYDERABAD-500029, TELANGANA CONTACT NO: 040-667299999	ANDHRA PRADESH, TELANGANA
REGIONAL OFFICE (SOUTH EAST-II) MARUTI SUZUKI INDIA LIMITED UTKAL SIGNATURE, UNIT NO. 605 & 606 (6TH FLOOR) NH-5, PAHAL, CUTTACK-BHUBANESWAR ROAD, BHUBANESWAR-752101, ODISHA PH. 0674-2914129, 0674-2914139 & 0674-2914229	ODISHA AND CHHATTISGARH
REGIONAL OFFICE (CENTRAL-I & II) MARUTI SUZUKI INDIA LIMITED Nelson Mandela Marg,Vasant Kunj II, Vasant Kunj, New Delhi, Delhi - 110070	DELHI
REGIONAL OFFICE (CENTRAL-III) MARUTI SUZUKI INDIA LIMITED 7TH POOJA TOWER, 3 GOPALPURA BYEPASS, TONK ROAD JAIPUR (RAJASTHAN)- 302018, CONTACT NO.: 0141-2550888	RAJASTHAN
REGIONAL OFFICE (CENTRAL-IV) MARUTI SUZUKI INDIA LIMITED 3RD FLOOR, COMMERCE HOUSE, 7 RACE COURSE ROAD INDORE (M.P) PIN CODE: 452001 CONTACT NO.: 07314069481/852/385.	MADHYA PRADESH

SERVICE NETWORK (AS ON 31.01.2026)

DETAILS OF AREA OFFICES	
Area Office Location	Area Office Address
Agra	Maruti Suzuki India Limited, 7th Floor, B-15/8, Shri Vrindavan Tower, Sanjay Place, Agra-282001 Ph:-0562-4052646/47
Bhopal	Maruti Suzuki India Limited, 522, 5th Floor Corporate Zone, Ashima Mall, Hoshangabad Road, Bhopal (M.P) Pin Code: 462 026 Contact : 0755 6051555
Calicut	Maruti Suzuki India Limited, Ground Floor, Aarpees Arcade, YMCA Cross Road, Opp. Indusind Bank, Kozhikode, Kerala -PIN 673001 Phone:- 0495-2723151
Coimbatore	Maruti Suzuki India Limited, Srivari Gokul Towers, First floor, (East wing), No.108/3, Race course, Coimbatore - 641018 Ph.- 0422-2221091
Hubli	Maruti Suzuki India Limited, Shiva Avenue, 2nd Floor, Gokul Road, Hubli - 580030, Ph: 0836-4259447
Jammu	Maruti Suzuki India Limited, Hall no: 315, A2,3rd Floor, South Block, Bahu Plaza, Jammu-180012 M: 9622066444/9622524343
Ludhiana	Maruti Suzuki India Limited, SCO No. 16/17, 4Th Floor, Fortune Chambers, Feroze Gandhi Market, Ludhiana-141001, Ph: 0161-4649764
Madurai	Maruti Suzuki India Limited, 3rd floor, ADR towers, Kalavasal, Theni Bye pass road, Madurai-625016 Ph. - 0452-4200203
Mangalore	Maruti Suzuki India Limited, F - 4,5,6, 1st Floor, Classic Gateway, Mahaveer Circle Pumpwell Mangalore – 575002 Ph. 0824 - 4112111

SERVICE NETWORK (AS ON 31.01.2026)

DETAILS OF AREA OFFICES	
Area Office Location	Area Office Address
Nagpur	Maruti Suzuki India Limited, Plot No.244, 1st Floor, Narayani House, Hill Road, Dharampeth Extension, Nagpur - 440010 (Maharashtra) Ph. (0712) 2225808
Nashik	Maruti Suzuki India Limited, Plot No.202, Rushiraj Towers, Jehan Circle, Gangapur Road, Nashik - 422 005 (Maharashtra) Ph. (0253) 6698551
Patna	Maruti Suzuki India Limited, 307-308, Vasundhara Metro Mall, Rajapur Pul, East Boring Canal Road, Patna - 800001, Bihar Phone - 0612-2559145
Raipur	Maruti Suzuki India Limited, 629-630, Magneto Offizo, Magneto The Mall, Labhandi, Raipur, Chhattisgarh, Pin - 492001 Ph.- 0771-4039643
Siliguri	Maruti Suzuki India Limited, Unit 401, 4th Floor, Quantum Siliguri, Parivahan Nagar, Matigara Siliguri - 734010 West Bengal
Surat	Maruti Suzuki India Limited, 304, Shivalik Western, Above TGB Restaurant, L.P. Savani Road, Adajan Surat - 395009
Trivandrum	Maruti Suzuki India Limited, 8th Floor, KEK Tower, Opp. Police Head Quarters, Vazhuthacadu, Trivandrum - 695010, Phone:- 0471-2322366
Udaipur	Maruti Suzuki India Limited, 302 & 303, 3rd Floor. Manglam's Fun Square, Durga Nursery Road. Udaipur, (Rajasthan) 313001
Vijayawada	Maruti Suzuki India Limited, Vaishinavi Complex, 4th Floor, Unit 2, Opposite Executive Club, Vijayawada, -530002,
Visakhapatnam	Maruti Suzuki India Limited, Door No. 10-50-58/1, 3rd Floor, Waltair Main Road, Ramnagar, Above westside store, RK Estates, Visakhapatnam-530002, Andhra Pradesh Contact No: 0891 2745299

ANDAMAN AND NICOBAR ISLANDS

DIGLIPUR

1. AGENCY HOUSE (A & N ISLANDS) PVT LTD (-08), MADHUPUR VILLAGE, TEHSIL DIGLIPUR, NORTH ANDAMAN - 744202

PORT BLAIR

2. AGENCY HOUSE (A & N ISLANDS) PVT LTD (-01), GARACHRAMA, PORT BLAIR - 744105
3. AGENCY HOUSE (A & N ISLANDS) PVT LTD (-04), NAYAGEN, PORTBLAIR - 744101

RANGAT

4. AGENCY HOUSE (A & N ISLANDS) PVT LTD (-03), NIMBUTULLA, PO RANGAT, DIST. MIDDLE ANDMAN, - 744201
PH :211546.

ANDHRA PRADESH

ADONI

5. MSA MOTORS (-01), BESIDE HP GAS YEMMIGANUR ROAD ADONI - 518301

AMALAPURAM

6. SB MOTOR CORPORATION (-01), #241/2B, BESIDE: BAPUJI PRIMARY SCHOOL MAIN ROAD, OPP. RR NAGAR, BANDARULANKA, AMALAPURAM, EAST GODAVARI (DIST) - 533201
PH :8374303303.

AMARAVATI

7. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO. 29, TOWNSHIP-16, SECTOR-137, COLONY-539, BLOCK-2029, PLOT NO. 1, SUB-DIVISION-L40, MALKAPURAM LIMITS, MANDAL - THULLURU, AMARAVATI-CITY, DIST. -GUNTUR, ANDHRA PRADESH. - 522237

ANAKAPALLE

8. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO.822/1 & 2, NH-5 ROAD, ANAKAPALLE, DISTT. VISHAKHAPATNAM. - 531001
PH :7093575555.

ANANTAPUR

9. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO 146-3, SRI NAGAR COLONY, ANANTAPUR, ANDHRA PRADESH
10. NIVYA AUTOMOBILES PRIVATE LIMITED (-01), NH 44 RAJEEV COLONY NEAR SILPARAMAM - 515001

ANNAVARAM

11. VARUN MOTORS PVT LTD (-01), DO-NO : 5/116, SURVEY NO - 59, CHALAMAYYA NAGAR, RAILWAY STATION ROAD, NEAR SMP BAJAJ SHOWROOM, ANNAVARAM, EAST GODAVARI DISTRICT, ANDHRA PRADESH. - 533406
PH :9885288339.

ARAKU

12. VARUN MOTORS PVT LTD (-01), SURVEY NO 33-9/A, RAVULAGADDA VILLAGE, BESIDE GOVT DEGGRE COLLEGE, ARAKU, VISHAKHAPATNAM, ANDHRA PRADESH - 531151
PH :9885317344.

ATMAKUR

13. BHARGAVI AUTOMOBILES PVT LTD (-01), D.NO. 524, NELLORE PALEM, ATMAKUR, BESIDE HERO SHOWROOM, KURNOOL - 524322

BHIANSA

14. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO 448A/1, BASAR ROAD, BHAINSA, NIRMAL DISTRICT, TELANGANA - 504103
PH :8886092222.

BHIMAVARAM

15. NOVELTY REDDY AND REDDY MOTORS PVT LTD (-01), NEAR BYEPASS ROAD, UNDI ROAD, BHIMAVARAM - 534202
PH :7797791177.

BOBBILI

16. VARUN MOTORS PVT LTD (-01), D. NO. 4-64, SURVEY NO. 219/8, VILLAGE - MALLAMMAPETA, BESIDE GROWTH CENTRE, BOBBILI, DISTRICT - VIZIANAGARAM, ANDHRA PRADESH. - 535558

CHANDRAGUNDA

17. VARUN MOTORS PVT LTD (-01), CHANDRUGONDA GRAM PANCHAYAT RECORD SURVEY NO. 81/4, OPP.SAI KRISHNA PETROL BUNK - 507166

CHEPURAPALLI

18. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), 4-284, CHEEUPRAPALLI, VIZIANAGARAM, ANDHRA PRADESH

CHILKALURIPET

19. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), M/S JAYALAKSHMI AUTO, SURVEY NO 457/C3, CHILKALURIPET, NADENLA MANDAL, GUNTUR, ANDHRA PRADESH - 522616
PH :9989144344.

CHINTALAPUDI

20. REDDY & REDDY MOTORS (-01), RS NO.698/2 MARUTI NAGAR COURT CENTRE, ELURU-CHINTALAPUDI HIGHWAY, CHINTALAPUDI MANDAL, ANDHRA PRADESH - 534460

CHIRALA

21. JAYALAKSHMI AUTOMOTIVES PVT LTD (-04), 9-1-92, CHURCH ROAD, CHIRALA, - 523157
PH :7331151661.

CHITTOOR

22. BHARGAVI AUTOMOBILES PVT LTD (-03), 22-241/A, KATTAMANCHI TIRUPATI ROAD, CHITTOOR, - 517001
PH :8463955558.

CHODAVARAM

23. VARUN MOTORS PVT LTD (-01), SURVEY.NO: 108-2 A, 108-3 A & 108-4, GOVCHODAVARAM, DIST. VISAKHAPATNAM, - 531036
PH :9885317344.

CUDDAPAH

24. MSA MOTORS (-03), K.T. BYE PASS ROAD, CUDDAPPAAH, ANDHRA PRADESH, - 516001
PH :7396685628.

DARSI

25. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO 1025/1, DARSI, PRAKASHAM DISTRICT, ANDHRA PRADESH - 523247

DHARMAVARAM

26. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), BESIDE SIVALAYAM TEMPLE, B.C. COLONY, POTHUKUNTA, DHARMAVARAM - 515671

DRAKSHARAMMAM

27. VARUN MOTORS PVT LTD (-01), D.NO.19-2-9/1, PITTAVARI STREET, DRAKSHARAMMAM, RAMACHANDRAPURAM MANDAL, EAST GODAVARI DISTRICT, ANDHRA PRADESH. - 532355

ELURU

28. REDDY & REDDY MOTORS (-01), OLD NH-5 ROAD, BESIDES C R REDDY WOMEN'S COLLEGE OLD NH-5, ELURU, - 534001
PH :9705311566.

GAJAPATINAGARAM

29. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO 50-14, D.NO 3-1/C, BONDAPALLI MANADALAM, GAJAPATHINAGARAM, ANDHRA PRADESH. - 535270
PH :9100818111.

GAMBHEERAM

30. JAYABHERI AUTOMOTIVES PRIVATE LTD (-02), PLOT NO. 40-45 & 48, GREEN INDUSTRIAL PARK, GAMBHEERAM, ANANDPURAM, VISHAKHAPATNAM. - 530052
PH :9642496789.

GAMPALAGUDEM

31. VARUN MOTORS PVT LTD (-01), R.S.NO. 11/2A, AT PEDAKOMIRA PANCHAYAT, THIRUVURU SUB DIVISION, GAMPALAGUDEM MANDAL, N.T.R DISTRICT - 521403

GIDDALURU

32. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), S NO 716, BESIDE PADMAVATI GARDENS, GIDDALUR - 523357

GUDIVADA

33. VARUN MOTORS PVT LTD (2603-02), D NO. 1-621, AUTONAGER 1ST LANE, GUDIVADA - 521301
PH :9885651383.

GUDUR

34. BHARGAVI AUTOMOBILES PVT LTD (-01), SURVEY NO.1619/3A, GUDUR BYPASS, GUDUR RURAL, GUDUR DISTT. NELLORE, A.P. - 524101
PH :9652984999.

GUNTUR

35. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), D-N-8-24-31, MANGALAGIRI ROAD, GUNTUR - 522001
36. JAYALAKSHMI AUTOMOTIVES PVT LTD (-05), AT 1-14-114, OPP. HINDU COLLEGE, BANDLAMUDI GARDENS, AMARAVATI ROAD, GUNTUR-522003, AP. - 522203
37. JAYALAKSHMI AUTOMOTIVES PVT LTD (-06), SURVEY NO 509, D.NO 25-11-50 TOWN, WARD NO 22, OPPOSITE ITC BUILDING, R AGRAHARAM, NAGARAPALAM ROAD, GUNTUR, - 522004
PH :8374847777.
38. VARUN MOTORS PVT LTD (-01), DOOR NO. 25-16-176, IN D.NO. 169/C1 & 2, ANKIREDDYPALEM, GUNTUR CHIALAKALURIPET R - 522007

HANUMAN JUNCTION

39. SANTOSH AUTOMOTORS PVT LTD (-01), SY NO. 569/1 BESIDES NH5, VELURU VILLAGE, BAPULAPADU MANDAL, HANUMAN JUNCTION KRISHNA DISTRICT PIN 521105 - 521115
PH :9703633755.

HINDUPUR

40. JAYALAKSHMI AUTOMOTIVES PVT LTD (3602-36-01), PLOT NO.83, BYPASS ROAD, BESIDE AR HOSPITAL RT COLONY, CHAITANYANAGAR, HINDUPUR - 515201

ICHAPURAM

41. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO. 105/3, 105/4 AND 229/7, ICHAPURAM, BALAKRISHNAPURAM PANCHAYAT, MUNIBHADRA VILLAGE, ANDHRA PRADESH. - 532312

JAGGAIAHPETA

42. VARUN MOTORS PVT LTD (2603-05), DOOR NO. 2-20, MUTHYALAMMA GUIDI STREET JAGGAIAHPET TOWN, JAGGAIAHPET, KRISHNA DISTT. - 521175

JAGGAMPET

Dealer Workshop (AS ON 31.01.2026)

43. SB MOTOR CORPORATION (-01), M/S D.NO 10-37, JAGGAMPETA, EAST GODAVARI DISTRICT, ANDHRA PRADESH - 533435 PH :8866677759.	KHAMMAM	MOVVA	74. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), OPP. RDO BUNGLAW, BANK COLONY, VISAKHAPATNAM ROAD, NARSIPATNAM - 531116 PH :770233513.
JAMMALAMADUGU	54. VARUN MOTORS PVT LTD (2603--09), D.NO-15-19-48/3, PLOT NO.119, KHANAPURAM INDUSTRIAL AREA - 521108	65. VARUN MOTORS PVT LTD (-01), D NO-4-64,KODALI ROAD,MOVVA POST AND MANDAL, KRISHNA DISTRICT,ANDHRA PRADESH-521135 - 521135	NELLORE
44. ADARSHA AUTOMOTIVES PVT LTD (-01), 21/570/A,TADIPATRI ROAD, JAMMALAMADUGU,KADAPA - 516434	KORUKONDA	MYLAVARAM	75. BHARGAVI AUTOMOBILES PVT LTD (-01), D.NO.25/II/97 INDUSTRIAL ESTATE, A.K. NAGAR, P.B.NO.18, NELLORE(A.P.) - 524004 PH :9248742225.
JANGAREDDYGUDEM	55. VARUN MOTORS PVT LTD (-01), D. NO:1-220, NEAR INDIAN OIL PETROL BUNK, JUMBUPATNAM KORUKONDA, EAST GODAVARI- 533289 - 533289	66. VARUN MOTORS PVT LTD (-01), D.NO. 2-176/2, MAIN ROAD, MYLAVARAM, KRISHNA DISTRICT, PIN-521230, ANDHRA PRADESH - 521230	76. BHARGAVI AUTOMOBILES PVT LTD (-04), A2, INDUSTRIAL ESTATE.A.K. NAGAR,NELLORE, - 524004 PH :9248727888.
45. REDDY & REDDY MOTORS (-02), NEAR R&B GUEST HOUSE,ELURU ROAD,JANGAREDDYGUDEM, - 534447 PH :9912563666.	KURNOOL	NAGARI	77. VISHNU CARS PVT LTD (-01), FIELD NO. 628 /SURVEY NO. 877, 878/A/4 AND 883/A/1A, NELLORE BIT-II, BESIDES GSR GARDENS, BALAJI NAGAR, NH-16, NELLORE CITY. - 542002 PH :7337340778.
K. KOTAPUDU	57. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO 105, DINNEDEVARAPADU VILLAGE, KURNOOL, ANDHRA PRADESG - 518001 PH :9160182222.	NAIDUPET	78. BHARGAVI AUTOMOBILES PVT LTD (-07), PLOT NO 11, WOOD COMPLEX, VEDAYAPALEM, NELLORE - 524004
46. VARUN MOTORS PVT LTD (-01), NEAR SAMPATH MOTORS, S.H: 142,K.KOTAPADU (VILLAGE & MANDAL),VISAKHAPATNAM - DIST. PIN. 531034 A.P - 531034	KURUPUM	68. SB MOTOR CORPORATION (-01), M/S SURVEY NO 11-2, JUVALPALEM VILLAGE, NAIDUPETA, ANDHRA PRADESH STATE - 524126 PH :9248747777.	NIDDAVOHOLU
KAIKALURU	58. VARUN MOTORS PVT LTD (-01), SY.NO: 76/2B1, RAVADA ROAD, KURUPAM - 535524	NAKKAPALLI	79. NOVELTY REDDY AND REDDY MOTORS PVT LTD (-01), D.NO 479/5, SAMISRAGUDEM , NIDADAVOLU, WEST GODAVARI, ANDHRA PRADESH - 534301
47. SANTOSH AUTOMOTORS PVT LTD (-01), SY. NO. 1277 &9, OPP. NAIDU COMPLEX, AATAPAKA, KAIKALURU MANDAL, DIST. KRISHNA - 521333	MACHERLA	69. VARUN MOTORS PVT LTD (-01), SURVEY NO 2023, 2034,PEDGUMMULURU GRAM PANCHAYAT, RAYAVARAM MANDAL,NAKKAPALLI,VISHAKAPATNAM, ANDHRA PRADESH - 531081 PH :9885317344.	NUZVID
KAKINADA	59. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), D.NO. 343/7, 343/5-3, 15-2-3, MACHERLA, MACHERLA MUNICIPALITY - 522426	NANDIGAMA	80. VARUN MOTORS PVT LTD (2603--03), BESIDE R T C BUS DEPOT.,OLD D M OFFICE,VIJAYAWADA ROAD, NIZVID - 521201
48. SB MOTOR CORPORATION (-01), D. NO. 52-10-36/3,NEAR AMAR GHATI CENTER,KARAPA ROAD, KAKINADA - 533001 PH :9885119888.	MADANAPALLI	70. VARUN MOTORS PVT LTD (-01), RE SURVEY NO. 601/1B, NH-9 ROAD, NANDIGAMA, DIST. -KRISHNA, ANDHRA PRADESH - 521185	ONGOLE
KALYANADURGAM	60. BHARGAVI AUTOMOBILES PVT LTD (-01), SURVEY NO.762, BASIKONDA VILLAGE, MADANPALLI, CHITTOOR DISTT. ANDHRA PRADESH - 524101 PH :9959893434.	NANDYAL	81. JAYALAKSHMI AUTOMOTIVES PVT LTD (-02), THROVAGUNTA COMPANY CENTRE,NH-5,GUNTUR ROAD,ONGOLE,PRAKASAM DISTRICT. - 523003 PH :9701055955.
49. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO.328-B,DODAGATTA ROAD, NEAR NAGULA DHINNE,KALYANADURGAM - 515761	MADHURAWADA	71. MSA MOTORS (-01), SURVEY NO. 333, VUDUMALPURAM, MANDAL - NANDYAL, OPP. AUTO NAGAR, NANDYAL, DISTRICT - KURNOOL - 518501 PH :9490666616.	PADERU
KANCHIKACHERLA	61. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SY, NO. 180/2B, PARADESIPALEM,MADHURAWADA, ANDHRA PRADESH - 530048 PH :8886669985.	NARASARAOPET	82. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), DOOR NO.5-73, BESIDE MODHAKONDAMMA TEMPLE, NEAR OLD BUS STAND, G. MADUGULA ROAD - 524341
50. VARUN MOTORS PVT LTD (-01), SURVEY NO. 510/5, DOOR NO. 13-144, 146, 13TH WARD, KANCHIKACHERLA VILLAGE AND MANDAL, KRISHNA DIST. , ANDHRA PRADESH - 521180	MALKIPIURAM	72. JAYALAKSHMI AUTOMOTIVES PVT LTD (-03), P.NO 267/A1, CHILAKALURIPETA ROAD ,NARSARAOPET, GUNTUR , ANDHRA PRADESH NEAR RELIANCE PETROL PUMP BUNK,VINKONDA ROAD, NARASARAOPET, GUNTUR, - 522603	PALAKONDA
KANDUKURU	62. VARUN MOTORS PVT LTD (-01), SURVEY NO 49/6A, MALKIPURAM VILLAGE AND MANDAL, EAST GODAVARI DISTRICT, ANDHRA PRADESH - 533250 PH :9885317344.	NARSAPURAM	83. VARUN MOTORS PVT LTD (-01), SURVEY NO. 8, ANAVARAM GRAMAM, PALAKONDA, SRIKAKULAM DISTRICT, ANDHRA PRADESH. - 532440
51. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO. 414, MAHADEVAPURAM VILLAGE, O. V. ROAD, KANDUKURU MANDAL, DISTRICT - PRAKASHAM, ANDHRA PRADESH - 523105	MANDAPETA	73. NOVELTY REDDY AND REDDY MOTORS PVT LTD (-01), SY NO. 98/7, NARSAPURAM- CHINCHINDA BYPASS ROAD,NARSAPURAM, PALAKOLLU MANDAL, WEST GODAVARI DISTRICT T,ANDHRA PRADESH - 534206 PH :9703900011.	PALASA
KANIGIRI	63. SB MOTOR CORPORATION (-01), BLOCK NO. 4, D. NO. 4-1-64, MANDAPETA, DISTRICT - EAST GODAVARI, ANDHRA PRADESH . - 533308 PH :886664090.	NARSIPATNAM	84. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO. 63 OF VILLAGE - PURUSHOTTAPURAM, PALASA MANDAL, KASIBUGGA MUNICIPALITY, DISTRICT - SRIKAKULAM, ANDHRA PRADESH. - 532221
52. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO 793, PLOT NO 11.12 , KANIGIRI, PRAKASHAM DISTRICT, ANDHRA PRADESH - 523230	MARKHAPURAM		PALMANERU
KAVALI	64. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), D. NO 4/515, RAILWAY STATION ROAD, MARKAPURAM, DIST: PRAKASAM, ANDHRA PRADESH-523316 - 523316		
53. BHARGAVI AUTOMOBILES PVT LTD (-05), OPP. VENKATESWAR SWAMI TEMPLE, AUTO NAGAR MAIN ROAD KAVALI, DISTT. NELLORE - 524201 PH :9248702567.			

85. VISHNU CARS PVT LTD (-01), SURVEY NO. 184/3, PALAMANERU VILLAGE, GANGAVARAM MANDALAM, DIST. CHITTOOR, PIN-517408, ANDHRA PRADESH - 517408	96. SB MOTOR CORPORATION (-01), OPP.FCI GOVDOWN,JAILROAD,LALACHERUVILI,RAJAMU NDRY. - 533101	SRIKAKULAM	117. BHARGAVI AUTOMOBILES PVT LTD (-06), DOOR NO. 22-8-57/5G, REVENUE WARD NO-22, THIMMINAIDU PALEM, RENIGUNTA ROAD, TIRUPATI - 517501 - 517501
PARVATHIPURAM	97. SB MOTOR CORPORATION (-03), D. NO. 3-243, NH-5, ROAD, HUKUMPETA, RAJAHMUNDY. - 533107	107. VARUN MOTORS PVT LTD (4603-09), PEDDA PADDU ROAD,ARASAVILLI (P.O.),SRIKAKULAM, - 532001 PH :9985477155.	PH :7997969919.
86. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SY.NO. 195-1A, NEAR TBR THEATRE, NARSIPURAM, PARVATHIPURAM MANDAL, DISTRICT - VIZIANAGARAM, ANDHRA PRADESH,PINCODE - 535522 - 535522 PH :9100818111.	98. VARUN MOTORS PVT LTD (-01), SURVEY NO. 660, PALACHERLA VILLAGE OF RAJANAGARAM MANDAL, RAJAHMUNDY, EAST GODAVARI DSIT. - 533102 PH :9642225289.	108. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606-04), SURVEY NO 22/7P.22/8 AND SURVEY NO 29/12.16,17, BALAGA RURAL,SRIKAKULAM CITY, DISTRICT: SRIKAKULAM - 532001 PH :9100818111.	118. VISHNU CARS PVT LTD (-01), SURVEY NO. 192/3A2A, 200' CHENNAI - TIRUPATI HIGHWAY, KOTRAMANGALAM,RENIGUNTA MANDAL, TIRUPATI - 517520 PH :9154971551.
PATHAPATNAM	RAJAM	SULURUPETA	TIRUVURU
87. VARUN MOTORS PVT LTD (-01), D.NO 4-245,SURVEY NO 264/1A, PATHAPATNAM, SRIKAKULAM, ANDHRA PRADESH - 532213 PH :9885317344.	99. VARUN MOTORS PVT LTD (-01), SURVEY NO 44, SARATHI VILLAGE, RAJAM, SRIKAKULAM, ANDHRA PRADESH. PLOT NO. 44, SARATHI NAGAR, RAJAMNAGAR PANCHAYAT, RAJAM, DISTRICT - SRIKAKULAM, ANDHRA PRADESH - 532127 PH :7799666998.	109. BHARGAVI AUTOMOBILES PVT LTD (-01), S.K.S KALYANA MANDAPAM, OPPOSITE KOTAPOLLUR RD, SULLURUPETA 524121 - 524121	119. SANTOSH AUTOMOTORS PVT LTD (-01), D NO. 23-1/5, OPP. AYYAPA SWAMY TEMPLE, MAIN ROAD, TIRUVURU. - 521235
PEDDAPURAM	RAMPACHODAVARAM	TADA	TUNI
88. VARUN MOTORS PVT LTD (-01), S. NO: 19-1-41/2, SUDHA COLONY, REVENUE WARD NO-15, PEDDAPURAM- 533 437. KAKINADA DIST. A.P - 533437	100. VARUN MOTORS PVT LTD (-01), SURVEY NO 14/1,IRLAPALLY VILLAGE, RAMPACHODAVARAM,ANDHRA PRADESH - 533288 PH :9885288339.	110. VISHNU CARS PVT LTD (-01), SURVEY NO 58/3,TADA, NELLORE DISTRICT - 524401 PH :9840434242.	120. SB MOTOR CORPORATION (-01), D. NO. 65-31-15/1, OPP. FCI GODOWNS, NARAYANAPURAM, TUNI, EAST GODAVARI, ANDHRA PRADESH - 533401 PH :7661893888.
PENDURTHI	RAYACHOTY	TANUKU	VENKATAGIRIKOTA
89. VARUN MOTORS PVT LTD (-01), SURVEY NO.107/1B, VELAMPETA, ANAKAPALLI TO PENDURTHI HIGHWAY, NEAR BRIDGE, PENDURTHI DIST: VISAKAPATNAM - 530047 PH :9885438455.	101. ADARSHA AUTOMOTIVES PVT LTD (-01), #38/105-8-8, CHITOOR ROAD, REVENUE WARD NO 88, RAYACHOTY - 516269	111. NOVELTY REDDY AND REDDY MOTORS PVT LTD (-01), NH-5 ROAD, NEAR WOMEN'S COLLEGE, BESIDE IOC PETROL PUMP, TANUKU, DISTT: WEST GODAVARI(ANDHRA PRADESH) - 534211 PH :9912341624.	121. BHARGAVI AUTOMOBILES PVT LTD (-01), M/S BHARGAVI AUTOMOBILES, BESIDE INDIAL OIL BUNK, GMR FUNTION HALL,DARASALLA,PALLIKUPPAM,KUPPAM ROAD,V KOTA - 517242
90. VARUN MOTORS PVT LTD (-02), SURVEY NO 240/1.2 & 241, PENDURTHI, VIZAG - 531173 PH :9703843737.	REPALLE	TATIPAKA	VENKATAPGIRI
PIDUGURALLA	102. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), D NO 430, BESIDE ESAR PETROL BUNK, REPALLE, DISTRICT: GUNTUR, ANDHRA PRADESH - 522265 PH :8374847777.	112. VARUN MOTORS PVT LTD (-01), D-2-96/2 ,NAGARAM VILLAGE.TATIPAKA, EAST GODAVARI DT ,ANDHRA PRADESH -	122. BHARGAVI AUTOMOBILES PVT LTD (-01), SURVEY NO 166,169/1,169/2,RTC COLONY,VENKATAGIRI, NELLORE, ANDHRA PRADESH - 524132 PH :9248747777.
91. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO. 897/16, PIDUGURALLA, DISTRICT - GUNTUR, ANDHRA PRADESH. - 522413	S KOTA	TEKKALI	VIJAYAWADA
PITHAPURAM	103. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO 113/3,MALLIPUDI MADHURA VENKATARAMANAPETA, SRUNGAVARAPUKOTA, VIZIANAGARAM, ANDHRA PRADESH - 535145 PH :9100818111.	113. VARUN MOTORS PVT LTD (-01), SURVEY NO 497-4, RAGHUNADHAPURAM, TEKKALI MAIN RD, TEKKALI, ANDHRA PRADESH - 532201	123. VARUN MOTORS PVT LTD (2603-26-01), 48-17-4/1,RING ROAD,VIJAYAWADA - 520008 PH :9885576602.
92. SB MOTOR CORPORATION (-01), NO. 11-2-114, 11TH WARD, KAKINADA-KATHIPUDI ROAD, PITHAPURAM, EAST GODAVRI DIST., ANDHRA PRADESH. - 533450	SALUR	TENALI	124. VARUN MOTORS PVT LTD (2603-26-06), SURVEY NO.561/1, 562/5 & 561/3, 562/6 KESARAPALLY,VIJAYAWADA, KRISHNA DISTRICT, A.P. - 521102 PH :8297241177.
PONNUR	104. VARUN MOTORS PVT LTD (-01), D. NO:139, NH-43, KOTTAKKI (VIL), RAMABADRA PURAM, SALUR-535579, MANYAM - 535579	THAGARAPUVALASA	125. SANTOSH AUTOMOTORS PVT LTD (2607-01), SURVEY NO. 223/5, D. NO. 11-6/12, KANURU PANCHAYAT, PENAMALLURU MANDAL, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH. - 520010
93. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), PLOT NO. 4, D.NO. 213-1, VAISHNAVI NAGAR, PONNUR, GUNTUR, ANDHRA PRADESH. - 522124	SHAHABAD	115. VARUN MOTORS PVT LTD (-01), SURVEY NO.11/2B,11/3,NAGARAMPALEM VILLAGE, NH-16, NAGARAMPALEM GRAMA PANCHAYAT LIMITS, THAGARAPUVALASA, BHEEMUNIPATNAM MANDAL, VISHAKAPATNAM. - 531162	126. VARUN MOTORS PVT LTD (2603-07), DOOR NO. 1-4-208 AND 1-4-208(1), IN R.S. NO. 33/3A, BHAVANIPURAM, VIJAYAWADA, MUNICIPAL CORPORATION, VIJAYAWADA, ANDHRA PRADESH. - 520012 PH :9642225291.
PRODUTHUR	SOMPETA	TIRUPATI	127. SANTOSH AUTOMOTORS PVT LTD (-02), D NO. 77-42-16A, OPP. NUNNA FIRE STATION, PRAKASH NAGAR, INNER RING ROAD, VIJAYAWADA - 520015 PH :7799787932.
94. ADARSHA AUTOMOTIVES PVT LTD (-02), 11/301,BESIDE-DMART MYDURUR ROAD - 516360	105. GEM MOTORS (INDIA) PVT LTD (-01), SURVEY NO 467/1, SHABAD ,RANGA REDDY - 509217	116. BHARGAVI AUTOMOBILES PVT LTD (-02), 11/66/1,TIRUPATI RENIGUNTA ROAD,TIRUPATI, - 517507 PH :7997969946.	
PUSAPTIRAGA	106. VARUN MOTORS PVT LTD (-01), KHATA NO 406,407,408 DENOTED IN SURVEY NO 241/1,I.MOGILIKOTURU VILLAGE, SOMPETA, SRIKAKULAM, ANDHRA PRADESH - 532284		
95. VARUN MOTORS PVT LTD (4603-11), SY.NO: 16/21, CHODAMMA AGRAHARAM - 535002			
RAJAHMUNDY			

128. VARUN MOTORS PVT LTD (2603-26-08), SURVEY NO 20777, 207/BB2, 207/15B, D-NO 8-103, NEAR SHIVAJAYAM TEMPLE, ENKEPADU, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH - 521108 PH :9885576602.	139. VARUN MOTORS PVT LTD (4603-46-0L), SURVEY NO. 408/1 OF MADHURAWADA VILLAGE, RUSHIKONDA,ITI SEZ, VISHAKAPATNAM RURAL,MANDAL, VISHAKAPATNAM DISTRICT, ANDHRA PRADESH. - 530045 PH :9885315344.	150. D Y MOTORS (-75-01), LPC NO - DC/CC/LPC, BORUM VILLAGE, PO/PS- NAHARLAGUN, PAPUM PARE DIST, ARUNACHAL PRADESH - 791100 PH :8415075164.	161. BHARATI MOTORS PVT LTD (-02), SIMULGURI,NH-31,DISTRICT-BARPETA, ASSAM - 781313 PH :7002819523.
VIJAYAWADA	140. VARUN MOTORS PVT LTD (4603-46-1B), SURVEY NO. 2/A, SECTOR XI, MVP COLONY, VISHAKAPATNAM. - 530017	NAMSAI	162. PODDAR CAR WORLD PVT LTD (-01), WARD NO. 1, BILHORTARIHATI, NEAR EMPLOYEE EXCHANGE OFFICE., BARPETA TOWN, PIN-781301, ASSAM. - 781301
129. JAYABHERI AUTOMOTIVES PVT LTD (-05), D.NO.40/17-192/1H, LABBIPET, VIJAYAWADA - 520002	141. VARUN MOTORS PVT LTD (4603-46-10), SURVEY NO 228/224, WARD NO 19, AGNAMPUDI,VIZAG - 533053 PH :9885317344.	PASSIGHAT	BIJOYNAGAR
VINUKONDA	142. VARUN MOTORS PVT LTD (4603-46-13), D.NO: 3-83, NH-16 ROAD, BESIDE ARCHIAN GRANITES, YENDADA - 530045	152. D Y MOTORS (-01), OPPOSITE TO DANGARIA MANDIR RANAGHAT PASIGHAT - 791102	163. PODDAR CAR WORLD PVT LTD (-01), AT/PO - BIJOYNAGAR, INDIAN OIL PETROL PUMP, KAMRUP DIST.,BIJOYNAGAR - 781125 PH :9864209733.
130. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO 239/3A,237/3, VINUKONDA, PALNADU DISTRICT, ANDHRA PRADESH - 522647 PH :8374847777.	VISSANNAPETA	ROING	BISWANATH CHAIRALI
VISHAKHAPATNAM	131. VARUN MOTORS PVT LTD (4603-46-0E), PLOT NO 88,BESIDES POLICE STATION,SRINAGAR,GAJUWAKA - 530026 PH :9703843737.	153. D Y MOTORS (-01), P.O/P.S-RAYAND, ROING ROAD,ROING, 792110, ARUNACHAL PRADESH - 792110	164. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO- 7.8.9 PERIODIC PATTAN NO - 24, REVENUE VILLAGE, BRAHMAPUTRA CHAPORI, MOUZA - BAGHMORA - 784176 PH :8724087940.
132. VARUN MOTORS PVT LTD (4603-46-08), DOOR NO. 58/2,BLOCK NO. 5,BALAJI NAGAR, OPP ANDHRA UNIVERSITY, SIRIPURAM - 580003	143. VARUN MOTORS PVT LTD (-01), RS NO. 434/10, WARD NO. 10, VISSANNAPETA, KRISHNA DISTRICT, ANDHRA PRADESH - 521215 PH :9885576602.	RUKSIN	BOKAKHAT
133. VARUN MOTORS PVT LTD (4603-46-0F), D-25, INDUSTRIAL ESTATE, MARRIPALLEM, BESIDES COLA MANCHU KONDA GARDENS, VISHAKHAPATNAM. - 530007 PH :9885511911.	VIZIANAGARAM	154. D Y MOTORS (-01), RUKSIN IN EAST SIANG DISTRICT, ARUNACHAL PRADESH - 787060 PH :8415075164.	165. RAMLAL DURGADUTT MOTORS PVT LTD (-01), NORA GAON ROAD, BENGENAKHOWA, ASSAM 785601 - 785601
134. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606-46-01), PLOT NO. A-9, INDUSTRIAL ESTATE, VISHAKHAPATNAM, ANDHRA PRADESH - 530018 PH :8886332209.	144. VARUN MOTORS PVT LTD (4603-0C), OPPOSITE SUN SCHOOL, 100 FEET RING ROAD, VIZIANAGARAM, VIZIANAGARAM - 535001 PH :8886721213.	ASSAM	BONGAIGAON
135. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606- 02), D.NO.51-17-2 , NH-5, KRANTHINAGAR, VISHAKHAPATNAM,(ANDHRA PRADESH). - 530013	145. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SY NO: 108/12B & 109/2A, PLOT NO B2, B3 & B4, VT AGRAHARAM, VIZIANAGARAM, 535004 - 535001 PH :7702333514.	BADARPUR	166. BHARATI MOTORS PVT LTD (-01), CHAPAGURI ROAD, BONGAIGAON - 783830
136. VARUN MOTORS PVT LTD (4607-46-01), S. NO. 8, KAPPARADA VILLAGE, BESIDE IOCL PETROL BUNK, MANCHUKONDA GARDENS, MURALI NAGAR, NATIONAL HIGHWAY, VISHAKHAPATNAM. - 530007 PH :7799124243.	YANAM	155. JAIN UDYOG (-01), NH-37,SILCHAR KARIMGANJ ROAD,PO UMARPUR,PART-1,BADARPUR, - 788803	CHAMATA
137. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606- 03), SURVEY NO. 119/6, KURMANAPALEM, GAJUWAKA MANDAL, VIZAG, ANDHRA PRADESH. - 530046 PH :8897541234.	YELAMANCHILI	BAGHA BAZAR	167. PALLAVI MOTORS PVT LTD (-01), DAG NO.1137, PATTAN NO 376, MOUZA - DAHRAMAPUR, CHAMATA DISTT. NALBARI, ASSAM - 781306
138. VARUN MOTORS PVT LTD (4603-0K), SURVEY NO. 394 & 395, PLOT NO. 7 AT VILLAGE - DUPPIURU, MANDAL - ACHUTAPURAM, DISTRICT - VISHAKHAPATNAM, ANDHRA PRADESH. - 531011 PH :9966877133.	YELESWARAM	156. JAIN UDYOG (-01), OPPOSITE TOBAM IDDGAH, VILL BONGRAM,BAGHA BAZAR - 788120	CHAYGAON
	146. SB MOTOR CORPORATION (-01), SURVEY NO 82-2,TALLAREVU MANDAL,YANAM, EAST GODAVARI DISTRICT - 533463 PH :8886677759.	BAHARI	168. PALLAVI MOTORS PVT LTD (-01), CHAYGAON OUGURI CHOWK, NEAR BHARAT PETROL PUMP - 443301
	147. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SURVEY NO. 19-1, 2, 3, 45/1, 45/2&3, KOKIRAPALI, YELAMANCHILI, NARSIPATNAM, VIZAG DIST., ANDHRA PRADESH. - 531055	BAIHATA CHARIALI	DAYANGMUKH
	148. VARUN MOTORS PVT LTD (-01), VARUN MOTORS P.LTD,DO-NO - 2-4-41,BESIDE GOLLAJI GARU BUNK,YERRAVARAM ROAD,YELESWARAM - 533429 - 533429 PH :9885511911.	BANGALIPARA	169. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), KHERONI,DAYANGMUKH,DIST WEST KARBI ANGLONG - 782448
	ARUNACHAL PRADESH	157. PODDAR CAR WORLD PVT LTD (-01), DAG NO 738, 739, UNDER MOUZA CHENGA, BARPETA DISTRICT - 781302	DHEKIAJULI
	BHALUKPONG	158. PALLAVI MOTORS PVT LTD (-01), DAG NO. 1042, PATTAN NO. 17, MOUZA - BORBANKHAR, P.S. - BAIHATA CHARIALI, DISTRICT - KAMRUP, ASSAM - 781381 PH :9864052488.	170. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO 242, K.P. PATTAN NO.88, VILLAGE-BHAKUAMARI, MOUZA-BORCHOLA, BESIDES-NH15, DHEKIAJULI, DISTT. SONITPUR, ASSAM - 784110 PH :9706568722.
	149. D Y MOTORS (-01), NEAR SBI UPPER MARKET, BHALUKPONG, WEST KAMENG , ARUNACHAL PRADESH - 790114 PH :8415075164.	BARAMA	DHEMAJI
		160. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), VILLAGE - BARJAR, PO & PS - BARAMA, ASSAM -781346 - 781346 PH :8638487401.	171. SAIKIA AUTO PVT LTD (-02), NALANIPAM KONCH GAON,NH-52,DHEMAJI (ASSAM) - 787057 PH :8638725209.
		BARPETA	DHING

172. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), DHING TOWN, MOIZABARI ROAD - 782123
- DIBRUGARH**
173. JAYBEE AUTO AGENCIES PVT LTD (-01), CHIRING CHAPARI, T.R. PHUKAN ROAD, P.O. DIBRUGARH (ASSAM) - 786001
PH :9954799273.
174. BIMAL AUTO AGENCY (-01), DAG NO. 104, GHARBANDICHUK JARUA GAON, MOUZA - MANKHATTA KANIKAR, DIST.-DIBRUGARH, ASSAM. - 786004
- DIGBOI**
175. VISHAL CAR WORLD PVT LTD (-01), BORBIL NO. 1, NEAR LIONS CLUB, NH-38, P.O. - DIGBOI, DISTRICT - TINSUKIA, ASSAM. - 786171
- DIMAKUCHI**
176. PALLAVI MOTORS PVT LTD (-01), DIMAKUCHI TOWN, DIMAKUCHI UDALGURI ROAD, NEAR SBI DIMAKUCHI BRANCH, DIST-UDALGURI - 781352
- DIPHU**
177. RAMLAL DURGADUTT MOTORS PVT LTD (-01), MANJA ROAD, DILLAJI, DIPHU, KARBI ANGLONG, ASSAM - 782460
PH :9707556868.
- DOBOKA**
178. RAMLAL DURGADUTT MOTORS PVT LTD (-01), WARD NO 4 DABOKA TOWN - 782440
- DULIAJAN**
179. JAYBEE AUTO AGENCIES PVT LTD (-01), JAYBEE AUTO AGENCIES, TIPLING TINIALI, DULIAJAN DIST. DIBRUGARH - 786602
PH :7002722358.
- GOALPARA**
180. BHARATI MOTORS PVT LTD (-01), PO: KALYANPUR, VILLAGE: SOLMARI, P/S: AGIA, NH: 37, DISTRICT: GOALPARA, ASSAM - 781301
PH :91101940372.
- GOLAGHAT**
181. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO. - 718, 684 & 706, PATTAN NO 213, 168 & 192, KURUKA GAON, P.O - MORANGI, P.S -GOLAGHAT, DIST: GOLAGHAT, ASSAM
PIN-785702 - 785702
PH :7002095457.
- GORAIMARI**
182. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), DAG NO. 3, KP PATTAN NO - 11, VILLAGE - CHALABASTI, MOUZA - GORAIMARI - 783390
PH :7002729100.
- GUWAHATI**
183. BIMAL AUTO AGENCY (-01), JHALUKBARI, GUWAHATI. - 781014

184. PALLAVI MOTORS PVT LTD (-01), DAG NO. 162 NEXT TO DEPTT. OF FAMILY WELFARE, SIX MILE. KHANAPARA G.S. ROAD, GUWAHATI - 781022
185. PODDAR CAR WORLD PVT LTD (-01), HENGARABARI, VIP ROAD, GUWAHATI - 781036
186. BIMAL AUTO AGENCY (-01), CHANDMARI, BAMUNI MAIDAN, OPP SBI NEW GUWAHATI BRANCH, GUWAHATI - 781021
187. BIMAL AUTO AGENCY (-02), BEHARBARI, BEHIND DHOOM RESTAURANT, NH-37, GUWAHATI - 781028
188. PODDAR CAR WORLD PVT LTD (-01), NH-37, NEAR, GORCHUK CHAIRALI, GUWAHATI (ASSAM). - 781029
189. BIMAL AUTO AGENCY (-03), BESIDE NRL PETROL PUMP, RGB ROAD, ZOO ROAD, GUWAHATI, ASSAM - 781005
190. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), NH-37, BELTOLA, NEAR HANUMAN KANTA, GUWAHATI - 781028
191. PALLAVI MOTORS PVT LTD (-02), DAG NO. 2201, PATTAN NO. 237, VILLAGE - JYOTIKUCHI, MOUZA - BELTOLA, AK AZAD ROAD, GUWAHATI, DISTRICT - KAMRUP, ASSAM. - 781034
- HOJAI**
192. RAMLAL DURGADUTT MOTORS PVT LTD (-01), KHATIAN NO. 312/3F, HOJAI MAIN ROAD, NEAR UCO BANK, SHANKARDEVNAGAR, HOJAI, DISTRICT - NAGAON, ASSAM - 782435
PH :7002680534.
- HOWLY**
193. PODDAR CAR WORLD PVT LTD (-01), PATTAN NO. 601, DAG NO. 1567, HOWLI TOWN, MOUZA GHILAJARI, DISTT BARBETA, ASSAM - 781316
PH :8085957586.
- HOWRAGHAT**
194. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), HOWRAGHAT TOWN, KARBI ANGLONG, ASSAM - 782481 - 782481
PH :9864191169.
- JAGIROAD**
195. RAMLAL DURGADUTT MOTORS PVT LTD (-02), JAGIROAD, MORIGAON, NALAOW, ASSAM - 782410
PH :9365884355.
- JORHAT**
196. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO. 7 & 8 OF P.P NO. 33, DAG O. 9 OF P.P NO. 61, DAG NO. 382 OF P.P NO. 206, VILLAGE - PAKIMURI HABIAGON, MOUZA - SARABAHAL, JORHAT. - 785006

197. JAINCO AUTOTECH PVT LTD (-01), AT ROAD, SEUNI ALI, JORHAT, ASSAM 785001 - 785001
PH :9287957451.
- KALGACHIA**
198. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), VILL - KALGACHIA, PO - KALGACHIA, DIST BARPETA - 781319
PH :8638487401.
- KALIABOR**
199. RAMLAL DURGADUTT MOTORS PVT LTD (-01), MADHAB GAON,, PO-KUWARITOL, PS KALIABOR, - 782137
- KAMPUR**
200. RAMLAL DURGADUTT MOTORS PVT LTD (-01), VILL KAMPUR, PANCHINI JAR, PO KAMPUR, DIST NAGAON, PIN 782426 - 782426
- KARIMGANJ**
201. JAIN UDYOG (6901-04), STEAMER GHAT ROAD, KARIMGANJ, ASSAM - 788710
PH :9435179025.
- KAYAKUCHI**
202. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), B.B ROAD, KAYAKUCHI, BARPETA, ASSAM - 781352
- KHARUPATIA**
203. BIMAL AUTO AGENCY (-01), VILL -BOLOGARAH, P.O - Kharupetia, P.S DHULA, DIST - DARRANG, ASSAM. - 784115
- KHATKHATI**
204. PODDAR CAR WORLD PVT LTD (-01), NEAR TELEPHONE EXCHANGE, NH-39, KHATKHATI, DISTRICT - KARBI ANGLONG. - 782460
PH :600900381.
- KOKRAJHAR**
205. BHARATI MOTORS PVT LTD (-01), TITAGURI, AT-KOKRAJHAR, DIST-KOKRAJHAR - 783370
- LANKA**
206. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO 95 OF PP NO 59, DAG NO 96 OF PP NO 26 & DAG NO 418 OF PP NO 73 KISAM LAKHIMPUR, MOUZA - LANKA, DIST - HOJAI, ASSAM. - 782442
PH :9707556868.
- MAJULI**
207. RAMLAL DURGADUTT MOTORS PVT LTD (-01), PETROL PUMP, NEAR GARMUR, GARMUR, MAJULI, JORHAT, ASSAM 785104 - 785104
- MANGALDOI**
208. PODDAR CAR WORLD PVT LTD (-01), PUNIA, NH-52, MANGALDOI, DISTT. DARRANG - 784115
PH :9706970132.

- MARGHERITA**
209. VISHAL CAR WORLD PVT LTD (-01), MARGHERITA TOWN, BEHIND IOCL PETROL PUMP, NH-38, MARGHERITA, ASSAM - 786181
PH :9435860000.
- MORIGAON**
210. RAMLAL DURGADUTT MOTORS PVT LTD (-01), DAG NO. 423 OF PP NO. 221, KISSAM BACHNAGHAT, MORIGAON, ASSAM - 782105
PH :7002239592.
- NAGARBERA**
211. PALLAVI MOTORS PVT LTD (-01), NAGARBERA,, DOKUCHI, KAMRUP, - 781127
- NAGAON**
212. RAMLAL DURGADUTT MOTORS PVT LTD (-01), KHUTIKHATIA, HAIBARGON, NAGAON - 782002
PH :9706007918.
213. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), DAG NO. 255, 1508(N)254(O), 1509(N)257(O) AND 291, PATTAN NO. 506(N)15(O), 507(N)15(O), 507(N)97(O) AND 98, VILLAGE - DEODHAR, MOUZA - PAKHIMORIA, DIST.-NAGAON - 782002
214. RAMLAL DURGADUTT MOTORS PVT LTD (-03), PAKHIMURIA, NEAR BHUGDOI DHABA, NAGAON, ASSAM
215. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-02), BAJRANG CAR WORLD DIMORJURI OPPOSITE KAPILI NURSING HOME DISTRICT NAGAON STATE ASSAM - 782003
- NAHARKATIYA**
216. JAYBEE AUTO AGENCIES PVT LTD (-03), NAHARKATIYA TOWN PART NO. 4, MOUZA - JAYPORE, NEAR ST. MARY'S SCHOOL, DISTRICT - DIBRUGARH, ASSAM. - 786610
PH :7002722358.
- NALBARI**
217. BIMAL AUTO AGENCY (9201-01), CHOWKBAZAR, NALBARI HAJO ROAD, NALBARI DIST. NALBARI - 781335
PH :7576842484.
- NARAYANPUR**
218. SAKIA AUTO PVT LTD (-01), WARD NO-2, P.O-DIKRONG BADULAHATI, NH-52, NARAYANPUR - 784164
- NAZIRA**
219. RAMLAL DURGADUTT MOTORS PVT LTD (-01), MAIN ROAD NAZIRA,, NEAR NRL PETROL PUMP, PO/PS NAZIRA, - 785685
- NORTH LAKHIMPUR**

Dealer Workshop (AS ON 31.01.2026)

220. SAKIA AUTO PVT LTD (-01), HATILUNG, NH-52 ROAD, NORTH LAKHIMPUR, ASSAM - 787031 PH :8473946336.	232. PODDAR CAR WORLD PVT LTD (-01), VILL:- HAZUA NEW COLONY, PO:-KOKLABARI, PS:-SIMLA, DISTRICT- BAKSA, ASSAM - 781330	243. SEEMANCHAL MOTORS PVT LTD (-01), NEAR BUS STAND, JAGDISH RICE MILL COMPOUND, HOSPITAL ROAD, FORBESGANJ, DISTT. ARARIA, BIHAR - 854318 PH :8797096013.	252. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (-01), C/O DEVDHTRA UPDHYAYA, SYNDICATE, BYE PASS ROAD, BUXAR - 802101
221. SAKIA AUTO PVT LTD (-03), KHELMATI, WARD NO. 14, NH -52, NORTH LAKHIMPUR, ASSAM - 787001 PH :7002571073.	SONAPUR 233. PODDAR CAR WORLD PVT LTD (-03), NEAR LUMSUM,N.C,SONARPUR,ASSAM,782401 - 782401	ARRAH 244. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (-01), (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT. LTD.), DHANUPRA, NEAR GANPAT CHOUDHARY DWAR, NH-30, ARRAH (BIHAR) - 802301 PH :8294634604.	CHAKIA 253. RAMKRISHNA MOTORS PVT LTD (-01), OJHA TOLA, NEW BYPASS, CHAKIA-845412, PURVI CHAMPARAN DISTT., BIHAR - 845412 PH :9801773716.
PATHSALA 222. PODDAR CAR WORLD PVT LTD (-01), DAG NO. 451, PATTA NO. 151 KMP, PATHSALA, DIST. -BARPETA, ASSAM. - 781325 PH :6000900256.	SONARI 234. JAINCO AUTOTECH PVT LTD (-01), BORAH CHARALI, WARD NO 12, SONARI, CHARAIDEO - 785690	AURANGABAD 245. KARLO AUTOMOBILES PVT LTD (-01), KARLO AUTOMOBILES PVT LTD, GT ROAD, NEAR, RAIPURA MORE, BABHANDI, AURANGABAD - 824101 PH :7019085212.	CHAPRA 254. REESHAV AUTOMOBILES PVT LTD (-02), 146, PLOT NO. 381, VILLAGE RAUJA, CHAPRA PATNA ROAD, NEAR BHIKHARI CHOWK, CHAPRA, BIHAR - 841301 PH :7061295296.
RAHA 223. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT. LTD.) (-01), RAHA TOWN, NH-37., NEAR TOLL GATE, - 782103	SOOTEA 235. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (-01), BIGHA NO 2, KATHA 10, KHERAJ MIYADI, REVENUE CIRCLE NO DUAR, SOOTEA - 784175	BANKA 246. SEEMANCHAL MOTORS PVT LTD (-01), KHATA NO. 134, KHESRA NO. 118, BEHIND MARUTI SHOWROOM, STATION ROAD, BANKA, BIHAR. - 813101 PH :8797096020.	DANAPUR 255. ALANKAR AUTO SALES & SERVICE PVT LTD (1504--02), ADJASCENT ARYA SAMAJ MANDIR, NEAR SAGUNA MORE, DANAPUR, - 800018 PH :9386898458
RAJGARH 224. JAYBEE AUTO AGENCIES PVT LTD (-01), DAG NO.182, PP NO. 140 OF 2 NO. BHAGATIA GAON, LAT NO.11, RAJGARH, MOUZA-TINKHONG, DISTT. DIBRUGARH, ASSAM - 786611 PH :9954799273.	SORBHOG 236. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), VILLAGE DAHALAPARA, KISMAT DWARIKA, PS SORBHOG, SUB DIVISION- BARPETA- ASSAM. - 781317 PH :8011042222.	BEGUSARAI 247. GS MOTORS PVT LTD (-01), HARHAR MAHADEV CHOWK, NH 31, BEGUSARAI, BIHAR - 851101 PH :9204756206.	256. ALANKAR AUTO SALES & SERVICE PVT LTD (-05), TOUZI NO. 5057, THANA NO. 35, MOUZA - BABAKKARPUR, DANAPUR, PATNA. - 801503 PH :9334415434.
RANGIA 225. PODDAR CAR WORLD PVT LTD (-01), RANGIA TOWN, WARD NO. 5, SHANTIPUR, BHUTAN ROAD, NEAR POLYCLINIC HOSPITAL, RANGIA DISTT. KAMRUP (ASSAM) - 781354 PH :8724877892.	TANGLA 237. BIMAL AUTO AGENCY (-01), DAG NO.:121, PATTA NO.101/320, VILLAGE BULLARPARA, MOUZA TANGLA. - 784521 PH :9954387619.	BETTIAH 248. SHREE GOPAL AUTO PVT LTD (-01), BEETIAH - MOTIHARI HIGHWAY , NH-28 B, NEAR MACHALI LOK, BEETIAH (BIHAR). - 845438 PH :9771486183.	DARBHANGA 257. RAJKRISHNA MOTORS LLP (-01), KHATA NO.61936, RAUSHAN CHOWK, BAJITPUR, B.M.P. -13, ROAD, DARBHANGA, BIHAR - 846009 PH :7004529271.
SADIYA 226. VISHAL CAR WORLD PVT LTD (-01), 5 NO. SHANTIPUR, SADIYA, DIST. SADIYA. - 786155	TENGAGHAT 238. BIMAL AUTO AGENCY (-01), NEAR INDIAN OIL PETROL PUMP., SH-23, TEHGAGHAT - 786103	249. SEEMANCHAL MOTORS PVT LTD (-01), BAUSI ROAD, ALIGANJ, NEAR SAINT TRESA SCHOOL, ALIGANJ, BHAGALPUR. - 812005 PH :8797096020.	258. RAJKRISHNA MOTORS LLP (-02), VIP ROAD, ALLALPATTI, DARBHANGA (BIHAR) - 846003 PH :9693127351.
SALBARI 227. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (-01), K.C COMPLEX, SALBARI, P.O. ANANDA BAZAR, DIST. BAKSA - 781318	TEZPUR 239. RAMLAL DURGADUTT MOTORS PVT LTD (-01), NEAR DON BASCO SCHOOL, P.O. NIKAMULSATRA, TEZPUR, ASSAM - 784154	BHAGALPUR 249. SEEMANCHAL MOTORS PVT LTD (-01), BAUSI ROAD, ALIGANJ, NEAR SAINT TRESA SCHOOL, ALIGANJ, BHAGALPUR. - 812005 PH :8797096020.	DEHRI ON SON 259. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (-02), MOUZA - KHASRA, KHATA NO. 141, PLOT NO. 186, SAAT KATDA THANA - DEHRI-ONE-SONE, DIST. -ROHTAS, BIHAR. - 821307 PH :8294634602.
SARUPATHAR 228. JAINCO AUTOTECH PVT LTD (-01), WARD NO 1, PADUMONI, SARUPATHER, GOLAGHAT - 785601	TINSUKIA 241. VISHAL CAR WORLD PVT LTD (-01), LAIPULY, A.T. ROAD, TINSUKIA, DIST - TINSUKIA, ASSAM - 786183 PH :9435860000.	BHITA 250. REESHAV AUTOMOBILES PVT LTD (-01), PLOT NO 1674 & 1676, KHATA NO - 19 & 67 AT MOUZA - MAHADEOPUR PHULARI, P.O - BHITA, P.S- BHITA, DISTRICT - PATNA - 801103 PH :7763954585.	GAYA 260. KARLO AUTOMOBILES PVT LTD (-01), BODH GAYA, GAYA. - 824231
SIBSAGAR 229. RAMLAL DURGADUTT MOTORS PVT LTD (-02), RANGHAR CHARIALI, DHAPROTA, AT ROAD, OPPOSITE RANGHAR, SHIVASAGAR - 785640	TITABAR 242. JAINCO AUTOTECH PVT LTD (-01), PUBALI NAGAR, TITABOR - 785630	BIHARSHARIF 251. REESHAV AUTOMOBILES PVT LTD (-03), PATNA RANCHI ROAD, NR GAGAN DIWAN SOGARA SCHOOL, THANA-LAHERI MURARPUR, BIHARSHARIF, DISTRICT-NALANDA, BIHAR - 803101 PH :9263632175.	261. DMC CARS (A UNIT OF DHANRAAJ AGENCIES PVT LTD) (-01), DHANRAAJ AGENCIES PRIVATE LIMITED, MARUTI SUZUKI ARENA SHOWROOM, OPPOSITE AIRPORT RUNWAY, GAYA-DOBHI ROAD,GAYA, PIN 823004 - 823004
SILCHAR 231. JAIN UDYOG (6901-02), KAUSHAL COMPLEX, SONAI ROAD, SILCHAR, ASSAM - 788006 PH :9706002524.	ARARIA 243. SEEMANCHAL MOTORS PVT LTD (-01), NEAR BUS STAND, JAGDISH RICE MILL COMPOUND, HOSPITAL ROAD, FORBESGANJ, DISTT. ARARIA, BIHAR - 854318 PH :8797096013.	BUXAR 244. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (-01), (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT. LTD.), DHANUPRA, NEAR GANPAT CHOUDHARY DWAR, NH-30, ARRAH (BIHAR) - 802301 PH :8294634604.	GOPALGANJ 262. SHREE GOPAL AUTO PVT LTD (-01), NH-28, DANAPUR, TEHSIL-MANJAGARH, GOPALGANJ (BIHAR) - 800023
SIMLA			HAJIPUR

263. REESHAV AUTOMOBILES PVT LTD (-01), KHATA 617 & KHASHRA 354/1605, NEAR RELIANCE PETROL PUMP, M G SETU ROAD, HAJIPUR (VAISHALI), - 844101
PH :9060945038.
- JEHANABAD**
264. DMC CARS (A UNIT OF DHANRAJ AGENCIES PVT LTD) (-01), KHATA NO - 80, PLOT NO -1490, MOUZA - MÜTHER, PS- JEHANABAD, DIST - JEHANABAD - 804408
- KATI HAR**
265. SEEMANCHAL MOTORS PVT LTD (-01), NEAR SBP VIDIYA VIHAR SCHOOL, SIRSA, KATI HAR PURNEA ROAD, KATI HAR - 854105
PH :7762893700.
- KISHANGANJ**
266. SEEMANCHAL MOTORS PVT LTD (-01), PASCHIM PALI ROAD, COLLEGE ROAD, THANAKNE, WARD NO.1, KISHANGANJ (BIHAR) - 855101
PH :8797096019.
- LAKHISARAI**
267. GS MOTORS PVT LTD (-01), TAUZI NO. 39, KHATA NO. 3, KHE SRA NO. 496, MOUZA - JAINAGAR, ANCHAL - LAKHISARAI, DIST. -LAKHISARAI, BIHAR - 811311
PH :9204756205.
- MADHUBANI**
268. RAJKRISHNA MOTORS LLP (-01), BHOWRA TOLA, BARDIBAN, MADHUBANI, BIHAR - 847211
- MAHUA**
269. REESHAV AUTOMOBILES PVT LTD (-01), MUZAFFARPUR-MAHUA ROAD, RASALPUR, HP PETROL PUMP, MADHAUL, MAHUA, VAISHALI, NEAR AKSHYAWAT COLLEGE - 844122
- MOHANIA**
270. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (-01), MOHANIA-BUXAR ROAD, SH-14, MOHANIA - 821109
- MOTIHARI**
271. RAJIV AUTOMOBILES PVT LTD (-03), NEAR CHHATAJUNI CHOWK, BESIDE NH 28 A, MOTIHARI TOWN , BIHAR - 845401
PH :9234609669.
- MUZAFFARPUR**
272. RAJIV AUTOMOBILES PVT LTD (-01), RAMDAYALU NAGAR, PATNA HAZIPUR ROAD, MUZAFFARPUR, BIHAR - 842002
PH :9910347908.
273. RAMKRISHNA MOTORS PVT LTD (-01), KRISHNA TALKIES CAMPUS, AKHARAGHAT ROAD, MUZAFFARPUR, BIHAR - 842001

274. RAJIV AUTOMOBILES PVT LTD (-04), KHABRA POKHAR LANE NO -1, PANCHAYAT -KHABRA, CITY- MUZAFFARPUR - 843146
PH :9234609671.
- NAUGACHIA**
275. SEEMANCHAL MOTORS PVT LTD (-01), NEAR GAYATRI PLY ROOM, NH-31, NAUGACHIA MARKET, NAUGACHIA, DISTRICT - BHAGALPUR, BIHAR - 853204
- NAWADA**
276. REESHAV AUTOMOBILES PVT LTD (-04), 191 & 400, KHSARA NO. 3105 & 3102, NEAR DM'S OFFICE, PATNA-RANCHI MAIN ROAD, NAWADA, BIHAR - 805110
PH :6206162228.
- PATNA**
277. KARLO AUTOMOBILES PVT LTD (1502-15-04), NEAR BATA GUNJ, DINGA PATNA, BIHAR - 800013
278. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-03), PLOT NO.118-119, BEHIND DURGA MARINE DRIVE APARTMENTS, DUJRA DEVI STHAN, ASHOK RAJPATH, PATNA - 800001
PH :9934020200.
279. REESHAV AUTOMOBILES PVT LTD (1506-15-01), PLOT NO.25/1581 KHATA NO.494, MOUZA KUMHRAR, PARGANA AZEEMABAD, KANKARBAGH, PATNA - 800004
PH :7632995356.
280. KARLO AUTOMOBILES PVT LTD (1502-05), JAGDEOPATH , NEAR SAI CORPORATE PARK, PATNA - 801506
PH :9264190675.
281. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-15-06), ALANKAR COMPOUND, BESIDE ALANKAR SUN CITY, SANDALPUR, KUMHRAR, PATNA - 800006 - 800006
PH :9304403916.
282. ALANKAR AUTO SALES & SERVICE PVT LTD (-15-07), BASUDEV SADAN CAMPUS, SANDALPUR, PATNA - 800006
283. SHREE GOPAL AUTO PVT LTD (1507-15-01), KHAGAIL ROAD, OPP. KOTAK MAHINDRA BANK, DANAPUR, PATNA - 801503
284. HORIZON AUTOMOBILE PRIVATE LIMITED (1508-15-01), DHAWALPURA NAGAR, MAULI ROAD, PS-CHOWK, NEAR MURGI DANA FACTORY , - 800001
- PURNEA**
285. SEEMANCHAL MOTORS PVT LTD (-01), NH-31, NEAR MARKETING YARD, GULAB BAGH, PURNEA (BIHAR) - 854326
PH :8797096014.
- RAXAUL**

286. RAMKRISHNA MOTORS PVT LTD (-01), KAWRIHAR, TOLA - LAXAMIPUR, THANA NO -9, TALUJ NO - 951, THANA AND ANCHAL - RAXAUL, DIST - EAST CHAMPARAN , BIHAR - 845305
- ROSE RA**
287. RAJKRISHNA MOTORS LLP (-01), NAND CHOWK, JAIL ROAD , , WARD NO.17, ROSE RA, BIHAR - 848210
- SAHARSA**
288. GS MOTORS PVT LTD (-02), PATUAHA, NH 107 SAHARSA, BIHAR - 852201
PH :9263638456.
- SAMASTIPUR**
289. RAJKRISHNA MOTORS LLP (-01), KHE SRA NO. 3190-95, KHATA NO. 76, HERPUR ALLOTH, SAMASTIPUR, BIHAR. - 848101
PH :9204552405.
- SASARAM**
290. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (-01), PLOT NO.7, 9 & 11, NH-2 MORE SARAI, SASARAM (BIHAR) - 821115
- SITAMARHI**
291. RAJIV AUTOMOBILES PVT LTD (-01), DUMRA ROAD, SHANTI NAGAR, SITAMARHI - 843301
- SIWAN**
292. SHREE GOPAL AUTO PVT LTD (-01), CHAPRA ROAD, NEAR CHAPDHALA, NH 85, SIWAN - 841236
PH :9771486132.
- SUPAUL**
293. GS MOTORS PVT LTD (-01), SISAUNI, ROAD, KISHANPUR WEST, BIHAR 852138 - 852138
- CHANDIGARH**
294. MODERN AUTOMOBILES (-01), 4 M.W. INDL AREA, CHANDIGARH - 160002
295. AUTOPACE NETWORK PVT LTD (-01), PLOT #112-113, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002
296. TRICITY AUTOS (-02), PLOT NO 89, PHASE-1 INDUSTRIAL AREA, CHANDIGARH - 160002
PH :9888882335.
297. NAVDESH AUTOS LLP (-01), PLOT NO. 42, INDUSTRIAL AREA PHASE-1, CHANDIGARH. - 160002
- CHHATTISGARH**
- AKALTARA**

298. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (-01), SHOP NO 4.5.6.7 & 8, SHRI NARAYAN COMPLEX & GODOWN, NEAR INDRA UDYAN, SHEORINARAYAN ROAD, AKALTARA-495552, CHHATTISGARH - 495552
PH :7987590484.
- AMBAGARH CHOWKI**
299. SPARSH AUTOMOBILES PVT LTD (-01), WARD NO.1, MOHALLA MANPUR BEHIND CRGB BANK, AMBAGARH CHOWKI, CHHATTISGARH - 491661
- AMBIKAPUR**
300. MAHAMAYA AUTOCARS PVT LTD (-01), MANEDRAGARH ROAD, AMBIKAPUR, CHATTISGARH. - 497001
PH :7987741432.
- ARANG**
301. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (-01), MAIN ROAD, IN FRONT OF BLOCK OFFICE, ARANG, CHHATTISGARH - 493441
- BAGBAHARA**
302. HDN MOTORS PVT LTD (-01), M/S HDN MOTORS, BESIDE R.N RICE MILL, NEW MAHAVER COMPLEX, MAHASAMUND ROAD, BAGBAHARA - 493449
PH :7909800004.
- BAIKUNTHPUR**
303. MAHAMAYA AUTOCARS PVT LTD (-01), WARD NO.01, KHATA NO.916, TEHSIL - BAIKUNTHPUR, DISTT. - KORIYA, CHATTISGARH - 497335
- BALOD**
304. CHOUHAN AUTOMOBILES LLP (-01), H.NO.185, WARD NO.25, NAYA MARKET, DALLIRAJHARA, BALOD -491228 - 491228
PH :9837325267.
- BALODA BAZAAR**
305. SKY AUTOMOBILES (5001-04), AMBEDKAR CHOWK, RAIPUR ROAD, BALODA BAZAAR, CHATTISGARH. - 493332
- BALRAMPUR**
306. MAHAMAYA AUTOCARS PVT LTD (-01), NEAR REST HOUSE,, RAMANUJGANJ ROAD, BHANORA. - 497119
- BASNA**
307. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (-01), M/S VISHWABHARTI AUTO, PADAMPUR ROAD, BASNOUL, BASNA, CHHATTISGARH - 493554
PH :6262620060.
- BEMETRA**

Dealer Workshop (AS ON 31.01.2026)

308. CHOUHAN AUTOMOBILES LLP (-01), KHASRA NO. 89/2, CHOUHAN AUTOMOBILE LLP, KAWARDHA ROAD, NAVGHAD CHOWK, BEMTARA CHATTISGARH - 491335 PH :6262000222.	321. CHOUHAN AUTOMOBILES LLP (-01), H.NO 185, WARD NO 25, NAYA MARKET DALLIRAJHARA,BALOD DISTRICT-491228 - 491228 PH :6262000222.	332. SATYA AUTO PRIVATE LIMITED (-01), NEAR KHOKSHA RAILWAY CROSSING, CHAMPA ROAD, NH-200, JANJGIR - 495668	343. SPARSH AUTOMOBILES PVT LTD (5002-02), BARONDA CHOWNIK, BAGBAHRA ROAD, MAHASAMUND. - 493445
BHATAPARA	DANTEWADA	KANKER	MANENDRAGARH
309. SPARSH AUTOMOBILES PVT LTD (-01), RAIPUR ROAD, BHATAPARA (CHATTISGARH) - 493118	322. SKY AUTOMOBILES (-01), PATAR RAS MAIN ROAD,DANTEWADA,PIN-494440. - 494440	333. SKY AUTOMOBILES (5001-06), RAZA NAGAR, SINGARBHAT, NH-30, KANKER , DISTRICT – KANKER, CHHATTISGARH - 494334	344. MAHAMAYA AUTOCARS PVT LTD (-02), WARD NO.21, NH-43, AMBIKAPUR ROAD, NEAR HP PETROL PUMP, MANENDRAGARH, DISTT. KORIYA - 497442
BHILAI	DEOBHOG	KATGHORA	MUNGELI
310. CHOUHAN AUTOMOBILES LLP (8305-01), PLOT NO.1 & 34, SHIVNATH COMPLEX, BEHIND CHOUHAN ESTATE, G.E. ROAD, SUPELA, BHILAI. - 490023	323. SPARSH AUTOMOBILES PVT LTD (-01), M/S SPARSH AUTOMOBILES PVT LTD SANTOSHI NAGAR,NEAR BHARAT PETROL PUMP, DHARAMGARH ROAD, DEOBHOG – 493890 - 493890 PH :9926626662.	334. SATYA AUTO PRIVATE LIMITED (-01), BILASPUR RD, KATGHORA, KORBA, CHATTISGARH - 495445	345. SATYA AUTO PRIVATE LIMITED (-01), KHASRA NO. 270/2, BILASPUR ROAD, MUNGELI, CHHATTISGARH - 861468
311. SPARSH AUTOMOBILES PVT LTD (-01), R-17, INDUSTRIAL AREA, NANDNI ROAD, CHHAWANI CHOWK, BHILAI, CHHATTISGARH - 490026	DHAMTARI	KAWARDHA	PANDARIYA
312. CHOUHAN AUTOMOBILES LLP (8305-02), NH-6, DURG BYPASS ROAD, KHASRA NO.1/14, 1/23, 1/192, VILLAGE-KATULBOD, BHILAI, TEHSIL & DISTT. DURG, BHILAI, CHHATTISGARH - 491001	324. SKY AUTOMOBILES (-01), KASRA NO.238/2, SEHARA DABRI, RAIPUR ROAD, DHAMTARI-493773 CHATTISGARH - 492009 PH :889998612.	335. CHOUHAN AUTOMOBILES LLP (-01), KHASRA NO. 100/6, TALPUR BILASPUR ROAD, KAWARDHA, CHHATTISGARH. - 491995	346. CHOUHAN AUTOMOBILES LLP (-01), KHASRA NO. 24.7, KAWARDHA ROAD, NEAR INDIAN OIL, PANDARIYA, SINGARPUR, CHHATTISGARH - 491559
313. SPARSH AUTOMOBILES PVT LTD (8304-83-02), M/S. SPARSH AUTO,VEERSAVARKAR MARKET, G.E ROAD, SUPELA,BHILLAI-490023 - 490023 PH :9926626662.	DIPKA	KHAIRAGARH	PATHALGAON
BHUBAN	325. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (-01), NEAR GOVT COLLEGE ,JHABAR ROAD,DIPKA ,KORBA ,CHHATTISGARH - 495452	336. SPARSH AUTOMOBILES PVT LTD (-01), KHAIRAGARH -JHALBANDHA ROAD,AMLIPARA, OPP - BILALI OFFICE, KHAIRAGARH -491881 - 491881 PH :9926626662.	347. MAHAMAYA AUTOCARS PVT LTD (-01), KHASRA NO. 567/2, PATHALGAON, DISTRICT – JASPUR, CHHATTISGARH. - 496118
314. SKY AUTOMOBILES (-01), NH-53, BYPASS ROAD., BHUBAN, DHENKANAL., - 759017	DONGARGARH	KHARSIA	PENDRA
BILASPUR-CG	326. SPARSH AUTOMOBILES PVT LTD (-01), M/S SPARSH AUTOMOBILES, ADARSH NAGAR, NEARTHANA CHOWK, DONGARGARH, DT:RAJNANDGAON, CHHATTISGARH - 491445 - 491445	337. SATYA AUTO PRIVATE LIMITED (-01), M/S SATYA AUTO , BESIDE GOVT HIGH SCHOOL, RANISAGAR, KHARSIA, DISTRICT: RAIGARH, CHHATTISGARH - 496661 PH :9993092051.	348. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (-01), – M SQUARE MOTORS, NEAR SEMRA CLOCK MAIN ROAD, PENDRA,GOURELA PENDRA MARWAHI-495119 - 495119 PH :7987590484.
315. SATYA AUTO PRIVATE LIMITED (-01), SECTOR C, PLOT NO. 42, SIRGITTII INDUSTRIAL AREA, BILASPUR, CHATTISGARH - 495001	DURG	KONDAGOAN	PITHORA
316. SATYA AUTO PRIVATE LIMITED (-02), PLOT NO. 848/20, 848/26, 848/40, MOPKA BYPASS ROAD, BILASPUR, CHHATTISGARH. - 495006 PH :9977879698.	327. SPARSH AUTOMOBILES PVT LTD (-01), OPP. JAINAM PLACE, BEFORE PULGAON CHOWK, PULGAON NAKA, DURG, CHHATTISGARH - 491001	338. SKY AUTOMOBILES (-01), – M/S SKY AUTO, NH-90 RAIPUR ROAD, NEAR INDIAN OIL PETROL PUMP, KONDAGOAN, CHHATTISGARH - 494226 PH :9425204051.	349. SPARSH AUTOMOBILES PVT LTD (-01), PLOT NO. 284/1, RAMSAGAR PARA, RAIPUR ROAD, PITHORA, CHHATTISGARH. - 761008
317. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (-01), KHASRA NO. 420 AND 414/1, NEAR RELIANCE PETROLEUM PUMP, BESIDES TRANSPORT NAGAR GATE, RAIPUR ROAD, PARSADA, BILASPUR. - 495223 PH :6262622560.	328. SPARSH AUTOMOBILES PVT LTD (-02), MINI MATA CHOWK, PULGAON - 491001	KORBA	RAIPUR
318. SATYA AUTO PRIVATE LIMITED (-03), WARD NO.1, BESIDES HERO SHOWROOM, MUNGELI ROAD, SAKRI, BILASPUR - 495001	GARIYABANDH	339. SATYA AUTO PRIVATE LIMITED (-01), SHED NO. 1, INDUSTRIAL AREA, KORBA - 495681	350. SKY AUTOMOBILES (5001-50-01), G.E.ROAD, MOHABA BAZAR, RAIPUR. - 492010
CHARODA	329. SPARSH AUTOMOBILES PVT LTD (-01), NEAR HP PETROL PUMP, RAIPUR ROAD, GARIYABAND, CHHATTISGARH. - 756032	KURUD	351. SKY AUTOMOBILES (5001-50-02), K.K. ROAD, MOUDHAPARA, RAIPUR. - 492001 PH :9584460290.
319. SPARSH AUTOMOBILES PVT LTD (-01), NH-6, OPP. RAIL NAGAR, CHARODA, BHILAI	GHARGHODA	340. HDN MOTORS PVT.LTD (-01), KHASRA NO 601/9 & 601/10, DHAMTARI-RAIPUR ROAD, KURUD, CHHATTISGARH - 493663 PH :7909800004.	352. SPARSH AUTOMOBILES PVT LTD (5002-50-01), PACHPADI NAKA, OPP. DUTTA DRY CLEANER, DHAMKARI, JAGDALPUR ROAD, RAIPUR. - 492001
CHHURIYA	330. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (-01), M/S M SQAURE,VILLAGE BHENGARI, NAVAPARA-TENDA, GHARGHODA,DISTRICT – RAIGARH CHHATTISGARH. PIN CODE: 496111 - 496111 PH :7987690484.	LORMI	353. SKY AUTOMOBILES (5001-50-05), NEAR R.K. MALL, KOTA ROAD, RAIPUR - 492001 PH :9853000161.
320. SPARSH AUTOMOBILES PVT LTD (-01), NEAR CHURIYKALA BUS STAND ROAD, CHURIYA - 491558	JAGDALPUR	MAGARLOAD	354. SKY AUTOMOBILES (5003-50-01), AVANTIHAHAR ROAD, TELEBANDHA, RAIPUR (C.G.) - 492006 PH :9522314155.
DALLIRAJHARA	331. SKY AUTOMOBILES (-01), GEEDAM ROAD, JAGDALPUR, CHATTISGARH. - 494001	342. SKY AUTOMOBILES (-01), WARD NO:14, SWANI VIVEKANAND WARD, PANDUKA ROAD, MATHURA NAGAR, MAGARLOAD, DIST- DHAMTARI, CHATTISGARH - 493662	355. SPARSH AUTOMOBILES PVT LTD (-04), OPP. UNION BANK, MAIN ROAD, PANDRI, RAIPUR - 492004
	JANJGIR	MAHASAMUND	356. SPARSH AUTOMOBILES PVT LTD (5002-50-05), PLOT - 31, INDUSTRIAL ESTATE, OPP MAHESH COLD STORAGE, BHANPURI, RAIPUR - 494224

357. SKY AUTOMOBILES (5001-07), ADJOINING WALLFORT CITY, BHATGAON, RING ROAD NO. 2, RAIPUR, CHHATTISGARH - 492013
358. HDN MOTORS PVT LTD (5005-50-01), BESIDES BHARAT BENZ SHOWROOM, DURG-BHILAI ROAD, TATIBANDH, RAIPUR, CHHATTISGARH - 492001
359. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (5004-50-01), VIDHAN SABHA ROAD, MOWA, RAIPUR DISTT. CHHATTISGARH - 492005
- RAJGARH**
360. SATYA AUTO PRIVATE LIMITED (-01), JINDAL ROAD, RAIGARH - 496001
- RAJIM**
361. SPARSH AUTOMOBILES PVT LTD (5002-03), RAIPUR ROAD, NEAR AMMANI PETROL PUMP, NAYAPARA, RAJIM - 493881
- RAJNANDGAON**
362. SPARSH AUTOMOBILES PVT LTD (-01), NEAR HANUMAN TEMPLE, VILL-MANKI, NH-6, RAJNANDGAON, CHHATTISGARH - 491441
- SAKTI**
363. SATYA AUTO PRIVATE LIMITED (-01), NH-49, NANDAUR KHURD, MALDI, DIST. SAKTI, PIN-495689, CHHATTISGARH - 495689
- SARAIAPALLI**
364. SKY AUTOMOBILES (-01), KHASRA NO.482/5 AND 482/6, RAIPUR ROAD, SARAIAPALI, DIST-MASAMUND, SARAIAPALI - 493558
- SARANGARH**
365. SATYA AUTO PRIVATE LIMITED (-01), KASRA NO. 71/4, 73/2, 74/2, 75/1 AND 76/2, SARANGARH BIKAS KHAND, SARANGARH, DISTT. RAIGARH - 737571
- SHIVIRNARAYAN**
366. SATYA AUTO PRIVATE LIMITED (-01), M/S SATYA AUTO,DEORI, SHIVIRNARAYA, JANJIR - CHAMPA, CHATTISGARH - PIN 495556 - 495556 PH -9993092051
- SIMGA**
367. HDN MOTORS PVT LTD (-01), PLOT NO 2, WARD NUMBER 05, SHANKAR NAGAR, SIMGA, BALODA BAZAR, CHHATTISGARH - 493101 PH -9826868000
- SURAJPUR**
368. MAHAMAYA AUTOCARS PVT LTD (-01), NEARINMAHINDRA SHOWROOM ,CHANDAPUR ,CHATTISGARH - 497229
- TILDA**
369. SKY AUTOMOBILES (-01), KASRA NO. 29/31, TILDA, DIST -RAIPUR, CHHATTISGARH - 493114 PH -9425204051

DADRA AND NAGAR HAVELI

SILVASSA

370. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), NEAR ATHAL CHAR RASTA,DADAR & NAGAR HAVELI, SILVASSA - 396230 PH -9723816223.

DAMAN AND DIU

DAMAN

371. KATARIA AUTOMOBILES PRIVATE LIMITED (-11), NEAR AKASWANI CENTER, RINGANWADA, NANI DAMAN , DAMAN UNION TERRITORY - 396210

DELHI

DELHI

372. SAYA AUTOMOBILES LTD (-03), A 21-22, G.T.KARNAL ROAD, NEW DELHI - 110033
373. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (-01), A-100 MAYAPURI,PHASE-II,NEW DELHI - 110064
374. COMPETENT AUTOMOBILES CO LTD (-03), PLOT NO.3,GAZIPUR,DELHI - 110096
375. T R SAWHNEY MOTORS PVT LTD (-01), 33 & 34, HARICHAND MELARAM COMPLEX, EAST GOKULPUR, WAZIRABAD ROAD, DELHI - 110094
376. RANA MOTORS PVT LTD (-02), C-47,OKHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI - 110020
377. T R SAWHNEY MOTORS PVT LTD (-02), B-6 INDUSTRIAL AREA, PHASE I, OPP SECTOR 18, BADLI, NEW DELHI - 110042
378. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (-01), S. WAZIRPUR INDUSTRIAL AREA,ADJACENT TO WAZIRPUR DEPOT,RING ROAD, NEW DELHI - 110034
379. ROHAN MOTORS LTD (-01), F-9/B-1, MOHAN COOPERATIVE INDUSTRIAL ESTATE, MATHURA ROAD, DELHI - 110044
380. MAGIC AUTO PVT LTD (-01), A-93,PHASE-2,MAYAPURI INDL AREA,DELHI - 110064
381. PREM MOTORS PVT LTD (-01), KHASRA NO. 544/1, MUNDKA, NEW DELHI - 110041
382. T R SAWHNEY MOTORS PVT LTD (-04), PLOT NO.-508, FUNCTIONAL INDUSTRIAL ESTATE, PATPARGANJ - 110092
383. MAGIC AUTO PVT LTD (-01), PLOT NO. 68/3,MOTINAGAR,NEW DELHI - 110015
384. SAYA AUTOMOBILES LTD (-2B), KHASRA NO.2.G.T. KARNAL ROAD,OPP. GURUDUARA HARGOVIND SINGH,SIRAS PUR BADLI,DELHI - 110033
385. COMPETENT AUTOMOBILES CO LTD (-06), 14, SHIVAJI MARG, NAGAFGARH ROAD, NEW DELHI - 110015

386. RANA MOTORS PVT LTD (-04), B-6/6, OKHLA INDUSTRIAL AREA PHASE-II, NEW DELHI - 110020
387. PREM MOTORS PVT LTD (-01), KH. NO.804/2,MAHIPALPUR MATA CHOWK, DELHI - 110037
388. AAA VEHICLELEASES PRIVATE LIMITED (-03), VILLAGE GHEVRA, KHASRA NO.87/3, 87/8 & 87/13/1, DELHI-ROHTAK ROAD, METRO PILLAR NO.616, MUNDKA, NEW DELHI - 110041 PH -9717092903.
389. RANA MOTORS PVT LTD (-05), A-8, RAJASTHANI UDYOG NAGAR, NEAR AZADPUR FRUIT MARKET, G.T. KARNAL ROAD, OPP. METRO PILLAR NO.119, DELHI - 110033
390. T R SAWHNEY MOTORS PVT LTD (-01), B-19, MAYAPURI INDUSTRIAL AREA, PHASE-1, NEW DELHI - 110064
391. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (-02), 9/55 KIRTI NAGAR, INDUSTRIAL AREA, NEW DELHI - 110015
392. MAGIC AUTO PVT LTD (-01), PLOT NO. 449 & 450, PATPARGANJ INDUSTRIAL AREA, NEW DELHI - 110092
393. DD MOTORS (A DIVISION OF D.D. MOTORS MOBILITY) (-03), 858 RANAJI ENCLAVE, NAGLI SAKRAWATI, NAJAFGARH, NEW DELHI - 110043
394. PREM MOTORS PVT LTD (-01), 36/22/2 AND 36/19, PANA UDHYAN, NARELA, NEW DELHI - 110040
395. DD MOTORS(A DIVISION OF D.D. MOTORS MOBILITY (-01), 32/19, MATIALA, BEHIND DELHI PUBLIC SCHOOL, SECTOR-3, DWARKA, NEW DELHI - 110059
396. FAIR DEAL WHEELS PVT LTD (-01), PLOT NO 25, KHATA KHATAUNI NO.97/98, KHASRA NO.48/17, OPP. BRAHMSHAKTI HOSPITAL, BUDH VIHAR, POOTH KALAN, MAIN KANJIAHALWA ROAD, DELHI - 110086 PH -3448690737.
397. COMPETENT AUTOMOBILES CO LTD (-07), 23/2, MATIALA PHIRNI, POCKET C, SECTOR 3, DWARKA, DELHI - 110059
398. AAA VEHICLELEASES PRIVATE LIMITED (-01), B243, OKHLA PHASE-1, OKHLA, DELHI - 110020 PH -8448582912.
399. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (-05), A-90, WAZIRPUR INDUSTRIAL AREA, NEW DELHI-110052 - 110052 PH -9310367233.
400. JAGMOHAN AUTOMOTIVES PVT LTD (-01), PLOT NO. 69/2, WAZIRPUR INDUSTRIAL AREA, NEW DELHI, PIN-110052 - 110052 PH -9650790351.
401. RANA MOTORS PVT LTD (-08), B-83, GTK ROAD INDUSTRIAL AREA, DELHI - 110033 PH -9289496300.

402. SHREYASH AUTOMOTIVES PVT LTD (-01), PLOT NO.2, SSI INDUSTRIAL ESTATE, GT KARNAL ROAD, NEW DELHI - 110063 PH -43288888.
403. SHREYASH AUTOMOTIVES PVT LTD (-02), A-3, WAZIRPUR INDUSTRIAL AREA, DELHI - 110052
404. VIPUL MOTORS PVT LTD (-01), B-26, JHILMIL INDUSTRIAL AREA, DELHI -110095 - 110095 PH -9811233385.
405. COMPETENT AUTOMOBILES CO LTD (-08), 43/12, NAJAFGARH BAHBURGARH ROAD, NEW ANAJ MANDI, NEAR JAAT BAHAWAN, NAJAFGARH, PIN-110043, DELHI - 110043
406. PREM MOTORS PVT LTD (-02), GROUND FLOOR, PLOT NO. C-7, SMA CO-OPERATIVE INDUSTRIAL AREA, GTK ROAD, AZADPUR, PIN-110033, DELHI - 110033
407. SINGLA LINK AGENCY PVT LTD. (-01), 395 PATPAR GANJ INDL. AREA,PATPARGANJ,NEW DELHI - 110092
408. JAGMOHAN AUTOMOTIVES PVT LTD (-02), KH. NO. 26/34/7/8 REVENUE ESTATE NANGLI SAKRAWATI INDUSTRIAL AREA, DELHI-110043. - 110043
409. AAA VEHICLELEASES PRIVATE LIMITED (-02), KH. NO.-32-33 VILLAGE SHAHOORPUR, SATBARI, NEAR FATEHPUR BERI, IN-FRONT SKY-MANSION TOWER, CHATTARPUR, PIN-110074, DELHI - 110074
410. FAIR DEAL WHEELS PVT LTD (-01), F-13, CHAND BAGH, MAIN WAZIRABAD ROAD, BHAIJANPURA DELHI - 110053
411. SINGLA LINK AGENCY PVT LTD. (-02), E-26, B1 EXTENSION, MOHAN COOPERATIVE INDUSTRIAL AREA, MATHURA ROAD, NEW DELHI - 110044 - 110091
- GOA**
- BICHOLIM**
412. SAI SERVICE PRIVATE LIMITED (-01), CITY SURVEY NO. 46/1, MUSLIM WADDO, BICHOLIM, GOA - 403529
- CANACONA**
413. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), PLOT NO.40, CANCONA INDUSTRIAL ESTATE, SHREESTAL, CANCONA, SOUTH GOA - 403702
- CUNCOLIM**
414. SAI SERVICE PRIVATE LIMITED (3402-06), SURVEY NO.64/7, SHOP NO.3-A-II, CANCNAAMODDI, CUNCOLIM, SOUTH GOA - 403703
- DHARBANDORA**
415. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-07), AT- KHANDEPAR- UGAON, TAL-DHARBANDORA, SOUTH GOA - 403401
- GOA**

Dealer Workshop (AS ON 31.01.2026)

416. SAI SERVICE PRIVATE LIMITED (3402-03), OFF PANJIM HIGHWAY,PONDA,GOA. - 403401

MAPUSA

417. SAI SERVICE PRIVATE LIMITED (3402-05), D-2/9,MAPUSA INDUSTRIAL ESTATE,MAPUSA, GOA. - 403507
418. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-03), PLOT NO. 19/20,THIVIM INDUSTRIAL ESTATE,KARASWADA, MAPUSA,GOA - 403507

MARGAO

419. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-01), OPP.DAMODAR TEMPLE,FATORDA,MARGOA,GOA - 403602
420. SAI POINT CARS PVT LTD (3409-01), H.NO.17,WARD NO.5,SURVEY NO.34/3,34/4,MARGAON PONDA HIGHWAY,SONFATOR AMBORA,CAMURLIN,SALCETE ,GOA - 403722
421. SAI SERVICE PRIVATE LIMITED (3402-02), SURVEY NO. 212/4,VILLAGE - VERNA,TAL : SALCETE ,NEXT TO AGNEL POLYTECHNIC, MARGAO - 403718
422. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-08), PLOT NO. M-58 AND M-59, PHASE 3B, VERNA INDUSTRIAL ESTATE, MARGAO, VERNA, SALCETE SOUTH GOA, GOA - 403722

PANAJI

423. SAI SERVICE PRIVATE LIMITED (3402-01), SURVEY NO: 36/1,PENHA DE FRANCE,TAL : BARDEZ, ALTO PCRVORIM,GOA - 403501
424. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-02), D.B.BANDODKAR MARG,CAMPAL,PANAJI,GOA - 403001
425. SAI SERVICE PRIVATE LIMITED (3402-07), SHED NO.18/329, PLOT NO.5A, SURVEY NO.117/6, TELEIGAON, ST. INEZ, PANJIM, GOA-403 002. - 403001

PERNEM

426. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SURVEY NO. 258/1-B & 258/1-C, OPPOSITE INDUSTRIAL TRAINING INSTITUTE, TALUKA - PERNEM, DIST.-NORTH GOA. - 403512
PH :8380082893.

SANVORDEM

427. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SURVEY NO. 4, SUBDIVISION-3, VILLAGE - CACORA, TALUKA - CURCHOREM, SANVORDEM, DIST. - SOUTH GOA, GOA. - 403706
PH :9850477607.

SATTARI

428. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-10), SURVEY NO. 60, SUB DIV NO. 05, VILLAGE,ARVALEM, VILLAGE PANCHAYAT ARVALEM, TALUKA SATTARI, NORTH GOA, GOA - 403505
PH :9923464422.

TALEGAO

429. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-06), SURVEY NO. 122, MAHBOB, NEAR SHANKARWADI TEMPLE, SHANKARWADI, TALEGAON. - 403001

VASCO

430. SAI SERVICE PRIVATE LIMITED (3402-04), NEXT TO SHIKALIM CHURCH,SHIKALIM,VASCO,GOA - 403802
431. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408-09), OPP BHRAMASTAL TEMPLE, PATRONG BAINA, VASCO,GOA - 403802

GUJARAT

AHMEDABAD

432. KIRAN MOTORS LIMITED (-01), SARKHEJ - GANDHINAGAR HIGHWAY,OPP. RAJPATH CLUB,AHMEDBAD - 380054
433. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), D/8 BEHIND ESI HOSPITAL,OUTSIDE DARIAPUR DARWAJA,AHMEDBAD - 380016
434. POPULAR WHEELERS (INDIA) PVT LTD (-01), PATEL TRUST BUILDING, AVTAR HALL,NAROL, NARODA HIGHWAY,ISANPURA ROAD,AHMEDABAD - 382443
435. KIRAN MOTORS LIMITED (-02), BEHIND L&T GODOWN,SARKHEJ SANAND HIGHWAY, AHMEDABAD - 382210
436. KATARIA AUTOMOBILES PRIVATE LIMITED (-05), NEAR KOKHRA BRIDGE,MANINAGAR - 380008
437. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), BEHIND ADANAL PUMP, NEAR MAKARBA CROSSING, MAKARBA,SG HIGHWAY - 380051
438. POPULAR WHEELERS (INDIA) PVT LTD (-01), BESIDE SOLA ROAD BRIDGE,S.G. HIGHWAY SOLA,AHMEDABAD - 380054
439. KIRAN MOTORS LIMITED (-01), SURVEY NO. 82/1/1, NEAR H.P. PETROL PUMP, MOTERA ROAD, CHANDKHEDA, AHMEDABAD - 380005
440. UDAY AUTOLINK PVT LTD (-01), NEAR GALAXY SPACIA, OPP. DASTAN FARM, S. P. RING ROAD, KATHIWADA, AHMEDABAD, GUJARAT - 382430
441. NANDA AUTOMOBILES PVT LTD (-01), SURVEY NO. 229/3, OPP. GOKULESH PETROL PUMP, NAROL - ASLALI ROAD, NAROL, AHMEDABAD, GUJARAT. - 382405
442. STARLINE CARS PVT LTD (-01), PLOT NO. 103/2, NANDA CHILODA, NEAR RAILWAY CROSSING, KRISHNANAGAR ROAD, NARODA, AHMEDABAD - 382330

443. KIRAN MOTORS LIMITED (-02), FINAL PLOT NO.33/1/1, NEAR SHRUSHTI LAVISH, OPP. SHYAM VILLA-II, NARODA-NIKOL ROAD, NIKOL DISTT. AHMEDABAD - 382330

444. KIRAN MOTORS LIMITED (-04), SURVEY NO. 245/3, TP SCHEME NO. 43, NEAR KARGIL PETROL PUMP, SCIENCE CITY ROAD, AHMEDABAD - 380060

445. POPULAR WHEELERS (INDIA) PVT LTD (-01), BEHIND G. B. SHAH COLLEGE, NEAR SWAMINARAYAN PARK, VAISHALI TOWNSHIP ROAD, VASNA, AHMEDABAD, GUJARAT. - 380007

446. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (-01), PLOT NO. 116, BOPAL - AMBIL ROAD, BOPAL , AHMEDABAD, DISTRICT - AHMEDABAD, GUJARAT. - 380058

447. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (-01), PLOT NO.116 & 118/2. SARDAR PATEL RING ROAD, VASTRAL, AHMEDABAD - 382418

448. TANU MOTORS PVT LTD (-01), SURVEY NO. 1155/1-2, 1154 & 1156, PLOT NO. 39, SARKHEJ-SANAND ROAD, SANAND, AHMEDABAD (GUJARAT) - 382110

449. STARLINE CARS PVT LTD (-09), SR NO - TP - 57, PLOT NO. 67, NEAR GOTA FLYOVER BRIDGE, OPP. SHANKU FARM HOUSE, S.G. HIGHWAY, GOTA, AHMEDABAD - 382481

450. KATARIA AUTOMOBILES PRIVATE LIMITED (-02), PLOT NO. 112, 116 & 119, SURVEY NO. 283/3.7.10, B/H SILVER STAR, BESIDE HARI VILLA BUNGLOWS, GOTA ROAD, CHANDLODIYA, AHMEDABAD. - 382481

451. KATARIA AUTOMOBILES PRIVATE LIMITED (-10), SURVEY NO. 247, TP NO. 73, OPP. PAVITRA ENCLAVE, MANSAROVER ROAD, NEAR HARI OM FARM, TRAGAD, CHANDKHEDA, AHMEDABAD - 382470

452. NANDA AUTOMOBILES PVT LTD (-02), PLOT NO-6, BEHIND HP PETROL PUMP, OPP. UMIYA TEMPLE, CANAL ROAD, THALTEJ-SHILAJI ROAD, AHMEDABAD -380059. - 380059

453. KIRAN MOTORS LIMITED (-05), AMBER STATE, NEAR HONDA WORKSHOP, OPP. MG MOTORS, SANATHAL, AHMEDABAD - 382210

AMBAJI

454. TANU MOTORS PVT LTD (-01), OPP KUMBHARIYA JAIN DERASAR, GIDC ROAD, AMBAJI, DIST-BANASKANTHA, GUJARAT 385110 - 385110
PH :9727709222.

AMOD

455. RAVIRATNA MOTORS PVT LTD (-03), ROYAL PARK, JAMBUSAR-BHARUCH ROAD, AMOD, DISTRICT: BHARUCH, GUJARAT. - 392110

AMRELI

456. ALPHA AUTOLINK LLP (-01), R.S NO 151/152, OPP GANESH GINNING, AMRELI BYE PASS ROAD, AMRELI - 365601

ANAND

457. AMAR CARS PVT LTD (-01), JANTHA CROSSING,SOJITRA ROAD,ANAND - 388121
PH :9909960772.
458. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO. 189/1+2/A+3/A/K 190/P, OPP. OLD JAKAT NAKA, NEAR RAILWAY OVERBRIDGE, ANAND-CHIKHODRA ROAD, ANAND, GUJARAT. - 388120
PH :7698954466.

ANKLAV

459. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), AMBICA COMPLEX, GROUND FLOOR SHOP NO. B, C AND D, ASODAR CHOKDI, TAL. ASODAR, CITY ANKLAV, DIST. ANAND, PIN-388510, GUJARAT - 388510
PH :7227917151.

ANKLESHWAR

460. RAVIRATNA MOTORS PVT LTD (-01), PLOT NO. 624/2/B, GIDC, VALIA ROAD, ANKLESHWAR - 393002
PH :9687691063.

BAGODRA

461. NANDA AUTOMOBILES PVT LTD (-01), SHOP NO. 9, 10, 11, 12, KAMDHENU COMPLEX, BAGODRA HIGHWAY, NR. SBI BANK, BAGODRA. - 382240

BALASINOR

462. AMAR CARS PVT LTD (-01), SR. NO. 1451, OPP. OIC PETROL PUMP, AHMEDABAD HIGHWAY (NH-47), KANTHARJUNA MUWADA, VILLAGE - VADALA, TALUKA - BALASINOR, DISTRICT - MAHISAGAR, GUJARAT. - 388255
PH :7211109960.

BARDOLI

463. DHURU MOTORS (4002-02), G.I.D.C.SURAT BARDOLI ROAD,BARDOLI. - 394601
464. KATARIA AUTOMOBILES PRIVATE LIMITED (-02), BLOCK NO.13, NANDIDA CROSS ROAD, BARASADI VILLAGE, SURAT-BARDOLI ROAD, BARDOLI, GUJARAT - 394310

BAREJA

465. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), NH 64, BAREJA, DISTRICT AHMEDABAD, GUJARAT - 382425
PH :7046079997.

BARWALA (AHMEDABAD)

466. UDAY AUTOLINK PVT LTD (-01), OPP. HILTON HOTEL, BHAVNAGAR HIGHWAY, TA BARWALA, DIST. AHMEDABAD - 382450

BAVLA

467. KATARIA AUTOMOBILES PRIVATE LIMITED (-07), NEAR ESSAR PETROL PUMP, BAVLA -AHMEDABAD HIGHWAY, BAVLA - 382220	479. KATARIA AUTOMOBILES PRIVATE LIMITED (-19), PLOT NO.13, SURVEY NO 33,34, AND 35 PAIKKI VILLAGE, HADADAD, OPP. PATEL HYUNDAI SHOWROOM, PALIVAD BOTAD ROAD - 364710 PH :95508060658.	DAHOD	499. TANU MOTORS PVT LTD (-01), SURVEY NO. 722, OPPOSITE RANI RUDY MATAJI MANDIR, DHOLKA KALIKUND HIGHWAY, DHOLKA, GUJARAT - 382225 PH :9512009104.
BECHARAJI		499. R B CARS PVT LTD (-02), NEAR SIMANDHAR JAIN TEMPLE, OLD INDORE HIGHWAY,DAHOD - 389151	
468. STARLINE CARS PVT LTD (-01), R.S. NO. 336 PAIKI, MOJE-BECHAR (BECHARAJI), TALUKA - BECHARAJI, DIST -MEHSANA. - 384210 PH :9909043244.	CHANASMA	DANTIWADA	DHORAJI
BHABHAR	480. STARLINE CARS PVT LTD (-01), 16/17, PASABHI COMPLEX, NEAR ROYAL PALACE HOTEL, MEHSANA HIGHWAY, CHANASMA. - 384220	490. TANU MOTORS PVT LTD (-01), VISHWAS COMPLEX, OPP HINGLAJ PETROL PUMP, NR. JAIN DERASAR, DANTIWADA HIGHWAY, AT-PO PANTHWADA, TALUKA-DANTIWADA, DIST-BANASKANTHA - 385545 PH :909990424.	500. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-09), JETPUR ROAD, OPP. SHRINATHJI SOCIETY, DHORAJI - 360410
469. STARLINE CARS PVT LTD (-01), SHOP NO. 7, 8 ,9, SIDDHI VINAYAK BUSINESS HUB, R.S. NO. 225, PANJRAPOLE ROAD, BHABAR, DIS. -BANASKANTHA, GUJARAT. - 385320	CHANDRALA	DEDIAPADA	DHRANGADHRA
BHACHAU	481. NANDA AUTOMOBILES PVT LTD (-01), HIMMATNAGAR HIGHWAY NO.8, NEAR DEVANSHI PARTY PLOT, CHANDRALA, DIST- GANDHINAGAR, GUJARAT - 382320	491. RAVIRATNA MOTORS PVT LTD (-01), SURVEY NO-124/45, PLOT NO-1, VILLAGE-NIVALDA, TA-DEDIAPADA, DIST-NARMADA. - 393040	501. DREAM VEHICLES PVT LTD (-01), PLOT NO. 79, SURENDRANAGAR- DHRANGADHRA ROAD, OPP. ARMY WORKSHOP, DISTRICT-SURENDRANAGAR. - 363310 PH :9227775725.
470. K D MOTORS (-02), SUNRISE MALL,OPP. BUS STAND,BHACHAU BHUJ ROAD, BHACHAU, GUJARAT - 370140	CHANGODAR	DEESA	DIYODAR
BHANVAD	482. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (-01), SURVEY NO.353, VILLAGE - MORAIYA, CHANGODAR, TALUKA - SANAND, SUN DISTT -AHMEDABAD. - 382210 PH :7211120014.	492. TANU MOTORS PVT LTD (-03), NH-14, NR. ESSAR PETROL PUMP, RADHANPUR HIGHWAY, HANUMAN NAGAR, MALGADH, DEESA - 385535 PH :9909006099.	502. TANU MOTORS PVT LTD (-01), NR.HP PETROL PUMP, BHEASA CROSS ROAD, BHABHAR HIGHWAY,DIYODAR-385330 PH :9099017756.
471. ATUL MOTORS JAM LLP (-01), R.S. NO.439, PLOT NO.19, BHANVAD (GUJARAT) - 360510	CHHOTAUDEPUR	DEHGAM	DWARKA
BHARUCH	483. KIRAN MOTORS LIMITED (-01), PLOT NO. 29-30, SURVEY NO. 137, OPP. TO SP OFFICE, CHHOTA UDEPUR - 391165	493. NANDA AUTOMOBILES PVT LTD (-03), SURVEY NO. 311, MOJE PALIYA TALUKA DEHGAM, GANDHINAGAR, GUJARAT-382305 - 382305	503. ATUL MOTORS JAM LLP (-01), SURVEY NO. 41, NEAR, SHRI SANTAN SEVA MANDAL, CORNER PLOT OF STATION ROAD AND HIGHWAY ROAD, DWARKA, DISTRICT - DWARKA - . - 361335
472. RAVIRATNA MOTORS PVT LTD (-01), NH 8, OPP YOGI PETROL PUMP,P.O. ZADESHWAR,BHARUCH - 392011	CHIKHLI	DETROJ	GANDHI NAGAR
BHAVNAGAR	484. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO.461, VILLAGE-MAJIGAM, TALUKA-CHIKHALI, DISTT-NAVSARI, GUJARAT - 396521 PH :7698953899.	494. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (-01), PLOT NO-61,MILKAT NO-2534, AT-DETROJ,TALUKA-DETROJ-RAMPURA-382120 - 382120 PH :7971846442.	504. NANDA AUTOMOBILES PVT LTD (-01), 1003,SECTOR-28,GANDHI NAGAR - 382028
473. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO 137/2, PLOT NO 301/2&3 AND 301/4&5, VERTEJ GIDC, NARI CHOWKDI, RAJKOT ROAD, BHAVNAGAR. - 364004 PH :9426168286.	CHILODA	DEVGARHBARIA	505. NANDA AUTOMOBILES PVT LTD (-05), PLOT NO. 805, GIDC, SECTOR-28, GANDHINAGAR. - 382028
474. KATARIA AUTOMOBILES PRIVATE LIMITED (-02), PLOT NO-29, NR. TALAJA OCTROI CIRCLE, JAKATNKA, AT-ADHEHALADA, DIST-BHAVNAGAR, GUJARAT - 364002. - 364002 PH :9638884422.	485. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (-01), PLOT NO. 332, BESIDES GALLOPS TATA, NH-8, CHILODA-HIMMATNAGAR HIGHWAY, CHILODA. - 382355	495. R B CARS PVT LTD (-05), BESIDE ARIHANT PETROL PUMP, PIPLOD ROAD, DEVGADH BARIA - 389380	GANDHIDHAM
BHUJ	CHOTILA	DHANERA	506. B.M. AUTOLINK (7702-03), SURVEY NO.129/26 P. GALPADAR HIGHWAY, GANDHIDHAM , DISTT.KACHCHH, GUJARAT. - 370110
475. K D MOTORS (-01), PLOT NO. 5/6/14,UMANAGAR,MIRZAPUR HIGHWAY ROAD , BHUJ, GUJARAT - 370001	486. DREAM VEHICLES PVT LTD (-01), SURVEY NO. 31, PLOT NO. 1, NILKANTH SOCIETY, NH NO. 8A, AHMEDABAD-RAJKOT, AT & PO - CHOTILA, DISTRICT - SURENDRANAGAR, GUJARAT. - 363520 PH :9227775709.	496. TANU MOTORS PVT LTD (-01), 01 & 02, MARUTI NANDAN COMPLEX, NEAR ESSAR PETROL PUMP, DHANERA-DEESA HIGHWAY, DHANERA. - 385310	GODHRA
476. K D MOTORS (-03), R.S NO. 25/2, 25/3, 26/2, PLOT NO. 57 TO 61, VILLAGE - MIRZAPUR, TALUKA - BHUJ, GUJARAT. - 370001 PH :9909953124.	CHUDA	DHARAMPUR	507. R B CARS PVT LTD (-01), PLOT NO. 112/11,12-VAVDI,GODARA - DAHOD HIGHWAY, GODHRA, PANCHMAHAL, GUJARAT - 389001
BODELI	487. DREAM VEHICLES PVT LTD (-01), NR. GOVT HOSPITAL,CHATARLIYA ROAD,CHUDA,SURENDRANAGAR. - 363410 PH :9313802500.	497. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO.29/3/P1, VILLAGE ASHURA NR. ASHURA CIRCALE, DHARAMPUR DISTT. VALSHAD, GUJARAT - 396050 PH :9723455291.	508. R B CARS PVT LTD (-04), SURVEY NO.107, LUNAWADA ROAD, GIDC, GODHRA, DISTT. PANCHMAHAL-389001. - 389001
477. KIRAN MOTORS LIMITED (-01), OPP.NARMADA GUEST HOUSE,DABHOI ROAD, BODELI, TALUKA: SANKHEDA,VADODARA - 391135 PH :9714592999.	DABHOI	DHARI	GONDAL
BORSAD	488. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), OPP. VEGA BUS STOP, NEAR VEGA CROSS ROAD, DABHOI-BODELI ROAD, DABHOI, TA:DABHOI, DI:VADODARA - 391110 PH :8156000463.	498. ALPHA AUTOLINK LLP (-01), PLOT NO. 9, DHARI - KHAMBHA ROAD, NEAR RAILWAY FATAK DHARI , TALUKA - DHARI, DIST. - AMRELI, GUJARAT. - 365640	509. ATUL MOTORS PVT LTD (5503-05), 8-B NATIONAL HIGHWAY, OPP. DAULAT OIL MILL, NR. NILKANTH VIRUDASHRAM, RAJKOT HIGHWAY, GONDAL - 360311
478. AMAR CARS PVT LTD (-01), BORSAD - TARAPUR HIGHWAY, BORSAD , DISTRICT - ANAND, GUJARAT - 388540		DHOLKA	510. ATUL MOTORS PVT LTD (5503-55-06), RAJKOT AHMEDABAD HIGHWAY, NR. CHANDARANA PETROL PUMP, OPP. GUJARAT SAMACHAR PRESS, AT. NAVAGAM RAJKOT - 360003 PH :9924688774.
BOTAD			

Dealer Workshop (AS ON 31.01.2026)

511. ATUL MOTORS PVT LTD (-01), NEAR ASHAPURA RAILWAY CROSSING, RAJKOT-PORBANDAR NATIONAL HIGHWAY, GONDAL-360311. - 360311	522. ATUL MOTORS JAM LLP (-02), C-36, MP SHAH ARUN UDYOG, SARUSECTION ROAD, JAMNAGAR - 361002	533. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), AT&POST. KAPRADA, DHARAMPUR - NASHIK ROAD, N.H.67& 848. TA.KAPRADA, DIST. VALSAD - 396065	543. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SANVIRA HAT BAZAAR, KHERGAM-DHARAMPUR HIGHWAY ROAD, SH-67, KHERGAM, PIN-396040. - 396040 PH :9624007774.
GOZARIA	523. ATUL MOTORS JAM LLP (-03), OPP MADHAV BAUG1, NEAR RAILWAY OVER BRIDGE, JAMNAGAR, GUJARAT-361006. - 361006 PH :9574004709.	KARJAN	KIM
512. VIMCO MOTORS PVT LTD (-01), 1597/339 P4 VISHNAGAR-GOZARIYA ROAD, GOZARIYA, DIST.-MEHSANA. - 382825 PH :7016623842.	JASDAN	534. AMAR CARS PVT LTD (-01), SURVEY NO.851/787 BESIDE PMT TOOLS, KANDARI, N.H.-8, KARJAN, DISTT-VADODRA (GUJARAT) - 391210	544. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO. 116-121, DAL MILL COMPOUND, OPP. SURAT JILLA SANGH, KIM CROSS ROAD, NH-8, KIM - 394110 PH :9732555185.
HALOL	524. ATUL MOTORS PVT LTD (5503-09), SURVEY NO. 1253, PLOT NO. 4, NEAR KALYAN PETROL PUMP. JASDAN-ATKOT HIGHWAY, JASDAN, DIST.-RAJKOT, GUJARAT. - 360050 PH :2654404142.	KATHLAL	KODINAR
513. R B CARS PVT LTD (-01), PLOT NO. 104/6 & 104/8, VADODARA - GODHRA HIGHWAY, NEAR NAVJIVAN HOTEL, HALOL, DISTRICT - PANCHMAHAL, GUJARAT - 389350	JHALOD	535. AMAR CARS PVT LTD (-01), MAHAVEER AUTO SHOWROOM, NADIAD ROAD, JB PLAZA, KATHLAL, GUJARAT. - 387630 PH :9909960761.	545. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), R.S.NO.222, PLOT NO.2, 3 SHOPS, KODINAR-362720 DISTT. JUNAGADH, GUJARAT - 362720
HALVAD	525. R B CARS PVT LTD (-01), SURVEY NO. 2550B/10, 11, AT - JHALOD, TALUKA- JHALOD, DISTRICT - DAHOD. - 389170	KAWANT	KOSAMBA
514. DREAM VEHICLES PVT LTD (-01), PLOT NO.5 & 6, NAKLANKDHAM TOWNSHIP, OPP. HONEST RESTAURANT, AHMEDABAD HIGHWAY, HALVAD DISTT. SURENDRANAGAR (GUJARAT) - 363330 PH :8238000965.	JUNAGARH	536. RAVIRATNA MOTORS PVT LTD (-01), SURVEY NO :35 , NASVADI KAVANT ROAD, KAVANT, DIST: CHOTTA UDEPUR. - 391170	546. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO-629, OPP. PIRAMAL GLASS COLONY, KIM KOSAMBA MAIN ROAD, KOSAMBA, DISTRICT- SURAT, GUJRAT - 394120
HANSOT	526. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-02), PLOT NO. 81-82,G.I.D.C. DOLATPURA,RAJKOT-JUNAGARH HIGHWAY, JUNAGARH - 362001	KESHOD	KUKARWADA
515. RAVIRATNA MOTORS PVT LTD (-01), AT UTRAJ, HANSOT, DISTRICT - BHARUCH. - 393030 PH :9687691063.	527. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-06), SURVEY NO.45/1, PLOT NO. 214-C/D/E/F, GIDC-I, DOLATPARA, JUNAGADH - 362001	537. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), R S NO. 125/1, GODOWN NO. 01, SONDARDA, TALUKA - KESHOD, DISTRICT - JUNAGADH, GUJARAT. - 362220 PH :7043999073.	547. STARLINE CARS PVT LTD (-01), SHOP NO.1741, 1742 AND PLOT NO.1752, KUKARWADA TALUKA, VIJAPUR, DISTT MAHESANA (GUJARAT) - 382830
HIMATNAGAR	KADI	KHAMBHAT	LAJPUR
516. KIRAN MOTORS LIMITED (-01), NEAR G.I.D.C,MOTIPURA, HIMMATNAGAR - 383001	528. STARLINE CARS PVT LTD (-07), OPP. COTTON MARKETING YARD, KADI-CHATRAL ROAD, TAL: KADI, DIST: MEHSANA - 382715 PH :8160707156.	538. AMAR CARS PVT LTD (-01), PLOT NO. 7/8/9, RAJMAHAL PARK, OPP. SARDAR CHATRALAY, LAL DARWAJA, GAYATRINAGAR ROAD, KHAMBHAT, TALUKA KHAMBHAT, ANAND DISTRICT, GUJARAT - 388620 PH :9909960772.	548. AMAR CARS PVT LTD (-01), NEAR INDIANOIL PETROL PUMP, ACHIN, NAVSARI ROAD, DIST. SURAT - 394235
HISAR	KAKANPUR	KHANVEL	LALSAR
517. COMET CAR SALES & SERVICE PVT LTD (4006-40-04), SAROLI VILLAGE, NEAR SAIBABA MANDIR, SURAT-OLPAD ROAD - 394520	529. R B CARS PVT LTD (-01), SURVEY NO.618/2, PAKI PLOT NO. 29.30,31 AT. KAKANPUR, TAL. GODHRA, DISTRICT. PANCHMAHAL PIN-388713. - 388713 PH :9099049347.	539. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO 40/3, SILVASA KHANVEL ROAD, KHANVEL, GUJARAT - 396230	549. R B CARS PVT LTD (-01), SURVEY NO-202, AT-LALSAR, LALSAR-LUNAWADA HIGHWAY, TALUKA-LUNAWADA PIN-388270. - 388270
IDER	KALAVAD	KHEDA	LAVANA
518. KIRAN MOTORS LIMITED (-01), SURVEY NO.69 IDAR-AMBAJI ROAD, IDAR DIST: SABARKANTHA - 383430	530. ATUL MOTORS JAM LLP (-01), SANIDHYA ARCADE, NEAR SANIDHYA PARTY PLOT, KALAVAD - DHORAJI ROAD, KALAVAD - 361160 PH :9574222111.	540. AMAR CARS PVT LTD (-01), S.NO.708, PLOT NO.1, VILLAGE-SOKHDA, TAL- MATER, DISTT. KHEDA, GUJARAT - 387570 PH :9909960761.	550. R B CARS PVT LTD (-01), AT PO -LAVANA, NEAR BABILIYA CROSSING, MODASA ROAD, LAVANA-389230 - 389230
JAMBUSAR	KALOL	KHEDBRAHMA	LIMBASI
519. RAVIRATNA MOTORS PVT LTD (-01), SURVEY NO-2939-2954, PLOT NO-2, VILLAGE-JAMBUSAR, TALUKA-JAMBUSAR, DIST-BHARUCH - 392150 PH :9687667595.	531. NANDA AUTOMOBILES PVT LTD (-01), PLOT NUMBER 1147, 1148, MEHSANA HIGHWAY, KALOL. GANDHINAGAR - 383028	541. KIRAN MOTORS LIMITED (-01), AMBAJI ROAD, KHEDBRAHMA, DIST. - SABARKANTHA, PIN - 383255 - 383255 PH :9824010721.	551. AMAR CARS PVT LTD (-01), SURVEY NO 2495, OPP PHC CENTER, VILLAGE -LIMBASI - 387250
JAMJODHPUR	KAPADVANJ	KHERALU	LIMBDI
520. ATUL MOTORS JAM LLP (-01), NEAR HDFC BANK, GAYATRI MANDIR ROAD, JAMJODHPUR, DIST-JAMNAGAR (GUJARAT) - 360530. - 360530 PH :9537888988.	532. AMAR CARS PVT LTD (-01), SAMARTH SQUARE, SHOP NO. 1, MODASA KAPADVANJ ROAD, KAPADVANJ, GUJARAT-387620 - 387620 PH :9909960761.	542. STARLINE CARS PVT LTD (-01), R S NO. 4962 MAHAVIR COMPLEX, KHERALU, DIST. -MEHSANA - 384325	552. DREAM VEHICLES PVT LTD (-01), SURVEY NO.276/1, NEAR PANCHVATI HOTEL, LIMDI CROSS ROAD, AHMEDABAD-RAJKOT HIGHWAY, LIMDI, DISTT. SURENDRANAGAR, GUJARAT. - 363421
JAMNAGAR	KAPRADA	KHERGAM	LUNAWADA
521. ATUL MOTORS JAM LLP (-01), SURVEY NO.422, PLOT NO. 16,17 & 19, JAMNAGAR, GUJARAT - 361001			553. R B CARS PVT LTD (-01), SURVEY NO.90, AT-BHAYASAR, GODHRA-LUNAWADA HIGHWAY, LUNAWADA , TALUK-LUNAWADA, DISTT-MAHISAGAR, GUJARAT. - 389230

MADHI	564. STARLINE CARS PVT LTD (-01), NAGALPUR HIGHWAY, MAHESANA , GUJRAT - 384002 PH :9909943635	575. AMAR CARS PVT LTD (-02), NEAR RAJHANS MULTIPLEX, NADIAD-UTTARSANDA ROAD - 387370 PH :9909960761.	585. TANU MOTORS PVT LTD (-01), OPP. DHARTI RESORT, ABU- AHMEDABAD HIGHWAY, PALANPUR - 385001 PH :9099017756
554. DHRU MOTORS (-01), MADHI SYADLA, BAJIPURA ROAD., ATPOS, MADHI, SYADLA, TAPI, - 394340	565. TANU MOTORS PVT LTD (-04), SURVEY NO.78, NEAR SUNRISE AUTOMOBILES (AMW DEALER), GUJARAT STATE HIGHWAY NO.41, MEHSANA - 384002 PH :9909006076.	NAKHATARANA	586. STARLINE CARS PVT LTD (-08), SURVEY NO.4 & 5/2, OPPOSITE L K PETROL PUMP, PALANPUR-DEESA HIGHWAY, PALANPUR-385001, DISTT BANASKANTHA, GUJARAT - 385001 PH :9824601793.
MAHUVA (BHAVNAGAR)	555. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), V.P. COMPLEX, BUNDER RD, NR. GAUSHALA, BARPARA, MAHUVA, GUJARAT 364290. - 364290 PH :6357327534.	576. K D MOTORS (-01), PLOT NO-1, RS NO-19, AT-NANA ANGIYA, TALUKA-NAKHATRANA, KUTCH PH :9909953119.	
MAHUVA (SURAT)	566. VIMCO MOTORS PVT LTD (-01), SURVEY NO. 104 & 104 PAIKI 1, AT P.O. - PALAVASANA, MEHSANNA, GUJARAT. - 384002 PH :8909953333.	NALIYA	PALEJ
556. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), BLOCK NO. 14/2, VILLAGE BUDHALESHWAR, SURAT SAPUTARA STATE HIGHWAY, TAL. MAHUVA, DIST. SURAT - 394250 - 394250	567. VIMCO MOTORS PVT LTD (-02), SHOP # 7&8, TIRUPATI SAHIBAGH MARKET, MEHSANA – RADHANPUR ROAD, NEAR SAHAJ VILLA, MEHSANA - 380002 - 380002 PH :8909953333.	577. K D MOTORS (-01), AT PO - SHAKTI SOCIETY, MAHAVIR NAGAR, PLOT(1), OPP. BANK OF BARODA, NALIYA, TAL-ABDASA, KUTCH. - 370655 PH :9909953119.	587. RAVIRATNA MOTORS PVT LTD (-01), PLOT NO. 626/6, GIDC AREA, PALEJ, DISTRICT - BHARUCH - 392220
MANAVADAR	METODA	NANA PONDHA	PALITANA
557. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), RS NO. 13/1, 14, PLOT NO. 48, BHAKTINAGAR, TALUKA - MANAVADAR, DIST -JUNAGADH. - 362630 PH :7043999073.	568. ATUL MOTORS PVT LTD (5503-08), PLOT NO. 2328, GATE NO. 2, METODA GIDC, METODA, TALUKA LODHIKA, DISTRICT - RAJKOT, GUJARAT - 360021	578. AMAR CARS PVT LTD (-01), SHOP NO 7-11, JALASHAI SHOPPING CENTER, AT-NANA PONDHA, TALUKA- KAPRADA, DIST-VALSAD - 396126 PH :7227971155.	588. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO 15, YASOV/JAYNAGAR, NEAR RAILWAY CROSSING, PALITANA HIGHWAY, PALITANA-364270 DIST BHAVNAGAR - 364270 PH :6357314891.
MANDAL	MODASA	NANDASAN	PALSANA
558. KIRAN MOTORS LIMITED (-01), SURVEY NO. 708, MANDAL - DETROJ HIGHWAY, NR. RELIANCE PETROL PUMP, MANDAL , DI: AHMEDABAD, GUJARAT. - 382130 PH :9408803925.	569. KIRAN MOTORS LIMITED (-02), SHAMLAL JI ROAD, SABARKANTHA DIST., MODASA - 383315	579. TANU MOTORS PVT LTD (-01), M/S TANU MOTORS PVT LTD, AT&PO-NANDASAN, TALUKA-KADI, DIST-MEHSANA 382705 - 382705	589. KATARIA AUTOMOBILES PRIVATE LIMITED (4004-07), BESIDE SAINATH COMPLEX, KADDODARA AHMEDABAD ROAD , NH-8, UMBHEL GAM, TALUKA: PALSANA KADODARA, SURAT. - 382721 PH :9924446895.
MANDVI	MORBI	NASWADI	PARDI
559. K D MOTORS (-01), PLOT NO.25.26 & 27, RAJ COMMERCIAL, SURVEY NO.246, NEAR 'THE BEACH RESORT', MANDVI NALIYA ROAD, MANDVI-KUTCH - 373665	570. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-07), SURVEY NO. 351/2, PLOT NO. 10, DHARTI INDUSTRIAL AREA, RAJUPURA ROAD, SANALA, MORBI , TEHSIL-MORBI, DISTT.-MORBI, GUJARAT. - 363641	580. RAVIRATNA MOTORS PVT LTD (-01), HOUSE NO-301,302,303, IN VALPURA-RAMLALNAGAR, VILLAGE AT-NASWADI, DIST: CHOTTA UDEPUR - 391150 PH :9687691047.	590. AMAR CARS PVT LTD (-01), OPPOSITE MORARJI DESAI MEMORIAL HALL, SERVICE ROAD N.H-48, KILLA-PARDI, DIST-VALSAD - 396125 PH :7226800777.
560. KIRAN MOTORS LIMITED (-01), C.S NO-3278, ZHANKHAVAV-MANDVI ROAD, DHOBANJ NAKA, MANDVI - 394160. - 394160	571. DREAM VEHICLES PVT LTD (-03), PLOT NO 2, DHARM GOLD INDUSTRIAL ESTATE, PIPLI JETPUR HIGHWAY, DIST MORBI, PIN 363642 - 363642 PH :7069089532.	NAVSARI	PATAN
MANGROL	MOTI KHAVADI	581. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO.-891, OPP PAUVA MILL, NH-8, NEAR GANESH SISODRA CHOKDI, GANESH SISODIA NAVSARI, GUJRAT - 396463 PH :9723430012.	591. STARLINE CARS PVT LTD (-02), CHANASMA HIGHWAY, PATAN - 384265 PH :7046046187.
561. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO. 12-28, MOSALI, MANGROL, DISTRICT-SURAT. - 394410 PH :6357071775.	572. ATUL MOTORS JAM LLP (-01), PLOT NO.22 & 29, NEAR PADANA POLICE STATION, JAMNAGAR-KHAMBHALIYA HIGHWAY, MOTI KHAVDI, ZANKHAR, TA: LALPUR, DIST - JAMNAGAR, GUJARAT. - 361140	NETRANG	PATDI
MANSA	MUNDRA-DOM	582. RAVIRATNA MOTORS PVT LTD (-01), SURVEY NO. 184, PLOT NO. 1 & 2, VILLAGE - NETRANG, TALUKA - VALIA, DIST.-BHARUCH. - 393130 PH :9687691063.	592. DREAM VEHICLES PVT LTD (-01), R.S. NO.1614/2, PLOT NO.16, PATDI TALUKA DASADA, DISTT. SURENDRANAGAR, GUJARAT - 382765 PH :9227775709.
562. NANDA AUTOMOBILES PVT LTD (-04), SURVEY NO. 1686, NR. UMA PETROLEUM (INDIAN OIL), RAJUPURA CROSS ROADS, MANSA GANDHINAGAR HIGHWAY, MANSA -382845. - 382845 PH :9727921000.	MUVAL	OLPAD	PAVI JETPUR
MEHMDABAD	574. AMAR CARS PVT LTD (-01), YOGI RESIDENCY MOVAL CHOKDI, PADRA- JAMBUSAR HIGHWAY – MUVAL, TALUKA-PADRA, VADODARA - 391430	583. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (4006-02), 1906/1907, OPP. KUMBHARVAD, JUNA PURA, OLPAD - 394540 PH :9099916099.	593. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), NEAR ANKUR HOTEL, OPP. DHARESHWAR GEB STATION, PITHADIA, RAJKOT HIGHWAY, JETPUR (GUJARAT) - 360370
563. AMAR CARS PVT LTD (-01), PATEL FALIYA, KHATRAJ, MEHMDABAD, DIST.-KHEDA, GUJARAT. - 387130 PH :9909960761.	NADIAD	PADRA	PETLAD
MEHSANA		584. AMAR CARS PVT LTD (2205-02), NEAR WESTERN BYPASS, AT SAMIYALA, PADRA, DIST - VADODARA, GUJARAT - 391440	594. AMAR CARS PVT LTD (-01), SURVEY NO. 396/2, RANGAIPUR VILLAGE, PETLAD, DIST.-ANAND. - 388450 PH :9099017608.
		PALANPUR	

POR			RAJPIPLA			SAYLA			628. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (-01), LAXMI PLAZA, SHOP NO. 21 & 22, SURAT DHULIYA HIGHWAY, TALUKA - SONGADH, DIST.-TAPI. - 384220 PH :9099916099.		
595.	AMAR CARS PVT LTD (-01), SANKRUTI COMPLEX, POR KAYAVAROHAN ROAD, OPPOSITE OM BUNGALOWS. POR GUJARAT 391243 - 391243		607.	RAVIRATNA MOTORS PVT LTD (-01), OPP. JALARAM SAW MILL, NEAR HARSIDDIH MATAJI TEMPLE, RAJPIPLA, DIST: NARMADA, GUJARAT - 393145		618.	DREAM VEHICLES PVT LTD (-01), LALGURU COMPLEX, SUDAMDA ROAD, SAYLA, DISTRICT SURENDRANAGAR, GUJARAT PIN 363430 - 363430 PH :922775709.		SUPEDI		
PORBANDAR			RAJULA			SELAMBA			629. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO-4827, PAIKI PLOT NO-18, MATRAVAD ROAD, GRAM-SUPEDI, DIST - RAJKOT - 360440 PH :9409497902.		
596.	ATUL MOTORS JAM LLP (-01), PLOT NO. 208, GIDC VANANA, NATIONAL HIGHWAY, PORBANDAR, DIST. PORBANDAR GUJARAT - 360577		608.	ALPHA AUTOLINK LLP (-01), R.S NO 96/3, PLOT NO-6 & 7, HINDORNA ROAD, RAJULA CITY, TALUKA-RAJULA. - 365560 PH :9033409043.		619.	RAVIRATNA MOTORS PVT LTD (-01), CITY SURVEY NO. NA124/21, VILLAGE - GHANSHERA, SELAMBA TALUKA- SAGBARA, DIST- NARMADA, PIN CODE:- 393050 - 393050		SURAT		
PRANTIJ			RANPUR			SHANKESHWAR			630. KIRAN MOTORS LIMITED (4001-40-01), SURAT-BARDOLI ROAD,DUMBHAL,NEAR PUNA JAKAT NAKA,SURAT - 395010		
597.	KIRAN MOTORS LIMITED (-01), NO.6/P, OPP. VEGETABLE MARKET, PRANTIJ HIGHWAY, VILLAGE-KHAMALPUR, TALUKA-PRANTIJ, DISTT. SABARKANTHA, GUJARAT - 383205		609.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO -624/1,P2 PALIYAD ROAD, TALUKA RANPUR, DIST- BOTAD, GUJARAT. - 382245		620.	STARLINE CARS PVT LTD (-01), MANIBHADRA SHOPPING CENTRE, SHANKHESHWAR HIGHWAY, SHANKHESHWAR (GUJARAT)- DIST: PATAN - 384246 PH :9824601729.		631.	DHRU MOTORS (4002-40-01), JEEVAN GANGA NAGAR,NEAR JEEVAN JYOT THEATRE,UDHNA MAIN ROAD,SURAT - 394210	
RADHANPUR			RAPAR			SHAPAR			632. KIRAN MOTORS LIMITED (4001-40-02), PANDESARA,BAMROLI ROAD,SURAT - 395002 PH :9824603880.		
598.	STARLINE CARS PVT LTD (-01), SURVEY NO. 208/A, MOUJA - RADHANPUR, RADHANPUR MAIN ROAD, DISTRICT - PATAN, GUJARAT. - 385340		610.	B.M. AUTOLINK (-01), PARAGRAP CHAAR RASTA RAPAR GHANDHIDHAM KUTCH - 370165 PH :9727725723.		621.	ATUL MOTORS PVT LTD (-01), SHOP NO. 1 TO 4, SURVEY NO. 305/1, PLOT NO. 169, SHAPAR, DISTRICT - RAJKOT, GUJARAT - 360024		633.	KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-04), TP NO. 6, SURVEY NO. 317/2, FINAL PLOT NO. 39, OPP SMS GARDEN, NEAR VIP ROAD, VESU, SURAT -395007 - 395007	
RAJKOT			SAMI			SHIHORI			634. KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-05), KATARIA ARCADE,OPP. RAJHANS CINEMA,DUMAS ROAD, PIPLOD, SURAT - 395007		
599.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-55-01), PERFECT HOUSE,GONDAL ROAD,VANDI,RAJKOT - 360004		611.	STARLINE CARS PVT LTD (-01), SHOP NO. 55-56, AMBESHWAR PLAZA, SAMI-HARIJ ROAD. - 384240		622.	TANU MOTORS PVT LTD (-01), OPP. PANCHMUKHI HANUMAN TEMPLE, SHIHORI - DEESA HIGHWAY, SHIHORI, TA- KANKREJ, DIST- BANASKANTHA.385550 - 385550		635.	COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (4006-40-01), CHIKUWADI COMPLEX, GHB ROAD, PANDESARA, SURAT. - 394221 PH :9099915995.	
600.	ATUL MOTORS PVT LTD (5503-55-01), PLOT NO.49/1 & 2, GIDC, BHAKTI NAGAR INDUSTRIAL ESTATE, RAJKOT. - 360002 PH :8140909093.		612.	VIMCO MOTORS PVT LTD (-01), SURVEY NO 917, VIRA SHOPPING CENTER, AT-SAMI, TALUKA-HARIJ, DIST-PATAN, GUJARAT. - 384245 PH :8909953333.		SIDHPUR			636. KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-08), BLOCK NO.233, TP NO.8, OPP. SHREE LEKHA RESIDENCY, PALANPORE, ADAJAN, SURAT - 394310 PH :9924119020.		
601.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-55-04), 150 RING ROAD,OPP. GANDHIGRAM POLICE CHOWKI,RAJKOT - 360005		SANTEJ			623.	STARLINE CARS PVT LTD (-01), PLOT NO. 140-1285/7, SIDHPUR, TALUKA - VADGAM, DISTRICT - PATAN. - 384151		637. KIRAN MOTORS LIMITED (4005-01), PLOT NO. 443, PP NO. 26 MOJE PALGAM, ADAJAN, SURAT - 395009		
602.	ATUL MOTORS PVT LTD (5503-55-02), BEHIND HP PUMP,UNIVERSITY ROAD ,NEAR SNK SCHOOL, RAJKOT - 360005 PH :8347005382.		613.	NANDA AUTOMOBILES PVT LTD (-01), SUB PLOT NO. 05, SHOP NO. 3 & 4, BLOCK NO. 1162, SANTEJ, KALOL. - 380060 PH :9727822000.		SIHOR			638. AMAR CARS PVT LTD (4009-02), PLOT NO.10811, SURVEY NO.7 & 9, SONARAS COMPOUND, NEAR DGVCL OFFICE, KARMNATH MAHADEV TEMPLE LANE, KAPODARA, VARACHHA ROAD, SURAT - 395006 PH :7069026512.		
603.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-08), R.S. NO. 50/1, 150 FEET RING ROAD, RAIL NAGAR, RONKI, RAJKOT, GUJARAT. - 360006		SANTRAMPUR			624.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY PLOT NO 338, PAKKI 1 SIHOR BHAVNAGAR RAJKOT HIGHWAY. - 364240		639. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (4006-40-03), R. S. NO. 311, T. P. SCHEME-3, FINAL PLOT NO. 102/A, KATARGAM, SURAT, DISTRICT - SURAT, GUJARAT. - 395004 PH :9099916099.		
604.	KATARIA AUTOMOBILES PRIVATE LIMITED (5504-55-01), S. NO. 10/1, TPS NO. - 10, KALAVAD ROAD, MOTAMAVA, RAJKOT, GUJARAT. - 360001 PH :7573870001.		614.	R B CARS PVT LTD (-01), NEAR PTC COLLEGE, SANT ROAD, SANTRAMPUR,DISTT.- PANCHMAHAL - 389260		SINOR					
SARDHAR			SAVLI			625.	RAVIRATNA MOTORS PVT LTD (-01), NEAR SEVGA CHOKDI, SEVGA DABHOI ROAD, AT AND POST SEVGA, TALUKA SINOR, DIST. VADODARA, PIN-391105, GUJARAT - 391105 PH :7227055065.		SITAPUR		
605.	KATARIA AUTOMOBILES PRIVATE LIMITED (5504-55-02), OPP.ADARSH MARBLE,BESIDE SANNY PAJI KA DHABA, JAMNAGAR-RAJKOT HIGHWAY. - 360001		615.	ATUL MOTORS PVT LTD (-01), PLOT NO.1, NEAR VISHWA CATER FEED, RAJKOT-BHAVNAGAR NATIONAL HIGHWAY - 360025		SOJITRA					
RAJPARDI			SAYAN			626.	STARLINE CARS PVT LTD (-01), SHOP NO. 2, RUDRA ARCADE, REVENUE SURVEY NO. 129, VITHLAPUR (SITAPUR) BECHARAJI - VIRAMGAM HIGHWAY, DIST. AHMEDABAD, PIN CODE: 382120 - 382120				
606.	RAVIRATNA MOTORS PVT LTD (-01), R.S.NO.973, CTS NO. 1298, SHOPS PLOT NO.29 & 30, MOJE RAJPARDI, TALUKA-JHAGADIA, DISTT. BHARUCH - 393115		616.	KIRAN MOTORS LIMITED (-01), SURVEY NO. 2592/1 PAKKI 2, NEAR RELIANCE PETROL PUMP, BHADRVA CHOWKDI, SAVLI - TIMBA ROAD, SAVLI, TALUK - SAVLI, DISTRICT - VADODARA, GUJARAT. - 391770 PH :7984799054.		627.	AMAR CARS PVT LTD (-01), RAMDEV ARCADE, OPP. BUS STATION, AT - SOJITRA, DIST. - ANAND GUJARAT PIN 387240. - 387240 PH :9662357557.		SONGADH		
			617.	KIRAN MOTORS LIMITED (-01), PLOT NO.6 TO 10 OF R BLOCK, SURVEY NO.209, VILLAGE PARIYA, TALUKA- OLPAD, SAYAN - 394130							

640.	DHRU MOTORS (4002-40-03), PLOT NO.54/A, LAXMINARAYAN INDUSTRIAL ESTATE, UDHNA, SURAT-394210 - 394210 PH :9978900862.	651.	TANU MOTORS PVT LTD (-01), PLOT NO. 21 & 22, VAJEGADH, DEESA HIGHWAY, THARAD, DIST.-BANASKANTHA - 384220	660.	VIMCO MOTORS PVT LTD (-01), SHILALEKH COMPLEX, BLOCK-D, SURVEY NO-2713, VADNAGAR-VISNAGAR HIGHWAY, NEAR FOOD PARADISE HOTEL, VADNAGAR, GUJARAT - 385355 PH :7016623842.	673.	AMAR CARS PVT LTD (-01), SHAH ALKABEN JITENDRA KUMAR, VALETVA CHOWKI, NEAR VISAT MATA MANDIR, PADGOL ROAD, VALETVA, DIST.-KHEDA, GUJARAT - 388440
641.	KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-09), SR NO-465+476, PLOT NUMBER:-1-9 AND 13-23, GURU KRUPA SHOPPING, NRLAXMIBA PARK SOCIETY, NH 8, KHOLWAD, KAMREJ, SURAT-394190 - 394190	THASARA		VADODARA		VALIA	
642.	DHRU MOTORS (4002-40-06), TP NO.59, FP NO. 148, SUB PLOT NO-2, NEAR D'MART, MADHURAM CIRCLE, DINDOLI, SURAT - 394210	652.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO 1 & 2, GIDC THASRA, BESIDES NARMADA VASAHAAT, DAKORE THASRA ROAD, GUJARAT-388250 - 388250 PH :7984092780.	661.	KIRAN MOTORS LIMITED (2201-01), 909/A,G.I.D.C.MAKARPURA,VADODARA - 390010 PH :9624472699.	674.	RAVIRATNA MOTORS PVT LTD (-01), AT & PO VALIA, TA-VALIA, DIST. BHARUCH, VALIA - 393135
SURENDERNAGAR		TILAKVADA		662.	KIRAN MOTORS LIMITED (2201-02), PLOT NO. 160, SUB-I NUTAN GUJ.INDL. ESTATE,OLD CHHANI ROAD, VADODARA - 390002 PH :9824207889.	VALOD	
643.	DREAM VEHICLES PVT LTD (-01), 261/P, OPP MARKETING YARD,GIDC AREA, WADHWAN CITY, SURENDERNAGAR - 363030	653.	RAVIRATNA MOTORS PVT LTD (-01), SURVEY NO-157, VILLAGE- MOTI KAMSOLI, TALUKA-TILAKVADA, DIST-NARMADA, PIN-391120 - 391120	663.	AMAR CARS PVT LTD (2203-01), GORWA ROAD,VADODARA GUJARAT - 390016	675.	DHRU MOTORS (-01), PLOT NO.5 TO 9, TAIYABA PARK SOCIETY, AT & PO - VALOD, TALUKA - VALOD, DISTT. - TAPI, GUJARAT. - 394640 PH :9712984522.
644.	DREAM VEHICLES PVT LTD (-02), PLOT NO-504/B, GIDC PHASE-3, WADHWAN, SURENDRANAGAR, GUJARAT-363030 - 363030 PH :9227775724.	UMERGAON		664.	AMAR CARS PVT LTD (2203-22-02), KALA GHODA, OPP. KIRTI MANDIR, VADODARA, DIS: VADODARA, GUJARAT - 390001 PH :7211109952.	VALSD	
TALAJA		654.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), PLOT NO. 239, LORD COMPLEX, SHOP NO. B-9 AND B-10, UMERGAON, DISTRICT - VALSAD, GUJARAT. - 396170 PH :9624001794.	665.	KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-01), 984/4,GIDC, OLD NH-8,MAKARPURA ROAD, VADODARA, GUJARAT - 390010 PH :9904033422.	676.	KATARIA AUTOMOBILES PRIVATE LIMITED (-06), SURVEY NO. 211,ATUL-VALSAD ROAD,PARNERA,VALSAD, GUJARAT - 396020
645.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO-168, DHANJIBHAI BALADHIYA NI VADI, NEAR MAHUVA PALITANA CROSS ROAD, MAHUVA BHAVNAGAR HIGHWAY, TALAJA-364140 - 364140 PH :931662475.	UMRETH		666.	AMAR CARS PVT LTD (2205-22-01), VARASIYA AIRPORT ROAD, OPP POONAM CINEMA, KIRELBAUG, VADODARA, GUJARAT - 390016 PH :8980006756.	677.	AMAR CARS PVT LTD (9701-97-02), NEAR KALPANA WEIGH BRIDGE, OPP. VISHWAKARMA MANDIR, DHAMDACHI - 396001
TALALA		UNA		667.	KIRAN MOTORS LIMITED (2201-03), C/O ARBUDA COLD STORAGE, 823 POWER CABLE ROAD, DHARMSINH ROAD, OPP. UMA AMAR PARTY PLOT, NEAR CHHANI JAKAT NAKA, VADODARA - 390002 PH :27711122.	VANSDA	
646.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), SURVEY NO-55/9/1, PLOT NO-10, TALALA-VERAWAL HIGHWAY, AT-TALALA, DIST-GIR SOMNATH, 362150 - 362150 PH :8511147524.	656.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), SURVEY NO. 113, PLOT NO. 6, OPP. SWAMI VIVEKANAND VIDYALAYA, NEAR BANSIDHAR PETROL PUMP, BHAVNAGAR HIGHWAY, VAYAJPUR, UNA, DISTRICT - GIR SOMNATH, GUJARAT. - 362560	668.	KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-02), OPPOSITE SHARDA MANDIR HIGH SCHOOL, VINOBA BHAVE ROAD, SALATWADA, VADODARA - 390001 PH :8156017770.	VAPI	
TALOD		UNJHA		669.	RAVIRATNA MOTORS PVT LTD (2206-22-01), SURVEY NO. 1581, MILES HOUSE, ATLADARA ROAD, VADODARA - 390012	679.	KATARIA AUTOMOBILES PRIVATE LIMITED (-97-03), PLOT NO. C-29,NATIONAL HIGHWAY-8,G. I. D. C. VAPI, TAL. PARDI - 396195
647.	KIRAN MOTORS LIMITED (-01), SURVEY NO-168, NEAR BALAJI PARK, TALOD, TALUKA-TALOD, DIST-SABARKANTHA, PIN-383215 - 383215	657.	TANU MOTORS PVT LTD (-02), OPP. DHANA DAL FACTORY,MEHSANA PALANPUR HIGHWAY, UNJHA - 384170 PH :3772762079.	670.	KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-03), C/O SHIVAM TIMBER MART, BESIDES SIDDESHWAR PLAZA,NEAR SARDAR ESTATE, NEAR VIP ROAD, VADODARA -390019 - 390019	680.	KATARIA AUTOMOBILES PRIVATE LIMITED (-97-09), PLOT NO. 304/2, VILLAGE BALITHA, NH-8, OPP BABA SITARAM TEMPLE, NEAR SWAMINARAYAN SCHOOL, SALAV, VAPI , DISTRICT -VALSAD, GUJARAT - 369191
TANKARA		UPLETA		671.	KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-04), OPP. RUDRAKSH BLISS, RANG VATIKA ROAD, BAPOD, WAGHODIA - 390019	681.	AMAR CARS PVT LTD (9701-97-01), SURVEY NO. 1034, 1035, NEAR WOODLAND HOTEL, NH-8, VILLAGE - BALITHA, VAPI. - 396145 PH :9327909504.
648.	ATUL MOTORS PVT LTD (-01), PLOT NO. 8/1, S. NO. 107, VILLAGE - JABALPUR, TALUKA - TANKARA, SUB DISTRICT - MORBI, DISTRICT - RAJKOT. - 363650	658.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), S. NO. 184/1, PLOT NO. 15-16, UPLETA, GUJARAT - 360490	672.	RAVIRATNA MOTORS PVT LTD (-02), SURVEY NO 560, BEHIND IOCL PETROL PUMP,, VILLAGE-VELALI (SAMA), SAMA-SAVLI ROAD - 682024	VASO	
TARAPUR		VADGAM		VALETVA		682.	KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO -8, NEAR MADHURAM FARMHOUSE, MAUJA-VASO, DIST-KHEDA, GUJARAT - 387380
649.	AMAR CARS PVT LTD (-01), NEAR N K STEEL, TARAPUR ROAD, TARAPUR, DIST.-ANAND. - 388180 PH :9909960772.	659.	VIMCO MOTORS PVT LTD (-01), _ SURVEY NO-177, BESIDE ESSAR PETROL PUMP, VADGAM - PALANPUR ROAD, VADGAM, DIST - BANASKANTHA, GUJARAT - 385410 - 385410 PH :8909953333.			VERAVAL	
THANGADH		VADNAGAR				683.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-05), SR.988/2/P1/P1, AT VILLAGE-DARI, TALUKA - PATAN, JUNGADH VERAWAL HIGHWAY, CHATRODA CHOWK, VERAVAL - 362255
650.	DREAM VEHICLES PVT LTD (-01), NEAR GATE, OPP.RELIANCE PETROL PUMP, - 363530					VIJAPUR	
THARAD							

684. STARLINE CARS PVT LTD (-04), HIMMATNAGAR HIGHWAY, ANANDPURA CHAR RASTA, VIJAPUR - 382870 PH :9090043635.	693. MODERN AUTOMOBILES (1801-18-02), NEAR AMAR PALI RESTAURANT, G.T. ROAD, AMBALA - 134003 PH :9215016044.	703. DINCO 4 WHEELS LLP (AUTO VIBES) (-01), KHATA NO. 326 AND KHATAUNI NO. 362, OPPOSITE PRATHAM HOUSING, NH-8, RAWAL, DISTRICT - REWARI, HARYANA - 123501 PH :7082100250.	713. EAKANSH MOTORS PVT LTD (-01), PANCHMUKHI CHOWK, KARNAL ROAD, DHAND, DISTT. KAITHAL, HARYANA - 136020 PH :8395906111.
VIRAMGAM	694. EAKANSH WHEELS PVT LTD (1802-18-01), STONE NO. 126, JAGADARI ROAD, VILLAGE TEPLA, AMBALA - 133001 PH :9991703000.	BERI	DHARUHERA
685. KIRAN MOTORS LIMITED (-01), SURVEY NO.319/P, NILKI CHOKDI, VIRAMGAM, DISTT: AHMEDABAD, GUJARAT. - 382150 PH :8156016222.	695. EAKANSH WHEELS PVT LTD (1802-18-03), PLOT NO. 8, BASANT VIHAR, BEHIND SWASTIK MARBLE, NEAR MOTOR MARKET, AMBALA CITY, HARYANA - 133001 PH :88813874888.	704. COMPETENT AUTOMOBILES CO LTD (-01), KHASRA NO.9/19,KEWAT NO.320, BERI JHAJJAR ROAD,WAZIRPUR, - 124201	714. DINCO 4 WHEELS LLP (AUTO VIBES) (-01), KHASRA NO. 57, KILLA NO. 7, SOHNA-DHARUHERA ROAD, OFF SECTOR-4A, DHARUHERA, DIST.-REWARI. - 122106 PH :7082100270.
VISAVADAR	696. T R SAWHNEY MOTORS PVT LTD (1803-18-01), JAGGI GARDEN, BALDEV NAGAR, OPPOSITE AMBALA PASSPORT OFFICE, AMBALA - 134003 PH :9990110068.	BHIWANI	ELLENABAD
686. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (-01), OPP BUS STAND, AT PO-MANDAVAD, TAL-VISAVADAR, DIST-JUNAGADH, PIN-362130. - 362130	ASSANDH	705. JAGMOHAN AUTOMOTIVES PVT LTD (-01), DELHI ROHTAK ROAD, NEAR RADHA SWAMI SATSANG MANDIR, BHIWANI - 127021 PH :8685005592.	715. SHAKTI MOTORS PVT LTD (-03), SURERA CHOWNK, NEAR CHAUDHARI MANI RAM COLLEGE, SIRSA ROAD, ELLENABAD - 125055 PH :8222900250.
VISNAGAR	687. STARLINE CARS PVT LTD (-05), VISNAGAR -AMBAJI ROAD, OPP. DHAROI COLONY, VISNAGAR, DISTT - MEHSANA - 384315 PH :7046046174.	BILASPUR	FARIDABAD
VYARA	688. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (-01), SHOP NO. 11 & 12, BLOCK NO. 175/1/A, RS NO. 113, VYARA-SURAT ROAD, VYARA, DISTRICT - TAPI, GUJARAT - 394650 PH :9099916099.	706. PLATINUM MOTOCORP LLP (-02), KHASRA NO.5467, CHOUDHARY NIHAL SINGH MARKET, BILASPUR CHOWK, NH-8, BILASPUR, DISTRICT - GURUGRAM. - 122413	716. VIPUL MOTORS PVT LTD (5801-58-01), 27/5 KM, MAIN MATHURA ROAD, FARIDABAD - 121002
WAGHODIA	689. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), OPPOSITE BHARAT PETROLEUM, WAGHODIA, TALUKA - WAGHODIA, DISTRICT - VADODARA, GUJARAT. - 391760 PH :7203013712.	BILASPUR-HR	717. VIPUL MOTORS PVT LTD (5801-58-03), UNIT-II, PLOT NO. 1A 196, MATHURA ROAD, FARIDABAD - 121006
689. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), OPPOSITE BHARAT PETROLEUM, WAGHODIA, TALUKA - WAGHODIA, DISTRICT - VADODARA, GUJARAT. - 391760 PH :7203013712.	BABARPUR	707. PANDIT AUTOMOBILES PVT LTD (-01), NEAR GRAMIN BANK, JAGADHRI ROAD, BILASPUR, DISTRICT - YAMUNANAGAR, HARYANA. - 135102 PH :9992113854.	718. TCS AUTOWORLD (A UNIT OF TCS & ASSOCIATES PVT LTD) (5804-58-01), PLOT NO-1A, SECTOR-6, FARIDABAD. - 121001
WANKANER	698. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (-01), G.T. ROAD, NEAR PARK RESIDENCY, SHIMLA MAULANA, BADOLI, BABARPUR, DISTT. PANIPAT - 132103	CHARKHI DADRI	719. FAIR DEAL PREMIUM WHEELS PVT LTD (5807-58-01), PLOT NO.-17A, NIT INDUSTRIAL AREA, NIT FARIDABAD - 121003 PH :8448296686.
690. ATUL MOTORS PVT LTD (-01), RAJKOT-WANKANER HIGHWAY, NEAR JADESHWAR CHAMBERS, NEAR INTERNATIONAL CERAMIC, WANKANER (GUJARAT) - 363621	BAHADURGARH	708. JAGMOHAN AUTOMOTIVES PVT LTD (-02), BHIWANI LOHARU ROAD, CHARKHI DADRI, BHIWANI - 127306 PH :8059900538.	720. TCS AUTOWORLD (A UNIT OF TCS & ASSOCIATES PVT LTD) (5804-58-02), 20.4 KMS MILESTONE, BHASKAR COMPOUND, AMAR NAGAR, MAIN MATHURA ROAD, FARIDABAD, HARYANA. - 121003
HARYANA	699. COMPETENT AUTOMOBILES CO LTD (-01), PLOT NO. 1202, MIE PART B, BAHADURGARH, HARYANA - 124507 PH :8929648144.	CHEEKA	721. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (5806-01), 15/3, MATHURA ROAD, NEAR SECTOR-28, METRO STATION, FARIDABAD - 121003
ADAMPUR (HARYANA)	BAPOLI	709. EAKANSH MOTORS PVT LTD (-04), MARBLE MARKET, PATIALA ROAD, CHEEKA, HARYANA. - 136034 PH :8053086000.	722. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (5806-58-02), BYE PASS ROAD, PLOT NO. 12 SECTOR-9, FARIDABAD. - 121006
691. SARAOGI AUTOMOBILES PVT LTD (-01), KEWAT NO. 663, KHAT NO. 1147, KHESRI NO. 44/21/1/2(1-0), MANDI ADAMPUR, TEHSIL - ADAMPUR, DIST.-HISSAR, STATE - HARYANA. - 125052 PH :8607777153.	BARARA	CHHACHHRAULI	723. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (5806-58-03), 15-INDRA COMPLEX, NAHAR PAR NEAR SIDHARTHAS SCHOOL, FARIDABAD, KHERIALANM PIN-121002, HARYANA - 121002
AMBALA	700. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (-01), KHEWAT NO. 136, VILLAGE - JHAMBIA, TEHSIL - BAPOLI, DISTRICT - PANIPAT. - 132103 PH :9053400583.	710. PANDIT AUTOMOBILES PVT LTD (-01), HB NO. 311, NEAR MDAV SCHOOL, TEHSIL - CHHACHHRAULI, DISTRICT - YAMUNA NAGAR. - 135103 PH :9812455895.	FARMANA
692. MODERN AUTOMOBILES (1801-18-01), MODEL TOWN CROSSING, G.T.ROAD, AMBALA, HARYANA. - 134003 PH :9215016044.	BARWALA	DADRI TOE	724. JAGMOHAN AUTOMOTIVES PVT LTD (-01), NEAR PARAMOUNT SCHOOL OF SCIENCE, KHARKHODA ROAD, FARMANA, DISTRICT SONIPAT, HARYANA - 131408
	702. MODERN AUTOMOBILES (-01), KHEWAT(KHOTONI NO. 388, KHASARA NO. 46/9, 10, OPPOSITE AXIS BANK, VILLAGE BATAPUR, P.O. BARWALA, TEHSIL AND DISTT. PANCHKULA, HARYANA - 134118 PH :9896217059.	DAHINA	FARRUKHNAGAR
	BAWAL	712. DINCO 4 WHEELS LLP (AUTO VIBES) (-01), REWARI MAHENDERGARH ROAD, NEAR RAILWAY STATION, DAHINA, REWARI - 123411 PH :7082100201.	725. PLATINUM MOTOCORP LLP (-01), KHEVAT NO. 299, MUSTIL NO.-12, KHASRA NO.-19/3 AND 22/2, VILLAGE - SEHADPUR MOHAMADPUR, TEHSIL - FARRUKHNAGAR, DISTRICT - GURGAON. - 122506
		DHAND	

FATEHABAD

726. SHAKTI MOTORS PVT LTD (-01), NH-10, SIRSA ROAD, FATEHABAD - 125050
PH :8222900217.

FEROZEPUR JIHRKA

727. PASCO AUTOMOBILES (-01), VILLAGE - CHAK RANGLA, TEHSIL - FIROZPUR JIHRKA DIST - NUH - 122104

GANAUR

728. JAGMOHAN AUTOMOTIVES PVT LTD (-01), SAROJ GARDEN, GT ROAD, GANNAUR, DISTRICT SONIPAT
RAILWAY ROAD, GANNAUR - 131101
PH :8199911106.

GHARAUNDA

729. KARNAL MOTORS PVT LTD (8906-05), WARD NO.-1, BEHIND GOVT. SR. SEC. SCHOOL COLONY, GHARAUNDA, - 132114
PH :8222023231.

GOHANA

730. JAGMOHAN AUTOMOTIVES PVT LTD (-01), NEAR KHANPUR CHOWNK, ROHTAK PANIPAT HIGHWAY, GOHANA, DISTT. - SONEPAT - 131301
PH :8685005521.

GURGAON

731. PASCO AUTOMOBILES (9506-95-01), PASCO HOUSE, 6 PALAM GURGAON ROAD, INDUSTRIAL ESTATE, GURGAON - 122006
732. VIPUL MOTORS PVT LTD (5801-95-02), 504, UDYOG VIHAR, PHASE-III, GURGAON - 122001
733. COMPETENT AUTOMOBILES CO LTD (9505-95-01), A-25, INFOCITY, SECTOR-33, GURGAON - 122004
734. PASCO AUTOMOBILES (9506-95-02), SECTOR 17-18, DIVIDER ROAD, GURGAON, HARYANA, - 122015
735. ROHAN MOTORS LTD (9508-95-01), 2482/84, SECTOR-52A, WAZIRABAD VILLAGE, OPP. AARDI CITY MALL, GURGAON - 122001

736. VIPUL MOTORS PVT LTD (5801-04), PLOT NO 5/22/1, SARHAUL VILLAGE, SECTOR-18, MAIN ROAD, GURGAON, (HARYANA) - 201102
737. PREM MOTORS PVT LTD (9511-95-01), PLOT NO.101, SAINI PLAZA MARKET, OPP. H BLOCK, NEAR RAM MANDIR, PALAM VIHAR, GURGAON - 122017
738. PREM MOTORS PVT LTD (9512-95-01), PLOT NO. 3, IDC, OPPOSITE SECTOR-14, GURGAON - 122001
739. RANA MOTORS PVT LTD (9509-95-02), PLOT NO.60, IDC, GURGAON - 122001
740. PASCO AUTOMOBILES (9510-95-01), PLOT NO. 34/3, DINESH JAIN COMPLEX, DELHI-AJMER EXPRESSWAY (NH-8), RAJIV CHOWK, GURGAON, HARYANA. - 122001

741. PREM MOTORS PVT LTD (9512-95-02), PLOT NO. 122, PALAM VIHAR EXTENSION, NEAR KRISHNA CHOWK, GURUGRAM - 122017
742. PLATINUM MOTOCORP LLP (-03), 5/13 SOHNA ROAD VILL-TIKRI ADJACENT TO POLARIS HOSPITAL GURGAON HARYANA - 122018
743. PREM MOTORS PVT LTD (9512-95-G1), QILA NUMBER 8/2, MUSTAKIL NO - 25, SECTOR 17-18, DIVIDING ROAD, GURGAON, - 122015
PH :8800000817.

744. PLATINUM MOTOCORP LLP (-95-04), KILA NO. 15, SECTOR 93, NEAR HAYATPUR POLICE CHOWKI, HAYATPUR, GURGAON, PIN-122050, HARYANA - 122050
PH :9899118850.
745. PASCO AUTOMOBILES (9506-95-04), KHASRA NO. 191/2 & 190/2, MAIN DAULTABAD ROAD, OPP. OLD BHALLA CHEMICALS FACTORY, DAULTABAD INDUSTRIAL AREA, GURGAON, HARYANA - 122006 - 122006
PH :8851227233.

746. SWASTIK MOTOCORP PVT LTD (9514-95-01), NEAR RAO JAI SINGH CHOWK, SIKANDERPUR BADHA, SECTOR-85, GURUGRAM, HARYANA - 122004 - 122004

747. COMPETENT AUTOMOBILES CO LTD (9505-95-02), MAIN FARUKH NAGAR ROAD, DHANKOT, GURGAON - 122505 - 122505

748. PREM MOTORS PVT LTD (9512-95-03), OPP. TRUE VALUE, SECTOR 17-18 DIVIDING ROAD GURGAON - 122001

749. SWASTIK MOTOCORP PVT LTD (9514-95-02), KHATA NO.141/146, KILA NO.16/2/2, SECTOR-83, GURUGRAM, - 122004

750. SWASTIK MOTOCORP PVT LTD (9514-95-03), KHATAUNI NO 135, KHASRA/KILA NO 66/3/2/1 & 66/3/2/2, GURGAON- SOHNA RD, NEAR VATIKA CHOWK, GURUGRAM - 122101

HANSI

751. JAGMOHAN AUTOMOTIVES PVT LTD (-01), G. T. HIGHWAY ROAD, MAIN ROHTAK HANSI ROAD, NEAR HOLLAND TRACTORS AGENCY & HP PETROL, HANSI ROHTAK ROAD, HANSI (HISAR), HARYANA. - 124001
PH :8059900546.

HATHIN

752. ROHAN MOTORS LTD. (-01), MAIN MARKET ROAD, WARD NO.13 HATHIN, PALWAL, PIN-121103, - 121103

HISSAR

753. MODERN AUTOMOBILES (7602-76-01), OPP. VIDYUT NAGAR, DELHI ROAD, HISSAR, - 125005
PH :9355473000.

754. SARAOGI AUTOMOBILES PVT LTD (7604-76-01), 5TH KM STONE, SIRSA ROAD, HISSAR, HARYANA - 125001
PH :8607777043.

755. MODERN AUTOMOBILES (7602-76-02), OPP. BMB, HISSAR DELHI ROAD, HISSAR - 125001
PH :9355473000.

756. UNIQUE MOTORS PVT LTD (7603-76-01), OPP. BHANU INDUSTRIES, DELHI ROAD, VILLAGE: SATROD, HISSAR (HARYANA) - 125006
PH :8818055535.

HODAL

757. ROHAN MOTORS LTD (-02), KILA NO. 8/2(7-11), 9/5-06), 12(5-0), 13(8-0), HIGHWAY ROAD, NEAR RAILWAY BYEPASS CHOWK, TEHSIL - HODAL, DIST.-PALWAL. - 121106

ISMAILABAD

758. KARNAL MOTORS PVT LTD (-01), KHEWAT NO. 928, KHASRA NO. 2760(5-14), 2761(800), VILLAGE - ISMAILABAD, TEHSIL - PEHOW, DIST. -KURUKSHETRA, HARYANA. - 136129
PH :7082007138.

ISRANA

759. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (-01), MUSHTIL NO.-119, NEAR MANDI MOD, MAIN GOHANA ROAD, ISRANA - 132107
PH :9053400417.

JASANA

760. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (-01), MUSTKIL NO -06, KILL NO -22 VILLAGE, JASANA FARIDABAD HARYANA-121101 - 121101

JHAJJAR

761. COMPETENT AUTOMOBILES CO LTD (-01), PLOT NO 5, NEAR GOVT POLYTECHNIC COLLEGE, JHAJJAR-BAHADURGARH ROAD, JHAJJAR, HARYANA - 124101
PH :9999493040.

JIND

762. EAKANSH MOTORS PVT LTD (-01), ROHTAK ROAD, NATIONAL HIGHWAY-71, OPP. GRAIN MARKET, JIND, HARYANA - 126102
PH :7876008184.

JULANA

763. EAKANSH MOTORS PVT LTD (-01), PLOT NO. 52.53, KHEVAT NO. 253/3, ROHTAK ROAD, JULANA, DISTRICT JIND, HARYANA. JIND ROHTAK MAIN ROAD, OPP. NEW BUS STAND, JULANA, DIST. JIND, HARYANA - 126101
PH :8816802111.

KAITHAL

764. EAKANSH MOTORS PVT LTD (-01), AMBALA ROAD, NH-65, KAITHAL - 136027
PH :9671788801.

KALANAUR

765. JAGMOHAN AUTOMOTIVES PVT LTD (-01), BHIWANI ROAD, KALANAUR, DISTRICT ROHTAK - 124113
PH :9812000425.

766. PANDIT AUTOMOBILES PVT LTD (-01), VPO. KALANAUR, DISTRICT- YAMUNANAGAR, HARYANA - 124113
PH :9053055550.

KALAYAT

767. EAKANSH MOTORS PVT LTD (-01), NEAR BUS STAND, KAITHAL-KALAYAT ROAD, VILLAGE-KALAYAT, DISTT. KAITHAL (HARYANA) - 136117
PH :9671788801.

KALKA

768. MODERN AUTOMOBILES (-01), ADJOINING INDIAN OIL PETROL PUMP, RAM NAGAR, NH-22, KALKA, DISTRICT - PANCHKULA, HARYANA - 133302
PH :9896217059.

KARNAL

769. KARNAL MOTORS PVT LTD (8906-89-01), 71/3 MILESTONE G.T.ROAD, KARNAL - 132001
PH :8222022399.

770. KARNAL MOTORS PVT LTD (8906-89-02), KHEWAT NO. 59, JHANJHARI GT ROAD, KARNAL - 132001
PH :8222022430.

771. MODERN AUTOMOBILES (8907-89-01), NEAR NAMASTE CHOWK, OLD G.T.ROAD, KARNAL - 132001
PH :7419900042.

772. MODERN AUTOMOBILES (8907-89-03), 117-118 KM MILE STONE NH1, NEAR VILLAGE KAMBOPURA, GT ROAD, KARNAL - 132001
PH :7419900042.

KATHURA

773. JAGMOHAN AUTOMOTIVES PVT LTD (-01), GOHANA MAHAM ROAD, KATHURA, GOHANA. - 131301
PH :8685005400.

KHARKHODA

774. JAGMOHAN AUTOMOTIVES PVT LTD (-01), NEAR KHANDA BYPASS CHOWK, SONIPAT ROAD, KHARKHODA, DISTRICT: SONIPAT, HARYANA - 131402
PH :8685005593.

KOSLI

775. DINCO 4 WHEELS LLP (AUTO VIBES) (-01), OPPOSITE RAJIV GANDHI STADIUM, TEHSIL ROAD KOSLI, DISTRICT - REWARI, HARYANA - 123302
PH :7082100202.

KUND

Dealer Workshop (AS ON 31.01.2026)

776. DINCO 4 WHEELS LLP (AUTO VIBES) (-01), NEAR KUND BARRIER, OPP. SBI BANK, NARNAUL ROAD, VILLAGE - MANETHI, KUND, DISTRICT - REWARI, HARYANA. - 123102	786. TCS AUTOWORLD (A UNIT OF TCS & ASSOCIATES PVT LTD) (-01), YAMUNA PUL ROAD, NEAR GYATRI PETROL PUMP, VPO-MOHANA, TEHSIL BALLABGARH, DISTT FARIDABAD - 121004	797. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (-01), KHASRA NO. 43/6, 44/9 & 10, VILLAGE - JATTIPUR, NEAR HOTEL SWARNA MAHAL, NH-1, PANIPAT, HARYANA. PH : 9053400515.	808. UNIQUE AUTOLEAD LLP (-01), KHASRA NO- 3597, JIND ROAD, JIND CHOWK, ROHTAK, HARYANA - 124001 PH : 9812259000.
KUNDLI	MUSTAFABAD	PATAUDI	SAFIDON
777. JAGMOHAN AUTOMOTIVES PVT LTD (-01), 34 E, SECTOR 57, PHASE 4, KUNDLI INDUSTRIAL AREA, KUNDLI - 131001 PH : 8059900518.	787. PANDIT AUTOMOBILES PVT LTD (-01), KHATUNI NO. 205/287, KHASRA NO. 39/17/2, VILLAGE - MANSURPUR, THANA - CHAPPER, MUSTAFABAD, DIST.-YAMUNA NAGAR, STATE - HARYANA. - 133103 PH : 9992113854.	798. PLATINUM MOTOCORP LLP (-01), HALI MANDI ROAD, OPPOSITE SHIV MURTI, PATAUDI, DIST. - GURGAON - 122503	809. EAKANSH MOTORS PVT LTD (-05), NEAR BRSK SCHOOL, OPPOSITE RELIANCE PETROL PUMP, PANIPAT ROAD, SAFFIDON, DISTRICT- JIND - 126112 PH : 9416616603.
KURUKSHETRA	NARAINGARH	PEHOWA	SALHAWAS
778. KARNAL MOTORS PVT LTD (8906-03), PLOT NO. 156, INDUSTRIAL AREA, SECTOR-2, KURUKSHETRA - 136118 PH : 8222022371.	788. EAKANSH WHEELS PVT LTD (1802-02), NH-72, AMBALA-KALA AMB ROAD, NEAR ADARSH FILLING STATION, NARAINGARH - 134203 PH : 9991143700.	799. KARNAL MOTORS PVT LTD (-01), NEAR DAV COLLEGE, AMBALA ROAD, PEHOWA. 136128 - 136128 PH : 8222022464.	810. COMPETENT AUTOMOBILES CO LTD (-01), JHAJJAR KOLSI ROAD, NEAR BDPO OFFICE, SALHAWAS, DISTT JHAJJAR HARYANA - 123106 - 123106
LADWA	NARNAUL	PUNDRI	SAMALKHA
779. KARNAL MOTORS PVT LTD (-01), KHEWAT NO.197, KHATONI NO.233, KHASRA NO.271/171,271/4, LADWA-KURUKSHETRA ROAD, VILLAGE - LADWA, TEHSIL. THANESAR, DISTT. KURUKSHETRA - 136132 PH : 7082007182.	789. PLATINUM MOTOCORP LLP (-01), KALASH NAGAR, REWARI ROAD, NARNAUL, HARYANA, PH : 9992113854.	800. EAKANSH MOTORS PVT LTD (-01), KAITHAL-KARNAL ROAD, OPP. ESSAR PETROL PUMP, PUNDRI, KAITHAL, HARYANA. KILA NO- 3/10, KHEWAT 2147 OPP. HARCHARAN FILLING STATION, KAITHAL ROAD, PUNDRI DIST. KAITHAL, HARYANA - 136026 PH : 9671788801.	811. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (-01), GT ROAD, SAMALKHA, PANIPAT, HARYANA PIN- 132101 - 132101 PH : 9053700003.
LOHARU	NARNAUND	PUNHANA	SAMPLA
780. JAGMOHAN AUTOMOTIVES PVT LTD (-01), BHIWANI ROAD, OPP. ITI, CITY: LOHARU - 127201 PH : 9812000425.	790. JAGMOHAN AUTOMOTIVES PVT LTD (-01), KHASRA NO. 234, HANSI ROAD, NARNAUND, DISTT. HISAR, HARYANA. - 125039 PH : 9812000471.	801. PASCO AUTOMOBILES (-01), KILA NO. 4/2, PUNHANA, DIST.-MEWAT, HARYANA - 122508	812. JAGMOHAN AUTOMOTIVES PVT LTD (-01), NEAR VASUNDRA CAFÉ, DELHI ROHTAK ROAD, SAMPLA, DISTT. ROHTAK - 124501 PH : 9812000351.
MADLAUDA	NARWANA	RADAUR	SATNALI
781. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (-01), VILLAGE-BHALSI, ASSANDH-PANIPAT ROAD, MADLAUDA, PIN-132113, HARYANA - 132113 PH : 9053400524.	791. EAKANSH MOTORS PVT LTD (-03), OPP. HAFED GODOWN-2, NH-65 AKHERAM NAGAR, NARWANA - 126116 PH : 9813583100.	802. PANDIT AUTOMOBILES PVT LTD (-02), OPP. JMIT ENGG. COLLEGE, NEAR BUS STAND, RADAUR, DISTRICT-RADAUR, HARYANA - 135001 PH : 9992113854.	813. PLATINUM MOTOCORP LLP (-01), KHEVAT NO.605, KHATONI NO-1134 KILLA NO.167, VILL: SATNALI, NEAR BHARAT PETROL PUMP MAHENDRAGARH ROAD, HARYANA -123024 (LOCATION: MAHENDRAGARH) - 123024 PH : 9910100341.
MAHENDARGARH	NUH	RAIPUR RANI	SHAHABAD
782. PLATINUM MOTOCORP LLP (-01), KHEWAT NO. 187, KILLA NO. 51/8, REVENUE ESTATE OF VILLAGE REWASA, DADRI ROAD, TEHSIL & DISTRICT, MAHINDERGARH, PIN-123029, HARYANA - 123029	792. PASCO AUTOMOBILES (-01), MAIN DELHI - ALWAR ROAD, NEAR SHAHEED PARK, NH -248A, NUH, DISTRICT - MEWAT, HARYANA. - 122107 PH : 9810014947.	803. AUTO VOGUE PRIVATE LIMITED (-01), BARWALA ROAD, RAIPUR RANI, DISTRICT PANCHKULA, HARYANA. PIN CODE - 134204. - 134204	814. KARNAL MOTORS PVT LTD (-01), KHEWAT NO. 460, KATONI NO. 486, KHASRA NO. 170, TEHSIL - SHAHABAD, DIST. - KURUKSHETRA - 136135 PH : 8222022338.
MANDI DABWALI	PALWAL	RAJOUND	SIRSA
783. SHAKTI MOTORS PVT LTD (-02), SANGARIA ROAD, DABWALI, DISTT.-SIRSA - 125104 PH : 8222900209.	793. ROHAN MOTORS LTD (-01), SANWAL COLONY, MAIN MATHURA ROAD, NEAR SDM COURT, PALWAL - 121101	804. EAKANSH MOTORS PVT LTD (-01), MITTAL KHAL BHANDAR, RAJOUND, DISTT KAITHAL PH : 9671788801.	815. SHAKTI MOTORS PVT LTD (-01), DABBALI RD., SIRSA, HARYANA - 125055 PH : 8222900201.
MANESAR	PANCHKULA	REWARI	SIWANI
784. PLATINUM MOTOCORP LLP (-01), PLOT NO.282, SEC 6, IMT MANESAR DISTT. GURGAON. - 122052	794. MODERN AUTOMOBILES (-03), PLOT NO. 318, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113	805. DINCO 4 WHEELS LLP (AUTO VIBES) (-01), BAWAL ROAD, NEAR BYE PASS ROAD, REWARI (HARYANA)) - 123401	816. SARAOGI AUTOMOBILES PVT LTD (-01), OPP. GOVT HOSPITAL, SIWANI BYPASS CHOWK, HISSAR ROAD, SIWANI, DIST. BHIWANI -127046 HARYANA - 127046 PH : 8607777149.
MEHAM	795. AUTOPACE NETWORK PVT LTD (-03), PLOT NO. 5, INDUSTRIAL AREA, PHASE-1, PANCHKULA, HARYANA. - 134113	ROHTAK	SOHNA
785. JAGMOHAN AUTOMOTIVES PVT LTD (-08), MAIN MARKET, NATIONAL HIGHWAY-10, ROHTAK-HISSAR ROAD, MEHAM, DISTRICT-ROHTAK - 124101 PH : 8059900592.	796. AUTO VOGUE PRIVATE LIMITED (-01), PLOT NO- 388, INDUSTRIAL AREA PHASE-1, PANCHKULA, HARYANA. - 134113 PH : 8558813181.	806. JAGMOHAN AUTOMOTIVES PVT LTD (-01), SONEPAT ROAD, ROHTAK - 124001 PH : 9467465035.	817. PASCO AUTOMOBILES (9506-03), 56, KILLA NO. 13 (4-10), 18(4-6), 19 (8-0), 22 (8-0), 23 (4-2), VILLAGE - ALIPUR, SOHNA GURUGRAM ROAD, TEHSIL - SOHNA, DISTRICT -GURUGRAM. - 122103
MOHNA	PANIPAT	807. JAGMOHAN AUTOMOTIVES PVT LTD (-09), SWAN GARDEN, DELHI ROAD, ROHTAK - 124001 PH : 9812000357.	

818. COMPETENT AUTOMOBILES CO LTD (-03),
DAULA-197, LOHATKI VILLAGE, KHASRA
NO.174, SOHNA ROAD, GURGAON, PIN-122103,
HARYANA - 122103

SONEPAT

819. JAGMOHAN AUTOMOTIVES PVT LTD (-01),
BAHALGARH-DELHI ROAD, OPP. POWER
HOUSE, SONIPAT - 131001
PH :9992200372.
820. JAGMOHAN AUTOMOTIVES PVT LTD (-02),
GAYATRI GARDEN, MURTHAL ROAD, SONEPAT
(HARYANA) - 131001
PH :8885005686.
821. JAGMOHAN AUTOMOTIVES PVT LTD (-03), O-11
INDUSTRIAL AREA, SONIPAT, HARYANA. -
131001
PH :9812615000.

TAURU

822. PASCO AUTOMOBILES (-01), KILA NO. 34/1/2,
REWARI ROAD, TAURU, DIST.-MEWAT,
HARYANA - 122015

TOHANA

823. SHAKTI MOTORS PVT LTD (-01), NEAR GREEN
VALLEY PUBLIC SCHOOL, RATIA ROAD,
TOHANA - 125120
PH :8572800991.

TOSHAM

824. JAGMOHAN AUTOMOTIVES PVT LTD (-01),
BHIWANI ROAD, TEH. TOSHAM, DIST. BHIWANI.
- 127040
PH :8059900566.

YAMUNANAGAR

825. PANDIT AUTOMOBILES PVT LTD (-01),
GOVINDPURI ROAD, JAGADRI, YAMUNANAGAR
- 135001
PH :9812455896.
826. PANDIT AUTOMOBILES PVT LTD (-03), PLOT
NO.E-8, INDUSTRIAL AREA, ITI ROAD, YAMUNA
NAGAR (HARYANA) - 135001
PH :9812455896.

HIMACHAL PRADESH

ALAMPUR

827. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
KHASRA NO. 1606/1582, STATE HIGHWAY
PALAMPUR-SUJANPUR AT JANGAL, VILLAGE -
ALAMPUR, DIST.-KANGRA. - 176082

BADDI

828. GOYAL MOTORS PVT LTD (-04),
KHATA/KHATAUNI NO. 26/26, KHASRA NO.
93/56/32 AND 94/56/32, KITAS 2, REVENUE
MAUZA - CHAK JANGI, HADBAST NO. 203,
TEHSIL - BADDI, DISTRICT - SOLAN, HIMACHAL
PRADESH. - 173205
PH :9418076972.

BAJNATH

829. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
TASHI JONG, PAPROLA-BAJNATH, NH-20,
KANGRA -MANDI ROAD, TEHSIL BAJNATH,
DISTT. KANGRA - 176115

BANGANA

830. COMPETENT AUTOMOBILES CO LTD (-01),
VILLAGE BHALET, POST OFFICE DOHGI,
TEHSIL BANGANA, DISTT UNA, HIMACHAL
PRADESH - 174307

BANIKHET

831. PATHANKOT VEHICLEADES PVT LTD (-01),
KHASRA NO.709, KHATA KHATOONI NO.23,
BANIKHET, THE-DALHOUSIE, DISTT. CHAMBA -
176303

BILASPUR-HP

832. COMPETENT AUTOMOBILES CO LTD (-01),
KHEWAT NO. 8/8 KHATAUNI, KHASRA NO.
137/30, 31, MAUZA KOTHI, PARGANA 9, P. O. -
CHANDPUR, TEHSIL - SADAR, DIST.-
BILASPUR, HIMACHAL PRADESH. - 174001

CHAMBA

833. PATHANKOT VEHICLEADES PVT LTD (-01),
MOHALLA SULTANPUR, BALU BRIDGE,
CHAMBA - 176310
834. PATHANKOT VEHICLEADES PVT LTD (-02),
KHASRA NO. 88/96.1 & KHASRA NO.628/276,
VILLAGE & PO SAROO, THE. & DISTT. CHAMBA,
HIMACHAL PRADESH. - 176310

CHOWARI

835. PATHANKOT VEHICLEADES PVT LTD (-01),
KHATA KHATNI NO. 24/32 MIN. KHASRA NO. 90,
VILLAGE - LAHRU, P.O. - PARCHHORE, TEHSIL -
BHATTIYAT, DIST.-CHAMBA, HAMACHAL
PRADESH. - 144416
PH :8894569632.

DARLAGHAT

836. GOYAL MOTORS PVT LTD (-01), VILL SYAR ,
PO DARLAGHAT,TEH ARKI, HIMACHAL
PRADESH - 171102

DEHRA

837. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-02),
VILLAGE & P.O. SUNHET, TEHSIL DEHRA, DIST.
KANGRA - 177101
PH :9817013058.

GAGGAL

838. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
NATIONAL HIGHWAY -20, ZAMANABAD ROAD,
ICHHI, GAGGAL, DISTT. KANGRA , HIMACHAL
PRADESH - 176209
PH :9418988832.

GAGRET

839. COMPETENT AUTOMOBILES CO LTD (-01),
HOSHIARPUR ROAD, OPP. HPSEB OFFICE,
GAGRET, DISTRICT UNA, HIMACHAL PRADESH
- 177021

GHUMARWIN

840. COMPETENT AUTOMOBILES CO LTD (-01),
WARD NO 6, KHASRO NO 1619KHEWAT NO
129/148, ABDHANIGHAT VILLAGE - 174021

HAMIRPUR

841. COMPETENT AUTOMOBILES CO LTD (-01),
VILLAGE TIKKAR, P.O DIDWIN TEHSIL & DISTT.,
HAMIRPUR - 177401
PH :9805510276.

INDORA

842. PATHANKOT VEHICLEADES PVT LTD (-01),
VILLAGE CHANDOR, PO & TEHSIL INDORA,
DISTT. KANGRA, PIN-176401, HIMACHAL
PRADESH - 176401
PH :9418008627.

JAISINGHPUR

843. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
HARSI PATTAN ROAD, OPP. SABJI MANDI,
TEHSIL - JAISINGHPUR, DIST. - KANGRA,
HIMACHAL PRADESH. - 176095

JASWAN

844. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
JASWAN, KANGRA, HIMACHAL PRADESH. -
221502

JAWALI

845. PATHANKOT VEHICLEADES PVT LTD (-01),
VILLAGE - TIUKARI, NEAR MAHAVIR HOSPITAL
LUBH ROAD, TEHSIL - JAWALI, DIST.-KANGRA,
HAMACHAL PRADESH. - 176023
PH :9418195333.

JHANDUTTA

846. COMPETENT AUTOMOBILES CO LTD (-01),
BEHRAN,TEHSIL JHANDUTTA, DISTRICT
BILASPUR H.P. - 174031

JOGINDER NAGAR

847. COMPETENT AUTOMOBILES CO LTD (-01),
VILL. DHULU PO DOHAG, JOGINDER NAGAR
(H.P.) - 175015
PH :9805005754.

JWALAMUKHI

848. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
KHASRA 880/613, MAUJA BOHAN, TEHSIL
JWALAMUKHI, DISTRICT KANGRA - 176031
PH :9418488999.

KULLU

849. COMPETENT AUTOMOBILES CO LTD (-01),
PLOT 3&4, INDUSTRIAL AREA, SHAMSHI, KULLU
(HP) - 175126
PH :7018035136.

KUNIHAR

850. GOYAL MOTORS PVT LTD (-01), KHATA NO. -
77, VILLAGE KOTHI, P.O. KUNNIHAR, TEHSIL -
ARKI, DISTRICT - SOLAN, HIMACHAL PRADESH
- 173207
PH :9418312472.

MANALI

851. COMPETENT AUTOMOBILES CO LTD (-01),
VILL. CHOURI VIHAR (AALU GROUND), P.O. &
THESEL- MANALI, DIST. KULLU, (H.P.) - 175131
PH :9418387465.

MANDI

852. COMPETENT AUTOMOBILES CO LTD (-01),
GUTKAR INDUSTRIAL AREA, DELHI MANDI
ROAD, N.H.21 GUTKAR, MANDI - 124501

MATIANA

853. GOYAL MOTORS PVT LTD (-), VPO MATIANA (K
NEAR DEV BHOOMI APPLE COLD
STORAGE),THEOG, SHIMLA, HIMACHAL
PRADESH-171212. - 171212

NADAUN

854. COMPETENT AUTOMOBILES CO LTD (-01),
VILLAGE JALAN, KHASRA NO.183, PO & TEHSIL
NADAUN, DISTT. HAMIRPUR, HIMACHAL
PRADESH - 177041
PH :9805737436.

NAGROTA

855. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
MALAN, NAGROTA - BAGWAN, KANGRA, H.P. -
176047
PH :7018268819.

856. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-06),
JHIKLI AMBARI, MOUZA AMBARI, MALAN,
NAGROTA BAGWAN, TEHSIL & DISTT. KANGRA,
HIMACHAL PRADESH - 176047
PH :7018268819.

NAGROTA SURIAN

857. KANGRA VEHICLEADES (A UNIT OF
PATHANKOT VEHICLEADES PVT LTD) (-01),
KHEWAT NO. 115, KHATAUNI NO. 127, KHASRA
NO. 2037, MAHAL BASSA, SUB TEHSIL
NAGROTA SURIAN, DISTRICT - KANGRA. -
176027
PH :9418488999.

NALAGARH

858.	GOYAL MOTORS PVT LTD (-01), NEAR HP PETROL PUMP, VILLAGE PEERSTHAN, P.O & TEHSIL NALAGARH, DISTT. SOLAN (H.P.) - 174101 PH :9418704572.	SARAHAN	879.	HIGHLAND AUTOMOBILES PVT LTD (-04), KHASRA NO. 208 MIN, KHEWAT NO. 9 AND KHATTA NO. 55, MOUZA - PALLAR, TEHSIL AND DIST.-BUDGAM. - 191111 PH :9419019898.	890.	JAMMU MOTORS PRIVATE LIMITED (3308-33-01), 6, AKHNOOR ROAD, JAMMU. - 180001 PH :9419118393.		
NERWA			CHOWKI CHOURA		891.	JAMMU MOTORS PRIVATE LIMITED (3308-33-02), PLOT NO.2, RAJPURA CHUNGI OPP AG OFFICE, AKHNOOR ROAD, JAMMU - 180002 PH :9419118393.		
859.	GOYAL MOTORS PVT LTD (-01), KHASRA NO. 482, VILLAGE - KEDI, TEHSIL - NERWA, DISTRICT - SHIMLA, HIMACHAL PRADESH. - 171210 PH :9418663572.	SHAHPUR	880.	JAMMU MOTORS PRIVATE LIMITED (-01), KHASRA NO. 37 MIN, ADJACENT TO J&K BANK, JAMMU POONCH HIGHWAY, CHOWKI CHOURA, JAMMU & KASHMIR - 185154 PH :956975060.	892.	PEAKS AUTO PVT LTD (3312-02), KHASRA NO.425 & 426, KHATA NO.425 & 426, TOPE SHRKHANIAN (BACKSIDE OF BEST PRICE), AKNOOR ROAD, JAMMU. - 180001 PH :9697001125.		
NURPUR			DAYALACHAK		893.	JAMKASH VEHICLEADES PVT LTD (-07), KHEWAT NO. 25, KHATA NO. 355, KHASRA NO. 544 MIN PALOURA ROAD, JANIPUR, JAMMU. - 180007 PH :9419191502.		
860.	PATHANKOT VEHICLEADES PVT LTD (-01), VILLAGE JACHH, PO JASSUR, TEHSIL NURPUR, DISTT. KANGRA - 176201	SHIMLA	881.	JAMKASH VEHICLEADES PVT LTD (-01), KHASRA NO. 183, KHEWAT NO.14, KHATANO-74, VILLAGE CHAK SAKTA, DAYALACHAK,TEHSIL & DISTT. KATHUA , JAMMU & KASHMIR - 184121 PH :88492849170.	894.	NSF VEHICLES (UNIT OF NEW STYLE FABRICATORS PVT LTD) (3314-33-01), INDUSTRIAL ESTATE, ASHOK NAGAR (ADJOINING BAJAJ 2WHEELER), NEAR SATWARI, JAMMU - 180003		
861.	PATHANKOT VEHICLEADES PVT LTD (-02), VILL- NANGLAHAR, PO-RAJA KA BAG, TEH- NURPUR, KANGRA - 176201	870.	GOYAL MOTORS PVT LTD (-01), TARADEVI, SHIMLA,(H.P.) - 171010 PH :9418663572.	DODA	895.	NSF VEHICLES (UNIT OF NEW STYLE FABRICATORS PVT LTD) (-02), RANIBAGH, NEAR JAMMU AIRPORT, JAMMU., NEAR JAMMU AIRPORT, JAMMU. - 180001		
PALAMPUR		SOLAN	871.	GOYAL MOTORS PVT LTD (-01), DEON GHAT, SOLAN - 173211 PH :9418138772.	GANDERBAL	KATHUA		
862.	KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (-01), NEAR IOCL PUMP, KANGRA MANDI ROAD, PALAMPUR, DISTT. KANGRA, HIMACHAL PRADESH. - 176061	UNA	872.	COMPETENT AUTOMOBILES CO LTD (-01), VILLAGE RAINSARY,P.O. JHALERA,TEHSIL & DISTRICT:UNA - 174303 PH :9805737436.	883.	JAMKASH VEHICLEADES PVT LTD (-01), MALSHAIIE BAGH, GANDERBAL (J&K) - 191201 PH :9419000828.	896.	JAMMU MOTORS PRIVATE LIMITED (-01), WARD NO.13, CHAK PARTAP SINGH HATLI MORH, NH-1A, KATHUA TEHSIL KATHUA - 184101 PH :9419118393.
PAONTA SAHIB		JAMMU AND KASHMIR			884.	JAMKASH VEHICLEADES PVT LTD (-01), KHEWAT NO-31, KHATTA NO-298, SURVEY NO-3764/1816, MOZA BRARIPORA, TEH- HANDWARA, DIST- KUPWARA, J&K - 193221	KATRA	
863.	GOYAL MOTORS PVT LTD (-02), OPP BIBUEET KAUR SENIOR SECONDARY SCHOOL, SHAMSHERPUR , NH-72, PAONTA SAHIB - 173025 PH :9459210872.	AKHNOOR	873.	JAMMU MOTORS PRIVATE LIMITED (-01), MAIN ROAD DASKAL, TEHSIL - AKHNOOR, DISTRICT - JAMMU - 181201 PH :9419118393.	HANDWARA	885.	JAMKASH VEHICLEADES PVT LTD (-01), NEAR LIGHT HOUSE SCHOOL, HANJUIWERA BRIDGE, HANJUIWERA PATTAN - 193121	JAMMU
RAJGARH			874.	JAMMU MOTORS. PVT.LTD. (-02), MAIN ROAD DASKAL NEAR HANUMAN CHOWK, NEAR HANUMAN CHOWK AKHNOOR - 181201	HANJWARA PATTAN	886.	JAMKASH VEHICLEADES PVT LTD (3306-33-01), NH-1A, BYE PASS, OPP CHANNI HIMMAT, JAMMU - 180015 PH :6006801639.	KRALPORA
864.	GOYAL MOTORS PVT LTD (-01), KHATA NO. 517/505, 478/3, KHASRA NO. - 38/98 VILLAGE NERI RATAULI, P.O. RAJGARH TEHSIL - RAJGARH, DISTRICT - SIRMAUR , HIMACHAL PRADESH - 173101 PH :9418312472.	BANDIPORA	875.	JAMKASH VEHICLEADES PVT LTD (1205-04), AJAR BANDIPORA , J&K - 193502 PH :9149726427.	887.	JAMKASH VEHICLEADES PVT LTD (3306-33-02), NEAR GENERAL BUS STAND, OPP. PHE OFFICE, B.C. ROAD, JAMMU - 180001 PH :9419224014.	KUPWARA	
RAMPUR		BARAMULLA	876.	JAMKASH VEHICLEADES PVT LTD (-01), VILLAGE SANGRAMA,WAGAROO, BARAMULA - 193101 PH :7889612218.	888.	JAMKASH VEHICLEADES PVT LTD (3306-33-04), SUNJWAN, DISTT. JAMMU - 180011 PH :7006018600.	899.	JAMKASH VEHICLEADES PVT LTD (1205-03), JAMKASH VEHICLEADES, NEAR GM FILLING STATION, CD OFFICE ROAD KUPWARA - 193223 PH :9622499902.
ROHRU		BHADRAWAH	877.	J&K VEHICLEADES PVT LTD (-01), KHASRA NO.2863, LOWER SUNGLI UNIVERSITY ROAD, BHADRAWAH, DISTT. DODA, J&K - 182222	889.	PEAKS AUTO PVT LTD (3312-33-01), GANGYAL INDUSTRIAL AREA, BEHIND COCA COLA FACTORY, JAMMU - 180010 PH :9697001125.	MAGAM	
866.	GOYAL MOTORS PVT LTD (-01), CHARGAON SHIMLA ROAD, ROHRU, DISTRICT -SHIMLA - 171207 PH :9418016072.	BHASOLI	878.	JAMKASH VEHICLEADES PVT LTD (-01), ZERO MORTH. BASHOLI, DISTT. KATHUA, BASHOLI, PIN-184201, JAMMU & KASHMIR - 184201 PH :9018847230.			900.	JAMKASH VEHICLEADES PVT LTD (-01), KHASRA NO. 34, MOUZA - CHICHILORA, MAGAM, GULMARG ROAD, TEHSIL - KWARHAMA, DIST.-BARAMULLA, JAMMU & KASHMIR. - 193401 PH :8825016046.
SALOONI		BUDGAM					MAHANPUR	
867.	PATHANKOT VEHICLEADES PVT LTD (-01), KHASRA NO. 299/174, VILLAGE. MANJEER, TEHSIL-SALOONI, DISTT. CHAMBA, PIN-176320, HIMACHAL PRADESH - 176320 PH :9418059252.							

901. JAMMU MOTORS PRIVATE LIMITED (-01),
MAHANPUR, DISTRICT KATHUA, TEHSIL
MAHANPUR, - JAMMU & KASHMIR, - 184202
PH :9596975060.

MANJAKOTE

902. JAMKASH VEHICLEADES PVT LTD (-01), NEAR
PHC ROAD MANJAKOTE, TEHSIL MANJAKOTE,
DISTRICT RAJOURI, J&K - 185131
PH :7006014395.

MARH

903. JAMKASH VEHICLEADES PVT LTD (-01),
KHASRA NO. 269, LOWER MUTHI DHARMAL,
DIST.-JAMMU, STATE - JAMMU & KASHMIR, -
181205
PH :7006898474.

NOWSHERA

904. JAMMU MOTORS PRIVATE LIMITED (-01),
JAMMU - NOWSHERA, DISTRICT RAJOURI,
JAMMU & KASHMIR - PIN CODE - 185152 -
185152

PANCHARI

905. J&K VEHICLEADES PVT LTD (-01), VILLAGE
MIR, TEHSIL PANCHARI, DISTT. UDHAMPUR
J&K - 182125

PHINTER

906. JAMKASH VEHICLEADES PVT LTD (-01),
KHASRA NO.2293/405 AND KHEWAT NO.81/98,
GURHA KALYAL, PHINTER, TEHSIL RAMKOT,
DISTT. KATHUA, J&K, - 184203

POONCH

907. JAMKASH VEHICLEADES PVT LTD (-01),
VILLAGE KUNJUYIAN, TEHSIL HAVELI POONCH,
JAMMU & KASHMIR, - 185121
PH :7006014395.

PULWAMA

908. PEAKS AUTO PVT LTD (1204-03), MUGHAL
ROAD, GUNGOO, PULWAMA - 192301
PH :9519275151.

RAJOURI

909. JAMKASH VEHICLEADES PVT LTD (3306-06),
KALAKOTE ROAD, VILLAGE BADOL, RAJOURI -
185131
PH :9519275151.

REASI

910. J&K VEHICLEADES PVT LTD (-01), HOSPITAL
ROAD, MADI, REASI, REASI, JAMMU & KASHMIR
- 182311

RS PURA

911. JAMKASH VEHICLEADES PVT LTD (3306-03),
GAGAIN MORTH, R S PURA, JAMMU, - 181102
PH :9419190370.

SHOPIAN

912. PEAKS AUTO PVT LTD (-01), AGLAR
SOFANAMAN, SHOPIAN - 192303
PH :9519275151.

SIDHRA

913. JAMKASH VEHICLEADES PVT LTD (-01),
KHASRA NO.80 & KHATA NO.100, VILLAGE
SIDHRA, NH1A, NEAR BHARAT PETROLEUM
PETROL PUMP, TEH. & DISTT. JAMMU - 180019
PH :9419134144.

SRINAGAR

914. HIGHLAND AUTOMOBILES PVT LTD (1202-01),
SONWAR, SRINAGAR - 190001
PH :9419057564.
915. JAMKASH VEHICLEADES PVT LTD (1205-01),
HYDERPURA BY PASS CROSSING, SRINAGAR -
190015
PH :7006037255.

916. PEAKS AUTO PVT LTD (1204-12-01), BYE PASS
ROAD, NH - 1A, NEAR HOTAL SILVER STAR,
SRINAGAR - 191101
PH :9519275151.

917. JAMKASH VEHICLEADES PVT LTD (1205-05),
NARBAL CROSSING, NH-1A, SRINAGAR, JAMMU
& KASHMIR - 190017
PH :9796700750.

918. KATHROO MOTORS PRIVATE LIMITED
(1207-12-01), MIRZA KAMIL CHOWK, HAWAL
SRINAGAR - 190001

SUMBAL

919. JAMKASH VEHICLEADES PVT LTD (-01),
GULSHAN PORI, SRINAGAR- SUMBAL ROAD,
DISTRICT BANDIPORA, J&K- 193501 - 193501

SURANKOTE

920. PEAKS AUTO JAMMU PVT LTD (-01), NEAR
KNIET KING FILLING STATION, BHARAT
PETROLEUM, POONCH MUGHAL ROAD,
SURANKOTE, DISTT: POONCH - 185101
PH :9697001125.

THANA MANDI

921. JAMKASH VEHICLEADES PVT LTD (-01),
HASPLOTE(CHRURG), TEHSIL THANAMANDI,
DISTRICT RAJOURI -185212 - 185212
PH :9419267607.

UDHAMPUR

922. J&K VEHICLEADES PVT LTD (-01), NATIONAL
HIGHWAY 1A, NEAR DAK BANGLOW,
UDHAMPUR - 182101
PH :7006881028.

URI (CHAAL BONIYAAR)

923. JAMKASH VEHICLEADES PVT LTD (-01),
KHASRA NO.346/118, KEWAT NO.15, KHATA
NO.30, MOUZ-CHALAL (URI), TEHSIL-BONIYAR,
DISTT. BARAMULLA - 193123
PH :9419074012.

VIJAYPUR

924. JAMMU MOTORS PRIVATE LIMITED (-01),
JAMMU PATHANKOT HIGHWAY, VIJAYPUR
(SAMBA), J&K - 184120
PH :9596975060.

JHARKHAND

BAGODAR

925. RELIABLE INDUSTRIES (-01), SONTURPI, GT
ROAD, GAIDA, BAGODAR, GIRIDIH,
JHARKHAND - 825322

BALIAPUR

926. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES
PRIVATE LIMITED) (-01), WARD NO 53,
HOLDING NO - SAF3797, KANDRA SINDRI,
BALIAPUR - 828123
PH :7980074787.

BOKARO

927. HINDUSTAN AUTO AGENCY (-02), R1, CITY
CENTRE, SECTOR-4, BOKARO STEEL CITY,
BOKARO - 827004

928. HINDUSTAN AUTO AGENCY (-03), M2,
SECTOR-4, CITRY CENTRE, BOKARO STEEL
CITY (JHARKHAND) - 827004

BUNDU

929. HILLTOP MOTORS (A UNIT OF HIRALAL
MOTORS PVT LTD) (-01), NH - 33 NEAR PPK
COLLAGE , PS - BUNDU, RANCHI, JHARKHAND -
835204

CHAIBASA

930. PEBCO MOTORS LIMITED (-01), KOLHAN
TIMBER MERCHANT, NEAR RAILWAY
CROSSING, TATA ROAD, CHAIBASA, DISTRICT
- WEST SINGHDHUM, JHARKHAND, - 833201

CHANDANKIYARI

931. HINDUSTAN AUTO AGENCY (-01), KHATA
NO.119,PLOT NO.4055 AND 4056,, MOUZA
BARKAMA,MAIN ROAD,CHANDANKIYARI, -
828134

CHANDWA

932. HILLTOP MOTORS (A UNIT OF HIRALAL
MOTORS PVT LTD) (-01), HILLTOP MOTORS,
MAIN ROAD, CHANDWA, PO AND PS,
CHANDWA - 829203, DIST - LATEHAR,
JHARKHAND - 829203
PH :7061157502.

CHIRKUNDA

933. RELIABLE INDUSTRIES (-01), PLOT NO.
109-110, KHATAN NO. 12, MOUZA NO. 251, P.S.
- CHIRKUNDA, DISTRICT - DHANBAD,
JHARKHAND, - 828202

DALTONGANJ

934. PREMSONS MOTOR UDYOG PVT LTD (5103-
02), KACEHRI ROAD, DALTONGANJ, PALAMU -
822101
PH :9835507004.

DEOGHAR

935. RELIABLE INDUSTRIES (5202-03), SHAHEED
ASHRAM ROAD, JHAUNSAGARHI, DEOGHAR, -
814112

936. RELIABLE INDUSTRIES (-01), MOUZA -
CHAKRIPAHARI, NO. 587, WARD NO. 36,
DEOGHAR, JHARKHAND, - 814114

DHANBAD

937. RELIABLE INDUSTRIES (5202-01), KATRAS
ROAD, DHANBAD, JHARKHAND. - 826001
938. RELIABLE INDUSTRIES (5202-02), BEHIND
PRABHAT KHABAR, AT: KOLAKUSMA, P.O K.G.
ASHRAM, SARAIDHELA, DHANBAD - 828127
939. RELIABLE INDUSTRIES (5202-52-06), SUGIADIH,
HIRAK ROAD, SARAIDHELA, DHANBAD,
JHARKHAND. - 828127
PH :9334094940.

940. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES
PRIVATE LIMITED) (-01), NH-2, GT ROAD,
SAHARJOIRI, BARWADA, DHANBAD. - 828109

941. RELIABLE INDUSTRIES (5202-09), TILAKRAIDIH,
K G ASHRAM, NH-32, GOVINDPUR, DHANBAD,
JHARKHAND - 828109
PH :9031096662.

DUMKA

942. RELIABLE INDUSTRIES (-01), OPP DUDHANI
PETROL PUMP, DEOGHAR-PAKUR
ROAD,DUMKA (JHARKHAND) - 814101
PH :6205161170.

943. RELIABLE INDUSTRIES (-02), GILAN PARA,
NEAR TOWER CHOWK - 814110

GARHWA

944. PREMSONS MOTOR UDYOG PVT LTD (-01),
KHATA NO. 4, KHESSA NO. 108, 109, THANA NO.
342, PIPRAKALA, GARHWA, JHARKHAND. -
822114

GHATSHILA

945. PEBCO MOTORS LIMITED (-01), PLOT NO. 68,
KHASRA NO.128, MAUZA PAORA, NH-33, NEAR
FULL-DUNGRI CHOWK,GHATSHILA, EAST
SINGHBHUM (JHARKHAND) - 832303

GIRIDIH

946. RELIABLE INDUSTRIES (5202-04), MOHANPUR,
PACHAMBA ROAD, GIRIDIH. - 815301
947. RELIABLE INDUSTRIES (-08), PLOT NO. 7,
HALKA NO. 12, KHATA NO. 2, THANA NO. 266,
MOUZA - CHATRO, GIRIDIH, JHARKHAND. -
815301
PH :9835835101.

GODDA

948. RELIABLE INDUSTRIES (5202-05), ASANBANI
CHOWK, MAIN ROAD, GODDA, - 814133
PH :6207129088.

GOMIA

Dealer Workshop (AS ON 31.01.2026)

949. HINDUSTAN AUTO AGENCY (–01), HAZARI,
GOMIA-KATHWARA ROAD, - 829111
- GUMLA**
950. PREMSONS MOTOR UDYOG PVT LTD (5103-04), VANASTHALI COMPLEX PUGUCHAMPA NAGAR,NH-23,SISAI ROAD,GUMLA - 835207 PH :9835507004.
- HAZARIBAGH**
951. HINDUSTAN AUTO AGENCY (–01), NEAR SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. - 825301
952. HINDUSTAN AUTO AGENCY (–02), MASIPIRHI, BABHANBAY, HAZARIBAGH , JHARKHAND. - 825301
- JAMSHEDPUR**
953. PEBCO MOTORS LIMITED (3101-31-01), MEDIUM SECTOR, INDUSTRIAL AREA, ADITYAPUR, JAMSHEDPUR - 831001 PH :9308433388
954. PEBCO MOTORS LIMITED (3101-31-02), 16 BALUCHALA, CONTRACTORS & GODOWN AREA, SONARI, JAMSHEDPUR - 831011 PH :9308433388
955. MOTOR WORLD (A DIVISION OF KALIMATI MOTORS PVT LTD) (3102-31-01), N.H-33, NEAR PARDIHI CHOWK, MANGO, JAMSHEDPUR - 831012
- JAMTARA**
956. RELIABLE INDUSTRIES (–01), PLOT NO. 483, PARWAT BIHAR, DUMKA ROAD, JAMTARA, JHARKHAND. - 815351
- KATRAS**
957. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (–01), RAJHANS REFRATORIES, OPP. LIC OFFICE, RAJGANJ ROAD, KATRAS, DISTT. DHANBAD, JHARKHAND-828114 - 828114 PH :8910900556.
- KHUNTI**
958. PREMSONS MOTOR UDYOG PVT LTD (–01), PLOT NO. 747, KHATA NO. 2, DAHUGUTU, CHAIBASA ROAD, KHUNTI, JHARKHAND. - 835210 PH :9835507004.
- KODARMA**
959. HINDUSTAN AUTO AGENCY (–01), AT LALMAN DIGTHU, BESIDE KRISHNA SURYA COLD STORAGE, JHUMRI TILAIYA, P.S. – TILAIYA, DISTRICT – KODERMA, JHARKHAND. - 825409 PH :6201998936.
- MURI**
960. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (–01), NEAR BANK OF INDIA, SILLI MAIN ROAD, MURI, PIN - 835102 - 835102 PH :7061157502.

NAGAR UNTARI

961. PREMSONS MOTOR UDYOG PVT LTD (–01), PLOT NO.-598, KHATA, NO.-134, CITY, SHRI BANSHIDHAR NAGAR, JHARKHAND 822121 - 822121

PAKUR

962. RELIABLE INDUSTRIES (–01), C/O KHOKHAN RAY,HIRANPUR, PAKUR, MAIN ROAD,VILL.SAHERKOL,PS PAKUR REGISTRY OFFICE - 816107 PH :9031096662.

PHUSRO

963. HINDUSTAN AUTO AGENCY (–01), DUMRI Bermo JAINA ROAD, PHUSRO, JHARKHAND - 829144

RAMGARH

964. HINDUSTAN AUTO AGENCY (–01), MARAR, RANCHI ROAD (NH-33), RAMGARH - 829122 PH :9263631345.

RANCHI

965. PREMSONS MOTOR UDYOG PVT LTD (5103-51-01), 502, KANKE ROAD, RANCHI. - 834008 PH :9304807355.
966. PREMSONS MOTOR UDYOG PVT LTD (5103-51-03), 10/P, NAMKUM INDUSTRIAL ESTATE,BEHIND HIGH TENSION INSULATOR FACTORY, LOWER CHUTIA, RANCHI - 834010 PH :9262899003.
967. PREMSONS MOTOR UDYOG PVT LTD (5103-51-05), PLOT NO.31 & 134, JOHNSON MORH, TUPUDANA INDUSTRIAL AREA, TUPUDANA, RANCHI - 834003 PH :9835507004.
968. PREMSONS MOTOR UDYOG PVT LTD (5103-51-06), PLOT NO.14 (P) KOKAR INDUSTRIAL AREA KOKAR, RANCHI. - 834001 PH :9835507004.
969. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (–01), KHATA NO. 247, MOUZA - PUNDAG,P.S. - PUNDAG, RANCHI, JHARKHAND. - 834004 PH :7061157502.
970. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (–02), NEAR KATHAL MORE, ARGORA RANCHI RD, NEAR EKLABBA TOWER, DHIPATOLI, ARGORA, RANCHI - 834004 PH :7061157502.
971. PREMSONS MOTOR UDYOG PVT LTD (5103-51-07), ARGORA-KATHAL MORE ROAD, OPPOSITE OF RELIANCE FRESH - 834001
972. TULSYAN MOTORS PRIVATE LIMITED (5110-51-01), TULSYAN COMPOUND, PANDRA, RATU ROAD, RANCHI JHARKHAND - 834001

SIMDEGA

973. PREMSONS MOTOR UDYOG PVT LTD (–01), R.S PLOT NO 4674 UNDER KHATA NO 157, SITUATED AT VILLAGE – GOTRA, NEAR GOUSHALA, MAIN ROAD, SIMDEGA, JHARKHAND. - 835223 PH :9835507004.

TORPA

974. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (–01), OPPOSITE NAGAR KHUNTI, JHARKHAND - 835227

KARNATAKA

ANEKAL

975. PRATHAM MOTORS PVT LTD (–04), SY#45/3, KAVAL HOSAHALLI, KASABA HOBLI, ANEKAL TALUK - 562106

ANKOLA

976. BHARATH AUTO CARS PVT LTD (–01), NEAR NARAYANA TEMPLE KAKKAR MUTTA, BELEGULI CROSS, ANKOLA, UK DISTRICT - 581314 PH :7829567400.

ATHANI

977. SHANTESHA MOTORS PVT LTD (–01), RS NO. 605, SHIVAYOGI NAGAR, BIJAPUR ROAD, ATHANI, DIST. - BELGAUM. - 591304 PH :8884472587.

ATHRADI

978. ABHARAN MOTORS PVT LTD (–04), HERABETTU ROAD ATHARDI UDUPI - 576107 PH :9845472500.

ATTIBELE

979. SURAKSHAA CAR CARE PVT LTD (–01), SURVEY NO 22/7/8, SARJAPUR MAIN ROAD, INDIABELE VILLAGE, OPP. TO GOLDEN LIBERTY, ATTIBELE P.O., BANGALORE. - 562107 PH :9449865665.

BAGALKOT

980. VIJAY MOTOWINGS PVT LTD (–01), 180/4-2,BELGUM RAICHUR ROAD,NEAR APMC MARKET YARD, BAGALKOT - 587103 PH :9481289167.

BAGEPALLI

981. BIMAL AUTO AGENCY INDIA PVT LTD (–01), H.L. NO. 423 AND 436 SRI SATHYA SAI NAGAR, ON NH-7, THIMAKALAPALLI BLOCK-II, PARAGODU GRAM PANCHAYATH, KASABA HOBLI, BAGEPALLI TALUK, CHIKKABALLAPUR DIST. - 561207 PH :9742458888.

BAJPE

982. BHARATH AUTO CARS PVT LTD (–01), SURVEY NO: 5/A3,SUNKADAKATTE, KOLAMBE VILLAGE,BAJPE, DAKSHINA KANNADA DIST, KARNATAKA,571442 - 571442

BANDAHALLI

983. BIMAL AUTO AGENCY INDIA PVT LTD (–01), SURVEY NO: 44/11, TAVARAKERE VILLAGE, NANDAGUDI HOBLI, BANDHALLI, HOSKOTE TALUK, BANGALORE RURAL DIST, KARNATAKA- 562122 - 562122

BANGALORE

984. MANDОВI MOTORS PVT LTD (–01), 24/4,7TH MAIN,WILSON GARDENS,BANGALORE - 560027
985. MANDОВI MOTORS PVT LTD (–07), 17/A-2&3 IND.SUBURB,IND STAGE, GORAGUNTEPALAYA, TUMKUR ROAD. YESWANTHPUR, BANGALORE - 560022
986. MANDОВI MOTORS PVT LTD (–05), NO.2/106 (NEXT TO KASSIA BLDG.),17TH CROSS,MAGADI CHORD ROAD EXTN. VIJAYANAGAR,BANGALORE - 560079
987. RNS MOTORS PVT LTD (7301–03), 2275 TUMKUR ROAD, GURGUNTEPALYA, YESHWANTPUR, BANGALORE - 560022 PH :9606933236.
988. BIMAL AUTO AGENCY INDIA PVT LTD (–01), NO. - 60/3, VENKATALA VILLAGE, YELAHANKA HOBLI, BANGALORE NORTH TALUK - 560084
989. BIMAL AUTO AGENCY INDIA PVT LTD (–01), 60/2, MAHADEV PURA, WHITE FIELD ROAD, BANGALORE - 560048
990. RNS MOTORS PVT LTD (7301–04), HOSUR ROAD,BOMMANAHALLI,MADIVALA POST,BANGALORE - 560068 PH :9148001412.
991. MANDОВI MOTORS PVT LTD (–08), NO. 70 SARAKKI INDUSTRIAL LAYOUT,J.P NAGAR,3RD PHASE, BANGALORE - 560078
992. PRATHAM MOTORS PVT LTD (–01), SY. NO. 78/4, OPP. TO BELLANDUR CENTRAL MALL, OUTER RING ROAD, VARTHUR HOBLI, BELLANDUR,BANGALORE EAST TALUK, BANGALORE - 560103 - 560037
993. BIMAL AUTO AGENCY INDIA PVT LTD (–02), NO. 69/2, SARAKKI, KANAKAPURA ROAD, BANGALORE - 560078
994. PRATHAM MOTORS PVT LTD (–02), STHANIKAMS ARCADE, OPP. ST THERESA HOSPITAL, DR. RAJ KUMAR ROAD, A BLOCK,RAJAJINAGAR 2 STAGE, BANGALORE - 560010
995. KALYANI MOTORS PRIVATE LIMITED (–01), MYSORE ROAD,PANTHARAPALYA,KENGRI HOBLI,BANGALORE - 562320

996. BIMAL AUTO AGENCY INDIA PVT LTD (-03), NO.7/1, KALANAAGRAHARA VILLAGE, MOUNT ST. JOSEPH TRAINING COLLEGE FOR JESUITS COMPOUND, IIMB POST, BANNERGHATTA RD., BANGALORE - 560076	1012. BIMAL AUTO AGENCY INDIA PVT LTD (-01), #184/185, OPP. FORUM VALUE MALL, WHITE FIELD MAIN ROAD, BANGALORE - 560066	1025. KALYANI MOTORS PRIVATE LIMITED (-05), SY.NO.8/4, G HOSAHALLI MAIN ROAD, GOLLARAHATTI, V N POST, YESHWANTPURA HOBLI, MAGADI MAIN ROAD, BANGALORE - 560091	1038. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO. 26, OMR ROAD, NEXT TO PRIMARY HEALTH CENTRE - 560037
997. BIMAL AUTO AGENCY INDIA PVT LTD (-04), 6TH CROSS, OFF OLD AIRPORT ROAD, HAL 2ND STAGE POST, BANGALORE - 560038	1013. SURAKSHAA CAR CARE PVT LTD (-04), PLOT NO. 8 & 9, NEXT TO BDA COMPLEX, 4TH BLOCK, 100 FT ROAD, KORAMANGALA, BANGALORE, KARNATAKA - 560034	1026. SURAKSHAA CAR CARE PVT LTD (-06), BEARING NO. 54/4-320/2, BEGUR HOBLI, BOMMANAHALLI VILLAGE, BEGUR HOBLI, BANGALORE, KARNATAKA - 560068	1039. AVANISH AUTO LLP (-02), NO. 277, NELAMANGALA TALUK, DASANAPURA, HOBLI, MADANAYAKANAHALLI, BANGALORE - 560037
998. MANDIVI MOTORS PVT LTD (-0C), NO 1 TO 5, NAVODAYA HSBC, 4TH STAGE, 4TH MAIN, RAJAJINAGAR INDUSTRIAL TOWN, BASAVESHWAR NAGAR - 560044	1014. KALYANI MOTORS PRIVATE LIMITED (-01), # 10/5, NAGADEVANAHALLI, KENGERI, MYSORE ROAD, BANGALORE, KARNATAKA - 560056	1027. PRATHAM MOTORS PVT LTD (-07), SUVEY NO. 43/1, ON SH-35, VILLAGE - YAMARE, SARJAPUR MAIN ROAD, POST - DOMMASANDRA, TALUKA - ANEKAL, BENGALURU RURAL, KARNATAKA - 562125	BANGARPET
999. KALYANI MOTORS PRIVATE LIMITED (-04), 119/1, 11TH CROSS, MALLESHWARAM, BANGALORE, - 560003	1015. BIMAL AUTO AGENCY INDIA PVT LTD (-06), PLOT NO. 82, DODDA BANASWADI MAIN ROAD, BEHIND IOC PETROL PUMP, NEXT TO AIYAPPA TEMPLE, BANASWADI, BANGALORE, KARNATAKA - 560033	1028. SURAKSHAA CAR CARE PVT LTD (-07), SURVEY NO 106/2A, CHANDAPURA MUNICIPAL TOWN, MUTHASANDRA HOSUR MAIN ROAD, ANEKAL TQ, BANGALORE, KARNATAKA - 560099	1040. SURAKSHAA CAR CARE PVT LTD (-01), 180/4 OPP. APMC YARD, KOLAR-BANGARPET ROAD, BANGARPET (KARNATAKA) - 563114 PH. 9449865601.
1000. MANDIVI MOTORS PVT LTD (-0D), 6/8, SHREE GANGA GARDEN, GANGA NILAYA, HENNUR CROSS, KALYANAGAR POST - 560043	1016. VARUN MOTORS PVT LTD (-01), SURVEY NO: 93, PLOT NO:31, PEENYA III PHASE, INDUSTRIAL AREA, PEENYA, YESHWANTHUR HOBLI, BANGALORE NORTH, BANGALORE, KARNATAKA-56005 - 560022	1029. VARUN MOTORS PVT LTD (-03), SY NO: 136 (OLD NO 54/8) SANGEERUVANAHALLI(VP) KAMAKSHIPALAYA, WARD NO: 17, VRISHABHAVATHI NAGAR, MAGADI ROAD, BANGALORE NORTH THALUK, BANGALORE, KARNATAKA - 560079	BANTWAL
1001. MANDIVI MOTORS PVT LTD (-0E), SY NO:26, AMBILUPURA VILLAGE, VATHUR HOBLI, BANGALORE, EAST TALUKA - 560102	1017. KALYANI MOTORS PRIVATE LIMITED (-05), PLOT NO. 74/5, HORMAVU MAIN ROAD, NEAR BBMP OFFICE, KR PURAM HOBLI, BANGALORE. - 560043	1030. RNS MOTORS PVT LTD (-01), SURVEY NO. 48, HEBBAGODI, HOSUR MAIN ROAD, ANEKAL TALUK, BANGALORE URBAN DIST, KARNATAKA - 560099	1041. MANDIVI MOTORS PVT LTD (-01), NH-75, PANEMANGALORE, B.C. ROAD, BANTWAL, KARNATAKA - 574231 PH. 9008810123.
1002. KALYANI MOTORS PRIVATE LIMITED (-02), SY. NO.-58/1A & 61/22, AVALAHALLI, NH-4, K.R. PURAM, BANGALORE - 560049	1018. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), NO. 5, 15TH CROSS, KOLANDAPPA GARDEN, ANEPALYA, POST - AADUGODI, BANGALORE - 560030	1031. KALYANI MOTORS PRIVATE LIMITED (-03), SURVEY NO. 194/5, HUNSEMARANAHALLI, JALA HOBLI, DEVANAHALLI TALUK, (YELAHANKA NEW TALUK), NEW KEMPEGOWDA INTERNATIONAL AIRPORT ROAD, NORTH - 562110	BASAVAKALYAN
1003. KALYANI MOTORS PRIVATE LIMITED (-03), NO.129/4, KUNDALAHALLI VILLAGE, OPP. TO BROOKE FIELD HOSPITAL, BROOKFIELD, BENGALURU - 574239	1019. MANDIVI MOTORS PVT LTD (-01), KATHA NO.4, SITUATED AT GANAKAL DHAKALE, SRINIVASAPURA, KENGERI HOBLI, UTTARAHALLI, BANGALORE - 560060	1032. MANDIVI MOTORS PVT LTD (-09), MUNICIPAL NO. 133 (OLD NO.S 133 & 133/1), BULL TEMPLE ROAD, BBMP WARD NO. 49, K G NAGAR, BANGALORE, KARNATAKA-560018 - 560018	1042. LAHOTI MOTORS PVT LTD (-01), SURVEY NO: 122/16, TRIJURANTH, SASTAPUR BANGLA MUMBAI HIGHWAY, BASAVAKALYAN - 585327
1004. SURAKSHAA CAR CARE PVT LTD (-01), 30/3 K AGRAHARA, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE - 580100	1020. VARUN MOTORS PVT LTD (-02), BEARING NO. 27/1 & 27/2, SURVEY NO. 41/3 & 42/7 BAGALAGUNTA, HESSARGHATTA MAIN ROAD, NEAR WIDIA SCHOOL BUS STOP, NAGASANDRA POST, BANGALORE - 560073	1033. KALYANI MOTORS PRIVATE LIMITED (-06), SURVEY NO. 67, NH-209, NAVARATAN GARDENS, (NEAR IOCL PETROL BUNK) DODDAKALASANDRA VILL., UTTARAHALLI HOBLI, KONANAKUNTE, KANAKAPURA-KENGERI ROAD, BANGALORE, KARNATAKA - 560062	BELGAUM
1005. SURAKSHAA CAR CARE PVT LTD (-02), #54/1, BOMMANAHALLI, HOSUR MAIN ROAD, BANGALORE - 560068	1021. MANDIVI MOTORS PVT LTD (-0J), SITE NO. 58/1, J.B. KAVAL, MAJOR SANDEEP UNNIKRISHNAN ROAD, VIDYARANYAPURA, BANGALORE - 560097	1034. SANVIT AUTOMOTIVES LLP (-01), NO2599/1 OPP. SHELL PETROL BUNK, GOTTIGERE BANNERGHATTA ROAD, BANGALORE - 560083	1043. SHANTESHA MOTORS PVT LTD (-01), MUJAWAR COMPOUND, NEHRU NAGAR, BELGAUM, - 590010 PH. 9902043711.
1006. KALYANI MOTORS PRIVATE LIMITED (-04), 250/1, BILEKAHALLI, BANNERGHATTA ROAD, BENGALURU - 560076	1022. KATARIA AUTOMOBILES PRIVATE LIMITED (-01), SURVEY NO. 8/3, 10/4, 10/2, VILLAGE - THALAGHATTAPURA, KANAKAPURA MAIN ROAD, NEAR NANDI TOYOTA, UTTARAHALLI HOBLI, TALUK - BENGALURU SOUTH, BANGALORE, KARNATAKA - 560109	1035. KALYANI MOTORS PRIVATE LIMITED (-01), KATHA NO. 39, SURVEY NO 58 HENNUR MAIN ROAD, KR PURAM HOBLI - 560043	1044. SHANTESHA MOTORS PVT LTD (-03), PLOT NO. 39, RS NO. 670, CTS NO. 1612/3, KHANAPUR ROAD, UDAYAMBA, BELGAUM (SCREE SHOT ATTACHED) - 590006 PH. 8894433911.
1007. BIMAL AUTO AGENCY INDIA PVT LTD (-04), PLOT NO.37/38, 2ND STAGE, PEENYA INDUSTRIAL AREA, BANGALORE - 560058	1023. RNS MOTORS PVT LTD (7301--0J), SY. NO. 11/2 & 12/1, VILLAGE - ARAKERE, BEGUR HOBLI, BANNERGHATTA ROAD, BANGALORE - 560 076.	1036. AVANISH AUTO LLP (-01), SURVEY NO 8/1B, JALAHALLI CROSS, T DASARAHALLI, BENGALURU - 560038	1045. SHANTESHA MOTORS PVT LTD (-06), PLOT NO. 2/1, RS NO. 29, KIADB INDUSTRIAL AREA, KIADB BAUXITE ROAD, KANGRALI BK, BELGAUM. - 590010 PH. 9731396805.
1008. RNS MOTORS PVT LTD (7301--0G), 106/7, BELLARY ROAD, NEAR IOC PETROL BUNK, AMRUTHAALLI, NEAR HEBBAL FLYOVER, BENGALURU (KARNATAKA) - 560092 PH. 63648484787.	1024. SURAKSHAA CAR CARE PVT LTD (-05), SURVEY NO.2/6, BERTENA AGRAHARA, OPP. METRO CASH & CARRY, HOSUR MAIN ROAD, BANGALORE. - 560100	1037. SANVIT AUTOMOTIVES LLP (-02), SANVIT MOTORS, HULIMAVU TO BEGUR ROAD, GOTTIGERE, BANGALORE - 560037	BELLARY
1009. PRATHAM MOTORS PVT LTD (-05), #58/5 KUDLU VILLAGE, NEXT TO ZEE SCHOOL, SARJAPUR HOBLI, ANEKAL TALUK, BANGALORE - 560034			1046. KPF PVT LTD (-01), P.B. NO. 58, BELLARY HOSPET ROAD, ALLIPURA, BELLARY - 583101 PH. 9449876025.
1010. RNS MOTORS PVT LTD (7301--0H), PLOT NO.129, KIADB INDUSTRIAL AREA, HEBBAGODI VILLAGE, BOMMASANDRA, JIGINI LINK ROAD, BANGALORE - 562158 PH. 9538965771.			BELLUR CROSS
1011. KALYANI MOTORS PRIVATE LIMITED (-02), 10/1, HEBBAL, AMANIKERE KASABA HOBLI, YOGESH NAGAR, BANGALORE - 560024			1047. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO. 537/61, BELLUR VILLAGE, BELLUR HOBLI, NAMANGALA TALUK, MANDYA DIST KARNATAKA 571418 - 571418

BHATKAL

1050. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO. 157/2A, SUSGADI VILLAGE, NH66, BHATKAL, UTTARKANNADA DISTRICT, KARNATAKA. - 581320
PH :9008693940.

BIDAR

1051. LAHOTI MOTORS PVT LTD (-01), SI 50/51, PRATAP NAGAR, UDGIR ROAD, KIADB INDUSTRIAL AREA, NAUBAD, BIDAR - 585402
PH :8884412049.

1052. LAHOTI MOTORS PVT LTD (-02), PLOT NO. 58, NAUBAD INDUSTRIAL AREA, PRATAP NAGAR, BIDAR. - 585401
PH :9108707709.

BIJAPUR

1053. RNS MOTORS PVT LTD (7301-01), SURVEY NO.25K/1, CHITRADURGA SHOLAPUR ROAD, VIJAYAPURA, BIJAPUR DISTT. KARNATAKA - 586109
PH :8861208998.

BUDHIGERE

1054. BIMAL AUTO AGENCY INDIA PVT LTD (-01), KHATTA NO:115,SY. NO. 128/33, MANDUR MAIN ROAD, BUDIGERE CROSS, MANDUR VILLAGE, NEXT TO IOCL PETROL BUNK, BANGALORE EAST TALUK, BANGALORE. - 560049
PH :9742259528.

BYNDOOR

1055. ABHARAN MOTORS PVT LTD (-01), 3-256 & 3-257, SOUPARNIKA COMPLEX, NH 66, VILLAGE - YEDATHRE, BYNDOOR, KUNDAPUR TALUK, UDUPI DISTT. - 576214
PH :7899751777.

CHALLAKERE

1056. SAKETH AUTOMOBILES (-01), SITE NO. 9 & 10, SY. NO. 96/1, OPP. SUJIMALLESHWARA NAGAR, BELLARY ROAD, CHALLAKERE. - 577522
PH :9686550126.

CHAMARAJANAGAR

1057. MANDIVI MOTORS PVT LTD (-01), RAJ KAMAL BUILDING, SATHYAMANGALA ROAD, KUVEMPU EXTENSION, CHAMARAJANAGAR (KARNATAKA) - 571313
PH :9845445586.

CHANNAGIRI

1058. SHRUTI MOTORS PVT LTD (-01), SURVEY NO.5, MACHANAYAKANAHALLI, OPP. FIRE STATION, CHITRADURGA ROAD, N.H.13, CHANNAGIRI DISTT. DAVANGERE - 577213

CHANNAPATNA

1059. KALYANI MOTORS PRIVATE LIMITED (-01), PROPERTY NO.58, MALUR GRAMA, MALLUR HOBLI, CHANNAPATNA TALUKA RAMANAGARA DISTRICT - 562160
PH :9845066682.

CHANNARAYAPATNA

1060. VENKAT MOTORS (-01), PLOT NO. 389, 36/3, 132/1, BESIDES THIRUMALA RICE MILL, MYSORE ROAD, CHANNARAYAPATNA, DISTRICT: HASSAN, KARNATAKA - 573116
PH :8147077144.

CHICKBALLAPUR

1061. BIMAL AUTO AGENCY INDIA PVT LTD (-01), NO. 169/1, AMMANI KANDAVARAKERE VILLAGE, KASABA HOBLI, CHICKBALLAPURA DISTRICT - 562101
PH :9742262499.

CHICKMANGALUR

1062. SHRUTI MOTORS PVT LTD (-01), AIT CIRCLE, KM ROAD, CHICKMANGALUR - 577102

CHIKKA TIRUPATI

1063. SURAKSHAA CAR CARE PVT LTD (-01), URVEY NO. 1/2, OPPOSITE TO BHARATH PETROL BUNK, ANCHEMUSKUR, CHIKKA TIRUPATI, KOLAR, KARNATAKA - 563160 - 563160

CHIKODI

1064. SHANTESHA MOTORS PVT LTD (-05), OPP. IOC PUMP, NEAR B.K.COLLEGE, MIRAJ ROAD, CHIKKODI, KARNATAKA - 591201
PH :789295790.

CHINTAMANI

1065. PRATHAM MOTORS PVT LTD (-06), SURVEY NO. 33, NEXT TO VIJAYA P U COLLEGE, OPP. GOPASANDRA LAKE, SREENIVASAPURA MAIN ROAD, CHINTAMANI, KARNATAKA - 563125

CHITRADURGA

1066. SAKETH AUTOMOBILES (-01), NEAR VEDA COMPLEX, NH-4, M H ROAD, CHITRADURGA - 572130
PH :9686550313.

DABASPET

1067. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO. 33/4 (OLD SY NO. 33/3 & 33/2C), KENGAL KEMPOHALLI VILL., SOMPURA HOBLI, DABASPET MAIN ROAD, NELAMANGALA TALUK, BANGALORE RURAL DIST., KARNATAKA-562111 - 562111

DAVANGERE

1068. SHRUTI MOTORS PVT LTD (-01), NEAR PANCHDEVASTHANA, P. B. ROAD, DAVANGERE, KARNATAKA - 577004

1069. SHRUTI MOTORS PVT LTD (-02), DOOR NO. 473/1, SURVEY NO. 18/1, BESIDE GMIT COLLEGE, OPP. M&M SHOWROOM, OLD P. B. ROAD, DAVANGERE, KARNATAKA - 577001

DEVANAHALLI

1070. BIMAL AUTO AGENCY INDIA PVT LTD (-01), SURVEY NO.241/114/6, 11TH WARD, BB ROAD, DEVANAHALLI, BANGALORE DISTT: - 562110
PH :9742262514.

DHARWAD

1071. RNS MOTORS PVT LTD (-01), NO.29A/1, 29A/2, 29A/3 PLOT NO.1, ASHOK NAGAR, DODDANAYAKANAKOPPA VILLAGE, GOA ROAD, DHARWAD, KARNATAKA - 580008

DODDABALLAPUR

1072. PRATHAM MOTORS PVT LTD (-01), PLOT NO. 50, OBADENAHALLI INDUSTRIAL AREA, DODDABALLAPUR 3RD PHASE, SY. NO. 107, AREHALLI GUDDANAHALLI, KASABA HOBLI TALUK - DODDABALLAPUR, DISTRICT - BENGALURU RURAL. - 561203
PH :9886671687.

DODDADUNNASANDRA

1073. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO.57/1A, DODDADUNNASANDRA VILLAGE, ANUGONDANAHALLI HOBLI, HOSKOTE TALUK, BANGALORE RURAL, KARNATAKA- 562114. - 562114

GADAG

1074. RNS MOTORS PVT LTD (7301-0E), PLOT NO. 64, DIAGONALLY OPP. REGIONAL TRANSPORT OFFICE, HUBLI GADAG MAIN ROAD, GADAG - 582103
PH :9538925602.

GAJENDRAGARH

1075. PRN AUTOMOTIVES LLP (-), BESIDE PIAGGIO SHOWROOM, HUBLI-GAJENDRAGAD ROAD, GAJENDRAGAD, GADAG DISTRICT, KARNATAKA - 582101

GANGAVATI

1076. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT LTD) (-03), JAGANMATHA COMPLEX, RAICHUR ROAD, GANGAVATI. - 583227
PH :9449870754.

GAURIBIDANUR

1077. MANDIVI MOTORS PVT LTD (-01), NO.592/522, E DIVISION, OPP. PUSHPANJALI TALKIES, B.H. ROAD, GAURIBIDANUR TOWN, DISTT. CHIKBALLAPUR - 561210
PH :8217453513.

GOKAK

1078. SHANTESHA MOTORS PVT LTD (-01), RS NO.106/3D/2A, APMC ROAD, GOKAK, BELGAUM DISTT. - 591307
PH :7829925760.

GONIKOPPAL

1079. MANDIVI MOTORS PVT LTD (2501-07), KAIKERY VILLAGE, GONIKOPPAL., - 571213
PH :990064873.

GUBBI

1080. SAKETH AUTOMOBILES (-01), SY NO. 71, ASSESSMENT NO. 54/4/4911, PROPERTY NO. 28-5-252, NEAR PETROL BUNK, B H ROAD, GUBBI TOWN & TALUK, TUMKUR DISTRICT, KARNATAKA, 572216 - 572216

GUDIBANDHA

1081. BIMAL AUTO AGENCY INDIA PVT LTD (-01), DOOR NO:160, 1ST WARD, OPP TO GOVERNMENT BUS STAND, BAGEPALLI ROAD, GUDIBANDA, CHICKABALLAPURA DISTRICT KARNATAKA - 561209
PH :9742261903.

GULBARGA

1082. LAHOTI MOTORS PVT LTD (-01), LAHOTI GARDENS, NEAR KMF, HUMNABAD ROAD, GULBARGA - 585104
PH :9480825014.
1083. LAHOTI MOTORS PVT LTD (-02), DOOR NO. 7-12-11, 2ND BLOCK, OPP. GUNJ BUS STAND, HUMNABAD ROAD, GULBARGA, KARNATAKA. - 585104
PH :7619342035.

GUNDLUPET

1084. KALYANI MOTORS PRIVATE LIMITED (-01), ASSESSMENT NO. 2491/S. NO. 51/1, 2, 3, N.S. 11 AND ASSESSMENT NO. 2494/S. NO. 51/ N.S. 11, MYSORE-OOTY ROAD, GUNDLUPET. - 571111
PH :9686855799.

HAGARIBOMMANAHALLI

1085. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT LTD) (-01), SITE NO.112A/2 & 112A/3, BLOCK NO.2, WARD NO.:3, HAGARIBOMMANAHALLI PANCHAYAT, BELLARY DISTRICT. - 583212
PH :9481343007.

HALIYAL

1086. RNS MOTORS PVT LTD (-01), SURVEY NO: 347P/27, DOOR NO:B1180/15 & B1180/16, HANUMAN COMPLEX, HALIYAL CIRCLE, MAIN ROAD, HALIYAL TOWN & TALUK, UTTARA KANNADA DISTRICT, KARNATAKA - 581329
PH :8284200200.

HARAPANAHALLI

1087. SHREE LAKSHMI CARS PVT LTD (-01), SURVEY NO 13/1, ADAVIHALLI VILLAGE, KASABA HOBLI, HARAPANAHALLI, DISTRICT - VIJAYANAGARA, KARNATAKA - 583131

HAROHOLLI

1088. SURAKSHAA CAR CARE PVT LTD (-01), SURVEY NO. 40/4, HOSAKOTE VILLAGE, HAROHALLI HOBLI, KANAKAPURA TALUK, RAMANAGARA, - 562112
PH :9449865608.

HASSAN

1089. VENKAT MOTORS (-01), NO. 326, HASSAN GROWTH CENTRE, H.N. PURA ROAD, HASSAN - 573201
PH :9844044038.

HAVERI

1090. REVANKAR MOTORS PVT LTD (-01), NEAR TMAE SOCIETY CAMPUS, IJARILAKAMAPUR, PB ROAD, HAVERI - 581110
PH :7022016903.

H-CROSS

1091. BIMAL AUTO AGENCY INDIA PVT LTD (-01), PART NO.1, SITE NO.36, SBT COMPLEX, HOSKOTE-BANGALORE ROAD, KARIYANAPURA, H CROSS, SHIDLAGHATTA TALUK, BANGALORE RURAL DISTT. CHIKKABALLAPURA - 562122
PH :9738948126.

HEBRI

1092. ABHARAN MOTORS PVT LTD (-01), SURVEY NO. 61-7C1P1 & 61-2P1, VILLAGE & TALUK - HEBRI, KARKALA, DIST.-UDUPI, KARNATAKA. - 576112
PH :9900077605.

HEGGADADEVANA KOTE (H D KOTE)

1093. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO. 5/4, VILLAGE - YARAHALLI, KASABA HOBLI, TALUK - H.D.KOTE, DISTRICT - MYSORE. - 571125
PH :9686855799.

HESSARGHATA

1094. BIMAL AUTO AGENCY INDIA PVT LTD (-01), SY NO 294/3, HESARGHATTA VILLAGE YELAHANKA TALUK, BENGALURU, KARNATAKA - 580088
PH :9743658662.

HONNAVAR

1095. RNS MOTORS PVT LTD (-01), SURVEY NO. 727/1A, KARKI VILLAGE, HONNAVAR (HONAVAR) TALUK AND TOWN, UTTARA KANNADA DIST., KARNATAKA - 581327

HOSANAGRA

1096. SHRUTI MOTORS PVT LTD (-01), SH-52, OPPOSITE CANARA BANK, HOSANGARA, PIN-577418, - 577418

HOSURGA

1097. SAKETH AUTOMOBILES (-01), ASSESSMENT NO. 9310/6, PLOT NO. 6, HOSADURGA TOWN, SARASWATI BADAVANE, HOSADURGA, DIST. -CHITRADURGA, KARNATAKA. - 577527
PH :7625088946.

HOSKOTE

1098. BIMAL AUTO AGENCY INDIA PVT LTD (-05), NO. 205/108, SITUATED AT HOSKOTE TALUK, KASABA HOSKOTE TOWN, DISTT.- BANGALORE - 562114

HOSPET

1099. MUNEE CARS (A UNIT OF MUNEE ENTERPRISES PVT LTD) (-01), BELLARY ROAD, SANKLAPUR, HOSPET, - 583203
PH :7619505001.

HUBLI

1100. RNS MOTORS PVT LTD (7301-73-01), PUNE - BANGALOR ROAD, UNKAL, HUBLI - 580025
PH :9538965902.

1101. RNS MOTORS PVT LTD (7301-73-0F), GOKUL ROAD MUREDESHWAR BHAVAN , HUBLI - 580030
PH :8861208532.

1102. REVANKAR MOTORS PVT LTD (7303-01), CTS NO.165/A, WARD NO.III, DESHPANDE NAGAR, HUBLI (KARNATAKA) - 580029
PH :8792008301.

1103. PRM AUTOMOTIVES LLP (7304-73-01), SURVEY NO 33, NAGASHETTI KOPPA VILLAGE BESIDES SRINIVAS GARDENS, HUBLI - 580020

HUNSUR

1104. KALYANI MOTORS PRIVATE LIMITED (-01), M-18 & M-19, KSSIDC INDUSTRIAL ESTATE, BM BYPASS ROAD, HUNSUR, MYSORE DISTRICT, KARNATAKA - 571105
PH :7022669699.

JEWARGI

1105. LAHOTI MOTORS PVT LTD (-01), S NO: 125, PLOT NO:7, FILTER BED ROAD, OPP. BUS DEPOT, JEWARGI, KALABURGI DISTRICT (FORMERLY GULABARGA) , KARNATAKA-585310. - 585310
PH :9480825004.

KADABA

1106. MANDIVI MOTORS PVT LTD (-01), SURVEY NO.-11/20, KALARA, KADABA POST, DAKSHIN KANNADA DISTT., KARNATAKA - 574221
PH :9740912365.

KADUR

1107. SHRUTI MOTORS PVT LTD (-01), SHOP NO. 1 & 2, DAGA COMPLEX, ULUKINAKALLU, NEAR PEARLS CLUB, B.H. ROAD, KADUR, DISTRICT - CHIKMAGALUR. - 577548

KANAKAPURA

1108. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO. 447/1B, KASABA HOBLI, BUDIGUPPE GRAMA, TALUKA- KANAKAPURA, DISTRICT- RAMANAGARA. KARNATAKA. - 562117
PH :9900599933.

KARKALA

1109. ABHARAN MOTORS PVT LTD (-03), NH-13, MANGALORE KUDREMUKH ROAD, PULKERI, KARKALA - 574104
PH :9880232666.

KARWAR

1110. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO. 459/2B, 456/2B AND 458/3, CHITTAKULA VILLAGE, KARWAR TALUKA, UTTARKANNADA DISTRICT, KARNATAKA. - 581301
PH :7829567400.

KITTUR, BELGAUM

1111. SHANTESHA MOTORS PVT LTD (-01), PLOT NO. 219, KITTUR INDUSTRIAL AREA (KIADB), POONA BANGALORE HIGHWAY (NH-4), KITTUR TOWN AND TALUK, BELGAUM DISTRICT, - 591115
PH :9731396808.

KOLAR

1112. MANDIVI MOTORS PVT LTD (-0F), 67/3 BANGALORE-CHENNAI HIGHWAY, KONDARAJANA HALLI, OPP HOTEL SHANTHI SAGAR, KOLAR. - 563101

KOLLEGAL

1113. MANDIVI MOTORS PVT LTD. (-01), MYSORE KOLLEGAL ROAD., NEAR BRAHMARAMBA KALYANAMTAP. - 571440

KOPPA

1114. SHRUTI MOTORS PVT LTD (-01), NEARBY ARCCENT POWDER SHOP, UPPERPET, KOPPA, DIST-CHIKAMAGALURU, KARNATAKA - 577126

KOPPAL

1115. KPF PVT LTD (-01), SL. 283/10, NEAR MINI VIDHAN SOUDHA, KOPPAL HOSPET ROAD NH63, KOPPAL - 583238
PH :9449876027.

KRISHNARAJANAGARA (KRANAGARA)

1116. KALYANI MOTORS PRIVATE LIMITED (-01), NO.D, DORNHALLI, DODDEKOPPALU GRAMA PANCHAYAT, KASABA HOBLI, KRISHNARAJANAGARA, MYSORE DISTRICT, KARNATAKA - 571602
PH :8971159430.

KRISHNARAJAPET

1117. MANDIVI MOTORS PVT LTD (-01), KHATA NO.3094, SY. NO.278, MYSORE CHENNERAYAPATNA ROAD (OPP. TO K.B.C. FUEL STATION), KRISHARAJAPET TOWN, TALUK MANDYA DISTT. KARNATAKA - 571423
PH :9845132038.

KUDUR

1118. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO.272/1 AND SURVEY NO.272/2, NARASANDRA VILLAGE, KUDURU HOBLI, MAGADI TALUK, RAMANAGARA DISTRICT, KARNATAKA 562127 - 562127

KUMTA

1119. BHARATH AUTO CARS PVT LTD (-01), MALLYA'S COMPOUND, NH-66, ALVEKODI KALBAGH VILLAGE, KUMTA (KARNATAKA) - 581334
PH :9448979530.

KUNDARPUR

1120. ABHARAN MOTORS PVT LTD (-02), NH-17, THAKKATTE, KUNDAPURA - 272877
PH :9880197524.

KUNIGAL

1121. SAKETH AUTOMOBILES (-01), NEAR KRS AGRAHARA, BM ROAD, KUNIGAL, TUMKUR DISTRICT, KARNATAKA - 572130
PH :9686550127.

KUSHAL NAGAR

1122. MANDIVI MOTORS PVT LTD (-01), SY NO:88, MADAPATANA, KUSHAL NAGAR, SOMVARPUR, NORTH KODAGU, KARNATAKA - 571234
PH :9900080893.

LINGASUGUR

1123. MUNEE CARS (A UNIT OF MUNEE ENTERPRISES PVT LTD) (-01), PLOT NO. 11, BASAMMA COMPLEX, RAICHUR ROAD, LINGSUGUR, RAICHUR, KARNATAKA - 584122
PH :9480830255.

MADDUR

1124. MANDIVI MOTORS PVT LTD (-01), SURVEY NO 802/2A4B, NEAR SANJAY THEATRE, BM ROAD, MADDUR TOWN, MANDYA DISTRICT, KARNATAKA - 571428

MADIKERI

Dealer Workshop (AS ON 31.01.2026)

1125. KALYANI MOTORS PRIVATE LIMITED (-01), BASAPPA THEATRE BUILDING, DASAWAL ROAD, MADIKERI KODAGU DISTRICT. - 571201 PH :9606073867.	1137. BHARATH AUTO CARS PVT LTD (-08), S. NO. 1376/1-41, 1375/41-2-A1P1, 2A1P3, 1373/1-40, 1369/1-40-42, KASABA BAZAR, KANDAKAPALLI, KUDROLI, TALUK - MANGALORE, MANGALORE, KARNATAKA - 575003 PH :9886785730.	1148. MANDОВI MOTORS PVT LTD (-01), SURVEY NO:3316/2327,VISHALAXAMMA COMPLEX, T B BADAVANE B H ROAD, NAGAMANGALA TOWN, VILLAGE, PERESANDRA, CHIKKABALLAPUR DISTRICT, KARNATAKA - 571432 PH :9845132038.	1157. BIMAL AUTO AGENCY INDIA PVT LTD (-01), SURVEY NO # NO.39 NO:113, SAMRUDDHI NILAYA GROUND FLOOR, NH7, ARURU VILLAGE, PERESANDRA, CHIKKABALLAPUR DISTRICT, KARNATAKA- 562104 - 562104 PH :8660799820.
MAGADI		NANJANGUD	PUTTUR
1126. PRATHAM MOTORS PVT LTD (-01), SY NO:92/2, THIRUMALA VILLAGE, KASABA HOBLI, MAGADI TOWN & TALUK, RAMANAGARA DISTRICT, KARNATAKA - 562120 PH :9900058483.	MUDBIDRI 1138. BHARATH AUTO CARS PVT LTD (4503-03), BHARATH BEEDI COMPOUND, NEAR ALVAR'S HOSPITAL, MOODIBDRI - 574227 PH :9886785430.	1149. KALYANI MOTORS PRIVATE LIMITED (-01), 4340/4159/4, HULLAHALLI ROAD, NANJANGUD, DISTRICT - MYSORE, KARNATAKA - 571301 PH :9688855799.	1158. BHARATH AUTO CARS PVT LTD (4503-02), NEAR RAILWAY STATION, HARAY, PUTTUR - 517583 PH :9886072730.
MALUR	MUDHOL	NARASIMHARAJAPURA	RAICHUR
1127. MANDОВI MOTORS PVT LTD (-01), NO 12/8, BANGALORE - MALUR MAIN ROAD, OPPOSITE OF INDIAN OIL PETROL BUNK - 563130	1139. VIJAY MOTOWINGS PVT LTD (-01), PLOT NO. 3B, IN NARS NO. 15-2, WARD NO. 5, VISHWESHWAR COLONY, LOKAPUR ROAD, MUDHOL TOWN, BAGALKOT DIST. - 587313 PH :9606046173.	1150. SHRUTI MOTORS PVT LTD (-01), SURVEY NO # SURVEY NO.173/P KOPPA ROAD, NAGALAPURA VILLAGE,NARASIMHARAJAPURA, CHIKMAGALU R DIST.,KARNATAKA - 577134	1159. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT LTD) (-02), #12-10-64, GOUSHAL ROAD,SIYA TALAB AREA,RAICHUR - 584101 PH :9480830264.
MANCHENAHALLI	MUDIGERE	NARAVI	RAJANUKUNTE
1128. VARUN MOTORS PVT LTD (-01), NO:1219,GOLAPPA COMPUIND, MAHESHWARI TALKUE, MANCHENAHALLI, GOWREIBIDANUR TALUK, CHIKKABALLAPUR DIST, KARNATAKA- 561211 - 561211 PH :9513979162.	1140. SHRUTI MOTORS PVT LTD (-01), SURVEY NO.10/1, 10/2, SITE NO.14, 15 NEXT TO SRIRANGPURA VIHAR, GOWDAHALLI RD - 577132	1151. MANDОВI MOTORS PVT LTD (-01), SURVEY NO:122/181.DOOR NO:4/59.SHRI CHAITHANYA , ARASAKATTE, NARAVI, BELTHANGADY TALUK, DAKSHINA KANNADA DIST, KARNATAKA- 574109 - 574109 PH :9740392005.	1160. VARUN MOTORS PVT LTD (-01), SURVEY NO. 3/1, SITE NO.6 , SINGANAYAKANAHALLI, RAJANKUNTE, BANGALORE NORTH TALUK, BANGALORE URBAN, KARNATAKA - 560064 PH :9513979162.
MANDYA	MULBAGAL	NELAMANGALA	RAMANAGARA
1129. MANDОВI MOTORS PVT LTD (2501-06), 1660/A, KALLAHALLI EXTENSION, M.C. ROAD, - 571401 PH :9611165873.	1141. PRATHAM MOTORS PVT LTD (-01), NO. 35-6-117/1, CHITTOOR MAIN ROAD, VEERABHADRA NAGAR, MULBAGAL, KOLAR DIST., KARNATAKA-563131 - 563131	1152. RNS MOTORS PVT LTD (-01), NO.167/2, TUMKUR ROAD, KASABA HOBLI, NH4, NELAMANGALA, BANGALORE RURAL DT., BENGALURU, KARNATAKA - 562123 PH :7259875385.	1161. KALYANI MOTORS PRIVATE LIMITED (-02), #K1318/2034C,OPP TO ROTARY HOSPITAL,BM ROAD, RAMNAGARAM - 571511
MANGALORE	MULKI	NELYADI	RANEENNUR
1131. MANDОВI MOTORS PVT LTD (4502-45-01), ARVIND BUILDING, BALMATTA ROAD, HAMPANKATTA, MANGALORE - 575001 PH :9845107701.	1142. BHARATH AUTO CARS PVT LTD (4503-05), BHARATH BEEDI COMPOUND, NH-17 MULKI - 574154 PH :99860620730.	1153. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO. 97/11P AND SURVEY NO. 97/9, VILLAGE - HOSAMAJALU KAUKRADY, POST - NELYADI, TALUK - PUTTUR, DIST.-DAKSHIN KANNADA. - 574229 PH :9886072730.	1162. REVANKAR MOTORS PVT LTD (-01), SCHEDULE A-2, OPP. ST.JIT ENGINEERING COLLEGE, P B ROAD, RANEENNUR, KARNATAKA. - 581115 PH :8830947883.
1132. BHARATH AUTO CARS PVT LTD (4503-45-01), NH-17, KUNTIKAN JUNCTION, DEREBAAL, NEAR A.J. HOSPITAL, MANGALORE - 575004 PH :9886785730.	MURUDESWAR	OORGAUMPET	SAGAR
1133. MANDОВI MOTORS PVT LTD (4502-45-03), NO., HASSAN GROWTH CENTRE ADYAR,N.H. -48,,MANGALORE - 575007 PH :9845514146.	1143. RNS MOTORS PVT LTD (7301-02), NH-17, MANGALORE-BOMBAY ROAD, MURUDESHWAR, KARNATAKA - 581350 PH :9538965969.		1163. SHRUTI MOTORS PVT LTD (-01), BESIDE H GANAPATHIYAPPA PETROL BUNK (BP), B H ROAD, NH-206, SAGAR, SHIMOGA DISTT. - 577401
1134. MANDОВI MOTORS PVT LTD (4502-07), BALLAL INDUSTRIAL ESTATE, YAYYADI, MANGALORE,KARNATAKA - 575008 PH :9880079235.	MYSORE		SAKLESHPUR
1135. BHARATH AUTO CARS PVT LTD (-06), PLOT NO. 290/1, 291/1, KODIALBAIL VILLAGE, NEXT TO BHARATH BEEDI WORKS PVT. LTD., BUNTS HOSTEL, KADRI ROAD, MANGALORE, KARNATAKA - 575002 PH :9886333030.	1144. MANDОВI MOTORS PVT LTD (2501-25-01), NO: 5 K.R.S.ROAD, MYSORE - 570005 PH :9945248860.		1164. VENKAT MOTORS (-01), SITE NO. 19, 3RD WARD, SARASWATHIPURAM, SAKLESHPUR TOWN, DISTRICT - HASSAN - 573134 PH :7892809634.
1136. MANDОВI MOTORS PVT LTD (4502-08), DOOR NO. 2-63/4, SUJITH BAGH LANE, YEYYADE, MANGALORE, DISTRICT - DAKSHINA KANNADA, KARNATAKA - 575008 PH :9880278077.	1145. MANDОВI MOTORS PVT LTD (2501-25-05), NO. 182/145/C, BANNUR ROAD, SIDHARTHA NAGAR, MYSORE, KARNATAKA - 570011 PH :9845539936.	PADUBIDRI	SARJAPURA
	1146. KALYANI MOTORS PRIVATE LIMITED (2503-25-01), MANATHAVADI ROAD, VIDYARANYA PURAM, MYSORE - 570008 PH :7259255558.	1155. ABHARAN MOTORS PVT LTD (-01), PLOT NO. 51/20, VILLAGE - PADUBETTU, PADUBIDRI TOWN, TALUKA & DISTRICT - UDUPI, KARNATAKA. - 574111 PH :9880232999.	1165. PRATHAM MOTORS PVT LTD (-01), SURVEY NO. 476/3, SARJAPUR TOWN, TALUKA - ANEKAL, SARJAPUR HOBLI, DISTRICT - BANGALORE URBAN, KARNATAKA. - 562125 PH :7760962890.
	1147. MANDОВI MOTORS PVT LTD (2501-25-08), 217/2, HUNSUR ROAD, HINKAL POST, MYSORE, KARNATAKA - 570017 PH :9845939937.	PANDAVAPURA	SAUNDATI
	NAGAMANGALA	1156. KALYANI MOTORS PVT. LTD. (-01), SY NO.299/12, KENNALU VILLAGE., KASABA HOBLI, PANDAVAPURA TALUK, - 571435	1166. SHANTESHA MOTORS PVT LTD (-01), CTS NO. 4038B/1,PLOT NO 16/3 DHARWAD ROAD, KENCHALARKOP, SAUNDATTI - 591126
		PERESANDRA	SHIKARIPURA

1167. SHREE LAKSHMI CARS PVT LTD (-01), 35/5, AADHI SAKTI TEMPLE SHIMOOGA-SHIKARIPURA ROAD, SHIKARIPURA - 577427

SHIMOOGA

1168. SHRUTI MOTORS PVT LTD (-01), K NO 599, SHANKARMUTT ROAD, SHIMOOGA - 577201
1169. SHRUTI MOTORS PVT LTD (-02), BLOCK L-1, INDUSTRIAL ESTATE, BEHIND HP PETROL BUNK, SAGAR ROAD, SHIMOOGA - 577204
1170. SHRUTI MOTORS PVT LTD (-03), SURVEY NO. 41/3 & 41/4, HONNALI ROAD, SHANTHI NAGAR, SHIMOOGA - 577201

1171. SHREE LAKSHMI CARS PVT LTD (-01), SURVEY NO : 74 & 86 (PLOT NO 1800), URGADUR, BY PASS ROAD, SHIVAMOGGA, KARNATAKA - 577203 - 577203

SIDDAPUR

1172. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO. 211, NEAR IOCL PETROL BUNK, JOG ROAD, VILLAGE - HOSUR, TALUK - SIDDAPUR, DISTRICT - UTTARA KANNADA. - 581355 PH :9449402730.

SINDHANUR

1173. KPF PVT LTD (-01), SY. NO. 168/15, EJ HOSAHALLI CAMP GANGAVATHI MAIN ROAD, SINDHANUR, RAICHUR DISTRICT, KARNATAKA - 584128 - 584128

SIRISI

1174. RNS MOTORS PVT LTD (-01), SURVEY NO 43/B, LANDKANALI VILLAGE, DODNALLI GRAMA, SIRISI TALUK AND HOBALI, UTTAR KANNADA, KARNATAKA - 581402 PH :9895979023.

SIRSI

1175. RNS MOTORS PVT LTD (7301-0D), K H B COLONY, SIRSI - 581402 PH :9538925606.

SIRUGUPPA

1176. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT LTD) (-01), SITE NO:31C/1B & PLOT NO.1, BELLARY - SIRUGUPPA MAIN ROAD, SIRUGUPPA TALUK, BELLARY DISTRICT. - 583121 PH :7619505001.

SOMWARPET

1177. MANDVI MOTORS PVT LTD (-01), SURVEY NO:130 SITUATED AT MADIKERI ROAD, NAGROOR VILLAGE, BALAGUNDA POST, SOMWARPET TALUK, NORTH KODAGU DISTT. - 571236 PH :9845115665.

SORABA

1178. SHRUTI MOTORS PVT LTD (-01), NO: 2281681997, 6TH WARD, KHATA NO: 7/A-1/B, OPPOSITE TO GOVERNMENT JUNIOR COLLEGE, SHIRALA-KOPPA ROAD, SORABA, SHIVAMOGGA DIST, KARNATAKA- 577429 - 577429

SRINGERI

1179. SHREE LAKSHMI CARS PVT LTD (-01), SL NO 711, DHURUVANISH GRAND, RAJANAGAR, SRINGERI - 577139

SRINIVASAPURA

1180. SURAKSHAA CAR CARE PVT LTD (-01), SY NO. 40, VPRD NO. 86, PROPERTY NO. 84 & 87, CHALDIGANA HALLI GRAMA PANCHAYATH, PANNASAMAKANA HALLI VILLAGE, SRINIVASAPURA POST & TALUK, DIST.-KOLAR, KARNATAKA - 563135 PH :9449865601.

SULLIA

1181. MANDIVI MOTORS PVT LTD (4502-04), ODABAI ROAD, MANGALORE MYSORE ROAD, KARNATAKA - 574239 PH :9900002325.

SURTHKAL

1182. MANDIVI MOTORS PVT LTD (4502-02), KANA ROAD, SURATHKAL - 574158 PH :9845514143.

T. NARASIPURA

1183. MANDIVI MOTORS PVT LTD (-01), KHATA NO:472/473/474, OPP TO SRI RAGHAVENDRA SWAMY MUTT, CHAMARAJANAGAR ROAD, T. NARASIPURA TOWN, MYSORE DISTRICT, KARNATAKA - 571124 PH :9845132038.

THIRTHAHALLI

1184. SHRUTI MOTORS PVT LTD (-01), PLOT NO. 1507/2187, OPP. TO HEGDE PETROL PUMP, AGUMBE ROAD, THIRTHAHALLI. - 577432

THOKOTU

1185. BHARATH AUTO CARS PVT LTD (-01), NH-66, KAPIKAD, ULLAL, THOKOTU, DAKSHINA KANNADA DISTT. - 575017 PH :9538796330.

TIPTUR

1186. SAKETH AUTOMOBILES (-03), BANDIHALLI INDUSTRIAL ESTATE, N.H.-206, TIPTUR, KARNATAKA - 572201 PH :9945301023.

TUMKUR

1187. SAKETH AUTOMOBILES (-01), SIRA ROAD, TUMKUR - 572106 PH :9686550323.

UDUPI

1188. ABHARAN MOTORS PVT LTD (-01), N.H. 17, NITTUR, UDUPI - 576103 PH :9880232990.

1189. ABHARAN MOTORS PVT LTD (-05), NO. 305/1C, DOOR NO. 5-51A, RAILWAY STATION ROAD, INDRALI, UDUPI, DISTT. - UDUPI - 576101 PH :9686694341.

UJIRE

1190. BHARATH AUTO CARS PVT LTD (-01), SURVEY NO.237-281, MANGALORE-CHARMADY ROAD, NEAR INDIAN OIL PETROL PUMP, SAMPIGE NAGAR, UJIRE, BELTHANGADY TALUKA, DISTT. DAKSHINA KANNADA, KARNATAKA. - 574240 PH :9886176130.

UPPINANGADI

1191. MANDIVI MOTORS PVT LTD (4502-05), NR.PADMA VIDYA IOC PETROL STATION-34, NEKKILADY, UPPINANGADY - 574241 PH :9740912365.

VENOOR

1192. BHARATH AUTO CARS PVT LTD (-01), RESURVEY NO.8/5, KARIMANELU VILLAGE, VENOOR, BELTHANGADY TALUK, DAKSHINA KANNADA DIST., KARNATAKA-574242 - 574242

VIJAYPURA

1193. BIMAL AUTO AGENCY INDIA PVT LTD (-01), DOOR NO 563, MARUTHI NAGAR, CHIKKABALLAPUR ROAD, VIJAYAPURA TOWN, DEVANAHALLI TALUK, BANGALORE RURAL DISTRICT KARNATAKA. - 562135 PH :8884433996.

VITTAL

1194. MANDIVI MOTORS PVT LTD (-01), DOOR NO. 1-287 (9), JISHAN COMPLEX, VITTAL TOWN, TALUKA - BANTWAL, DISTRICT - DAKSHIN KANNADA - 574243 PH :9008810123.

YADGIR

1195. LAHOTI MOTORS PVT LTD (-01), SURVEY NO. 101/1, GULSARAM VILLAGE, YADGIR TOWN & DISTT, SHAHPUR TALUKA, KARNATAKA - 585223 PH :9480825031.

KERALA

ADIMALI

1196. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), RE SURVEY NO:647/5-2, BUILDING NO:15/121, MANNANKANDAM VILLAGE, ADIMALI, DEVIKULAM TALUK, IDUKKI DISTRICT, KERALA-685561 - 685561

ADOOR

1197. AVG MOTORS PVT LTD (-02), KOTTAMUKAL, K.P. ROAD, ADOOR PO, PATHANAMTHITTA, KERALA - 691523 PH :9446355900.

ADUR

1198. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0A), M. C. ROAD, MITHRAPURAM, ADOOR, PATHANMTHITTA - 689518 PH :9745998303.

ALAKODE

1199. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE. SY. NO. 23/1958, ARANGAM, ALAKODE, TALIPARAMBA TALUK, KANNUR DISTRICT, KERALA - 670571 - 670571

ALANALLUR

1200. KVR AUTOCARS PVT LTD (-01), BUILDING NO. 10/1050, CHANDAPPADI, MANNARKAD ROAD, POST - ALANALLUR, TALUKA - MANNARKAD, DISTRICT - PALAKKAD, KERALA. - 678601 PH :9747020582.

ALAPPUZA

1201. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-12), BLOCK NO. 145, RE-SURVEY NO. 79, ALAPPUZHA WEST VILLAGE, AMBALAPPUZHA TALUK, ALAPPUZHA DIST. KERALA-699002 - 699002 PH :9745977744.

ALATHIYOOR

1202. A M MOTORS (-11), RE SURVEY NO. 160/3, 161/7 (OLD SURVEY NO. 359/1), VILLAGE - ALATHIYOOR, TIRUR PONNAI ROAD, TALUKA - TIRUR, DIST.-MALAPPURAM, KERALA. - 676102

ALATHUR

1203. BRD CAR WORLD LIMITED (-01), SURVEY NO. 456/8, 455/8, 455/9, ERATTUKKULAM, KATTUSSERY VILLAGE, ALATHUR TALUKA, PALAKKAD DISTRICT, KERALA - 678682 PH :9745634999.

ALLEPEY

1204. POPULAR VEHICLES AND SERVICES LIMITED (-01), BUILDING NO. XVIII/135, DOOR NO. 13/449, CCSB ROAD, PALACE WARD, CHUNGAM, ALAPPUZHA, KERALA-688011 - 688011 PH :9778698161.

ALUVA

1205. BRD CAR WORLD LIMITED (-09), RE SURVEY NO.330/7, NH-47, KUNNAMPURAM, PO-DESHAM PANCHAYATH, CHENGAMANAD, ALUVA. - 683102 PH :9745907100.

ANCHAL

Dealer Workshop (AS ON 31.01.2026)

1206. SARATHY AUTO CARS (-01), SURVEY NO. 371/9, VILLAGE - IDAMULAKKAL, P.O. - ANCHAL, TALUK - PUNALUR, DISTRICT - KOLLAM - 691306 PH - 9526806665.	CALICUT	1216. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-01), MARUTI WORKSHOP, PANIKKER ROAD, CALICUT, NADAKKAVE - 673011 PH - 9745998019.	CHANGANASSERY	1238. MAJO MOTO (A UNIT OF GEORGE MAJO AUTOMOBILES PVT LTD) (-01), RE SURVEY NO.121/2052 BUILDING NO.28/34, CHERTHALA ALAPPUZHA DIST, KERALA - 688524 - 688524
1207. POPULAR VEHICLES AND SERVICES LIMITED (1601-14), RE SURVEY NO 581/5, BLOCK NO 33, ANCHAL VILLAGE, NEAR ALBILAL DRIVING SCHOOL, KATHADY JUNCTION, ANCHAL, KERALA - 691306 PH - 9778698200.		1217. POPULAR VEHICLES AND SERVICES LIMITED (4702-47-02), BEHIND MIMS, EASWARAMANGALAM ROAD, GOVINDAPURAM P.O., CALICUT - 673016 PH - 9846298613.	CHANGARAMKULAM	CHERUPUZH
ANGAMALY		1218. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-06), KOYA ROAD JUNCTION, PUTHIYANCADI, POST WEST HILL, CALICUT - 673005 PH - 9745998020.	1229. A M MOTORS (-01), MELE MANTHADAM, ALANKODE, P.O., CHANGARAMKULAM, MALAPPURAM DISTT, KERALA - 679585 PH - 9895756008.	1239. KVR AUTOCARS PVT LTD (-01), SURVEY NO.191, VAYAKKARA VILLAGE, - 670511
1208. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0F), ANGAMAALY KALADY ROAD, MC ROAD, ANGAMALY - 683572 PH - 9745998434.		1219. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-08), NEAR STEEL COMPLEX, NALLALAM, CALICUT - 673655 PH - 9745998018.	CHAVAKKAD	CHINGAVANAM
1209. POPULAR VEHICLES AND SERVICES LIMITED (2701-0D), 182-AIRPORT JUNCTION NAGAR,M. C. ROAD,ANGAMALY - 683572 PH - 8086078886.		1220. POPULAR VEHICLES AND SERVICES LIMITED (4702-47-07), NH-17 BYE PASS,PACHAKKIL, MALAPARAMBU P.O., KOZHICODE, CALICUT - 673009 PH - 9288012082.	1230. BRD CAR WORLD LIMITED (-06), ORUMANAYOOR P.O.CHAVAKKAD, DISTRICT-THRISSUR - 680512 PH - 9645963999.	1240. POPULAR VEHICLES AND SERVICES LIMITED (-01), BUILDING NO. VI 461, RE SURVEY NO. 290/9, GOMATHI JUNCTION, MAVILANGU KARA, CHINGAVANAM P.O., DISTT. KOTTAYAM, KERALA - 686531 PH - 9778690817.
AREEKODE		1221. BIMAL AUTO AGENCY INDIA PVT LTD (-01), RE SURVEY NO. 13, BUILDING NO. 5/548, KRISHNARJUNA BUILDING, AREEKAD, VILLAGE AND PANCHAYATH - CHERUVANNUR, P.O. - NALLALAM, CALICUT (KOZHICODE) , KERALA. - 673027	1231. SAI SERVICE PRIVATE LIMITED (-01), SURVEY NO. 26/5, MULLANTHARA PARAMBU, OVUNGAL, KUNNAMKULAM ROAD, TALUK - GURUVAYUR, CHAVAKKAD - 680506 PH - 9495883852.	CHITTUR
1210. KVR AUTOCARS PVT LTD (-01), SURVEY NO. 196/22-4, 196/10-1, 196/22-2,19, KEEZHUPARAMBU VILLAGE, PATHANAPURAM, AREEKODE - 673639		1222. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-12), R S NO: 51/7, IRINGALLUR, OLAVANNA PANCHAYATH, GURUVAYOORAPPAN COLLEGE PO, PALLAZHI - 673014	CHAVARA	1241. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), S.NO 719/3 AND 721/1, RE SURVEY NO. 671/10, VELLIVAVALLAMPATHY VILLAGE, KOZHINJAMPARA, CHITTUR, PALAKKAD DISTT. - 678555
ATTINGAL		1223. A M MOTORS (-47-01), SURVEY NO: 17/57, 55, AMBALAPADI, POOLADIKUNNU, NH-66,ERANJIKKAL POST - 673001	CHENGANNUR	CHULLIMANOOR
1211. POPULAR VEHICLES AND SERVICES LIMITED (1601-07), PALAMKONAM, PERUNKULAM,VIA- ALAMCODE, ATTINGAL - 695102 PH - 8086078788.		CHALAKUDY	1233. SARATHY AUTO CARS (-06), PRAVUMKOD, THIRUVANVANDOOOR P.O. CHENGANNUR TALUK, ALAPPUZHA (DIST) - 689124 PH - 9447002647.	1242. POPULAR VEHICLES AND SERVICES LIMITED (1601-16), RE-SURVEY NO. 43/7, VILLAGE-ANAND, CHULLIMANOOR TOWN, TALUKA-NEDUMANGAD, DIST. TRIVANDRUM, PIN-695541, KERALA - 695541 PH - 9778690745.
1212. SARATHY AUTO CARS (-01), SURVEY NO. 2952/17 & 2952/4, KIZHUVILLAM VILLAGE, ATTINGAL, CHARAYINKEEZHU TALUK, TRIVANDRUM DIST., KERALA - 695104 PH - 9526052765.		1224. POPULAR VEHICLES AND SERVICES LIMITED (2701-0C), SURVEY NO: 350/1,352/1,352/2,362/1,363/3,364/1,NH BYEPASS 47,PERAMBRA VILLAGE, CHALAKUDY, THRISSUR DIST.,KERALA- 680722 - 680307 PH - 9072609600.	1234. SAI SERVICE PRIVATE LIMITED (-01), SURVEY NO. 276/2,11,13,13-2-2, NEAR BPCL PUMP AND SURVEY NO. 276/12, M C ROAD, NEAR LABHAM MAVELI STORE,CHENGANNUR PO & MUNICIPAL, CHENGANUUR VILL & TALUK, ALAPPUZHA DIST., KERALA-689121 - 689121 PH - 9288024220.	COCHIN
1213. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SY. NO. 54/13, 14, 15, 16, (OLD SY. NO. 22, 22/13, 16), IN BLOCK NO. 3 OF VELLOOR HIGHWAY, EASTERN SIDE OF NATIONAL HIGHWAY 47, NEAR INTERNATIONAL SCHOOL, CHEMBAKAMANGALAM, KORANI PO, ATTINGAL, TRIVANDRUM DIST., KERALA - 695104 PH - 9747550888.		1225. BRD CAR WORLD LIMITED (-01), MURINGOOR P.O., CHALAKUDY - 680316 PH - 9645176999.	CHERPULASSERY	1243. POPULAR VEHICLES AND SERVICES LIMITED (2701-27-01), PERANDOOOR ROAD, PUNNAKAL, ELAMAKKARA, COCHIN - 682025 PH - 9846017725.
BALARAMAPURAM		1226. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 53/1, 53/2 & 55/1, PANAMBILLY COLLEGE JUNCTION, VILLAGE-PERAMBRA, POTTA, TALUKA CHALAKUDY, DISTT. THRISSUR, PIN-680307, KERALA - 680307	1235. KVR AUTOCARS PVT LTD (-01), SURVEY NO. 154/4, RS NO. 154/4, VILLAGE - CHERUPPALLASSERY, TALUK - OTTAPPALAM, DISTRICT - PALAKKAD - 679503	1244. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-02), BEHIND COMMERCIAL SALES TAX, M.G. ROAD, COCHIN, - 682015 PH - 9745998040.
1214. POPULAR VEHICLES AND SERVICES LIMITED (1601-11), POOVAR ROAD, VAZHIMUKKU, BALARAMAPURAM P.O., TRIVANDRUM DISTRICT - 695501 PH - 8943345922.		CHALAPARAMBU	CHERTHALA	1245. SAI SERVICE PRIVATE LIMITED (2705-27-01), 50/1 15L, CHERANALLOOR ROAD,EDAPPALLY,COCHIN - 682024 PH - 9645106339.
BHARANIKAVU		1227. AVG MOTORS PVT LTD (-01), VAIKOM, KOTTAYAM, CHALAPARAMBU, - 673002	1236. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), OPPOSITE TO S.N. COLLEGE, S.N. PURAM P.O., KANJIKUZHICHERTHALA, ALAPPUZHA-DIST. - 688552	1246. SAI SERVICE PRIVATE LIMITED (2705-27-02), NH-47, PATHADIPALAM,EDAPPALLY,COCHIN - 682024 PH - 9645105057.
1215. SARATHY AUTO CARS (-01), URVEY NO. 116/2 OF 4, SASTHAMKOTTA VILLAGE, BHARANIKAVU TOWN, KUNNATHOOR TALUK, KOLLAM DISTRICT. KERALA, PIN-690520 - 690520 PH - 7994825565.			1237. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE-SURVEY NO.1502/1,147/3, BUILDING NO KP-18/80, N.H. KANJIKUZHICH VILLAGE, CHERTHALA, ALAPPUZHA DISTT., - 688582 PH - 9072530127.	1247. POPULAR VEHICLES AND SERVICES LIMITED (2701-27-04), NEAR LISI HOSPITAL, OPP. IMA BLOOD BANK, COCHIN, - 682018 PH - 9846298618.

1249. SAI SERVICE PRIVATE LIMITED (2705-08), KETTEZHUTHUM KADAVU, INTUC JUNCTION, NETTOOR, ERNAKULAM, COCHIN (KERALA) - 682040 PH :8129496818.	1259. INDUS MOTOR (-01), 43/16-2, 43/17, 43/18, 43/3, 2, OPP. SANETTUMANOOR, KOTTAYAM, PIN-686631, KERALA - 686631 FORT KOCHI	1268. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0C), MEENANGADI, KAKKAVAYAL P.O., NORTH KALPETTA, WAYAND - 673591 PH :9745998592	1279. BRD CAR WORLD LIMITED (-02), BRD INDUSTRIAL ESTATE, KARIKKAD, KUNNAMKULAM - 680519 PH :9958045599.
1250. MAJU MOTO (A UNIT OF GEORGE MAJU AUTOMOBILES PVT LTD) (2709-27-01), DOOR NO.5/452, 5/452A, 5/453, OLD ELOOR ROAD, ELOOR JUNCTION, NORTH KALAMASSERY, DISTRICT - ERNAKULAM, COCHIN. - 683104	1260. SAI SERVICE PRIVATE LIMITED (-01), PLOT NO.83/1,2 OPPOSITE TO KUMAR PETROL PUMP, STATUE ROAD, CHULLIKKAL POST, FORT KOCHI - 682005 PH :9645106330.	1269. KVR AUTOCARS PVT LTD (-C1), BUILDING NOS. 363, 364, 365, 366,367,368 AND 369 CONSTRUCTED ON THE PLOT COMPRISED IN RESURVEY NOS. 719/6, 722/3, 722/22, 722/6, 722/8, 722/10, 722/21, SITUATED AT MUTTIL NORTH VILLAGE, VYTHIRI TALUK, KALPETTA SUB-DISTRICT, WAYANAD DISTRICT, KERALA. - 673122 PH :9747021902.	KARUNAGAPPALLY
1251. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-07), SURVEY NO. 30-A/32, KARIKKAD ROAD, THEKKUMBHAGAM, PUTHIYAKAVU, TRIPUNITHURA, ERNAKULAM, KERALA - 682301 PH :9745992070.	GURUVAYUR	KANHANGAD	1280. SARATHY AUTO CARS (-05), K.S. PURAM,NEELIKULAM, KARUNAGAPPALLY,KOLLAM. - 690544 PH :9526691565.
1252. MAJU MOTO (A UNIT OF GEORGE MAJU AUTOMOBILES PVT LTD) (2709--02), PLOT NO.2/316, NH-47, MARADU VILLAGE, KANNDIKAD, NEAR SAROVARAM, KUNDANOOR, COCHIN (KERALA) - 607001	1261. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--08), KUNAMKULLAM CHAVAKKAD ROAD, OPPOSITE CHOOLPURAM MOSQUE, GURUVOOR, THRISSUR - 680505 PH :9745998015.	1270. POPULAR VEHICLES AND SERVICES LIMITED (4702--06), HIGHWAY JUNCTION,KANHANGAD SOUTH P.O., KANHANGAD - 689641 PH :9946104685.	1281. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SY.NO.243/1, 243/10, 243/16, 243/14, 243/15, 243/16, EDAPPALLY KOTTA JUNCTION, NEAR TITANIUM, CHAVARA POST, KARUNAGAPPALLY, DISTT. KOLLAM. - 691583 PH :9745998006.
1253. POPULAR VEHICLES AND SERVICES LIMITED (2701-27-10), SURVEY NO: 1622, 1622A-2, 1622/5, 162/3-2, 162/13-2 & 162/5, BUILDING NO. 33/2, 33/3 & 33/4, PIPELINE ROAD, PADIVATTOM, VAZHAKALA, COCHIN, KERALA-682021. - 682021	IRINJALAKUDA	1271. KVR AUTOCARS PVT LTD (-02), ARANGADI, P.O. KANHANGAD, DIST. KASARGOD, - 671315 PH :9605040999.	1282. SARATHY AUTO CARS (-11), SURVEY NO. 15/3, SIDCO INDUSTRIAL AREA, EDAKULANGARA PO, NEAR KARUNAGAPPALLY RAILWAY STATION, KARUNAGAPPALLY, KERALA - 690562 PH :9526691565.
1254. BRD CAR WORLD LIMITED (-10), OPPOSITE IOC PARKING GATE, SEA PORT AIRPORT ROAD, IRRUPPAMAM, - 682024	1262. BRD CAR WORLD LIMITED (-05), KARUPADANNA P.O., IRINJALAKUDA, THRISSUR - 680670 PH :9539006999.	1272. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0F), SURVEY NO.491/3A1 AND 491/3A2, AJANUR VILLAGE, KANHANGAD, HOSADURGA TALUK, KASARAGOD DISTT, KERALA. - 671541	KASARGOD
EDAKKARA	IRITTY	KANJIRAPPALLY	1283. KVR AUTOCARS PVT LTD (-01), ANANGUR, VIDYANAGAR (PO), NH17, KASARGOD - 671123 PH :9747021206.
1255. KVR AUTOCARS PVT LTD (-01), SURVEY NO. 1087/1C-91, VAZHIKADAVU VILLAGE, OOTY ROAD, MUNDA, EDAKKARA TOWN, NILAMBUR TALUK, MALAPPURAM DIST., KERALA - 679331 PH :9747020777.	IRITTY	1273. AVG MOTORS PVT LTD (-01), NEW SURVEY NO. 187/2 (OLD SURVEY NO. 299/1, 299/11), KANJIRAPPALLY VILLAGE & TALUKA, KOTTAYAM DISTRICT.,KERALA - 686512	1284. POPULAR VEHICLES AND SERVICES LIMITED (4702--0D), MUNDAKULAM, CHEMMANAD (PO), KASARGOD - 671371 PH :9946104621.
EDAPPAL	IRITTY	KANJIRAPPALLY	1285. INDUS MOTOR COMPANY PRIVATE LIMITED (-03), 18/30AA & 18/30AB, SY. NO. 39/3B, RE SY. NO. 57/6,MOGRAL, MANJESHWAR TALUK, KASARAGOD, KERALA - 671541 PH :9747550747.
1256. POPULAR VEHICLES AND SERVICES LIMITED (4702--05), KOZHICKODA ROAD, KAVILPADY, EDAPPAL, MALAPPURAM - 679582 PH :9946104680.	KAIPAMANGALAM	1274. INDUS MOTOR COMPANY PRIVATE LIMITED (-02), VADAKUMBHAGAM KARAYIL, KUNNAMBHAGAM P.O., KANJIRAPPALLY - 686508 PH :9745998009.	KATAPPANA
EDAVANNAPPARA	1264. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE-SURVEY NO: 14/4, 11/2, NEAR JABBAR KADAVU BRIDGE, KEEZHUR VILL., PERAVOOR ROAD, IRTITY MUNICIPAL, KANNUR DIST. KERALA. - 670703 PH :7902473741.	KANJIRAPPALLY	1286. AVG MOTORS PVT LTD (-01), PALLIKKAVALA, KATTAPPANA, IDUKKI, KERALA - 685508
1257. A M MOTORS (-01), SURVEY NO. 98/1, PALLIPADI,EDAVANNAPPARA- AREEKODE ROAD, CHECKCODE POST, EDVANNAPPARA, KONDOTTY TALUK, MALAPPURAM DIST., KERALA- 673645. - 673645	KAIPAMANGALAM	1275. INDUS MOTOR COMPANY PRIVATE LIMITED (4701--0E), BALANKINAR JN., KATTAMPALLY.P.O, KANNUR - 690011	KATTAPPANA
EDAVANNAPPARA	1265. SAI SERVICE PRIVATE LIMITED (2705--07), SURVEY NO: 240/4-2 & 240/4-3, 249/5-19, 249/4A-3, 249/4B-1, 249/5-14, 249/4B, 249/4A-4,KAIPAMANGALAM BOARD,KAIPAMANGALAM P O, THRISSUR DIST, KERALA - 680681 PH :8129496846.	1276. KVR AUTOCARS PVT LTD (-04), CP-3-651-B, OPP. DHANRAJ TALKIES, PUTHIYATHERU, CHIRAKKAL POST, KANNUR, KERALA - 670011 PH :9656034333.	1287. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), KATTAPPANA-IDUKKI KAVALA, BYE PASS ROAD, KATTAPPANA, IDUKKI (DIST.) - 685508 PH :9746743460.
EDAVANNAPPARA	KALAMASSERY	1277. POPULAR VEHICLES AND SERVICES LIMITED (4702--0F), PLOT NO.82/6A, NEAR CHARAPPURAM SREEMUTHAPPAN KAVU, KAPPAD ROAD, THAZHE CHOYVA (PO), KANNUR - 670018 PH :9846062796.	1288. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE-SURVEY NO. 81/3, VILLAGE & TOWN - KATTAPPANA, TALUK & DIST.-IDUKKI, KERALA. - 685515 PH :9746818407.
1258. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO. 77/16-1 & 77/2-4, BUILDING NO.18/152-B, CHECKCODE VILLAGE,EDAVANNAPPARA KONDOTTY ROAD, CHERUVAYOOR PO, MALLAPPURAM DISTRICT, KERALA-673645 - 673645 PH :9539007323.	KALLAMBALAM	1278. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), BALAN KINAR , KATTAMPALLY PO, KANNUR, KERALA - 670511	KAYAMKULAM
ETUMANOOR	1267. POPULAR VEHICLES AND SERVICES LIMITED (-01), BUILDING NO. 5/472, NH-47, KADUVAPPALLY, THOTTAKAD P.O, KALLAMBALAM, TRIVANDRUM DIST., KERALA - 695605 PH :8086078788.	KARIKKAD (KUNNAMKULAM))	1289. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--05), KARIYILAKULANGARA, KAYANKULAM P.O., ALAPPUZHA DISTT. - 690572 PH :9745998005.
	KALPETTA		1290. POPULAR VEHICLES AND SERVICES LIMITED (-03), NH 47, KOTTUKULANGARA, KAYAMKULAM P.O., ALAPPUZHA DISTT. - 690502 PH :9946105601.

Dealer Workshop (AS ON 31.01.2026)

KODAKARA

1291. A.M. MOTORS (-01), OPPT. KODAKARA POLICE STATION, NH-544, PERINGAKULAM, KODAKARA POST, THRISSUR - 680684

KODANGALLUR

1292. SAI SERVICE PRIVATE LIMITED (2705-03), NH-17, T.K.S.PURAM, KODUNGALLOOR - 680667 PH :9645106571.

KODUNGALLUR

1293. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), RE-SURVEY NO. 116/1-6, 116/2-5, BUILDING NO. 560/A, WARD NO. VII, AALA VILLAGE, (OLD VILLAGE-SREENARAYANAPURAM), KODUNGALLUR TALUK, MADHILAKOM SRO, SANTHIPURAM PO, THRISSUR DIST., KERALA - 680008 PH :9747513444.

KODUVALLY

1294. A M MOTORS (-01), SURVEY NO:91/9, 91/10, NALLANKADY, VAVAD POST, KODUVALLY, KOZHICODE DISTRICT, KERALA - 673572 PH :9895979023.

KOLANCHERRY

1295. SAI SERVICE PRIVATE LIMITED (-01), SURVEY NO.138/7, BLOCK NO. 47, WARD-8, KOLENCHERRY TOWN, NH-85, AIKARANADU NORTH VILL., KUNNATHUNADU TALUK, ERNAKULAM DIST., KERALA-682311 - 682311 PH :7356605955.

KOLLAM

1296. POPULAR VEHICLES AND SERVICES LIMITED (1601-04), H & C COMPOUND, MUNDACKAL, KOLLAM - 680008 PH :7594977550.

1297. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-03), OLD SARATHY THEATRE, PUNALOGOR ROAD, KOLLAM - 691005 PH :9745998004.

KONDOTTY

1298. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 16/1, BLOCK NO. 36 (OLD SURVEY NO. 100/1), NEDIYIRUPPU VILLAGE, KONDOTTY PO, ERNAD TALUKA, MALAPURAM DISTRICT, KERALA - 683573 PH :9746743178.

KOOTHATTUKULAM

1299. SAI SERVICE PRIVATE LIMITED (-01), EDAPUTHUSSERY BUILDING, M.C. ROAD, OPP. MARYGIRI PUBLIC SCHOOL, KOOTHATTUKULAM P.O., ERNAKULAM DT. - 686662 PH :9645106258.

1300. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO. 614/3-4, BAPUJI JUNCTION, CHORAKUZHIM C ROAD, KOOTHATTUKULAM, MUVATTUPUZZHA TALUK, ERNAKULAM DIST., KERALA - 686662 - 686662

KOPPAM

1301. A M MOTORS (-01), SURVEY NOS: 331/3-6, 331/3-10, NEAR SALAFIYA TRAINING COLLEGE, PERINTHALMANNA-PATTAMBI ROAD, KARINGANDU, VILAYUR POST, KOPPAM, PALLAKKAD DIST., KERALA-679309 - 679309 PH :9048666635.

KOTHAMANGLAM

1302. POPULAR VEHICLES AND SERVICES LIMITED (2701-0B), NEAR BSNL OFFICE, THANGALAM, KOTOHANGALAM, KERALA - 686691 PH :9846027990.

1303. INDUS MOTOR COMPANY PRIVATE LIMITED (-03), PALAKKADAN BUILDING, CHANKLAM, KOTHAMANGALAM - 686691 PH :9745998479.

KOTTAKKAL

1304. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-09), NEAR MATHRUBHUMI PRESS, P.O. KOTTAKKAL, MALAPPURAM DIST., - 676503 PH :9745998017.

1305. POPULAR VEHICLES AND SERVICES LIMITED (4702-03), NH-17, CHANDAPARAMBU, RANBATHANI P.O., MALAPPURAM, KOTTAKAL - 676510 PH :9946104631.

KOTTARAKKARA

1306. POPULAR VEHICLES AND SERVICES LIMITED (-01), MYLOM, MC ROAD, KOTTARAKKARA, DISTT-KOLLAM, KERELA - 691531 PH :8086073468.

1307. SARATHY AUTO CARS (-01), WARD NO.40, MELILLIA PANCHAYATH, IPPALLOOR LOWER KARIKAM, KOTTARAKARA DISTT. KOLLAM (KERALA) - 691531 PH :9847423365.

1308. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), RE SURVEY NO.207/3-2, KIZHAKKEKKARA MURIYIL, KNS HOSPITAL JUNCTION, KOTTARAKKARA VILLAGE AND TALUKA, KOLLAM DISTT., - 691531 PH :9747562299.

1309. POPULAR VEHICLES AND SERVICES LIMITED (-02), BUILDING NO. MP/20/749,20/426, 20/748, INCHAKADU, KALAYAPURAM VILLAGE, MYLOM PANCHAYATH, KOTTARAKKARA TALUKA, KOLLAM DISTRICT, KERALA- 691560 - 691560 PH :8086073466.

1310. INDUS MOTOR COMPANY PRIVATE LIMITED (-02), RE-SURVEY NO.141/3-4, 142/1-2, 15-16, 143/1-2, 143/2, 143/15-2, 143/15-2-2, BEARING NOS. 25/36 & 38, KOTTARAKKARA VILLAGE, KOTTARAKKARA TALUK, KOLLAM DISTRICT, KERALA- 691506 - 691506 PH :9747562299.

KOTTAYAM

1311. AVG MOTORS PVT LTD (-01), ERAYILKADAVU, KOTTAYAM - 686001 PH :7510982222.

1312. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-04), MULANKUZA JN., NATTAKOM P.O., KOTTAYAM, KERALA - 686013 PH :974598148.

1313. POPULAR VEHICLES AND SERVICES LIMITED (-01), NEAR ST. THOMAS CHURCH, S.H. MOUNT, P.O. KOTTAYAM - 686006 PH :8086073454.

1314. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0C), MANIPPUZZHA, NATTAKOM P.O., KOTTAYAM - 686013 PH :9745998007.

KOZHENCHERRY

1315. AVG MOTORS PVT LTD (-03), KOZHENCHERRY, COLLEGE JUNCTION, DISTRICT-PATHANAMTHITTA, - 689641 PH :9446092995.

1316. SAI SERVICE PRIVATE LIMITED (-01), SURVEY NO. 315/15-B & 315/15-C, TB JUNCTION, NEAR HP PETROL PUMP, KOZHENCHERRY, PATHANAMTHITTA, KERALA - 689641 - 689641

KUNNAMANGALAM

1317. BIMAL AUTO AGENCY (-01), SURVEY NO 268/6, D.NO 6/247, KUNNAMANGALAM, KERALA - 673571

KUNNAMKULAM

1318. POPULAR VEHICLES AND SERVICES LIMITED (2701-07), CHOONDAL, TRISSUR ROAD, KUNNAMKULAM, TRISSUR DIST - 680502 PH :946105695.

KUTTIYADI

1319. A M MOTORS (-01), KUTTIYADI-PERAMBRA ROAD, PARAKKADAVU, PALERI POST, KUTTIYADI - 673508

1320. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), CHERIAKUMBALAM, PARAKADAVU, KUTTIYADI, - 673508

LAKKIDI PERUR

1321. A M MOTORS (-01), 217/7, 217/2, 278/2, 278/1, PALAPPURAM, P.O. OTTAPPALAM, LEKKIDI PERUR DISTT. PALAKKAD, - 679302

MAILATTY

1322. KVR AUTOCARS PVT LTD (-03), CHOWKI, MAILATTY(P.O.), (VIA) UDUMA, POINACHI, KERALA - 671319 PH :9747021026.

MALAPPURAM

1323. A M MOTORS (-01), VARANGODE, DOWNHILL, MALAPURAM, - 676519 PH :9895705325.

MALLAPPALLY

1324. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), THOPIL COMPLEX, MALLAPPALLY KOTTAYAM RD, MALLAPPALLY WEST, MALLAPPALLY (KERALA) - 689585 PH :9747541400.

MANATHAVADY

1325. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 1/2A1, A1, B1, RY 1/210, 1/99, MYSORE ROAD, CHETTAPPALAM, MANATHAVADY CITY & TALUK, WYANAD DIST., KERALA - 670645 PH :9745997002.

MANJARI

1326. POPULAR VEHICLES AND SERVICES LIMITED (-0E), NARUKARA VILLAGE, RAJIV GANDHI BYEPASS JN., THURKKAL, MANJERI (KERALA) - 676121 PH :8589992406.

MANJERI

1327. A M MOTORS (-05), THURAKKAL BYEPASS, MANJERI, MALAPURAM, KERALA - 676121 PH :9895756035.

1328. KVR AUTOCARS PVT LTD (-01), CH BYE PASS ROAD, MANJERI, MALAPPURAM, KERALA - 676123 PH :9747020801.

MANNARKAD

1329. A M MOTORS (-07), NH-213, MANNARKAD, DIST.-PALAKKAD - 678582 PH :9895979048.

MANNARKKAD

1330. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0K), ANAKATTY ROAD, AANDIPPADAM, NELLIPPUZZHA-PO. MANNARKAD, KERALA - 678583 PH :97459995946.

MAVELIKARA

1331. POPULAR VEHICLES AND SERVICES LIMITED (-02), KONNAYIL SUVAKO INDUSTRIAL COMPLEX, SHED A-1, KOLLAKADAVU INDUSTRIAL ESTATE, KOCHAL MOODU, KALLIMEL P.O., , MAVELIKKARA, KERALA - 690570 PH :9400052338.

1332. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 135/1/A, RE-SURVEY NO. 28/52, NEAR PRAYIKKARA, MAVELIKKARA VILLAGE & TALUK, ALAPUZZHA (ALLEPPEY) DISTRICT, KERALA - 690 101 - 690101.	1341. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0A), MINERVA JUNCTION, NILAMBUR, KERALA - 679329 PH :9745998396.	PALAKKAD	1362. INDUS MOTOR COMPANY PRIVATE LIMITED (-12), SURVEY NO. 11-13/12/1, KARIMPANKUZH ROAD, NEAR SAROJ GAS AGENCY, MAKKANKUNNU, PATHANAMTHITTA, KERALA - 689645 PH :974599858.
1333. POPULAR VEHICLES AND SERVICES LIMITED (-10), BUILDING NO. 10/115-A, WARD NO. 10, CHENNHITHALA VILL. AND TOWN, SHANTHIVANAM JUNCTION, CHERUKOLE P.O., MAVELIKKARA TALUK, ALAPPUZHA DIST., KERALA- 690104. - 690104 PH :9778690833.	1342. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0D), MANAVEDHAM HIGH SCHOOL ROAD, CHANDAKUNNU - NILAMBUR PO, NILAMBUR, MALAPPURAM DIST. - 679329 PH :9745998396.	1352. POPULAR VEHICLES AND SERVICES LIMITED (2701-09), OPP. PALANA HOSPITAL, KODUVAAYOOR ROAD, KINASSERY P.O., PALAKKAD - 678707 PH :9946105613.	1363. POPULAR VEHICLES AND SERVICES LIMITED (-11), BUILDING NO 244 / A, CHURULKODE PO, PULIMOODO JUNCTION, PATHANAMTHITTA TOWN & DIST., KOZHENCHERY TALUKA, KERALA-689643. - 689643
MORAYYUR	1343. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE-SURVEY NO: 6/1 BLOCK NO. 76, CHEMMARAN, NADUVATH PO, WANDOO ROAD, NILAMBUR, MALAPPURAM DIST., KERALA - 679328 PH :7736094999.	1353. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0G), VADAKKUMURI-NH-47, KANNADI, KUZHALMAMMAM (P.O.), PALAKKAD - 678701 PH :9745998590.	PATHANAPURAM
1334. A M MOTORS (-01), SURVEY NO. 328/1, VILLAGE - MORAYYUR, VALENCHERY, DISTRICT - MALAPPURAM, KERALA - 673642 PH :8086526666.	1344. A M MOTORS (-01), NILAMBUR MYSORE ROAD, JYOTHIPADI, NILAMBUR - 679329	1354. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), DOOR NO: 5/366 & 367, NH 47, KOOTUPATHA, CHANDRANAGAR POST, PALAKKAD - 678007 PH :9747519500.	1364. SARATHY AUTO CARS (-01), SURVEY NO. 3060/7-4, 3060/7-5, SALEMURAM, KAYAMKULAM - PUNALUR ROAD, PATHANAPURAM, KOLLAM DIST., KERALA - 689695 - 689695
MUVATTAPUZH	NILAMEL	PANDIKKAD	PATHIRAPPALLY
1335. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), NH-49, MUVATUPUZZHA KODAMANGALAM ROAD, NEAR R.K. HOSPITAL, MUVATUPUZZHA, ERNAKULAM DIST - 686661 PH :97459998011.	1345. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 195/10, 195/3-1-2, 195/3-2-1, 195/8, 195/14, 195/9-1, 195/11-1, BLOCK NO. 32, ATTINGAL MUNICIPALITY, PAZHAYAKUNNAMEL VILLAGE, CHIRAYINKIL TALUK, (BORDER OF NILAMEL TOWN), TRIVANDRUM DIST., KERALA - 695601 PH :9745993331.	1355. A M MOTORS (-01), SURVEY NOS: 333/2-2, 333/3-2, CHOORAKKAVU, PERINTHALMANNA ROAD, NEAR INDIAN OIL PETROL PUMP, PANDIKKAD TOWN & POST, MALAPPURAM DISTRICT, KERALA - 676521 PH :9539999570.	1365. POPULAR VEHICLES AND SERVICES LIMITED (-02), BUILDING NO. X/832 TO 834, X/837 TO 838, OPP. UDAYA STUDIO, PATHIRAPPALLY TOWN, AMBALAPUZZHA TALUK, NH-47, ALAPPUZHA DIST., KERALA-688521. - 688521 PH :9778698169.
1336. POPULAR VEHICLES AND SERVICES LIMITED (2708-02), MUTHUKALLU JUNCTION, PERUMPALLUR P.O., MUVATTAPUZZHA, KERALA - 686673 PH :7356988940.	1346. POPULAR VEHICLES AND SERVICES LIMITED (-01), BUILDING NO. 10/279 TO 288, M. C. ROAD, KANNANCODU, NILAMEL PO, KOLLAM (DIST.), KERALA- 691535 - 691535 PH :8714606483.	PARAPPANANGADI	PATTAMBI
NADAPURAM	OTTAPALAM	1356. A M MOTORS (-01), SURVEY NO.66/6, 66/7, KODAPPADI, POST-CHETTIPPADY, PARPANGADI, MALAPPURAM. - 676319 PH :9895900466.	1366. A M MOTORS (-04), SHORANUR ROAD, PATTAMBI, DISTRICT-PALAKKAD, - 679306 PH :9567866059.
1337. A M MOTORS (-01), NADAPURAM-THALASSERY ROAD, , PERODE POST, NADAPURAM, KOZHIKODE, KERALA - 673506	1347. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), BUILDING NO.23/667, 23/669, PALAKKAD-OTTAPPALM ROAD, OTTAPPALAM VILLAGE, OTTAPPALAM TALUKA, PALAKKAD DISTT., KERALA - 679101 PH :9747544454.	PARASSALA	1367. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0B), PERINTHALMANNA ROAD, THEKKUMURI, PATTAMBI - 679303 PH :9745998295.
NEDUMANGAD	PALA	PARAVUR	1368. A M MOTORS (-09), CHERPULASSERY ROAD, KOOMBAN KALLU, KARIMPULLI, MELE PATTAMBI POST, PALAKKAD DISTT., KERALA. - 679306 PH :9567866059.
1338. POPULAR VEHICLES AND SERVICES LIMITED (-01), RE-SURVEY NO. 855/29, 855/14/1 (OLD SURVEY NO. 1583/1), KARIIPPUR VILLAGE, NEDUMANGAD TALUK, TRIVANDRUM DIST., KERALA-695541. - 695541 PH :9846036696.	1348. POPULAR VEHICLES AND SERVICES LIMITED (-04), 12TH MILE, PALA-PONKUNNAM ROAD, PALA - 686575 PH :9072809475.	1358. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO. 340/1-76,77,78, NEAR HP PETROL PUMP, PARAVUR-MANJALI MAIN ROAD, MANNAM PO, NORTH PARAVUR MUNICIPAL, ERNAKULAM DIST. 683520, KERALA. - 683520 PH :9072609638.	PAYANNUR
NEYATTINKARA	1349. INDUS MOTOR COMPANY PRIVATE LIMITED (-05), OPP. ALPHONSA COLLAGE ARUNAPURAM(PO), PALA, KOTTAYAM - 686574 PH :9745998878.	PATHANAMTHITTA	1369. POPULAR VEHICLES AND SERVICES LIMITED (4702-04), N H 17,,EZHILODE P O, ,,PAYYANUR - 670309 PH :9946104701.
1339. POPULAR VEHICLES AND SERVICES LIMITED (-15), BUILDING NO. 11/562, KP-IX-843, NH 47, KOTTAMOM, KOLLAYIL PANCHAYAT, PANVEL - KOCHI - KANYAKUMARI HIGHWAY, KOTTAMOM, NEYYATTINKARA, TRIVANDRUM, KERALA- 695122 - 695122 PH :9946104602.	1350. AVG MOTORS PVT LTD (-01), SURVEY NO.670/1, BLOCK-21, LALAM VILLAGE, ANTHINADU MEENANCHIL, PALA, KOTTAYAM DIST. - 686651 PH :9447137246.	1359. AVG MOTORS PVT LTD (-02), JUNNUGAPADY, MYLAPRA ROAD, PATHANAMTHITTA, - 689671 PH :9446002987.	1370. POPULAR VEHICLES AND SERVICES LIMITED (-01), SY. NO. 218/1, CHERUTHAZHAM VILLAGE, EZHILODE (NEAR COLONY BUS STOP), PAYANNUR-KANNUR NH, PAYANNUR TALUK, KANNUR DISTRICT, KERALA - 670 309. - 670309 PH :9946104701.
NEYYANTTINKARA	1351. INDUS MOTOR COMPANY PRIVATE LIMITED (-07), SURVEY NO. 176, BLOCK NO. 16, HIGHWAY JUNCTION, ETTUMANOOR-POOJAR HIGHWAY, CHERPUNKAL, PALA, KOTTAYAM DISTRICT - 686584 PH :9747516934.	1361. POPULAR VEHICLES AND SERVICES LIMITED (-05), T.K. ROAD, NEAR COLLECTORATE, PATHANAMTHITTA - 689645 PH :9539009734.	PAYYANUR
1340. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), INDUS MOTOR CO. PVT. LTD., OLD M.V THEATRE, NEAR KSRTC BUS STATION, NEYYATTINKARA, DIST. TRIVANDRUM - 695121 PH :9747544500.			1371. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO.-289/117, 290/105, KARIVELLUR PERALAM GRAM PANCHAYAT (NEAR PALATHARA BRIDGE), PAYYANUR TALUK, KANNUR DISTRICT, KERALA- PIN-670521. - 670521 PH :9745998204.
NILAMBUR			PEREMBRA

Dealer Workshop (AS ON 31.01.2026)

1372. POPULAR VEHICLE & SERVICE (-01), NO. 62/1,KOOTHALI VILLAGE, MOORIKUTHI, PERAMBRA TOWN, KOYILANDY TALUKA, CALICUT - 673525	1383. SARATHY AUTO CARS (-12), BUILDING NO. 15/620, SURVEY NO. 234/1, 235/2, SITHARA JUNCTION, ADICHANALLOOR VILLAGE, KOTTIVAM PO, KOLLAM DIST., KERALA. - 691571 PH -9847936165.	1392. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-04), TEMPLE GATE, MAKKOOTAM, THALAYI, TELLICHERRY, KERALA - 670102 PH -9747520100.	1404. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0D), JYOTHI COMPLEX, GURUVAYOOR ROAD, WEST FORT, THRISSUR - 680004 PH -9745989014.
PERINTHALMANA		THALASSERY	1405. BRD CAR WORLD LIMITED (-07), GURUVAYOOR ROAD, PUNKUNNAM P.O., PUZHAKKAL, THRISSUR - 680002 PH -9746476529.
1373. A M MOTORS (-03), NEAR FIRE STATION, HOSPITAL ROAD, PERINTHALMANNA - 679322 PH -8129818235.	1384. SARATHY AUTO CARS (-13), SURVEY NO. 431/13-42, NEAR SN PUBLIC SCHOOL, VADAKKEVILA, AYATHIL, KILLIKLOOR PO, PUNTHALATHAZHAM-PALATHARA ROAD, KOLLAM, KERALA - 691004 PH -8606430765.	1393. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), NETTUR POST, KODUVALLY, THALASSERY, KANNUR DISTRICT - 670105 PH -974598022.	THRITHALLUR
1374. KVR AUTOCARS PVT LTD (-01), SURVEY NO. 87/8-15, CALICUT ROAD, NEAR ITC, THIRURKAD, PERINTHALMANNA - 679351 PH -9747020573.	RAMANATTUKKARA	THALAYOLAPARAMBU	1406. BRD CAR WORLD LIMITED (-04), PO- THRITHALLUR, NH-17, THRITHALLUR THRISSUR - 680619 PH -9539197888.
1375. KVR AUTOCARS PVT LTD (-06), OOTY ROAD, PERINTHALMANNA, MALAPPURAM(DT.), KERALA - 679322 PH -9747020837.	1385. A M MOTORS (-06), NEAR RED CRESCENT HOSPITAL, FEROK, CHUNGAM, CALICUT DISTRICT, RAMANATTUKARA, - 673632 PH -9567866144.	1394. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0J), THODUPUZA ROAD, THALAYOLAPARAMBU, VAIKOM(TALUK), DISTRICT-KOTTAYAM, KERALA - 686605 PH -9746743003.	TIRUR
PERUMBAVOOR	RANNI	THAMARASSERY	1407. A M MOTORS (-02), SATELLITE AUTO WORKS, PAYYANAGADI POST, TIRUR - 676101 PH -9995879706.
1376. SAI SERVICE PRIVATE LIMITED (2705-04), M.C.ROAD,PERUMBAVOOR,ERNAKULAM DIST,KERALA - 683542 PH -7034258335.	1386. INDUS MOTOR COMPANY PRIVATE LIMITED (-06), CHELLAKKAD-PO, PATHANAMTHITTA(DISTRICT), RANNI - 689677 PH -9745998737.	1395. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), RE-SY. NO. 44/5A, 44/6, RAROTH VILLAGE, (NEAR CHUNGAM), THAMARASSERY PANCHAYAT & TALUK, CALICUT DIST., KERALA. - 673573 PH -9747553362.	1408. KVR AUTOCARS PVT LTD (-05), T.P 7/204-B, TANUR ROAD,MOOCHIKKAL, MEENADATHUR P.O., TIRUR, DISTRICT-MALAPPURAM, KERALA - 676307 PH -9747020673.
1377. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 72/2-3, 72/3-3, TALUK - KUNNATHANADU, VILLAGE - RAYAMANGALAM, SUB DIST.-PERUMBAVOOR, DIST.ERNAKULAM. - 683541 PH -9747591803.	1387. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO:417/3, 417-10, 417/16-2-1 & 41, BLOCK NO:09,PAZHAVANGADI VILLAGE, RANNI - 689672	1396. POPULAR VEHICLES AND SERVICES LIMITED (-10), SURVEY NO 43/4 BLOCK NO:005 , RAROTH VILLAGE , THAMARASSERY TALUK , KOZHICODE DISTRICT, KERALA - 673573 PH -9846397060.	1409. A M MOTORS (-08), THALAKKADATHOOR PO, MALAPPURAM,MALAPPURAM DISTT. - 676103
PIROVAM	SASTHAMKOTTAH	THIRUVALLA	1410. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SURVEY NO. 119/3, 4, 9A, OLD MODERN PHARMACEUTICALS PVT. LTD., THRIKANDIYOOR VILLAGE, CHAMBAVATTOM ROAD, TIRUR, KERALA. - 676105 PH -9747518883.
1378. SAI SERVICE PRIVATE LIMITED (-01), SUEVE NO. 788/12-2-5, NEAR PIRAVOM GOVT. HOSPITAL, PIRAVOM TOWN & MUNICIPALITY, MUVATTUPUZHA TALUK, ERNAKULAM DIST., KERALA - 686664 PH -9645106198.	1388. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-09), NO. SP IX/661, 662, 663, KADAPUZZHA ROAD, PORUVAZHY P.O., BHARANIKUVU, SASTHAMKOTTAH, KOLLAM - , KERALA - 690520 PH -9745998849.	1397. AVG MOTORS PVT LTD (-01), M.C ROAD, PERUMTHURUTHI, THIRUVALLA , PATHANAMTHITTA DISTT - 689107 PH -9446323999.	1411. KVR AUTOCARS PVT LTD (-07), 829/A, THANUR ROAD, MOOCHIKKAL, MEENADATHUR PO, TIRUR, MALAPPURAM DIST - 676103
PUNALUR	SHORNUR	1398. POPULAR VEHICLES AND SERVICES LIMITED (-06), KAVUMBHAGOM P.O, THIRUVALLA, PATHANAMTHITTA (DIST.), KERALA - 689103 PH -8086073489.	TRIIPPUNITHURA
1379. SARATHY AUTO CARS (-03), NH-208, Q.S. ROAD,ELAMPAL POST,PUNALUR, KOLLAM DIST - 691322 PH -9744400265.	1389. POPULAR VEHICLES AND SERVICES LIMITED (2701-0E), PALAKKAD PATTAMBI ROAD, KULAPULLY JUNCTION, VADANAMKURUSSI, SHORNUR - 679124 PH -8589992432.	THODUPUZA	1412. SAI SERVICE PRIVATE LIMITED (2705-05), HILL PALACE ROAD,KARINGACHIRA,COCHIN - 682301 PH -9645105067.
1380. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), SY. NO. 48/1/42, OLD. SY. NO. 231A/3324, (OLD RAMRAJ TILES FACTORY), THALICODE, PATHANAPURAM TALUK, PUNALUR ANCHAL ROAD. - 691305 PH -9747638885.	SULTHAN BATHERY	1399. INDUS MOTOR COMPANY PRIVATE LIMITED (-04), PALA ROAD, THODUPUZA - 685584 PH -9745998631.	TRIPRAYAR
QUILANDY	1390. POPULAR VEHICLES AND SERVICES LIMITED (-01), SURVEY NO. 421/5, 421/6, BLOCK NO. 22, KRISHNAGIRY VILLAGE, PATHIRIPALAM, KOLAGAPPARA (PO), TALUK & TOWN - SULTHAN BATHERY, WAYANAD DIST., KERALA. - 673591 PH -7594977551.	1400. POPULAR VEHICLES AND SERVICES LIMITED (-01), SY.NO.124/7A-1, 124/7A-2, THODUPUZA EHLOR MAIN ROAD, VILLAGE & TOWN, THODUPUZA, DISTT. IDUKI - 685585	1413. POPULAR VEHICLES AND SERVICES LIMITED (2701-08), SURVEY NO. 296/5/8, 296/9-1, NATTIKA VILLAGE, NEAR CIVIL STATION, POLY JUNCTION, TRIPRAYAR TOWN, THRISSUR TALUK & DISTRICT, KERALA-680566 - 680566 PH -9846699245.
1381. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), BUILDING NO.13/53 A, CHENGOTTUKKAVE VILLAGE, QUILANDY, KOZHICODE DISTT. - 673306	TALIPARAMBA	THRISSUR	TRIVANDRUM
QUILON	1391. INDUS MOTOR COMPANY PRIVATE LIMITED (-01), RE SURVEY 53/4, THRICHAMBARAM TALIPARAMBA, KANNUR - 670141	1401. POPULAR VEHICLES AND SERVICES LIMITED (2701-05), KUNNATHUMKARA, PARAVATTANI, THRISSUR, KERALA - 680655 PH -6262306495.	1414. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-01), T.C. 24/885 THYCAUD P.O., THYCAUD P.O., METTUKUDA, TRIVANDRUM - 695014 PH -9745998001.
1382. SARATHY AUTO CARS (-01), NH-47 BYE PASS,AYATHIL(P.O.),QUILON - 691017 PH -9744552265.	TELLICHERRY	1402. SAI SERVICE PRIVATE LIMITED (2705-06), 17/30,POOTHOLE,THRISSUR,KERALA - 680004 PH -9645105051.	1415. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-01), C.I.T. ROAD, KILLIPALAM, KARAMANA P.O, TRIVANDRUM - 695002 PH -9946104601.
		1403. BRD CAR WORLD LIMITED (-01), NH 47,BYE PASS,KONIKARA POST,THALORE, THRISSUR - 680031 PH -9995807141.	

1416. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-02), NH BYE PASS ROAD, VEIMPALAVATTOM, TRIVANDRUM - 695029 PH :9745998003.	1426. POPULAR VEHICLES AND SERVICES LIMITED (4702-0A), N.H.17, KAIKAMPA, UPPALA P.O., KASARGOD (KERALA) - 671322 PH :8086078664.	1436. RUKMANI MOTORS PVT LTD (-01), WARD NO 1, JHABUA ROAD, ALIRAJAPUR, MADHYA PRADESH, MP - 457887 PH :8889676035.	1447. KAMTHI MOTORS LLP (-01), IN FRONT OF AURAM CITY, DIST.BALAGHAT, MADHYA PRADESH - 481001
1417. SARATHY AUTO CARS (1607-16-02), KOVALAM BYEPASS, SN NAGAR, MANACAUD (PO), TRIVANDRUM - 695009 PH :9947270665.	1427. KVR AUTOCARS PVT LTD (-01), NH 17, BANDIYODE, MANGALAPADI (PO), UPPALA, KASARGOD DISTT.,KERALA - 671324 PH :9526021876.	ALOT	BARELI
1418. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-05), G.G. MEDICAL COLLAGE P.O., MURINJAPALAM, TRIVANDRUM, MURINJAPALAM, , - 695011 PH :9745998002.	VADAKARA	1437. PATEL MOTORS (INDORE) PVT LTD (-01), IN FRONT OF VIP COLONY, STATION ROAD, ALOT, DIST : RATLAM MADHYA PRADESH - 457114 - 457114	1448. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), SURVEY 423/2, VILLAGE KAMTON, NH 12, BARELI, RAISEN, MADHYA PRADESH. - 464668 PH :7909903922.
1419. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-05), OPP. ST. JUDE CHURCH,CIT ROAD, KILLIPPALAM,TRIVANDRUM - 695002 PH :9846298610.	1428. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-07), BYE PASS JN,VATAKARA-673104,CALICUT, - 673104 PH :9745998021.	AMLAHA	BARHI
1420. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-08), NEAR MUSLIM JUMA MASJID, MUKKAM PLAMOODE, VATTAPPARA-MANNANTHALA M C ROAD, VATTAPPARA PO, MANNANTHALA,TRIVANDRUM - 695028 PH :9747540100.	1429. POPULAR VEHICLES AND SERVICES LIMITED (-01), NEAR MADAPPALLY GOVT. COLLEGE, MADAPPALLY, P.O. VADAKARA, KOZHIKODE (KERALA) - 673102 PH :8943345935.	1438. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), INDORE ROAD AMLAHA - 466113	1449. SHUBH MOTORS PVT LTD (-01), 1286/2, BARHI, DIST. - KATNI, MADHYA PRADESH - 483770 PH :9752546255.
1421. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-11), SURVEY NO.3, TC-7/1069(9), MARUTHAMKUZHI, SASTHAMANGALAM VILLAGE, PTP NAGAR ROAD, KANJIRAMPARA P.O., TRIVANDRUM - 695030 PH :9747508822.	VALENCHERRY	ANUPPUR	BARI
1422. SARATHY AUTO CARS (1607-03), 77/2-11, NEMOM VILLAGE, PAPPANAMCODU INDUSTRIAL AREA, TALUKA AND DISTRICT- THIRUVANANTHAPURAM, KERALA. PH :9961665865.	1430. A M MOTORS (-01), SURVEY NO. 132/4, KOLAMANGALAM, PERINTHALMANNA ROAD, VALANCHERY, DIST.-MALAPPURAM. - 676552 PH :9745986666.	1439. SHUBH MOTORS PVT LTD (-01), NEAR HDFC BANK, TEHSIL ROAD, ANNUPUR - 484224	1450. SRISATYASAI AUTOMOBILES PVT LTD (-01), WARD NO.12, IN FRONT OF JANPAD, PANCHAYAT OFFICE, BARI, PIN-464665, MAD - 464665
1423. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-12), RE-SURVEY NO. 26/4-1, MANANTHALA STADIUM ROAD, NEAR SURYAPRABHA AUDITORIUM, ULOOR VILLAGE, MANANTHALA, TRIVANDRUM DIST., KERALA. - 695015 PH :9846498605.	VARAKALA	ASHOK NAGAR	BARNAGAR
1424. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-17), BUILDING NO. 13/632,632-A, 633,633-A1,633-A2,634-636, 6TH MILE STONE, VAZHAYILA PO, PEROOKKADA, THIRUVANANTHAPURAM, KERALA - 695521 - 695521 PH :9288023313.	1431. SARATHY AUTO CARS (-01), SURVEY NO.7, PALLACHIRA, VARKALA, CHIRAYANKEEZHU TALUKA,THIRUVANATHAPURAM DISTRICT, KERALA-695143 - 695143	1440. PREM MOTORS PVT LTD (-02), SURVEY NO. 67/2/3, SINGAKHEDI HOUSE GUNA BYPASS NEAR RAJ MATA CIRCLE, ASHOKNAGAR, MADHYA PRADESH. - 473331 PH :9926809856.	1451. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), RUNJIA ROAD ,BARNAGAR CITY, DISTRICT UJJAIN - 456771
1425. SARATHY AUTO CARS (1607-16-01), SURVEY NO. 24494, VILL. MUTTATHARA, NH BYE PASS ROAD, KALLUNOOD JN., VALLAKADAU PO, ENCHAKKAL, THIRUVANANTHAPURAM, KERALA-695008 - 695008 PH :9562416665.	VETTICHIRA	ASHTA	BARWANI
UPPALA	1432. KVR AUTOCARS PVT LTD (-03), AP IV, 75A TO C, NH-17, CHUNKAM, DIST. MALAPPURAM, VETTICHIRA. - 676552 PH :9747020023.	1441. JEewan MOTORS PVT LTD (-01), KHASRA NO.111/1 NEAR RELIANCE PETROL PUMP, BHOPAL ROAD, ASHTA, DISTT. SEHORE (M.P.) - 466001	1452. NIMAR MOTORS PVT LTD (-02), ANJAD ROAD, VILLAGE -KARAH, BARWANI, MADHYA PRADESH - 451551
	WADAKKANCHERY	BADARWAS	BATTIS SHIRALA
	1433. BRD CAR WORLD LIMITED (-03), VAZHAKODE, CHELAKARA ROAD, MULLURKARA P.O., WADAKKANCHERY, THRISSUR DIST - 680583 PH :9567869403.	1442. NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT LTD) (-01), SUMELA HIGHWAY, BADARWAS, DISTT. SHIVPURI, - 473885	1453. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SURVEY NO-44/2/A/1 & 14/1/A/3, NEAR SIDDHESHWAR PERTOL PUMP, VILLAGE - 32 SHIRALA, TALUKA-SHIRALA, DIST- SANGLI, MAHARASHATARA - 415408
	LEH-LADAKH	BADNAWAR	BEGAMGANJ
	LEH	1443. PATEL MOTORS (INDORE) PVT LTD (-01), KHASRA NO. 2194/1, BADNAGAR ROAD, BADI CHOUPATI, OPPOSITE BSNL TOWER, BADNAWAR, DISTT. - DHAR, MADHYA PRADESH. - 454660	1454. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), IN FRONT OF DUSHERRA MAIDAN, SAGAR BHOPAL ROAD, BEGAMGANJ, DIST - RAISEN, MADHYA PRADESH - 464881 - 464881 PH :7909997536.
	MADHYA PRADESH	BADWAH / BARWAHA (BOTH NAMES ARE OK)	BEOHARI
	1434. DRUK AUTO ZONE (-01), AIRPORT ROAD, LEH (LADAKH), DISTT. LADAKH, LEH - 194101 PH :8082800205.	1444. NIMAR MOTORS PVT LTD (-05), NIRMAL COMPLEX , INDORE ROAD , BARWAH - 451001	1455. SHUBH MOTORS PVT LTD (-01), REEVA ROAD, NEAR AARRA MACHINE, BEOHARI, DIST. -SHAHOL, MADHYA PRADESH. - 484774 PH :9755595423.
	AGAR	BAGH (DISTRICT - DHAR)	BERASIA
	1435. UNITARA MOTORS PVT LTD (-01), 27, UJJAIN ROAD, NEAR MARKETING FUEL STATION, AGAR, MADHYA PRADESH (465669) - 465669 PH :9575650883.	1445. RUKMANI MOTORS PVT. LTD. (-01), NEAR BAGHESHWARI MANDIR,, KUKSHI ROAD,BAGH, - 454221	1456. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), BHOPAL ROAD, OPP. BERASIA HOSPITAL, BERASIA, DISTRICT - BHOPAL, MADHYA PRADESH. - 463106 PH :8770593501.
	ALIRAJPUR	BAHORIBAND	BETMA
		1446. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (-01), OPP GRAIN MARKET, BAHORIBAND, DIST. - KATNI, MADHYA PRADESH - 483330	
		BALAGHAT	

1457. OCEAN MOTORS PVT LTD (-01), OPPOSITE
MPEB OFFICE, INDORE-AHEMDABAD ROAD,
BETMA, DISTRICT - INDORE, MADHYA
PRADESH - 453001
PH :7389936444.

BETUL

1458. KAMTHI MOTORS LLP (-01), NEAR SUNITA
COLONY, ITARSI ROAD, BETUL, MADHYA
PRADESH - 4600013 - 4600013
PH -9111535777.

BHANUPURA

1459. PATEL MOTORS (INDORE) PVT LTD (-01),
GAROTH RD., BHANUPURA, MADHYA PRADESH -
458775 - 458775

BHAVRA

1460. RUKMANI MOTORS PVT LTD (-01), GRAM
PANCHAYAT, KALYAVAH, OPP SUNKER
MANDIR, BHAVRA TEHSIL, ALIRAJPUR
DISTRICT, MADHYA PRADESH - 457882. -
457882
PH :9755549200.

BHITARWAR

1461. NIKUNJ MOTORS (A UNIT OF RSKS
AUTOMOTIVES PVT LTD) (-01), BESIDE
SAUSAR COTTON INDUSTRIES, CIVIL LINE,
NAGPUR-CHHINDWARA ROAD, DABRA-
BHITARWAR ROAD, BHITARWAR, MP - 474009 -
474009
PH :9109105599.

BHOPAL

1462. JEEWAN MOTORS PVT LTD (-01), 9E SECTOR
A, INDUSTRIAL AREA, GOVINDPURA, BHOPAL -
462024

1463. SATYAM MOTORS PVT LTD (-01),
NH-12, SUVEEASH NAGAR, HOSHANGABAD
ROAD, MISROAD - 462040

1464. JEEWAN MOTORS PVT LTD (-04), KHASRA NO.
54-55/1/1, NEAR RELIANCE FRESH, CHUNA
BHATTI MAIN ROAD, INDIAN OIL PETROL PUMP,
BHOPAL (M.P.) - 462036

1465. RAJURUP MOTORS JUNCTION (A UNIT OF RMJ
MOTORS PVT LTD) (-01), 8A, SECTOR-C, J.K.
ROAD, GOVINDPURA INDUSTRIAL AREA,
BHOPAL, MADHYA PRADESH - 462023

1466. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (-
01), 4/1, DAGA HEIGHTS, NEAR BUDHNA
MANDIR, MAIN ROAD KOLAR ROAD,
CHUNABHATTI, BHOPAL, MADHYA PRADESH. -
462016

1467. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (-
02), KHASRA NO. 80/1/K, VILLAGE -
HALALPURA, TEHSIL - HUZUR, DISTRICT -
BHOPAL, MADHYA PRADESH. - 462030

1468. SRISATYASAI AUTOMOBILES PVT LTD (-01),
RAJENDRA PRASAD BHAWAN PARISHAR,
INFRONT OF OLD VIDHAN SABHA BUILDING,
PO - JAHANGIRABAD, MALVIYA NAGAR,
BHOPAL, DISTRICT - BHOPAL, MADHYA
PRADESH - 462008. - 462008

BIAORA

1469. UNITARA MOTORS PVT LTD (-01), OLD AB
ROAD, KACHNARIA, BIAORA (M.P.) - 465674
PH :9575650883.

BICHHIYA

1470. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA
GAYATRI AGENCIES PVT LTD) (-01), NEAR
CIVIL COURT, BICHHIYA, DIST. MANDLA,
PIN-481995, MADHYA PRADESH - 481995
PH :9303143327.

BIJURI

1471. SHUBH MOTORS PVT LTD (-01), GRAM - NEAR
GENTRI GATE, NAGAR PALIKA PARISHAD
BIJURI, DISTRICT - ANUPPUR, MADHYA
PRADESH - 484116
PH :975580253.

BINA

1472. ADINATH CARS PVT LTD (-01), PLOT NO. 2/3/4/5
AMANTIGEL LAND SEMI URBAN INDUSTRIAL
AREA, BINA, KHURAI ROAD (NH 26) BINA,
DISTRICT - SAGAR, MADHYA PRADESH -
470113
PH :9009780047.

BURHANPUR

1473. NIMAR MOTORS PVT LTD (-02), 654/15, 16
BASEMENT OF HOTEL AMBIKA RESIDENCY,,
OPPOSITE PAKIZA SHOWROOM. - 450331

CHAKGHAT

1474. CITY CARS (A UNIT OF AGARWAL WHEELS PVT
LTD) (-01), GRAM AND POST - CHANDAI,
CHAKGHAT, TEHSIL - TEONTER, PRAGRAJ
ROAD, NH 27, DIST-REWA, MP - 486226. -
486226

CHANDERI

1475. PREM MOTORS PVT. LTD. (-01), NEW BUS
STAND, NEAR SBI BANK., CHANDERI-LALITPUR
BYE PASS - 473446

CHATTARPUR

1476. ADINATH CARS PVT LTD (-01), MAHOBA ROAD,
NEAR BUS STAND, CHHATARPUR, DISTT
SAGAR - 471001
PH :9009785577.

CHHANERA

1477. NIMAR MOTORS PVT LTD (-01), NEAR ST.
STEPHEN SCHOOL, HARDRA ROAD, CHHANERA
(HARSUD), PIN-450001, MADHYA PRADESH -
450001
PH :9669569504.

CHHINDWARA

1478. KAMTHI MOTORS LLP (-01), KHASRA NO.1/53,
BESIDE MVM SCHOOL, NAGPUR ROAD, VILL.
-SARRA, DISTT. CHHINDWARA, MADHYA
PRADESH - 480001

CHITRAKOOT

1479. CITY CARS (A UNIT OF AGARWAL WHEELS PVT
LTD) (-01), PILIKOTHI CHOURAHA, BESIDE
SINGH AUTOMOBILE- A HERO AGENCY,
CHITRA ROAD, CHITRAKOOT, DISTRICT-SATNA
(MADHYA PRADESH)- 485334 - 485334

DABRA

1480. PREM MOTORS PVT LTD (-01), PICHHORE
TIRAH, GWALIOR JHANSI ROAD, DABRA, DIST.
-GWALIOR. - 475110
PH :9926809110.

DAHI

1481. KTL AUTOMOBILE PRIVATE LIMITED (-01),
BHAGAT SINGH MARG, WARD NO.2, DAHI DAHI,
DHAR DISTRICT - 454331

DAMOH

1482. ADINATH CARS PVT LTD (-01), SAGAR
JABALPUR BYPASS ROAD, DAMOH (M.P.). -
470661
PH :9009780035.

DATIA

1483. PREM MOTORS PVT LTD (3003-05),
NR.BHOJPURIA MOTORS, BHANDER ROAD,
DATIA, MADHYA PRADESH - 475661
PH :9165012280.

DEORI

1484. ADINATH CARS PVT LTD (-01), C/O
VISHWANATH DIXIT, VIJAYSHRI GAS SERVICE,
NEAR GOVT. HIGH SCHOOL, NARSINGPUR
ROAD, VILLAGE KHEER, DEORI DISTT. SAGAR
(M.P.) - 470226
PH :7000410522.

DEPALPUR

1485. OCEAN MOTORS PVT LTD (-03), NEAR LEELA
RESIDENCY, INDORE
ROAD, DEPALPUR, DIST. INDORE-MP - 453115

DEWAS

1486. UNITARA MOTORS PVT LTD (-01), SURVEY NO
255, A.B. ROAD,
RASULPUR SQUARE, DEWAS,
MADHYA PRADESH PIN 455001 - 455001
PH :9575650883.

DHAMNOD

1487. KATHED MOTOCORP (A UNIT OF KATHED
MOTORS PVT LTD) (-01), KHASRA NO. 484/1/2,
OLD A B ROAD, OPPOSITE HP PETROL PUMP,
DHAMNOD, DIST.-DHAR, MADHYA PRADESH. -
454552
PH :9981585165.

DHAR

1488. RUKMANI MOTORS PVT LTD (5304-02), 41/2
MAGAJPURA, DHAR., - 454001

DHARAMPURI

1489. RUKMANI MOTORS PVT LTD (-01), MANAWAR
ROAD, DHARAMPURI, MADHYA PRADESH -
454449 - 454449

DINDORI

1490. STANDARD MOTOCORP PVT LTD (-01),
SUKKHAR WARD 1, NEAR DHURVE PETROL
PUMP, DINDORI - 481661

FALI

1491. OCEAN MOTORS PVT LTD (-01), NH 47, NEAR
GRAM - FALI, TEHSIL KHUDEH, INDORE,
MADHYA PRADESH. - 452016
PH :7389936477.

GADARWARA

1492. STANDARD MOTOCORP PVT LTD (-01),
KHASRA NO. 1303/1/A & 131/2, HALKA NO. 18/1,
NO. 119, GADARWARA, DISTRICT -
NARSINGHPUR. - 487551
PH :8319784336.

GANDHWANI

1493. RANA MOTORS PVT LTD (-01), MUKATI
COMPLEX, BAGH AWALDA MAAN ROAD,
TEHSIL- GANDHWANI, DIST - DHAR, MADHYA
PRADESH - 454446 - 454446
PH :9109975566.

GANJ BASODA

1494. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (-
01), LAL BAGH, BARETH ROAD, GANJ BASODA,
VIDISHA, 464221, - 464221
PH :9425148584.

GARRA

1495. KAMTHI MOTORS LLP (-01), LALBARRA ROAD,
GARRA INDUSTRIAL AREA, GARRA, BALAGHAT,
MADHYA PRADESH. - 481331
PH :7723020684.

GAUTAMPURA

1496. OCEAN MOTORS PVT LTD (-01), RUNJI
CHOURAHA, GAUTAMPURA, TEHSIL -
DEPALPUR, DISTT.-INDORE, MADHYA
PRADESH. - 453220

GHATIYA

1497. YUG CARS (A UNIT OF RUKMARANI CARS
INDORE PVT LTD) (-01), NEAR JAGOTI
SQUARE, UJJAIN - AGAR ROAD, GHATIYA, MP -
456550 - 456550
PH :9425067979.

GOTEGAON

1498. STANDARD MOTOCORP PVT LTD (-01), JABALPUR ROAD, OPP. NEW KRISHI UPAJ MANDI, TEHSIL - GOTEGAON, DIST. NARSINGHPUR - 443001 PH :7771003774.	1509. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), SEHORE NADAN ROAD, NEAR SARASWATI SCHOOL, ICHHAWAR, DISTRICT - SEHORE, MADHYA PRADESH - 466115	1523. OCEAN MOTORS PVT LTD (5306-53-04), PLOT NO. 142 AND 151, SCHEME NO. 97, PART-4, COMMERCIAL MANDI, NEAR CAT SQUARE, INDORE - 452012 PH :7389936405.	1535. PATEL MOTORS (INDORE) PVT LTD (-01), SURVEY NO.165/1/1/2, GRAM BALKHEDA, TEHSILDIST.NEEMUCH, JAWAD, MAD HYA PRADESH 458330 - 458330
GUNA	INDERGARH	INGORIYA	JHABUA
1499. PREM MOTORS PVT LTD (-01), OPP R.T.O.A.B. ROAD, GUNA - 473001 PH :268015.	1510. PREM MOTORS PVT LTD (-01), NEAR KHERAPATI GARDEN, INDERGARH, MP - 475675 - 475675 PH :9926809818.	1524. KTL AUTOMOBILE PRIVATE LIMITED (5309-53-C1), PLOT NO.5/R.C. SCHEME NO 134,MR 10,VILLAGE KHAJRANA, DIST INDORE-452010,MADHYA PRADESH - 452010 PH :6263455899.	1536. PATEL MOTORS (INDORE) PVT LTD (-01), INDORE AHMEDABAD ROAD, MEGHNAGAR NAKA, JHABUA, MADHYA PRADESH - 457661 PH :9826634449.
GWALIOR	INDORE	JIRAPUR	JIRAPUR
1500. PREM MOTORS PVT LTD (3003-30-01), M. L. B. ROAD, GWALIOR, - 474002 PH :9926809803.	1511. PATEL MOTORS (INDORE) PVT LTD (5303-53-01), 428/3/3,NIRANJANPUR,A B ROAD,INDORE - 452010	1525. RUKMANI MOTORS PVT LTD (-53-05), 109, BHAWRASLA NEAR PRATAP AUTO, FRONT OF VINAYAK TOL KANTE, SANWER ROAD, INDORE, PIN-453111, MADHYA PRADESH - 453111 PH :9109978301.	1537. UNITARA MOTORS PVT LTD (-01), KHLCHIPUR ROAD, JIRAPUR DIST- RAJGARH MADHYA PRADESH - 465961 - 465961
1501. PREM MOTORS PVT LTD (3005-01), SHIVPURI LINK ROAD, GWALIOR - 474002 PH :9926809803.	1512. RUKMANI MOTORS PVT LTD (5304-53-01), 2-3, A.B. ROAD,INDORE - 452001	INGORIYA	JOBAT
1502. NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT LTD) (3006-30-01), GOLE KA MANDIR SQUARE, AIRPORT ROAD, GWALIOR, MADHYA PRADESH - 474005 - 474005 PH :9407067974.	1513. PATEL MOTORS (INDORE) PVT LTD (5303-53-02), 176/1,PIPLYA RAU,A.B. ROAD ,INDORE - 452017	1526. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (-01), SURVEY NO.589,, NAGDA ROAD,VILL.INGORIYA, - 456222	1538. RUKMANI MOTORS PVT LTD (-01), BYEPASS ROAD, OPPOSITE JP COLLEGE, JOBAT, MP - 457590 - 457590 PH :6262505181.
HANSA KHEDI	1514. RUKMANI MOTORS PVT LTD (5304-53-03), NO. -4/5, MANORAMA GANJ, INDORE - 452001	JABALPUR	KACHROD
1503. KATHED MOTOCORP (A UNIT OF KATHED MOTORS PVT LTD) (-01), MAIN DHARMAT ROAD, HANSA KHEDI (CHANDRAWATI GANJ), TEHSIL - SANWER, DISTRICT -INDORE, MADHYA PRADESH - 453551 PH :9479952490.	1515. OCEAN MOTORS PVT LTD (5306-53-01), PLOT NO.49, SCHEME NO.97, PART 4, COMMERCIAL MANDI, CAIT SQUARE, RING ROAD, INDORE, MP. - 452001	1527. SHUBH MOTORS PVT LTD (5403-54-01), MAHANADDA, MADAN MAHAL ROAD, JABALPUR, MADHYAPRADESH - 482001 PH :9755545540.	1539. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), MOHALLA PATEL COLONY, BARNAGAR RD, KACHROD, MP. - 456313
HARDA	1516. OCEAN MOTORS PVT LTD (5306-02), NEAR QUEENS COLLEGE,ASHARAM BAPU ASHRAM, KHANDWA ROAD,INDORE - 452017	1528. STANDARD MOTOCORP PVT LTD (5405-54-02), DEENDAYAL CHECK, DAMOH NAKA, JABALPUR - 482002	KANNOD
1504. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (-02), NEAR RTO,INDORE HIGHWAY ROAD,HARDA MP - 461331	1517. PATEL MOTORS (INDORE) PVT LTD (5303-03), M.O.G. LINES, NEAR GANGWAL BUS STAND, DHAR ROAD, INDORE (M.P.) - 452006 PH :7314293919.	1529. SHUBH MOTORS PVT LTD (5403-54-03), 156/5/1, 156/3KA, 156/3KHA, 156/3GHA, BEHIND OM PETROLEUM, ADHARTAL TIRAHA, JABALPUR, MADHYA PRADESH - 482002 PH :9755595496.	1540. UNITARA MOTORS PVT LTD (-01), KANNOD,DISTRICT-DEWAS, MADHYA PRADESH -455332 - 455332
HATOD	1518. OCEAN MOTORS PVT LTD (5306-53-03), 171A, 174A, 175A, 180A, 181A, 82A, 182A, BRAJESHWARI EXTENSION, PIPLIYAHANA, INDORE - 452001	1530. STANDARD MOTOCORP PVT LTD (5405-03), CHIMNEY PLOT, MADAN MAHAL, NEAR GULZAR HOTEL, JABALPUR - 482001	KARELI
1505. OCEAN MOTORS PVT LTD (-01), 726/6, INDORE-DEPALPUR MAIN ROAD, OPP. HP GAS AGENCY, HATOD DISTT. INDORE - 453111 PH :7389936477.	1519. KATHED MOTOCORP (A UNIT OF KATHED MOTORS PVT LTD) (5307-01), PLOT NO. 483/2/2, MAIN DHAR ROAD, NEAR CHANDAN NAGAR POLICE STATION, INDORE, MADHYA PRADESH - 452002 PH :7471111132.	1531. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (5404-54-01), MOUZA KARMETA N.B. 497, P.H. NO 23/26, KHASRA NO. 497 & DIV. KHASRA NO. 484/6, DIV. SHEET NO 2, PLOT NO 63/1, JABALPUR-PATAN ROAD, JABALPUR - 482002 PH :7489901021.	1541. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT. LTD) (-01), NEAR KRISHNA HOTEL,, NARSINGHPUR-KARELI BYPASS,KARELI, - 487221
HATPIPLIYA	1520. RANA MOTORS PVT LTD (-01), KHASRA NO. 293/2, 299/1, TEJPUR, GADBADI PUL, A.B. ROAD, INDORE, - 452009 PH :9109975566.	1532. STANDARD MOTOCORP PVT LTD (5405-54-04), NEW WARD NO. 71, IN FRONT OF ORIENTAL COLLEGE, KATNI BYPASS, JABALPUR, MP. - 482003	KARERA
1506. UNITARA MOTORS PVT LTD (-01), OPPOSITE UNWIND RESORT, HATPIPLIYA, DEWAS, MADHYA PRADESH - 455223 - 455223	1521. PATEL MOTORS (INDORE) PVT LTD (5303-53-05), SURVEY NO. 174/5 AND 174/6, PIPLIYA RAO, INDORE, MADHYA PRADESH - 452012	JAIPUR	1542. PREM MOTORS PVT LTD (-01), GRAM - JHASI ROAD, KARERA, DISTRICT - SHIVPURI, MADHYA PRADESH - 473660 - 473660 PH :9926823596.
HATTA	1522. RUKMANI MOTORS PVT LTD (-04), MANGAL COMPOUND, GODOWN NO. 11-12, VILLAGE 15/1, PIPLYA KUMAR, MR 11 RING ROAD, DEWAS NAKA, INDORE, MADHYA PRADESH - 452010	JAORA	KATNI
1507. ADINATH CARS PVT LTD (-01), NEAR NAVODAYA SCHOOL, DAMOH ROAD, HATTA, DISTT. DAMOH (M.P.) - 470775 - 470775 PH :9009787562.	HOSHANGABAD	1533. KIRAN MOTORS LIMITED (1118-11-01), 75, JHOTWARA INDUSTRIAL AREA JAIPUR - 302001	1543. SHUBH MOTORS PVT LTD (-01), KHASRA NO.850, NH-7, JHINJARI, INFRONT OF POLICE STATION, JABALPUR ROAD, KATNI, MADHYA PRADESH - 483501 PH :9755515839.
HOSHANGABAD	1508. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (-01), 185, RAMJIBABA GROUND, HOSHANGABAD, MADHYA PRADESH - 461001 PH :8889282222.	JAIPUR	KHANDWA
ICHHAWAR		1534. PATEL MOTORS (INDORE) PVT LTD (-04), SURVEY NO.57/1/1/1, RATLAM ROAD, RATLAM NAKA, OPP. KOTHARI AGRIKO, INDUSTRIAL AREA, INFRONT OF ST. PAUL SCHOOL, JAORA, DISTT. RATLAM, MADHYA PRADESH - 457226	1544. NIMAR MOTORS PVT LTD (-03), BEFORE VIKAS UDYOG, INDORE ROAD, KHANDWA - 450001
			KHARGONE
			1545. NIMAR MOTORS PVT LTD (-01), JETAPUR,SANAWAD ROAD KHARGAONE, - 462026

1546. NIMAR MOTORS PVT LTD (–06), PH. NO. 35, VILLAGE – DANAPUR, TEHSIL – KHARGONE, DISTRICT – KHARGONE, MADHYA PRADESH. - 451001	MAJHAULI	1567. PREM MOTORS PVT LTD (–01), NEAR SALES TAX BARRIER SQUARE, AB ROAD MORENA - 476001 PH :9926002791.	1577. KAMTHI MOTORS LLP (–01), SHANKAR NAGAR, PANDHURNA, DIST. - CHHINDWARA, MADHYA PRADESH - 480334 - 480334 PH :9111535777.
KHATEGAON		NAGDA	PANNA
1547. UNITARA MOTORS PVT LTD (–01), NEMAWAR-INDORE ROAD, KHATEGAON, M.P - 455336 - 455336 PH :9993406993.	MAJHOLI	1568. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (–01), PLOT NO. 17, STATE HIGHWAY NO.17, INDOIYA ROAD, NAGDA, DISTRICT – UJJAIN, MADHYA PRADESH. - 456335	1578. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (–01), KHASRA NO. 378, MOHAN RAJ VILAS CHOURAHA, BESIDE MOHAN RAJ HOTEL, CIVIL LINE NH-75, PANNA, MADHYA PRADESH - 488001 PH :7354252525.
KOTMA		1569. PATEL MOTORS (INDORE) PVT LTD (–01), SURVEY NO.200/1,205/1/208,, VILLAGE MANKI NAGDA,MHOW ROAD, - 454660	PARANDA
1548. SHUBH MOTORS PVT LTD (–01), WARD NO.7, ANNUPPUR KOTMA ROAD, DISTT. ANNUPPUR, KOTMA (M.P.) - 484336 PH :9755581441.	MANASA	NAINPUR	1579. CHAVAN MOTORS DIVISION INDIA PVT LTD (–01), 691/1/190, PARANDA BARSHI ROAD, PARANDA, TAL-PARANDA, DIST-DHARASHIV - 413502
KUKSHI		1570. STANDARD MOTOCORP PVT LTD (–01), MANJU SAHU, MANDLA ROAD, NEAR MPEB OFFICE, ADJOINING TO BAJAJ SHOW ROOM, NAINPUR, DISTT MANDLA, MADHYA PRADESH -481776. - 481776 PH :7771003374.	PARASIA
1549. OCEAN MOTORS PVT LTD (–01), SURVEY NO.593/5/1, 593/6/1, BARWANI ROAD, TOLL KANTE KE PASS, TEHSIL-KUKSHI - 454331	MANAWAR	NARAYANGARH	1580. KAMTHI MOTORS LLP (–01), KHIRSAOAHMAL, PARASIA, CHHINDWARA, MP - 480441 PH :9285506109.
KURWAI		1571. PATEL MOTORS (INDORE) PVT LTD (–01), 1742/11, NARAYANGARH, TEHSIL - MALHARGARH, DISTRICT- MANDSAUR, MADHYA PRADESH. - 458553 PH :9977703907.	PAT
1550. SRISATYASI AUTOMOBILES PVT LTD (–01), SH-14, MAIN ROAD,,KURWAI,VIDISHA,,MADHYA PRADESH 464224 - 464224	MANDLA	NARSINGHPUR	1581. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (–01), WARD NO. 9, UJJAIN -KOTA ROAD, OPPOSITE GOVT MIDDLE SCHOOL, PAT, DISTT UJJAIN , MP - 416522
LAKHNADON		1572. STANDARD MOTOCORP PVT LTD (–01), KH. NO. 82/44 & 83/44, NB NO.519, PC NO. 19(42), OLD 46 (NEW) MOUZA RONSRA R.I.M. 2, TEHSIL & DISTRICT – NARSINGHPUR, MADHYA PRADESH. - 487001	PATAN
1551. KAMTHI MOTORS LLP (–01), RANI DURGAVATI CHOWK, NH-7, WARD NO. - 05, JABALPUR ROAD, LAKHNADON, MADHYA PRADESH. - 480886 PH :9285506128.	MANDSAUR	NASRULLAGANJ	1582. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (–01), BESIDE KRISHI UPAJ MANDI, PATAN, PIN-483119, MADHYA PRADESH - 483119 PH :9770415141.
LATERI (VIDISHA)		1573. JEEWAN MOTORS PVT LTD (–01), KHASRA NO. 458, VILLAGE – RALA, TEHSIL – NASRULLAGANJ, DISTRICT – SEHORE, MADHYA PRADESH. - 466331	PAWAI
1552. SRISATYASI AUTOMOBILES PVT LTD (–01), KHASRA NO.572,,ANANDPUR ROAD,, LATERI,MADHYA PRADESH 464114 - 464114	MANPUR	NEEMUCH	1583. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (–01), NEAR ETORI PETROL PUMP, PANNA ROAD, PAWAI, DIST. – PANNA, MP- 488446 - 488446 PH :9754301199.
LOHARI		1574. PATEL MOTORS (INDORE) PVT LTD (–02), MHOW-NEEMUCH ROAD,NEEMUCH(MP), - 458441 PH :9977703907.	PETLAWAD
1553. KATHED MOTOCORP (A UNIT OF KATHED MOTORS PVT LTD) (–01), SINGHANA-KUKSI ROAD, LOHARI, DHAR, PIN-454335, MADHYA RPRADESH - 454335	MAUGANJ	NIWARI	1584. PATEL MOTORS (INDORE) PVT LTD (–01), NEAR H. P. PETROL PUMP, THANDLA ROAD, PETLAWAD, DISTRICT – JHABUA, MADHYA PRADESH. - 457773 PH :9111160868.
MAHESHWAR		1575. ADINATH CARS PVT LTD (–01), ATKHASRA NO 2017/1, NEAR HDPC BANK MAIN ROAD, NIWARI, MADHYA PRADESH –472442. - 472442 PH :9009787562.	PICHHORE
1554. NIMAR MOTORS PVT LTD (–01), OPPOSITE DEVYRAJ HOTEL, MAIN MANDLASHWAR-DHAMNOD ROAD, MAHESHWAR, MP - 451224 PH :9669569504.	MHOW	NIWAS	1585. PREM MOTORS PVT LTD (–01), NEAR OF BACHRON CHAURAHA, PICHHORE, DIST, DIST. SHIVPURI, PIN-475300, MADHYA PRADE - 475300
MAHIDPUR		1576. STANDARD MOTOCORP PVT LTD (–01), OPP. INDIAL OIL PETROL PUMP, NIWAS, DISTRICT MANDLA, MADHYA PRADESH – 483001. - 483001	PIPARIYA
1555. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (–01), 264/3, BHIMAKHEDA, MAHIDPUR, UJJAIN - 456443 PH :9109130402.	MOHANA	PANDHURNA	1586. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (–01), HATHWAS TIRAHA, SHOBHAPUR ROAD, PIPARIYA, MADHYA PRADESH. - 461775
MAIHAR			PITHAMPUR
1556. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (–04), UNIT OF AGARWAL WHEELS PVT. LTD., NEAR RELIANCE PETROL PUMP, NH-7, REWA ROAD, MAIHAR (M.P.) - 485771 PH :7354252525.	MORENA		

1587. PATEL MOTORS (INDORE) PVT LTD (5303-04), 254-A, SECTOR-1, INDUSTRIAL AREA, PITHAMPUR, DISTT. DHAR - 454775 PH :9826360699	1599. OCEAN MOTORS PVT LTD (-01), JAIN SHRI SUPER MARKET, SERVICE ROAD, MHOW-NEEMUCH ROAD, SADALPUR, DISTRICT DHAR (M.P.) - 454001 - 454001 PH :7389936423.	1609. STANDARD MOTOCORP PVT LTD (-01), KHASARA NO.172/3, BHERAV MATA MANDIR NEAR TOLL NAKA MAIN ROAD, JABALPUR NARSINGHPUR ROAD, SHAHPURA. - 483119 PH :7771000392.	1619. RUKMANI MOTORS PVT LTD (-01), AMRIT SAGAR COLONY, SIMROL, DIST. - INDORE, MADHYA PRADESH - 452020 - 452020 PH :9109978301.
1588. KTL AUTOMOBILE PRIVATE LIMITED (-01), WARD NO 18, VILLAGE - AKOLIA, PITHAMPUR, MP. - 454775 - 454775	SAGAR	1610. STANDARD MOTOCORP PVT LTD (-01), NEAR SAI PETROLEUM, SHARDA NAGAR, JABALPUR ROAD, SHAHPURA, DIST -DINDORI, MP. - 481990	SINGHOLI
PUSHPRAJGARH	1600. ADINATH CARS PVT LTD (-01), STATION ROAD, TILAK GANJ, SAGAR (M.P.). - 470001 PH :9009780030.	SHAJAPUR	1620. PATEL MOTORS (INDORE) PVT LTD (-01), BEGHU CHITTORGARH ROAD, SINGOLI, NEEMUCH, MP. - 458228 - 458228 PH :9977703907.
1589. SHUBH MOTORS PVT LTD (-01), WARD NUMBER 8, SHIVRICHANDAS KARAUNDI TIRAHA, AMARKANTAK ROAD RAGENDRAGRAM DISTRICT ANUPPUR (M.P.) - 484224	SANWER	1611. UNITARA MOTORS PVT LTD (-01), LAL GHATI, A B ROAD, SHAJAPUR, MP. - 465001 PH :9993406993.	SINGRAULI
RAISEN	1601. RANA MOTORS PVT LTD (-01), S.NO. 356/3/1, OLD UJJAIN BYPASS ROAD, TALUKA SANWER, DIST.-INDORE, MADHYA PRADESH. - 453551 PH :9109975566.	SHAMGARH	1621. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-02), NEAR VIJAY BANDHU PETROL PUMP, KACHANI, THE. WAIDHEN, DISTRICT, SINGRAULI, MADHYA PRADESH
1590. JEEWAN MOTORS PVT LTD (-01), WARD NO 14, PATANDEV, SAGAR ROAD, RAISEN, MADHYA PRADESH - 464551 PH :9826017799.	SATNA	1612. PATEL MOTORS (INDORE) PVT LTD (-01), KHASARA NO. 1179/1, MOHALLA MAROTH, TEHSIL - SHAMGARH, DISTRICT - MANDSAUR, MADHYA PRADESH. - 458883 PH :9753088222.	KHASARA NO-3721/1 & 3721/2, GRAM- NAVGARH, SIDHI-REWA ROAD, WAIDHAN , DISTRICT- SINGROULI (MADHYA PRADESH)-466887. - 466886 PH :7354252525.
1591. RAJURUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), OPPOSITE S P OFFICE, NEAR ST. FRANCIS SCHOOL, VIDISHA ROAD, RAISEN, MADHYA PRADESH. - 464551 PH :7869755501.	SAUSAR	SHIVPURI	SIRONJ
RAJGARH	1603. KAMTHI MOTORS LLP (-01), BESIDE SAUSAR COTTON INDUSTRIES, CIVIL LINE, NAGPUR-CHHINDWARA ROAD, SAUSAR, DIST-CHHINDWARA, M.P. - 480106. - 480106 PH :9111535777.	1613. PREM MOTORS PVT LTD (3003-04), A B ROAD,SHIVPURI. - 473551 PH :9926809976.	1622. RAJURUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), OPPOSITE BALAJI DHAM, LINK ROAD, SIRONJ, MADHYA PRADESH. - 464228 PH :7909997585.
1592. RUKMANI MOTORS PVT LTD (-01), CHANDRA SHEKHAR AZAD MARG, NEAR TRIMURTI NAGAR, RAJGARH, DIST. - DHAR, MP. - 454116 PH :9755549200.	SEHORE	SHUJALPUR	SITAMAU
RAJOD	1604. JEEWAN MOTORS PVT LTD (-02), 869/1/2, OFFICERS COLONY, IN FRONT OF CHURCH GROUND, BHOPAL, INDORE ROAD - 466001	1614. UNITARA MOTORS PVT LTD (-01), KISHONI, OPPOSITE HP FUEL STATION, SHUJALPUR, M.P. - 465333 - 465333 PH :9575650883.	1623. PATEL MOTORS (INDORE) PVT LTD (-01), MAUKHEDA, TEHSIL - SITAMAU, DISTRICT - MANDAU, MADHYA PRADESH - 458990 - 458990 PH :9826380699.
1593. RUKMANI MOTORS PVT. LTD. (-01), NEAR POLICE STATION, SARDARPURA BADNARWARROAD, RAJOD, DIST. DHAR, MADHYA PRADESH 454 - 454660	SENDHWA	1615. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (-01), NEAR MAHADEV RESTAURANT, NH-12, SHYAMPUR, DISTRICT - SEHORE, MADHYA PRADESH - 466651. - 466651 PH :7909997570.	SUTHALIA
RATLAM	1605. NIMAR MOTORS PVT LTD (-01), KHASARA NO. 286/10 AND 287/14, HALKA NO. 11, VARLA ROAD, SENDHWA, TEHSIL - SENDHWA, DISTRICT - BARWANI, MADHYA PRADESH. - 451666	SIDHI	1624. UNITARA MOTORS PVT LTD (-01), MAKSUDANGARH ROAD, NEAR POLICE STATION SUTHALIYA - 465677
1594. PATEL MOTORS (INDORE) PVT LTD (-01), 76 C,D&E, INDUSTRIAL AREA, RATLAM - 452001	SEONI	1616. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-01), ADHIYAR KHOSH, NEAR GYAN DHARAMKATA, SIDHI, MADHYA PRADESH. - 466661	TARANNA
1595. PATEL MOTORS (INDORE) PVT LTD (-03), 181/17/18, DOSHI GOAN, INDUSTRIAL AREA ,JAORA ROAD, RATLAM - 457001	SEONI MALWA	SIHORA	1625. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), HOUSE NO. 1/6, WARD NO. 10, TOTLA MARG, TARANA-UJJAIN ROAD, TARANA, MADHYA PRADESH. - 456665
REWA	1606. KAMTHI MOTORS LLP (-01), IN FRONT OF MVM SCHOOL, JABALPUR ROAD, RTO BYPASS, SEONI - 480882	1617. SHUBH MOTORS PVT LTD (-01), KHASARA NO. 31/1, P.H. - 11, MOUZA - GHAT SIMARIYA, TEHSIL - SIHORA, DISTRICT - JABALPUR, MADHYA PRADESH. - 483440	TENDUKHEDA
1596. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (-03), NYPASS CHURHATA, DIST. REWA - 482001 PH :7354252525.	1607. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (-01), NEAR AXIS BANK, SEONI MALWA, MP. - 461223 - 461223 PH :8889281113.	SILWANI	1626. STANDARD MOTOCORP PVT LTD (-01), KHASARA NO. 49/8, MOUZA - TENDUKHEDA, DISTRICT - NARSINGHPUR. - 470880
1597. SHUBH MOTORS PVT LTD (5403-05), VILLAGE - RATHARA, TEHSIL - HUZUR, DISTRICT - REWA, MADHYA PRADESH - 486003 - 486003 PH :9755582351.	SHAHNOL	1618. RAJURUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), MAHAVIR COLONY, SAI KHEDA ROAD, SILVANI, DIST. RAISEN, MP. - 464886 - 464886 PH :9174000501.	THIKRI
SABALGARH	1608. SHUBH MOTORS PVT LTD (-01), JAMUA, NEAR GYAN GUPTA, BUDHAR ROAD, SHAHDOL. - 484771 PH :9755595423.	SIMROL	1627. NIMAR MOTORS PVT LTD (-01), OPPOSITE OF SHREE BALAJI TYRE SALES & SERVICE, SHREE NAGAR, THIKRI, MADHYA PRADESH -451660. - 451660 PH :9109202186.
1598. PREM MOTORS PVT LTD (-01), NR. INDIAN OIL PETROL PUMP, SABALGARH, DIST. - MORENA, MP. - 476229 - 476229	SHAHUPURA		TIKAMGARH
SADALPUR			

Dealer Workshop (AS ON 31.01.2026)

1628. ADINATH CARS PVT LTD (-01), NEAR NEW BUS STATION, OPPOSITE OF BANKE BIHARI COLONY, MAURANIPUR ROAD, TIKAMGARH, MADHYA PRADESH - 472001 PH :9200888454.	1638. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), SARDIA MILLS, SAVEDI ROAD, AHMEDNAGAR, MAHARASHTRA - 414001 PH :7410024227.	1650. MANRAJ MOTORS PVT LTD (-01), PRASAD MOTORS, RAVI NAGAR, NEAR NAYARA PETROL PUMP, DHULE ROAD, AMALNER, DIST. JALGAON-425401. - 425401	1661. PAGARIYA AUTO PVT LTD (2103-21-05), GAT NO. 46, PLOT NO. 50, NEAR MASTER COOK RESTAURANT (KALASH HOTEL) BEED BYPASS ROAD, AURANGABAD, MAHARASHTRA - 431005
TULJAPUR	1639. KANKARIYA AUTOMOBILES PRIVATE LTD (-05), MIDC, AHMEDNAGAR - 414003 PH :7447700029.	AMBERNATH	1662. PAGARIYA AUTO PVT LTD (2103-21-06), PLOT NO.A-35 MIDC, NEAR MAIN RAILWAY STATION, AURANGABAD - 431001
1629. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), 684/2, PLOT NO 16, VISHWAS NAGAR, BEED ROAD, TULJAPUR DIST. DHARASHIV - 413601	1640. MAHALAXMI AUTOMOTIVES PVT LTD (-01), SURVEY NO 248/249, MANMAD RD, SAVEDI, AHMEDNAGAR. - 414003	1651. AHER AUTOPRIME LLP (-01), PLOT NO-24.26.27/17, MIDC, KALYAN-BADLAPUR ROAD, VILLAGE - KOHOJ, KHUNTAVALI, AMBERNATH - 421501 PH :8422871720.	BALLARPUR
UDAIPURA	AHMEDPUR	AMRAVATI	1663. TRISTAR CARS PVT LTD (-04), PLOT NO.11, BEHIND ZAWERI PETROL PUMP, NEAR GURU NANAK COLLEGE, ALLAPALLI ROAD, BAMNI, TAH. BALLARPUR - DIST. - 442701 PH :7447473304.
1630. JEEWAN MOTORS PVT LTD (-01), WARD NO 3, NH-12, UDAIPURA, DIST. - RAISEN, MADHYA PRADESH - 464770 PH :9826017799.	1641. AUTOMOTIVE MANUFACTURERS PVT LTD (-01), SURVEY NO-56/1/2, VILLAGE-MARSHIVANI, NH-361, PO & TALUKA -AHMEDPUR, DIST-LATUR, PIN-413515. - 413515	1652. ASPA BANDSONS AUTO (P) LTD (-01), SATURNA BADNERA ROAD,AMRAVATI,MAHARASHTRA, - 444607 PH :9423123665.	BARAMATI
UJJAIN	AJARA	1653. ASPA BANDSONS AUTO (P) LTD (-05), A1/A2, OLD BY PASS ROAD, MIDC, AMRAVATI, DIST: AMRAVATI, MAHARASHTRA. - 444607 PH :9423339601.	1664. MAHALAXMI AUTOMOTIVES PVT LTD (-01), BARAMATI- PHALTAN RD., KASBA, BARAMATI, DIST. PUNE - 413102 PH :9881370310.
1631. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), SURVEY NO. 59/3, DEWAS ROAD, UJJAIN - 456010	1642. SAI SERVICE PRIVATE LIMITED (-01), GAT NO. 30, PLOT NO. 24, GP MILKAT NO. 906/3, NEAR MAYUR PETROL PUMP, AJARA, DISTRICT - KOLHAPUR. - 416505	ARAG	BARSHI
1632. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-02), 54/3/2, AGAR NAKA, NEAR VARDHAN HOTEL, MAKODI AAM CHAURAGA, INDIRA NAGAR, UJJAIN, MADHYA PRADESH - 456001 PH :9425067979.	AKLUJ	1654. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SURVEY NO.1, VILL. ARAG, TALUKA: MIRAJ, DIST: SANGLI - 416401	1665. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), GAT NO.1407/1, LATUR ROAD, NEAR ESSAR PETROL PUMP, BARSHI. - 413401
UMARIA	AKOLA	ARVI	BEED
1633. SHUBH MOTORS PVT LTD (5403-04), 8/2 GRAM BHAGRA, KIRANTAL KHURD, UMARIA DISTRICT UMARIA (MADHYA PRADESH) - 484661 PH :9755502682.	1644. KHANDLWAL AUTOWHEELS PVT LTD (-01), TIRUPATI CHAMBERS, CONVENT ROAD, AKOLA - 444005	1655. SEVA AUTOMOTIVE PVT LTD (-01), PLOT NO-7, SURVEY NO-32/7, MAUZA -AHMADNAGAR, WARDHA ROAD, NAGAR PARISHAD-ARVI, TEHSIL-ARVI, DIST-WARDHA - 442201 PH :8484988769.	1666. PAGARIYA AUTO PVT LTD (-01), GUT NO. 61, VILLAGE - GHOSAPURI, TALUKA AND DISTRICT - BEED, MAHARASHTRA. - 431122
UNHEL	1645. KHANDLWAL AUTOWHEELS PVT LTD (-02), PLOT NO E/12-13-MIDC PHASE-2, AKOLA. - 444001	ASHTA	BHANDARA
1634. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (-01), 15/ 35, STATION ROAD, UNHEL, UJJAIN - 456221	AKOT	1656. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), GATE NO: 328/9, NEAR S R HOTEL, ASHTA -ISLAMPUR ROAD, ASHTA - 416301	1667. AUTOMOTIVE MANUFACTURERS PVT LTD (2001-03), JINDAL'S BLDG, NEAR NAVKAR PETROL PUMP, SAINATH NAGAR, NH-6, BHANDARA - 441904
VIDHISHA	ALEPHATA	ATPADI	BHIGWAN
1635. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (-01), PLOT NO 59/1, VILLAGE RANGAI, VIDISHA, MADHYA PRADESH - 464001 PH :9109900374.	1647. KOTHARI AUTO WHEELS PVT LTD (-01), GAT NO.446, MATOSHRI PRIDE, NEAR SADHANA BANK, KALYAN ROAD, A/P - ALEPHATA, TALUKA - JUNNAR, DISTT. PUNE, PIN-412411 - 412411 PH :8421753278.	1657. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), GAT NO. 2774, MAYAKKA NAGAR . NEAR BDS BANK . ATPADI. TAL- ATPADI . DISTRICT SANGLI . PIN 415301 - 415301	1668. MAHALAXMI AUTOMOTIVES PVT LTD (-01), GAT NUMBER-342, NEXT TO HOTEL SAGAR, PUNE-SOLAPUR HIGHWAY, BHIGWAN - 413130. - 413130 PH :9922979653.
VIDISHA	ALIBAUG	AURANGABAD	BHILAWADI
1636. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (-01), UDAYNAGAR COLONY, NEAR OIL FACTORY, SAGAR ROAD, VIDISHA, DISTRICT-VIDISHA (M.P.) - 464001 - 464001 PH :7869755501.	1648. SIMRAN MOTORS PVT LTD (-05), SURVEY NO. 30/1, OPP. RCF COLONY, VILLAGE - VESHVI, ALIBAUG, DISTRICT - RAIGAD, MAHARASHTRA - 402201	1658. AUTOMOTIVE MANUFACTURERS PVT LTD (2102-21-01), PLOT NO. 1,P.B.NO. 716,CHIKALTHANA,AURANGABAD - 431210 PH :9158000046.	1669. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), SURVEY NO-1721, AT POST - MALWADI, BHILAWADI, TAL-PALUS, DIST-SANGLI, PIN-416303.
VIJAY RAGHAVGARH	ALLAPALLY	1659. PAGARIYA AUTO PVT LTD (2103-21-01), OPP. OLD HIGH COURT, NEAR HOTEL ASHOKA EXECUTIVE, JALANA ROAD, AURANGABAD - 431005	BHIWANDI
1637. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (-01), KARITALAI- VIJAYRAGHAVGARH ROAD, VIJAYRAGHAVGARH, DISTT. - KATNI, MP. 483775 - 483775	1649. TRISTAR CARS PVT LTD (---), SHIVAJI SQUARE ETAPALLI ROAD, WARD NO 2, MOUZA- ALLAPALLI, HOUSE NO 1465, TAH-AHERI, DIST- GADCHIROLI-442703. - 442703	1660. AUTOMOTIVE MANUFACTURERS PVT LTD (2102-21-03), C-27 MIDC, CHIKALTHANA , N/R LUPIN LABORATORIES, AURANGABAD, MAHARASHTRA - 431006 PH :9158000059.	1670. NAVIT MOTORS PVT LTD (3908-03), SURVEY NO. 42/2, 45/1, GUPTA WAREHOUSE, DAPODE, TALUKA-BHIWANDI, DIST-THANE. - 421302
MAHARASHTRA	AMALNER		1671. AHER AUTOPRIME LLP (-03), NEXT TO K N PARK, RAJNOLI VILLAGE, KALYAN BYPASS ROAD, BHIWANDI - 421302
AHMEDNAGAR			BHOR
			1672. SEHGAL AUTORIDERS PVT LTD (-01), GUT NO. 929/1, UTTROLI, BHOR, TALUKA - BHOR, DISTRICT - PUNE, MAHARASHTRA. - 412206 PH :9527771016.

BHUSAWAL

1673. MANRAJ MOTORS PVT LTD (-02), NATIONAL HIGHWAY 6, NEAR KHADKA ROAD CROSSING, BHUSAWAL 425201. - 425201
PH :9422867242.

BOISAR

1674. SHIVAM AUTOZONE INDIA PVT LTD (-01), PLOT NO. J-240, MIDC ROAD, BOISAR, TARAPUR INDUSTRIAL, MUMBAI, PIN-401501, MAHARASHTRA - 401501
PH :808251155.

BRAMHAPURI

1675. TRISTAR CARS PVT LTD (-02), 165, NAVEGAON, NEAR VIDYANIKETAN SCHOLL, WADSA ROAD, BRAHMPURI, DIST: CHANDARPUR, MAHARASHTRA - 441206
PH :7745883000.

BULDHANA

1676. MANRAJ MOTORS PVT LTD (-01), GAT NO. 94, PLOT NO. 11, SUNDERKHEDE, BULDHANA, MAHARASHTRA - 443001
PH :7875051521.

CHALISGAON

1677. MANRAJ MOTORS PVT LTD (-01), SL. NO 406, PLOT NO. 2, NEAR HOTEL RANI PARK, DHULE ROAD, CHALISGAON, DIST: JALGAON, MAHARASHTRA - 424101
PH :840888961.

CHANDGAD

1678. SAI SERVICE PRIVATE LIMITED (-01), GAT NO.360, G.P.M NO.157, A/P HALKARNI TALUKA CHANDGAD, DISTT. KOLHAPUR, MAHARASHTRA - 416507
PH :9673339103.

CHANDRAPUR

1679. TRISTAR CARS PVT LTD (-01), NR. HOTEL KUNDAN PLAZA,NAGPUR ROAD,CHANDRAPUR - 442401
PH :7722068612.

1680. TRISTAR CARS PVT LTD (-03), NAGPUR ROAD, CHANDRAPUR - 442401
PH :7722068603.

1681. ARYA CARS (A UNIT OF BARBATE AUTOMOTIVE PVT. (-01), ARYA CARS (A UNIT OF BARBATE AUTOMOTIVE, WORKSHOP / BODY SHOP- PLOT NO X-7 - 442401

CHIMUR

1682. TRISTAR CARS PVT LTD (-01), SHOP NO 1-2, OPP. RTM COLLEGE, CHIMUR, DIST-CHANDRAPUR, MAHARASHTRA - 442903 - 442903

CHIPLUN

1683. JAGRUT MOTORS PRIVATE LIMITED (-01), SURVEY NO-543, NH-17, MUMBAI-GOA HIGHWAY,AT-KALAMASTE,TAL-CHIPLUN, DIST-RATNAGIRI,MAHARASHTRA - 415605

CHOUK

1684. SIMRAN MOTORS PVT LTD (-01), SIMRAN MOTORS PVT LTD STOCKYARD , AT WAVANDAL ,SURVEY NO- 62/2A POST- CHOWK, NEAR ARUN HOTEL ,MUMBAI-PUNE HIGHWAY, TALUKA - KHALAPUR, DISTRICT - RAIGAD - 410206
PH :8691988895.

COLVALE

1685. SAI SERVICE PVT. LTD. (-08), PLOT NO.S-11, COLVALE INDUSTRIAL ESTATE, COLVALE, BARDEZ COLVALE - 403507

DAHANU

1686. SAI SERVICE PRIVATE LIMITED (-03), DAHANU-JAWAHAR ROAD, DAHANU(E), TAL-DAHANU, DIST. TAHNE - 401602

DAHIWADI

1687. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO-483/13/2, VILLAGE-DAHIWADI, DAHIWADI-SATARA ROAD, TALUKA-MAN, DIST-SATARA, MAHARASHTRA. - 415102

DAPOLI

1688. JAGRUT MOTORS PRIVATE LIMITED (-06), AT/POST-DAPOLI, DAPOLI-KHED ROAD,DAPOLI.DIST RATANAGIRI. - 415712

DEHUGAON

1689. SUMANKIRTI CARS PVT LTD (-01), GAT NO 359, DEHU - ALANDI ROAD, DEHUGAON, PUNE, MAHARASHTRA (412109) - 412109

DHAMANGAON

1690. ASPA BANDSONS AUTO (P) LTD (-01), RAMDEVBABA NAGAR, ANJANISINGH ROAD, DHAMANGAON RAILWAY, DIST- AMRAVATI - 444709
PH :9850333558.

DHULE

1691. SEVA AUTOMOTIVE PVT LTD (-01), GATE NO. 90,AWADHAN,MUMBAI AGRA ROAD,DHULE - 424001

DINDORI

1692. AUTOMOTIVE MANUFACTURERS PVT LTD (-01), S.NO.753, NEAR PANDAV PETROL PUMP,NASIK DINDORI ROAD, TAL. DINDORI, DISTT. NASIK - 422202
PH :9673000822.

DOMBILVI

1693. AUTOMOTIVE MANUFACTURERS PVT LTD (3901-02), PLOT NO. B-43, PHASE-1,DOMBIVLI INDUSTRIAL AREA, DOMBIVLI,DISTT-THANE, MAHARASHTRA. - 421201

1694. FORT POINT AUTOMOTIVE CARS PVT LTD (3906-02), SURVEY NO.13, NEAR PIMPLESWAR TEMPLE, OPP. MAHANAGAR CNG PUMP, KALYAN-SHILPHATA ROAD, MANGAON, SONARPADA, DOMBIVLI EAST. - 421203

GADCHIROLI

1695. BARBATE AUTOMOTIVE INDIA PVT LTD (-01), PLOT NO. 10, GANESH NAGAR, MUL ROAD, GADCHIROLI , MAHARASHTRA - 442702
PH :8669929188.

1696. TRISTAR CARS PVT LTD (-01), PLOT NO 29, SURVEY NO 125/1OPP SBI NAVEGAON BRANCH, MUL ROAD< NAVEG - 442605

GANDHIGLAJ

1697. SAI SERVICE PRIVATE LIMITED (3802-04), 581/7B, PLON NO-12, SANKESHWAR ROAD, OPP. HOTEL NEELKAMAL, TAL. GADINGLAJ - 416502

GARGOTI

1698. KR MOTORS KOLHAPUR PVT LTD (-01), 230 & 231, KOLHAPUR GARGOTI ROAD, KHANAPUR, TALUKA BHUDARGAD, DISTRICT KOLHAPUR, MAHARASHTRA. - 416209

GEORAI

1699. PAGARIYA AUTO PVT LTD (-01), SHRI SIDDHI VINAYAK COMPOUND, SURVEY NO 556, JALNA ROAD, GEORAI, DISTRICT - BEED, MAHARASHTRA (431127) - 431127

GONDIA

1700. BARBATE AUTOMOTIVE INDIA PVT LTD (2004-02), ITI ROAD,NR. FULCHUR NAKA,OPP LAXMI FLOUR MILL,GONDIA - 441601

1701. BARBATE AUTOMOTIVE INDIA PVT LTD (2004-03), ITI KAWLEWADA ROAD, NEAR HIMGIRI LAYOUT, KARANJA, GONDIA, MAHARASHTRA. - 441601

GONDPIPIRI

1702. TRISTAR CARS PVT LTD (-01), SURVEY NO. 338 , OPP. POLICE STATION , AHERI CHANDRAPUR ROAD, GONDPIPIRI PIN 442702 (MAHARASHTRA) - 442702

GUHAGAR

1703. JAGRUT MOTORS PRIVATE LIMITED (-01), SURVEY NO. 23A, SHRUNGALTALI, GUHAGAR-CHIPLUN ROAD, GUHAGAR, RATNAGIRI, MAHARASHTRA - 415703

HINGANGHAT

1704. SEVA AUTOMOTIVE PVT LTD (-01), PLOT NO. P-1, HINGANGHAT INDUSTRIAL AREA, NH-7, AJANTI, HINGANGHAT, TALUK - HINGANGHAT, DISTRICT - WARDHA, MAHARASHTRA. - 442301
PH :7722067843.

HINGOLI

1705. PAGARIYA AUTO PVT LTD (-01), PLOT NO.5,7 & 8, SURVEY NO.29/2, AKOLA BY PASS ROAD, HINGOLI - 431513
PH :8411961177.

HUPARI

1706. SAI SERVICE PRIVATE LIMITED (-01), GAT NO.925/8K/2, PLOT NO.7, HUPARI TO YALGUD ROAD, HUPARI, TAL-HATKANANGALE, DISTRICT - KOLHAPUR. - 416203
PH :9923208454.

ICHALKARANSI

1707. SAI SERVICE PRIVATE LIMITED (-01), GATE NO. 107,KOLHAPUR ROAD,KABNOOR,ICHALKARANJI - 416122

INDAPUR

1708. MAHALAXMI AUTOMOTIVES PVT LTD (-02), STATE HIGHWAY NO. 151, INDAPUR - 412219
PH :8308807314.

ISLAMPUR

1709. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GATE NO.905/A/3, NEAR BOMBAY RAYAN, PUNE-BANGALOE HIGHWAY (NH-4), ISLAMPUR TALUKA : WALVA, DIST:SANGLI - 415409

JALGAON

1710. MANRAJ MOTORS PVT LTD (-01), AJINTA ROAD, MIDC INDL AREA, JALGAON - 425003

1711. KHANDESH MOTORS LLP (-01), GAT 248/2, TARSOD-SHIVAR, TAL & DIST - JALGAON, PIN - 425002, MAHARASHTRA - 425002

JALNA

1712. AUTOMOTIVE MANUFACTURERS PVT LTD (2102-02), PLOT NO. 4 & 5, CTS NO. 11427/4-A, BALAJI COMPLEX, JALNA-AURANGABAD ROAD, JALNA. - 431203
PH :9158000063.

JATH

1713. CHOWGULE INDUSTRIES PRIVATE LIMITED (-05), PLOT NO. 12, SAWANT ESTATE, MORE COLONY, OPP. CATTLE BAZAR, SATARA ROAD, JATH, DISTRICT SANGLI, MAHARASHTRA - 416404

1714. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), GAT NO- 27/1B, POST-RAMPUR, JATH-SANGLI ROAD, TALUKA- JATH, DISTRICT-SANGLI - 416404
PH :8956454526.

JAYSINGPUR

1715. SAI SERVICE PRIVATE LIMITED (-01), GATE NO. 1239, NEAR ACHRYA TULSI BLOOD BANK, A/P UDGAON(JAYSINGHPUR), TALUKA:SHIROL, DIST: KOLHAPUR - 416134
PH :9673339762.

JEJURI

Dealer Workshop (AS ON 31.01.2026)

1716. EXCELL AUTOVISTA PRIVATE LIMITED (-01), GAT NO - 224, AT POST-SAKURDE, JEJURI, TALUKA-PURANDHAR, DISTRICT-PUNE, PIN-412303. - 412303 PH -9146052651.	1727. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), KARJAT-NAGAR ROAD, KARJAT, MAHARASHTRA - 414402 PH -9890843771.	KOLHAPUR	1749. JAGRUT MOTORS PRIVATE LIMITED (-01), GAT NO-663, TALUKA-LANJA, DIST - RATNAGIRI, MAHARASHTRA -416701 - 416701 PH -8108718346.
KADEGAON	KARMALA	1738. SAI SERVICE PRIVATE LIMITED (3802-38-01), PLOT NO. 1, E WARD, BEHIND PARVATI TALKIES, SHIVAJI UDYAMNAGAR, KOLHAPUR - 416008	LASALGAON
1717. CHOWGULE INDUSTRIES PRIVATE LIMITED (- 01), GAT NO-248, KARAD ROAD, KADEGAON, TAL-KADEGAON, DIST-SANGLI, MAHARASTRA - 415304	1728. CHAVAN MOTORS DIVISION INDIA PVT LTD (- 01), GAT NO. 105, SURVEY NO. 3961, KARMALA-NAGAR ROAD, A/P- KARMALA, TALUKA - KARMALA, DIST.-SOLAPUR. - 413202 PH -8806665691.	1739. SAI SERVICE PRIVATE LIMITED (3803-38-01), C-6, SHIROLI MIDC, MENON OPP MENON PISTONS,NH-4, KOLHAPUR - 416122	1750. SHAAN CARS PVT LTD (-01), PLOT NO. 337, LASALGAON MAIN ROAD, LASALGAON, TALUKA - NANDGAON, DISTRICT - NASHIK. - 422306
KALWAN	KATOL	1740. SAI SERVICE PRIVATE LIMITED (3802-06), R S NO. 1018/1, PLOT NO. 28, APATE NAGAR, KALAMBA RING ROAD, KOLHAPUR, MAHARASHTRA. - 416012	LATUR
1718. SHAAN CARS PVT LTD (-01), GAT NO. 189, PLOT NO. 7, MALEGAON ROAD, A/P KALWAN, NASHIK. - 423501	1729. SEVA AUTOMOTIVE PVT LTD (-01), SURVEY NO-241/1, PLOT NO 03, THOMA LAYOUT JALALKHEDA ROAD,KATOL, MAHARASHTRA - 441302	1741. KR MOTORS KOLHAPUR PVT LTD (3804-38-01), PLOT NO. 216/2, 216/3, 216/5, NH-4, GOKUL SHIRGAON, KOLHAPUR. - 416234	1751. AUTOMOTIVE MANUFACTURERS PVT LTD (- 02), C-4/1319/1, SURVEY NO. 89/C, RING ROAD BETWEEN NANDED NAKA AND BABHALGAON NAKA, LATUR, PO & DIST-LATUR,PIN-413512. - 413512
KALYAN	KAVATE MAHANKAL	KONGAON	LONAND
1719. AHER AUTOPRIME LLP (-01), SURVEY NO.53 & 54, HIND MILL, OPPOSITE STATE BANK OF INDIA, ANDHARWADI ROAD, KALYAN, MUMBAI - 421301	1730. CHOWGULE INDUSTRIES PRIVATE LIMITED (- 01), MAHANKALI BAZAR, KAVATE MAHANKAL-JAT ROAD, KAVATE MAHANKAL, SANGLI, MAHARASHTRA - 416405	1742. PRAKASH AUTO PVT LTD (3903-02), SURVEY NO.126/127,98/38,AT & POST KONGAON, - 421302	1752. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), SR NO - 353/2, NEAR RAILWAY BRIDGE, PUNE-SATARA ROAD, LONAND, SATARA, MAHARASHTRA - 415521. - 415521
1720. AHER AUTOPRIME LLP (-02), SURVEY NO.318,MOHANE ROAD, NEAR SHAHAD RAILWAY STATION,SHAHAD,KALYAN. - 421103	KHAMGAON	KOPARGAON	LONAVALA
KAMSHET	1731. MANRAJ MOTORS PVT LTD (-01), GAT NO 41, OLD SURVEY NO. 12/1A, NEAR AMRUT PETROL PUMP, AKOLA ROAD, KHAMGAON , MAHARASHTRA - 444303	1743. SHAAN CARS PVT LTD (-01), SURVEY NO. 15/36 GAWARE PATIL ESTATE, NAGAR MANMAD HIGHWAY, NEAR ASHOKA HOTEL, KOPARGAON. - 423601 PH -9075028780.	1753. SEHGAL AUTORIDERS PVT LTD (-01), GATE NO. 120/1, VILLAGE - WAKSAI, TALUKA - MAVAL, LONAVALA, DISTRICT - PUNE, MAHARASHTRA. - 410405
1721. SEHGAL AUTORIDERS PVT LTD (-01), AT NAYGAON, POST KAMSHET, TALUKA MAVAL, DISTRICT PUNE, MAHARASHTRA (410405). - 410405 PH -8888881358.	KHANAPUR (SANGLI)	KOREGAON BHIMA	LONI
KANKAVALI	1732. CHOWGULE INDUSTRIES PRIVATE LIMITED (- 01), KHANAPUR VITA ROAD, KHANAPUR, TAL-KHANAPUR, DIST-SANGLI - 415307 PH -9767899653.	1744. SAI SERVICE PRIVATE LIMITED (-01), GAT NO-373, VILLAGE-KOREGAON BHIMA, DIST-KALSHIRUR, DIST-PUNE. - 415501 PH : 7774997005.	1754. MAHALAXMI AUTOMOTIVES PVT LTD (-01), GAT NO. 55/5, SANGAMNER LONI ROAD, LONI, TALUKA-RAHATA, AHMEDNAGAR MAHARASHTRA - 413736
1722. JAGRUT MOTORS PRIVATE LIMITED (-05), PLOT NO.32-33,SURVEY NO. -1886/1,,MUMBAI-GOA HIGHWAY (NH-17),JANAVLI,KANKAVLI,MAHARASHTRA - 416002	KHARGHAR	KUDAL	MAHAD
KANNAD	1733. EXCELL AUTOVISTA PRIVATE LIMITED (-01), SURVEY NO.742/439, KOPRA VILLAGE, SECTOR-10, SION-PANVEL HIGHWAY, KHARGHAR, DIST. RAIGAD - 410210	1745. JAGRUT MOTORS PRIVATE LIMITED (-01), SURVEY NO. 50/5, 51/5, A/P PINGULI, TEMBDHURI, TALUKA - KUDAL, DISTRICT - SINDUDURG, MAHARASHTRA - 416520	1755. SIMRAN MOTORS PVT LTD (-04), NEAR RELIENCE PUMP, PANVEL-GOA ROAD, MAHAD, DIST. RAIGAD - 402301 PH -9870404323.
1723. AUTOMOTIVE MANUFACTURERS PVT. LTD. (- 01), SURVEY NO 208/2, NEAR DEEPAK PETROL PUMPCHALISGAON ROAD , KANNAD - 431147	KHED	KUDITRE	MALEGAON
KARAD	1734. JAGRUT MOTORS PRIVATE LIMITED (-01), GAT NO - 43/B, MAUZA-BHARNE NAKA, TALUKA-KHED, DIST-RATNAGIRI. - 415709 PH -9689533472.	1746. SAI SERVICE PRIVATE LIMITED (-01), KUDITRE FACTORY PHATA, A/P -KOPARDE, TALUKA-KARVEER, DIST-KOLHAPUR-416205. - 416205 PH -9923208460.	1756. SHAAN CARS PVT LTD (3703-02), GAT NO. 273, POST-TEHARE, MALEGAON, AB HIGHWAY, NH-3, DISTRICT-NASHIK - 422303
1724. CHOWGULE INDUSTRIES PRIVATE LIMITED (- 02), 112/3, PUNE-BANGALORE ROAD, NEAR RELIANCE GAS PUMP, A/P MALKAPUR, TAL. KARAD, DISTT. SATARA - 415110 PH -9922569835.	KHED SHIVAPUR	KURUDWADI	MALKAPUR
KARANJA	1735. SEHGAL AUTORIDERS PVT LTD (-01), GATE NO. 763A, PUNE BANGALORE HIGHWAY, VELU VILLAGE, TEHSIL BHOR, OPP. INDIAN - 412205	1747. CHAVAN MOTORS DIVISION INDIA PVT LTD (- 01), GAT NO.256, BYPASS ROAD, A/P KURDA, TALUKA-MADHA, DISTT. SOLAPUR. - 413208 PH -8806665691.	1757. KR MOTORS KOLHAPUR PVT LTD (-01), AT PO - MALKAPUR, YELANE-SAHUWADI, KOLHAPUR-RATNAGIRI ROAD, DIST- KOLHAPUR, PIN-416105. - 416105
1725. ASPA BANDSONS AUTO (P) LTD (-01), MAA GODAVARI NAGAR, NAGPUR-AURANGABAD HIGHWAY, KARANJA, DISTRICT - WASHIM, MAHARASHTRA - 444104. - 444104	KHOPOLI	KURUNDWAD	MANCHAR
KARJAT	1736. KIRAN MOTORS LIMITED (-01), PLOT NO-68, VILLAGE-MULGAON, KHOPOLI INDUSTRIAL ESTATE, KHOPOLI, TALUKA-KHALAPUR DIST-RAIGARH - 410204	1748. SAI SERVICE PRIVATE LIMITED (-01), GAT NO. 250, AT POST - KURUNDWAD, TALUKA - SHUROO, DIST.-KOLHAPUR. - 416106 PH -9673339695.	1758. KOTHARI AUTO WHEELS PVT LTD (-01), SOHAMI NAGRI, A-WING, SHOP NO.8 & 16, PUNE NASIK HIGHWAY, A/P MANCHAR, TALLUKA- AMBEGAON, DISTT: PUNE, MAHARASHTRA - 410503 PH -8411003608.
1726. SIMRAN MOTORS PVT LTD (-03), PANVEL-KARJAT ROAD, KARJAT, DIST. RAIGAD - 410201	KOLAD	LANJA	MANGALVEDHA
	1737. EXCELL AUTOVISTA PVT LTD (-01), GATE NO.154,AT BHUVAN KOLAD,, MUM-GOA HIGHWAY,RAIGAD. - 402112		

1759. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), NEAR SWARAJYA HOTEL, PANDHARPUR ROAD, CHOKAMELANAGAR, MANGALWEDHA, MAHARASHTRA, PIN-413305 - 413305 PH :8805778881.	1770. CHOWGULE INDUSTRIES PRIVATE LIMITED (-03), 42C, OPP. WHISPERING WOODS, MIDC AREA, TALUKA MIRAJ, DISTT. SANGLI, MAHARASHTRA - 416410	1785. KIRAN MOTORS LIMITED (-01), CTS NO. 170 & 4081, BOMBAY AGRA ROAD, LB SHASTRI MARG, GHATKOPAR (WEST), MUMBAI, MAHARASHTRA, PINCODE: 400086. - 400086	1798. ARUN MOTORS PRIVATE LIMITED (2008--01), PLOT NO-9&10, PATNI PLAZA, KHAMLA RING ROAD, SAVARKAR NAGAR, NAGPUR, MAHARASHTRA - 440025
MANGAON	MORGAON	1786. MY CAR (PUNE) PVT LTD (-01), PLOT NO-10, CHANDIVALI ESTATE, CHANDIVALI FARM ROAD, OPP LAKE HOMES, ANDHERI EAST, MUMBAI, MAHARASHTRA - 400072 PH :8104907081.	1799. ARUN MOTORS PRIVATE LIMITED (2008--02), C-4&1, MIDC HINGNA MAIN ROAD, WADI, NAGPUR, PIN-440028, MAHARASHTRA - 440028 PH :7757988900.
1760. SIMRAN MOTORS PVT LTD (-01), SURVEY NO.97, AT-POST-NANORE, NH-17, MUMBAI-GOIA HIGHWAY, MANGAON, RAIGAD, MAHARASHTRA. - 402104 PH :9223181120.	1771. MAHALAXMI AUTOMOTIVES PVT LTD (-01), GAT NO-179, MORGAON. - TALUKA- BARAMATI, DIST-PUNE - 412304 PH :9850994014.	MURGUD	1800. SEVA AUTOMOTIVE PVT LTD (2009-20-01), P.S.K 14, REVENUE CIRCLE, KH NO.84, NEAR KORADI POLICE STATION, PANJARA - 480115
1761. SIMRAN MOTORS PVT LTD (-02), GAT NO-65/2K, NANORE GAON. - 402104	MUMBAI	1787. SAI SERVICE PRIVATE LIMITED (-01), R.S. NO. 188/4, A/P MURGUD, TALUKA: KAGAL, DIST: KOLHAPUR - 416219	NALASOPARA
MANMAD	1772. SAI SERVICE PRIVATE LIMITED (-01), 462 SENAPATI BAPAT MARG, WORLI NAKA, LOWER PAREL, MUMBAI - 400013	MURTIZAPUR	1801. SHIVAM AUTOZONE INDIA PVT LTD (-01), SURVEY NO. 91.92, PLOT NO. 7, VILLAGE-DHANVI, NALASOPARA, DIST. PALGHAR, MAHARASHTRA. - 401209
1762. SHAAN CARS PVT LTD (-01), GAT NO. 11/3, PLOT NO. 1 AND SHOP NO. 3 & 4, NANDGAON ROAD, MANMAD. - 423104	1773. SAI SERVICE PRIVATE LIMITED (-02), ARVIND CHAMBERS, 194 ANDHERI KURLA ROAD, ANDHERI(EAST), MUMBAI - 400069	1788. KHANDELWAL AUTOWHEELS PVT LTD (-01), SURVEY NO 38, MAUJA SONORI, NH 06, NEAR HOTEL DEVA, MURTIZAPUR, DISTRICT-AKOLA - 444107 PH :8484063274.	NANDED
MANOR	1774. VITESSE PRIVATE LIMITED (-01), SHAH INDLESTATE, PLOT 11 LINK ROAD, ANDHERI (WEST), MUMBAI - 400058	NAGOTTHANE	1802. SEVA AUTOMOTIVE PVT LTD (6801-68-01), GAT NO-126, NEAR SUNDER PETROL PUMP, A/P PIMPALGAON MAHADEO, TQ-ARDHAPUR, NAGPUR-NANDED HIGHWAY, NANDED, MAHARASHTRA-431704 - 431604 PH :7447415607.
1763. SAI SERVICE PRIVATE LIMITED (-01), GUT NO. 37, NEAR MSEB POWER STATION, PALGHAR MANOR ROAD, AT POST - TAKVAHAL, DISTRICT - PALGHAR, MANOR. - 401403 PH :9167980005.	1775. VITESSE PRIVATE LIMITED (-02), 77 AF PALKY GULLY, OFF VEER SAVARKAR MARG, PRABHADEVI, MUMBAI - 400025	1789. SIMRAN MOTORS PVT LTD (-01), SURVEY NO.241, PLOT NO. 11, MOUJE CHIKANI, ROHA, RAIGADH. - 402106	NANDURBAR
MARKAL	1776. SAH & SANGHI AUTO AGENCIES PVT LTD (-01), PRAKASH MILLS COMPOUND, OFF. GLOBE MILLS PASSAGE, WORLI, MUMBAI - 400013	NAGPUR	1803. SEVA AUTOMOTIVE PVT LTD (-02), P. NO.-324, BASILAR NAGAR SHAHADE BYPASS ROAD, NEAR HOTEL KAREN GARDEN, CHAUFULLY NANBURBAR-425412 - 425412 PH :7720017528.
1764. MY CAR (PUNE) PVT LTD (-01), SRV NO 1283/2 & 1284, KAMALJAI WASTI, OPP. ENPRO INDUSTRIES, ON ALANDI MARKAL ROAD, A/P MARKAL, TEHSIL-KHED, DIST PUNE, PIN CODE NO. 412105. - 412105	1777. SAI SERVICE PRIVATE LIMITED (-04), C/O SHAKTI INDUSTRIAL WIRE COMPOUND, DATTA PADA ROAD, BORVILI (EAST), MUMBAI - 400066	1790. SEVA AUTOMOTIVE PVT LTD (2002-20-01), 34/3, KACHIMET AREA, NEAR VAYUSENA NAGAR BUS STOP, WADI, AMRAVATI ROAD, NAGPUR - 440023	NARAYANGAON
MAUDA	1778. AUTOMOTIVE MANUFACTURERS PVT LTD (3901-04), PLOT NO. 108, BAZAR WARD, KURLA(WEST), MUMBAI - 400070	1791. AUTOMOTIVE MANUFACTURERS PVT LTD (2001-20-02), 575 KAMPTTEE ROAD, NAGPUR-26,, - 440026	1804. KOTHARI AUTO WHEELS PVT LTD (-01), GATE NO. 747, PUNE NASIK HIGHWAY, WARULWADI, NARAYANGAON - 410504 PH :8411003608.
1765. ARUN MOTORS PVT LTD (-01), NEAR NIRMAL UJJWAL BANK, MAIN ROAD. - 441104	1779. FORT POINT AUTOMOTIVE CARS PVT LTD (-02), D-9, STREET NO. 21, OPP PATNI COMPUTERS, SEEPEZ, MIDC, ANDHERI, MUMBAI - 400096	1792. SEVA AUTOMOTIVE PVT LTD (2002-20-03), PLOT NO. 33A, CENTRAL MIDC, HIGNA ROAD, NAGPUR, MAHARASHTRA. - 440018	NASHIK
MAYANI	1780. SHIVAM AUTOZONE INDIA PVT LTD (-01), CHARKOP INDUSTRIAL ESTATE, KANDIVLI(WEST), MUMBAI, MAHARASHTRA - 400067	1793. BARBATE AUTOMOTIVE INDIA PVT LTD (2004-20-01), NEAR PARDY NAKA (OUTSIDE), NH-6, BHANDARA ROAD, NAGPUR - 440035	1805. AUTOMOTIVE MANUFACTURERS PVT LTD (3702-37-01), P-1-12, ADDITIONAL NASIK INDL. AREA, AMBAD, NASIK - 422010
1766. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO - 2101/1, 560/1, MAYANI VADUJ ROAD, A/P- MAYANI, TAL-KHATAV, DIST-SATARA-415102. - 415102 PH :888866659.	1781. VITESSE PRIVATE LIMITED (-07), PLOT NO. A59, KANDIVALI INDUSTRIAL CO-OP. SOC., GOVERNMENT INDUSTRIAL ESTATE, CHARKOP, KANDIVALI (W), MUMBAI - 400067	1794. AUTOMOTIVE MANUFACTURERS PVT LTD (2001-20-05), PLOT NO. 38/1, NEAR BOUDDHA VIHAR, OPP. DELHI PUBLIC SCHOOL, KAMPTTEE ROAD, NAGPUR, MAHARASHTRA - 441001	1806. SEVA AUTOMOTIVE PVT LTD (3701-37-01), PLOT NO. X - 46, MIDC, AMBAD, NASIK - 422010
MEDHA	1782. FORT POINT AUTOMOTIVE CARS PVT LTD (-03), C/O VARUN STEEL INDUSTRIES, AAM TOOL COMPOUND, BOAT HURT ROAD, BEHIND SEWARI POLICE STATION, DARUKHANA, REAY ROAD, MUMBAI - 400010	1795. BARBATE AUTOMOTIVE INDIA PVT LTD (2007-01), PLOT NO. 4, NEW COTTON MARKET, GHAT ROAD, NAGPUR, MAHARASHTRA - 440018 PH :8888859542.	1807. SHAAN CARS PVT LTD (3703-37-01), E-3 MIDC AREA, SATPUR, NASIK, MAHARASHTRA - 422007
1767. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO-76-24/25, OPP.PWD OFFICE, A/P-JAWALWADI(MEDHA), TAL-JAOLI, DI ST- SATARA, MAHARASHTRA-415012 - 415012	MHASLA	1796. BARBATE AUTOMOTIVE INDIA PVT LTD (2007-02), PLOT NO. 131, NH-6, BHANDARA ROAD, MAHALGAON, NAGPUR, MAHARASHTRA. - 441202 PH :8888820312.	1808. SHAAN CARS PVT LTD (3703-37-04), 03/8/10, NEAR NASARDI BRIDGE, WADALA ROAD, NASIK ROAD, NASIK - 422011
1768. EXCELL AUTOVISTA PRIVATE LIMITED (-01), SURVEY NO-27, VILL- SAVAR, TALUKA- MHASLA, DIST- RAIGAD - 402105	MHASWAD	1797. SEVA AUTOMOTIVE PVT LTD (2002--04), PLOT NO.05, 12, 13A, 13B CHANDRABHAGA GRUHA NIRMAN SAHAKARI LIMITED, KH NO.45/3, CITY SURVEY NO.570, MANEWADA RING ROAD, NAGPUR, MAHARASHTRA - 440027 PH :8390446644.	1809. SEVA AUTOMOTIVE PVT LTD (3701-37-06), SEVA FARMS, GATE NO. 82/2, AMBE BAHULA ROAD, VILHOLI, TALUKA & DISTRICT: NASIK, MAHARASHTRA - 422010 PH :9146000709.
1769. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO 287/5, SATARA-PANDHARPUR ROAD. - A/P-MHASWAD(MASAIWADI), MAHARASHTRA - 415509	MIRAJ		1810. SEVA AUTOMOTIVE PVT LTD (-07), PLOT NO.A-23, NICE INDUSTRIAL AREA, MIDC, SATPUR, NASIK (MAHARASHTRA) - 422006
			1811. SEVA AUTOMOTIVE PVT LTD (-37-08), SHOP NO. 1 & 2, SER. NO. 241/1-B-1/2, OPPOSITE NMC SCHOOL, DINDORI ROAD, MAHRSUL, NASHIK, MAHARASHTRA - 422004

Dealer Workshop (AS ON 31.01.2026)

1812. SHAAN CARS PVT LTD (3703-37-05), SURVEY NO./ PLOT NO. 02, ADGAON, D-MART, MUMBAI AGRA HIGHWAY, NASHIK - 423101	OTUR	1835. ASPA BANDSONS AUTO (P) LTD (-01), SURVEY NO. 26/4A, RAMGAON, AMRAVATI PARATWADA ROAD, NEAR JAWARDI PHATA, PARATWADA TALUKA - ACHALPUR, DISTRICT - AMRAVATI. - 444805 PH : 8888897629.	1845. SEVA AUTOMOTIVE PVT LTD (-01), PLOT NO. 33, MOUZA - CHITKI, MOUZA NO - 2/33, HINDUSTAN COLONY, WARDHA ROAD, GRAM PANCHAYAT - LAXMINARAYANPUR, AT POST - PULGAON, TEHSIL - DEOLI, DISTRICT - WARDHA. - 442302
1813. SHAAN CARS PVT LTD (-06), SURVEY NO.72/2, VIHTGAON-VADNER ROAD, DEOLALI, NASHIK - 422401		PARBHANI	PUNE
NASRAPUR	PABAL	1836. PAGARIYA AUTO PVT LTD (-01), SURVEY NO.301, PLOT NO-86/A, OPP GULMOHAR LODGE, BASMAT ROAD, PARBHANI - 431401 PH : 9511868433.	1846. SAI SERVICE PRIVATE LIMITED (1901-19-01), BOMBAY PUNE ROAD, FUGEVADI, PUNE - 411012
1814. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO-152/2, PUNE SATARA HIGHWAY, AT POST: NASRAPUR CHELANDI, TALUKA - BHOR, PUNE, MAHARASHTRA - 412213	1826. MAHALAXMI AUTOMOTIVES PVT LTD (-01), 3733, SHINALKAR WASTI, PABAL, TALUK SHIRUR, PUNE, PIN 412403 - 412403 PH : 8956288087.	PARGAON	1847. SAI SERVICE PRIVATE LIMITED (1901-19-02), 889/90 J.M.ROAD, DECCAN GYMKHANA, PUNE - 411004 PH : 9923208347.
NAVI MUMBAI	PADGHA	1837. MAHALAXMI AUTOMOTIVES PVT LTD (-01), PARGAON PHATA, KEDGAON PARGAON ROAD, PARGAON, PUNE, MAHARASHTRA - 412203. - 412203	1848. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-19-02), S.NO. 53,PUNE SATARA HIGHWAY,KATRAJ,PUNE - 411046
1815. AUTOMOTIVE MANUFACTURERS PVT LTD (3901-01), D-234 MIDC TTC INDL AREA,SHIRVANE NERUL,NEW BOMBAY, - 400706	1827. SHIVAM AUTOZONE INDIA PVT. LTD. (-01), SHOP NO.7/8,TRADE CENTRE., MUMBAI NASHIK HW,NEAR PADGHA TOLL PLAZA, - 421101	PATAN	1849. SAI SERVICE PRIVATE LIMITED (1901-19-03), S.NO.15A GIOWANI COMPOUND, KONDWA BUDRUK, HAVELI, PUNE - 411046 PH : 9923208345.
1816. EXCELL AUTOVISTA PRIVATE LIMITED (-02), PLOT NO-9,MIDC,NAVADE,TALOJA, TAL-PANVEL, DIST-RAIGAD - 410208	PAITHAN	1838. CHOWGULE INDUSTRIES PVT. LTD. (-01), GAT NO 1543/K/PLOT NO 2., A/P-MHAWSHI,PATAN-MANDURE ROAD, - 415206	1850. WONDER CARS PVT LTD (1903-19-02), 12, NPS LINES,SOLAPUR ROAD, OLD POOL GATE,CAMP, PUNE - 411001
1817. SIMRAN MOTORS PVT LTD (3913-01), CAMEO FABRIC COMPANY, GEN 16, NEAR SULZER COMPANY, DIGHA, TTC AREA, AIROLI - 400701	1828. PAGARIYA AUTO PVT LTD (-01), GAT NO-277, MALUZA- PAITHAN, TALUKA- PAITHAN, DIST - AURANGABAD 431107. - 431107 PH : 9922994237.	PATAS	1851. KOTHARI AUTO WHEELS PVT LTD (1984-19-01), 110/A, PUNE SOLAPUR ROAD, NEAR FATIMA NAGAR, PUNE - 411039 PH : 7498272309.
1818. MY CAR (PUNE) PVT LTD (-01), A-751/2, MIDC TTC, TURBHE MAHAPE ROAD, PAWANE, NAVI MUMBAI - 400071	PALGHAR	1839. MAHALAXMI AUTOMOTIVES PVT LTD (-03), PUNE-SOLAPUR HIGHWAY, PATAS, TALUKA DAUND DISTT.-PUNE - 413106 PH : 8888890957.	1852. MY CAR (PUNE) PVT LTD (1907-19-01), SURVEY NO. 131, MUMBAI BANGALORE HIGHWAY, WAKAD, PUNE - 411057
1819. SAI SERVICE PRIVATE LIMITED (-06), D 42, TTC INDUSTRIAL AREA, NAVI MUMBAI, PIN-400705 - 400705	1829. SAI SERVICE PRIVATE LIMITED (-01), SURVEY NO. 86/1, TEMBHODE, MANOR-MAHIM ROAD, PALGHAR, DISTRICT: THANE - 401404	PEN	1853. CHOWGULE INDUSTRIES PRIVATE LIMITED (1911-19-01), S.NO.1, NEXT TO PODAR INTERNATIONAL SCHOOL, KATRAJ BYPASS ROAD, AMBEGAON-B, TALUKA-HAVELI, PUNE - 411046
NERAL	PALUS	1840. SIMRAN MOTORS PVT LTD (-01), AT SURVEY NO 75, PLOT NO 2, MUMBAI-GOA HIGHWAY, WADHKAL (PEN) - 402107 PH : 9503381198.	1854. SAI SERVICE PRIVATE LIMITED (1901-19-05), NEAR NIGDI-BHOSARI ROAD, CHINCHWAD, PUNE - 411019
1820. EXCELL AUTOVISTA PRIVATE LIMITED (-01), NEAR OLD JAKAT NAKA, GANESH NAGAR, PAYARMAL, NERAL, TALUKA - KARJAT, DISTRICT - RAIGAD, MAHARASHTRA (410101). - 410101	PANDHARPUR	PHALTAN	1855. SEHGAL AUTORIDERS PVT LTD (1913-19-01), SURVEY NO. 51, BAVDHAN KHRUD, TAL: HAVELI, DIST: PUNE - 411021
NESARI	1831. CHAVAN MOTORS DIVISION INDIA PVT LTD (-05), 410/A/3, A/P- WAKHARI, PHALTAN ROAD,PANDHARPUR, DIST-SOLAPUR.	1841. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), PLOT NO 83/1/B/1, LONAND-PUNE ROAD, PHRANANDWADI, TALUKA-PHALTAN, DISTRICT: SATARA, MAHARASTRA. - 415523 PH : 8888886301.	1856. SAI SERVICE PRIVATE LIMITED (1901-19-06), SURVEY NO.244/1, PHASE-II, NEAR BANK OF MAHARASHTRA, HINGEWADI, TAL - MULSHI, DISTRICT-PUNE,MAHARASHTRA - 411057 PH : 9923208302.
NEVASA	GAT NO.56, ESABAVI, PUNE ROAD, TAL-PANDERPUR, SOLAPUR - 413001 PH : 777997005.	PIMPLEGAON	1857. KOTHARI AUTO WHEELS PVT LTD (1984-03), PLOT NO. 2B, D1 BLOCK, CHINCHWAD, PUNE, DIST. PUNE - 411019 PH : 9168662302.
1822. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), BELOW ADARSH GRAMIN BANK, OPP. ILAKSHI MOTORS, NEVAS PHATA, AURANGABAD ROAD, TALUKA - NEVASA, DISTRICT - AHMEDNAGAR. - 414603 PH : 9420494601.	PANVEL	1842. AUTOMOTIVE MANUFACTURERS PVT LTD (-01), GAT NO.517/P NEAR MARKET COMMITTEE, MUMBAI AGRA HIGHWAY, NH3 A/P PIMPALGAON BASWANT, TALUKA: NIPHAD, DIST-NASHIK - 422202	1858. MAHALAXMI AUTOMOTIVES PVT LTD (1912-03), 59/A, MUNDHWA KHARADI ROAD, OPP. MUNDHWA POLICE STATION, MUNDHWA, PUNE, MAHARASHTRA - 411036 PH : 8888874980.
NIPHAD	1832. SIMRAN MOTORS PVT LTD (-01), PLOT-2-8,SECTOR-15, OPP. HOTEL GARDEN,OLD MUMBAI PUNE HIGHWAY,PANVEL - 410206	PIRANGUT	
1823. SHAAN CARS PVT LTD (-01), GAT NO. 99/3, RASALPUR AURANGABAD HIGHWAY, NIPHAD, DISTRICT - NASHIK, MAHARASHTRA. - 422303 PH : 9075028780.	1833. AUTOMOTIVE MANUFACTURERS PVT LTD (3901-03), PLOT NO:92/1, VILLAGE KOLAKHA, MUMBAI-GOA HIGHWAY, PANVEL, DISTT. RAIGAD - 410206	1843. MY CAR (PUNE) PVT LTD (-01), GAT NO-314, AT VILLAGE-KASAR AMBOLI, PIRANGUT, TALUKA -AMBOLI, DIST-PUNE, PIN-412108. - 412108 PH : 9325424613.	
OSMANABAD	1834. K.T.S. AUTOMOTORS PVT LTD (-01), VILLAGE: APTA, OPP. APTA RAILWAY STATION, LADIWALI, DIST: RAIGAD, PANVEL (MAHARASHTRA) - 410207	POYNAD	
1824. CHAVAN MOTORS DIVISION INDIA PVT LTD (-03), PLOT NO. A-53, INDUSTRIAL AREA, MIDC, OSMANABAD - 413501 PH : 8888867861.	PARATWADA	1844. MY CAR (PUNE) PVT LTD (-01), SURVEY NO-52/2, SUBASH NAGAR, MUMBAI-GOA HIGHWAY, A/P-AMBEPUR, POYNAD, TALUKA-ALIBAG, DIST-RAIGAD, PIN-402108. - 402108	
		PULGAON	

1859. SAI SERVICE PRIVATE LIMITED (1901-07), 4/A/1A, 1/3 A, SALUNKE VIHAR ROAD, BORADE NAGAR, KONDWA, PUNE, MAHARASHTRA. - 411048 PH :9923208358.	1871. MAHALAXMI AUTOMOTIVES PVT LTD (1912-19-05), LANE NO 8, SANT NAGAR, BEHIND IOCL PETROL PUMP, LOHEGAON, PUNE, MAHARASHTRA-411047 PH :8956045026.	SAKOLI 1883. AUTOMOTIVE MANUFACTURERS PVT LTD (-01), PLOT NO. 7, GAT NO. : 271/1/4, MOUZA - JAMBHALI, TAHSIL - SAKOLI, DIST : BHANDARA, PIN - 441802. - 441802	1893. BARBATE AUTOMOTIVE INDIA PVT LTD (-01), PLOT NO.2, MADANE LAYOUT, MOUZA GUJARKHEDE, NR. INDIAN PETROL PUMP, NAGPUR ROAD, SAVNER DISTT. NAGPUR. - 441107 PH :8888859546.
1860. WONDER CARS PVT LTD (1903-03), PLOT NO.52/1 BLOCK F2, MIDC, PIMPRI, PUNE. - 411018	1872. MY CAR (PUNE) PVT LTD (1918-19-02), GAT NO 624, HISSA NO. 5/2, VILLAGE-KURULI, CHAKAN, TAL. KHED, DIST. PUNE, NEAR SAI EXPRESS WAY PETROL PUMP, PIN-410501. - 410501	SANGAMNER 1884. SHAAN CARS PVT LTD (-01), GAT NO. 173/4/5/6, A/P VELHALE, NASHIK PUNE HIGHWAY, SANGAMNER, DIST AHMEDNAGAR, MAHARASHTRA - 422605	SAWANTWADI 1894. JAGRUT MOTORS PRIVATE LIMITED (-01), SHIVSHAMBHO APARTMENT, 1190, A/P KOLGAON, SURVEY NO.187, HISSA NO.33B, TAL-SAWANTWADI, DISTT. SINDHUDURG. - 416510
1861. MAHALAXMI AUTOMOTIVES PVT LTD (1912-04), NO.485/1, CTS NO.1041, OM SUPER MARKET, GHOKALE CROSS ROAD, MODEL COLONY, SHIVAJI NAGAR, PUNE - 411016 PH :8888842887.	1873. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-19-07), SURVEY NO 245/6,7,9/1, KHARABWADI CHAKAN - 410501	SANGLI 1885. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO.243 SANGLI KOLHAPUR ROAD, OPP. TO GAJANAN MAHARAJ MANDIR, ANKALI, TAL-SANGLI, DISTT. SANGLI - 416416 PH :9850966805.	SHAHAPUR 1895. SHIVAM AUTOZONE INDIA PVT LTD (-01), DR. DESHPANDE COMPOUND, NEAR BHATSA COLONY, VILLAGE - GOTHAGHAR, TALUKA - SHAHPUR, DISTRICT - THANE, MAHARASHTRA - 421601 PH :7718893483.
1862. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-19-05), 129/2/B/1, NEW PUNE MUMBAI HIGHWAY, KATRAJ DEHU ROAD BYPASS, TATHWADE, TAL-MULASHI, DISTT. PUNE (MAHARASHTRA) - 411033	1874. EXCELL AUTOVISTA PRIVATE LIMITED (1917-19-02), S.NO. 41/2B/1 PART CHOUDHARI VASTI, KHARADI, PUNE - 411014	SANGOLA 1886. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), GAT NO. 276/14/A, MAIN ROAD, KOLHAPUR HIGHWAY, A/P & TALUKA - SANGOLA, DIST. -SOLAPUR - 413307 PH :8806665691.	SHAHUWADI 1896. SAI SERVICE PRIVATE LIMITED (-01), GATE NO. 1213, RIAT DONOLI, TALUKA - SHAHUWADI, DIST. KOLHAPUR - 416213 PH :8419984188.
1863. SAI SERVICE PRIVATE LIMITED (1901-08), SURVEY NO. 37, HISSA NO. 2, SITUATED AT WADGAON KHURD, NEAR NANDED CITY, SINHAGAD ROAD, TALUKA - HAVELI, DISTRICT - PUNE, MAHARASHTRA - 411041 PH :9923208312.	PUSAD 1875. HIMALAYA CARS (-01), OPP P N COLLEGE, GAIMUKH NAGAR,YAVATMAL / DIGRAS ROAD, PUSAD - 445204 (DIST YAVATMAL, MAHARASHTRA) - 445204	SANKH 1887. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SURVEY NO-394/5, VILLAGE- SANKH, TALUKA-JATH, DIST- SANGLI, MAHARASHTRA - 416413	SHILTPATA 1897. VELOX MOTORS PVT LTD (-01), SURVEY NO- 99/2B, VILLAGE-DAIGHAR, KALYAN SHIL-PHATA ROAD, NEAR DATTA MANDIR, POST-PADALE, DIST-THANE, PIN-421204. - 421204 PH :8419984188.
1864. KOTHARI AUTO WHEELS PVT LTD (1984-05), PLOT NO. 24/B, HADAPSAR INDUSTRIAL ESTATE, PUNE. - 411028	RAHATA 1876. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), SHIRDI ROAD, SAKORI, RAHATA, - 423107 PH :8275033313.	SAPHALE 1889. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (-01) H.NO.1137/1138/1139., NUTAN NAGAR,MAKNE THEMHKODAWA ROAD, MAHARASHTRA - 401102	SHIRUR 1898. MAHALAXMI AUTOMOTIVES PVT LTD (1912-02), 1023/1, NEXT INDIAN OIL PETROL PUMP, SARADWADI, PUNE-AHMEDNAGAR HIGHWAY, TAL: SJURUR, DIST: PUNE, MAHARASHTRA - 412210
1865. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-06), SR. NO.- 43/44/S, 7 PARVATI INDUSTRIAL ESTATE, OPP. ADINATH SOCIETY, PUNE- SATARA ROAD, PUNE. - 411009	RAHURI 1877. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), TRIMURTI CRANE SERVICE, NAGAR-MANMAD ROAD, RAHURI, MAHARASHTRA. - 413705 PH :9420036767.	SASWAD 1890. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-03), SOLAPUR HIGHWAY, SASWAD, DIST. PUNE - 412301	SHIRWAL 1899. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO.175, A/P SHINDEWADI, SHIRWAL-BHOR ROAD, SHIRWAL, TAL KHANDALA, DISTT. SATARA - 412801 PH :9637399003.
1866. EXCELL AUTOVISTA PRIVATE LIMITED (1917-01), GATE NO.1232, 10TH MALL, PUNE SASWAD ROAD, VILLAGE - WADKI, TAL - HAVELI, DIST PUNE. - 412308	RAJAPUR 1878. JAGRUT MOTORS PRIVATE LIMITED (-01), SURVEY NO. 14/8, TARALWADI, RAJAPUR, DIST: RATNAGIRI - 416702	SATANA 1891. SHAAN CARS PVT LTD (-01), GAT NO 322/2/A/7, PUNDLIK NAGAR MALEGAON ROAD, AT POST SATANA DIST NASHIK - 423301 - 423301 PH :9922969656.	SHRIGONDA 1900. MAHALAXMI AUTOMOTIVE PVT. LTD. (-01), GAT NO.237/1/1/1., RAILWAY STATION ROAD,VILLAGE SHREEGONDA, - 413701
1867. KOTHARI AUTO WHEELS PVT LTD (1984-06), SURVEY NO.46, HISSA 9/1 (CITY SURVEY NO.6181+6180), WADGAON SHERI, CHANDAN NAGAR, PUNE NAGAR ROAD, TAL-HAVELI, PUNE. - 411014 PH :8411003631.	RAJGURUNAGAR 1879. MY CAR (PUNE) PVT LTD (-01), SURVEY NO.94, SANDBHORWADI, NEAR TUKAI MANDIR, PUNE-NASIK HIGHWAY, TAL-KHED, RAJGURUNAGAR DISTT. PUNE. - 410505 PH :9112231553.	SATARA 1892. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), PLOT NO. B-2,OLD MIDC,SATARA - 415002	SHRIRAMPUR 1901. KANKARIYA AUTOMOBILES PRIVATE LTD (-01), S.NO.139/1/3, NEAR NAKA NO.4, SANGAMNER ROAD, SHRIRAMPUR DISTT. AHMEDNAGAR - 413709 PH :9420494543.
1868. SUMANKIRTI CARS PVT LTD (1915-19-02), SURVEY NO. 9, NEAR BALEWADI SPORTS STADIUM MUMBAI-BANGALORE HIGHWAYS, MAHALUNGE PUNE, MAHARASHTRA. - 411045 PH :8551990106.	RAMTEK 1880. SEVA AUTOMOTIVE PVT LTD (-01), MOUZA NO 275, P H NO 24, GRAM PANCHAYAT - MANSAR,TEHSIL - RAMTEK, DISTRICT - NAGPUR, MAHARASHTRA. - 441401 PH :7758028060.	SAVNER 1893. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), PLOT NO. B-2,OLD MIDC,SATARA - 415002	SIKRAPUR
1869. MY CAR (PUNE) PVT LTD (1918-19-01), GAT NO. 625, HISSA NO. 1/3/1, VILLAGE - KURULI, TALUKA - KHED, CHAKAN, DISTRICT - PUNE. - 410501 PH :7755900000.	RATNAGIRI 1881. JAGRUT MOTORS PRIVATE LIMITED (-01), D-25, MIDC MIRJOLE,MAHARASTRA,RATNAGIRI - 415639		
1870. WONDER CARS PVT LTD (1903-04), SURVEY NO. 20, HISSA NO. 1/1/2, THERGAON, BAL KRISHNA MANGAL KARYALAYA, TALUKA - MULSHI, DANGE CHOWK, PUNE - 411 033. - 411033 PH :7887883311.	ROHA 1882. EXCELL AUTOVISTA PRIVATE LIMITED (-01), SHOP NO. 1 & 2, PANCHARATNA APARTMENTS, ROHA, ROHA KOLAD ROAD, RAIGAD - 402109 PH :9209200073.		

Dealer Workshop (AS ON 31.01.2026)

1902. EXCELL AUTOVISTA PRIVATE LIMITED (-01), AT POST SHIKARPUR MALTHAN PHATA, OPP. CHAURASIYA CHANA CENTER, PUNE NAGAR ROAD, TALUKA SHIRUR, DIST. PUNE, PIN-412208, PUNE - 412208 PH :9146194973.	1914. NAVNIT MOTORS PVT LTD (3908-39-02), B R T PLOT ,THANE (W), MAHARASHTRA - 400607	1925. EXCELL AUTOVISTA PRIVATE LIMITED (-01), GAT NO-244, VILLAGE-SORTAPWADI, TALUKA -HAVELI, JURLIKANCHAN, DIST-PUNE, PIN-412201 - 412201 PH :8097452280.	WADA
SILLOD	1915. VELOX MOTORS PVT LTD (-02), NEW SURVEY NO. 17/1/18, NEAR BLUE ROOF CLUB, VILLAGE -OWALE, GHODBUNDER ROAD, THANE (W). - 400615	VADUJ	1936. SHIVAM AUTOZONE INDIA PVT LTD (-01), SURVEY NO-133/7/1, SAIKRUPA BUILDING, WADA-BHIWADI ROAD, VILLAGE-GANDHARE, TAL-WADA, DIST -PALGHAR 421303. - 421303
1903. PAGARIYA AUTO PVT LTD (2103-04), PLOT NO. 19/20, SURVEY NO. 386, AURANGABAD NAKA, SILLOD, AURANGABAD - 431112 PH :8600037213.	1916. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (3915-39-01), BRILLIANT COMPLEX, WESTERN EXPRESS HIGHWAY, MIRA ROAD, THANE- 401107. - 401107 PH :8591942704.	1926. CHOWGULE INDUSTRIES PRIVATE LIMITED (-03), KALEVASTI, VADUJ DAHIWADI ROAD , VADUJ - 415506 PH :8888866659.	WAGHOLI
SINNAR	1917. VELOX MOTORS PVT LTD (3914-39-01), PLOT NO: A-66, ROAD NO 21, NEHRU NAGAR, WAGLE INDUSTRIAL ESTATE, THANE WEST, MAHARASHTRA - 400604	VAIJAPUR	1937. SAI SERVICE PRIVATE LIMITED (1901-04), GAT NO 2406/1440, VILLAGE- WAGHOLI,TAL- HAVELI, DIST- PUNE - 412207
1904. SHAAN CARS PVT LTD (3703-03), A-24, MIDC AREA MALEGAON,SINNAR TAL- SINNAR., - 422103	TITWALA	1927. PAGARIYA AUTO PVT LTD (-01), NEAR SUBHASH BUNGLOW, STATION ROAD, VAJJAPUR, AURANGABAD. - 423701 PH :9922994237.	WAI
SOLAPUR	1918. AHER AUTOPRIME LLP (-01), SURVEY NO. 23/2, SHOP NO. 3, NEAR GOVELI, TITWALA ROAD, GHOTSAI, TITWALA, 421301, MAHARASHTRA - 421301 PH :18008334369.	VASAI	1938. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), GAT NO. 407, A/P SHENDURJANE, MIDC ROAD, NEAR HOTEL GANDHARVA, OPP. DHOM LEFT CANAL, TAL - WAI, DISTT. SATARA - 412803 PH :8380080501.
1905. CHAVAN MOTORS DIVISION INDIA PVT LTD (-02), 150, AKALKOT ROAD,OPP. SVCS HIGH SCHOOL,SOLAPUR - 413006	TRIMBAK	1928. SAI SERVICE PRIVATE LIMITED (-01), ANDRADESH BHAVAN, SURVEY #27 A,NEAR UMELA PHATAK, VASAI (WEST), DIST. THANE, MAHARASTRA - 401202	WALUJ
1906. CHAVAN MOTORS DIVISION INDIA PVT LTD (-01), 18.39, INDUSTRIAL ESTATE,HOTAGI ROAD,SOLAPUR, - 413224 PH :880577881.	1919. SHAAN CARS PVT LTD (-01), SURVEY NO. 260/3, OPPOSITE MSEB OFFICE, NEAR GOVT. GEST HOUSE; SWAMI SAMARTH BUS STOP; TRIMBAKESHWAR-NASHIK HIGHWAY; AT POST/TAL: TRIMBAKESHWAR DIST: NASHIK PIN: 422212 - 422212	1929. SAI SERVICE PRIVATE LIMITED (-03), C/O MR. KENNETH NICHOLAS D'SOUZA, SURVEY NO-89, SATIVALI ROAD, VILLAGE-WALIV, VASAI (EAST), DIST-PALGHAR, MAHARASHTRA, PIN-410208 - 401208	1939. PAGARIYA AUTO PVT LTD (2103-03), E-16,WALLUJ,AURANGABAD - 431001 PH :9860999466.
1907. CHAVAN MOTORS DIVISION INDIA PVT LTD (-06), PLOT NO.95, IND. ESTATE, HOTAGI ROAD, SOLAPUR - 413003 PH :8805986826.	TUMSAR	1930. SAI SERVICE PRIVATE LIMITED (-04), SURVEY NO. 152, VASAI MUMBAI HIGHWAY, BEHIND INDIA OIL PETROL PUMP, SASUNAVGARH - 401208	WARANANAGAR
TALASARI	1920. AUTOMOTIVE MANUFACTURERS PVT LTD (-01), GAT NOS. 1350/149 & 1350/150, VILLAGE TUMSAR, TQ TUMSAR, DIST.- BHANDARA, STATE-MAHARASHTRA - 441912 PH :7391075992.	VASIND	1940. SAI SERVICE PRIVATE LIMITED (-01), GAT NO :1122/A, KODOLI, TALUKA: PANCHALA, DIST. KOLHAPUR - 416114 PH :9923204173.
1908. SHIVAM AUTOZONE INDIA PVT LTD (-01), SURVEY NO. 191/1 PLOT NO. 5, AT-POST - VADAVALI, NH-8, TALASARI, THANE, MAHARASHTRA - 401606	ULWE	1931. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (-01), NISARG GARDEN RESORT, MUMBAI NASHIK HIGHWAY NH3,VASIND WEST, - 421601	WARDHA
TALEGAON DABHADE	1921. MY CAR (PUNE) PVT LTD (-01), SURVEY NO- 97/8, HOUSE NO-1498, A/P JASAI, ULWE, TEHSIL-URAN, DIST-RAIGAD, PIN NO-410206. - 410206	VELHE	1941. SEVA AUTOMOTIVE PVT LTD (2002-02), GOPURI CHOWK ,OPP. BANK OF INDIA COLONY, NAGPUR ROAD, WARDHA - 442001
1909. MY CAR (PUNE) PVT LTD (-01), SR.NO.113, HISSA NO.1/32/A, MUMBAI PUNE OLD HIGHWAY, MAVAL, TALEGAON - 410506 PH :9730855855.	UMADI	VIKRAMGADH	1942. SEVA AUTOMOTIVE PVT LTD (2002-05), PLOT NO. 177, WARDHA-NAGPUR HIGHWAY, AT. PAVNAR, TEHSIL - WARDHA, DIST.-WARDH, PIN-442111, MAHARASHTRA - 442111 PH :7720009444.
TASGAON	1922. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT LTD) (-01), SHETKARI MARKET, NEAR ISHA HOTEL, TASGAON-SANGLI ROAD, TALUKA - TASGAON, DIST.-SANGLI - 416312 PH :8275030748.	1933. SHIVAM AUTOZONE INDIA PVT LTD (-01), NEAR GOVERNMENT DISPENSARY HOSPITAL, DAHANU ROAD, TEHSIL-VIKRAMGADH, DIST-PALGHAR-401605 - 401605 PH :8082551080.	WARUD
TEMBHURNI	UMBRAJ	VIRAR	1943. ASPA BANDSONS AUTO (P) LTD (-04), SURVEY NO. 50/3, SETURJANAGHAT ROAD, TALUKA: WARUD, DIST. AMRAWATI - 444906 PH :7248925687.
1911. CHAVAN MOTORS DIVISION (I) PVT LTD (-01), GAT NO.560/2/A,OLD PUNE ROADNEAR SUMAN THEATRE, TEMBHURNI - 413221	1923. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), SHOP-4,5,6 - GANRAJ COMPLEX, GAT NO. -213, UMBRAJ, TAL-KARAD, DIST-SATARA - 415109	1934. SAI SERVICE PRIVATE LIMITED (-02), SURVEY NO 16, AGASHI ROAD, PADMAN NAGAR, VIRAR-WEST, DISTT. PALGHAR. - 401301	WASHIM
THANE	UNDRI, PUNE	VITA	1944. ASPA BANDSONS AUTO (P) LTD (-02), NEAR RAILWAY CROSSING,HIGOLI ROAD,WASHIM, - 444505
1912. PRAKASH AUTO PVT LTD (3903-39-01), U NO-3,SHEET NO. 30,VITHALWADI STATION ROAD, ULHASNAGAR - 421003	1924. KOTHARI AUTO WHEELS PVT. LTD. (-07), 312/1/11, KATRAJ BYPASS ROAD, OPP. INDIAN OIL PETROL PUMP, URALI - 412307	1935. CHOWGULE INDUSTRIES PRIVATE LIMITED (-01), S NO. 900, HISSA NO. 1.2,3/1/2, SANGLI VITA ROAD, VITA, TALUKA - KHANAPUR, DISTRICT - SANGLI, MAHARASHTRA - 415311 PH :8888870120.	1945. ASPA BANDSONS AUTO (P) LTD (-06), B-31, HINGOLI ROAD, MIDC-WASHIM, PIN-444505. - 444505
1913. FORT POINT AUTOMOTIVE CARS PVT LTD (3906-39-01), KOTHARI WAREHOUSE NO. 11,MANPADA, CHATASAR,THANE - 400607	URALI KANCHAN		YAVATMAL
			1946. HIMALAYA CARS (-01), OPPOSITE RAUT PETROL PUMP, DARWHA ROAD, YAVATMAL, MAHARASHTRA - 445001
			YEOLA

1947. SEVA AUTOMOTIVE PVT LTD (-01), GAT NO. 65-A, PLOT NO. 41, AHMED NAGAR-MANMAD ROAD, NEAR TEHSIL OFFICE, YEOLA, TALUKA - YEOLA, DISTRICT - NASHIK, MAHARASHTRA. - 423401
PH :9130033944.

YEWAT

1948. MAHALAXMI AUTOMOTIVES PVT LTD (-01), SOLAPUR PUNE NATIONAL HIGHWAY, SAHAJAPUR, YEWAT, TALUKA: DAUND, DISTT: PUNE (MAHARASHTRA). - 412202
PH :8308818946.

MANIPUR

BISHNUPUR

1949. EASTERN MOTORS (-01), BISHNUPUR BAZAR, TIDIM ROAD, BISHNUPUR DISTT. MANIPUR. - 795126

CHANDEL

1950. EASTERN MOTORS (-01), KAKCHING LAMKHAU, AH1 (INDO BURMA ROAD), CHANDEL (MANIPUR) - 795103

IMPHAL

1951. EASTERN MOTORS (7401-74-01), CHINGMEIRONG EAST, IMPHAL, MANIPUR - 795001
PH :8415945626.
1952. EASTERN MOTORS (7401-74-02), NH.39, CHINGMEIRONG, WEST, IMPHAL - 795010
PH :8415945626.
1953. SAMADON ENTERPRISE (-01), 82 GHARI MAKHA LEIKAI, IMPHAL WEST, MANIPUR. - 795140
PH :7005987123.

JIRIBAM

1954. EASTERN MOTORS (-01), AT HILGHAT, IMPHAL SILCHAR ROAD, JIRIBAM - 788104
PH :8415945626.

MAYANG

1955. EASTERN MOTORS (-01), MAYANG IMPHAL, THANA-AVANG, LEIKAI, OPPOSITE PRAYABATI COLLEGE, PIN-795132, MANIPUR - 795132

SENAPATI

1956. EASTERN MOTORS (-01), DIST.-COUNCIL (POULEA) VILLAGE, P.O. - SENAPATI, SENAPATI, MANIPUR. - 795106
PH :8415945626.

THOUBAL

1957. EASTERN MOTORS (-01), THOUBAL, ATHOKPAM KHUNOLI, NEAR D.C. OFFICE COMPLEX, THOUBAL, MANIPUR - 795138

UKHRUL

1958. SAMADON ENTERPRISE (-01), KAMPHASOM, UKHRUL, MANIPUR - 795142
PH :9774216305.

MEGHALAYA

BHAITBARI

1959. RANI MOTORS (-01), NEW BHAITBARI, WEST GARO HILLS, MEGHALAYA, (PATTA NO - 89 SONG - NEKEKONA, MOZUZA NO - VI-3 LOT) - 794104

BHOIRYMBONG

1960. RANI MOTORS (-01), VILLAGE - UMROI MADAN, DISTRICT - RI BHOI, MEGHALAYA. - 793103
PH :9774478281.

JOWAI

1961. RANI MOTORS (-01), LADTHADLABHO, OPP. PWD OFFICE, JOWAI, DIST - JAINTIA HILLS, MEGHALAYA - 793150
PH :7085849525.

KHLIEHRIAT

1962. BANALARI WORLD CARS (8502-03), JOWAI-SICAR ROAD, MEGHALAYA, KHLIEHRIAT - 793150

MAWKYRWAT

1963. RANI MOTORS (-01), DAK BANGLA, MAWKYRWAT, WEST KHASI HILLS, MEGHALAYA - 793114
PH :9856005544.

MAWNGAP

1964. BANALARI WORLD CARS (-01), LAITPYNTER, SHILLONG NONGTONG ROAD, MAWNGAP, DIST. -EAST KHASI HILLS, MEGHALAYA. - 793121

MOIRANG

1965. SAMADON ENTERPRISE (-01), MOIRANG LAISHANGBAM LEIKAI, PO AND PS: MOIRANG, DIST- BISHNUPUR, MANIPUR - 795133
PH :7005987122.

MYLTIEM

1966. BANALARI WORLD CARS (-01), MADANIENG SYIEM, MYLTIEM, SHILLONG CHERRAPUNJI ROAD, DISTT: EAST KHASI HILLS, MEGHALAYA. - 793009

NONGPOH

1967. RANI MOTORS (8501-05), NEAR D.T.O. OFFICE, G.S. ROAD, NONGPOH, RIBHOI DISTT. - 793102
PH :9774478281.

NONGSTON

1968. RANI MOTORS (8501-04), OPP.IRANI PETROL PUMP, NEW NONGSTEIN, DISTRICT-WEST KHASI HILLS, MEGHALAYA - 793119
PH :9856005544.

PYNURSULA

1969. BANALARI WORLD CARS (-01), PHLANGSHLAIN MAIN ROAD, SHILONG DAWKI, PYNURSULA, DISTRICT - EAST KHASI HILLS, MEGHALAYA - 793110 - 793110
PH :8415942700.

SHILLONG

1970. RANI MOTORS (8501-85-01), SUNNY HILLS, GARIKHANA, G.S.ROAD, SHILLONG - 793014
PH :9862099400.
1971. RANI MOTORS (8501-85-02), MAWBLEI, NH-44, SHILLONG JOWAI ROAD, MEGHALAYA. - 793021
PH :8014734780.
1972. BANALARI WORLD CARS (8502-85-01), MAWLAI NONGKWAR, G.S. ROAD, SHILLONG - 793017

TURA

1973. RANI MOTORS (-01), AGILLANGRE, ARAIMILE, PO NEW TURA, TURA - 794101
PH :7005563791.

UMSAW

1974. BANALARI WORLD CARS (-01), UMSAWKHWAN RAID MAWBUH, MYLTIEM SYIEMSHIP, RI BHOI DISTRICT, MEGHALAYA - 793123

MIZORAM

AIZWAL

1975. GIG MOTORS (9103-91-01), EDENTHAR, AIZAWL, MIZORAM. - 796001
PH :8974559065.

LUNGLEI

1976. GIG MOTORS (-01), RAMTHAR VILLAGE, LUNGLEI, DISTRICT-LUNGLEI, MIZORAM - 796701
PH :8974559065.

NAGALAND

DIMAPUR

1977. PROGRESSIVE MOTORS (3201-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR - 797112
PH :7005254089.

1978. SEIYE AUTO (-02), 6TH MILE, NEAR ESAF BANK, CHUMOUKEDIMA, DIMAPUR, NAGALAND - 797112

KOHIMA

1979. SEIYE AUTO PRIVATE LIMITED (-01), TSIECIE, NH-29, PHEK ROAD, KOHIMA, NAGALAND - 797001

MOKOKCHUNG

1980. PROGRESSIVE MOTORS (-01), SUNGKONMEN ROAD, MOKOKCHUNG, NAGALAND. - 798601
PH :87877325534.

TUENSANG

1981. PROGRESSIVE MOTORS (-01), YUNPHANG, TUENSANG - 798612

TULI

1982. SEIYE AUTO PRIVATE LIMITED (-01), TULYONGWARD TULI TOWN NEAR CO. OPERATIVE BANK - 798618

WOKHA

1983. PROGRESSIVE MOTORS (-01), NIROPEN COLONY, WOKHA-797111, NAGALAND - 797111
PH :9774070707.

ODISHA

ANANDAPUR

1984. JYOTE MOTORS PVT LTD (-01), KHATA NO. 246/407, PLOT NO. 76, P.S. - GHASIPURA, MOUZA - SUDUSUDIA, DISTRICT - KEONJHAR, ANANDPUR, ODISHA. - 758021

ANGUL

1985. ODYSSEY MOTORS PVT LTD (-01), AT/PO KULAD (NEAR NALCO CPP PLANT), KANDASAR, NALCO NAGAR, ANGUL (DISTT: ANGUL). - 759145

ATTABIRA

1986. APARNAA MOTORS (A UNIT OF APARNAA VAHAN PVT LTD) (-01), LADERPALLI MAIN ROAD., ATTABIRA, DIST.BARGARH, - 768027

ATTAGARH

1987. TUSHI MOTORS PVT LTD (-01), KHATA NO 212/420, MOUZA :BIRAKISHOREPUR ATHAGARH, DISTRICT: CUTTACK - 754029
PH :7504890838.

BALASORE

1988. JYOTE MOTORS PVT LTD (-01), PLOT NO. 276, GANESHWARPUR-NH-5, POST-JANUGANJ VIA REMUNA, DIST.-BALASORE - 756019

BALIGUDA

1989. SKY AUTOMOBILES (-01), KHATA NO.-370/451, TEHSIL-K NUAGAN, GEGURPADAR, BALIGUDA, - 762103

BALUGOAN

1990. JYOTE MOTORS PVT LTD (-01), .M/S PLOT NO 758/31, KHATA NO 350/30, MOUZA-GOBARDHANPUR, BALUGOAN, DISTRICT-KHORDA, ODISHA-752030 - 752030
PH :9776615001.

BAMRA

1991. ODYSSEY MOTORS PVT LTD (-01), M/S ODYSSEY MOTORS, NEAR SATSANG KENDRA, DUMERMUNDA COLLEGE ROAD, BAMRA, GOVINDPUR-768221. - 768221
PH :9439314464.

BANEI

1992. ORBIT MOTORS PVT LTD (-01), PLOT NO -1683/2508, BBABUNJAGAON, KHATA NO-177766, UPARGADA-98, ODISHA - 770038

BARBIL

1993. JYOTE MOTORS PVT LTD (-01), PLOT NO. 507, SUNDARA, UNIT NO. 13, P.S. BARBIL, ODISHA - 758035	2007. JYOTE MOTORS PVT LTD (-01), A/62, NAYAPALLI, NH-5, BHUBANESHWAR, ORISSA-751003 - 751003	JAGATSINGHPUR	2031. LEGEND CARS PRIVATE LIMITED (-01), KHATA NO 204/155, PLOT NO 202, DHARABADA MOUZA, NABRANGPUR ODISHA - 764059
BARGARH	2008. NARAYANI MOTORS PVT LTD (-03), KHATA NO-652, PLOT NO 4493, MAUZA PANDRA THANA-RASULGARH, BHUBANESHWAR - 751025	2020. NARAYANI MOTORS PVT LTD (-01), KHATTA NO. 827/221 & 827/222, PLOT NO. 1197 & 1199/3065, MOUZA-MARKHANDPUR, PO PUNABGA, DISTT. JAGATSINGHPUR, ODISHA - 754103	NAYAGARH
1994. ODYSSEY MOTORS PVT LTD (-04), AT/PO -BARGARH, NH-6, DISTT.-BARGARH, ORISSA - 768028 PH -8908944206.	2009. JYOTE MOTORS PVT LTD (-05), PLOT NO. 219/1088, AT-BADADHANPUR, PO-SISHUPALGARH, PURI BYPASS ROAD, BHUBANESWAR, KHURDHA - 751002	JAIPUR	2032. JYOTE MOTORS PVT LTD (-02), PLOT NO. 1319/3750, KHANDAPADA, NAYAGARH - 752069
BARIPADA	BOLANGIR	2021. SKY AUTOMOBILES (6701-05), P.O JAHNA, P.S KORAI, KEONJHAR ROAD, JAIPUR, ORRISIA - 7553019	NETAJI NAGAR, CUTTACK
1995. JYOTE MOTORS PVT LTD (-02), PLOT NO. 90/523/904, SWARUP VILLA, NH-5, BARIPADA - 757001	2010. ODYSSEY MOTORS PVT LTD (-03), NH-201, MADHIAPALI, SAMBHALPUR ROAD, BOLANGIR, ORISSA - 767001 PH -8895418122.	JALESWAR	2033. TUSHI MOTORS PVT LTD (-02), PLOT NO- 819/1021, MOUZA-UNIT 39, , NETAJI NAGAR - 753014
BELPAHAR	BOUDH	2022. JYOTE MOTORS PVT LTD (-01), KHATA NO. 422/744, PLOT NO. 2304 AT P.O. - NAYABAZAR, JALESWAR, DIST. - BALASORE, ODISHA. - 756032	NIMPARA
1996. APARNAA MOTORS (A UNIT OF APARNAA VAHAN PVT LTD) (-01), NH 49,, MAHIMA CHOWK, - 768217	2011. ODYSSEY MOTORS PVT LTD (-01), BOLANGIR MAIN ROAD, BIJU PATNAIK CHOWK, NEAR SARASWATI PETROL PUMP, BOUDH - 762014	JEYPORE	2034. NARAYANI MOTORS PVT LTD (-01), PLOT NO. 345/1344, GANESH BAZAR, NIMPAPARA, DISTRICT - PURI, ODISHA. - 752106
BERHAMPUR	CHANDIKHOLE	2023. LEGEND CARS PRIVATE LIMITED (-03), SOURAGUDA, JEYPORE, DISTT-KORAPUT, ORISSA - 764001	NIRGUNDI
1997. SKY AUTOMOBILES (-01), PLOT NO.80/1191 DHARMA NAGAR, MAIN ROAD, BERHAMPUR - 760002	2012. SKY AUTOMOBILES (-01), PLOT NO.285/3, SHANTI MANDAP MOUZA -SUNGUDA, TEHSIL-DARPANI, PO CHANDIKHOL, DIST. -JAIPUR, ODISHA, - 755044	JHARSUGUDA	2035. NARAYANI MOTORS PVT LTD (-04), KHATA NO 251/255, PLOT NO 233, MALGOWDINI-MOUZA BLITERUA, NIRGUNDI, DISTRICT-CUTTACK, ORISSA. - 754025
1998. SKY AUTOMOBILES (-02), PLOT NO. 876, WESTERN ROW NH-5, KONISI HATO, VILLAGE - KONISI, BERHAMPURE, GANJAM, ODISHA. - 761008	CUTTACK	2024. ODYSSEY MOTORS PVT LTD (-01), KHATA NO. 466/502, PLOT NO. 966, JHARSUGUDA TOWN, UNIT NO. 7, SARBAHAL P.S. JHARSUGUDA, ORISSA - 768201	PADAMPUR
BHADRAK	2013. SKY AUTOMOBILES (6701-67-02), BHANPUR, NH-5, CUTTACK - 753011	KAMAKHYANAGAR	2036. ODYSSEY MOTORS PVT LTD (-01), M/S ODYSSEY MOTORS, CHRAPALLI PADAMPUR, NEAR REGENCY HOTEL, DISTRICT-BARGARH, ORISSA - 770039 PH -9439314464.
1999. JYOTE MOTORS PVT LTD (-01), PLOT NO. 14/4837, KHATA NO. 1345/1087, TRISHALPUR, CHARMPA, BHADRAK, ODISHA - 756101	2014. TUSHI MOTORS PVT LTD (6702-01), PLOT NO. C-14, PLOT NO.C-13 ,INDUSTRIAL ESTATE ,KHAJURIA,TAHASIL - CUTTACK SADAR ,CUTTACK DISTRICT,BHUBANESWAR - 753001 PH -9692912345.	2025. SKY AUTOMOBILES (-01), ALUTAMA, KAMAKHYANAGAR, DHENKANAL ODISHA - 759018	PALLAHARA
BHAWANIPATNA	2015. SKY AUTOMOBILES (6701-67-07), LAXMINAGAR BIDANASI - 753014	KANTABANJHI	2037. ODYSSEY MOTORS PVT LTD (-01), KHATA NO. 260, PLOT NO. 998/3720, PAHALLARA, ODISHA. - 759119
2000. LEGEND CARS PRIVATE LIMITED (-02), NH-201, KESINGA ROAD, BHAWANIPATNA - 766001	DEOGARH	2026. ODYSSEY MOTORS PVT LTD (-01), SH-42, UDING, KANTABANJHI, ODISHA-767039 - 767039	PANCHGAON
BHUBANESHWAR	2016. ORBIT MOTORS PVT LTD (-01), KHATA NO. 270, OI MOUZA, DEOGARH, ODISHA - 768108	KARANJUIA	2038. ODYSSEY MOTORS PVT LTD (-01), KHATA 66/136 BEARING PLOT NO. 565/980 (4 SHOPS) KISAM -GHARABARI, MOUZA PANCHGOAN, TAHSIL -LAKHANPUR ,DIST-JHARSUGUDA, ODISHA - 768226
2001. NARAYANI MOTORS PVT LTD (-01), 217, CUTTACK ROAD, JHARPARA, BHUBANESWAR - 751006	DHENKANAL	2027. JYOTE MOTORS PVT LTD (-01), KARANJAGOLEI., KARANJUIA, MAYURBHANJ, - 757037	PANIKOLI
2002. JYOTE MOTORS PVT LTD (-01), A-62, NAYAPALLI, NEAR CRPF SQUARE, BHUBANESWAR - 751003	2017. SKY AUTOMOBILES (6701-04), PLOT NO-136/1103, KATHAGARA , NEARASSAM OIL, NH-42, DHENKANAL. - 759001	KENDRAPARA	2039. TUSHI MOTORS PVT LTD (-01), PLOT NO. 3211/3776, AT-SOTI, PO-PANIKOLI - 755043
2003. SKY AUTOMOBILES (-01), PLOT NO.-435/1866, NEAR KIIT SQUARE PATIA, BHUBANESHWAR, - 751022	DUNGURIPALI	2028. JYOTE MOTORS PVT LTD (-01), M/S JYOTE MOTORS, KHATA NO: 351/85, PLOT NUMBER 633, MOUZA-ALBANKA, KENDRAPARA, ODISHA. - 754208 PH -9776615001.	PARADEEP
2004. NARAYANI MOTORS PVT LTD (-02), PLOT NO 56 AND 57, RASULGARH, BHUBANESHWAR, ODISHA - 751010	2018. APARNAA MOTORS (A UNIT OF APARNAA VAHAN PVT LTD) (-01), NH-26, BARGARH-BOLANGIR HIGHWAY, , DUNGURIPALI, DIST. SONEPUR, ODISHA - 767023	KEONJHAR	2040. NARAYANI MOTORS PVT LTD (-01), PLOT NO. 1438, UDAYA VIHAR, NEAR DO CHOWKI SQUARE, PARADEEP, ODISHA - 754141
2005. SKY AUTOMOBILES PVT LTD (-04), PLOT NO. 22 & 23, SECTOR-A, ZONE-D, MANCHESWAR INDUSTRIAL ESTATE AREA, BHUBANESHWAR - 751010	GANDAI	2029. JYOTE MOTORS PVT LTD (-01), NH 215, DHRUPADA, BARBIL ROAD, KEONJHAR. - 758001	PARLAKHEMUNDI
2006. SKY AUTOMOBILES (-02), KHATA NO. 457/675, PLOT NO. 543, 756, 789 AND 546, SRIVIHAR, INFRONT OF IOCL OFFICE, P.S. -CHADRASHEKARPUR, BHUBANESHWAR, ODISHA. - 751024	2019. SPARSH AUTOMOBILES PVT LTD (-01), M/S SPARSH AUTOMOBILES, VWARD NO - 7, NEAR KRISHI UPAJ MANDI, GANDAI RAJNANDGAON ROAD, GANDAI - 491888 - 491888 PH -9926626662.	KUCHINDA	2041. SKY AUTOMOBILES (-01), PLOT NO. 273, KHATA NO. 78, WARD NO. 1, PARLAKHEMUNDI, GAJAPATI, ORISSA. - 761211 PH -9776999977.
		2030. ODYSSEY MOTORS PVT LTD (-01), /S ODYSSEY MOTORS, PLOT NO 146, KHATA NO 76/9, MOUZA-KUNDAPOSHI, NEAR KUNDIESHWAR MANDIR, KUCHINDA, SAMBULPUR. - 768222 PH -9439314464.	PHULBANI
		NABRANGPUR	2042. SKY AUTOMOBILES (-01), PLOT NO. 54/533, GUDRISAH, KHAJURIPADA, DISTRICT - KANDHAMAL ODISHA. PIN CODE: 762001 - 762001 PH -9776900333.

PURI 2043. NARAYANI MOTORS PVT LTD (-01), PLOT NO.1797/2449, KHATA NO.1874/32, AT. BATAMANGLA,PO HAREKRISHNAPUR, BATAGAON, PURI, ODISHA - 752002	TANGI 2055. SKY AUTOMOBILES (-01), KHATA NO 731/18, PLOT NO.107,CHAMPAGARH NH 5,TANGI, DISTRICT - KHORDHA, - 752023 PH :9776900333.	2065. SWANI MOTORS PVT LTD (-01), KHASRA NO. 71, AJNALA-AMRITSAR ROAD, VILLAGE - BHARKA TARA SINGH, TEHSIL - AJNALA, DISTRICT - AMRITSAR, PUNJAB. - 143102 PH :8872001731.	2075. LOVELY AUTOS (3503-03), NAWASEHAR-JALANDHAR ROAD, BANGA - 144505 PH :9915028625.
RAIRANGPUR 2044. JYOTE MOTORS PVT LTD (-01), PLOT NO.177/2466, PURNAGHATI, RAIRANGPUR, DISTT.: MAYURBHANJ, ODISHA - 757046	TIRTOL 2056. NARAYANI MOTORS PVT LTD (-01), TIRTOL JADATIRA - 754137	AMRITSAR 2066. SWANI MOTORS PVT LTD (1701-17-01), 81,COURT ROAD, AMRITSAR - 143001	BANUR 2076. TRICITY AUTOS (-01), SANDHU MARKET NEAR SALES TAX BARRIER, BANUR RAJPURA HIGHWAY, BANUR, PUNJAB - 140601 PH :9988882330.
RAYAGADA 2045. LEGEND CARS PRIVATE LIMITED (-01), M/S LEGEND CARS, JK PUR ROAD, KOMTALPETA, NEAR ENFIELD SHOWROOM, RAYAGADDA, ODISHA - 765001 PH :7008771180.	TITLAGARH 2057. ODYSSEY MOTORS PVT LTD (-01), M/S PLOT NO 687/1216, MOUZA PIPALPADAR, TITLAGARH,BALANGIR, ODISHA - 767033 PH :9439314464.	2067. JAYCEE MOTORS PVT LTD (1704-17-01), 274 EAST MOHAN NAGAR, G.T.ROAD, AMRITSAR - 143006 PH :9780038335. 2068. RISHABH FOURWHEELS PVT LTD (1703-17-01), ADARSH SOAP COMPLEX, BATALA ROAD, AMRITSAR - 143004 PH :9914841577.	BARNALA 2077. MAX AUTOMOBILES (-01), NR. HANDIYAN CHOWK,MANSA BYE PASS,BARNALA,PUNJAB - 151001
ROURKELA 2046. ORBIT MOTORS PVT LTD (8701-87-01), VEDVYAS, NEAR PAAHADI BAR, ROURKELA,ORRISA - 769041	UDALA 2058. JYOTE MOTORS PVT LTD (-01), MOUZA - UDALA, TOWN UNIT NO. 7, NAGBANI, TEHSIL NO. 325, THANA NO. 110, DIST.-MAYURBHANJ, ODISHA. - 757041 PH :8249877935.	ANANADPUR SAHIB 2069. CM AUTO SALES PVT LTD (-01), VILLAGE MIYANPUR, NAINA DEVI ROAD, ANANADPUR SAHIB,TEHSIL ANANADPUR SAHIB, DISTT. ROPAR,PUNJAB - 140123 PH :9915022897.	BATALA 2078. PATHANKOT VEHICLEADES PVT LTD (-05), NEAR VMS INSTITUTE, SAID MUBARAK, GT ROAD, BATALA - 143505
SAMBHALPUR 2047. ODYSSEY MOTORS PVT LTD (-01), AINTHPALI, SAMBALPUR, ORISSA - 768004 PH :7381083571.	KARAIKAL 2059. SHENBAKA CARS PVT LTD (-01), R. S. NO. 173/3PT, T. S. NO. 9/5, WARD, L-BLOCK, NO. 3, KARAIKAL NAGORE MAIN ROAD, VILLAGE - ODUTHURAI REVENUE, NERAVY COMMUNE, KARAIKAL MUNICIPALITY, KARAIKAL. - 609602	APRA 2070. LOVELY AUTOS (-01), SAMRAI CHOWK PHILLAUR ROAD, VILLAGE - APRA, TEHSIL - PHILLAUR, DIST.-JALANDHAR, STATE - PUNJAB. - 144416 PH :9915020515.	BEGOWAL 2079. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), PELIA TOWN, BHADAS ROAD, WARD NO. 11, JALANDHAR ROAD, VPO. BEGOWAL, KAPURTHALA, PIN-144621, PUNJAB - 144621 PH :9779166004.
2048. APARNAA MOTORS (A UNIT OF APARNAA VAHAN PVT LTD) (-01), PLOT NO 969/4497 PANCHGACHIA SAMBALPUR - 768019 PH :8260966698.	2060. SHENBAKA CARS PVT LTD (-02), SURVEY NO # RS.NO:252, DOOR NO:192, VARICHIKUDY VILLAGE, PORAYAR SALAI,KARAIKAL, PONDICHERRY-609 609 - 609609	AUR 2071. LOVELY AUTOS (-01), KHATUNI NO. 479/588, KHASRA NO. 27/20/04(2-18), 21/2(2-10), VILLAGE - AUR, TEHSIL - NAWASHAR, DIST.-SBS NAGAR, STATE - PUNJAB. - 144417 PH :9915020510.	BHADSON 2080. HIRA AUTOMOBILES LTD (-01), VILLAGE CHASWAL, NABHA ROAD, BHADSON - 147202
2049. ODYSSEY MOTORS PVT LTD (-05), ODYSSEY MOTORS, AINTHPALI, SAMBALPUR	MADAGADIPET 2061. SHENBAKA CARS PVT LTD (-01), SURVEY NO. 129/4/A/2, MADAGADIPET REVENUE VILLAGE, MADAGADIPET, PONDICHERRY - 605107 PH :8220046178.	BAGHA PURANA 2072. REMIRA MOTORS PVT LTD (-01), BUILDING NO.68, OPP. SHINA ENCLAVE, MOGA ROAD, BAGHA PURANA, DISTT. MOGA, PIN-142038 - 142038 PH :7087025009.	BHAGTA BHAI KA 2081. TARA AUTOMOBILES (-01), NEAR SARPANCH HOUSE, BHAGTA BHAI KA, DISTRICT - BHATINDA. - 151206 PH :8437030666.
2050. LEGEND CARS PRIVATE LIMITED (-01), 1231/2076,KHATA NO 113/1503, MOUZA:LUNGURI,SEMILIGUDA. - 764036	PONDICHERRY 2062. SHENBAKA CARS PVT LTD (9601-96-01), 133/1A, MOOLAKULAM, VILLUPURAM MAIN ROAD, PONDICHERRY - 605010	BALACHAUR 2073. LOVELY AUTOS (-01), NEAR MCDONALD - GHUGGI JUNCTION), VPO-GARHI KANUGO, NAWANSHAHR CHANDIGARH HIGHWAY, CHANDIGARH ROAD, BALACHAUR, DISTRICT-S.B.S NAGAR, PUNJAB (NAWANSHAHR) - 144521	BHATINDA 2082. TARA AUTOMOBILES (7002-70-01), MANSA ROAD, OPP. I.T.I, BATHINDA - 151001
SOHELA 2051. ODYSSEY MOTORS PVT LTD (-01), KHATA NO 325/892, PLOT NO 396.7579, KISAM-GHARABARI, MOUZA-SOHELA, DIST-BARGARH, ODISHA - 768033	PUNJAB ABOHR 2063. TARA AUTOMOBILES (-01), SHREE GURU JAMBHESHWAR CHOWK, MALOUT SHREE GANGA NAGAR BYPASS, ABOHR, PUNJAB - 152116 PH :9876047847.	BALBEHRA 2074. DIVINE AUTOWORLD LLP (-01), NEAR HDFC BANK LTD., SAMANA ROAD, BALBEHRA - 147101 PH :9888341118.	BHOGPUR 2084. LOVELY AUTOS (-01), KHASRA NO. 31/114, 17/2 18/2 23, MAIN JALANDHAR-PATHANKOT HIGHWAY,OPP- AJIT PALACE, BHOGPUR - 144201
SORO 2052. JYOTE MOTORS PVT LTD (-01), PLOT NO 15/1269,KHATA NO 442, SORO, BALASORE, ODISHA STATE. - 756045 PH :9776615001.	ADAMPUR 2064. LOVELY AUTOS (-01), KHASRA NO.10/7/1, JALANDHAR-HOSHARPUR HIGHWAY, ADAMPUR DISTT. JALANDHAR - 144102	BANGA	BILGA
SUBARNAPUR 2053. ODYSSEY MOTORS PVT LTD (-01), KHATA NO. 32, MOUZA - SANJHINIK, SONEPUR (ALSO KNOWN AS SUBARNAPUR), DISTRICT - SUBARNPUR, ODISHA - 767017	AJNALA		
SUNDERGARH 2054. ORBIT MOTORS PVT LTD (-01), M/S ORBIT MOTORS, AT - PATRAPALI, PO SUNDERGARH, BY PASS ROAD, NEAR BJP OFFICE, SUNDERGARH - 770001 PH :8249354447.			

2086. LOVELY AUTOS (-01), VPO BILGA, NEAR GOVT. PRIMARY SCHOOL, TEHSIL PHILLAUR, JALANDHAR. - 144036 PH :9815069814.	2097. PLUTON DREAMWORKS PRIVATE LIMITED (-01), MOGA ROAD, NEAR HARYALI PETROL PUMP FEROZPUR PUNJAB. - 152001	2108. TARA AUTOMOBILES (-02), F.F. ROAD, NEAR THANA SADAR, JALALABAD - 152024 PH :9876047847.	2119. JAYCEE MOTORS PVT LTD (-01), KHASRA NO.12/20/2, 21/1 KHATA NO.212/186/229 GILL KHETI STORE, GT ROAD, VILLAGE-KATHUNANGAL, DISTT. AMRITSAR, PUNJAB - 143502
CHUNNI KALAN	GARHSHANKAR	JALLANDHAR	KHANNA
2087. HOSHIARPUR AUTOMOBILES (-01), NEAR RAJINDER MOTORS, SIRHIND-CHANDIGARH ROAD, VILLAGE CHUNNI, DIST. FATEHGARH SAHIB. - 140307	2098. HOSHIARPUR AUTOMOBILES (-02), OPP. COURT, CHANDIGARH ROAD, GARHSHANKAR, DIST. HOSHIARPUR - 144527	2109. LOVELY AUTOS (3503-35-01), DR. AMBEDKAR CHOWK, JALANDHAR CITY - 144001 PH :9915020515.	2120. HOSHIARPUR AUTOMOBILES (-01), VILLAGE-KAUNI, NEAR GILL PETROL PUMP, GT ROAD, KHANNA, DIST.-LUDHIANA, PUNJAB. - 141401 PH :9888716261.
DASUA	GHANAUR	2110. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (3506-35-01), OPP DPS SCHOOL, G.T. ROAD, JALANDHAR - 144010 PH :9779166004.	KHARAR
2088. HOSHIARPUR AUTOMOBILES (-04), OPP CHEEMA PETROL PUMP, G.T. ROAD, DASUYA - 144205	2099. DIVINE AUTOWORLD LLP (-01), WARD NO. 1, OPPOSITE OLD PETROL PUMP GHANAUR PATIALA ROAD, SUB TEHSIL - GHANAUR, TEHSIL - RAJPURA, DIST.-PATIALA, STATE - PUNJAB. - 140401 PH :9217048437.	2111. LOVELY AUTOS (-35-01), KHASRA NO. 24/20/4, B D ENCLAVE, VILLAGE - JALANDHAR, DIST. -JALANDHAR, PUNJAB. - 144001	2121. CM AUTO SALES PVT LTD (-03), NH-95, MORINDA ROAD,KHANPUR, KHARAR. DIST. MOHALI - 140301 PH :9915022878.
DERABASSI	GHAROTA	JANDIALA GURU	KOTKAPURA
2089. AUTOPACE NETWORK PVT LTD (-02), AT NH-2, NEAR DERABASSI, TOLL BARRIER-DERABASSI - 140507	2100. PATHANKOT VEHICLEADES PVT LTD (-01), VILLAGE AND PO GHAROTA, OPPOSITE PUNJAB GRAMIN BANK, TEHSIL & DISTT. PATHANKOT - 143533. - 143533 PH :8264105000.	2112. BABA AUTOS (-01), GT ROAD, NEAR TARN TARAN BYE PASS, JANDIALA GURU - 143115	2122. MAPSKO AUTO INDIA PVT LTD (-01), MOGA ROAD, NEAR GREEN DHABA OPPOSITE FUN PLAZA, KOTKAPURA, DISTRICT - FARIDKOT - 151204 PH :7347000518.
DEVIGARH	GHOMAN	JANDIALA MANJKI	LALRU
2090. HIRA AUTOMOBILES LTD (-01), CHANNA MOUR, PEHOWA PATIALA ROAD, DEVIGARH, DISTT. PATIALA (PUNJAB). - 147111	2101. PATHANKOT VEHICLEADES PVT LTD (-01), KHEWAT NO. 36, KHATAUNI NO. 122, KHASRA NO. 11/25 (7-18), VILLAGE - BALRAMPUR ADDA, KHASBA - GHOMAN. - 143514 PH :8054500130.	2113. LOVELY AUTOS (-01), SANT MARKET, JANDIALA-BUNDALA ROAD, VILLAGE - JANDIALA MANJKI, TEHSIL - NOORMAHAL, DISTRICT - JALANDHAR, PUNJAB. - 144033 PH :7087439797.	2123. AUTOPACE NETWORK PVT LTD (-01), VILLAGE - LALRU, DERA BASSI, SAS NAGAR MOHALI, PUNJAB. - 140501 PH :9815011669.
DHARAMKOT	GORAYA	JHANJERI	LUDHIANA
2091. REMIRA MOTORS PVT LTD (-01), JOSAN MARKET, DHARAMKOT, MOGA - 142042	2102. LOVELY AUTOS (-01), NEAR MILAN PALACE, G.T. ROAD, GORAYA. - 144409 PH :9417804049.	2114. AUTOPACE NETWORK PVT LTD (-01), STATE HIGHWAY 12A, JHANJERI, SAHIBZADA AJIT SINGH NAGAR, - 140307	2124. GULZAR MOTORS PVT LTD (6204-01), G.T.ROAD, DHOLEWAL, OPP. MILITARY CARMP, LUDHIANA - 141003 PH :9814160099.
DHILWAN	GURDASPUR	KAHNUWAN	2125. SANDHU AUTOMOBILES PVT LTD (6206-01), DHOLEWAL CHOWK, LINK ROAD, LUDHIANA - 141203 PH :9815600095.
2092. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), MIANI BAKARPUR,AMRITSAR ROAD, OPP-INDIAN OIL PETROL PUMP, DHILWAN DISTT KAPURTHALA - 144804 PH :9779166004.	2103. PATHANKOT VEHICLEADES PVT LTD (-03), V.P.O. BABRI NH-15, DIST. GURDASPUR - 143521	KALA SANGHAN	2126. LOVELY AUTOS (6209-01), BABA NAND SINGH NAGAR, NEAR AYALLI CHOWK, FEROZEPUR ROAD, LUDHIANA - 141001 - 141001
DORAHA	2104. PATHANKOT VEHICLEADES PVT LTD (-06), VPO - JEEWANWAL BABRI, NH-15, GURDASPUR (PUNJAB). - 143521 PH :9417900870.	2116. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), MAIN CHOWK, KALA SANGHAN, DISTRICT KAPURTHALA, PUNJAB - 144623 PH :9779166004.	2127. LOVELY AUTOS (-62-02), GILL ROAD, NEAR CANAL BRIDGE, LUDHIANA, PUNJAB
2093. GULZAR MOTORS PVT LTD (-01), G.T. ROAD, NEAR ARRICHAN CHOWK, DORAHA, DISTT. LUDHIANA, PUNJAB. - 141421 PH :9814191122.	HOSHIARPUR	KALANAUR	2128. LOVELY AUTOS (6209-03), OPPOSITE BHAI BALA SAHIB GURUDWARA, VILLAGE DAD, PAKHOWAL ROAD, LUDHIANA, PIN-141001, PUNJAB - 141001 PH :9815069814.
FARIDKOT	2105. HOSHIARPUR AUTOMOBILES (-01), SINGRIWALA, JALLANDHAR ROAD, HOSHIARPUR, - 146001	2117. PATHANKOT VEHICLEADES PVT LTD (-01), KALANAUR-GURDASPUR ROAD, VILLAGE KALANAUR, TEHSIL AND DISTRICT GURDASPUR, PUNJAB - 143512 PH :9417900879.	2129. LOVELY AUTOS (6209-62-04), EURO MART COMPLEX, HAMBRAN ROAD, NEAR RADHA SWAMI SATSANG BHAWAN - 141008 PH :9815069814.
2094. MAPSKO AUTO INDIA PVT LTD (-01), FARIDKOT- KOTKAPURA ROAD, FARIDKOT, PUNJAB - 151204	JAGRAON	KAPURTHALA	2130. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (6210-62-01), GT ROAD, OPPOSITE GOYAL HYUNDAI, VILLAGE DHANDHARI KHURD, LUDHIANA, DISTRICT - LUDHIANA, PUNJAB - 141010 PH :8054399990.
FATEHGARH CHURIAN	2106. SANDHU AUTOMOBILES PVT LTD (6206-05), NATIONAL HIGHWAY-64, JAGRAON - 142026 PH :8437025969.	2118. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), SIDHU COMPLEX, CIRCLE ROAD - KAPURTHALA, PUNJAB - 144602 PH :9779166004.	
2095. PATHANKOT VEHICLEADES PVT LTD (-01), KHASRA NO. 17 R. DERABABA NANAK ROAD, FATEHGARH CHURIAN, TEHSIL - BATALA, DIST. -GURDASPUR, STATE - PUNJAB. - 143602	JAITU	KATHU NANGAL	
FAZILKA	2107. MAPSKO AUTO INDIA PVT LTD (-01), NEAR CANAL, BATHINDA ROAD, JAITO, DISTRICT - FARIDKOT - 151202 PH :7347000520.		
2096. TARA AUTOMOBILES (-03), NH-10, NEAR SARVHIKARI BAL VIDYA MANDIR, FAZILKA - 152116 PH :9876047847.	JALALABAD-PB		
FEROZPUR			

2131. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (6210-62-02), OPP SBI BANK - JAMALPUR, CHANDIGARH ROAD, LUDHIANA - 141010	MUKTSAR	2158. DIVINE AUTOWORLD LLP (-63-02), BHARAT NAGAR,PATIALA-NABHA ROAD, PATIALA - 147001	2170. HIRA AUTOMOBILES LTD (-01), KEWAT NO. 948/950, KHATUNI NO. 1427, KHASRA NO. 101/27(4-7), PATIALA SAMANA ROAD, SAMANA, DIST.-PATIALA, STATE PUNJAB. - 147101 PH. 9217048236.
2132. LOVELY AUTOS (6211-62-01), 2716/1, GURDEV NAGAR, NEAR FEROZ GANDHI MARKET, LUDHIANA, PUNJAB - 141001	2144. PLUTON DREAMWORKS PRIVATE LIMITED (-01), NEAR SSP OFFICE, BATHINDA ROADSRI MUKTSAR SAHIB - 152026	2159. EAKANSH WHEELS PVT LTD (6305-63-01), KHASRA NO. 11/13/1, RAJPURA ROAD, PATIALA, 147001, PUNJAB - 147001	SANGRUR
MACHIWARA	MULLANPUR	PATRAN	2171. MAX AUTOMOBILES (-01), DHURI ROAD, SANGRUR, - 148024
2133. HOSHIARPUR AUTOMOBILES (-01), SAMRALA ROAD, MACHIWARA, NEAR SHEEVA MARRIAGE PALACE - 141115 PH -9875900147.	2145. SANDHU AUTOMOBILES PVT LTD (-01), OPPOSITE DHAKA ROAD, FEROZEPUR ROAD, MULLANPUR - 141101	2160. HIRA AUTOMOBILES LTD (6302-02), NARWANA ROAD, PATRAN, PUNJAB. - 147105	SHAHKOT
MAHILPUR	MULLANPUR GARIBDASS	PATTI	2172. LOVELY AUTOS (-01), PUBLIC SCHOOL ROAD, SHAHKOT, DISTRICT - JALANDHAR, PUNJAB. - 144702
2134. HOSHIARPUR AUTOMOBILES (-05), NEAR NEW BUS STAND, CHANDIGARH ROAD, MAHILPUR, DIST. HOSHIARPUR - 146105 PH -9914720424.	2146. NAVDESH AUTOS LLP (-01), H NO. 341, POST OFFICE - MULLAPUR GARIBDASS, TEHSIL - MAJRI, DIST.-SAS NAGAR, STATE - PUNJAB. - 140901 PH -8872004676.	2161. JAYCEE MOTORS PVT LTD (-01), KHASRA NO. 64/19/2/1 KA 16/49 & KHASRA NO. 64/20 KA 29/94, NEAR RADHA SWAMI, TARN TARAN ROAD, VILLAGE - PATTI, DISTT.-TARN TARAN, PUNJAB. - 143416 PH -9780038335.	SIRHIND
MALERKOTLA	NABHA	PHAGWARA	2173. HOSHIARPUR AUTOMOBILES (-01), KHEWAT KHATONI NO. 802/1049 & 821/1070 KHEWAT KHAS NO. 43/1/2/1 (1-0), BESIDE SBI BANK, BASSI ROAD, SIRHIND, TEHSIL AND DISTRICT - FATEHGARH SAHIB - 140406
2135. MAX AUTOMOBILES (-01), MALERKOTLA-LUDHIANA MAIN ROAD, VILLAGE - BHOGIWAL, MALERKOTLA, DIST.-SANGRUR, PUNJAB. - 148023	2147. HIRA AUTOMOBILES LTD (6302-06), RADHA SWAMI ROAD, NABHA - 147201	2162. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), PLOT NO-62, INDUSTRIAL AREA, NEAR JCT BRIDGE LUDHIANA - 141001 PH -9779166004.	SULTANPUR LODHI
MANDI GOBINDGARH	NAKODAR	PHILLAUER	2174. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (-01), NEAR TALWADI BRIDGE, TALWANDI ROAD, SULTANPUR LODHI, DISTRICT -KAPURTHALA - 144626 PH -9779166004.
2136. HOSHIARPUR AUTOMOBILES (-01), PLOT GOYAL MOTORS, NEAR YES BANK, MANDI SIRHIND ROAD, NH-1, MANDIGOBINDGARH, PUNJAB. - 147301	2148. LOVELY AUTOS (3503-04), JALANDHAR ROAD, NEAR MALARI GATE, NAKODAR - 144040	2163. LOVELY AUTOS (-01), OLD NAWANSHAHR ROAD CIVIL LINE, PHILLAUER, DISTRICT JALANDHAR - 144410 PH -9815069814.	SUNAM
MANSA	NANGAL	POHIR	2175. MAPSCO AUTO INDIA PVT LTD (-01), BHATINDA ROAD, SUNAM, DISTRICT - SANGRUR SUNAM, PUNJAB - 148028
2137. TARA AUTOMOBILES (7002-02), BALATA ROAD, NEAR ARVIND NAGAR, MANSA, PUNJAB - 151505	2149. CM AUTO SALES PVT LTD (-02), PLOT#36,AJOLI MOR, FOCAL POINT INDUSTRIAL AREA, NANGAL -PUNJAB - 140126 PH -9592916811.	2164. LOVELY AUTOS (-01), LUDHIANA-MALERKOTLA ROAD, NEAR SODHI MARRIAGE PALACE, POHIR, DISTRICT LUDHIANA, PUNJAB. - 141204 PH -9915020513.	TALWANDI BHAI
MOGA	NAWANSHAHR	RAIKOT	2176. PLUTON DREAMWORKS PRIVATE LIMITED (-01), MOGA ROAD, NEAR FUN ISLAND, - 142050
2138. REMIRA MOTORS PVT LTD (-01), INDUSTRIAL AREA, OPPOSITE ITI, GT ROAD, MOGA. - 142001 PH -7087025402.	2150. LOVELY AUTOS (3503-02), NAWANSHAHR CHANDIGARH ROAD, VILL.- LANGROHA, DISTT.- NAWANSHAHR, PUNJAB - 144514 PH -9915028682.	2165. GULZAR MOTORS PVT LTD (-01), BARNALA BY PASS ROAD, RAIKOT - 141109 PH -9814160099.	TALWANDI SABO
MOHALI	NIHAL SINGH WALA	RAJPURA	2177. TARA AUTOMOBILES (-01), TALWANDI RAMA MAIN ROAD, NEAR VILLAGE-JAJJAL, RAMAMANDI,TALWANDI SABO, BHATINDA - 1551302
2139. NAVDESH AUTOS LLP (-01), PLOT NO.C-89, INDUSTRIAL AREA, PHASE-7, MOHALI - 160059 PH -8872016453.	2151. REMIRA MOTORS PVT LTD (-01), BARNALA ROAD, NEAR DEAR BABA SEWA DASS, TEHSIL-NIHALSINGHWALA, DIST.-MOGA. - 142055 PH -7067025009.	2166. DIVINE AUTOWORLD LLP (-01), VILLAGE BADHAK, RAJPUR PATIALA ROAD, RAJPURA - 140401	TALWARA
2140. CM AUTO SALES PVT LTD (-03), PLOT NO. B-64, INDUSTRIAL AREA PHASE-7, MOHALI - PUNJAB - 140110	PATHANKOT	RAMPURA PHUL	2178. HOSHIARPUR AUTOMOBILES (-07), DAM ROAD, NEAR KALI MATA MANDIR, VILLAGE-NAGAR, TALWARA, PUNJAB - 144216
MOONAK	2152. PATHANKOT VEHICLEADES PVT LTD (-01), NEAR MAHOON CHOWK, DALHOUSIE ROAD, PATHANKOT, - 145001	2167. TARA AUTOMOBILES (-01), RAMPURA -BARNALA ROAD, RAMPURA PHUL - 151103	TANDA
2141. MAPSCO AUTO INDIA PVT LTD (-01), PATRAN ROAD, MOONAK, PUNJAB - 148028	2153. PATHANKOT VEHICLEADES PVT LTD (-04), NEAR A. B. COLLEGE, PATAHANKOT - 145001	RAYYA	2179. HOSHIARPUR AUTOMOBILES (-06), VILL.PULPUKHATA, MIANI ROAD, TANDA - 144203
MORINDA	2154. PATHANKOT VEHICLEADES PVT LTD (-07), PLOT NO. 58-C, 59-C, INDUSTRIAL GROWTH CENTRE, VILLAGE-CHACHELI, TEHSIL & DIST - 145001	2168. RISHABH FOURWHEELS PVT LTD (-01), NH-1, GT ROAD RAYYA, TEHSIL - BABA BAKALA, DISTRICT - AMRITSAR. - 143112 PH -9914708577.	TAPA
2142. CM AUTO SALES PVT LTD (-01), KHASRA NO. 1092, CHANDIGARH-SAMRALA ROAD, MORINDA, DIST.-ROPAR, PUNJAB. - 140101 PH -9915022811.	PATIALA	ROOPNAGAR	2180. MAPSCO AUTO INDIA PVT LTD (-01), BHATINDA ROAD, TAPA, DISTRICT - BARNALA, TAPA, PUNJAB - 148108
MUKERIAN	2155. HIRA AUTOMOBILES LTD (6302-63-01), 13-B, FACTORY AREA, PATIALA - 147001	2169. CM AUTO SALES PVT LTD (-01), CHANDIGARH ROPAR ROAD, ROPAR - 140001 PH -9915022802.	TARAGARH
2143. HOSHIARPUR AUTOMOBILES (-01), VILL. TALWANDI KALAN, GT ROAD, MUKERIAN - 144211	2156. HIRA AUTOMOBILES LTD (6302-63-04), C-20 & C-45, FOCAL POINT, PATIALA, PUNJAB - 147001	SAMANA	
	2157. HIRA AUTOMOBILES LTD (6302-63-07), D-1A, INDUSTRIAL FOCAL POINT, PATIALA (PUNJAB). - 147001		

Dealer Workshop (AS ON 31.01.2026)

2181. PATHANKOT VEHICLELEADS PVT LTD (-01),
VILLAGE - RAHIMPUR, VPO-TARAGARH, TEHSIL
& DISTT. PATHANKOT, HIMACHAL PRADESH -
143534
PH :9988639963.

TARN TARAN

2182. JAYCEE MOTORS PVT LTD (-01), VILLAGE -
KAKKA, KANDIALA, NEAR SANDHU PETROL
PUMP, AMRITSAR ROAD, TARN TARAN,
PUNJAB - 143401
PH :9780038039.

TARSIKKA

2183. BABA AUTOS (-01), NEAR HDFC BANK, MAIN
BAZAAR, TARSIKKA, PUNJAB - 143116

ZIRA

2184. PLUTON DREAMWORKS PRIVATE LIMITED (-
01), MAKHU ROAD, NEAR HARBIR PETRO, -
142047

ZIRAKPUR

2185. TRICITY AUTOS (-01), PATIALA
HIGHWAY, VILLAGE - NABHA, ZIRAKPUR,
PUNJAB - 140603
PH :9988822330.

RAJASTHAN

AANDHI

2186. K.P. AUTOMOTIVES PVT LTD (-01), KHASRA
NUMBER 11 25, VILL AANDHI, DISTT JAIPUR,
RAJASTHAN- 303001 - 303001
PH :9549656559.

ABU ROAD

2187. NAVNEET MOTORS (-01), PLOT NO. E-26, RIICO
AMBAJI INDUSTRIAL AREA, PALANPUR
HIGHWAY, ABU ROAD DISTT. SIROHI - 307026
PH :765000064.

ACHROL

2188. KTL AUTOMOBILE PRIVATE LIMITED (-01),
KHASRA NO. 371/522, GRAM ANI, ACHROL,
DELHI ROAD, TEHSIL - ACHROL, DISTRICT -
JAIPUR, 303002 - 303002
PH :7412077022.

AHORE

2189. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT
LTD) (-01), MADHOPURA, NEAR KARNAWATI
HOSPITAL, AHORE, DISTRICT - JALORE,
RAJASTHAN PIN CODE: 307029 - 307029

AJMER

2190. AJMER AUTO AGENCIES PVT LTD (-01),
SRINAGAR ROAD, AJMER (RAJASTHAN) - 305001
PH :9314955201.

2191. RELAN MOTORS PVT LTD (-01), NEAR BIRLA
WATER TANK, PARABATPURA BYEPASS,
AJMER - 305001

2192. RELAN MOTORS PVT LTD (-02), F-243 RIICO
INDUSTRIAL AREA, PALRA, AJMER - 305001

2193. AJMER AUTO AGENCIES PVT LTD (-05),
KHASRA NO.343/2, 344, 345, 347 GHUGHRA
GHATI, JAIPUR ROAD, AJMER - 305001
PH :9314955201.

AJMER ROAD, JAIPUR

2194. KTL AUTOMOBILE PRIVATE LIMITED (-06),
PLOT NO.-39-40, MAA KARNI NAGAR-E
PANCHAY, PANCHAYAWALA NEAR VAISHALI
NAGAR, SIRSI - 302017

AKLERA

2195. BHATIA & COMPANY (A UNIT OF BHATIA
CORPORATION PVT LTD) (-01), NH-52, RAM
NAGAR COLONY, AKLERA, JHALAWAR,
PIN-326033, RAJASTHAN - 326033
PH :9799299971.

ALWAR

2196. M G MOTORS (-01), MUKESH GENERAL
FINANCE COMPANY, ROAD NO. 2, NEAR MEO
BOARDING, ALWAR - 301001
PH :9001795520.

2197. M G MOTORS (-02), KHASRA NO.803/198,
BHUGORE TIRAH, NEAR ALWAR PUBLIC
SCHOOL, JAIPUR ROAD, ALWAR - 301001
PH :9001795520.

2198. M G MOTORS (-03), VAISHALI NAGAR, OLD
DELHI ROAD, ALWAR, PIN-301001, RAJASTHAN
- 301001

AMET

2199. TECHNOY MOTORS INDIA PVT LTD (-01), AMET
, DISTT RAJSAMAND, RAJASTHAN - 313332

ANOOPGARH

2200. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT
LTD) (-01), PLOT NO. AMEDKAR
CHARAHARA, RAILWAY STATION ROAD
ANUPGARH (ANOOPGARH), DISTT SRI
GANGANAGAR - 335701

ANTA

2201. BHATIA & COMPANY (A UNIT OF BHATIA
CORPORATION PVT LTD) (-01), KOTA-BARAN
ROAD, ANTAH, DIST.-BARAN. - 325502
PH :9413379001.

ASIND

2202. CHAMPION CARS (PREM CARS PVT LTD) (-01),
DEV TOWERS, BEAWARE ROAD, ASIND,
DISTRICT - BHILWARA, RAJASTHAN - 311302 -
311302
PH :9887063862.

ATRU

2203. SUWALKA MOTORS PRIVATE LIMITED (-01),
SALPURA ROAD, ATRU, NEAR DEPUTY OFFICE,
PIN-325218, RAJASTHAN - 325218
PH :8306333731.

BADI SDADRI

2204. BHATIA & COMPANY (A UNIT OF BHATIA
CORPORATION PVT LTD) (-01), MAIN CHITTOR
ROAD, NEXT TO HP PETROL PUMP,
BHOPATPURA, BARI SADRI, DIST.
CHITTORGARH, PIN-312403, RAJASTHAN -
312403

BAGRU

2205. PREM MOTORS PVT LTD (-01), KHASRA NO.
1185, NH 8 AJMER ROAD, BAGRU, JAIPUR
DISTRICT, RAJASTHAN - 303007

BAJJU

2206. DUDI AUTOMOBILES (A UNIT OF DMAS
AUTOMOBILES PVT LTD) (-01), BAJJU, DISTT
BIKANER, RAJASTHAN - 334305

BALESAR

2207. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT
LTD) (-01), KHASRA NO. 2167 JODHPUR
JAISALMER ROAD, VILL.- BALESAR SATTIA,
TEH.- BALESAR, DISTT.- JODHPUR (RAJ.) -
342203
PH :7412087344.

BALOTRA

2208. L M J SERVICES LTD (6502-05), JODHPUR
BALOTRA ROAD, BALOTRA, RAJASTHAN -
344022
PH :8005898360.

BANDANWARA

2209. RELAN MOTORS PVT LTD (-01), SHOP NO. 9 &
10, AJMER HIGHWAY, BANDANWARA, DIST.
AJMER, PIN-305622 - 305622

BANSUR

2210. FORTUNE CARS (A UNIT OF JYOTI
AUTOMOBILES PVT LTD) (-01), KOTPUTLI
ROAD, NEAR SUBHASH CHOWK, BANSUR,
RAJASTHAN - 301402
PH :8875005116.

BANSWARA

2211. NAVNEET MOTORS (-01), NEAR J.C.
MILL, OPPOSITE AKASHWANI, DAHOD
ROAD, BANSWARA - 327001

BAORI

2212. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT
LTD) (-01), SHOP NO. 04, SHRI BALAJI NAGAR,
NEAR SBI, BAORI, DIST. JODHPUR, PIN-342037,
RAJASTHAN - 342037

BARAN

2213. BHATIA & COMPANY (A UNIT OF BHATIA
CORPORATION PVT LTD) (6101-03), BESIDE
OJHA METAL, ATRU ROAD, BARAN - 325205
PH :8929854244.

BARMER

2214. L M J SERVICES LTD (6502-06), G-216, RIICO
INDUSTRIAL AREA, BARMER - 344001
PH :8005898360.

2215. L M J SERVICES LTD (-01), NH# 68, OPP.
SADAR THANA - 344001
PH :8005898360.

BASSI

2216. PREM MOTORS PVT LTD (-01), MOHAN PURA
BASSI, JAIPUR, RAJASTHAN - 303301

BAYTU

2217. L M J SERVICES LTD (-01), NH-8, NEAR
JAGDAMBA PETROL PUMP, BAYTU - 344034
PH :8094011126.

BEAWARE

2218. RELAN MOTORS PVT LTD (-01), PLOT NO 1,
INDIRA GANDHI UDYOGPURI, AJMER ROAD
BEAWARE, RAJASTHAN - 305202
PH :9587687000.

BEGUN

2219. BHATIA & COMPANY (A UNIT OF BHATIA
CORPORATION PVT LTD) (-01), BHATIA & CO.
(A UNIT OF BHATIA CORPORATION PVT LTD), IN
FRONT OF GURUKUL, CHITTOR ROAD, BEGUN,
TEHSIL - BEGUN, DISTRICT CHITTORGARH,
312023

BEHROR

2220. M G MOTORS (-01), B-168, RIICO INDUSTRIAL
AREA, PHASE-II, OPP. APEX TUBE, BEHROR,
DISTT: ALWAR. - 301701
PH :9001795520.

BHADRA

2221. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT
LTD) (-01), CHAK NUMBER-8, BARANI, NEAR
HISAR BYEPASS BHADRA-BALSAMAND ROAD
BHADRA. - 335501

BHARATPUR

2222. TM MOTORS PVT LTD (-01), BRIJ VIHAR
COLONY, MADARPUR
ROAD, BHARATPUR, RAJASTHAN - 321001
PH :9251423392.

BHAWANI MANDI

2223. SUWALKA MOTORS PRIVATE LIMITED (-01),
K.NO. 327 MANDAVI OPPOSITE SDM OFFICE
JHALAWAR ROAD,
BHAWANIMANDI, JHALAWAR- 326502 - 326502
PH :9414242256.

BHILWARA

2224. CHAMPION CARS (PREM CARS PVT LTD) (-01),
CHITTORGARH ROAD, BHILWARA, RAJASTHAN,
- 311001

2225. BHATIA & COMPANY (A UNIT OF BHATIA
CORPORATION PVT LTD) (-01), PLOT NO.
1/316/E, AJMER ROAD, BHILWARA, RAJASTHAN
- 311001

2226. CHAMPION CARS (UNIT OF PREM CARS PVT.
LTD) (-02), ARATI NO.255-258, GRAM JODHRAS,
BHILWARA. - 311011

BHINDER

2227. TECHNOY MOTORS INDIA PVT LTD (-01), NEAR RAILWAY STATION, SALUMBAR CHOURAHA, BHINDER - 313603
PH :8306111337.

BHINMAL

2228. SHRI KRISHNA AUTOSALES PVT LTD (-01), KHASRA NO. 2281, KARADA CROSSING, BHINMAL, DISTRICT - JALORE, RAJASTHAN - 343029
PH :9610242790.

BHIWADI

2229. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), OPP. INDAG RUBBER, MAIN ROAD, BHIWADI - 301019

2230. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-02), F-458-C, RIICO, INDUSTRIAL AREA, BHIWADI - 301019

2231. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-04), KHASRA NO. 656/431, ALWAR ROAD, BHIWADI - 301019

BIJAYNAGAR

2232. AJMER AUTO AGENCIES PVT LTD (-01), KHASRA NO 39 , AJMER -BHILWARA HIGHWAY CITY -BIJAYNAGAR DISTRICT - AJMER ,RAJASTHAN - 305624
PH :8890902472.

BIKANER

2233. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-01), OPP. URMUL DAIRY PLANT, GANGANAGAR ROAD, BIKANER - 334004

2234. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-04), JAIPUR BYE PASS, BIKANER , - 334004

2235. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-05), OPP. AVYAPPA TEMPLE, K. K. COLONY, BIKANER - 334003

2236. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (7102-71-01), KHASRA NO. 376/33, JAIPUR ROAD, NH-11, BIKANER, RAJASTHAN - 334001
PH :8929834417.

2237. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-07), ROAD NO-4, IND. AREA, RANI BAZAAR, RANI BAZAAR, BIKANER - 340323

BILARA

2238. L M J SERVICES LTD (-01), BANGANGA MOD, JODHPUR ROAD, BILARA, RAJASTHAN - 342602
PH :8104689895.

BONLI

2239. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), OPP. GOPAL AGRO PETROL PUMP NIWAI RD, BONLI, RAJASTHAN - 322023

BORUNDA

2240. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), 42/34, GOTAN ROAD, BORUNDA, DIST. -JODHPUR, PIN-342604, RAJASTHAN - 342604
PH :9413311745.

BUNDI

2241. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-02), SUMAN PLAZA, NEAR TEACHER'S COLONY, CHITTOR ROAD, OPPOSITE ICICI ATM, BUNDI - 323001
PH :8929853245.

CHAKSU

2242. K.P. AUTOMOTIVES PVT LTD (1104-03), TONK ROAD, CHAKSU - 303901

CHANDAN

2243. L M J SERVICES LTD (-01), JAISALMER ROAD ,CHANDAN , DISTT JAISALMER, RAJASTHAN - 345031
PH :8094011126.

CHIRAWA

2244. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), NEAR PILANI CIRCLE, LOHARU ROAD, STATE HIGHWAY-8, CHIRAWA - 333026

CHITTORGARH

2245. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), PLOT NO. 1001/1-1002/1, NIMBAHERA ROAD, CHITTORGARH - 312001

CHOMU

2246. KTL AUTOMOBILE PRIVATE LIMITED (-01), KHASRA NO.695, JAIPUR SIKAR BYPASS ROAD, CHOMU, RAJASTHAN - 303702
PH :7412077034.

2247. SATNAM MOTOCORP PVT LTD (-01), NEAR CM CHOPRA HOSPITAL, JAIPUR ROAD, CHOMU, DISTRICT - JAIPUR, RAJASTHAN - 303702
PH :8302090000.

CHURU

2248. T R SAWHNEY MOTORS PVT LTD (-01), KHASRA NO. 913/54, JAIPUR ROAD, VILLAGE RAMSARA, CHURU, PIN-331001, RAJASTHAN - 331001
PH :9782078531.

DABI

2249. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), KARITALAI-MAHADEV MARKET, CHARBHUJA ROAD, DESURI (DISTRICT PALI) - 323022

DANTA RAMGARH

2250. JAMU AUTOMOBILES PVT LTD (-01), KHASRA NO. 1016/256, VILLAGE - RAMGARH, TEHSIL - DATAH RAMGARH, DIST.-SIKAR - 332703
PH :9116816905.

DAUSA

2251. VIPUL MOTORS PVT LTD (1102-03), AGRA JAIPUR ROAD, DAUSA - 303303
PH :9672211333.

DECHU

2252. L M J SERVICES LTD (-01), OPP INDIAN OIL PUMP, JODHPUR ROAD, DECHU - 342314

DEGANA

2253. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), PLOT NUMBER -189 , NEAR NAGAU RAILWAY STATION ROAD, DEGANA - 341503
PH :7230055955.

DEOLI

2254. K.P. AUTOMOTIVES PVT LTD (-01), KOTA-JAIPUR HIGHWAY, NH-12, DEOLI - 304804
PH :8696925259.

DESURI

2255. L M J SERVICES LTD (-01), MAHADEV MARKET, CHARBHUJA ROAD, DESURI, DISTT PALI , RAJASTHAN - 306703

DHARIYAWAD

2256. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), PRATAPGARH ROAD, DHARIYAWAD , DIST. - PRATAPGARH, RAJASTHAN - 313605 - 313605
PH :9829736081.

DHOLPUR

2257. TM MOTORS PVT LTD (-01), TM MOTORS PVT. LTD., GT ROAD DHOLPUR, RAJASTHAN. - 328001
PH :8094777862.

DIDWANA

2258. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), KHASRA NO. 73, NEAR CHOTI DEVI SCHOOL, LADNU ROAD, DIDWANA , DISTRICT - NAGAU R, KHASRA NO. 2778, DIDWANA BYPASS, DIDWANA, DISTRICT NAGAU R, RAJASTHAN - 341303
PH :7230055924.

DOONI

2259. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), NEAR POLICE STATION, DOONI, DIST. TONK, RAJASTHAN - 304802 - 304802

DUDU

2260. PREM MOTORS PVT LTD (-01), KHASRA NO.1107 & 1108, OPPOSITE POWER HOUSE SERVICE LANE, NH-8, DUDU. - 303008
PH :8058411181.

DUNGARPUR

2261. NAVNEET MOTORS (4902-02), G-71, INDUSTRIAL AREA, DUNGARPUR - 314001

FALNA

2262. L M J SERVICES LTD (-01), OPPOSITE PRAKASH DINING HOTEL ,FALNA - 306116
FATEHNAGAR

2263. TECHNOY MOTORS INDIA PVT LTD (4903-03), PLOT NO.15, FATEHNAGAR SANWAR ROAD, UDAIPUR-CHITTORGARH HIGHWAY NO.76, FATEHNAGAR-313205 DISTT. UDAIPUR - 313205

FATEHPUR (RJ)

2264. JAMU AUTOMOBILES PVT LTD (-01), NH-52, RATANGARH ROAD,, DISTT SIKAR - 332301

FATHEGARH

2265. L M J SERVICES LTD (-01), NEAR POLICE STATION, FATEHGARH, DIST. - JAISALMER, RAJASTHAN - 345027 - 345027

GANGAPUR CITY

2266. PREM MOTORS PVT LTD (-01), KHASRA NO. 5854, 5858, 5860, 5861, VILLAGE UDAI KALAN, THE GANGAPUR CITY - 322201
PH :8058794122.

GHARASNA

2267. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (-01), NH-11, BIKANER ROAD,, ABHISHEK(MEENA)FILLING STATION KE PASS. - 335707

GOGUNDA

2268. TECHNOY MOTORS INDIA PVT LTD (-01), NH 27, GOGUNDA, DISTRICT-UDAIPUR - 313705

GOVINDGARH

2269. VIPUL MOTORS PVT LTD (-01), JAI BHAWANI MARKET, NH-2, GOVINDGARH, DIST. JAIPUR, PIN-303712, RAJASTHAN - 303712

2270. M G MOTORS (-01), SIKRI ROAD, GOVINDGARH, - 301604

GUDAMALINI

2271. L M J SERVICES LTD (-01), KHASRA NO. 1360/5, RATHORO KI DHANI, JODHPUR ROAD, GUDAMALANI, DISTRICT - BARMER, RAJASTHAN - 344031 - 344031
PH :8094011126.

GUDHAGORJI

2272. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), BHORKI ROAD, GUDHAGORJI, DISTRICT - JHUNJHUNUN, RAJASTHAN. - 333022
PH :7412059848.

HANUMANGARH

2273. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-03), JUNCTION TOWN ROAD, HANUMANGARH - 335512

2274. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-06), PLOT NUMBER 134, INDUSTRIAL AREA, HANUMANGARH, RAJASTHAN. - 335512
PH :9413311745.

HINDAUN	2275. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), KHASRA NO. 737, VILLAGE - PATTI NARAINPUR, NEAR HANUMAN MANDIR, HINDAUN-MAHWA ROAD, HINDAUN - 322230	2289. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-04), CHOKDI HAWALI SHAHAR, SHIRKI SHAHAR, NEAR IDGAH, BILCHOHONY MOHALLA, TRANSPORT NAGAR, DELHI ROAD, JAIPUR - 302002 - 302002 PH :9772210922	JHALAWAR	2312. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), MEGA HIGHWAY ROAD, NEAR PETROL PUMP, KAPRAIN DISTT: BUNDI - 323301 PH :9413379001.
ITAWA	2276. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), NAHER KE PASS, KHATOLI ROAD, ITAWA, ITAWA, RAJASTHAN - 325004	2290. K.P. AUTOMOTIVES PVT LTD (1104-11-G2), PLOT NO. 4, RAJIV COLONY, RPA ROAD, OPP. RADHA SWAMI SATSANG BHAWAN, SHASTRI NAGAR, JAIPUR 302016. - 302016 PH :9549656559.	JHUNJHUNUN	2313. AJMER AUTO AGENCIES PVT LTD (-03), KOTA SAWAR ROAD, KEKRI - 305404 PH :9314955201.
JAIPUR	2277. VIPUL MOTORS PVT LTD (1102-11-01), F-124A, MALVIYA INDUSTRIAL AREA, MALVIYA NAGAR, JAIPUR - 302017	2291. SANGA AUTONATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (1117-11-01), SECTOR 35, PRATAP NAGAR, SANGANER, JAIPUR, PIN-302023, RAJASTHAN - 302033 PH :9929365847.	JOBNER	2314. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-02), E1-2, AUTOMOBILES SERVICE SECTOR, RIICO INDUSTRIAL AREA, PHASE-2, SIKAR JAIPUR ROAD, JHUNJHUNU. - 333001
	2278. K.P. AUTOMOTIVES PVT LTD (1104-11-01), E-188, SANGANER INDUSTRIAL AREA, MANSAROVAR, JAIPUR - 302020	2292. K.P. AUTOMOTIVES PVT LTD (1104-11-09), KHASRA NO. 74/4 & 75/1, NEW KHANDELWAL NAGAR, GONER ROAD, NEAR JAIPUR AGRA HIGHWAY, JAIPUR, RAJASTHAN 302031 - 302031	JODHPUR	2315. PREM MOTORS PVT LTD (-01), SAWAI MADHOPUR-KHANDAR RD., KHANDAR, RAJASTHAN - 322025. - 322025 PH :8058899960.
	2279. PREM MOTORS PVT LTD (1112-11-02), 12 13, SUDARSHANPURA INDUSTRIAL AREA, JAIPUR - 302006	2293. K.P. AUTOMOTIVES PVT LTD (-08), PLOT NO. 280, RAJENDRA NAGAR A, NIRMAN NAGAR, JAIPUR - 302031		KHANDAR
	2280. VIPUL MOTORS PVT LTD (1102-11-05), 29, INDUSTRIAL AREA, JHOTWARA, JAIPUR - 302012	JAISALMER		KHANPUR
	2281. PREM MOTORS PVT LTD (1112-11-01), PLOT NO. E101/A, VKI, JAIPUR - 302039	2294. L M J SERVICES LTD (-01), PLOT NO.36, 37, MAHESH REFUGEE COLONY, HDC SOCIETY, DABLA ROAD, JAISALMER (RAJASTHAN) - 345001 PH :8005898360.		
	2282. SATNAM MOTOCORP PVT LTD (1113-11-01), PLOT NO. E-524, SITAPURA INDUSTRIAL AREA, JAIPUR - 302 022, RAJASTHAN. - 302022	JAITARAN		KHERLI
	2283. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-01), PLOT NO. 13B, JHOTWARA INDUSTRIAL AREA, JAIPUR - 302012 PH :7412077022.	2295. L M J SERVICES LTD (-01), KHASRA NO. 784, JAIPUR-JODHPUR BYE PASS ROAD, JAITARAN, DIST.-PALI - 306302 PH :9269971266.		2317. M G MOTORS (-01), KHERLI KATHUMAR ROAD, VILLAGE KHERLI, DISTT. ALWAR, RAJASTHAN - 321606 PH :9001795520.
	2284. PREM MOTORS PVT LTD (1112-11-03), PLOT NO. B-12, MALVIYA NAGAR, JAIPUR - 302017	JALORE		KHERWARA
	2285. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-02), KHASRA NO 1210-1216/2959, BHANKROTA, TEH SANGANER, DISTRICT JAIPUR - 302026 PH :7412077007.	2296. SHRI KRISHNA AUTOSALES PVT LTD (-01), KHASRA NO.6809/2616, 2623, INDUSTRIAL AREA, JALORE-BHINMAL ROAD, JALORE - 343001		2318. TECHNOL MOTORS INDIA PVT LTD (-01), OPP. ATITHI PALACE, VILLAGE BADLA, NH 8, KHERWARA, TEHSIL - KHERWARA, DISTRICT - UDAIPUR, RAJASTHAN PIN CODE: 313803
	2286. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-03), ORBIT MALL CIVIL LINES METRO STATION AJMER ROAD, JAIPUR. - 302006 PH :7412077007.	JAMWA RAMGARH		KISHANGARH
	2287. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (1116-11-C1), COMMERCIAL PLOT NO. J4, COMMERCIAL BELT B, VT ROAD, NEW SANGANER ROAD, MANSAROVAR SCHEME, JAIPUR, RAJASTHAN 302020 - 302020 PH :9571105651.	2297. K.P. AUTOMOTIVES PVT LTD (-01), KHASRA NUMBER -228/169, OPP UDAY AUTOMOBILES, JAIPUR ALWAR ROAD -JAMWA RAMGRAH. - 303109		2319. AJMER AUTO AGENCIES PVT LTD (-01), R K LINK ROAD. - 305802 PH :9314391011.
	2288. K.P. AUTOMOTIVES PVT LTD (1104-11-G1), B-1, GOVIND MARG, ADARSH NAGAR, JAIPUR - 302004 - 302004 PH :9549656559.	JAWAL		KISHANGARH BAS
		2298. TECHNOL MOTORS INDIA PVT LTD (-01), OPP. HP PETROL PUMP, SIROHI-JALORE ROAD, JAWAL, DIST. - SIROHI, RAJASTHAN - 307801. - 307801		2320. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-03), KISHANGARH BIWADI HIGHWAY, NEAR KISHANGARH, DISTRICT ALWAR - 301405
		JHADOL		KOLAYAT
		2299. TECHNOL MOTORS INDIA PVT LTD (-01), KHASRA NO. 186/1, NH # 8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT, PIN-306104, RAJASTHAN - 306104 PH :8890673099.	KAPASAN	2321. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (-01), NEAR PANCHAYAT SAMITI JHAJJU ROAD, KOLAYAT - 334302
			KAPRAIN	KOTA

2322. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-61-01), 13-16 B, INDUSTRIAL ESTATE, KOTA - 324007 PH :8929400447.	2323. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6102-61-01), AUTO MOBILE ZONE, G-11/12 INDUSTRIAL AREA, KOTA - 324005	2324. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-61-04), 3(K), CHAMBAL INDUSTRIAL AREA, KOTA, RAJASTHAN - 324007 PH :8929400447.	2325. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-05), E-46, CHAMBAL INDUSTRIAL AREA, KOTA - 324007 PH :8929400447.	2326. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-06), PLOT NO. E-222, ROAD NUMBER 5, INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN - 324005	2327. SUWALKA MOTORS PRIVATE LIMITED (-01), RIDDHI SIDDHI NAGAR, KUNHARI, BUNDI ROAD, KOTA, RAJASTHAN - 324008	2328. SUWALKA MOTORS PRIVATE LIMITED (6104-02), PLOT NO. A172 (B-1) INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN - 324003	KOTPUTLI	2329. PREM MOTORS PVT LTD (-01), NH-8, BUCHARA COLONY, OPP. SHAKTI VIHAR, KOTPUTLI, JAIPUR - 303108	2330. PREM MOTORS PVT LTD (-02), KHASRA NO- 636, KOTPUTLI, DIST. JAIPUR, RAJASTHAN - 303108	KUCHAMAN	2331. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), SUDARSHAN NAGAR, BURSUA ROAD, KHASRA NO.148, KUCHAMAN - 341508 PH :7230055928.	LADNU	2332. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), KHASRA NO. 1011, SUJANGARH ROAD, LADNU - 341306 PH :7412044506.	LAHAR	2333. NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT LTD) (-01), WARD NO.09., BHIND BHANDER ROAD, LAHAR, - 477001	LALSOT	2334. VIPUL MOTORS PVT LTD (-01), PLOT NO.22,23, KHASRA NO.1502-03, NARAYAN VIHAR, SAWAI MADHOPUR ROAD, LALSOT, RAJASTHAN - 303502 PH :9672211333.	LOSAL	2335. JAMU AUTOMOBILES PVT LTD (-01), LOSAL-SALASAR-DIWANA ROAD, OPPOSITE SHIV MANDIR, WARD NO. 1, LOSAL, RAJASTHAN - 332025. - 332025 PH :9057400761.	LUNI	2336. L M J SERVICES LTD (-01), NEAR SBI BANK, SALAWAS ROAD, LUNI, TEHSIL - LUNI, DISTRICT - JODHPUR, RAJASTHAN PIN CODE: 342802 - 342802 PH :8094011126.	LUNKARANSAR	2337. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (-01), VISWAKARMA MARKET, BIKANER ROAD, LUNKARANSAR, BIKANER, RAJASTHAN - 334603. - 301026	MAHWA	2338. VIPUL MOTORS PVT LTD (-01), KHASRA NO.37/384, BHARATPUR ROAD BYE-PASS, N.H. -11, MAHWA, DISTT. DAUSA (RAJASTHAN) - 321608 PH :9672211333.	MAKRANA	2339. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), KHASRA NO. 609/4, NEAR BAJAJ SHOWROOM, MANGLANA ROAD, MAKRANA, DISTRICT - NAGAUER. - 341505 PH :7230055934.	MALPURA	2340. K.P. AUTOMOTIVES PVT LTD (-01), PLOT NO.07, SHRI KALYAN NAGAR COLONY, JAIPUR-KEKRI ROAD, MALPURA - 304502 PH :8696925262.	MANDALGARH	2341. CHAMPION CARS (PREM CARS PVT LTD) (-01), OPP. MODEL SCHOOL, BIJOLIA ROAD, MANDALGARH, DISTRICT - BHILWARA, PIN-311604, RAJASTHAN PH :9837325267.	MANGALWAD	2342. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), NH-27, PAL KHERI, MANGALWAD, CHHITORGARH - 312024	MARWAR JUNCTION	2343. L M J SERVICES LTD (-01), 1-2 KRISHNA KUNJ, OPP. ROADWAJ BUS STAND, MARWAR JUNCTION, PALI - 306001	MASUDA	2344. RELAN MOTORS PVT LTD (-01), BANDANWARA ROAD, MASUDA, RAJASTHAN- 305623 - 305623	MERTA	2345. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), KHASRA NUMBER 1679, NH-8, MERTA RAJASTHAN - 341510 PH :9116007201.	NADOTI	2346. FORTUNE CARS (-01), SH-25, VPO, NADAUTI ALWAR, GANGAPUR CITY STATE HIGHWAY - 322215	NAGAUER	2347. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), KHASRA NO. 1479/982 & 1478/83, BIKANER ROAD, NAGAUER - 341001 PH :9116008624.	NAINWA	2348. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), UNIARA ROAD, OPP. PETROL PUMP, NAINWA, DIST. KOTA - 323801 PH :9413379001.	NARAYANPUR	2349. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), KHASRA NO. 2848, JAIPUR ROAD, NEAR NARAYANPUR BYPASS VILLAGE, NARAYANPUR TEHSIL - NARAYANPUR, DISTRICT - ALWAR, RAJASTHAN PIN CODE: 301024. - 301024 PH :8875004375.	NASIRABAD	2350. AJMER AUTO AGENCIES PVT LTD (-04), CHAVANI BOARD NO:1613, HAWA CHAKKI, NASIRABAD ROAD, NASIRABAD, DISTT. AJMER - 305601 PH :9314955201.	NAWALGARH	2351. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), KHATA NO. 76, PUNIA KI DHANI, SIKAR ROAD, NAWALGARH, DISTRICT - JHUNJHUNU, RAJASTHAN PIN CODE: 333042 - 333042 PH :9928720360.	NEEM KA THANA	2352. JAMU AUTOMOBILES PVT LTD (-03), NEAR TOLL PLAZA, KOTPUTLI ROAD, NEEM KA THANA, SIKAR - 332713	NEEMRANA	2353. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), F-42 & 42(B), PHASE-1, NEEMRANA, TEHSIL: BEHROR, DISTT. ALWAR - 301705	NIMBAHERA	2354. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), PLOT NO. 7-8, 33-34, 35-36, NIMBAHERA, DIST. -CHITTORGARH - 312601	NIWAI	2355. K.P. AUTOMOTIVES PVT LTD (-01), VANASTHALI CIRCLE, NEAR PRATEEK GAS AGENCY, TONK ROAD, NIWAI, DISTRICT - TONK - 304021 PH :8696925262.	NOHAR	2356. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), F-46, RIICO EXTENSION, NOKHA INDUSTRIAL AREA, NOKHA DISTT- BIKANER (RAJASTHAN) - 334803 PH :7412059805.	NOKHA	2357. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), F-46, RIICO EXTENSION, NOKHA INDUSTRIAL AREA, NOKHA DISTT- BIKANER (RAJASTHAN) - 334803 PH :7412059805.	PADAMPUR	2358. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (-01), NEAR BASANT PLACE, BHAGAT SINGH CHOWK, KARANPUR ROAD, PADAMPUR SRI GANGANAGAR 335041 - 335041	PALI	2359. L M J SERVICES LTD (6502-03), KHASRA NO. 771/1, JODHPUR PALI ROAD, PALI - 306401 PH :9269971266.	PAOTA	2360. K.P. AUTOMOTIVES PVT LTD (-01), PATTI SANKHYA 31, MISAL SANKHYA 89, NEAR BAMORIA PETROL PUMP, NH-8, PAOTA, RAJASTHAN - 303106	PARBATSAR	2361. SHRI MANGALAM AUTO PRIVATE LIMITED (-01), NEAR IFL HOUSING FINANCE CO., KISHANGARH ROAD, PARBATSAR, DISTRICT - NAGAUER, RAJASTHAN - 341512. - 341512 PH :8740909096.	PARTAPUR	2362. NAVNEET MOTORS (-01), AAASHAPURA CHAURAH, BHAGORA MOR, NEAR AAASHAPURA MANDIR, PARTAPUR ,RAJASATHAN - 327024 PH :9001550644.	PHALODI	2363. SHRI KRISHNA AUTOSALES PVT LTD (-01), OPP. RCP GUEST HOUSE, NAGAUER KHICHAN ROAD, PHALODI, RAJASTHAN - 342301 PH :9116011958.	PHULERA	2364. KTL AUTOMOBILE PRIVATE LIMITED (-01), KHASRA NO. 21 TO 24 AND PLOT NO. 189 IN RAM VIHAR COLONY, PANCHBHATI, PHULERA, DISTRICT - JAIPUR, RAJASTHAN - 303338 PH :7412077022.
--	--	--	--	--	--	--	----------	---	---	----------	---	-------	--	-------	--	--------	---	-------	---	------	--	-------------	--	-------	--	---------	--	---------	--	------------	---	-----------	--	-----------------	--	--------	---	-------	---	--------	---	---------	--	--------	--	------------	---	-----------	--	-----------	---	---------------	---	----------	--	-----------	---	-------	---	-------	--	-------	--	----------	--	------	---	-------	---	-----------	---	----------	---	---------	--	---------	---

2365. KTL AUTOMOBILE PRIVATE LIMITED (-02), KHASRA NO. 21 TO 24 AND PLOT NO. 189, IN RAM VIHAR COLONY - 303338	2376. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), NH-65, OPP. BHAGAT SINGH CHOWK, RAJGARH DISTT. CHURU, - 331023 PH :9602261977.	REVDAR 2387. TECHNOY MOTORS INDIA PVT LTD (-01), OPP. TIRUPATI PETROL PUMP, KAROTI ROAD, REVDAR, DISTT. SIROHI, RAJASTHAN. - 307514	2397. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), KHASRA NO.134, MOTOR MARKET, RATANGARH SARDAARSHAHAR ROAD, SARDARSHAHAR DISTT. CHURU, RAJASTHAN - 331403 PH :9799833995.
PILIBANGA 2366. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), HANUMANGARH ROAD, PILIBANGA, DISTRICT-HANUMANGARH, RAJASTHAN - 335803	RAJSAMAND 2377. TECHNOY MOTORS INDIA PVT LTD (-01), ARAJI NO 241 - 242, DHOINDA, RAJASMAND, RAJASTHAN - 313324	SABLA 2388. TECHNOY MOTORS INDIA PVT LTD (-01), NEAR BP PETROL PUMP, SABLA ASPUR ROAD, SABLA, TEHSIL-ASPUR, DUNGERPUR, PIN-314022, RAJASTHAN - 314022	SARWAR 2398. RELAN MOTORS PVT LTD (-01), CHAMAN CHOURAHA, AJMER ROAD, SARWAR, DISTRICT - AJMER, RAJASTHAN 305403 - 305403 PH :9587687000.
PINDWARA 2367. NAVNEET MOTORS (-01), OPPOSITE WOLKEM FACTORY, SIROHI ROAD, PINDWARA, DIST. - SIROHI. - 307022	RAMGANJIMANDI 2378. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), KHAIRABAD ROAD, KHASARA NO. 753, A.S.I COLONY, RAMGANJ MANDI - 326519 PH :9414085790.	SAGWARA 2389. TECHNOY MOTORS INDIA PVT LTD (-01), BANSWARA ROAD, CHUNGINAKA, NR. CENTRAL JAIL, SAGWARA, DUNGARPUR DISTT., RAJASTHAN - 314025	SAWAI MADHOPUR 2399. PREM MOTORS PVT LTD (-01), PLOT NO.14, RIICO INDUSTRIAL AREA, KHERDA, SAWAI MADHOPUR - 322001
PIPAR 2368. L M J SERVICES LTD (-01), KHASRA NO. 1095, PIPAR CITY, DIST.-JODHPUR. - 342601 PH :9462616268.	RAMGARH 2379. M G MOTORS (-01), PLOT NO. 8, BALOT NAGAR, OLD DELHI ROAD, RAMGARH, ALWAR, RAJASTHAN - 301026	SALUMBAR 2390. NAVNEET MOTORS (-01), GANESH GHATI, BANSWARA ROAD, SALUMBAR, DISTRICT - UDAIPUR. - 313027 PH :7665887444.	SAYALA 2400. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), NEAR PETROL PUMP, HANUMAN MANDIR SOUTH STYLE, MAIN ROAD SAYALA, SAYALA TEHSIL - SAYALA, DISTRICT - JALORE, RAJASTHAN PIN CODE: 343022 - 343022 PH :9460739993.
PIRAWA 2369. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), PLOT NO.19, NEAR KRISHI UPJAI MANDI, SOYAT ROAD, PIRAWA, DIST. JHALAWAR, - 326034	RANIWARA 2380. SHRI KRISHNA AUTOSALES PVT LTD (-01), NEAR RAILWAY GATE, BHINMAL ROAD ,RANIWARA, TEHSIL - RANIWARA, DISTRICT - JALORE, RAJASTHAN, PIN CODE: 343040 - 343040 PH :9928377669.	SAMBHAR 2391. KTL AUTOMOBILE PRIVATE LIMITED (-01), PLOT NUMBER -C1 NEAR SHAKUMARI PG COLLEGE , PHULERA ROAD , SAMBHAR 303604 - 303604 PH :7412077022.	SHAHJAHANUR 2401. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), KHASRA NO. 1258, VPO SHAHJAHANPUR, DELHI-JAIPUR HIGHWAY, DISTRICT -ALWAR, RAJASTHAN - 301706 - 301706
PISANGAN 2370. AJMER AUTO AGENCIES PVT LTD (-01), PLOT NO.11, SHIV VIHAR COLONY, MANGLIYAWAS ROAD, PISANGAN, DISTRICT - AJMER, RAJASTHAN - 305204 PH :9314955201.	RATANGARH 2381. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), PLOT NO. AREA F-186 INDUSTRIAL AREA, RATANGARH. - 331022 PH :7412087301.	SAMRANIYA 2392. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), KHASRA NO.857/394, GADRETA BYPASS, SANTOSHI NAGAR, SAMRANIYA, - 325217	SHAHJAHANUR 2402. K.P. AUTOMOTIVES PVT LTD (1104-05), VILLAGE RAJUPURA, GRAM PANCHAYAT BIDARA, NH-8, SHAHPURA - 303103
POKHRAN 2371. L M J SERVICES LTD (-01), SUNDER NAGAR, TEHSIL POKHRAN, DISTRICT - JAISALMER, RAJASTHAN. - 345021 PH :9610115660.	RAWATBHATA 2382. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), NEAR INDIAN OIL PETROL PUMP, KOTA ROAD, RAWATBHATA , DIST. CHITTORGARH, RAJASTHAN. - 323307	SANCHORE 2393. SHRI KRISHNA AUTOSALES PVT LTD (-01), PLOT NO. 217, KHASRA NO. 844, 865, 867, MANMOHAN SINGH PARK, NH-15, BARMER ROAD, SANCHORE, DIST.-JALORE. - 343041 PH :9636224546.	SHEO 2403. L M J SERVICES LTD (-01), NEAR RIDDI SIDDIH HOTEL, OPPOSITE HP PETROL PUMP, TEH SHEO, DISTT - BARMER - 335521 PH :8094011144.
PRATAPGARH (RAJASTHAN) 2372. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), CHITTORGARH-PRATAPGARH ROAD, GRAM-BAMBOTARA, PRATAPGARH (RAJASTHAN) - 312605 PH :9571274999.	RAWATSAR 2383. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), CHAK 21-22, DWD, PLOT NUMBER -10 & 11, RAWATSAR (RAJASTHAN). - 335524	SANGARIA 2394. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), HANUMANGARH ROAD NEAR KARMA PETROL PUMP - 335035 PH :7412059827.	SHEOGANJ 2404. NAVNEET MOTORS (-01), F 132, OPP. 33/11 KV STATION, RIICO INDUSTRIAL AREA, SHEOGANJ, DISTRICT - SIROHI, RAJASTHAN - 307027 - 307027 PH :9414159146.
RAIPUR 2373. L M J SERVICES LTD (-01), NATIONAL HIGHWAY, PALI ROAD, VILLAGE - RAIPUR, DISTRICT - PALI. - 306304 PH :9269971266.	REENGUS 2384. JAMU AUTOMOBILES PVT LTD (-01), REENGUS HIGHWAY , REENGUS DISTT. SIKAR -332404 - 332404 PH :332404.	SANGOD 2395. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (-01), KHASRA NO 1637 , SANGOD BAPAPAR MAIN ROAD ,SANGOD - 325601 PH :9413353999.	SIKAR 2405. JAMU AUTOMOBILES PVT LTD (-01), F-54,,JAIPUR ROAD (NH-11),SIKAR - 332001
RAISINGHNAGAR 2374. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), PLOT NO. H-2, INDUSTRIAL AREA, RAISINGHNAGAR, DISTRICT - SRINGANGANAGAR. - 335051	RENWAL 2385. PREM MOTORS PVT LTD (-01), 193, JAIPUR CHOMU ROAD, NEAR 10 DUKAN , RENWAL KISHANGARH, JAIPUR, RAJASTHAN - 303904	SAPOTRA 2396. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (-01), VPO SAPOTRA, NEAR PETROL PUMP DIST. KARAUJI, PIN-322218 - 322218	SIKRAI 2406. VIPUL MOTORS PVT LTD (-01), OPP NAYARA PETROL PUMP, MANPUR ROAD SIKRAI, DAUSA (RAJASTHAN) - 303508
RAJGARH 2375. M G MOTORS (-01), ALWAR SIKANDRA MEGA HIGHWAY, VILLAGE DIGAWARA, TEHSIL RAJGARH DISTT. ALWAR - 301408 PH :9001795520.	RENWAL MANJHI 2386. PREM MOTORS PVT LTD (-01), KHASRA NUMBER 2286/110, OPP ROHINI NAGAR 1 ,JAIPUR BHILWARA HIGHWAY ,RENWAL,TEHSIL PHAGI JAIPUR, RAJASTHAN (303904). - 303904	SARDARSHAHAR	SIMALWARA

2407. NAVNEET MOTORS (-01), RAJPUR PEETH ROAD, SIMALWARA, DISTRICT - DUNGARPUR, RAJASTHAN - 314403 - 314403

SINGHANA

2408. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), NARNAUL ROAD, SINGHANA, DIST. JHUNJHUNU, PIN-333516, RAJASTHAN - 333516

SIROHI

2409. NAVNEET MOTORS (4902-03), PLOT NO. 8,BHADRANAGAR NAGAR, ANADRA ROAD, SIROHI - 307001 PH :779960989.

SIVANA

2410. L M J SERVICES LTD (-01), BALOTRA ROAD, SIWANA, DISTRICT - JODHPUR, RAJASTHAN. - 344044 PH :8005898360.

SOJAT

2411. L M J SERVICES LTD (-01), KHASRA NO. - 186/1, NH-8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT , RAJASTHAN - 306104 PH :9269971266.

SRI DUNGARGARH

2412. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), 1563/1273, NH-11, MOMASAR BASS, DUNGARGARH, DISTRICT - BIKANER, RAJASTHAN - 331803 PH :9414138511.

SRI GANGANAGAR

2413. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), NEW AUTOMOBILE MARKET SURATGARH-HANUMANGARH ROAD, SRIGANGANAGAR - 335001

2414. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-03), CHAK 1G CHOTI, NH15, SRIGANGANAGAR, RAJASTHAN - 335001 PH :8875911503.

SRI KARANPUR

2415. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), PADAMPUR ROAD, NEAR DHAN MANDI, SRI KARANPUR,TEHSIL - SRI KARANPUR, DISTRICT - SRI GANGANAGAR,RAJASTHAN, PIN CODE: 335073 PH :8875088998.

SRI MADHOPUR

2416. JAMU AUTOMOBILES PVT LTD (-01), WARD NO.4, RINGUS ROAD, SRI MADHOPUR DISTT. SIKAR. - 332715 PH :9116816905.

SUJANGARH

2417. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), KHASRA NO.459/333, SALASAR ROAD, NEAR ANAJ MANDI, SUJANGARH , DISTT. CHURU - 331507 PH :8875011561.

SULTANPUR

2418. SUWALKA MOTORS PRIVATE LIMITED (-01), KHASRA NUMBER 485, NEAR PETROL PUMP , SULTANPUR ROAD , SULTANPUR , DISTT KOTA - 332504 PH :7742121212.

SUMERPUR

2419. L M J SERVICES LTD (6502-08), G-14 JAKHAMATA INDUSTRIAL AREA, OPP. DASHAREA GROUND, SUMERPUR - 306902 PH :8094002633.

SURATGARH

2420. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-02), OPP. RELIANCE PETROL PUMP,NH-15, SURATGARH - 335804 PH :8875012667.

SWAROOPGANJ

2421. NAVNEET MOTORS (-01), NEAR POLICE STATION, NAYI BHAWARI., NATIONAL HIGHWAY 27, SWAROOPGANJ. - 307001

THANAGAZI

2422. M G MOTORS (-01), NEAR INDIA PETOL PUMP, THANAGAZI, ALWAR ROAD, DIST. ALWAR, PIN-301022, RAJASTHAN - 301022 PH :9799398200.

TIBBI

2423. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), NEAR KESARGARH PALACE, HANUMANGARH ROAD, TIBBI, DIST. HANUMANGARH, PIN-335526, RAJASTHAN - 335526 PH :9413311745.

TINWARI

2424. L M J SERVICES LTD (-01), OPPOSITE NEW TEHSIL OFFI CE, TIWARI, MATHANIA ROAD, TIWARI -342306 - 342306 PH :809011126.

TODARAISINGH

2425. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (-01), JAKHAD COLONY, NEAR ESSAR PETROL PUMP, TODARAISINGH, DIST. - TONK, RAJASTHAN-304505. - 304505

TONK

2426. K.P. AUTOMOTIVES PVT LTD (-01), F-84, RIICO INDUSTRIAL AREA, TONK , RAJASTHAN - 304001 PH :9549651972.

TUNGA

2427. PREM MOTORS PVT LTD (-01), VILLAGE GWALANI, BASSI-LALSOT ROAD, TUNGA, TEHSIL - BASSI, JAIPUR - 303302 - 303302 PH :8058998123.

UDAIPUR

2428. NAVNEET MOTORS (4901-49-01), 7 CITY STATION ROAD,UDAIPUR - 313001 PH :7230046375.

2429. NAVNEET MOTORS (4902-49-01), S-140,MADRI INDUSTRIAL AREA,OPP. BSNL OFFICE, UDAIPUR - 313002

2430. TECHNOY MOTORS INDIA PVT LTD (4903-49-02), NH-8, GOVERDHAN VILLAS, DEVALI, NEAR JEEVAN TARA RESORT, UDAIPUR - 313002 PH :7073468292.

2431. TECHNOY MOTORS INDIA PVT LTD (4903-49-04), KHASRA NO. 546, 547, 554 AND 555, NEAR CHITRAKOOT NAGAR, OPP. BHIRAVGARH HOTEL, SUKHER, TEHSIL - BADGAON, UDAIPUR, RAJASTHAN. - 313001

UDAIPURWATI

2432. AURIC MOTORS PVT LTD (-01), INFRONT OF FRAMA TRACTOR,SIKAR ROAD, POWER HOUSE UDAIPURWATI JHUNJHUNU - 333307

VATIKA

2433. SANGA AUTONATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (-01), PLOT NO.3 & 8, VINAYAK VIHAR, VATIKA, SANGANER, JAIPUR, PIN-303905, RAJASTHAN - 303905

VIRATNAGAR

2434. K.P. AUTOMOTIVES PVT LTD (-01), KHASRA NUMBER 1156, OPP HOTEL GULMOHAR ,JAIPUR ROAD ,VIRATNAGAR,DISTT JAIPUR - 303102

SIKKIM

GANGTOK

2435. ENTEL MOTORS (-01), 6TH MILE, P.O.TADONG, GANGTOK, SIKKIM - 737102

JORTHANG

2436. ENTEL MOTORS (-01), PIPELAY ROHTAK, NEAR JNU SCHOOL, WEST SIKKIM, JORTHANG - 737121

TAMIL NADU

ALANDURAI

2437. AADHI CARS PVT LTD (-01), NO.69/1 A, SIRUVANI MAIN ROAD, URIPALLAM PUDHUR, ALANDURAI, COIMBATORE (TAMIL NADU) - 641101 PH :8754045816.

ALANGUDI

2438. PLA MOTORS (-01), S. NO. 400/6-A-2, NO. 1/85, MANGALAPURAM, PUDDUKOTTAI T. ALANGUDI ROAD, NEAR KNP KALYANA MANDAPAM, ALANGUDI TOWN & TALUK, PUDUKKOTTAI DIST., TN - 622301 - 622301 PH :8870454466.

ALANGULAM

2439. AADHI CARS PVT LTD (-01), SURVEY NO. 495/7, TIRUNELVELI - TENKASI ROAD, ALANGULAM, TIRUNELVELI DISTRICT, TN - 627851 PH :8754044143.

AMBASAMUNDRAM (AMBAI)

2440. AADHI CARS PVT LTD (-01), DOOR NO. 2/253, SURVEY NO. 104/2, RTO OFFICE ROAD, VILLAGE - VAGAikulAM, AMBASAMUNDRAM. - 627401

AMBUR

2441. SRI AMMAN CARS INDIA PVT LTD (-01), 25/2A 25/2B 26/1&26/2, PLOT NO.42, SIDCO INDUSTRIAL ESTATE VINNAMANGALAM, CHENGILLUPPAM VILLAGE, AMBUR TALUK, TIRUPATHUR DIST., TAMILNADU - 631005

ANAMALAI

2442. ABT LIMITED (-01), SITE NO. 6/12, NEAR ABT SAMUGA KOODAM, SETHUMADAI ROAD, ANAMALAI, COIMBATORE DISTRICT, TAMILNADU - 642104 PH :9788174244.

ANDIPATTI

2443. ASIR AUTOMOBILES PVT LTD (-01), SURVEY NO. 459/1A1, THENI MAIN ROAD, ANDIPATTI, THENI DISTRICT,TAMILNADU - 625512

ANJUGRAMAM

2444. ATHEN CARS (-01), 994/6A, VARIYOOR, ANJUGRAMAM, AGASTHEESWARAM TALUK, , - 629401

ANNUR

2445. JAIRISHNAA AUTOSALES PVT LTD (-01), SF NO.266/1B, OTTRAPALAYAM VILLAGE, OPP. TO KG SCHOOL, ANNUR,COIMBATORE (DIST), TAMILNADU - 641653 PH :9788850733.

ANTHIYUR

2446. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO.495/4, OLD NO.7248, KANCHI THOTTI THOTTAM, BHAVANI MAIN ROAD,ANTHIYUR. - 638501 PH :8754086777.

ARACHALUR

2447. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SF NO. 63/2, DOOR NO: 19, ST-1, NAGARAJAPURAM, KODUMUDI ROAD, ARACHALUR, ERODE DIST., TAMILNADU- 638101. - 638101

Dealer Workshop (AS ON 31.01.2026)

ARAKKONAM	2448. GANESH CARS PVT LTD (-01), SURVEY NO. 556A/3, VILLAGE - ICHIPUDHUR, TALUKA - ARAKKONAM, VELLORE. - 631003 PH :9842345399.	2457. AIE CARS PVT LTD (-02), DOOR NO. 41, GST ROAD, PULIPAKKAM, CHANGELPET, TAMILNADU - 603202	2472. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-03), NO. 3, 200 RING ROAD, RETTERI JUNCTION, RETTERI, CHENNAI - 600099	2487. POPULAR VEHICLES AND SERVICES LIMITED (-06), PLOT NO. 10, NEW SURVEY NO. 88/1A1, 88/1C, 88/1B & 88/2B, NOOMBAL MAIN ROAD, VANKAKARAM, CHENNAI. - 600077
		CHENGAM	2473. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-05), PLOT NO. - 80, BABU JAGAGEVAN RAM STREET, GERUGAMBAKKAM, CHENNAI - 600112 PH :9952000079.	2488. AIE CARS PVT LTD (1496-14-02), PLOT NO. L-1 SIDCO INDUSTRIAL ESTATE, VILLIVAKKAM, CHENNAI, TAMIL NADU. - 600049
ARIYALUR	2449. PILLAI & SONS MOTOR COMPANY (-01), NO.1/1 NEAR ULAVAR SANTHAI, JAYAMKONDAM ROAD, ARIYALUR (TAMIL NADU). - 621704	2458. GANESH CARS PVT LTD (-01), SURVEY NO. 293/3A, 3A1, VILLAGE - THUKAPETTAI, CHENGAM, DIST.-TIRUVANNAMALAI. - 606701 PH :7397395289.	2474. KHIVRAJ MOTORS PVT LTD (1404-14-03), SURVEY NO. A1& A2, SIDCO INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032 PH :7299971978.	2489. VISHNU CARS PVT LTD (1427-14-07), SURVEY NO. 19/1A2, 83/18, DOOR NO. 113, NEAR PARIMALAM THEATER, KUNDRATHUR MAIN ROAD, MANNADY THALAI, NALLUR, SAMBA THALAI, MOONRAKKATTALAI VILLAGE, ONDI COLONY, KUNDRATHUR, CHENNAI. - 600069
		CHENNAI	2475. ABT LIMITED (1401-14-0D), NO.2/170, ECR ROAD, INJAMBAKKAM, CHENNAI TAMIL NADU. - 600041	2490. VISHNU CARS PVT LTD (-14-08), SURVEY NO. 62/2B, DOOR NO. 1/63, AGARAM MAIN ROAD, THIRUVANCHERRY VILLAGE, TAMBARAM TALUK, SELAIYUR, KANCHIPURAM DIST., CHENNAI , TAMIL NADU. - 600073 PH :8056260022.
ARNI	2450. GANESH CARS PVT LTD (-01), DOOR NO. 1151/3, VELLORE MAIN ROAD, OPPOSITE TO HERO MOTORS SHOWROOM, RATNAMANGALAM BUS STOP, ARNI, THIRUVANAMMALAI, TAMIL NADU. - 632301 PH :9585553266.	2459. ABT LIMITED (1401-14-01), # 355-A, GST ROAD, ALANDUR, CHENNAI, TAMILNADU - 600032	2476. AIE CARS PVT LTD (1496-01), PLOT NO.1,2,3 & 4, SURVEY NO.91/2, B1, A2 & B, NEELANKARAI, EAST COAST ROAD, CHENNAI - 600115	2491. ABT LIMITED (1401-14-10), S. NO: 32/2, NANDAMBAKKAM, PADMINI GARDEN, CHENNAI - 600089, TN. - 600089
			2477. RAJALAKSHMI CARS PVT LTD (1486-01), OLD DOOR NO.69, NEW DOOR NO.20,GRAND NELLORE TRUNK ROAD, MADHAVARAM, CHENNAI. - 600060	2492. VISHNU CARS PVT LTD (1488-14-01), DOOR NO. 8, NP INDUSTRIAL ESTATE, JAWAHARLAL NEHRU ROAD, EKKATUTHANGAL, CHENNAI,TN - 600032 PH :7550360444.
ARUPPUKOTTAI	2451. ASIR AUTOMOBILES PVT LTD (-01), SURVEY NO. 205/1, 5/5C, NEHRU NAGAR, ARUPPUKOTTAI TO MADURAI BYPASS ROAD, ARUPPUKOTTAI, DIST.-VIRUDHUNAGAR. - 626101 PH :9944059911.	2460. KHIVRAJ MOTORS PVT LTD (1404-14-01), 623 MOUNT ROAD, CHENNAI - 600006 PH :9043014530.	2478. KHIVRAJ MOTORS PVT LTD (1480-02), PLOT NO.119 & 120, ELECTRICAL & ELECTRONICS INDUSTRIAL ESTATE, PERUNGUDI, CHENNAI - 600096	2493. KHIVRAJ MOTORS PVT LTD (1404-14-G1), SURVEY NO.76/A, NO.27, PLOT NO. D-2, KEELAKOTTAIYUR, VANDALUR TO KEELAMBAKKAM MAIN ROAD, MAMBAKKAM, CHENGALPET, CHENNAI,TN - 600127 PH :9841591558.
		2461. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-01), 16 & 17 INDUSTRIAL ESTATE, AMBATTUR, CHENNAI - 600058 PH :9952000089.	2479. ABT LIMITED (1401-0E), NO. 1/132, RAJEEV GANDHI SALAI, SHOLINGANALLUR, DISTRICT - CHENNAI, TAMIL NADU. - 600119	2494. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-G1), SURVEY NO: 18/1B2A1A, NAZARTHPET VILLAGE, POONAMALLE, CHENNAI, TAMIL NADU- 600123 - 600123 PH :7994449644.
ATTUR	2452. S M CAR PVT LTD (-01), SF NO. 351/10A, SALEM TO CHENNAI BY PASS ROAD, APPAMASAMPURAM, ATTUR, SALEM. - 636108 PH :7094440057.	2462. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-02), NO.17, LATTICE BRIDGE ROAD, ADYAR, CHENNAI - 600020	2480. VISHNU CARS PVT LTD (1427-14-03), 4/13 LOYAL GARDEN, KALAHATHAMMAN KOVIL STREET, RAMAPURAM, CHENNAI, TAMIL NADU. - 600089	2495. ABT LIMITED (1401-14-11), OLD SURVEY NO: 84/1A & 85/1A, NEW TOWN SURVEY NO:1, RACE COURSE ROAD, GUINDY, CHENNAI, TAMILNADU - 600032 PH :999437421.
		2463. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-02), OLD NO.155, NEW NO.123, PONNANJITHAM COMPLEX, MEDAVAKKAM MAIN ROAD, NEAR BUS TERMINUS, KEEKATTALAI, CHENNAI - 600117	2481. VISHNU CARS PVT LTD (1487-14-01), NO.203 TO 206 MOUNT POONAMALLE ROAD, KATTUPAKKAM, CHENNAI - 600056 PH :967717432.	2496. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (-14-05), NO. 273,(OLD NO.191), TAMBARAM- VELACHERY MAIN ROAD, NARAYANAPURAM, PALLIKARAI, CHENNAI,TN - 600100
AVADI	2453. VISHNU CARS PVT LTD (-01), SURVEY NO. 146, 147/1F & 147/G, NO. 17 VILLAGE - KAVARAPALAYAM, CTH ROAD, AVADI, DISTRICT - THIRUVALLUR, CHENNAI, TAMIL NADU - 600054	2464. ABT LIMITED (1401-14-05), A/A2, BHARANI STUDIO COMPLEX, DR. BHANUMATHI KRISHNA ROAD,22, ARCOT ROAD, SALIGRAMMAM, CHENNAI - 600093	2482. VISHNU CARS PVT LTD (1487-14-02), NO.120, MAMBAKKAM MAIN ROAD, MEDAVAKKAM, CHENNAI - 600100	2497. POPULAR VEHICLES AND SERVICES LIMITED (1410-07), NEW S NO:2/7B,3/2A3B, 3/7B & 4/8B (OLD S. NO:2/1B, 3/2,3/3B, 4/4) SEMBIUM- RED HILLS ROAD, NEAR AMBEDKAR STATUE, KATHIRVEDU, AMBATTUR TALUK, THIRUVALLUR DIST., CHENNAI, TN-600066 - 600066
		2465. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-03), 4/321, OLD MAHABALIKPURAM RD., KOTTIVAKKAM, CHENNAI - 600040	2483. VISHNU CARS PVT LTD (1427-14-04), NEW S. NO. 314/1B1A, PALLAVARAM - THORAIPAKKAM RADIAL ROAD, NEAR OLD CHETTINAD CEMENT GOWDOWN, KEELAKATTALAI, CHENNAI. - 600117 PH :9940057775.	
AVINASHI	2454. SHASHTI CAR PRIVATE LIMITED (-01), SURVEY NO. 373/1E, THEEKU THOTTAM, NALLIGOUNDANPALAYAM, PALANGARAI, KUPPUDAMPALAYAM POST, NH ROAD, AVINASHI EAST, TIRUPPUR DISTRICT, TAMILNADU - 641654 PH :9422903319.	2466. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-01), NEW DOOR NO.256 (OLD DOOR NO. 93), ARCOT ROAD, VIRUGAMBAKKAM, CHENNAI, TAMIL NADU-600092 - 600093	2484. VISHNU CARS PVT LTD (1427-06), PLOT NO. 4, MORISON 4 STREET, ALANDUR, CHENNAI. - 600016	
		2467. ABT LIMITED (1401-14-07), NO. 422, KOLAPERUMAL SCHOOL STREET, POONMA MALLE HIGH ROAD, CHENNAI - 600106	2485. RAJALAKSHMI CARS PVT LTD (1486-02), OLD NO. 27, NEW NO. 22A, ALAPAKKAM MAIN ROAD, MADURAVOYAL CHENNAI. - 600095	
BHAVANI	2455. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-05), NO.5/1072, LAKSHMI NAGAR, NH-47, VASAVI COLLEGE (P.O.), BHAVANI, ERODE (DIST), TAMIL NADU. - 638316 PH :9597385777.	2468. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (1493-14-01), 5,THIRUMURUGAN ST, KOYAMBEDU, CHENNAI - 600107 PH :7305087055.	2486. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (1493-03), PLOT NO. G30, 3RD MAIN ROAD, 9TH STREET, AMBATTUR INDUSTRIAL ESTATE, DIAGONALLY TO TELEPHONE EXCHANGE, CHENNAI. - 600058 PH :7305087033.	
		2469. ABT LIMITED (1411-14-01), 29, WALLS ROAD, OPP. ALBERT THEATER, EGMORE, AMBATTUR, CHENNAI - 600058		
CHENGALPETTU	2456. AIE CARS PVT LTD (-01), PLOT NO. 98/1, PULIPAKKAM VILLAGE, CHENGALPETTU, DISTRICT-KACHEEPURAM, TAMIL NADU. - 603002	2470. VISHNU CARS PVT LTD (1427-14-02), 176/1, LUZ CHURCH ROAD, NEAR KAMADHENU THEATRE MYLAPORE, CHENNAI - 600094		
		2471. VISHNU CARS PVT LTD (1427-14-01), NO. 91, GST ROAD, ALWITONE ESTATE, BEHIND LAXMI THEATRE, PALLAVARAM, CHENNAI - 600043		

2498. INDUS MOTOR COMPANY PRIVATE LIMITED (1495-14-01), 51/1A, DOOR NO.6, NEARBY CHENNAI TRADE CENTRE, MOUNT POONAMALLE ROAD, NANDAMBAKKAM, CHENNAI, TAMILNADU-600089. - 600089	2510. ABT LIMITED (4101-41-05), LAKSHMI THEATRE BUILDING, T.S. NO. 1189/2, TS WARD NO. 3, KEMPATTY COLONY, SOUTH UKKADAM, COIMBATORE - 641001	2524. AADHI CARS PVT LTD (4108-41-06), SF NO. 14/78-A, RENUKA SHELTERS, VILANKURICHI MAIN ROAD, KALAPATTI, COIMBATORE, TAMIL NADU-641048. - 641006 PH : 8754045840	2535. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-04), OPP. TO ANJANEYAR TEMPLE, NEAR FIVE CORNER, MADURAI ROAD, DHARAPURAM - 638656 PH : 9597550777
2499. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (-01), NO.503/1, GNT ROAD, THANDALKAZHANI, PUZHAL, REDHILLS, CHENNAI, TN-600066 - 600066	2511. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-03), 555, NSR ROAD, SAIBABA COLONY, COIMBATORE - 641011 PH : 9047055667	2525. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-11), PLOT NO. 1, RAJA STREET, KALLIMADAI, NANJAPPA NAGAR, COIMBATORE, TAMIL NADU - 641005 PH : 9344870035	2536. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SF 134/4A3, DINDIGUL BYPASS ROAD, NEAR INDIAN OIL PETROL PUMP, DHARAPURAM TOWN AND TALUKA, TIRUPPUR DIST., TAMILNADU-638656 - 638656 PH : 9787853000.
2500. ABT LIMITED (1401-14-12), SURVEY NO # : 27, VELACHERY MAIN ROAD, RAM NAGAR NORTH, MADIPAKKAM, CHENNAI, TAMILNADU-600091 - 600091	2512. ABT LIMITED (4101-41-08), 15/55-C, ALAGESAN ROAD (EAST), METTUPALAYAM ROAD, COIMBATORE - 641043	2526. AADHI CARS PVT LTD (4108-41-07), SF NO: 404/1, VAIKALPALAM, PERUR MAIN ROAD, PERUR, COIMBATORE, TAMILNADU-641010 - 641010	DHARMAPURI
2501. AIE CARS PVT LTD (1496-14-03), SURVEY NO: 160/2A, 160/1C, 160/2A1 A2 & 160/2B2, KRISHNA NAGAR, MUDICHUR ROAD, WEST TAMBARAM, TAMBARAM TALUK, CHENGALPET DISTRICT, CHENNAI, TAMILNADU-600045. - 600045	2513. JAIKRISHNAA AUTOSALES PVT LTD (4107-41-01), 8/60-C&8/62-D, METTUPALAYAM ROAD, G.N.MILLS POST, NEARJOHNBOSSO CHURCH, COIMBATORE - 641029	2527. ABT LIMITED (4101-41-12), D.NO 13/7-I THONDAMUTHUR ROAD, BOMMANAPALAYAM, PN PUDUR - 641041	2537. SRI AMMAN CARS INDIA PVT LTD (-02), NEAR COLLECTOR BUNGALOW, OLD HOSUR ROAD, JETTHALLI (PO), DHARMAPURI, TAMILNADU - 638607
2502. VISHNU CARS PVT LTD (1427-14-09), SURVEY NO:44/1,44/1B1A &44/1A1A, RAJESH NAGAR, IRUMBULIYUR VILLAGE, SERVICE ROAD-MADURAVOYIL BYPASS, WEST TAMBARAM, CHENNAI, TAMILNADU - 600045	2514. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-07), NO 44, KANNUSAMY GOUNDER STREET, OORGOUNDER THOTTAM, SANGANUR, COIMBATORE - 641027 PH : 9655219900.	2528. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-12), 313/1H1, KARASAKADU THOTTAM, GANESH NAGA MALLUMCHAMPATTI, POLLACHI MAIN ROAD - 641001	DINDIGUL
2503. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (1493-14-06), G-17, 1ST MAIN ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI, TAMILNADU-600058 - 600058	2515. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-08), SF-94, SATHY MAIN ROAD, VISVASAPURAM, SARAVANNAMPATTI, COIMBATORE - 641013 PH : 9585877775.	COONOOR	2538. PL.A. MOTORS FIRM (-01), NO. 5, TRICHY MADURAI BY PASS ROAD, NH-45, DINDIGUL - 624001 PH : 7010075200.
CHEETPET	2516. JAIKRISHNAA AUTOSALES PVT LTD (4107-41-02), DOOR NO. 48, KAMARAJ ROAD, LAKSHMIPURAM, PEELAMEDU, COIMBATORE, TAMIL NADU - 641004	2529. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), 78 E, BRINDAVAN SCHOOL ROAD, CONOOR, NILGRIS DIST- TN - 643102	EDAYARPALAYAM, COIMBATORE
2504. GANESH CARS PVT LTD (-01), DOOR NO: 35/C, CHETPET TOWN, CHETPET TALUKA, TIRUVANNAMALAI DIST., TAMILNADU, - 606801	2517. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-0D), 98/1 VILANKURICHI MAIN ROAD, THANEER PANDAL ROAD, COIMBATORE - 641004 PH : 9655345775.	CUDDALORE	2539. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SITE NO. 2, SY. NO. 404/1A1, THADAGAM ROAD, TVS NAGAR, EDAYARPALAYAM, COIMBATORE - 641025 PH : 9047081914.
CHEYEAR	2518. AADHI CARS PVT LTD (4108-01), SURVEY NO. 469/2, DOOR NO: 46-2, SATHY MAIN ROAD, RAMAKRISHNAPURAM, GANAPATHY, COIMBATORE - 641035	2530. ABT LIMITED (-01), K. V. SUBRAMANIAM NAGAR, CHIDAMBARAM MAIN ROAD, CUDDALORE O. T - 607003	ERODE
2505. GANESH CARS PVT LTD (-01), NO.16, KANCHEEPURAM ROAD, CHEYYAR, TIRUVANNAMALAI DISTT. - 604407 PH : 9787669339.	2519. ABT LIMITED (4101-41-0D), 36-A GANDHI NAGAR, SUNDARAPURAM, COIMBATORE (DIST) COIMBATORE - 641024	2531. VISHNU CARS PVT LTD (-01), SURVEY NO. 35/8, 35/8A, 35/21, 35/6, 35/6A1A, 35/20, VILLAGE - PERIYA KANAGAKUPPAM, CUDDALORE - 607001 PH : 7338884131.	2540. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), 23/1, PERUND, URAI ROAD, ERODE, - 638011 PH : 9677987777.
CHIDAMBARAM	2520. AADHI CARS PVT LTD (4108-02), NEAR KOVAI MEDICAL CENTRE & HOSPITAL, AVINASHI ROAD, CIVIL AERODROME POST, CHINNIYAMPALAYAM, COIMBATORE - 641004	CUMBUM	2541. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-06), SURVEY NO. 1363/3, 1363/5, 1363/6, BEHIND MANIKAVASAKAR COLONY BUS STOP, OPPOSITE TO CANARA BANK, KARUR BYPASS ROAD, SOLAR, ERODE. - 638002 PH : 6385805777.
2506. VISHNU CARS PVT LTD (-01), SURVEY NO. 102/2 & 102/5, BHUVANAGIRI MAIN ROAD, KEERAPALAYAM, CHIDAMBARAM TOWN, CUDDALORE, TAMIL NADU. - 608602	2521. AADHI CARS PVT LTD (4108-41-03), NO.71, OLD SRIRAM THEATRE COMPLEX, MARUDHA MALAI MAIN ROAD, VADAVALLI, COIMBATORE - 641041	2532. MEENAKSHI AUTO ZONE PVT LTD (-01), PATTA NO. 4388, SURVEY NO. 1003/2 & 1003, VILLAGE - UTHAMAPURAM, SUB DIST.-CUMBUM, TAMIL NADU. - 625516 PH : 9940094881.	2542. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (-01), OLD G.S. NO. 337 (1 TO 4), RS NO. 259/11A, 10.9.8., SATHY ROAD, PERIYA SEMUR VILLAGE, ERODE, TAMILNADU - 638003 PH : 9171919991.
CHINNANAMUR	2522. AADHI CARS PVT LTD (4108-41-04), PLOT NO.295, RADHA RANI THEATER COMPLEX, NEAR JAYASHANTHI THEATER, TRICHY ROAD, ONDIPUDUR, COIMBATORE. - 641005	DENKANIKOTTAI	2543. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-08), RF. NO. 17/1, 2, CAVERI ROAD, KARUNALPALAYAM, ERODE ,TAMILNADU - 638003 PH : 8098825000.
2507. ABT LIMITED (-01), SF NO. 446 /1A, WARD A, BLOCK-2, TS NO.8/15, PERIYAKULAM TO CHINNANAMUR MAIN ROAD, KEELAPOOLANANDHAPURAM, CHINNANAMUR MUNICIPAL TOWN & TALUK, THENI DIST., TN- 625515 - 625515 PH : 9715863213.	2523. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-0E), PLOT NO. 210, PALAKAD ROAD, BK PUDUR, COIMBATORE, TAMIL NADU. - 641008	DEVAKOTTAI	2544. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-09), SF: NO.245, KANDHAIYAN THOTTAM, SOOLAI, SATHY ROAD, VEERAPPANCHATTIRAM, ERODE, TAMILNADU - 638004 PH : 9655240486.
COIMBATORE		2534. SIVA AUTOMOTIVE TRADING PVT LTD (-01), SURVEY NO. 5/1A, MULLI IGUNDU (SOMANENTHAL VILLAGE), DEVAKOTTAI TALUK, SIVANGANGI DISTRICT, TAMILNADU - 633003 PH : 7094688870.	
2508. ABT LIMITED (4101-41-06), 744, PULIYAKULAM ROAD, P.N. PALAYAM, COIMBATORE - 641037 PH : 9944400987.		DHARAPURAM	
2509. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-01), IYER HOSPITAL PREMISES, TRICHY ROAD, COIMBATORE - 641005 PH : 8220862666.			

Dealer Workshop (AS ON 31.01.2026)

2545. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (-02), R.S. NO:1098/3, VINAYAGAR KOVIL STREET, TELEPHONE NAGAR, POONDURAI MAIN ROAD, ERODE, TAMILNADU - 638002 PH :9626671444.	2556. ABT LIMITED (-01), SURVEY NO. 215/4, NEAR AKT SCHOOL, DURUGAM ROAD, NEAR DOORDARSHAN BLDG, NEELAMANGALAM VILLAGE, KALLAKURICHI TALUK & DIST., TAMILNADU - 606202 PH :9047514890.	2566. VISHNU CARS PVT LTD (-01), SURVEY NO. 6& 7, PERIYAKULAM VADA KARAI, OPP TO GNANAVINAYAGAR KOIL, KATTUMANNARKOIL TOWN AND TALUK, CUDDALORE DIST., TAMILNADU - 608301 PH :7358004555.	2576. PILLAI & SONS MOTOR COMPANY (-06), D. NO. HP-1, GOVT. INDUSTRIAL ESTATE, SIDCO, THIRUBHUVANAM TOWN & POST, KUMBAKONAM, THANJAVUR DISTRICT, TAMILNADU - 612103 PH :8489900136.
GANGAVALI	2557. S M CAR PVT LTD (-01), SF: 31/3B, NO. 19 EMAPPER VILLAGE, KALLAKURICHI, TAMILNADU - 606213 PH :7094440010.	KAWALKINARU	2577. PL A MOTORS (-01), 139/2, 139/3, VELAPETTAI AGRAHARAM, CHENNAI BYPASS ROAD, KUMBAKONAM - 612501
2546. THRIVENI CAR COMPANY PVT LTD (-01), SURVEY NO # SF NO. 22/3A1A, 106 ATTUR MAIN ROAD, GANGAVALLI, SALEM, TN - 636105 PH :9159729999.	KANCHEEPURAM	2567. AADHI CARS PVT LTD (-01), SURVEY NO:1943/1, SURESH COMPLEX, KANYAKUMARI BYEPASS ROAD, KAVALKINARU JUNCTION, KAVALKINARU (VADAKANKULAM), TIRUNELVELI - 627105 PH :7339111259.	LALGUDI
GOPICHETTIPALAYAM	2558. GANESH CARS PVT LTD (-02), ANBU NAGAR, DHIMMA SAMUDRAM POST, NEAR VELLA GATE, CHENNAI BANGALORE NH-4, KANCHEEPURAM - 631502 PH :9842306061.	KELAMBAKKAM	2578. PILLAI & SONS MOTOR COMPANY (-01), SURVEY 98/4, ANGARAI VILLAGE, LALGUDI TALUK, TIRUCHIRRAPALLI VILLAGE, LALGUDI, TAMIL NADU - 621601
2547. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-03), NO. 318, CUTCHERY, GOBICHETTIPALAYAM - 638476 PH :9597560777.	KANGAYAM	2568. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (-01), AGP MAHAAL, SURVEY NO.43, OMR, 60 FEET VEERANAM HIGH ROAD, PADUR, KELAMBAKKAM, CHENGALPATTU DISTRICT, TAMIL NADU - 603103 PH :7305087002.	MADATHUKULAM
GUDALUR	2559. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), NO. 407/263, TIRUPPUR ROAD, KANGAYAM TALUK & TOWN, TIRUPPUR DIST. ,TAMIL NADU - 638701 PH :7085317777.	KINATHUKADAVU	2579. ABT LIMITED (-01), SF NO:143/A2D, 143/A2B, NO-88.SY. NO. NH 209, NEAR UNION OFFICE, AGRAHARAKANNADIPUTHUR VILLAGE, UDUMALAI MAIN ROAD, MADATHUKULAM, TIRUPPUR DIST, TN - 642113
2548. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), 12/294 B6- B9, SURVEY NO 297/3A, SULTHAN BATTERY- DEVARSHOLA- GUDALUR ROAD, GUDALUR, NILGIRIS, TN- 643212 - 643212	KARAIKUDI	2569. AADHI CARS PVT LTD (-01), NO.212, KAMARAJ NAGAR, SOLAVALAM PALAYAM PANJAYATH, KINATHUKADAVU DISTT. COIMBATORE (T.N.) - 642109	MADURAI
GUDIMANGALAM	2560. ABT LIMITED (4202-05), 42-43 KOVILLOOR ROAD, OPP. TNSTC DEPOT - 630302	KODUMUDI	2580. ABT LIMITED (4202-02), MADURAI-DINDIGAL BYE PASS ROAD, NEAR FATHIMA COLLEGE, MADURAI - 625018
2549. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO 347 7 347/1, GUDIMANGALAM, TAMIL NADU - 642201	2561. SIVA AUTOMOTIVE TRADING PVT LTD (-01), NO. 73, SUBRAMANIPURAM 9TH STREET, COLLEGE ROAD, KARAUKUDI, SIVAGANGA DIST, TAMILNADU-630002 - 630002 PH :7402710000.	2570. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO.548/A, KARUR MAIN ROAD, NEAR BUS STAND, KODUMUDI - 638151 PH :8754756777.	2581. ABT LIMITED (4202-42-04), 09, 109A, GST ROAD, TIRUPARANKUNDRAM, MADURAI - 625005 PH :9600966164.
GUDIYATHAM	KARUMATHAMPATTI	KOTAGIRI	2582. SIVA AUTOMOTIVE TRADING PVT LTD (4205-01), 2C, GATE LOCK ROAD, NEAR NEW RAMNAD ROAD, MADURAI - 625016 PH :7402780000.
2550. GANESH CARS PVT LTD (-01), SURVEY NO 250/1, NEAR NH-75, GANDHI NAGAR, SETHUVADAI, GUDIYATTAM - 635803	2562. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SF: NO 281/B, NEAR BHARAT PETROL BUNK, VILLAGE - VAGUTHANKADU, SOMANUR ROAD, KARUMATHAMPATTI TOWN, TALUK-PALLADAM, DISTT. COIMBATORE - 641659 PH :9159210008.	KOVILPATTI	2583. ASIR AUTOMOBILES PVT LTD (4206-01), 9, CHAMBAKULAM, MELUR MAIN ROAD, MATTUTHAVANI, MADURAI, TAMIL NADU - 625007 PH :9944059911.
GUDUVANCHERY	KARUNGAL	2571. AADHI CARS PVT LTD (-01), SURVEY NO.89/79, OOTY MAIN ROAD, KOTAGIRI, DISTT. NILGIRIS, TAMIL NADU - 643217	2584. SIVA AUTOMOTIVE TRADING PVT LTD (4205-02), NO. 6-A, TPK ROAD, NEAR SAIBABA TEMPLE, ANDALPURAM, MADURAI - 625003
2551. VISHNU CARS PVT LTD (-01), 52, THAILAVARAM VILLAGE, BEHIND HOTEL PATTIKADU, GUDUVANCHERRY, KANCHEEPURAM DISTT. - 603203	2563. ATHEN CARS (-01), SURVEY NO. 639/5, KARUNGAL TOWN, VILAVANCODE TALUK, KANYAKUMARI DISTRICT, TAMILNADU - 629157 PH :7094434179.	KOVILPATTI	2585. MEENAKSHI AUTO ZONE PVT LTD (4207-01), PLOT NO. 25 D, SIDCO INDUSTRIAL ESTATE, KAPPALAR, MADURAI, TAMIL NADU - 625008 PH :9442799581.
GUMMIDIPOONDI	2564. ABT LIMITED (-01), SF NO. 529/1, SALEM BY PASS, ROAD, VENGAMEDU CIRCLE, SEMMADAI - 639002	KRISHNAGIRI	2586. MEENAKSHI AUTO ZONE PVT LTD (4207-42-02), SURVEY NO. 238/2A, PLOT NO. 36, 37, 38, TALLAKULAM VILLAGE, SIVAGAMI NAGAR, NATHAM MAIN ROAD, MADURAI - 652014 PH :9940224881.
2552. RAJALAKSHMI CARS PVT LTD (-01), PLOT NO. F-13, SURVEY NO. 262/2, SIPCOT INDUSTRIAL COMPLEX, VILLAGE - PAPPANAKUPPAM, GUMMIDIPOONDI, THIRUVALLUR - 601201	KATPADI	2573. SRI AMMAN CARS INDIA PVT LTD (-03), NH-7.NR. AAVIN DAIRY MOTTUR, SALEM BYE PASS ROAD, KRISHNAGIRI, TAMILNADU - 635001	2587. SIVA AUTOMOTIVE TRADING PVT LTD (4205-42-03), PATA NO. 615, SURVEY NO. 32/2, 32/4, THENI MAIN ROAD, ACHAMPATHU, MADURAI, TN - 625019 PH :7402738888.
HARUR	2565. GANESH CARS PVT LTD (-04), 170/2B THIRUVALLAM ROAD, ARUMPARUTHI VILLAGE, KATPADI, VELLORE DISTT. - 632004 PH :9842313139.	KULASEKHARAM	MADURANTHAKAM
2553. SRI AMMAN CARS INDIA PVT LTD (-01), 429/9, HARUR SALEM MAIN ROAD, HARUR POST, DHARMAPURI, TAMIL NADU - 636903	KATTUMANNARKOIL	2575. PILLAI & SONS MOTOR COMPANY (-02), 369/2 B, KUMBakonam CHENNAI MAIN ROAD, KUMBakonam , TANJAVUR - 612501	2588. AIE CARS PVT LTD (-01), SURVEY NO. 38/3 A2B, NH-45, MADURANTHAKAM, KANCHIPURAM - 603306
HOSUR			
2554. SRI AMMAN CARS INDIA PVT LTD (-01), P.O.- PERANDAPALLI, NH-7, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109			
IDAPPADI			
2555. THRIVENI CAR COMPANY PVT LTD (-01), SURVEY NO.330/3B1B, AVANI PERUR KILMUGAM VILLAGE, IDAPPADI DISTT. SALEM - 637101 PH :9003311488.			
KALLAKURCHI			

MALLASAMUDRAM

2589. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(-01), SF NO. 194/3C, MALLASAMUDRAM MAIN
ROAD, MALLASAMUDRAM TOWN,
TIRUCHENGODE TALUK, NAMAKKAL DIST.,
TAMIL NADU - 637503
PH :9894932019.

MALLUR

2590. THRIVENI CAR COMPANY PVT LTD (-01),
SURVEY NO.50/4A, AMANI AMMAPALAYAM
VILLAGE, DISTT.: DADHAGAPATTY SUB
REGISTRATION , MALLUR DISTT. SALEM -
636309

MANAMADURAI

2591. ABT LIMITED (-01), NO. 35, OLD RAMNAD
ROAD, MANAMADURAI TOWN, DISTRICT -
SIVGANGAI. - 630606
PH :9994450331.

MANAPPARAI

2592. PILLAI & SONS MOTOR COMPANY (-01), PLOT
NO.262, TRICHY DINDIGUL BYPASS ROAD,
VENGAIKURUCHI VILLAGE,MANAPPARAI,
TRICHY,TN - 621307
PH :8489900908.

MANGALAPURAM

2593. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(-01), DOOR NO. 1/518, SURVEY NO. 75/1,
ATTUR MAIN ROAD, MANGALAPURAM (POST),
TALUK - RASIPURAM, DISTRICT - NAMAKKAL. -
636202
PH :7094447871.

MANNARGUDI

2594. PILLAI & SONS MOTOR COMPANY (-01), NO. 37,
THIRUTHURAIPOONDI ROAD, MANNARGUDI,
THIRUVARUR DISTRICT, TAMIL NADU. - 614001
PH :7094411675.

MAYILADUTHURAI

2595. PILLAI & SONS MOTOR COMPANY (-04),
46,VELLALAGARAM VILLAGE,
MAYILADUTHURAI, TAMILNADU - 609007

MECHERI

2596. S M CAR PVT LTD (-01), SURVEY NO. 139A/5,
PATTI NO. 653, AMANI M.KALIPATTY VILLAGE,
MECHERI TOWN, METTUR TALUK, SALEM
DIST., TAMIL NADU. - 636453
PH :7094440010.

MELUR

2597. SIVA AUTOMOTIVE TRADING PVT LTD (-01),
OLD SN. 138/1, SURVEY WARD C, BLOCK NO. 1,
T.S. NO. 217, VILLAGE AND TOWN - MELUR,
MELUR, DIST.-MADURAI. - 625109
PH :8098120000.

METTUPALAYAM

2598. ABT LIMITED (4101-0C), PLOT NO. 6 TO
9,PONVIZHA NAGAR, KARAMADAI KOVAI MAIN
ROAD, METTUPALAYAM - 641043

METTUR

2599. THRIVENI CAR COMPANY PVT LTD (-01), S.F.
NO. 73/7A3C, METTUR TO BHAVANI ROAD,
NEAR NATAMANGALAM BUS STOP,
MADHAIYANKUTTAI (PO), METTUR TALUK,
SALEM, TAMILNADU - 636452
PH :9159566999.

MINJUR

2600. RAJALAKSHMI CARS PVT LTD (-01), PLOT NO.
27, SRI JANAKI RATHINA NAGAR, VILLAGE AND
TOWN - MINJUR, PONNERI - 601 203, DISTRICT
- THIRUVALUR. - 601203

NAGAPATTINAM

2601. PILLAI & SONS MOTOR COMPANY (-01),
NO.181, KEELA ANTHANAPETTAI,
ANTHANAPETTAI, P.O. - MANJAKOLLA,
PUTHUR, NAGAPATTINAM DISTT. TAMIL NADU -
611108
PH :4365220250.

NAGERCOIL

2602. ATHEN CARS (-01), RESURVEY NO. G.3/9-7,
BUILDING NO. 254-A/3 & 4 K.P ROAD
,PARAVATHIPURAM, NAGERCOIL
,KANYAKUMARI DISTRICT TAMILNADU - 629003
PH :8012029777.

2603. ATHEN CARS (-02), SURVEY NO. 54/1,2,4,6 & 11
KOTHAIGRAMAM OZHUGINASERY,
THERAKALPUTHUR VILLAGE, NAGERCOIL,
KANYAKUMARI DISTRICT, TN-629001 - 629001

2604. AADHI CARS PVT LTD (-05), PLOT NO. 14,
INDUSTRIAL ESTATE, KONAM, NAGERCOIL,
PIN-629004 - 629003

NAMAKKAL

2605. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(-01), SURVEY NO. 1/10-11, NEAR MURUGAN
TEMPLE, SALEM ROAD, NAMAKKAL - 637001
PH :937164888.

2606. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(-03), 1/412/1 NEAR PON NAGAR,
MUDALAIPATTY, SALEM ROAD, NH-7,
NAMAKKAL (TAMIL NADU) - 637001
PH :737192888.

NANGUNERI

2607. AADHI CARS PVT LTD (-01), DOOR NO. 38 / 1,
BHASKAR NAGAR, THAMBUPURAM,
NANGUNERI, TIRUNELVELI DISTRICT. PIN:
627108 - 627108

NATRAMPALLI

2608. GANESH CARS PVT LTD (-01), NO.8/12-1, NEAR
ARJUNA SULOCHANA MAHAL, BENGALURU-
CHENNAI MAIN ROAD,VELAKALNATHAM,
NATRAMPALLI, TIRUPATTUR DIST. TAMIL NADU
- 635854. - 635854

NAZARETH

2609. ASIR AUTOMOBILES PVT LTD (-01), OLD NO.
49B, 49C & 49D, NEW NO. - 194, 195 & 196,
CHURCH STREET, NAZARETH, TUTICORIN
DIST. TN- 628617 - 628617

NEGAMAM

2610. ABT LIMITED (-01), 68, 69, ABT BUS STAND,
PALLADAM ROAD, PERIA NEGAMAM,
POLLACHI, TAMIL NADU - 642120

NEYVELI

2611. VISHNU CARS PVT LTD (-01), SURVEY
NO:5452A1A, NH-45C, OPP. NATIONAL
COLLEGE,KUMBakonam - CHENNAI HIGH
WAY, NEAR NEYVELI ARCH GATE, NEYVELI
T.S, KEELAKOLLA, MARUNGUR
POST,PANRUTI,CUDDALORE DISTRICT,
TAMILNADU - 607103
PH :9384059575.

OMALUR

2612. SRI AMMAN CARS INDIA PVT LTD (-04), 123, 3B,
NH-7, BANGALORE BYE PASS ROAD,
KOTTAMETTUPATTI, OMALUR, SALEM (DIST.),
TAMIL NADU - 636012

2613. THRIVENI CAR COMPANY PVT LTD (-01), PLOT
NO. 44 & 45, PALANIYAPPA NAGAR LAYOUT,
NH-7, KAMALAPURAM VILLAGE, OMALUR,
DISTRICT - SALEM, TAMIL NADU - 636309

OOTY

2614. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(4103-05), VIJAYANAGARAM FARM ROAD,
NEAR ROSE GARDEN, OOTY - 643001

PADAPPAI

2615. VISHNU CARS PVT LTD (-01), SURVEY
NO.368/2A/1, 368/2A/2,
VANDALLUR-WALAJABAD MAIN ROAD,
PADAPPAI EAST, CHENNAI. - 601301
PH :8754417168.

PALACODE

2616. SRI AMMAN CARS INDIA PVT LTD (-01),
SURVEY NO. 620/1A2,
620/1A2B KARAKHATHAHALLI VILLAGE,
PALACODE DHARMAPURAM DISTRICT,TAMIL
NADU - 636808

PALANI

2617. PL.A MOTORS (-02), NO:13-1-11C-1, WEST
AYAKUDI, DINDIGUL ROAD, PALANI, DINDIGUL
DISTRICT, TAMIL NADU - 624613

PANRUTI

2618. VISHNU CARS PVT LTD (-01), SURVEY NO: 87/4,
87/7 R V NAGAR, LAKSHMI NARAYANAPUR AM
VILLAGE-PANRUTI - 6307106

PARAMATHIVELUR

2619. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(-01), SURVEY NO. 171, NEAR KONGU SCHOOL,
NAMAKKAL BYPASS ROAD, PADAMUDI
PALAYAM, TALUKA - PARAMATHIVELUR,
NAMAKKAL , TAMIL NADU. - 638182
PH :8870666999.

PATTUKKOTTAI

2620. PILLAI & SONS MOTOR COMPANY (-01),
SURVEY NO. 85/6, 85/4, 84/6, DOOR NO.314/11,
SRI JANAGALAKSHMI NAGAR, THANJAVUR
ROAD, ALADIKUMULAI VILLAGE, TALUK
PATTUKOTTAI, THANJAVUR. - 614615
PH :7094433074.

PAVITHRAM

2621. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(-01), SURVEY NO. 102/1B, NAMAKKAL MAIN
ROAD, PAVITHRAM - 637021
PH :9600320888.

PENNAGARAM

2622. SRI AMMAN CARS INDIA PVT LTD (-01),
SURVEY NO. 419/1, VILLAGE -
PARUVADHANALLI, PENNAGARAM,
DHARMAPURI. - 636810
PH :9715044700.

PERAMBALUR

2623. PL.A MOTORS (2305-04), SURVEY NO.88/1,
A3,NH45, ELAMBALUR VILLAGE, PERAMBALUR,
TAMILNADU - 621212
PH :8870004960.

PERNAMBUT

2624. SRI AMMAN CARS INDIA PVT LTD (-01),
SURVEY NO:708,PLOT NO: 87.88 & 89,
PERNAMBUT TO GUDIYATTAM ROAD,
PERNAMBUT,VELLORE DISTRICT, TAMIL NADU
- 635810 - 635810
PH :7094403100.

PERUMBAKKAM

2625. KHIVRAJ MOTORS PVT LTD (-01),
NO.1,VARALAKSHMI NAGAR, THIRUVALLUR
ROAD, PERUMBAKKAM,KANCHIPURAM DIST,
TAMILNADU- 631402 - 631402
PH :7338786693.

PERUNDURAI

2626. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(-01), SF NO.542/1, KOVAI MAIN ROAD,
PERUNDURAI VILLAGE, PERUNDURAI DISTT.
ERODE, TAMIL NADU - 638052
PH :959740777.

PN PALAYAM

2627. JAIKRISHNAA AUTOSALES PVT LTD (4107-04), NO.12/190 SRKV PORT, MTR ROAD, P.N. PALAYAM, COIMBATORE - 641020	2638. SIVA AUTOMOTIVE TRADING PVT LTD (-01), SURVEY NO. 172/1B2C, 172/2C, VILLAGE - ACHUNTHANAYAL, ACHUNTHANGAL GROUP, TALUK - RAMANATHAPURAM, RAMANATHAPURAM - 623502 PH :8098110000.	2649. THRIVENI CAR COMPANY PVT LTD (-01), SURVEY NO. 17/15B, KCK PLAZA, KACHERIADU, DEPUTY COLLECTOR ROAD, SALEM, SANKAGIRI (TAMIL NADU) - 637301	2657. RAJALAKSHMI CARS PVT LTD (-01), SURVEY NO. 150/1A, DOOR NO 1C, THERADI STREET, NEW VILLAGE NO 42, SRIPERUMBADUR, KANCHIPEPURAM DISTRICT, TAMIL NADU. - 602105 PH :8939995469.
2628. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), NO.: 12/90, TKV GARDEN, SRKV POST, MTP ROAD,P.N.PALAYAM, TAMIL NADU - 641020	2639. MEENAKSHI AUTO ZONE PVT LTD (-01), SURVEY NO: 458/4, MADURAI - RAMESHWARAM ROAD, NEAR RAMNAGAR BUS STOP, RAMANATHAPURAM, TAMIL NADU - 623503 - 623503	2650. AADHI CARS PVT LTD (-01), PLOT NO. 132/H, OPPOSITE TO NEW TALUK OFFICE, TIRUVENGADAM ROAD, SANKARANKOVIL. - 627756 PH :7397728025.	SRIVILLIPUTHUR/RAJAPALAYAM
POCHAMPALLI	RAMESHWARAM	SATHYAMANGALAM	2658. ABT LIMITED (4202-03), NO. 10/32, PADIKKASUVATHANPATTI , NEAR RTO OFFICE, SRIVILLIPUTHUR, VIRUDHUNAGAR, TAMIL NADU - 626125
2629. SRI AMMAN CARS INDIA PVT LTD (-01), NEW SURVEY NO. 561/5, VILLAGE - JUMBUKUTTANPATTI, POCCHAMPALLI, KRISHNAGIRI - 635206	2640. SIVA AUTOMOTIVE TRADING PVT LTD (-01), NO.:2307, SURVEY NO.279/3A, RAMNAD ROAD, ARIYANKADU, RAMESHWARAM, RAMANATHAPURAM DISTRICT, TAMILNADU PH :7402788899.	2651. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO. 51, 54 & RS NO. 37, KOTTUVEERAMPALAYAM VILLAGE, SATHYAMANGALAM - 638 401, DISTRICT - ERODE, TAMIL NADU - 638401 PH :9597592777.	SULUR
POLLACHI	RANIPET	SATTUR	2659. JAIKRISHNAA AUTOSALES PVT LTD (4107-05), DOOR NO. 37 F, RANGANATHAPURAM, TRICHY ROAD, SULUR - 641402
2630. ABT LIMITED (-01), NACHIMUTHU POLYTECHNIC CAMPUS, UDUMLPET ROAD, POLACHI - 642003	2641. GANESH CARS PVT LTD (-01), SURVEY NO. 44/1, PLOT NO. 484, OPPOSITE TO THIRUMALAI CHEMICALS, SIPCOT LAYOUT OF HOUSE SITES, SIPCOTS INDUSTRIAL COMPLEX, RANIPET , TAMIL NADU. - 632403 PH :9842330388.	2652. MEENAKSHI AUTO ZONE PVT LTD (-01), SURVEY NO. 18/10,CHATRAPATTI VILLAGE, MADURAI KANYAKUMARI NATIONAL HIGHWAYS, SATTUR, VIRUDHUNAGAR DISTRICT,TAMILNADU - 626203 PH :9940094881.	TENKASI
POLUR	RASIPURAM	SEYDUNGANALLUR	2660. AADHI CARS PVT LTD (-01), DOOR NO. 3/50-1, SURVEY NO. 447B, TIRUNELVELI MAIN ROAD, VILLAGE - KUNARAMANALLUR, TENKASI. - 627814 PH :9500991475.
2631. GANESH CARS PVT LTD (-01), AZHAGO COMPLEX, SURVEY NO.77/1, CUDADALOR TO CHITTOOR ROAD, POLUR, THIRUVANNAMALAI DISTRICT,TAMILNADU - 606803 PH :9842345200.	2642. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO.41/1 B1A, MOOLAKADU VILLAGE, MASAKALIPATTI, SALEM MAIN ROAD, RASIPURAM DISTT. NAMAKKAL - 637401	2653. ASIR AUTOMOBILES PVT LTD (-02), SURVEY NO. 59/3E, TIRUCHENDUR ROAD, SEYDUNGANALLUR TOWN, TALUK - SRIVAIKUNTAM, TUTICORIN DIST., TAMIL NADU. - 628809 PH :8344992220.	2661. AADHI CARS PVT LTD (-02), DOOR NO. 47, MADHALAMPARAI, TENKASHI AMBAI HIGHWAY, TENKASHI, TIRUNELVELI DIST., TAMILNADU. - 627814 PH :9500991475.
PONNAMARAVATHY	REDHILLS	SHOLINGUR	THALAVASAL
2632. PLA MOTORS (-01), NO.4-1B2B & 4-1B3,PUDUKKOTTAI MAIN ROAD, PONNAMARAVATHI, PUDUKKOTTAI DIST., TAMILNADU-622407 - 622407	2643. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-04), NO.503, G.N.T. ROAD, REDHILLS, CHENNAI - 600066 PH :9952000078.	2654. GANESH CARS PVT LTD (-01), NO.401, ARAKKONAM MAIN ROAD,OPPOSITE TVS FOUNDARY, PANDIYANELLORE,SHOLINGHUR,WALAJA TALUK, RANIPET DISTRICT, TAMILNADU - 631102 PH :7397395259.	2662. THRIVENI CAR COMPANY PVT LTD (-01), S NO: 5/268,NEAR NATHANKARAI TOLL PLAZA, VADAKKU KADU, NATHANKARAI, THALAVASAL, SALEM, TAMILNADU - 636122
PONNERI	SALEM	SIVAGANGAI	THAMMAPATTI
2633. ABT LIMITED (-01), DOOR NO.18(S.F.NO42/1A-3), KRISHNA PURAM,PONNERI TALUK, - 601204	2644. ABT LIMITED (4101-03), 32 THAMANA CHETTY ROAD, ARISIPALAYAM, SALEM - 636009	2655. ASIR AUTOMOBILES PVT LTD (-01), S. NO: 144/1, SIVAGANGAI-THONDI ROAD, PAIYAPURPILLAIAYAL, SIVAGANGAI,TAMILNADU - 630561 PH :9750372220.	2663. S M CAR PVT LTD (-01), SURVEY NO # SF: 328/11, NAGIAMPATTI, THAMMAPATTI,SALEM DISTRICT, TAMILNADU - 636113. - 636113 PH :7094440010.
PUDDUKOTAI	THIRUVENI CAR COMPANY PVT LTD (-03), SURVEY NO. 57, VILLAGE - MASINAICKENPATTY, AYOTHIAPATTINAM, AMMAPET, SALEM. - 636103	SIVAKASI	THANJAVUR
2634. PLA MOTORS (2305-02), NO. 10, MARIAMALAI NAGAR, ALANGUDI- THIRUMAYAM ROAD, PUDUKOTAI, - 622003	2645. THRIVENI CAR COMPANY PVT LTD (-01), 12/2E1, SUBRAMANIA NAGAR, 2ND GATE, JUNCTION ROAD, SALEM. - 636005	2656. MEENAKSHI AUTO ZONE PVT LTD (-01), 372 D & E, ARUNACHALAM COMPLEX, THIRUTHANGAL ROAD, SIVAKASI. - 626123	2664. PILLAI & SONS MOTOR COMPANY (-01), 12A, SELVAM NAGAR, THANJAVUR, TAMILNADU - 613007
PULIYANGUDI	2646. S M CAR PVT LTD (-01), SF NO. 64/2C3, ATTUR SALEM BYPASS ROAD, PINAGUKARAR THOTTAM, SEELANIKANPATTY, SALEM. - 636202	SRIPERUMBUDUR	2665. PLA MOTORS (-01), SURVEY NO. 173/6B4, TRICHY-THANJAVUR ROAD, NANJIKOTTAI BYPASS, THANJAVUR, TAMILNADU - 613005
2635. AADHI CARS PVT LTD (-), TENKASI -PULIYANKUDI ROAD, PULIYANKUDI, DISTRICT-TENKASI, TAMILNADU - 627855	2647. THRIVENI CAR COMPANY PVT LTD (-03), SURVEY NO. 57, VILLAGE - MASINAICKENPATTY, AYOTHIAPATTINAM, AMMAPET, SALEM. - 636103		THARAMANGALAM
PUNJAI PULIAMPATTI	2648. S M CAR PVT LTD (-02), DOOR NO. 50/28, SF NO. 1/10B, SARADHA COLLEGE MAIN ROAD, ALAGAPURAM PUDHUR VILLAGE, HASTHAMPATTY, SALEM, TAMILNADU - 636007 PH :7094440053.		2666. THRIVENI CAR COMPANY PVT LTD (-01), NO. 1/122, KATTAMPATTI, JALAKANDAPURAM, THARAMANGALAM, SALEM DIST. , TAMIL NADU. - 638501
2636. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-01), SURVEY NO. 250/1, PANKAU PULIYAMPATTU MUNICIPALITY, PUNJAI PULIYAMPATTU - 638459, SATHY THALUK, ERODE. - 638459 PH :6385810777.	SANKAGIRI		THELLAR
RAJAPALAYAM			2667. SRI AMMAN CARS INDIA PVT LTD (-01), THIRUVANNAMALAI BIE-PASS ROAD, THELLAR - 604406
2637. MEENAKSHI AUTO ZONE PVT LTD (-01), DOOR NO. 96, COTTON MARKET, TENKASI-MADURAI ROAD, RAJAPALAYAM, VIRUDHUNAGAR DIST., TAMILNADU - 626117 PH :9443785681.			THENI
RAMANATHAPURAM			

2668. MEENAKSHI AUTO ZONE PVT LTD (-01), DOOR NO. 87/11, RATHINAM NAGAR, PERIYAKULAM MAIN ROAD, THENI TOWN, DISTRICT - THENI - 625531
PH :9789703881.
THIRUKALUKUNDRAM

2669. AIE CARS PVT LTD (-01), SURVEY NO.113/38, DOOR NO.61, MADRAS ROAD, MANGALAM VILLAGE, TIRUKALUKUNDRAM, CHENGALPATTU DISTRICT, TAMIL NADU- 603 107 - 603107
THIRUKOVILUR

2670. AIE CARS PVT LTD (-01), S.NO: 729/10, NO-45, SANDAPET, AANUR, THIRUKOVILUR, KALLAKURICHI DIST - 605757
THIRUMAZHISAI

2671. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (-01), DP 30, SIDCO INDUSTRIAL ESTATE, THIRUMAZHISAI, - 600124 PH :9500064259.
THIRUMULLAIVOYAL

2672. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD) (-01), NO. 48, BALAJI NAGAR, NEW SIR IRVANSTADE FORD HOSPITAL, THIRUMULLAIVOYAL DISTT. CHENNAI - 600062 PH :7305087044.
THIRUTHURAIPOONDI

2673. PILLAI & SONS MOTOR COMPANY (-01), NO.246/3, SRI KRISHNA LODGE COMPLEX, THIRUVARUR ROAD, THIRUTHURAIPOONDI, THIRUVARUR DIST., TAMILNADU- 614713. - 614713
THIRUVAIYARU

2674. PILLAI & SONS MOTOR COMPANY (-01), NO.5, ODAURAI STREET, THIRUVAIYARU, 613204 - 613204
THIRUVALLUR

2675. KHIVRAJ MOTORS PVT LTD (1404-04), 2151, KAKKULUR ROAD, THIRUVALLUR - 602001
2676. KHIVRAJ MOTORS PVT LTD (1404-05), PLOT NOS.218,219,220,225,226,227,228 AND S.NOS.18/5,18/6, EMPIRE CITY PART-3, KAKKALLUR VILLAGE, THIRUVALLUR THALUK, THIRUVALLUR - 602001
THIRUVANNAMALAI

2677. GANESH CARS PVT LTD (-03), NO.-5, NH-78, KRISHNAGIRI PONDY ROAD, CHINA KANKEYANUR, OPP SKP ENGG. COLLEGE, THIRUVANNAMALAI - 606601 PH :9842305072.
THIRUVARUR

2678. PILLAI & SONS MOTOR COMPANY (-03), THANJAI NAGARI ROAD, OPP. TO S. P. OFFICE - 610001

2679. PILLAI & SONS MOTOR COMPANY (-01), NO. 9, WARD NO.-4, BLOCK NO. 10, NEW SY. NO. 601/6B1, SUNDARAVILAGAM, NARSINGHAMPET, THIRUVARUR TOWN & DIST., TAMIL NADU - 610001 PH :9442163509.
THISAYANVILLAI

2680. AADHI CARS PVT LTD (-01), SURVEY NO. 240/1, 7/1, HIGHWAYS ROAD, OPP. TO VO OFFICE, SELVA MARUTHUR, THISAYANVILLAI. - 627657 PH :7339511187.
THITTAKUDI

2681. VISHNU CARS PVT LTD (-), SURVEY NO 129/1, ERAMANGALAM VILLAGE, THITHAKUDI, CUDDALORE DISTRICT, TAMILNADU - 606106
THOPPUR

2682. SRI AMMAN CARS INDIA PVT LTD (-01), SITE NO. 422 /2A, BANGALORE TO SALEM HIGH WAY, AMMANI, THOPPUR VILLAGE & TOWN, NALLAMPALLI TK, DHARMAPURI DISTRICT. - 636352 PH :9790004273.
THUCKALAY

2683. ATHEN CARS (-01), DOOR NO. 5/76B, (RE SURVEY NO-53077) THIRUVITHANCODE ROAD, KERALAPURAM, MUTHALAKURICHI, VILLAGE - MUTHALAKURICHI, KALKULAM-TALUK, THUCKALAY, DISTRICT - KANYAKUMARI, TAMILNADU - 629174 PH :8012029888.
THURAIYUR

2684. PLA MOTORS (-01), D.NO.:5/300, SINGALANDHAPURAM VILLAGE, THURAIYUR DISTT. TRICHY (TAMIL NADU) - 621010 PH :9486763725.
TINDIVARAM

2685. VISHNU CARS PVT LTD (-01), SURVEY NO. 50/4, 50/5 & 63, NEAR RTO OFFICE, MOLASUR, TINDIVANAM, VILUPPURAM, TAMILNADU - 604102 PH :9500039023.
TIRUCHENDUR

2686. ASIR AUTOMOBILES PVT LTD (-01), SURVEY NO. 220/1D/1A, 221/3, 221/4, 221/5, 221/5A, 221/5B, PODHIGAI NAGAR, VILLAGE-VEERAPANDIYAPATINAM, TIRUCHENDUR, TUTUCORIN - 628215 PH :7373900220.
TIRUCHENGODE

2687. SREE SARADHAMBAL AUTOMOBILES PVT LTD (-02), PLOT NO-10, OPP TO PONNUSWAMY KALYANA MANDAPAM, KOOTAPALLI COLONY, TIRUCHENGODE - 637001

TIRUNELVELI

2688. AADHI CARS PVT LTD (-01), PLOT NO. 261, MADURAI MAIN ROAD, KARAIERUPPU, TIRUNELVELI , TAMIL NADU - 627357 PH :9500991610.
2689. AADHI CARS PVT LTD (-03), DOOR NO. 37, RAMNAGAR, KTC NAGAR, TIRUNELVELI, TAMIL NADU. - 627011 PH :9500991610.
2690. AADHI CARS PVT LTD (-04), SF NO:161/4, SF NO: 893/2, NORTH BYEPASS ROAD, GALAXY HOSPITAL BACKSIDE, PALAYANKOTTAI, TIRUNELVELI, TAMILNADU - 627001
TIRUPATHUR

2691. GANESH CARS PVT LTD (-01), SURVEY NO.54/4, TIRUPATHUR TO KRISHNAGIRI ROAD, PALLIPET VILLAGE, TIRUPATHUR DISTT. VELLORE - 635601 PH :9842308909.
TIRUPATTUR(SIVAGANGAI)

2692. ABT LIMITED (-01), DOOR NO. 8/2/29A, KARAUKUDI ROAD, TIRUPATHUR, DISTRICT - SIVAGANGAI - 630211
TIRUPPUVANAM

2693. MEENAKSHI AUTO ZONE PVT LTD (-01), NO.21, BAKHYA NAGAR, WARD NO:1, MANDAPAM MAIN ROAD, TIRUPPUVANAM, SIVAGANGA DISTRICT, TAMIL NADU - 630611 - 630611 PH :9442799581.
TIRUPUR

2694. ABT LIMITED (4101-09), NO. 4, SABHAPATHI PURAM, NEAR TMF HOSPITAL, TIRUPUR - 641601
2695. SHASHTI CAR PRIVATE LIMITED (-01), SRI PADMINI GARDENS, KANGAYAM ROAD, OPP. ST JOSEPH SCHOOL, TIRUPUR - 641604
TIRUTHANI

2696. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (-01), NO. 9/13, CHENNAI BY PASS ROAD, OLD CHENNAI ROAD, DISTT. THIRUVALLUR, TIRUTHANI, TAMILNADU - 631209 PH :7358773860.
TIRUVANNAMALAI

2697. SRI AMMAN CARS INDIA PVT LTD (-01), 2A/2, SURVEY NO. 3676/3, ANNA SALAI, TIRUVANNAMALAI-CHENNAI NH-101, TIRUVANNAMALAI TOWN AND DIST., TAMILNADU - 602601 PH :7094471293.
TONDI

2698. SIVA AUTOMOTIVE TRADING PVT LTD (-01), SURVEY NO: 85/16, WARD 10/78, SOUTH THOPI STREET, ECR MAIN ROAD, ECR, THONDI, RAMANATHAPURAM DISTRICT, TAMIL NADU - 623409 PH :7402788820.
TRICHY

2699. ABT LIMITED (2302-23-02), 4/40, COLLECTOR OFFICE ROAD, CANTONMENT, TRICHY - 620001
2700. PLA MOTORS (2305-23-01), NO. 18/2, NA-45, DEERAN NAGAR, TRICHY-DINDUGAL MAIN ROAD, TRICHY - 620009
2701. ABT LIMITED (2302-23-03), MADRAS TRUNK ROAD, MAMBALASALAI, TRICHY - 620005
2702. PLA MOTORS (2305-23-03), 10A & B, ALXANDRIA ROAD, CANTONMENT, TRICHY - 620001
2703. PILLAI & SONS MOTOR COMPANY (2306-23-01), SURVEY NO. 10B, 1AD, CHENNAI TRICHY BY-PASS ROAD, VILLAGE - THIRUNALLUR, TRICHY - 620002
2704. ABT LIMITED (2302-04), NO.46/3, 46/5A, AGARAM VILLAGE, TIRUVERAMBUR TOWN & TALUK, TIRUCHIRAPPALLI (TRICHY) DISTRICT, TAMIL NADU - 620013. - 620013
TUTICORIN

2705. ASIR AUTOMOBILES PVT LTD (-01), SURVEY NO. 25/1B, MAPPILLAIURINI VILLAGE, ETTAYAPURAM ROAD, TUTICORIN, TAMIL NADU - 628002 PH :7373501220.
UDUMALPET

2706. ABT LIMITED (-01), 2/3, PERIYAKOTTAI PIRIVU, S.V. MILL POST, UDUMALPET - 642126
ULANDURPET

2707. ABT LIMITED (-01), S. NO: 392/1A, DOOR NO: 2129/2020, ULANDURPET, KALLAKURICHI DIST, TAMIL NADU- 606107. - 606107
USILAMPATTI

2708. SIVA AUTOMOTIVE TRADING PVT LTD (-01), NO. 33/1B2A, USILAMPATTI - MADURAI HIGHWAY, POTTULUPATTI PANCHAYATH, USILAMPATTI, MADURAI DISTRICT, TAMILNADU-625532 - 625532 PH :7868088840.
UTHANGARAI

2709. SRI AMMAN CARS INDIA PVT LTD (-01), SURVEY NO. 104/1, 104/1B, VILLAGE - THANDIYAPANNUR, UTHANGARAI, KRISHNAGIRI. - 635304 PH :9715044600.
UTHIRAMERUR

Dealer Workshop (AS ON 31.01.2026)

2710. AIE CARS PVT LTD (-01), SURVEY NO:383/3B-82, UTHIRAMERUR MAIN ROAD, UTHIRAMERUR, KANCHEEPURAM DISTRICT, TAMILNADU - 603406	VENGAL	2730. VARUN MOTORS PVT LTD (-01), SURVEY NO.277, ARGUL VILLAGE, JAKARANPALLY (MANDAL), ARMUR, NIZAMABAD DISTT. (A.P.) - 503224 PH: 9052901888.	2740. GEM MOTORS (INDIA) PVT LTD (-01), SURVEY NO. 171A, MANDAL - CHEVELLA, DISTRICT - RANGA REDDY, TELANGANA - 510101
UTHUKOTTAI			DAMMAPETTA
2711. KHIVRAJ MOTORS PVT LTD (-01), SURVEY NO. 442/1, NEHRU BAZZAR STREET, UTHUKOTTAI, DIST.-THIRUVALLUR - 602026 PH :7299635536.	2720. VISHNU CARS PVT LTD (-01), NEW SURVEY NO:67/1B, 67/20, CHINMAYA NAGAR,THAMARAIPAKKAM VILLAGE, VENGAL,THIRUVALLUR DIST., TAMILNADU- 601103 - 601103 PH :9500121559.	BANSWADA	2741. VARUN MOTORS PVT LTD (-01), NEAREST H.NO 5-48 CPS SCHOOL,DAMMAPETA, BADRI KOTHAGUDEM DT, TELANGANA
VALLIYUR	VEPPAMPATTU	2731. VARUN MOTORS PVT LTD (-01), #2-138/5,SOMESHWAR SHIVAR, NEAR BIKNOOR "X" ROAD, BANSWADA(M) - 503187	DORNAKAL
2712. AADHI CARS PVT LTD (-01), DOOR NO. 314A/11-14, WITHIN VADAKU VALLIOOR, REVENUE VILLAGE, VADAKKU VALLIOOR PANCHAYAT, RADHAPURAM TALUK, VALLIOOR. - 627002 PH :7373091462.	-21. POPULAR VEHICLES AND SERVICES LIMITED (-01), SNO. 35/2A2, CTH ROAD 89., VEPPAMPATTU,TIRUVALLUR DIST, TAMIL NADU - 602 024, - 602024	BASARA	2742. ADARSHA AUTOMOTIVES PVT LTD (-01), SY NO.150, BY PASS JUNCTION, NTR CIRCLE, DORNAL, MAHBUBABAD DIST., DOORNAKAL, TELANGANA - 506381
VANDAVASI	VILLUPURAM	2732. ADARSHA AUTOMOTIVES PVT LTD (-01), URVEY NO 59/E, RAVINDRAPUR , BASARA, NIRMAL DISTRICT, TELANGANA - 504101 PH :886092222.	DUBBAKA
2713. GANESH CARS PVT LTD (-01), SURVEY NO.272, KEELSAATHAMANGALAM VILLAGE, CHETPET ROAD, VANDAVASI, TIRUVANNMALAI, DISTT. T.N. - 604408 PH :7395802484.	VIRUDHACHALAM	BELLAMPALLY	2743. ADARSHA AUTOMOTIVES PVT LTD (-01), ADARSHA AUTOMOTIVE PVT LTD, OPP. BUS DEPOT, BYPASS ROAD, SIDDIPET, TELANGANA
VANIYAMBADI	2723. ABT LIMITED (-01), PLOT NO. 56, JUNCTION ROAD, NEAR SHANMUGA LODGE, VIRUDHACHALAM, DISTRICT - CUDDALORE, TAMIL NADU. - 606101	2733. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO 5/31, PEDANAPALLI, BELLAMPALLY, MANDCHERIAL DISTRICT, TELANGANA - 504251 PH: 8886092222.	ETUNAGARAM
2714. GANESH CARS PVT LTD (-01), NO. 197/1B1, NH-46 (AH-7), PETHAKALLUPALLI VILLAGE, NEAR TOLL GATE, VANIYAMBADI , VELLORE (DIST), TAMIL NADU. - 635801 PH :9842327709.	VIRUDHUNAGAR	BHADRACHALAM	2744. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT LTD) (-01), H.NO 12-412 & 12-413,AKULAVARI GHANPUR, ETURNAGARAM, MULUGU DISTRICT,TELANGANA - 506165 PH :8688828005.
VELLAKOVIL	2724. MEENAKSHI AUTO ZONE PVT LTD (-0A), DOOR NO:6/504, SURVEY NO. 11/6, PELAMPATTI VILLAGE,VIRUDHUNAGAR MADURAI HIGH WAY,OPPOSITE TO VVV COLLEGE , TALUK & DIST. VIRUDHUNAGAR, TAMILNADU - 626001 PH :9940094881.	2734. VARUN MOTORS PVT LTD (-01), H-NO 1-138/1B-OLD SARPAKA ROAD, BHADRACHALAM, BHADRADI-KOTHAGUDEM, TELANGANA - 507111 PH :9885576602.	GADWAL
2715. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (-01), SURVEY NO:502/C &371/D, NO. 196,197,KOVAI KARUR MAIN ROAD, VELLAKOVIL, TIRUPUR DIST. , TAMILNADU - 638111 PH :9994060600.	WALAJABAD	BHEEMGAL	2745. SRI JAYARAMA MOTORS PVT LTD (-02), PLOT NO. 5 & 6, BESIDE RURAL POLICE STATION, KURNOL ROAD, MAHABUB NAGAR DISTRICT, ANDHRA PRADESH - 500125
VELLORE	2725. AIE CARS PVT LTD (-01), SURVEY NO: 334, KANCHEEPURAM- CHENGALPET ROAD, VENGUDI, WALAJABAD VILL AND TOWN, KANCHIPURAM DIST.,TAMIL NADU631605 - 631605	2735. VARUN MOTORS PVT LTD (-01), SURVEY NO. 398, MORTHAD ROAD, - 503307	GAJJWEL
2716. GANESH CARS PVT LTD (-01), 91 NEW BY-PASS ROAD, VELLORE - 632004 PH :9842377110.	TELANGANA	BHONGIR	2746. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT LTD) (-01), SURVEY NO. 220, VILLAGE - PRAGNAYPUR, GAJJWEL, DISTRICT - MEDAK, TELANGANA. - 502311
2717. SRI AMMAN CARS INDIA PVT LTD (-01), DOOR NO. 68, SURVEY NO. 66/7, NEAR RANGALAYA KALYANA MANDAPAM, VELLORE-KATPADI ROAD, KALINJUR VILLAGE, KATPADI TALUKA, GANDHINAGAR, VELLORE DIST., TAMIL NADU. - 632006	ACHAMPET	BHUPALAPALLY	GHATKESAR
2718. SRI AMMAN CARS INDIA PVT LTD (-02), SURVEY NO. 316/3B2, 316/8A, 316/8B, NEAR SHELL PETROL PUMP, MELMONAVUR VILLAGE,VELLORE TALUK & DIST. ON NH48 (CHENNAI - BENGALURU HIGHWAY), VELLORE, TAMILNADUR - 632010 PH :7094471320.	2726. SRI JAYARAMA MOTORS PVT LTD (-01), SURVEY :133/A/3/1 HYDERABAD ROAD ACHAMPET ,NAGARKURNOL DT - 509375	2737. ADARSHA AUTOMOTIVES PVT LTD (-04), SY NO.314, HANAMKONDA ROAD, MANDAL BHUPALAPALLY, TELANGANA 6-113, JAWAHAR NAGAR, MAIN ROAD, SBH MAIN BRANCH ROAD, BHUPPALPALLY, DISTRICT - WARANGAL, ANDHRA PRADESH - 506169 PH :7799790526.	2747. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT LTD) (-01), 3-21, JODIMETLA, CHOUDA RIGID VILLAGE GHATKESAR MANDAL, DISTRICT - RANGA REDDY. - 501301
2719. GANESH CARS PVT LTD (-06), SY NO. 188/2B, EDAYANSATHU, ARANI ROAD, BAGAYAM, VELLORE - 632503	ADDANKI	BODHAN	2748. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), SY NO. 581/B, GHATKESAR VILLAGE & MANDAL, MEDCHAL-MALKAJIGIRI DIST - 501301
	2727. JAYALAKSHMI AUTOMOTIVES PVT LTD (-01), SURVEY NO-1020/2, RAMANAGAR, ONGLOE ROAD, ADDANKI - 523201	2738. VARUN MOTORS PVT LTD (-01), PLOT NO. 5/2, ACHANAPALLY CROSS ROAD, BODHAN, DIST. -NIZAMABAD, TELANGANA. - 503185	HUSNABAD
	ADILABAD	CHEGUTA	2749. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO. 202/E, H. NO. 12-1/4 & 12-1/A, VILLAGE & MANDAL - HUSNABAD, DIST. -SIDDIPET, TELANGANA - 505467
	2728. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO:131/6 & 131/7, NH-44, ADILABAD TOWN ROAD, MAVALA, ADILABAD, TELANGANA. - 504001 PH :9133307724.	2739. AUTOFIN LIMITED (-01), 1/45/3, CHEGUNTA, CHEGUNTA MANDAL, MEDAK DISTRICT, NATIONAL HIGHWAY NO - 44 FACING, TELANGANA - 502255	HUZURABAD
	AMANGAL	CHEVELLA	2750. ADARSHA AUTOMOTIVES PVT LTD (-01), SY NO 1687, ADJACENT TO KARIMNAGAR WARANGAL R&B ROAD, HUZURABAD - 505468
	2729. THE MITHRA AGENCIES (-01), VIDHAYA NAGAR COLONY ROAD NO.5, OPPOSITE INDIAN OIL,MRO OFFICE,S NO:1439 - 509321		HYDERABAD
	ARMUR		2751. THE MITHRA AGENCIES (1002-10-01), 1-8-670, NEAR RTC CROSS ROAD,AZAMABAD INDUSTRIAL AREA, HYDERABAD - 500020 PH :9966838294.

2752. POPULAR VEHICLES AND SERVICES LIMITED (1088-10-01), SABOC TOWERS, RAJBHAVAN ROAD, SOMAJIGUDA, HYDERABAD - 500482	2767. VARUN MOTORS PVT LTD (1012-10-01), MARUTI AUTHORISED DEALER, SURVEY NO.115, IT PARK, NANAKRANGUDA, GACHIBOWLI, HYDERABAD - 500008	2780. JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-01), PLOT NO. 113, 114, 115 IN LUMBINI ENCLAVE CB SQUARE, VILLAGE - GACHIBOWLI, SHERLINGAMPALLY MNADAL, HYDERABAD, TELANGANA STATE. - 500032 PH : 9100909401.	2791. JAYABHERI AUTOMOTIVES PRIVATE LTD (1085-10-01), SURVEY NO 886,UPPAL, MEDCHAL-MALKAJIGIRI DISTRICT, HYDERABAD, TELANGANA - 500013 PH : 8142506666
2753. POPULAR VEHICLES AND SERVICES LIMITED (1091-10-02), R-4/A,IDA BLOCK, INDUSTRIAL ESTATE UPPAL, HYDERABAD - 500039	2768. POPULAR VEHICLES AND SERVICES LIMITED (1089-10-01), D.NO.1-10-1285/1, OPP. VEGITABLE MARKET, ECIL CROSS ROADS, KUSAIGUDA, HYDERABAD - 500062	2781. JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-02), SURVEY NO.11/36, PLOT NO.32, 39 & 40, NEAR N CONVENTION CENTRE, KHANAMET, HYDERABAD, SHERLINGAMPALLY MANDAL, HYDERABAD - 500081 PH : 7799916666.	2792. PAVAN MOTORS PVT LTD (-10-02), PLOT NO 351,352,353,354,355,356,357 LEGALA CIRCLE ROAD, BHAGYALAKSHMI NAGAR, SERILINGAMPALLY, HYDERABAD - 500019
2754. VARUN MOTORS PVT LTD (4603-10-04), B-11 CO-OPERATIVE INDUSTRIAL ESTATE, BALANAGAR, HYDERABAD - 500037	2769. SAI SERVICE PRIVATE LIMITED (1011--04), H.NO.16-2-839/4/10, SAIDABAD, L.B.NAGAR, HYDERABAD - 500059 PH : 7799352000.	2782. ADARSHA AUTOMOTIVES PVT LTD (1019-10-01), H. NO. 2-4-43/15, SURVEY NO. 34, SOGBOWLI (PILLER NO. 185 OF P.V. NARSIMHA RAO EXPRESSWAY), RAJENDRANAGAR, UPPERPALLY, ATTAPUR, RANGA REDDY, HYDERABAD, TELEGANA. - 500048	2793. JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-04), SURVEY NO 7,14,15,16,IPM BLOOD BANK COLONY,HAYATHNAGAR-HYDERABAD. - 501504
2755. VARUN MOTORS PVT LTD (4603-10-0B), ADITYA NAGAR COLONY, ADITYA NAGAR COLONY, TOLICHOWKI, SHAIKPET (VILLAGE, HYDERABAD, HYDERABAD - 500008	2770. VARUN MOTORS PVT LTD (4603--0G), 1-10-28/1 SY. NO.285, KUSAIGUDA, NEAR ECIL X ROADS, HYDERABAD - 500062 PH : 7799600093.	2783. KALYANI MOTORS PRIVATE LIMITED (1018--02), M/S VIDHATA BINNY MODERN RICE MILL, BEARING NO. 8-4-15 IN SURVEY NO. 239 & 240 OF VILLAGE - KARMANGHAT, MANDAL - SAROORNAGAR, DISTRICT - RANGA REDDY, HYDERABAD. - 500079 PH : 9100222377.	2794. KALYANI MOTORS PRIVATE LIMITED (1018-10-05), SURVEY NO. 314/A/1, GOPANNAPALLY, SERILINGAMPALLY, HYDERABAD - 502032
2756. VARUN MOTORS PVT LTD (1010-10-01), PLOT NO. VI- VII A & B, UNDER WARD NO. 10, AUTONAGAR, VANASTALIPURAM, HYDERABAD, R. R. DISTT - 500070 PH : 9885208555.	2771. VARUN MOTORS PVT LTD (4603-10-0H), PLOT NO. 1354/1, ROAD NO. 1, NEAR IOC PETROL PUMP, JUBLEE HILLS, HYDERABAD, ANDHRA PRADESH - 500033 PH : 8886322776.	2784. THE MITHRA AGENCIES (1002-10-06), SURVEY NO.57, D.NO.8-2-108, BIRAMALGUDA, KARMANGHAT NAGARJUN SAGAR ROAD, HYDERABAD, TELANGANA. - 500079 PH : 8886621232.	2795. VARUN MOTORS PVT LTD (1086-10-01), SY NO. 90, NH-44, BESIDE DOLA RI DHANI, KOMPALLY, HYDERABAD, TELANGANA - 500100
2757. VARUN MOTORS PVT LTD (4603-10-06), SHOP NO. 31, SRIKRUPA MARKET, D.NO. 16-10-1/F/31, MALAKAPET, HYDERABAD - 500036	2772. VARUN MOTORS PVT LTD (4603-10-0J), PLOT NO. 1-45, SY.NO.1 TO 7, GOPINATH COMPLEX, TARANAGAR, LINGAMPALLY, HYDERABAD, RANGAREDDY DISTRICT, TELANGANA STATE - 500019 PH : 8886067847.	2785. VARUN MOTORS PVT LTD (4603-10-0M), KSN GARDENS. 5-162/6, BORABANDA MAIN ROAD, HYDERABAD - 500018 PH : 9885579623.	2796. KALYANI MOTORS PRIVATE LIMITED (1018-10-04), SURVEY NO 314/A/1, GOPANNAPALLY, RC PURAM, HYDERABAD - 500019
2758. POPULAR VEHICLES AND SERVICES LIMITED (1091-10-01), 16-11-19/5/2/C, SALEEM NAGAR COLONY,MALAKPET (NEAR FARHAT HOSPITAL),HYDERABAD - 500036	2773. SAI SERVICE PRIVATE LIMITED (1011--07), PLOT NO.B-21 & B-34, BHEL ANCILLARY INDUSTRIAL ESTATE, RAMACHANDRAPURM, HYDERABAD - 502032 PH : 9703811411.	2786. JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-03), SURVEY NO.283, PLOT NO.D-46 & 47, PHASE-V, IDA, JEEDEMITLA, QUTUBULLAPUR MANDAL, RANGA REDDY DISTT., HYDERABAD (TELANGANA). - 500055 PH : 7799784567.	2797. ADARSHA AUTOMOTIVES PVT LTD (-02), PLOT NO. 2B, 2C, 2D, 2ETZ/F, VISHNU MARG, PARVATH NAGAR, MAIN ROAD MADHAPUR - 500081
2759. THE MITHRA AGENCIES (1002-10-03), PLOT NO. 3-4-10,NEAR MADHAPUR POLICE STATION, MADHAPUR, HYDERABAD - 500081	2774. ADARSHA AUTOMOTIVES PVT LTD (1014--01), 18-2-45 NEAR FLYOVER, CHANDRAYANGUTTA "X" ROAD, HYDERBAD - 500005	2787. ADARSHA AUTOMOTIVES PVT LTD (-03), SURVEY NO. 220/A, AMBEDKAR ROAD, OPP HERITAGE FRESH, NEAR AMBAEDKAR STATUE, NEAR ALWAL, SECUNDERABAD. - 500010 PH : 9291859954.	2798. THE MITHRA AGENCIES (1002-10-08), SY NO. 575/1/2 & 576/1/2,ADIBATLA TCS RD, NEAR HP PETROL PUMP BUNK, NADARGUL - 501510
2760. POPULAR VEHICLES AND SERVICES LIMITED (1088-10-02), 11-6-191/192,OPP. HOTEL HARSHA,PUBLIC GARDEN ROAD, NAMPALLY, HYDERABAD - 500001	2775. POPULAR VEHICLES AND SERVICES LIMITED (1088--03), SURVEY NO.434, 5-5-33/19, BEHIND HUDA TRUCK PARKING, KUKATPALLY, DISTT: RANGAREDDY, HYDERABAD - 500072	2788. KALYANI MOTORS PRIVATE LIMITED (-03), SURVEY NO. 305, NIZAMPET, MANDAL - QUTUBULLAPUR, DIST.-RANGA REDDY, HYDERABAD. - 500072	2799. VARUN MOTORS PVT LTD (-12), SURVEY NO.46, KEESARA MANDAL, NAGARAM, MEDCHAL, MALKAJIRI DIST., HYDERABAD - 500072
2761. VARUN MOTORS PVT LTD (4603-10-0A), 1-11-200,SHAMLALA BUILDING BEGUMPET, HYDERABAD - 500016 PH : 9885206555.	2776. SAI SERVICE PRIVATE LIMITED (1011-10-08), DOOR NO.7-2-C33 & C34, INDUSTRIAL ESTATE, SANATH NAGAR, HYDERABAD - 500018 PH : 7799360003.	2789. SAI SERVICE PRIVATE LIMITED (1011--09), SURVEY NO.498/1, MIYAPUR TO BACHUPALLY ROAD,BACHUPALLY,HYDERABAD. - 500090 PH : 7330771111.	IBRAHIMPATNAM
2762. THE MITHRA AGENCIES (1002-10-04), 8-18-138, PLOT NO. 8,NEAR MARGADARS CHIT FUND,L.B. NAGAR RING ROAD, RR DIST,HYDERABAD - 500074 PH : 9963551265.	2777. KALYANI MOTORS PRIVATE LIMITED (1018--01), PLOT NO. A-23 & A31/1, I.D.A, NACHARAM, HYDERABAD - 500076 PH : 9100114863.	2790. THE MITHRA AGENCIES (1002-10-07), SURVEY NO.12,13,14& 15, MEDIPALLY, GHATKESAR MANDAL, RANGA REDDY DISTRICT, HYDERABAD, TELANGANA - 500098 PH : 8886697954.	2800. PAVAN MOTORS PVT LTD (-01), S.NO.123/E, MPP PATELGUDA, IBRAHIMPATNAM, RANGA REDDY - 501506 PH : 8790144499.
2763. GEM MOTORS (INDIA) PVT LTD (1009-10-01), RAGHUVENDRA SOCIETY,KONDAPUR, HYDERABAD , ANDHRA PRADESH - 500084 PH : 9912899128.	2778. ADARSHA AUTOMOTIVES PVT LTD (1014-10-02), H. NO. 8-84/1, RUDRA COLONY, SHAMSHABAD, HYDERABAD. - 501218 PH : 9603296833.		JAGTIAL
2764. GEM MOTORS (INDIA) PVT LTD (1009-10-02), 2-11, SURVEY NO: 165,172,HYDERNAGAR, KUKATPALLY, HYDERABAD, ANDHRA PRADESH - 500072 PH : 9912344538.	2779. GEM MOTORS (INDIA) PVT LTD (1009-10-03), SURVEY NO. 135/A & 135/AA, MANIKONDA, RAJENDRA NAGAR MANDAL, RANGAREDDY DISTRICT, HYDERABAD, TELANGANA - 500089 PH : 9912341524.		2801. ADARSHA AUTOMOTIVES PVT LTD (-04), HOUSE NO.-1-5-216/A,OPPOSITE TO KVA SUBSTATION, KARIMNAGAR ROAD, JAGTIAL, - 505327 PH : 8886152222.
2765. SAI SERVICE PRIVATE LIMITED (1011-10-01), PLOT NO. 88, INDUSTRIAL AREA,C.I.E. GANDHI NAGAR, BALANAGAR, HYDERABAD - 500037 PH : 9010827755.			JAMIKUNTA
2766. THE MITHRA AGENCIES (1002-10-03), PLOT NO. 19,20 & 21,ROAD NO. 10,IDA NACHARAM, HYDERABAD - 500076			2802. VARUN MOTORS PVT LTD (-01), SY NO. 794, KARIMNAGAR ROAD, AMMIKUNTA, DIST. KARIMNAGAR - 505152
			JANGAON
			2803. ADARSHA AUTOMOTIVES PVT LTD (-01), H.NO.339, HYDERABAD ROAD, JANGAON. - 506167 PH : 7799626633.
			JOGIPET

Dealer Workshop (AS ON 31.01.2026)

2804. VARUN MOTORS PVT LTD (-01), #8-65/12/C MAIN ROAD YARD ANDOLE MANDAL, OPP. MARKET YARD, SANGAREDDY, TELANGANA - 502270	2816. ADARSHA AUTOMOTIVES PVT LTD (-01), SY. NO. 131, H.NO. 12-38, GAREPALLI, KATARAM(M), JAYASHANKAR(DIST.), TELANGANA - 506169	2827. VARUN MOTORS PVT LTD (-01), SURVEY NO 289/E, NEAR BY SSR GARDENS, LUXETTIPET, MANCHERIAL DISTRICT, TELANGANA - 504215 PH : 8297848999.	MEDCHAL
JUKKAL	KEESARA	MADHIRA	2838. AUTOFIN LIMITED (-01), H. NO. 11-27/1, SURVEY NO.401, MEDCHAL VILLAGE AND MANDAL, DIST. - MEDCHAL. - 501401 PH : 8885040020.
2805. VARUN MOTORS PVT LTD (-01), PLOT N9 OF SY NO 74/EE/3 AND 74/UU/I, KOWLAS VILLAGE, JUKKAL MANDAL, DIST-KAMAREDDY, TELANGANA - 503305	2817. JAYABHERI AUTOMOTIVES PRIVATE LTD (-01), H-NO 3-56/9/6A, SURVEY NO 5, KEESARA, MEDCHAL-MALKAJIGIRI, TELANGANA - 501301 PH : 9676076666.	2828. SANTOSH AUTOMOTORS PVT LTD (-01), SURVEY NO 33/A, H-NO : 1-780/8, MCN COMPLEX, WYRA ROAD, MADHIRA, KHAMMAM, TELANGANA - 507203	METAPALLY
KADTHAL	KHAMMAM	MAHABUBABAD	2839. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO. 40U/2 CHOULAMADHI, METPALLY PIN CODE 505325 - 505325 PH : 8886092222.
2806. THE MITHRA AGENCIES (-01), S NO 8, KANDUKURU, KADTHAL, TELANGANA - 509358	2818. MITHRA AUTO AGENCIES PVT LTD (2604-02), SURVY NO. 182, WARANGAL ROAD, OPP. FCI GODOWNS, PEDA THANDA, KHAMMAM - 507003 PH : 8886063527.	2829. ADARSHA AUTOMOTIVES PVT LTD (-01), SY. NO.38/A, MAHBUBABAD REVENUE VILLAGE AND MANDAL, MAHBUBABAD. - 506101	MIRYALGUDA
KAGHAZNAGAR	2819. SANTOSH AUTOMOTORS PVT LTD (2607-03), SURVEY NO: 19, BESIDE ROYAL OAK FURNITUR, NEAR RTC BUS STAND, RAPARTHI NAGAR - 507318	MAHBUBNAGAR	2840. PAVAN MOTORS PVT LTD (-01), SURVEY NO-940 &943, (OPPOSITE TO MINA ENGINEERING COLLEGE) NARKETPALLY ADDANKI BY-PASS ROAD, MIRYALAGUDA NALGONDA DISTRICT, ANDHRA PRADESH - 508207 PH : 8790900399.
KALWAKURTHY	KHANAPUR	MAHESHWARAM	MOINABAD
2808. SRI JAYARAMA MOTORS PVT LTD (-01), D.NO. 12-42, BESIDE INDIAN OIL, PETROL PUMP, DEVERAKONDA ROAD, KALWAKURTHY - 509324	2820. VARUN MOTORS PVT LTD (-01), NO-14-10A, NEAR SAI BABA TEMPLE, OPP. GIRLS HIGH SCHOOL, VILL & MANDAL: KHANAPOOR, DIST- NIRMAL	2831. ADARSHA AUTOMOTIVES PVT LTD (-01), (BEARING #5-187, SURVEY NO.:336/A1, VILLAGE & MANDAL: MAHESHWARAM DISTT. RANGA REDDY - 501359	2841. GEM MOTORS (INDIA) PVT LTD (-01), SURVEY NO. 70, PLOT NO. 4, VILLAGE AND GRAM PANCHAYAT - HIMAYATH NAGAR, MANDAL - MOINABAD, DISTRICT - RANGA REDDY. - 500075
KAMAREDDY	KODAD	MALL	MOMINPET
2809. VARUN MOTORS PVT LTD (-01), H.NO. 11-107/61, BESIDE:GURU RAGHAVENDRA COLONY, CHINNA MALLAREDDY VILLAGE, KAMAREDDY. - 503111 PH : 9985557570.	2821. PAVAN MOTORS PVT LTD (-01), SURVEY NO. 42, KOMARABANDA REVENUE LIMITED, KODAD , DISTRICT - NALGONDA, TELANGANA - 508206 PH : 8008899995.	2832. PAVAN MOTORS PVT LTD (-01), MALL HYDERABAD ROAD, YACHARAM MANDALAM, RANGA REDDY DIST., - 501509	2842. VARUN MOTORS PVT LTD (-01), SY NO.242/A/3, MOMINPET (VILL & MDL) - 501202
KARIMNAGAR	KODANGAL	MANCHERIAL	MORTHAD
2810. ADARSHA AUTOMOTIVES PVT LTD (-01), H.NO. 8-6-313/1, HYDERABAD ROAD, BY-PASS JUNCTION, KARIMNAGAR - 505001	2822. POPULAR VEHICLES AND SERVICES LIMITED (- 01), SURVEY NO 1156/AA1/2, BESIDE EESAIR PETROL PUMP, KODANGAL, VIKARABAD, TELANGANA - 509338	2833. ADARSHA AUTOMOTIVES PVT LTD (-03), SURVEY NO 477 / 2, GARMILLA VILLAGE, MANCHERIAL, TELANGANA BEHIND MAHINDRA TRACTORS SHOWROOM, BELLAMPALLY ROAD, MANCHIRIAL. DISTT. ADILABAD - 504208 PH : 8886302222.	2843. VARUN MOTORS PVT LTD (-01), H.NO -16-1/3/B, KARIMNAGAR ROAD, MORTHAD, TELANGANA - 503225
2811. ADARSHA AUTOMOTIVES PVT LTD (-05), H.NO 8-6-301/18, BY-PASS ROAD, AUTONAGAR, KARIM NAGAR, TELANGANA. - 505001	KOLLAPUR	MANTHANI	MUSTABAD
2812. VARUN MOTORS PVT LTD (-01), BEARING NO. 1-81/3/10/2, SURVEY NO. 221 & 222, REKURTHY VILLAGE, KARIMNAGAR-JAGTIAL ROAD, KARIMNAGAR MANDAL & DIST. , TELANGANA. - 505001	2823. SRI JAYARAMA MOTORS PVT LTD (-01), SURVEY NO 259/AA2, 259/E2, KOLLAPUR, NAGAR KURNOOL DISTRICT, TELANGANA - 509102 PH : 9985880015.	2834. VARUN MOTORS PVT LTD (-01), SURVEY NO 1018, H NO 16-4/D2, PLOT NO 5, LAINGADDA STREET, MANTHANI. - 505184 PH : 8886619373.	2844. VARUN MOTORS PVT LTD (-01), OPP: NEW BUSTAND, MUSTABAD, RAJANNA SIRICILLA (D) - 521107
2813. VARUN MOTORS PVT LTD (-02), SURVEY NO. 277, 278/B, AREPALLY VILLAGE, TEEGALAGUTTAPALLI GRAM PANCHAYAT, KARIMNAGAR - 505001 PH : 9885210555.	KOSGI	MANUGURU	NAGARKURNOOL
2814. ADARSHA AUTOMOTIVES PVT LTD (-06), 1-81/3/10/2, JAGITYAL ROAD, REKURTHY, KARIMNAGAR - 505010	2824. SRI JAYARAMA MOTORS PVT LTD (-01), SY. NO. 1798/B, KOSGI TOWN, SITUATED TANDOR ROAD KOSGI(G.P & MANDAL), NARAYANPET DIST, TELANGANA	2835. SANTOSH AUTOMOTORS PVT LTD (-01), MANUGURU MAIN RD, PILOT COLONY, MANUGURU (PT), TELANGANA - 507117	2845. SRI JAYARAMA MOTORS PVT LTD (-01), SURVEY NO.44/A AND 45/A, UYYALWADA VILLAGE, NAGARKURNOOL, TELANGANA - 509209
2815. VARUN MOTORS PVT LTD (-03), PLOT NO. 12,5,3 & 4, SY NO. 793, BONMAKAL VILLAGE, KARIMNAGAR - 505001	KOTHAGUDEM	MARIPEDA BUNGLOW	NALGONDA
KATARAM	2825. VARUN MOTORS PVT LTD (2603-04), DOOR NO. 5-35/4/B, LAKSHMIDAVI PALLI, BHADRACHALAM ROAD, KOTTHAGUDEM - 507101	2836. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT LTD) (-01), KHAMMAM - WARANGAL HWY, MARIPEDA BUNGLOW, MARIPEDA, TELANGANA 506315 - 506315	2846. PAVAN MOTORS PVT LTD (-01), CHERLAPALLY VILLAGE, NALGONDA ROAD, NALGONDA - 508001
	LINGAMPET	MEDAK	NARAYANKHED
	2826. VARUN MOTORS PVT LTD (-01), 12-119, OPP:HONDA SHOWROOM, YELLAREDDY ROAD, LINGAMPET, DIST:KAMAREDDY - 503124	2837. VARUN MOTORS PVT LTD (-01), SY.NO.-1486/A3, HYDERABAD ROAD, MEDAK (MDL & TOWN) - 502110 PH : 9154953337.	2847. VARUN MOTORS PVT LTD (-01), D. NO. 1-6-111/25/B/5/A/1, SY NO. 57/2, BHUMAN COLONY, GRAM PANCHAYAT & MANDAL - NARAYANKHED, DISTRICT - MEDAK, TELANGANA. - 502286 PH : 9885210555.
	LUXITTIPET		NARAYANPET

2848. SRI JAYARAMA MOTORS PVT LTD (-01), SURVEY NO. 468/4, MAHABUBNAGAR ROAD, NARSAMPET TOWN, DIST. MAHABUBNAGAR, STATE - TELANGANA - 509210	PEDEPALLY 2858. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO 142, H NO 185, RANGAMPALLI VILLAGE, PEDDAPALLI, TELANGANA - 505172	2868. VARUN MOTORS PVT LTD (4603-01), 1-10-176/1, BEHIND VARUN TOWERS-1, OPP. HYDERABAD PUBLIC SCHOOL, BEGUMPET, SECUNDERABAD, HYDERABAD, TELANGANA STATE - 500016 PH - 9985552452.	2878. VARUN MOTORS PVT LTD (-01), H. NO. 2-1-20/3, 2-1-20/3/A & 2-1-20/9, PLOT NO. 45, 46, 47, SURVEY NO. 57 OF MALREDDYPALLY VILLAGE, TANDUR MUNICIPALITY, VIKARABAD DISTRICT, TELANGANA - 501141 PH - 8886619370.
NARSAMPET	PILERU	THIMMAPUR	
2849. ADARSHA AUTOMOTIVES PVT LTD (-01), OPP. TRIVENI JUNIOR COLLEGE, WARANGAL TO NARSAMPET HIGHWAY - 506132	2859. VISHNU CARS PVT LTD (-01), VISHNU CARS PVT LTD, BESIDE NAGI REDDY FUNCTION HALL, PILERU, MUDUPULAVEMULA, ANDHRA PRADESH - 517214	2879. KALYANI MOTORS PRIVATE LIMITED (-01), SY NO.51/LUU, THIMMAPUR VILLAGE , KOTHUR MANDAL, RANGAREDDY, TELANGANA - 509325	
NARSAPUR	RAMAGUNDAM	THORRUR	
2850. KALYANI MOTORS PRIVATE LIMITED (-01), SURVEY NO 68, BLOCK NO-19,NARSAPUR,DISTRICT:MEDAK, TELANGANA - 534275 PH :9100067766.	2860. ADARSHA AUTOMOTIVES PVT LTD (-01), 5-6-172 SURVEY NO. - 259/B, MEDIPALLY SHIVAR, RAMAGUNDAM MUNICIPALITY, DISTRICT - KARIM NAGAR, ANDHRA PRADESH - 505209 PH - 8886144550.	2880. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO.1 TO 5, BEARING M. NO.4-153/1, VILLAGE & MANDAL THORRUR DISTT. WARANGAL - 506163	
NELLAKONDAPALLI	RAMAYAMPET	TOOPRAN	
2851. VARUN MOTORS PVT LTD (-01), SY.NO. 211 2,12 AT KUSUMANCHI ROAD , NELLAKONDAPALLI, KHAMMAM DISTRICT, TELANGANA - 507160	2861. VARUN MOTORS PVT LTD (-01), SURVEY NO. 1626 & 1626/2 SITUATED AT BLOCK NO. 16, RAMAYAMPET, DISTRICT - MEDAK - 502101	2881. ADARSHA AUTOMOTIVES PVT LTD (-01), PLOT NO 7&8, SY NO 185,184,175U, NAGULAPALLY VILLAGE,TOOPRAN MANDAL,TELANGANA STATE, TELANGANA CITY: TOOPRAN PIN : 502334 CITY Catego - 502334	
NIRMAL	SADASHIVA NAGAR	UTNOR	
2852. ADARSHA AUTOMOTIVES PVT LTD (-02), SURVEY NO: 1246/1,1247 & 1248 , SHASTRI NAGAR, NIRMAL, TELANGANA.	2862. VARUN MOTORS PVT LTD (-01). #17-48/C,NH-44,MAIN ROAD, BESIDE GEENBAVARCHI, SADASHIVNAGAR - 503145	2882. ADARSHA AUTOMOTIVES PVT LTD (-01), OPP., KB COMPLEX, UTNOR, DIST- ADILABAD	
H. NO. 1-1-131, SHASTRINAGAR, MANCHIRIAL ROAD, DIST. ADILABAD, NIRMAL - 504106 PH - 8886342222.	SADHASHIVPET	VARNI	
NIZAMABAD	2863. SAI SERVICE PRIVATE LIMITED (-01), PLOT NO. 2, SY NO. 974, GURUNAGAR COLONY, OLD BOMBAY HIGHWAY ROAD, SADASHIVPET, SANGAREDDY DIST. 502291 - 502291 PH - 9966377888.	2883. VARUN MOTORS PVT LTD (-01), H.NO.9-54/1, SATYA NARAYANA PURAM,VARNI, - 503201	
2853. VARUN MOTORS PVT LTD (-01), PLOT NO. GP 1-57/4/1,PANGARA BORGOAN,NIZAMABAD - 503230	SANGAREDDY	VELMULWADA	
PALAKURTHY	2864. SAI SERVICE PRIVATE LIMITED (1011-05), H.NO.4-8-92/1/4/5, AHMED NAGAR, OPP.GOV.T.I.TI, SANGAREDDY, MEDAK (DIST), ANDHRA PRADESH - 502001 PH :7661811000.	2884. ADARSHA AUTOMOTIVES PVT LTD (-01), SURVEY NO 438,NAMPALLI, VEMULWADA VILLAGE, RAJANNA SIRCILLA-DISTRICT, TELANGANA - 505302	
2854. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT LTD) (-01), SURVEY NO 537/B,MAIN ROAD, PALAKURTHY,JANGAON DISTRICT,TELANGANA - 506317 PH :8688838005.	SATUPALLI	VIKARABAD	
PALWANCHA	2865. MITHRA AUTO AGENCIES PVT LTD (-01), SURVEY NO. 75 NEAR VIVEKANANDA STATUE,SATHUPALLI, KHAMMAM. - 507303 PH :9848988312.	2885. GEM MOTORS (INDIA) PVT LTD (-01), SHOP NO. 3-2-93/2, VILLAGE - YENNAPALLY, VIKARABAD MUNICIPALITY, VIKARABAD, DISTRICT - RANGA REDDY, TELANGANA. - 501101 PH :9912349840.	
2855. VARUN MOTORS PVT LTD (-01), SURVEY NO.758 & 757, NEHRU NAGAR, PALWANCHA (NEW POLANCHA) MANDAL & TOWN, BHADRADRI KOTHAGUDEM DISTT., TELANGANA - 507115 PH :8297163222.	SECUNDERABAD	VM BANJAR	
PARGI	2866. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT LTD) (-01), A1, MOTI VALLEY,TRIMULGHERRY,SECUNDERABAD, - 500015	2886. MITHRA AUTO AGENCIES PVT LTD (-01), DOOR NO 6-101/1, VM BANJAR VILLAGE, NEAR RTC BUS STAND, PENUBALLY MANDAL, KHAMMAM - 507302	
2856. VARUN MOTORS PVT LTD (-01), HOUSE NO. 2-356 JANGAIAH COMPLEX, SURVEY NO. 217/EE4, JAYANTHI NAGAR COLONY, MANDAL - PARGI, DISTRICT - RANGA REDDY, - 510501	2867. AUTOFIN LIMITED (-01), SURVEY NO. 33, MEDCHAL ROAD, BOWENPALLY, SECUNDERABAD - 500011 PH :8885040130.	WANAPARTHY	
PARKAL		2887. SRI JAYARAMA MOTORS PVT LTD (-01), SURVEY NO.1149, KURNOOL ROAD, WANAPARTHY (A.P.) - 509103 PH :8096903879.	
2857. ADARSHA AUTOMOTIVES PVT LTD (-01), SY.NO 946, H.NO 5-27, VIKAS NAGAR, PARKAL,WARANGAL - 506164 PH :8886742222.		WARRANGAL	
		2888. ADARSHA AUTOMOTIVES PVT LTD (-02), PLOT NO.10, INDUSTRIAL AREA, MULUGU ROAD, WARRANGAL - 506007 PH :8886132222.	

Dealer Workshop (AS ON 31.01.2026)

2889. ADARSHA AUTOMOTIVES PVT LTD (–03),
OPPOSITE TO ORUGALLU FILLING STATION,
HUNTER ROAD, SHAYAMPET, HUNAMKONDA,
WARANGAL - 506001
PH :8686492222.

2890. WIN MOTORS (A UNIT OF BHADRAKALI
AUTOCARE PVT LTD) (–01), SURVEY NO. 16,
16/A & 16/B, OPPOSITE KAKATIYA UNIVERSITY
GATE-2, LASHKERSINGARAM REVENUE
VILLAGE, HANAMKONDA MANDAL, WARANGAL.
- 506001
PH :8688828010.

2891. WIN MOTORS (A UNIT OF BHADRAKALI
AUTOCARE PVT LTD) (–02), PLOT NUMBER
9,10,11 & 13/A, SURVEY NUMBER 148/A&B OF
BHEEMRAM VILLAGE, WARANGAL. - 506015
PH :8688828015.

2892. ADARSHA AUTOMOTIVES PVT LTD (–05),
SY.NO742/A,753,
100FEETROAD,WADEPALLY,HANAMKONDA,WA
RANGAL, TELANGANA STATE - 506001

YELLANDU

2893. VARUN MOTORS PVT LTD (–01), 15-129, BESIDE
SBI SUDIMALA BRANCH, MAIN ROAD,
YELLANDU, BHADRADRI, - 507101

ZAHIRABAD

2894. SAI SERVICE PRIVATE LIMITED (–01), PLOT
NO-5,NEAR IBP PETROL BUNK,
NH-9,ALIPUR,ZAHIRABAD,MEDAK
(DIST),ANDHRA PRADESH - 502220
PH :7660055206.

TRIPURA

AGARTALA

2895. JAIN UDYOG (6901-69-01), ARUNDHUTI NAGAR,
OPP. INDUSTRIAL ESTATE, AGARTALA - 799003
PH :9862149275.

2896. JAIN UDYOG (6901-69-05), 58-B/C, INDUSTRIAL
AREA ARUNDHATI NAGAR, AGARTALA - 799003

2897. JAIN UDYOG (6901-69-06), KHATIAN NO. 1843,
MOUJA & TEHSIL - KHAIRPUR, JIRANIA
SUBDIVISION, AGARTALA - 799008

2898. PALLAVI MOTORS PVT LTD (6902-69-01), 44 NH
ROAD, DAG NO. 495, DAG NO. 1748, DAG NO.
867, POST OFFICE KHERPUR, AGARTALA
(TRIPURA) - 799008
PH :9864052488.

AMARPUR

2899. JAIN UDYOG (–01), NEAR MOTOR STAND,
AMARPUR,TRIPURA - 799101

AMBASSA

2900. JAIN UDYOG (–01), A.A. ROAD, OPPOSITE OF
CHANDRAI PARA HS SCHOOL, AMBASSA,
DHALAI, TRIPURA - 799289

BELONIA

2901. JAIN UDYOG (–01), SUKANTA NAGAR, S.B.C
NAGAR, BANKAR, BELONIA, PIN-799155,
TRIPURA - 799155

DAMCHERA

2902. PALLAVI MOTORS PVT LTD (–01), DAMCHERRA,
NARENDRA NAGAR NORTH TRIPURA - 799256

DHARMANAGAR

2903. JAIN UDYOG (6901–03), DHARMANAGAR
COLLEGE ROAD, DHARMANAGAR,
TRIPURA(NORTH) - 799250

KAMALPUR

2904. PALLAVI MOTORS PVT LTD (–01), KAMALPUR,
NEAR MANIKVHANDER BAZAR., KAMALPUR
AMBASSA ROAD, - 799285

KANCHANPURA

2905. PALLAVI MOTORS PVT LTD (–01),
KANCHANPUR, URICHERRA JUMPUI ROAD ,
TRIPURA 799270 - 781352

KUMARGHAT

2906. PALLAVI MOTORS PVT LTD (–01), UTTAR PABIA
CHERRA KUMARGHAT, M/C WARD
NO.06,UNOKOTI - 799264

MANU

2907. PALLAVI MOTORS PVT LTD (–01), MANU, MAIN
BAZAR, DHALAI TRIPURA 799275 - 799275

NORTH LAKHIMPUR

2908. VISHAL CAR WORLD PVT LTD (–01), VILL-
CHARAMORIA (MOIDOMIA),
IST-NORTH-LAKHIMPUR, STATE-ASSAM -
787001

SABROOM

2909. JAIN UDYOG (–01), VILL- PASCHIM JALEFA,
TAHESIL- HARINA, SABROOM SOUTH TRIPURA,
PIN-799145 - 799145

SANTIBAZAR

2910. PALLAVI MOTORS PVT LTD (–01),
SANTIBAZARM NEAR SDM OFFICE., SOUTH
TRIPURA, - 799144

TELIAMURA

2911. PALLAVI MOTORS PVT LTD (–01), SOUTH
KARAILONG., PACHIM TELIAMURA, TRIPURA, -
799201

UDAIPUR

2912. JAIN UDYOG (–01), DHWAJANAGAR
INDUSTRIAL ESTATE,UDAIPUR,TRIPURA
(SOUTH) - 799116
PH :9774020152.

UTTAR PRADESH

AFZALGARH

2913. SHAKUMBARI AUTOMOBILES PVT LTD (–01),
VILL FATEHULLANAGAR,AFZAL GARH MARH.,
NH-74,AFZALGARH,TEHSIL DHAMPUR, - 246722

AGRA

2914. KTL PVT LTD (6606-66-01), MUGHAL ROAD,
KAMLA NAGAR, AGRA - 282004

2915. PREM MOTORS PVT LTD (–01), 45, OPPOSITE
AGRA COLLEGE, GOKULPURA, AGRA, UTTAR
PRADESH - 282002
PH :9690010799.

2916. KTL PVT LTD (6606–02), KHASRA NO. 171,
SEWLA JAT, GWALIOR ROAD, AGRA, UTTAR
PRADESH - 282001
PH :8449715099.

2917. MERAK VEHICLES (A UNIT OF ONE 3
VENTURES) (6609-66-01), KHASRA NO 65 & 74,
MAUZA MOHAMMADPUR, AGRA-DELHI ROAD
(NH-2), SIKANDRA, AGRA UTTAR
PRADESH-282007 - 282007
PH :9690486139.

AJITMAL

2918. KULDEEP MOTORS PVT LTD (–01), MUGHAL
ROAD AJITMAL, DIST : AURAIYA - 206121

AKBARPUR

2919. KTL PVT LTD (2801-03), KANPUR ROAD,
AKBARPUR - 209206
PH :7408409348.

2920. SMARTWHEELS PRIVATE LIMITED (7201–08),
TANDA ROAD, VILL.-BUDHAEUPUR, PO-KATRIYA
YAKOOPUR, AKBARPUR, DIST-AMBEDKAR
NAGAR (U.P.) - 224122
PH :7705803248.

ALIGANJ

2921. DEV MOTORS PVT LTD (–01), KAYAMGANJ
ROAD, ALIGANJ, ETAH, - 226024

ALIGARH

2922. DEV MOTORS PVT LTD (–01), NEAR BANNA
DEVI, G.T. ROAD, ALIGARH - 202001

2923. DEV MOTORS PVT LTD (–04), PLOT NO 97,
VILLAGE SIKANDERPUR, BHUKRAVALI, GT
ROAD BYE PASS, ALIGARH - 202002
PH :7351345577.

ALLAHABAD

2924. AMITDEEP MOTORS PVT LTD (2901-29-01), 26
SULEM SARAI, G.T. ROAD, ALLAHABAD - 211001

2925. SARASWATI MOTORS LLP (2904-29-01), PLOT
NO 24, INDUSTRIAL AREA MNIT COLLEGE,
TELYARGANJ, PRAYAGRAJ, UTTAR PRADESH.
- 211004
PH :8090854053.

2926. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE
LIMITED (2905-29-01), ARAZI NO 390 AND 389 AT
KATKA, ANDAWA SAHSON BYPASS,
PRAYAGRAJ - 211002
PH :9415324201.

2927. SARASWATI MOTORS LLP (2904-29-02), 342,
BHAGIPUR, SARAI INAYAT, ANDWA,JHUNSI,
PRAYAGRAJ - 211019

2928. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE
LIMITED (2905-29-02), 46, DANDI REWA ROAD,
OPPOSITE H.P. JANTA PETROL PUMP,
PRAYAGRAJ, UTTAR PRADESH. - 211008

AMETHI

2929. KTL AUTOMOBILE PRIVATE LIMITED (–01),
PLOT NO – E 32, INDUSTRIAL AREA TEKARIA,
UPSIDC, GAURIGANJ, DIST: C.S.M.NAGAR -
227409
PH :7379557377.

AMRITPUR

2930. KULDEEP MOTORS KANPUR LLP (–01), TEHSIL
ROAD NEAR TEHSIL BHAWAN, AMRITPUR,
DISTRICT FARRUKHABAD, UTTAR PRADESH -
209622

AMROHA

2931. AKANKSHA AUTOMOBILES PVT LTD (–01),
AMROHA – JOYA ROAD, NEAR PUNJAB
NATIONAL BANK, AMROHA, UTTAR PRADESH,
PIN CODE: 244221 - 244221
PH :7247800064.

ANPARA

2932. STAR CARS (A UNIT OF SARASWATI VEHICLES
LLP) (–01), KAHUWA NALA, AURI-BINA ROAD,
AURI ANPARA, DISTRICT – SONEBHADRA, -
232101

ANUPSHAHAR

2933. SKUNIVERSE AUTOMOBILE PVT LTD (–01),
KHASRA NO. 341, BULANDSHAHR ROAD,
ANOOPSHAHAR, DIST. BULANSHAHR,
PIN-203390, UTTAR PRADESH - 203390
PH :7055118430.

AONLA

2934. KAVISHA MOTORS PVT LTD (–01),
COMMERCIAL PLOT, RAN NAGAR ROAD, NEAR
MUNICIPALITY OFFICE, TEHSIL - AONLA, DIST.,
BAREILLY, STATE- UTTAR PRADESH. - 243301

ATARRA

2935. MY CAR PVT. LTD. (–01), 14/292, AZAD NAGAR.,
ATTARA, BANDA, - 210201

ATRAULI

2936. DEV MOTORS PVT LTD (–01), GATA NO. 126
TEHSIL ATRAULI NEAR HARIYAL, CENTER
MOJA MADHAULI NISFI ASHARABAD - 202280

AURAI

2937. VARANASI MOTORS PVT LTD (–01), KHATA /
KHATAUNI NO. 00045, GT ROAD (EHAJ
BHAIJ), OPP. CHINI MILL,VILLAGE & TEHSIL
AURAI, DIST: BHADHOI, UTTARPRADESH, PIN
2221 301 - 2221301

AURAIYA

2938. KULDEEP MOTORS PVT LTD (-01), NEAR
INDIAN OIL TIRAH, KANPUR ROAD, AURAIYA -
206241
PH :9235358444.

AZAMGARH

2939. DEEP MOTORS (-01), HARBANSHPUR
NARALI, AZAMGARH - 276001
PH :9838072905.

2940. DEEP MOTORS (-04), VILLAGE - BALDEV
MADURI, TEHSIL - SAGRI, DISTRICT -
AZAMGARH, UTTAR PRADESH. - 276138

BABRALA

2941. AKANKSHA AUTOMOBILES PVT LTD (-01),
CHANDASI ROAD, BABRALA, DISTRICT
SAMBHAL, UTTAR PRADESH. - 243751
PH :7895600005.

BACHRAWAN

2942. KTL AUTOMOBILE PRIVATE LIMITED (-01),
VISHNUPUR, PHARWAN,
RAEBARELLI- LUCKNOW ROAD, DIST.
-RAEBARELLI - 229301
PH :9918451222.

BAH

2943. KTL PVT LTD (-01), 16B, DHOBAIR, VILLAGE -
BAH, DIST. -AGRA, UTTAR PRADESH. - 283104

BAHERI

2944. KAVISHA MOTORS PVT LTD (-01), KASRA NO.
530, 531, 532, 533, NAINITAL ROAD, OPP.
RAMLILA GROUND, BAHERI, DISTRICT -
BAREILLY, UTTAR PRADESH - 243201

BAHRAICH

2945. ANAND MOTOR AGENCIES LTD (1301-05),
LUCKNOW ROAD, BEHRAICH, UTTAR PRADESH -
271801
PH :9519596080.

BAKSHI KA TALAB

2946. BRIGHT 4 WHEEL SALES PVT LTD (1305-04),
PLOT NO: 57 TO 60, KAUSHALABAD, BADHAULI
BKT, PARGANA MOHANNA, SITAPUR ROAD,
BAKSHI KA TALAB, LUCKNOW - 226020
PH :7317049000.

BALLIA

2947. DEEP MOTORS (-03), MAIDEYPUR, RAJDHANI
ROAD, BALLIA - 277001
PH :9838072917.

BALRAMPUR

2948. ANAND MOTOR AGENCIES LTD (-01), NEAR
BALRAMPUR CHINI MILLS, GONDA
ROAD, BALRAMPUR-UTTAR PRADESH - 271201
PH :6307995976.

BANDA

2949. MY CAR PVT LTD (2803-03), KALUKUAN,
TINDWARI ROAD, BANDA - 210001
PH :9792971223.

2950. SUMITRA DS MOTORS PVT LTD (-01),
PURANPUR ROAD, BANDA, TEHSIL BANDA,
THANA BANDA, DISTT. SHAHJAHANPUR - U.P. -
224042

2951. MY CAR PVT LTD (-02), ARAZI NO 1180 & 1181,
LADAKAPURWA, TINDWARI ROAD, BANDA,
UTTAR PRADESH - 210001

BANSI

2952. ARBIT AUTOMOBILES PVT LTD (-01), KHASRA
NO. 66 M, GRAM: BHAWNI, TAPPA:
KUNDARANA, PARGANA: BANSI EAST, TEHSIL
BANSI, DISTT : SIDARTHANAGAR - 272153

BANTHRA

2953. MEGA MOTORS (A UNIT OF AKM MOTORS PVT
LTD) (-01), KHASRA NO.1628 AMARPUR,
SIKANDARPUR MARKET, BANTHRA, KANPUR
ROAD LUCKNOW - 226401
PH :9919101456.

2954. ONE UP MOTORS INDIA PVT LTD (1306-05),
KHASRA NO. 1166, KHANDEDEV, KANPUR
ROAD, BANTHRA, LUCKNOW - 226401

BARABANKI

2955. BRIGHT 4 WHEEL SALES PVT LTD (1305-03),
VILL. DHARSANIA, LUCKNOW ROAD,
NAWABGANJ, BARABANKI - 225001
PH :9838075960.

BARAUT

2956. TANYA AUTOMOBILES PVT LTD (-01), 240/2
SHAHPUR-BADOLI, DELHI SAHARANPUR ROAD,
BARAUT, BAGHPAT, UTTAR PRADESH. - 250611
PH :7055300019.

BAREILLY

2957. CORAL MOTORS (P) LTD (5602-56-01), STATION
ROAD, BAREILLY - 243001

2958. CORAL MOTORS (P) LTD (5602-56-03), PILIBHIT
BYE PASS ROAD, EXECUTIVE CLUB CROSSING,
BAREILLY, UTTAR PRADESH - 243002

2959. KAVISHA MOTORS PVT LTD (5601-56-01), 4TH
KM. RAMPUR ROAD, CLUTTER BUCKGANJ,
BAREILLY - 243502

2960. NANDINI MOTORS (A UNIT OF PARK LANE
ENTERPRISES PRIVATE LIMITED) (5604-56-01),
APEX MULTISPECIALITY HOSPITAL PILIBHIT
BYPASS RD BAREILLY - 243001

BARHAJ

2961. SMARTWHEELS PRIVATE LIMITED (-01), VILL.
-LAWARCHHII, BARHAJ DEORIA ROAD, - 274601

BARHAN

2962. KTL PVT LTD (-01), VILLAGE BARHAN,
ETMADPUR, AGRA, UTTAR PRADESH. - 283201

BASTI

2963. SMARTWHEELS PRIVATE LIMITED (7201-05),
MANORI CHAURAH, DUMARIYA GANJ ROAD,
BASTI - 270002

2964. ARBIT AUTOMOBILES PVT LTD (7203-72-03),
SANSARPUR FUTAHIA POST GANDHI NAGAR
DISTRICT BASTI UTTAR PRADESH - 272182
PH :9953412621.

BEHTA

2965. MEGA MOTORS (A UNIT OF AKM MOTORS PVT
LTD) (-01), KHASRA NO. 254, OPPOSITE
SANGAM MOTORS, KURSI ROAD, BEHTA -
226026
PH :6388901514.

BELA

2966. KULDEEP MOTORS LUCKNOW PVT LTD (-01),
TIRWA ROAD BELA, DISTRICT AURAIYA U.P. -
206251

BHADOHI

2967. VARANASI MOTORS PVT LTD (8402-02),
VARANSI ROAD, BHADOHI - 221401
PH :9638360662.

BHARTANA

2968. KULDEEP MOTORS PVT LTD (-01), RAJA
GANJ, BHARTANA, DISTRICT ETAWAH - 206242

BHINGA

2969. ANAND MOTOR AGENCIES LTD (-01),
PATNAKHARGAURA, BHINGA, SHRIVASTI -
271831
PH :9415013059.

BHOGNIPUR

2970. KULDEEP MOTORS KANPUR LLP (-01), NEAR
CHANDRA PETROL PUMP, KANPUR JHANSI
ROAD, TEHSIL BHOGNIPUR, KANPUR DEHAT, UP -
209112

BHOJPUR

2971. MOTORCRAFT SALES PVT LTD (-01),
OPPOSITE PRIMARY GOVERNMENT SCHOOL,
HAPUR ROAD, VILLAGE BHOJPUR, TEHSIL -
MODINAGAR, DISTRICT - GHAZIABAD. - 201204
PH :9410038456.

BIJNOR

2972. MEGA MOTORS (A UNIT OF AKM MOTORS PVT
LTD) (-01), KHASRA NO. 1573, NEAR GROUP
CENTRE, CRPF, CAMP, BIJNORE, LUCKNOW,
PIN-226002, UP - 226002

BIJNORE

2973. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
PLOT & KHASRA NO. 253/3 & 258/1 ADJACENT
KHEDI CHAURAH, NEAR PULKIT HOSPITAL,
DELHI-BIJNOR HIGHWAY, BIJNOR, DIST. -
BIJNOR, UTTAR PRADESH. - 246701
PH :8630881409.

BILARI

2974. AKANKSHA AUTOMOBILES PVT LTD (-01),
2KM-BILARI NH 509, NEAR SBS SCHOOL,
BILARI, MORADABAD 244001 - 244001
PH :7900600008.

BILASPUR-UP

2975. AKANKSHA AUTOMOBILES PVT LTD (-01),
NH-87, OPPOSITE SHAGUN BANQUET HALL,
NEAR MILTON ACADEMY SCHOOL, RAMPUR
NAINITAL ROAD, BILASPUR, DISTRICT -
RAMPUR. - 244921
PH :9105370007.

BISALPUR

2976. CORAL MOTORS (P) LTD (-01), KHASRA NO.
668, VILLAGE : BISALPUR, DISTT: PILIBHIT,
UTTAR PRADESH - 262201
PH :9837891846.

BISWAN

2977. CONCEPT CARS LIMITED (-01), BILJHARIYA,
OPPOSITE-555, BRICK FIELD, BISWAN - 261201
- 261201
PH :7607696666.

BUDAUN

2978. CORAL MOTORS (P) LTD (5602-04), PLOT NO.-
72, BAREILY-MATHURA HIGHWAY, BUDAUN,
UTTAR PRADESH - 132103
PH :9837891846.

BUDHANA

2979. RADHA GOVIND AUTOMOBILES PVT LTD (-01),
BARAUT ROAD, NEAR BALWALA POLICE
STATION, - 251309

BULANDSHAHR

2980. SKUNIVERSE AUTOMOBILE PVT LTD (-01),
KHASRA NO 561 , BHOOR, OPP PANDIT
PETROL PUMP, BULANDSHAHR - 203001
PH :9219694600.

2981. SKUNIVERSE AUTOMOBILE PVT LTD (-02),
KHASRA NO.2261, NEAR T POINT , BYPASS
SIKARPUR ROAD, BULANDSHAHR - 203001
PH :7055118430.

CHAIL

2982. SARASWATI MOTORS LLP (-01), MAUJA CHAIL,
TEHSIL CHAIL, KAUSHAMBI, UTTAR PRADESH -
212202

CHAKARNAGAR

2983. KULDEEP MOTORS PVT LTD (-01), RAJPUR
ROAD, CHAKARNAGAR, DISTT : ETAWAH -
206125

CHAKIA

2984. STAR CARS (A UNIT OF SARASWATI VEHICLES
LLP) (-01), KATHSILA NAHER, NEAR SAINT
JOHN'S SCHOOL, CHAKIA, DISTRICT -
CHANDAILI. - 232101
PH :9430544961.

CHANDASI

2985. AKANKSHA AUTOMOBILES PVT LTD (-01),
AAZAD ROAD, NEAR ROADWAYS, CHANDASI
(BHEEM NAGAR) - 202412
PH :7248000002.

2986. AKANKSHA AUTOMOBILES PVT LTD (-02), PATHRA CHOWK, BADAUN ROAD (NEAR INDIAN OIL FILLING STATION), CHANDAUSI, DISTRICT SAMBHAL, UTTAR PRADESH - 202414. - 202414	2997. SMARTWHEELS PRIVATE LIMITED (-01), CFC BUILDING, INDUSTRIAL ESTATE, DEORIA, DISTRICT DEORIA, UTTAR PRADESH PLOT NO. C-7, AND SHED NO. D-3, GOVERNMENT INDUSTRIAL ESTATE MEHRA, DEORIA, DIST.-DEORIA, UTTAR PRADESH. - 274001	FAKHARPUR 3008. ONE UP MOTORS INDIA PVT LTD (-01), GHASIPUR, FAKHARPUR, BAHRACH (UP) - 271902 PH : 9935275786.	3020. REGENT AUTOLINKS PVT LTD (5902-59-01), A-10/9 INDUSTRIAL AREA, SITE NO 3, MEERUT ROAD, GHAZIABAD - 201001
CHAURE BAZAR	2987. SMARTWHEELS PRIVATE LIMITED (-01), PLOT NO 366, GRAM CHAURE CHANDAU, CHAURE BAZAR, BIKAPUR TEHSIL, DISTT AYODHYA - 224209	2998. ARBIT AUTOMOBILES PVT LTD (-01), ARAZI NO 467 MI & 607 MAUJA SONUGHAT PARGANA SALEMPUR MAJHAULI, DEORIA, UTTAR PRADESH - 274001 PH : 8953412821.	3021. ROHAN MOTORS LTD (5904--02), PLOT NO.46, MEERUT-DELHI ROAD, MORTA, GHAZIABAD - 201102
CHAURI CHAURA	2988. ARBIT AUTOMOBILES PVT LTD (-01), ARAZI NO 561 DOMARI KHURD, CHAURI CHAURA, GORAKHPUR - 273201 PH : 8953412821.	DERAPUR 2999. KTL PVT LTD (-01), VILLAGE - DERAPUR, KANPUR DEHAT, UTTAR PRADESH. - 209301	3022. T R SAWHNEY MOTORS PVT LTD (5905--01), PLOT NO. 96, RAJINDER NAGAR INDUSTRIAL AREA, MOHAN NAGAR, GHAZIABAD, DISTT. - GHAZIABAD, U.P. - 201007
CHIBRAMAU	2989. KTL PVT LTD (-01), PLOT GHATA NO. 70, MAUJA - LALAKPUR, VILLAGE - CHIBRAMAU, DIST.-KANNAUL, UTTAR PRADES. - 209721	DHAMPUR 3000. SHAKUMBARI AUTOMOBILES PVT LTD (-01), KHAJRA NO. 205, OPPOSITE, UHSA SMARAK SCHOOL, MORADABAD ROAD, TEHSIL - DHAMPUR, MOJA - ALEHPUR, DIST.-BUNOR, UTTAR PRADESH. - 246761 PH : 9675970960.	3023. SNV AUTOMOBILES PVT LTD (5906-59-01), PLOT NO. 15, SOUTH SIDE GT ROAD INDUSTRIAL AREA, GHAZIABAD, UTTAR PRADESH - 201001 - 201001 PH : 9650324325.
CHITRASENPUR	2990. AGR AUTOMOBILES PVT LTD (-01), KHASRA NO-194, CHITRASENPUR, KACHHUWA ROAD, VARANASI, PIN-221313 - 221313 PH : 9889803355.	DHAURAHARA 3001. SUMITRA DS MOTORS PVT. LTD. (-01), DHAKHERWA ROAD, NEAR HAMID PETROL PUMPBPCL, DHAURAHARA, LAKHIMPUR KHERI - 262723	3024. GLOBUS AUTO LLP (5907-59-01), 139, PANDAV NAGAR, GHAZIABAD, PIN-201001, UTTAR PRADESH - 201001 PH : 8588872804.
COLONELGANJ	2991. SMARTWHEELS PRIVATE LIMITED (-01), OPPOSITE BHARAT PETROL PUMP, PIPRI, COLONELGANJ, DISTT- GONDA, UTTAR PRADESH - 271502	DIBYAPUR 3002. KULDEEP MOTORS PVT LTD (-01), AURAIYA ROAD, DIBYAPUR - 206244 PH : 9235258425.	3025. GLOBUS AUTO LLP (-59-02), 139, PANDAV NAGAR, GHAZIABAD, PIN-201001 139, PANDAV NAGAR, GHAZIABAD, PIN-201001 - 201001
DADRI	2992. RANA MOTORS PVT LTD (-01), KHASRA NO -1242, KHATONI NO - 56, VILLAGE DHOOM MANIKPUR, DADRI, UTTAR PRADESH - 203207	DOMARIAGANJ 3003. SMARTWHEELS PRIVATE LIMITED (-01), VILL & POST - CHAUKHARA, DOMARIAGANJ, DISTT - SIDDHARTH NAGAR - 272193 PH : 7705800602.	GHAZIPUR 3026. AGR AUTOMOBILES PVT LTD (8403--03), RKBK PETROL PUMP, NEAR BANSI BAZAR, GAZIPUR - 2333001 PH : 2361136.
DALMAU	2993. KTL AUTOMOBILE PRIVATE LIMITED (-01), DALMAU ROAD, OPPOSITE BHAGIRATHI GUEST HOUSE - 229203 PH : 9918451222.	ETAH 3004. DEV MOTORS PVT LTD (-01), GATA NO 685/4 VILL GIRONA, ETAH-KASGANJ ROAD, ETAH, UP - 207001 PH : 7351345577.	GHIROR 3027. KULDEEP MOTORS PVT LTD (-01), NEAR SSD COLLEGE, KARHAL ROAD, GHIROR, DISTRICT - MAINPURI, UTTAR PRADESH. KARHAL ROAD, TEHSIL - GHIROR, DISTRICT - MAINPURI, UTTAR PRADESH. PH : 9536755555.
DANKAUR	2994. MOTORCRAFT SALES PVT LTD (-01), OPP. SHRI DRONACHARYA DEGREE COLLEGE, DANKAUR, DIST. - GAUTAM BUDDH NAGAR, HARYANA. - 203201 PH : 9810289355.	ETAH 3005. KULDEEP MOTORS PVT LTD (-01), PAKKA BAGH, KANPUR ROAD, ETAWAH - 206001 PH : 257029.	GOLA 3028. SMARTWHEELS PRIVATE LIMITED (-01), NEAR KANYA INTER COLLEGE, BHARASADA, GOLA, DISTT - GORAKHPUR, UTTAR PRADESH - 273408 PH : 7705800602.
DEBAI	2995. SK UNIVERSE AUTOMOBILE PRIVATE LIMITED (-01), KHASRA NO. 299/2, SABALPUR DEBAI DISTT, BULANDSHAHAR - 203393	FAIZABAD 3006. SMARTWHEELS PRIVATE LIMITED (7201--02), SAHADAT GANJ, LUCKNOW ROAD, FAIZABAD, UTTAR PRADESH. - 224001 PH : 7705803245.	GONDA 3029. SMARTWHEELS PRIVATE LIMITED (7201--07), JANKI NAGAR, OPP INDIAN OIL DEPOT, BAHRACH ROAD, GONDA, UTTAR PRADESH. - 271001 PH : 7705803261.
DEOBAND	2996. ATELIER AUTOMOBILES (-01), OPPOSITE CIVIL COURT, MUZZAFARNAGAR HIGHWAY, DEOBAND - 247001 PH : 7500220011.	FAIZABAD 3007. SMARTWHEELS PRIVATE LIMITED (7201-72-03), GHATAMPUR MAGALSI, OPP TRIMURTI HOTEL, TEHSIL SOHAWAL, FAIZABAD, UTTAR PRADESH - 224001 PH : 7705800602.	GORAKHPUR 3030. SMARTWHEELS PRIVATE LIMITED (7201--01), MOHADDIPUR, (NEAR RAMGARH TAL), GORAKHPUR (U.P.) - 273012 PH : 7705803152.
DEORIA			3031. SMARTWHEELS PRIVATE LIMITED (7201--06), NEAR T B HOSPITAL, LACHCHIPUR, NEPAL ROAD, GORAKHPUR - 273012 PH : 7705803109.

3032. SMARTWHEELS PRIVATE LIMITED (7202-01), PLOT NO.AL-4, SECTOR-9, GIDA, GORAKHPUR. - 273209

3033. ARBIT AUTOMOBILES PVT LTD (7203-72-01), ARAZI NO. 66/1/1 MI & 66/2/1MI, 66 MI, MAUZA - MAHEWA MUSTAKIL, NEAR FALMANDI CHOWK, TRANSPORT NAGAR, GORAKHPUR, UTTAR PRADESH - 273016

3034. ARBIT AUTOMOBILES PVT LTD (7203-72-1B), MEDICAL COLLEGE ROAD, NEAR SPORTS COLLEGE, GORAKHPUR, UTTAR PRADESH - 273016

GOSAIGANJ

3035. BRIGHT 4 WHEEL SALES PVT LTD (-01), KHASRA NO. 24, VILLAGE - SHEKHANPUR, PARGANA MOHANLALGANJ, TEHSIL - MOHANLALGANJ, DIST.-LUCKNOW, UTTAR PRADESH - 226501
PH :9838075929.

GREATER NOIDA

3036. ROHAN MOTORS LTD (-01), 63-A, UDYOG VIHAR, GREATER NOIDA, UTTAR PRADESH - 201306

3037. VIPUL MOTORS PVT LTD (-01), PLOT NO. 64, ECOTECH 12, GREATER NOIDA (WEST), UP. - 201009
PH :9811233385.

HAIDERGARH

3038. BRIGHT 4 WHEEL SALES PVT LTD (-01), PROPERTY SHOP NO. 5, 6 AND 7, VILLAGE - GOTAUNA, PARGANA - HAIDERGARH, TEHSIL - HAIDERGARH, DISTRICT - BARABANKI. - 225124

HAMIRPUR

3039. KTL PVT LTD (-01), VILLAGE RAMEDI,KANPUR ROAD, HAMIRPUR - 210301
PH :7704907587.

HAPUR

3040. ROHAN MOTORS LTD (-01), KHASRA NO - 2225 , BAHADUR DHARAM KANTA, NEAR SUPREME PETROL PUMP, GARH ROAD, HAPUR, UTTARPRADESH - 245101 - 245101

HARDOI

3041. CONCEPT CARS LIMITED (-01), NANAK GANJ, LUCKNOW ROAD, HARDOI - 241001

3042. CONCEPT CARS LIMITED (-04), PLOT NO. 1609 & 1605 GANGA BUX PURVA, BILGRAM ROAD, HARDOI KANPUR HIGHWAY, HARDOI, UTTAR PRADESH - 241001

HARGAON

3043. CONCEPT CARS LIMITED (-01), SITAPUR TO LAKHIMPUR ROAD, NEAR HARGAON DRAM KANTA KESHUWA, TEHSIL. HARGAON, DIST. SITAPUR, UTTAR PRADESH. - 261121

HATHRAS

3044. DEV MOTORS PVT LTD (-03), NEAR NAGLA UMMED, ALIGARH ROAD, HATHRAS - 204101
PH :9917435500.

IGLAS

3045. DEV MOTORS PVT LTD (-01), MATHURA ROAD, IGLAS, DISTRICT ALIGARH. - 202124
PH :9837549000.

ITUNJA

3046. BRIGHT 4 WHEEL SALES PVT LTD (-01), 90M GATA GRAM MANDOLI, ITTANUNJA, LUCKNOW, UTTAR PRADESH-226203. - 226203
PH :7011482503.

JAGATPUR

3047. KTL PVT LTD (-01), GATA NO.331, JOGMAGDIPIR POORE TAYN, NEAR MADRASA ROAD, LUCKNOW PRAYAGRAJ HIGHWAY, JAGATPUR, 229402 - 229402

JAGDISHPUR

3048. BRIGHT 4 WHEEL SALES PVT LTD (-01), KATHORA,MUSAFIRKHANA,LUCKNOW SULTANPUR ROAD,JAGDISPUR-UTTAR PRADESH - 227817

JAGNER

3049. MERAKE VEHICLES (A UNIT OF ONE 3 VENTURES) (-01), SHRI RAM GARDEN, AGRA ROAD, NEAR RADHA KRISHNA MANDHIR, JAGNER, UTTAR PRADESH, 283115 - 283115
PH :7896500400.

JALALABAD

3050. SUMITRA DS MOTORS PVT LTD (-01), GRAM: SUJAWALPUR, BARIELLY ROAD, TEHSIL: JALALBAD, DIST. SHAHJAHANPUR - 242221

JALALPUR

3051. SMARTWHEELS PRIVATE LIMITED (-01), SURHURPUR, TEHSIL - JALALPUR, UTTAR PRADESH - 224149

JALAUIN

3052. KULDEEP MOTORS KANPUR LLP (-01), PARSHURAM NAGR, JALAUIN KONCH ROAD,JALAUIN, UTTAR PARDESH - 285123

JAUNPUR

3053. KIRTI KUNJ AUTOMOBILES PVT LTD (-01), KHANPUR AKBAR, KUTTUPUR TIRAHA - 222001
PH :9554951026.

JHANSI

3054. SURI AUTOMOBILES (6001-60-01), BALAJI UNNA ROAD, ANSAL COLONY, JHANSI PIN - 284002 - 284002
PH :8881811383.

3055. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT LTD) (6002-01), PLOT NO 488, 487, 488, 489 AND 477 (PATTA NUMBERS), MAUZA - KOCCHABHANWAR, BLOCK - BADAGAON, TEHSIL AND DISTT - JHANSI. - 284128

KAKOD

3056. SKUNIVERSE AUTOMOBILE PVT LTD (-01), GATA NO.1738,V-KAKORE DEHAT, TEHSIL SIKANDRABAD,DIST.BULANDSHAHR. - 203203

KANNAUJ

3057. KTL PVT LTD (2801-05), PLOT NO. - 377, AKBARPUR, KANNAUJ - 209725
PH :7408409305.

KANPUR

3058. KTL PVT LTD (2801-28-01), 9/46, BENAJHABAR ROAD, HARSH NAGAR, KANPUR - 208002
PH :7408409341.

3059. MY CAR PVT LTD (2803-28-01), 84/54 C, JARIB CHOWKI, G.T. ROAD, KANPUR - 208003
PH :9792970511.

3060. KTL PVT LTD (2801-28-02), SHVAATRA KRISHNA NAGAR, G T ROAD, KANPUR - 208007
PH :7408409253.

3061. MY CAR PVT LTD (2803-28-02), C-16, SITE-1, PANKI INDUSTRIAL AREA, KANPUR - 208022
PH :9792970086.

3062. S B CARS PVT LTD (2806-28-01), 77B , FAZALGANZ, KANPUR - 208012

3063. MY CAR PVT LTD (2803-28-05), 88, BLOCK-T, FACTORY AREA, FAZALGANJ, KANPUR - 208004
PH :9792970081.

3064. S B CARS PVT LTD (2806-28-05), 1/6-7 AMBEDKAR PURAM, AWAS VIKASH, KALYANPUR, KANPUR - 208017
PH :7408525252.

3065. KULDEEP MOTORS KANPUR LLP (-01), BUKHAND NO. 756, 756A, 757, BLOCK- W, YOJNA- 2, JUHI KALAN, BARRA BYE PASS, KANPUR - 208017
PH :9076608701.

3066. KTL PVT LTD (2801-07), ARAZI NO. 1110, VILLAGE BAIRI, AKBARPUR, KACHHAR, INDIRA NAGAR, KANPUR, UTTAR PRADESH - 208026
PH :7408409379.

3067. KULDEEP MOTORS KANPUR LLP (-28-02), PROPERTY NO. C-4 SITE-II, PANKI INDUSTRIAL AREA, KANPUR - 208020

3068. MY CAR PVT LTD (2803-28-06), PLOT NO.64A, PAHARPUR, NEAR INDIRA PETRO, HAMIRPUR ROAD, NAUBASTA, PIN-208021 - 209401

KANTH

3069. AKANKSHA AUTOMOBILES PVT LTD (-01), GOSIPURA, HARIDWAR ROAD KANTH, DISTRICT - MORADABAD, UP - 244501

KAPTANGANJ

3070. SMARTWHEELS PRIVATE LIMITED (-01), IN FRONT OF BHARAT PETROL PUMP, RAMKOLA ROAD, KAPTANGANJ, DISTT- KUSHINAGAR, PIN- 274301. - 274301

KARHAL

3071. KULDEEP MOTORS PVT LTD (-01), SAFAI KARHAL ROAD, KARHAL, - 205264

KARWI

3072. MY CAR PVT LTD (-01), ARAJI NO. 58, MAUJA - AMANPUR, TEHSIL - KARWI, DIST. -CHITRAKOOT, UTTAR PRADESH. - 210205

KASIA

3073. ARBIT AUTOMOBILES PVT LTD (-01), MAUJA BHAIASAHA, HETIMPUR KASIA, KUSHINAGAR, UTTAR PRADESH - 274206
PH :8953412821.

KATRA

3074. SUMITRA DS MOTORS PVT LTD (-01), GRAM: SAALPUR NAVADIYAM, NH24, KATRA, TEHSIL - TILHAR, SHAHJAHANPUR - 242301
PH :9336408074.

KAUSHAMBI

3075. SARASWATI MOTORS LLP (-01), ARAZI NO 1228, KORRO MANJHANPUR, KAUSHAMBI, UTTAR PRADESH, PINCODE - 212207 - 212207
PH :8090854005.

KAYAMGANJ

3076. MY CAR PVT LTD (-01), BYE PASS ROAD , NEAR KHAN PETROL PUMP, VILLAGE : KAYAMGANJ , DISTT: FARUKHABAD - 209502

KHAIR

3077. DEV MOTORS PVT LTD (-01), PLOT 117, ALIGARH PALWAL ROAD, VILLAGE CHAMAN NAGARIYA, KHAIR - 202138
PH :7351345577.

KHURJA

3078. SKUNIVERSE AUTOMOBILE PVT LTD (-01), OLD GT ROAD, KHURJA, DISTRICT- BULANDSHAHR, UTTAR PRADESH - 203131. - 203131
PH :7055118430.

KIRAOLI

3079. PREM MOTORS PVT LTD (-01), GOVIND PALACE, NEAR KIRAWALI TEHSIL, AGRA - JAIPUR HIGHWAY, KIRAWALI, DISTRICT - AGRA, UTTAR PRADESH. - 283122
PH :9690010799.

KITHORE

3080. RADHAGOVIND AUTOMOBILES PVT LTD (-01), MANISAB PURA, ISLAMABAD, OPP. HP PETROL PUMP, KITHORE, MEERUT, UTTAR PRADESH - 250104

KONCH

Dealer Workshop (AS ON 31.01.2026)

3081. KULDEEP MOTORS KANPUR LLP (–01), NEW PATEL NAGAR, CITY KONCH, DISTRICT - JALAIUN, UTTAR PRADESH - 285205 PH :9839015046.	3093. T R SAWHNEY MOTORS PVT LTD (–G1), PLOT NO. 16, DELHI SAHARANPUR ROAD, KHANNA NAGAR, LONI, GHAZIABAD, UTTAR PRADESH - 201102 LUCKNOW	3108. ONE UP MOTORS INDIA PVT LTD (1314-13-01), KHASRA NO. 20 TO 25, 30, 35, 37, 42, 43, 45, 47, 48, 49, 67, 68, 71 & 99, RAJAJAGANJ, HARDOI ROAD, LUCKNOW - 226003	3120. SURI AUTOMOBILES (6001–02), NEAR PARMANAND CHOWK, GANDHINAGAR, MAHOBA, UTTAR PRADESH - 284001
KOSI		3109. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (1313–02), KHASRA NO. 614, VILLAGE: BHADRUKH, VIP CANNEL RINGI ROAD, DEVI KHERA, TELIBAGH (VIP ROAD), TEHSIL: SARJINI NAGAR, LUCKNOW, UTTAR PRADESH 226002 - 226002 PH :6388901514.	3121. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT LTD) (–01), BAIRANG CHOWK, SAGAR-KANPUR HIGHWAY, MAHOBA - 210427 PH :9560998709.
3082. UMA MOTORS PVT LTD (–01), KHASRA NO. 245, CITY - KOSI, DIST-MATHURA - 281004	3094. ANAND MOTOR AGENCIES LTD (1301-13-01), 11TH KMS, FAIZABAD ROAD, CHINHAT, LUCKNOW - 227105 PH :7080000462.	3110. KULDEEP MOTORS LUCKNOW PVT LTD (1315-13-01), PLOT NO F-01, SECTOR-B, PRIYADARSHINI, LUCKNOW, UTTAR PRADESH - 226006	MAHOLI
KUBERPUR		3111. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (1313-13-03), KHASRA NO 326, IIM ROAD, MUKATIPUR, LUCKNOW, UTTAR PRADESH - 226013	3122. CONCEPT CARS LIMITED (–01), MUSKAN TRACTORS, NEAR MELA MAIDAN, SHAHJHANPUR ROAD, MAHSUNIYAGANJ, MAHOLI, DIST.-SITAPUR, UTTAR PRADESH. - 261141 PH :7607696666.
3083. KTL PVT LTD (6606–04), KHASRA NO.248,249,251, NAWALPUR, BHAGPUR, POST-ETHMADPUR, NH-2, KUBERPUR, AGRA, UTTAR PRADESH - 282006 PH :8449715099.	3095. KTL AUTOMOBILE PRIVATE LIMITED (1311-13-01), MATIYARI CHAURAH, CHINNHAAT, FAIZABAD ROAD, LUCKNOW - 227105 PH :7408411453.	3112. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (1313–04), 671,BADRUK VIP ROAD, TELIBAGH, LUCKNOW, UTTAR PRADESH - 226010	MAINPURI
KUNDA		3113. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-09), CP-195, SITUATE AT VIRAJ KHAND, GOMTI NAGAR, LUCKNOW, PIN-226010 - 226010	3123. KULDEEP MOTORS PVT LTD (–02), SKP-4A, MAINPURI - 205001 PH :9235258444.
3084. SARASWATI MOTORS LLP (–01), ALLAHABAD-LUCKNOW HIGHWAY, KUNDA, DISTRICT PRATAPGARH. - 230204 PH :8090854005.	3096. ANAND MOTOR AGENCIES LTD (1301-13-02), 47, NEHRU ROAD, SADAR BAZAR, LUCKNOW - 226016	MADHOGANJ	MALIHABAD
KURAWALI		3114. CONCEPT CARS LIMITED (–01), KANPUR ROAD, NEAR RAILWAY CROSSING, MADHOGANJ DIST. HARDOI. - 241302	3124. ONE UP MOTORS INDIA PVT LTD (–01), KHASRA NO. 326/1 AND 327, VILLAGE PARGANA, TEHSIL – MALIHABAD, DISTRICT – LUCKNOW, UTTAR PRADESH. - 227111 PH :9918100781.
3085. KULDEEP MOTORS PVT LTD (–01), GT ROAD, NEAR SWARAJ MEMORIAL PUBLIC SCHOOL, - 205265	3097. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-01), 11/CP- 6, VIKAS NAGAR, RING ROAD, LUCKNOW - 226022	MADHOGARH	MANDI DHANORA
KURSI		3115. S B CARS PVT. LTD. (–01), MADHOGARH ORAI, JALAIUN HIGHWAY - 285126	3125. AKANKSHA AUTOMOBILES PVT LTD (–01), CHANDPUR ROAD, NEAR NEEDARMAL SUGARCIMCRASHER, DHANORA - 244131
3086. BRIGHT 4 WHEEL SALES PVT LTD (–01), GATA NO. 261, VILLAGE BASARA, PARGANA KURSI, TEHSIL FATEHPUR, - 225302	3098. ONE UP MOTORS INDIA PVT LTD (1306-13-01), C-16A, TRANSPORT NAGAR, KANPUR ROAD, LUCKNOW, KANPUR ROAD, LUCKNOW - 226012	MAHARAJGANJ	MATHURA
LAHARPUR		3116. SMARTWHEELS PRIVATE LIMITED (–01), BESIDES SHUBHAM HERO, RAMPUR, MAHARAJGANJ, UTTAR PRADESH. NEAR PHARENDA TAXI STAND, NAHAR ROAD, PIPAR DEORA, MAHARAJGANJ, DIST. MAHARAJGANJ, UTTAR PRADESH. - 273303	3126. UMA MOTORS PVT LTD (–01), 68, MAHOLI, NEAR JAI GURUDEV TEMPLE, NH-2, KM STONE 146, MATHURA - 281004
3087. CONCEPT CARS LIMITED (–01), KHASARA NO: 1639 VILLAGE LACHCHHAN NAGAR TEHSIL LAHARPUR DISTRICT SITAPUR UP - 261135	3099. KTL AUTOMOBILE PRIVATE LIMITED (1311-13-02), INDRA NAGAR, OPP. HALFAIZABAD ROAD, LUCKNOW, UTTAR PRADESH - 226016 PH :7408411478.	3117. KTL AUTOMOBILE PRIVATE LIMITED (–01), MUNNA MARKET HAIDERGARH ROAD TOWN AREA, TEHSIL – MAHARAJGANG, DISTRICT – RAIBAREILLY, UTTAR PRADESH. PH :9918451222.	MATI
LAKHIMPUR		MAHIRPURWA	3127. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (–01), GATA NO 761, NEAR MATI POLICE CHOWKI, VILLAGE- MATI, PARGANA- DEWA, TEHSIL- NAWABGANJ, BARABANKI, UTTAR PRADESH - 225003 PH :6388901514.
3088. SUMITRA DS MOTORS PVT LTD (–02), GATA NO. 66, LRP ROAD, TOWARDS GOLA, LAKHIMPUR KHERI - 242001	3100. KTL AUTOMOBILE PRIVATE LIMITED (1311-13-03), BEHIND N S KOHLI PETROL PUMP, SARDARI KHEDA, KANPUR ROAD, ALAMBAGH, LUCKNOW - 226005	MAHMUDABAD	MAU
3089. SUMITRA DS MOTORS PVT LTD (–01), GATE NO 604, PALIA ROAD, NEAR FCI WEAR HOUSE, VILLAGE - BHARDSARIYA, KHERI, LAKHIMPUR - 262702	3101. ANAND MOTOR AGENCIES LTD (1301-13-04), G-3, LDA MARKET, ALIGANJ, LUCKNOW - 226024	3118. ONE UP MOTORS INDIA PVT LTD (–01), NEAR KURWA RAILWAY CROSSING, LAKHIMPUR BAHRACH ROAD, UTTAR PRADESH - 271855	3128. DEEP MOTORS (–01), DARI CHATTI , KHUKHUNDVA, MAU, UTTAR PRADESH. - 275305 PH :7704000552.
LALGANJ		MAHMUDABAD	MAUDAHA
3090. KTL AUTOMOBILE PRIVATE LIMITED (–01), JEEWAN DEEP COMPOUND, ALLAHABAD ROAD, LALGANJ, DISTT. RAIBARELLI - 229206	3102. ONE UP MOTORS INDIA PVT LTD (1306-13-03), CHHANNILAL CROSSING, MANDIR MARG, LUCKNOW - 226005 PH :9918500451.	3119. CONCEPT CARS LIMITED (–01), OPPOSITE INDIAN PETROL PUMP, MAHMUDABAD SIDAHULI ROAD, MAHMUDABAD, DISTRICT SITAPUR, UTTAR PRADESH. - 261203	MAURANIPUR
LALITPUR		MAHOB	
3091. SURI AUTOMOBILES (6001–03), JAHANSI SAGAR ROAD, LALITPUR - 284001 PH :9451496015.	3103. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-02), PARGANNA MOHANNA, STP ROAD, CHATMEEL, LUCKNOW - 226021 PH :9838075960.		
3092. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT LTD) (–01), LALITPUR BYPASS ROAD, NH26 (LALITPUR-MEHRANU HIGHWAY), IN FRONT OF RMV COLLEGE ROAD, MAIN HIGHWAY, LALITPUR, UTTAR PRADESH - 284003 PH :9560998709.	3104. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-05), PLOT NO. 68, BUTLER GANJ, BALU ADDA, LUCKNOW - 226001		
LONI			
	3105. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (–01), CP1 (COMMERCIAL PLOT 1), VIBHAV KHAND, GOMTI NAGAR, LUCKNOW - 226010		
	3106. KTL AUTOMOBILE PRIVATE LIMITED (–13-07), B-6/1A, AMAUSI INDUSTRIAL AREA, NADARGANJ, LUCKNOW, UTTAR PRADESH. - 226008 PH :7800007376.		
	3107. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-06), KHASRA NO. 418, MISHRAPUR PARGANA MAHONA, KURSI ROAD, LUCKNOW. - 226022 PH :9935275786.		

3130. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT LTD) (–01), BASERA CITY, MAURANIPUR - GARUTHA ROAD, MAURANIPUR, DISTT. JHANSI, UTTAR PRADESH - 284204 PH :8299202863.	3141. CONCEPT CARS LIMITED (–01), NEAR ARYAVART BANK, SITAPUR ROAD, MISHRIKH, SITAPUR, U.P. PINCODE: 261401 - 261401 PH :7607696666.	3152. SHAKUMBARI AUTOMOBILES PVT LTD (–01), RAIPUR ROAD, NEAR AKBARABAD CHOWK , NAGINA, DIST. BIJNOR, UTTAR PRADESH - 246762	3167. MOTORCRAFT SALES PVT LTD (5903–05), PLOT NO 19 ECOTECH 12 GREATER NOIDA WEST ,GB NAGAR , UP - 201306 PH :8826312222.
MAWANA	MODINAGAR	NAJIBABAD	3168. DEV MOTORS PVT LTD (–01), GATA NO -582, VILLAGE SALARPUR, SECTOR-49, VISHWAKARMA ROAD, NOIDA, UTTAR PRADESH - 201304
3131. RADHAGOVIND AUTOMOBILES PVT LTD (–01), MAIN SHANTI NAGAR ROAD, MAWANA KALAN, SUBDIVISION HASTINAPUR, TEHSIL MAWANA, DISTRICT MEERUT - 250401 PH :7456001002.	3142. MOTORCRAFT SALES PVT LTD (5903–02), OPPOSITE SONIA ENCLAVE, ADJACENT SUMAN CINEMA, NH-58, MODINAGAR - 201204	3153. SHAKUMBARI AUTOMOBILES PVT LTD (–01), NEAR BUS STAND, BIJNORE BYPASS ROAD, NAJIBABAD, DIST.-BIJNORE, UTTAR PRADESH. - 246701 PH :8630881459.	3169. COMPETENT AUTOMOBILES CO LTD (–01), KHASRA NO. C-12, SECTOR-85, NOIDA - 201301
MEERGANJ	MOHANLAL GANJ	NANPARA	ORAI
3132. KAVISHA MOTORS PVT LTD (–01), SINDHAULI CHAURAHA, ADJACENT TO OBC BANK, NH-24, MEERGANJ, TEHSIL & DISTT - BAREILLY, UTTAR PRADESH - 243504	3143. BRIGHT 4 WHEEL SALES PVT LTD (–01), KHASARA PLOT NO.581, VILLAGE PURSANI, PARGANA AND TEHSIL MOHANLALGANJ, LUCKNOW DISTT., UTTAR PRADESH - 227305	3154. KTL AUTOMOBILE PRIVATE LIMITED (–01), GATA NO. 3730, NANPARA DEHAT, PARGANA TE, TEHSIL, NANPARA, DIST. BAHRACH - 271865	3170. S B CARS PVT LTD (2806–02), KANPUR ROAD, ORAI - 285001 PH :9307219303.
MEERUT	MOOSANAGAR	NARWAL	3171. KTL PVT LTD (–01), KHASRA NO.155, MAJUA LAHARIYAPURWA, JALAUN, ORAI, PIN-285001, UTTAR PRADESH - 285001
3133. TANYA AUTOMOBILES PVT LTD (4802-48-01), GOVT. INDUSTRIAL TRAINING INSTITUTE, BACHHA PARK, MEERUT - 250001 PH :9837077003.	3144. MY CAR PVT LTD (–01), VILL GAUSGANJ, POST MOOSANAGAR, KANPUR DEHAT, UTTAR PRADESH. - 209208	3155. MY CAR PVT LTD (–01), GATA NO. 821 , KARIBGWANA ROAD , NARWAL , KANPUR, UTTAR PRADESH. - 209401 PH :9792970005.	PADRONA
3134. TANYA AUTOMOBILES PVT LTD (4802-48-03), 90, NAUCHANDI GROUND, GARH ROAD, MEERUT - 250001 PH :9837077004.	MORADABAD	NAUGARH	3172. SMARTWHEELS PRIVATE LIMITED (–01), AARJI NO. 37 & 38, MAJUA - BELWA MISRA, TAPPA PAKDI, PARAGNA - SIDHUWA JAUBNA, TEHSIL - PADRAUNA, DIST.-KUSHINAGAR, UTTAR PRADESH. - 274304 PH :7705803259.
3135. RADHAGOVIND AUTOMOBILES PVT LTD (4807-01), VILLAGE – BARAL, KUNDA GATE NEAR YOGI FARM HOUSE, PARTAPUR, DELHI ROAD, MEERUT. - 250002	3145. AKANKSHA AUTOMOBILES PVT LTD (–01), DELHI ROAD, 5TH KM, MORADABAD (U.P.) - 244001 PH :7247800008.	3156. SMARTWHEELS PRIVATE LIMITED (–01), NEAR PAKARI CHAURAHA, NAUGARH ROAD, SIDDHARTHANAGAR - 272205 PH :7705803129.	PANWARI
3136. TANYA AUTOMOBILES PVT LTD (4802-48-04), MUNICIPAL NO. 9, 9/2, 9/3, 9/4, 11, 11/1, VILLAGE – ROSHANPUR DORLI, OPP. KONARK COLONY, NEAR RAJMANDIR MANDAP, ROORKEE ROAD, TEHSIL - SARDHANA, MEERUT, U.P. - 250001 PH :7900201515.	3146. AKANKSHA AUTOMOBILES PVT LTD (–03), LAKRI FAZALPUR MINI BYPASS, MORADABAD. 5TH KM DELHI ROAD, MORADABAD - 244001 PH :9568200001.	NAUTANWA	3173. SURI AUTOMOBILES (–01), PANWARI, NEAR RAM LEELA GROUND, TEHSIL KULPAHAR, DISTRICT MAHOBA - 210429 PH :9452287690.
3137. T R SAWHNEY MOTORS PVT LTD (4808-48-01), MUNICIPAL NO 101, KHASRA NO 1926/ MINJUMLA & 1927/1, MAHAL LEKHRAJ MUJBITA, MAIN DELHI ROAD, MEERUT, UP - 250002 - 250002 PH :9999163125.	3147. AKANKSHA AUTOMOBILES PVT LTD (–04), KHASRA NO. 569-570, VILLAGE – KAJIPURA, KANT ROAD, MORADABAD, UTTAR PRADESH. - 244001 PH :7895600007.	NAWABGANJ	PAPHUNDA
MEHRONI	MUGHALSARAI	3158. KAVISHA MOTORS PVT LTD (–01), VILLAGE – EIDH JAGIR NEAR GURUDWARA AT NH-74, TEHSIL – NAWABGANJ, DISTRICT – BAREILLY.	3174. TANYA AUTOMOBILES PVT LTD (4802–05), 354/1, MAIN HAPUR ROAD, PHAPHUNDA. - 245206 PH :9917547777.
3138. VELOCITY CARS (–01), INDIRA CHAURAHA, MEHRONI MADWARA ROAD, - 284405	MURADNAGAR	3159. S B CARS PVT LTD (–01), NAWABGANJ (UNNAO), UTTAR PRADESH. - 209859	PATIALYI
MEJA	3149. MOTORCRAFT SALES PVT LTD (–01), KHASRA NO. 317, ASHLAT NAGAR, BESIDE HOTEL SR GRAND, MURADNAGAR, PIN-201206, UTTAR PRADESH - 201206	NIGOHA	3175. KTL PVT LTD (–01), PATIALYI, KASGANJ, UTTAR PRADESH. - 207243
3139. SARASWATI MOTORS LLP (–01), MEJA ROAD, MEJA KHAS, PRAYAGRAJ, - 212302	MURATGANJ	3160. BRIGHT 4 WHEEL SALES PVT LTD (–01), GATA NO 146, VILL NIGOHA, TEHSIL MOHANLALGANJ, LUCKNOW - 226302 PH :7011482503.	PATTI-UP
MIRZAPUR	MUZAFFARNAGAR	NOIDA	3176. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (–01), KHASRA NO.65, WARD NO.7, , KUMHIYA, BYPASS ROAD, PATTI, UTTAR PRADESH - 230135
3140. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (–01), PILI KOTHI, STATION ROAD, MIRZAPUR, UTTAR PRADESH - 231001	3151. RADHAGOVIND AUTOMOBILES PVT LTD (–01), NH -58 ,121 KM STONE, BY-PASS ROAD, NEAR TRANSPORT NAGAR, MUZAFFARNAGAR - 251001	3161. ROHAN MOTORS LTD (–01), C-8/9, SECTOR -I, NOIDA - 201301	PAYAGPUR
MISHRIKH	NAGINA	3162. ROHAN MOTORS LTD (–02), C-11, SECTOR-1, NOIDA, UTTAR PRADESH - 201301	3177. KTL AUTOMOBILE PRIVATE LIMITED (–01), ACHAL COMPLEX, NEAR BANK OF BARODA, PAYAGPUR - 271871
		3163. FAIR DEAL PREMIUM WHEELS PVT LTD (–01), D-39, SEC-10, NOIDA - 201301	PEPPEGANJ
		3164. VIPUL MOTORS PVT LTD (–02), A-111, SECTOR 5, NOIDA - 201301	3178. ARBIT AUTOMOBILES PVT LTD (–01), GHATA NO. 466, 465 & 472, PEPPEGANJ, MOUZA - SAHABGANJ, TEHSIL - CAMPIERGANJ, DISTT: GORAKHPUR - 273165
		3165. VIPUL MOTORS PVT LTD (–01), J-14, SECTOR-63, NOIDA, DISTT. GAUTAM BUDDH NAGAR (U.P.) - 201301	PILIBHIT
		3166. MOTORCRAFT SALES PVT LTD (5903–04), PLOT NO.15, SECTOR-140, NOIDA (U.P.) - 201305	

Dealer Workshop (AS ON 31.01.2026)

3179. CORAL MOTORS (P) LTD (-01), BISALPUR ROAD, PILIBHIT, U.P. - 262001 PH :9837891846.	3191. UMA MOTORS PVT LTD (-01), CHAUDHARY PADAM SINGH MARKET, NEAR INDIA INTER COLLEGE, RAYA - MAANT ROAD, RAYA, DISTT. MATHURA (U.P.) - 281204	SALON	3215. KTL PVT LTD (-01), YADAV MARKET, NEAR SURYA DHABA, NH-19, ETAWAH-KANPURROAD, SIKANDRA, U.P. - 209715 PH :941113666.
3180. KAVISHA MOTORS PVT LTD (-01), OPP. ANKUR INDUSTRIES, PILIBHIT PURANPUR 1.5 KMS FROM ASSAM ROAD CHAURAHA, - 262001	RISIA BAZAR	3204. KTL AUTOMOBILE PRIVATE LIMITED (-01), SALON BYPASS, PARSHEDAPUR ROAD, SALON, DISTRICT RAIBARELLI, UTTAR PRADESH - 229127 PH :9918451222.	SIKANDRABAD
POOTH KHAS	3192. ONE UP MOTORS INDIA PVT LTD (-01), NANAPARA ROAD NEAR HP PETROL PUMP RISIA BAZAAR BAHRAICH PIN:- 271875 - 271875	SAMBHAL	3216. SKUNIVERSE AUTOMOBILE PVT LTD (-01), NEAR R K SCHOOL, VILLAGE - SANWALI SIKANDRABAD, DIST - BULANDSHAHR UTTAR PRADESH, PIN 203202 PH :7310106565.
3181. T R SAWHNEY MOTORS PVT LTD (-01), POOTH KHAS, ROHTA ROAD, MEERUT, UTTAR PRADESH - 250502 PH :9999790229.	ROBERTSGANJ	3205. AKANKSHA AUTOMOBILES PVT LTD (-01), PLOT NO. 303, NEAR TAJ MILK FACTORY, MORADABAD SAMBHAL ROAD, SAMBHAL, UTTAR PRADESH - 244302 PH :7248000028.	SIRATHU
PRATAPGARH	3193. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (-01), UMRAURA, PIMPRI ROAD, ROBERTSGANJ, UTTAR PRADESH. - 231216	SANDILA	3217. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (-01), KHASRA NO 584, SAYARA MEETHEPUR, SIRATHU, DISTRICT & KAUSHAMBI, UTTAR PRADESH. - 212217
3182. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (-01), KHASRA NO 1390, VILL: GONDEY, CHILBILA, PRATAPGARH, DIST. PRATAPGARH - 230001	RUNKATA	3206. CONCEPT CARS LIMITED (-01), PLOT NO.371, SARAY MARUPPUR, LUCKNOW ROAD, SANDILA-241204 DISTT. HARDOI. - 241204	SIRAUJI GHAUSPUR
3183. AMITDEEP MOTORS PVT LTD (-01), CHILBILA PATTI ROAD, NEAR TALA MODE, PIPARI, KHALSA, PRATAPGARH - 230001	3194. PREM MOTORS PVT LTD (-01), ROYAL BANDHAN RESORT, KHASRA NO 108, NH-2, RUNKATA, AGRA, - 282101 PH :7060111245.	SARDHANA	3218. BRIGHT 4 WHEEL SALES PVT LTD (-01), KHASRA 77, GRAM GHUSEDIYA, POST & TEHSIL SIRAUJI GAUSPUR, BARABANKI UTTAR PRADESH- 225207 - 225207 PH :7011482503.
PURANPUR	RUPADIHIA	3207. RADHAGOVIND AUTOMOBILES PVT LTD (-01), DAURALA ROAD, NEAR RADHASWAMI SATSANG, SARDANA - 250342 PH :7456001030.	SISWA BAZAR
3184. CORAL MOTORS (P) LTD (-01), KHASRA NO. 768 & 770, VILLAGE - KHAMRIYA PATTI, PURANPUR - PILIBHIT ROAD, TEHSIL AND PARGANA - PURANPUR, DIST. PILIBHIT. - 262124	3195. ANAND MOTOR AGENCIES LTD (-01), RAMLEELA CHAURAHA, RUPADIHIA, UTTAR PRADESH - 271881	SHAHABAD	3219. ARBIT AUTOMOBILES PVT LTD (-01), WARD NO. 4, SAMRAT NAGAR SISWA BAZAR MAHARAJGANJ - 273162
PURWA	SADABAD	3208. CONCEPT CARS LIMITED (-01), VILLAGE MUJAGADH, SHAHABAD - 241124	SITAPUR
3185. KULDEEP MOTORS KANPUR LLP (-01), GAURAWA PURWA ROAD DURGAPUR, PURWA, DISTRICT - UNNAO, UTTAR PRADESH - 209825	3196. DEV MOTORS PVT LTD (-01), VILLAGE KUTKAI, AGRA ROAD SADABAD, DISTRICT HATHRAS, UTTAR PRADESH - 281306	SHAHJAHANPUR	3220. CONCEPT CARS LIMITED (-02), LUCKNOW-DELHI ROAD, NH-24, VILLAGE JAMMAYAPUR, SITAPUR - 261001
RAIBAREILLY	SAHARANPUR	3209. SUMITRA DS MOTORS PVT LTD (-01), SITAPUR ROAD, NH-24, SHAHJAHANPUR - 242001	SIYANA
3186. KTL AUTOMOBILE PRIVATE LIMITED (-01), PLOT NO. 1550, GULLUPUR, P O KATWARA, HIJARCHANDRAPUR, RAIBAREILLY - 229303 PH :7800001601.	3197. ATELIER AUTOMOBILES (-01), NEAR BARI NAHAR, AMBALA ROAD, SAHARANPUR - 247001 PH :7500250070.	SHAMLI	3221. SKUNIVERSE AUTOMOBILE PVT LTD (-01), BULANDSHAHR ROAD, SIYANA DIST- BULANDSHAHR, UTTAR PRADESH PIN CODE 203412
RAM SANEHI GHAT	3198. TANYA AUTOMOBILES PVT LTD (-01), AAWAS VIKAS YOUNA, DELHI ROAD, SAHARANPUR, UTTAR PRADESH - 247001 PH :9830770004.	SHAMSHABAD	SULTANPUR
3187. BRIGHT 4 WHEEL SALES PVT LTD (-01), GATA NO 76, VILLAGE - BHENDUWA BRAHMANAN, TEHSIL - RAM SANEHI GHAT, BARABANKI, UTTAR PRADESH, PIN 225409 - 225409 PH :9935275786.	SAHASWAN	3211. KTL PVT LTD (-01), BAKALPUR, TEHSIL SHAMSABAD, AGRA SHAMSHABAD ROAD, UTTAR PRADESH. - 283125	3222. KIRTI KUNJ AUTOMOBILES PVT LTD (-01), SHAURYAMAU, MIRANPUR, VARANSI-LUCKNOW HIGHWAY, NH-56 (FAIZABAD BYPASS) SULTANPUR - 228001
RAMNAGAR	3199. CORAL MOTORS (P) LTD (-01), OPP BHARAT PETROL PUMP, BADAUN ROAD, SAHASWAN, DISTT. BADAUN. - 243638 PH :9837891846.	SHIVRAJPUR	SWAR
3188. BRIGHT 4 WHEEL SALES PVT LTD (-01), KHASRA NO. 629, VILLAGE - BUDHAWAL, TEHSIL - RAMNAGAR, DIST. BARABANKI, UTTAR PRADESH. - 225205	SAHIBABAD	3212. KTL PVT LTD (-01), ARAZI NO. 67K, DUBIYANA, GT ROAD, SHIVRAJPUR, KANPUR, UTTAR PRADESH - 209205 PH :9414113666.	3223. AKANKSHA AUTOMOBILES PVT LTD (-01), IN FRONT OF EIDGAH, TEHSIL - SWAR, DISTRICT - RAMPUR, UTTAR PRADESH. - 244924 PH :7900600041.
RAMPUR (UP)	3200. FAIR DEAL WHEELS PVT LTD (-01), 12/67 SITE 4, INDUSTRIAL AREA, SAHIBABAD, GHAZIABAD - 110095	SIDHAULI	TAMBOUR
3189. AKANKSHA AUTOMOBILES PVT LTD (-02), SHAHZAD NAGAR BAREILLY ROAD RAMPUR UTTAR PRADESH - 244901 PH :7895500007.	3201. MOTORCRAFT SALES PVT LTD (5903-01), S-7 SITE-IV, SAHIBABAD INDUSTRIAL AREA, NEAR DABUR CHOWK, SAHIBABAD - 201010	3213. CONCEPT CARS LIMITED (-01), R/O MISHRIKH ROAD NOROTTAM NAGAR, DAKSHDI, OPP. BLOCK, SIDHAULI, SITAPUR. - 261303 PH :7607596666.	3224. CONCEPT CARS LIMITED (-01), NEAR INDIAN GAS GANJAR, SITAPUR ROAD TAMBOUR - 261208 PH :7607696666.
RATH	3202. T R SAWHNEY MOTORS PVT LTD (-03), 28/1/1, SITE-IV, SAHIBABAD INDUSTRIAL AREA, DISTT- GHAZIABAD, UTTAR PRADESH - 201010	SIDHOUR	THAKURDWARA
3190. MY CAR PVT LTD (-01), ETAYAL ORAI ROAD,, RATH, HAMIRPUR, - 210431	SALEMPUR	3214. BRIGHT 4 WHEEL SALES PVT LTD (-01), KHASRA NO.1632, VILLAGE SIDHAUR KHAS, TEHSIL HAIDERGARH, DISTRICT BARABANKI - 225413	
RAYA	3203. SMARTWHEELS PRIVATE LIMITED (-01), GHATA NO. 48, GRAM: DEVPAR, TEHSILL: SALEMPUR, PARGANA: SALEMPUR MAUJHAULI, DISTT: DEORIA - 274509	SIKANDRA	

3225. AKANKSHA AUTOMOBILES PVT LTD (-01), KASHIPUR ROAD, THAKURDWARA, UTTAR PRADESH
2 KM. MORADABAD ROAD, NEAR JEETA KA DHABA, SAHAB GANJ (MUNSHI GANJ), THAKURDWARA, DISTT. MBD. UTTAR PRADESH - 244601
PH :7248000040.

TIKAITGANJ

3226. KTL AUTOMOBILE PRIVATE LIMITED (-01), KANAUJIA CITY, PHASE 2, MADARPUR, MOHAN ROAD, LUCKNOW. - 226013
PH :9918451222.

TILOI

3227. KTL AUTOMOBILE PRIVATE LIMITED (-01), VILLAGE PURE LANGDA, PAKAR GAON, MOHAN GUNJ, TEHSIL - TILOHI, DIST.-RAIBARELI. - 229309
PH :9918451222.

UNCHAHAR

3228. KTL AUTOMOBILE PRIVATE LIMITED (-01), ALLAHABAD LUCKNOW ROAD, NEAR PURANA PETROL PUMP, WARD NO. 5, UNCHAHAR, DISTT: RAIBARELI - 229404
PH :9918451222.

UNNAO

3229. S B CARS PVT LTD (2806-04), HUSSAIN NAGAR BYPASS, KANPUR-LUCKNOW HIGHWAY ROAD, UNNAO, U.P. - 209801
PH :9839806451.

UTRAULA

3230. KTL AUTOMOBILE PRIVATE LIMITED (-01), SH-9, BESIDES SR PLOTTING OFFICE MANKAP, JOGIVEER - 271604

VARANASI

3231. VARANASI MOTORS PVT LTD (8402-84-01), THE MALL, CANTONMENT, VARANASI - 221001

3232. AGR AUTOMOBILES PVT LTD (8403-84-01), B-38/2A, MAHMOORGANJ, GOPAL VIHAR, VARANASI - 221010

3233. VARANASI MOTORS PVT LTD (8402-84-03), AARAJI NO.2 AND 48, G.T. ROAD, TODAPUR, MOHANSARAJ, RAJATALAB, VARANASI (U.P.) - 221311

3234. AGR AUTOMOBILES PVT LTD (8403-84-04), ARAZI NO. 399, 398, 400, 401, NH2 PANDITPUR, DEHAT AMANAT, TEHSIL - RAJATALAB, VARANASI - 221112

VRINDAVAN YOJNA, LUCKNOW

3235. KTL AUTOMOBILE PVT. LTD (1311-13-08), PLOT NO 6&7 SARAWATIPURAM, NEAR SGPGL, RAI BARELI ROAD LUCKNOW - 226029

UTTARAKHAND

ALMORA

3236. NAINITAL MOTORS PVT LTD (-04), PAWAR BHAWAN, JOSHI KHOLA RAJAPURA, PITHRAGARH ROAD, ALMORA - 263601
PH :9997194132.

BAGESHWAR

3237. NAINITAL MOTORS PVT LTD (-05), VILL. BILOMA, SERA, BAGESHWAR, UT, BAGESHWAR - 263642
PH :9557200522.

BARKOT

3238. FUTURE AUTO WHEELS PVT LTD (-01), YAMNOTRI ROAD, BARKOT, DISTRICT UTTARKASHI, UTTARAKHAND - PINCODE - 249141 - 249141

BAZPUR

3239. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), KHASRA NO. 96/2, VILLAGE - BHOONA, ISLAM NAGAR, TEHSIL - BAZPUR, UTTARAKHAND - 262401

CHAMPAAWAT

3240. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), TANAKPUR LOHAGHAT ROAD, CHAMPAAWAT, UTTARAKHAND - 262523

CHANDRAPURI

3241. SHAKUMBARI AUTOMOBILES PVT LTD (-01), KEDARNATH ROAD, BANASBARA, CHANDRAPURI, DISTRICT RUDRAPRAYAG, UTTARAKHAND - 246425

CHAUKHUTIYA

3242. NAINITAL MOTORS PVT LTD (-01), NH-58, BADRINATH ROAD, CHAUKHUTIYA, DIST. -ALMORA, UTTARAKHAND - 263656
PH :9997026565.

CHINYALISOUR

3243. ROHAN MOTORS LTD (-01), VILL- NAGNI DHANPUR (CHINYALISOUR), WARD NO-6, NAGAR PALIKA PARISHAD, DISTT- U - 249196

DEHRADUN

3244. ROHAN MOTORS LTD (5702-57-01), 130/1 CHAKRATA ROAD, YAMUNA COLONY, DEHRADUN - 248001

3245. DD MOTORS (A DIVISION OF D.D. MOTORS MOBILITY) (5709-57-01), 918/221, PATEL NAGAR, INDUSTRIAL AREA, DEHRADUN

3246. ROHAN MOTORS LTD (5702-57-02), 257/2, GMSL ROAD, VILL. NIRANJANPUR, ADJ TO KAMLA PALACE, DEHRADUN - 248001

3247. FUTURE AUTO WHEELS PVT LTD (5706-57-01), KHASRA NO. 8KHA, MOHABEWALA INDUSTRIAL AREA, DEHRADUN. - 248001

3248. FUTURE AUTO WHEELS PVT LTD (5706-57-02), MUNICIPAL NUMBER 45 AND 46, RAJPUR ROAD, DEHRADUN, PIN: 248001 - 248001
PH :9760444430.

3249. SHAKUMBARI AUTOMOBILES PVT LTD (5708-57-01), KHASRA NO.15-ANA, MOHABEWALA, SAHARANPUR ROAD, DEHRADUN, PIN-248001, UTTARAKHAND - 248001

DIDIHAT

3250. NAINITAL MOTORS PVT LTD (-01), SUBHASH CHANDRA BOSE WARD, NEAR D.I.E.T, DIDIHAT, DISTT PITHORAGARH, PINCODE: 262551. - 262551
PH :9634092692.

DOIWALA

3251. FUTURE AUTO WHEELS PVT LTD (-01), 26, MISSARAWALA, DOIWALA, DISTRICT - DEHRADUN, UTTARAKHAND. - 248140
PH :7883473506.

GADARPUR

3252. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), BHASIYA MOD, RUDRAPUR ROAD, GADARPUR, UDHAM SINGH NAGAR, UTTARAKHAND. - 263152

GAIRSAIN

3253. ROHAN MOTORS LTD (-01), KHASRA NO. 1048, RANIKHET ROAD, OPP. GIC GROUND, GAIRSAIN, DISTRICT - CHAMOLI, UTTARA KHAND. - 246428
PH :8126484626.

GANGOLIHAT

3254. NAINITAL MOTORS PVT LTD (-01), VILL- KHETIGARA, PITHORAGARH-GANGOLIHAT ROAD, GANGOLIHAT, DISTT: PITHORAGARH - 262522
PH :9997093043.

GOPESHWAR

3255. ROHAN MOTORS LTD (5702-03), CHOPTA MANDAL ROAD, NEAR FOREST GATE, GOPESHWAR - 131028
PH :9634852898.

HALDWANI

3256. NAINITAL MOTORS PVT LTD (-01), VILLAGE JEETPUR NEGY, 5TH KM RAMPUR ROAD, HALDWANI - 263139
PH :7060201024.

3257. NAINITAL MOTORS PVT LTD (-02), KALA DUNGI, NEAR ABULLAH PETROL PUMP, HALDWANI - 263139
PH :8126359222.

HARIDWAR

3258. SHAKUMBARI AUTOMOBILES PVT LTD (-01), E-5/6, INDUSTRIAL AREA, HARDWAR - 249407

JASPUR

3259. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), GANGUWALA, INFRONT OF ROOPAM CONVENT, KASHIPUR ROAD, JASPUR, UTTARAKHAND. - 244712
PH :8192000724.

KARANPRAYAG

3260. ROHAN MOTORS LTD (-01), BADRINATH ROAD, KARANPRAYAG, DISTRICT - CHAMOLI, UTTARAKHAND. - 246444
PH :8126129148.

KASHIPUR

3261. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), BAZPUR ROAD, KASHIPUR - 244713

KHATIMA

3262. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), VILLAGE: CHARUBETA, NEAR RTO CHECK POST, PILIBHIT ROAD KHATIMA, U.S NAGAR, UTTARAKHAND - 262308

KOTDWAR

3263. SHAKUMBARI AUTOMOBILES PVT LTD (-02), PLOT NO.23 & 30 INDUSTRIAL ESTATE, SITABPUR, KOTDWAR, DIS. PAURI (GARHWAL), UTTARAKHAND - 249001

LAKSAR

3264. SHAKUMBARI AUTOMOBILES PVT LTD (-01), HARIDWAR ROAD, LAKSAR - 247664
PH :9927877715.

NANAKMATA

3265. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), KHATIMA ROAD, OPP GURURAMDAS HOSPITAL, NANAKMATA, U.S. NAGAR, UTTARAKHAND. - 262311
PH :9012172084.

NARENDAR NAGAR

3266. SHAKUMBARI AUTOMOBILES PVT LTD (-01), MAIN MARKET, NARENDAR NAGAR, DISTRICT - TEHRI GARHWAL, UTTARAKHAND - PIN CODE - 249175 - 249175

NOORPUR

3267. SHAKUMBARI AUTOMOBILES PVT LTD (-01), MORADABAD ROAD, NOORPUR, TEHSIL CHANDPUR, DISTRICT BUNOR, UP - PIN CODE - 246734 - 246734

PATI

3268. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (-01), LOHAGHAT- HALDWANI MAIN ROAD, NEAR PITHORAGARH CO-OPERATIVE BANK, PATI-262528 - 262528
PH :9917467820.

PAURI

3269. SHAKUMBARI AUTOMOBILES PVT LTD (-01), PAURI KOTDWAR ROAD NEAR GMD PETROL PUMP PAURI GARHWAL UTTARAKHAND - 246001

PIPLAKOTHI

3270. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
BADRINATH ROAD, MAYAPUR,
BATULA, PIPALKOTI, - 246472

PITHORAGARH

3271. NAINITAL MOTORS PVT LTD (-03), VILLAGE
PANDA, ODSAINI, DHARCHULA ROAD,
PITHORAGARH - 262501
PH - 9634092692.

PRATAPNAGAR

3272. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
NEAR AISHWARYA FILLING STATION,
LAMBGAON, PRATAPNAGAR, DISTRICT TEHRI,
UTTARAKHAND - 249165
PH - 9572787715.

RAIWALA

3273. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
KHAND, GAON-1, RAIWALA, TEHSIL RISHIKESH,
- 249205

RAMNAGAR

3274. NAINITAL MOTORS PVT LTD (-01), BASAI,
KASIPUR ROAD, RAMNAGER - 244137

RANIKHET

3275. NAINITAL MOTORS PVT LTD (-01),
GANYADYOLI, NEAR DRUG FACTORY,
RANIKHET DISTT. ALMORA (UTTARAKHAND) -
263645
PH - 9557243222.

RISHIKESH

3276. FUTURE AUTO WHEELS PVT LTD (-01), 640,
LAXMAN JHULA ROAD, RISHIKESH, DISTT.
DEHRADUN, UTTARAKHAND - 249201

ROORKEE

3277. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
3RD KM STONE, DELHI-ROORKEE HIGHWAY,
NEAR IOC PETROL BUNK, ROORKEE DISTT
HARIDWAR - 247667
PH - 7055104191.

RUDRAPRAYAG

3278. ROHAN MOTORS LTD (-01),
GULABRAI-BADRINATH ROAD, RUDRAPRAYAG
- 246171
PH - 8650876815.

RUDRAPUR

3279. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT
LTD (-01), KICHHA BYE PASS ROAD,
INDUSTRIAL AREA, RUDRAPUR - 263153

SELAKUI

3280. ROHAN MOTORS LTD (-01), KHASRA NO.783,
BAHADURPUR ROAD, NH-72, SELAKUI, DISTT.
DEHRADUN, UTTARAKHAND. - 248011
PH - 8006000439.

SITARGANJ

3281. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT
LTD (-01), PLOT NO.228/5 AND 228/6 KHATIMA
ROAD, SITARGANJ, DISTT - RUDRAPUR,
UTTARAKHAND. - 262405

SRINAGAR

3282. SHAKUMBARI AUTOMOBILES PVT LTD (-01),
SRICOT GANAGANALI, NEAR MEDICAL
COLLEGE, PO- SRICOT, SRINAGAR - 246174

TEHRI

3283. DD MOTORS (A DIVISION OF D.D. MOTORS
MOBILITY) (-01), PLOT NO. 541, SECTOR-8E,
DISTT. - NEW TEHRI - 249001

UTTARKASHI

3284. DD MOTORS (A DIVISION OF D.D. MOTORS
MOBILITY) (-01), HOTEL RAMOLA, BARETHI
CHUNGI, GANGOTRI NATIONAL HIGHWAY,
UTTARKASHI. - 249151

VIKAS NAGAR

3285. ROHAN MOTORS LTD (-01), KHASRA NO.
433/79/2, JEEVANGARH, POST OFFICE-
AMBARI, CHAKRATA-BARKOT ROAD, VIKAS
NAGAR. - 248198
PH - 9897507410.

WEST BENGAL

ALIPURDUAR

3286. PODDAR CAR WORLD PVT LTD (-01), BIRPARA
MORE, COOCH BEHAR ROAD, BESIDE
GOYENKA PETROL PUMP, ALIPURDUAR, WEST
BENGAL. - 736121

AMTALA

3287. BHANDARI AUTOMOBILE PVT LTD (-01),
VILLAGE - UDAYRAMPUR, P.O. - KANYANAGAR,
P.S. - BISHNUPUR, AMTALA, DIST.-24
PARGANAS SOUTH, WEST BENGAL - 743398
PH - 9903850402.

ARAMBAGH

3288. SANEI MOTORS PVT LTD (-01), R.S. DAG NO.
1887, R.S. KHATIAN NO. 104, HAL KHATIAN NO.
1233, MOUZA-PARUL, J.L.NO. 38, R.S.NO. 3111,
P.S. ARAMBAGH, DISTT. HOOGHLY, WEST
BENGAL - 712601
PH :8584050184.

ASANSOL

3289. BEEKAY AUTO PVT LTD (-01), CHANDA MORE,
N.H.-2, ASANSOL - 713301

ASHOKNAGAR

3290. STARBURST MOTORS PVT LTD (-03), JESSORE
ROAD, MANIKNAGAR, KHOSDELPUK MORE,
P.S. - ASHOKNAGAR, NORTH 24 PARGANAS,
WEST BENGAL. - 743222

BADURIA

3291. PREMIER CAR WORLD PVT LTD (-01), VILL-
KIRRTIPUR, P.O- MANDRA, P.S - BADURIA, DIST
- NORTH 24 PARGANAS, WEST BENGAL. PIN -
743438, - 743438
PH - 9831414956.

BAGDAH

3292. SANEI MOTORS PVT LTD (-01), C/O,
DINABANDHU TARAFDAR, S/O LATE
NANDRANATH TARAFDAR, VILLAGE -
HALENCHA SOUTH, P.O. - HALENCHA COLONY,
P.S. - BAGDAH, DISTRICT - NORTH 24
PARGANAS, WEST BENGAL. - 743270

BAHRAMPUR

3293. BEEKAY AUTO PVT LTD (-01), BOKULTALA
(PASCHIM GAMINI), NH-34, BAHARAMPUR,
DISTT. MURSHIDABAD. - 742101
PH :267340.

BAJKUL

3294. BHANDARI AUTOMOBILE PVT LTD (-01),
VILLAGE - KAPTAPARA BARI, P.O. - KAJLAGARH,
P.S. - BHAGWANPUR, BAIKUL, DISTRICT -
PURBA MIDNAPORE. - 721626

BAKSHIRHAT

3295. PODDAR CAR WORLD PVT LTD (-01),
JORAIMORE, BAKSHIRHAT, BALA
KUTHI, BAKSHIRHAT - 736131

BALAGARH

3296. SANEI MOTORS PVT LTD (-01), DAG NO. 671,
MOUZA - BARUIPARA, J L NO. 100, P.O. -
BALAGARH, DIST.-HOOGLY, WEST BENGAL -
712501
PH :8584050184.

BALURGHAT

3297. J K WHEELS PVT LTD (-01), BARO
RAGHUNATHPUR, P.O. - BELTALA PARK, P.S. -
BALURGHAT, DIST.-DAKSHIN DINAJPUR. -
733103
PH :9064301464.

BANDARGACHH

3298. PODDAR CAR WORLD PVT LTD (-01),
OPPOSITE COMMUNITY HEALTH CENTRE,
PHANSIDEWA, BANDARGACHH, WEST
BENGAL 734014 - 734014

BANDEL

3299. SANEI MOTORS PVT LTD (-03), C/O G.S.
LAMINATOR, BANDEL STATION ROAD, HOOGLY
712123 - 712123

BANKURA

3300. BHANDARI AUTOMOBILE PVT LTD (-02), PLOT
NO.-156, KH NO.-173, MITHILA MOUZA,
AT/PO-BANKURA (WB) - 722101
PH :256766.

BARASAT

3301. PREMIER CAR WORLD PVT LTD (-01), R.S DAG
NO. 512 AND PARTY IN DAG NO. 513,
MOUZA-KHILKAPUR, P.O BARASAT, POLICE
STATION: DUTTA PUKUR, TOUZI NO. 146, J.L.
NO. 4, DISTRICT - NORTH 24 PARGANAS,
WEST BENGAL - 700125
PH :8420122407.

BARDHAMAN

3302. BEEKAY AUTO PVT LTD (-03), NH-2, PAMRA
VILLAGE ROAD, CHANDNI MORE, SATTAR MILE,
BURDWAN, WEST BENGAL - 713101

BARJORA

3303. BHANDARI AUTOMOBILE PVT LTD (-01),
VILLAGE + P.O. + P.S. - BARJORA, MOUZA -
BARJORA, J.L. NO. 46, KHATIAN NO. 3380, PLOT
NO. 2795, BARJORA DISTRICT - BANKURA,
WEST BENGAL. - 722202
PH :8016087297.

BAROBISHA

3304. PODDAR CAR WORLD PVT LTD (-01), NH-17,
BALAKUTHI, BAKSHIRHAT, COOCHBEHAR,
WEST BENGAL (NH 31C, ALIPURDUAR ROAD,
BAROBISHA, - 736131

BARRACKPORE

3305. STARBURST MOTORS PVT LTD (-02), NEAR
RAIL GATE, WARD NO. 24, WEST BARASAT
ROAD, P.S. - TITAGARH, BARRACKPORE,
DISTRICT - NORTH 24 PARGANAS, KOLKATA. -
700120
PH :8335061333.

BARSUNDARA

3306. BHANDARI AUTOMOBILE PVT LTD (-05), PLOT
NO. 610, BARSUNDARA, ISHWARDHAHA, JALPAI,
P.S. BHAWANIPUR, EAST MIDNAPORE. WEST
BENGAL - 721654
PH :9933055539.

BASIRHAT

3307. BHANDARI AUTOMOBILE PVT LTD (-03),
RAGHUNATHPUR, TALKI ROAD, BASIRHAT NR.
INDIAN PERTOL PUMP, NORTH-24 PARGANAS. -
743428

BELACOBA

3308. PODDAR CAR WORLD PVT LTD (-01),
PRASANNA NAGAR, BELACOBA, BATTALA,
JALPAIGURI - 735133 - 735133
PH :8945533002.

BELDA

3309. BHANDARI AUTOMOBILE PVT LTD (-01), AT
VILLAGE BARAMATKATPUR, P.O
-LALNAGAR,BELDHA - 721424

BIDHANNAGAR

3310. SEVOKE MOTORS PVT LTD (-01),
MURALIGANG BIDHAN NAGER, OPP OF
MURALIGANG HIGH SCHOOL - 734426

BIRPARA

3311. SEVOKE MOTORS PVT LTD (-01), BHAGAT PARA, NH - 31, MADARIHAT ROAD, BIRPARA, BESIDE TASHI HOTEL, OPP - HIMALYAN HOTEL, P.S - MADARIHAT, DIST - ALIPURDUAR, PIN - 735204 - 735204
PH - 9800069144.

BISHNUPUR

3312. BHANDARI AUTOMOBILE PVT LTD (-01), STATION ROAD, P.O+P.S-BISHNUPUR, DIST: BANKURA, WEST BENGAL - 722122
PH - 9933055539.

BOLPUR

3313. SAINATH AUTOLINKS PVT LTD (4402-03), KABI JOYDEB ROAD, NEAR BOLPUR BY PASS, BOLPUR, DIST: BIRBHUM

BONGAON

3314. STARBURST MOTORS PVT LTD (-01), 376/D, R D B ROAD, NEAR JESSORE ROAD, BAKSHIPALLY, BONGAON, NORTH 24 PARGANAS, WEST BENGAL - 743235
PH - 9748298939.

BUDGE BUDGE

3315. ONE AUTO PVT LTD (-01), MAHESH TALA, NEAR DAKGHAR KALIMANDIR, BUDGE BUDGE TRUNK ROAD, DAKGHAR, WARD NO. 22, POLICE STATION-MAHESHTALA, WEST BENGAL - 700141

C K ROAD

3316. BHANDARI AUTOMOBILE PVT LTD (-01), P.O-SAT BANKURA, PS-GARBETA, CHANDRAKONA ROAD, DIST. PASCHIM MIDNAPORE, WEST BENGAL - 721252

CANNING

3317. ONE AUTO PVT LTD (-01), SUSUMAPALLY, CANNING, DIST - SOUTH 24 PARGANAS, WB - 743329
PH - 8442830001.

CHAKDAH

3318. BHANDARI AUTOMOBILE PVT LTD (-01), VILLAGE - PUMLIA, P.O - CHAKDAH, DISTRICT - NADIA, WEST BENGAL - 741222

CHANCHAL

3319. J K WHEELS PVT LTD (-01), CHANCHAL AZAD PALLY, OPPOSITE OF PWD 2ND GATE, P.O - CHANDRAPARA, P.S - CHANCHAL, DIST - MALDA - 732123 - 732123
PH - 9734963360.

CHANDITALA

3320. BHANDARI AUTOMOBILE PVT LTD (-01), RS DAG NO.2986, LR DAG NO. 3150, UNDER L R KHATIAN NO.3859, MOUZA- KRISHNARAMPUR, J.L. 59, POLICE STATION- CHANDITALA, HOOGHLY, WEST BENGAL - 712702
PH - 6296900498.

CHANDRAKONA

3321. BHANDARI AUTOMOBILE PVT LTD (-02), AT. VILL. GOSAI PO+PS CHANDRAKONA TOWN, MOUZA DHARABILA, J.L.NO. 095, KHATIAN NO. 315, PLOT NO. 203 & 189, NEAR MUNIPAL GATE TOWARDS C.K. ROAD. - 721201
PH - 8945526833.

CHHATNA

3322. BHANDARI AUTOMOBILES PVT LTD (-01), VILLAGE: DUBRAJPUR, P.O. GORH, DUBRAJPUR, P.S. CHHATNA DIST: BANKURA - 722132

CONTAI

3323. BHANDARI AUTOMOBILE PVT LTD (-03), SERPUR BAMUNBAR, P.O. MARISHDA, NEAR MECHEDA BYPASS, CONTAI, WEST BENGAL - 721401

COOCHBEHAR

3324. PODDAR CAR WORLD PVT LTD (-01), CHAKCHAKA, NEELKUTHI BAZAR, NEAR ADA FACTORY, NH-31, COOCH BEHAR, WEST BENGAL. - 736101

DARJEELING

3325. BEEKAY AUTO PVT LTD (4301-05), MERRY VILLA, DARJEELING, DISTRICT-DARJEELING. - 734101

DHUPGURI

3326. BEEKAY AUTO PVT LTD (-01), MOUZA - DHUPGURI, PLOT NO. 1814, WARD NO. 16, DHUPGURI, DISTRICT - JALPAIGURI, WEST BENGAL. - 735210

DIAMOND HARBOUR

3327. ONE AUTO PVT LTD (-01), VILLAGE - CHEWRA, OPPOSITE - K.E. CARMEL SCHOOL, P.O. - SARISHA HAT, P.S. - DIAMOND HARBOUR, DISTRICT - 24 PARGANAS (S) , WEST BENGAL. - 743368
PH - 8584862243.

DINHATA

3328. BEEKAY AUTO PVT LTD (-01), ADDRESS: VILLAGE - KARISHAL, MAIN ROAD, P.O- DINHATA, DIST - COOCHBEHAR, - 736135
PH - 9932049347.

DUDHIA

3329. PODDAR CAR WORLD PVT LTD (-01), MIRIK ROAD, DUDHIA, WEST BENGAL - 722133

DURGAPUR

3330. SAINATH AUTOLINKS PVT LTD (4402-44-01), PLOT NO-743, MALUA FRIDPUR, BURDWAN, DURGAPUR - 713213

DURLAVPUR

3331. PODDAR CAR WORLD PVT LTD (-01), VILL+PO - DURLAVPUR, PS- GANGAJALGHATI, DIST- BANKURA, PIN- 722133 - 722133

FALAKATA

3332. PODDAR CAR WORLD PVT LTD (-01), DAKSHIN PARANGAPUR, KHATIAN NO. 167/1 JL NO. 60, DAG NO. 652/1159, P.S. - FALAKATA, DISTT ALIPURDUAR - 735211
PH - 8945533002.

GAZOLE

3333. J K WHEELS PVT LTD (-01), MOUZA- BAJEGAIRAL, RANIGANJ, PURBAPARA, KAMALDANGA, P.S- GAZOLE, DIST-MALDA, PIN - 732138 - 732138
PH - 9734963360.

GHATAKPUKUR

3334. DEWARS GARAGE LTD (-01), BASANTI HIGHWAY, MOUZA NARAYANPUR , POLICE STATION, BHANGAR, WEST BENGAL - 743502

GHATAL

3335. BHANDARI AUTOMOBILE PVT LTD (-01), VILL. NIMTOLA, P.O. & P.S. DASPUR, GHATAL, WEST MIDNAPORE, WEST BENGAL - 721211

GOPIBALLAVPUR

3336. BHANDARI AUTOMOBILE PVT LTD (-01), JL NO. 1103, KHATIAN NO. 1103, PLOT NO. 438, VILLAGE + P.O. + P.S. - GOPIBALLAVPUR , MOUZA - GOPIBALLAVPUR, WEST MIDNAPUR, WEST BENGAL - 721506

HALDIA

3337. BHANDARI AUTOMOBILE PVT LTD (-04), BALGHASIPUR, BHABANIPUR, PURBA MEDIANPUR, HALDIA - 721657

HOWRAH

3338. BHANDARI AUTOMOBILE PVT LTD (-01), BANKRA THANA, DOMJUR, HOWRAH - 711403
3339. PREMIER CAR WORLD PVT LTD (-02), MOUZA - PRASASTHA, P.S. - DOMJUR, UNDER MOHIARY 2 NO. GRAM PANCHAYAT, ANKURHATI, HOWRAH, WEST BENGAL - 711302

ILLAMBAZAR

3340. BEEKAY AUTO PVT LTD (-01), PLOT NO-615,616,618, JL NO-87, MOUZA-PAYER - 731214

JAGULI

3341. OSL MOTOCORP PVT LTD (-01), DAG NO-947, KHATIANNO: 54/1, P.S HARINGHANTA - 741221

JALPAIGURI

3342. PODDAR CAR WORLD PVT LTD (-01), COLLEGE PARA, SIRISHITALA, NEAR ASSAM MORE, JALPAIGURI, WEST BENGAL. - 735101
PH - 8945533002.

JAYGAON

3343. SEVOKE MOTORS PVT LTD (-01), HOUSE NO.43, WARD NO.11/22, N.S ROAD DARAGAON, P.S - JAYGAON, DISTT. ALIPURDUAR, WEST BENGAL - 736182
PH - 9433825851.

JHARGRAM

3344. BHANDARI AUTOMOBILE PVT LTD (-01), DAG NO.383, KHATAN NO. JL396, WARD NO.11, RAJBATI CAMPUS, JHARGRAM, WEST BENGAL - 721507

KADAMBAGACHI

3345. STARBURST MOTORS PVT LTD (-04), MOUZA - PURBA ICHAPUR, J.L NO. 111, RESU NO. 131, DAG NO. 385, KHATIAN NO. L R 754, KADAMBAGACHI, P.S. - BARASAT, DIST.-NORTH 24 PARGANAS, WEST BENGAL. - 700125
PH - 8336933410.

KALIMPONG

3346. BEEKAY AUTO PVT LTD (-01), 10TH MILE, GUMBA HATTA, PO&PS -KALIMPONG, DIST - KALIMPONG, WB. - 734301
PH - 9932049347.

KALNA

3347. BEEKAY AUTO PVT LTD (-01), KALNA ROAD, NEAR KALNA SUB DIVISIONAL HOSPITAL, KALNA, PO+PS: KALNA, DISTT. BURDWAN, (W.B.) - 713409
PH - 9932251483.

KALYANI

3348. STARBURST MOTORS PVT LTD (-01), KALYANI INDUSTRIAL GROWTH CENTRE, PHASE-III, A-5 (OPP. J I C UDYOG, NEAR: J I S COLLEGE), KALYANI. - 741234

KHARAGPUR

3349. BHANDARI AUTOMOBILE PVT LTD (-01), BHANDARI BUILDING, JHAPATAPUR, KHARAGPUR, WEST BENGAL - 721301

3350. PODDAR CAR WORLD PVT LTD (-01), RS DAG NO - 147, RS KHATIAN NO 7, MOUZA - MOBARAKCHAK, JL NO-210, PS - KHARAGPUR - 721301
PH - 9631348626.

KHATRA

3351. BHANDARI AUTOMOBILE PVT LTD (-01), VILLAGE - SENAPATI, P.O & P.S - KHATRA, MOUZA-SENAPATI, JL NO.189, KHATIAN NO.659, PLOT NO.33/34, DISTT. BANKURA, WEST BENGAL. - 722140

KHORIBARI

Dealer Workshop (AS ON 31.01.2026)

3352. PODDAR CAR WORLD PVT LTD (-01), DOHAGURI, KHORIBARI, WEST BENGAL 734427 - 735222	3367. BHANDARI AUTOMOBILE PVT LTD (-02), PLOT NO.-1874, MOUZA-GOBINDSARAK, J.K. NO. 94, PS-KOTWAL, OLD WARD NO.20, LAL MOHAN GHOSH ROAD, KRISHNANAGAR - 742011	3378. BHANDARI AUTOMOBILE PVT LTD (-01), L R DAG NO. 7271, UNDER L R KHATIAN NO. 6734, MOUZA - DEBAGRAM, J.L NO. 60, POLICE STATION - KALIGANJ, BLOCK - KALIGANJ, NAKASHIPARA, DIST.-NADIA, WEST BENGAL - 741138 PH - 9163314418.	3388. J K WHEELS PVT LTD (-01), J.L NO. 150, KHATIAN NO. 168/3 & 168/4, PLOT NO. 4158., P.S. - RAIGANJ, MUNICIPALITY - RAIGANJ, WARD NO. 11, HOLDING NO. 577/N, MOUZA - RAIGANJ, DISTRICT - UTTAR DINAJPUR, - 733134 PH - 9735008842.
KOLKATA	LALGARH	NAXALBARI	RAMPURHAT
3353. MACHINO TECHNO SALES LTD (-02), 48 A, TARATALA ROAD, KOLKATA - 700066	3368. BHANDARI AUTOMOBILE PVT LTD (-01), PO & PS- LALGARH, DISTRICT- JHARGRAM - 721516	3379. BEEKAY AUTO PVT LTD (-01), MOUZA - GENI, KHATIAN NO.275, PARGANA-HATIGHISHA, P.S. NAXALBARI, DISTT. DARJEELING, WEST BENGAL - 734429	3389. BEEKAY AUTO PVT LTD (-01), PLOT NO 131, J.L NO 104, MOUZA -BATAIL,RAMPURHAT - 731221
3354. DEWARS GARAGE LTD (-01), (PROP. DELTA INTERNATIONAL LTD.), 14 BRITISH INDIAN STREET, CALCUTTA - 700069	MADHYAMGRAM	OODLABARI	RANAGHAT
3355. MACHINO TECHNO SALES LTD (-01), 21/1 DARGA ROAD, (PARK CIRCUS), CALCUTTA - 700017	3369. STARBURST MOTORS PVT LTD (-01), 9/1, HEMANTA BOSE SARANI, BASUNAGAR, NEAR DEAF & DUMB SCHOOL, UDAYRAJPUR, MADHYAMGRAM - 700129	3380. PODDAR CAR WORLD PVT LTD (-01), PLOT NO : 1144, TOUZI NO -84, OODLABARI , 735222 - 735222	3390. STARBURST MOTORS PVT LTD (-01), THANA: GANGNAPUR, ADSR OFFICE, 151 NO.MOUZA PATULI, PLOT NO.309, RANAGHAT, DISTT: NADIA - 741256
3356. PREMIER CAR WORLD PVT LTD (-01), AGARPARA JUTE MILL, 28-B.T.ROAD, P.O.: -KAMARHATI, DISTT.-KOLKATA - 700058	MALBAZAR	PANCHLA	RUPNARAYANPUR
3357. BHANDARI AUTOMOBILE PVT LTD (-01), BUDGE BUDGE TRUNK ROAD, NEW GOPALPUR, SARKARPOOL, MAHESHTALA, DISTT. SOUTH 24 PARGANAS, WEST BENGAL - 700143	3370. BEEKAY AUTO PVT LTD (-01), CALTEX MORE, VILLAGE + P.S. - MALBAZAR AND DISTRICT - JALPAIGURI . - 735221	3381. BHANDARI AUTOMOBILE PVT LTD (-01), L R DAG NO 3274, UNDER L R KHATIAN NO 3044, MOUZA-MALLICKBAGAN, J.L NO-7, POLICE STATION - PANCHLA, DIST- HOWRAH - 711310 PH -9073664926.	3391. BEEKAY AUTO PVT LTD (-01), P.S. - SALANOUR, UNDER MOUZA - JEMARI, J.L. NO. 32, PLOT NO. 343-344, KHATIAN NO. 933, RUPNARAYANPUR, PASCHIM BARDHAMAN DISTRICT, WEST BENGAL. - 713335
3358. SANEI MOTORS PVT LTD (-01), 16/2 CANAL EAST ROAD, NEAR MANIKTALA POLICE STATION,KOLKATA - 700067	MALDA	PANDUA	SABANG
3359. ONE AUTO PVT LTD (-02), 62 EAST TOPSIA ROAD, P.S. TILJALA, ARUPOTA, KOLKATA , WEST BENGAL - 700105	3371. J K WHEELS PVT LTD (-01), GABGACHHI, N.H. 34, MALDA, - 732103	3382. BHANDARI AUTOMOBILE PVT LTD (-01), GT ROAD, PANDUA, NEAR KAKOLI CINEMA HALL, OPP. POWER HOUSE, HOOGLY, WEST BENGAL. - 712149 PH :9073912566.	3392. BHANDARI AUTOMOBILE PVT LTD (-01), VILLAGE - PAKAN DAKSHINBARH, P.O. - DHANSWARPUR & P.S. - PINGLA, DIST. -PASCHIM MIDNAPORE, SABANG - 721166 PH :9933055539.
3360. ONE AUTO PVT LTD (-01), J.L NO.3, MOUZA-JAGADIPOTA, P.S:SONARPUR, KHEYADAH NO.2, GRAM PANCHAYAT, DISTT. SOUTH 24 PARGANAS, - 700099	MATHABHANGA	PANSKURA	SAINTHIYA
3361. SANEI MOTORS PVT LTD (-02), 235, HATIYARA ROAD, SITALATALA, BAGUIATI, KOLKATA, WEST BENGAL - 700059	3373. BEEKAY AUTO PVT LTD (-01), SITAKULCHI ROAD, WARD NO.9,MATHABHANGA, DISTRICT - COOCHBEHAR. - 736146	3383. BHANDARI AUTOMOBILE PVT LTD (-01), MOUZA - PASCHIM NEKRA, J.L NO.98, LR NO.1154, LR NO.1156, PANSKURA, WEST BENGAL. - 721139 PH :9933055539.	3393. SAINATH AUTOLINKS PVT LTD (-01), SAINTHIA SURI ROAD., OPPOSITE YAMAHA SHOWROOM, - 731234
3362. OSL MOTOCORP PVT LTD (-01), 49 DEBENDRA CHANDRA DEY ROAD, LANE BESIDE SILVER SPRING CLUB, E. M. BYE-PASS, KOLKATA - 700015	MIDNAPORE	PATASHPUR	SEORI
3363. STARBURST MOTORS PVT LTD (-05), R.S & L.R. DAG NO. 3434, MOUZA-GOPALPUR, J.L NO.-02, RS NO.-140, LR KHATIAN NO.-5638, NEW TOWN, RAJARHAT - 700136 PH -9681080301.	3374. BHANDARI AUTOMOBILE PVT LTD (-01), J.L NO.190, KHATIAN NO. 889 VILL + P.O. TALKUI, N.H.60, - 721101	3384. PODDAR CAR WORLD PVT LTD (-01), VILL - MOTIRAMPUR, PO MOTIRAMPUR, PS - PATASHPUR, DIST PURBA MIDNAPORE - 721439	3394. BEEKAY AUTO PVT LTD (-01), RAMBADANPUR, NEAR SP MORE, SIURI, BIRBHUM - WEST BENGAL - 731101
3364. BHANDARI AUTOMOBILE PVT LTD (-C1), PLOT NO. IID/15, ACTION AREA 2D, NEW TOWN, P.S. RAJARHAT, KOLKATA, WEST BENGAL PIN-700156 - 700156	MOHANPUR	PEDONG	SHYAMPUR
3365. JYOTE MOTORS PVT LTD (-01), NAZIRABAD MAIN ROAD, NAZIRABAD, ANANDAPUR, NEAR BISHNU BIJOLI GARDEN, KOLKATA, PIN-700150, WEST BENGAL - 700150	3375. BHANDARI AUTOMOBILE PVT LTD (-01), VILLAGE-NAYAGAONI, P.O.-PAROI, P.S. MOHANPUR, MOUZA - NAYAGAONI, J.L NO 395, KHATIAN NO.175/1, PLOT NO.895, DISTT. -PASCHIM MIDNAPUR,W.BENGAL. - 721436 PH -9933055539.	3385. SEVOKE MOTORS PVT LTD (-01), TOPKHANDA, DOKYONG 1, PEDONG, DIST: KALIMPONG, PIN:734311 - 734311	3395. SANEI MOTORS PVT LTD (-01), VILLAGE + P.O. - GOBINDAPUR, P.S. - SHYAMPUR, DISTRICT - HOWRAH, WEST BENGAL. - 711314 PH :8584050184.
KRISHNANAGAR	NAGRAKATA	PURULIA	SILIGURI
	3376. PODDAR CAR WORLD PVT LTD (-01), OPPOSITE HERO SHOWROOM, NEAR B.D.O OFFICE, SUKHANIBASTI, NAGRAKATA,WEST BENGAL - 735225	3386. SAINATH AUTOLINKS PVT LTD (4402-02), PO. LAKDA, VILLAGE-DADKA , ON RANCHI ROAD, PURULIA - 723149	3396. BEEKAY AUTO PVT LTD (4301-43-01), NH-31, P.O. MATIGARA,SILIGURI. - 734428
	NAIHATI	RAGHUNATHPUR	3397. BEEKAY AUTO PVT LTD (4301-43-04), AMAI DIGHI, PHOOL BARI,STATE HIGHWAY -12, SILIGURI - 734001
	3377. PREMIER CAR WORLD PVT LTD (-01), P.O. BHATPARA, GRAM-MUKTARPUR, P.S. - JAGATDAL, DIST-24 PGS (N), NAIHATI (WB) - 743123 PH :801700824.	3387. BEEKAY AUTO PVT LTD (-01), MOUZA - BUNDLA, J.L. NO. 197, PLOT NO. 2656, KHATIAN NO. LR 207, P.O. - RAGHUNATHPUR, P.S. - RAGHUNATHPUR, DISTRICT - PURULIA. - 723133	3398. SEVOKE MOTORS PVT LTD (4302-43-01), 233, SEVOKE ROAD,2ND MILE, SILIGURI - 734001 PH :9706010366.
	NAKASHIPARA	RAIGANJ	3399. PODDAR CAR WORLD PVT LTD (-02), VILL. EAST DHANTALLA, FULBARI II G.P, P.O SATELLITE TOWNSHIP, DIST- JALPAIGURI - 734015 PH :8945533002.

3400. PODDAR CAR WORLD PVT LTD (-03),
OPPOSITE TO GANAPATI PETROL PUMP,
KHAPRAIL MORE, SILIGURI - 734005

SINGUR

3401. ONE AUTO PVT LTD (-03), OPPOSITE TO TAPSI
MAILIK KRISHAK BAZZAR - 712409

SITAI

3402. PODDAR CAR WORLD PVT LTD (-01), NETAJI
MORE, NEAR NETAJI BAJAR, P.S SITAI,
DISTRICT : COOCH BEHAR, PIN 736167 -
736167

SONADA

3403. SEVOKE MOTORS PVT LTD (-01), RATO MATEY
DARA, NEAR PETROL PUMP,P.O- SONADA,
WEST BENGAL PIN - 734209 - 734209
PH :9800069144.

SONAMUKHI

3404. BHANDARI AUTOMOBILE PVT LTD (-01), J L NO.
77, KHATIAN NO. 360, PLOT NO. 114/287,
SONAMUKHI BISHNUPUR ROAD, VILLAGE -
CHURAMANIPUR, P.O. & P.S. - SONAMUKHI,
WEST BENGAL. - 722207
PH :9933055539.

SREERAMPUR

3405. BHANDARI AUTOMOBILE PVT LTD (-01),
BANGIHATI (MADPUR) DELHI ROAD,
SREERAMPUR, DISTT: HOOGHLY, WB - 712203

SUNDARA

3406. PODDAR CAR WORLD PVT LTD (-01), NH 14,
SITARAMPUR, OPP. INDIAN OIL PETROL PUMP,
SUNDARA , PASCHIM MEDINIPUR - 488333

TAMLUK

3407. BHANDARI AUTOMOBILE PVT LTD (-01),
MOUZA PADUMBASAN, WARD NO 10, JL
NO:144, DISTT: EAST MIDNAPUR, WEST
BENGAL - 721636

TARAKESHWAR

3408. SANEI MOTORS PVT LTD (-01), MOUZA
BAIDYAPUR, UNDER BALIGORI(1), GRAM
PANCHAYET, TARAKESHWAR, DISTT. HOOGLY,
WEST BENGAL.
PH :8584050184.

TOOFANGANJ

3409. PODDAR CAR WORLD PVT LTD (-01), POWER
HOUSE PARA, PO ANDARANFULBARI (WEST),
TUFANGANJ, COOCHBEHAR, PIN-736159, WEST
BENGAL - 736159
PH :8945533002.

UDAYNARAYANPUR

3410. BHANDARI AUTOMOBILE PVT LTD (-01),
VILLAGE-JANGALPARA BELGRAM, PS-
UDAYNARAYANPUR, DIST- HOWRAH, WEST
BENGAL - 711226
PH :9073664902.

ULUBERIA

3411. BHANDARI AUTOMOBILE PVT LTD (2401-01),
HOLDING 1242A, BANITABLA, P.O+P.S:
ULUBERIA, NH-6, DISTT: HOWRAH, WEST
BENGAL - 711316

ANDHRA PRADESH

ANANTAPUR

1. JAYALAKSHMI AUTOMOTIVES PVT LTD (1BNB-1B-01), SY. NO. 239 - 2CIA, KAKALAPALLI, ANANTAPUR

CHITTOOR

2. BHARGAVI AUTOMOBILES PVT. LTD. (1CNA-1C-01), D.NO. 23-1/2, DR. JYOTHI REDDY NAGAR, CK PALLI, CHITTOOR, PIN-517001

CUDDAPAH

3. ADARSHA AUTO WORLD PVT LTD (1DNA-1D-01), #30/205-1-1-2, REVENUE WARD 31, DUVUNI KA, #30/205-1-1-2, REVENUE WARD 31, DUVUNI KA

GUDIVADA

4. VARUN MOTORS PVT LTD (CLNA-CL-01), SY NO-75/2 & 75/3, BANTUMILI ROAD, GUDIIVADA, AP

GUNTUR

5. JAYALAKSHMI AUTOMOTIVES PVT LTD (GSNA-GS-01), D-NO:199/2, OPP.AUTONAGAR, NH 16, VJA - GNT SERVICE ROAD, GUNTUR, ANDHRA PRADESH - 522001 PH :9959844644.

6. JAYALAKSHMI AUTOMOTIVES PVT LTD (GSNA-GS-02), SURVEY NO 110 , AMRAVATHI ROAD , INNER RING ROAD , GUNTUR

KAKINADA

7. VARUN MOTORS PVT LTD (W7NA-W7-01), BHASKARA GARDENS JAGANDHAPURAM ,KAKINADA - 533016

KURNOOL

8. MSA MOTORS (C2NA-C2-01), PLOT NO. 1, 1A, 2, 2A, WARD NO. 96, NH 44, AUTO NAGAR, KURNOOL, ANDHRA PRADESH 518003 - 518003

NANDYAL

9. MSA MOTORS (CKBN-CKB-01), SURVEY NO. 144, PYKI, UDUMALAPURAM(V), NEAR VENKATESWARAPURAM, NANDYAL

NARASARAOPET

10. JAYALAKSHMI AUTOMOTIVES PVT LTD (JTNA-JT-01), NH 167A, SRINIVASA NAGAR, NARASARAOPETA, ANDHRA PRADESH 522601

NARSIPATNAM

11. JAYABHERI AUTOMOTIVES (WTNA-WT-01), SY NO 133/1, PEDDA BODDEPALLE, NARSIPATNAM, ANDHRA PRADESH - 531116

NELLORE

12. BHARGAVI AUTOMOBILES PVT LTD (A8NA-A8-01), SURVEY NO 245B, CHEMUDUJUNTA VILLAGE, NH-16, ADJACENT TO SRIDS KALYANA MANDAPAM, NELLORE, ANDHRA PRADESH - 524002 PH :886682222.

ONGOLE

13. JAYALAKSHMI AUTOMOTIVES PVT LTD (8YNA-8Y-01), SURVEY NO:194/2, BESIDE NH 5, MUKTHINUTHALAPADU, ONGOLE, ANDHRA PRADESH - 523225 - 523225 PH :9492133433.

PENDURTHI

14. VARUN MOTORS PVT LTD (BAPN-BAP-01), Y.NO:204/2 D.NO:6-36/1, OPP AYYAPA SWAMY TEMPLE, PENDURTHI, VISHAKHAPATNAM, AP

RAJAHMUNDY

15. SB MOTOR CORP (C5NA-C5-01), D.NO:84-1-12, PADMAVATI NAGAR, BESIDE ONGC BASE COMPLEX, NH-45, RAJAHMUNDY, ANDRAPRADESH-533106 - 533016 PH :9248727888.

SRIRAKULAM

16. VARUN MOTORS PVT LTD (W6NA-W6-01), PEDDAPADU ROAD, ARASAVALLI POST, SRIRAKULAM DISTRICT, ANDHRA PRADESH - 532401 PH :9885317344.
17. VARUN MOTORS PVT LTD (W6NA-W6-S1) - 0

TIRUPATI

18. BHARGAVI AUTOMOBILES PVT LTD (N8NA-N8-01), D NO-9-91/1, BANGLORE BY PASS ROAD, DHAMINEDU VILLAGE, TIRUPATI RURAL, ANDHRA PRADESH - 517503
19. VISHNU CARS PVT LTD (NSNB-N8-01), 150, TIRUPATI BYPASS ROAD, NEAR SOUTHERN SPICE HOTEL, TIRUPATI

VIJAYAWADA

20. VARUN MOTORS PVT LTD (26NA-26-01), OPP TO PRIYA PICKLES, BANDAR ROAD, PORANKI, VIJAYAWADA, ANDRAPRADESH-521137. - 521137 PH :6309955655.
21. VARUN MOTORS PVT LTD (26NA-26-02), DOOR NO:1-153, REVENUE WARD NO.1 BLOCK NO3, VIDHYADARAPURAM, VIJAYAWADA - 0 SANTOSH AUTOMOTORS PRIVATE LIMITED (26NC-26-01), TCR COLONY, KCP COLONY, PORANKI, VIJAYAWADA, ANDHRA PRADESH 521137 - 521137

VISHAKHAPATNAM

23. VARUN MOTORS PVT LTD (46NA-46-S1) - 0

24. VARUN MOTORS PVT LTD (46NA-46-01), DOOR NO 38-22-27, SURVEY NO 39, KAPARADA VILLAGE, INDUSTRIAL ESTATE, VISHAKHAPATNAM - 533016
25. VARUN MOTORS PVT LTD (46NA-46-02), NO:88/B, D BLOCK, VARUN AUTO PARK, SRINAGAR, OLD GAJUWAKA, VISHAKHAPATNAM-530026. A.P - 530026

VIZAG

26. JAYABHERI AUTOMOTIVES PVT LTD (46NB-46-01), D.NO:8-238; SY NO:7/1A; GOPALAPATNAM; VISHAKHAPATNAM (AP) - 530027

VIZIANAGARAM

27. JAYABHERI AUTOMOTIVES PVT LTD (N8NA-N8-01), OPPOSITE RELIANCE MART, BALAJI JUNCTION, 100 FEET RING ROAD , VIZIANAGARAM - 535002

VSKP (ADAVIVARAM)

28. VARUN MOTORS PVT LTD (46NA-46-3), PLOT NO 47, BANGARUTHALLI NAGAR, DARA PALEM, ADAVIVARAM VISHAKHAPATNAM. - 530028 - 530028

ASSAM

AIZWAL

29. GIG MOTORS (91NA-91-01), ITI WORLD BANK ROAD, AIZAWL, MIZORAM - 796005

BAIHATA CHAIRILI

30. PALLAVI MOTORS PVT LTD (BNLN-BNL-01), DAG NO. 187, PATTNA NO.138, MAUZA-BAR-BANGSHAR, VILLAGE KSHUDRA PALAHA, BAIHATA CHAIRIALI, ASSAM - 781381

BARPETA TOWN

31. PODDAR CAR WORLD PVT LTD (SQTN-SQT-01), DEWRIKUCHI, HOWLY BARPETA ROAD,

BIJOYNAGAR

32. PODDAR CAR WORLD PVT LTD (09NA-IA-03), DAG NO. 1093/1598 PATTNA NO 709, BARTEZPUR PO KUKURMARA PS PALASHBARI , DIST KAMRUP

BISWANATH CHARALI

33. R D MOTORS (RAMLAL DURGADUTT MOTORS PVT LTD) (BXIN-BXI-01), BRAHMAPUTRA CHAPORI, NEAR POWER GRID OFFICE,

- BAGHMARI, BISWANATH CHARALI, ASSAM 784176

BONGAIGAON

34. BHARATI MOTORS PVT LTD (7NNA-7N-01), CHAPAGURI RD, NEAR POST OFFICE, NORTH BONGAIGAON, AMGURI, BONGAIGAON, ASSAM 783380 - 783380 PH :7002350887.

CHANGSARI

35. PODDAR CAR WORLD PVT LTD (09NA-TED-04), DAG NO 640 K P PATTNA NO. 464 VILLAGE - CHANGSARI MOUZA - SILA SENDURI KAMRUP RURAL

DIBRUGARH

36. VISHAL CAR WORLD PVT LTD (C1NA-C1-01), MOHPUALIMORA GOHAN GAON, A.T ROAD, DIBRUGARH, ASSAM - 786008 PH :8009000008.

GOLAGHAT

37. R D MOTORS (RAMLAL DURGADUTT MOTORS PVT LTD) (J3NA-J3-01), DAG NO-308, PATTNA NO-53, VILLAGE RANGAJAN BAGAN GAON, MARANGI, MOUZA, MARANGI REVENUE CIRCLE, GOLAGHAT - 785702

GUWAHATI

38. BIMAL AUTO AGENCY (09NB-09-01), DREAMLAND APPARTMENT, NAHRANI PATH, DISPUR LAST GATE, GUWAHATI - 781006 (ASSAM) PH :9864074525.
39. PALLAVI MOTORS PVT LTD (09NC-09-01), NARENGI, KALITAKUCHI, SATGAON, GUWAHATI, ASSAM - 781026
40. PODDAR CAR WORLD PVT LTD (09NA-09-01), AT ROAD KAMAKHYA GATE, GUWHATI ,KAMRUP-781009 - 781009 PH :8085957586.

HOJAI

41. RD MOTORS (ARAN-ARA-01), DAG NO-665, PATTNA NO-467, VILLAGE DIMAPUR, DISTRICT HOJAI ASSAM- 782435

JORHAT

42. R D MOTORS (RAMLAL DURGADUTT MOTORS PVT LTD) (G9NB-G9-01), M/S R D MOTORS PVT LTD , DHAPAKTA, NEAR TINALI, JORHAT -785006 - 785006 PH :7002099547.

MANGALDOI

43. PODDAR CAR WORLD PVT LTD (09NA-YW-02), WARD NO 2 NH - 15, MANGALDOI TOWN, DARRANG - ASSAM

NAGAON

44. R D MOTORS (RAMLAL DURGADUTT MOTORS PVT LTD) (7JNA-7J-S1) - 0

NALBARI

45. BIMAL AUTO AGENCY (92NA-92-01), BIMAL AUTO AGENCY NALBARI HAJO ROAD AMAYAPUR, ASSAM - 781334 - 781334

NORTH LAKHIMPUR

46. SAIKIA (7PNA-7P-01), NH - 15, CHARAIMORIA, NORTH LAKHIMPUR, ASSAM 787032

SIBSAGAR

47. JAINCO AUTOTECH PRIVATE LIMITED (L9NA-L9-01), DAG NO. 531 OF P.P. NO. 4, OF VILLAGE CHANGMAI GAON, MOUZA BETBARI, SIVASAGAR REVENUE CIRCLE, SIVASAGAR

SILCHAR

48. JAIN UDYOG (J2NA-J2-01), R.S. PATTA NO.149, DAG NO.579, MOUZA RONGPUR, SILCHAR, ASSAM - 788009 PH :9436121557.

SONARI

49. JAINCO AUTOTECH PRIVATE LIMITED (BFCN-BFC-01), NAMRUP SAFEKHATI ROAD, WARD NO-6, SONARI - 785690 - 785690

TEZPUR

50. R D MOTORS (RAMLAL DURGADUTT MOTORS PVT LTD) (T1NA-T1-01), SOLAGAN VILLAGE , GOROIMARI , SONABELE, BEFORE MAA KALYANI PETROL PUMP, TEZPUR -784105 PH -9836872710.

TINSUKIA

51. VISHAL CAR WORLD PVT LTD (J4NA-J4-01), NEXA SHOWROOM (BESIDE VISHAL BIKER'S WORLD),A.T. ROAD, LAIPULI,TINSUKIA ,ASSAM -786183 PH :9864211022.

BIHAR

BEGUSARAI

52. GS MOTORS PVT LTD (1UNA-1U-01), NALA ROAD, BEGUSARAI, PIN-851101, BIHAR - 851101

BHAGALPUR

53. SEEMANCHAL MOTORS (G8NA-G8-S1)

DARBHANGA

54. RAJKRISHNA MOTORS LLP (1VNA-1V-S1) - 0
55. RAJKRISHNA (1VNA-1V-01), MADHPUR, KHATA NO. 28, KHASRA NO 107, 108 NH 57 - DARBHANGA (BIHAR)

GAYA

56. KARLO AUTOMOBILES PRIVATE LIMITED (Y6NA-Y6-01), GAYA DOBHI MAIN ROAD, NEAR DOMUHAN, BODHGAYA, PIN -824231, BIHAR.

PATNA

57. ALANKAR AUTO SALES & SERVICE PVT LTD (15NA-15-01), OPP.RUPASPUR THANA, BAILEY ROAD NEAR GOLA ROAD, PATNA - 800002 PH :9262899356.
58. REESHAV AUTOMOBILES PVT LTD (15NB-15-01), MUKDUMPUR,DIGHA,90 NO GATE, PATNA - 800012 PH :7369944132.

59. SHREE GOPAL AUTO PVT LTD (15NC-15-01), BIKHACHAK ANVISHABAD NEW BYPASS ROAD, OPPOSITE SITA RAM COMMUNITY HALL, PATNA, BIHAR - 800002 - 800002 PH :9262853333.

60. REESHAV AUTOMOBILES PVT LTD (15NB-15-02), MAULANA AZAD NAGAR, F.C.I MORE PHULWARISHARIF PATNA - BIHAR

PURNEA

61. SEEMANCHAL MOTORS PVT LTD (6VNA-6V-01), DAMKA CHOWK,KISHANGANJ ROAD, NH-31,GUALBBAGH,PURNEA,BIHAR - 854326 PH :9334710055.

SIWAN

62. SHREE GOPAL AUTO PVT LTD (05NA-05-01), KHATA NO 410, SURVEY NO 464 JASAUJI PAKULI CHHAPRA SIWAN ROAD NH 85, SIWAN BIHAR 841241 - 841241

SUPAUL

63. GS MOTORS PVT LTD (SKUN-SKU-01), KHATA NO. 216,218, KHASA NO. 500-504, PIPRA ROAD, SUPAUL

CHANDIGARH

CHANDIGARH

64. AUTOPACE NETWORK PVT LTD (07NA-07-01), PLOT NO. 37, INDUSTRIAL AREA - PHASE 1, CHANDIGARH - 160002 PH :7087119796.
65. AUTOVOGUE PVT LTD (07NC-07-S1) - 0
66. AUTOVOGUE PVT LTD (07NC-07-02), PLOT NO - 294 INDUSTRIAL AREA PHASE -2, CHANDIGARH - 160002 PH :872509835.
67. NAVDESH AUTOS LLP (07NE-07-01), PLOT NO 182/11, INDUSTRIAL AREA PHASE 1, CHANDIGARH - 160002 PH :8827057534.

CHHATTISGARH

AMBIKAPUR

68. MAHAMAYA AUTOCARS PRIVATE LIMITED (AENA-AE-01), AJAB NAGAR,MAHATHMA GANDHI ROAD,AMBIKAPUR - 497001 PH :9516609632.

BALODABAZAAR

69. SKY AUTOMOBILES (GJNA-GJ-01), AMBEDKAR CHOWK, RAIPUR RD, BALODA BAZAR, CHHATTISGARH 493332 - 493332

BEMETARA

70. CHOUHAN AUTOMOBILES LLP (CBCN-CBC-01), NEAR AK MULTISPECIALTY HOSPITAL, KRISHNA VIHAR, RAIPUR ROAD, BEMETRA, BEMETRA DISTRICT, CHHATTISGARH

BHILAI

71. SPARSH AUTOMOBILES PVT LTD (83NB-83-S1) - 0
BILASPUR-CG

72. SATYA AUTO PVT LTD (C3NB-C3-01), PLOT NO 53, SECTOR C, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHHATTISGARH - 495001 PH :6372803057.

DURG

73. CHOUHAN AUTOMOBILES LLP (7WNA-7W-01), KH NO 215/2, PLOT NO 6 BESIDES D MART DURG BY PASS PIN - 490020 - 490020

JAGDALPUR

74. SKY AUTOMOBILES (ECNA-EC-01), NEAR BR COLD STORAGE, GEEDAM ROAD, JAGDALPUR. (3S)

JANJIR

75. SATYA AUTOMOBILES (9NNA-9N-01), NEAR KHOKSA RLY CROSSING, CHAMPA RD, JANJIR, CHHATTISGARH - 495668

KAWARDHA

76. CHOUHAN AUTOMOBILES LLP (DINA-DI-01), KHASRA NO. 37/10, VILLAGE CHHIRAHA CHOWK,KAWARDHA, DISTRICT KABEERDHA

KORBA

77. SATYA AUTO PVT LTD (U7NB-U7-01), SHED NO 10, PART OF KHASRA NO 885, INDUSTRIAL AREA, RAJGAMAR ROAD, KORBA (C.G)

MUNGELI

78. SATYA AUTO PVT LTD (C3NB-BLE-02), BILASPUR ROAD , GIDHA , CHHATTISGARH - 495334

RAIGARH

79. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTOCORP PRIVATE LIMITED) (7YNA-7Y-01), BESIDE MSQUARE NEXA SHOWROOM,KOTRA ROAD BYPASS,RAIGARH,CHATTISGARH,496001(C OPY OF LAYOUT ATTACHED AS ANNEXURE)

RAIPUR

80. SKY AUTOMOBILES (50NB-50-01), NEXA MAGNETO, LABHANDHI, G. E. ROAD, RAIPUR
81. SPARSH AUTOMOBILES PVT LTD (50NA-50-01), NEAR TCI GODOWN, NH-6, CHANDANDHI, TATIBANDH, RAIPUR, CHATTISGARH - 492029 PH :9926626662.
82. VISHWABHARTI AUTOMOBILES PVT LTD (50NC-50-01), SADDU RD, DALDAL SEONI, RAIPUR,CHHATTISGARH - 492001
83. VISHWABHARTI AUTOMOBILES PVT LTD (50NC-50-S1) - 492010
84. VISHWABHARTI AUTOMOBILES PVT LTD (50NC-50-02), MAIN ROAD DEOPURI, RAIPUR-DHAMTARI ROAD, 492001

RAJNANDGAON

85. SPARSH AUTOMOBILES (LQNA-LQ-01), MUMBAI - KOLKATA HWY, ATAL VIHAR COLONY, RAJNANDGAON, CHHATTISGARH - 491441

DELHI

- DELHI
86. AAA VEHICLEADES PVT LTD (08NW-08-01), BLOCK C, NAJAFGARH ROAD INDUSTRIAL AREA, NEW DELHI, DELHI 110015 - 110015 PH :8750611111.
87. COMPETENT AUTOMOBILES COMPANY LIMITED (08NF-08-01), PLOT NO-34,RAJASTHAN UDYOG NAGAR, GT AKRNL ROAD ,DELHI - 110033 PH :9932049425.
88. JAGMOHAN AUTOMOTIVES PVT LTD (08NX-08-01), C133-136(PART, PHASE I, INDUSTRIAL AREA, MANGOLPURI S BLOCK, NEW DELHI, DELHI 110083 - 110083 PH :9812259000.
89. MAGIC AUTO PVT LTD (A UNIT OF MAGIC LEASING & FINANCE PVT LTD) (08NA-08-01), C1SF GATE NO 1, D-21, CORPORATE PARK, NEAR DWARKA SEC-8 METRO STATION, NEW DELHI - 110075 PH :9873052000.
90. MAGIC AUTO PVT LTD (A UNIT OF MAGIC LEASING & FINANCE PVT LTD) (08NA-08-S1) - 110075
91. PLATINUM MOTOCORP LLP (08NQ-08-01), PLOT NO-H4,BLOCK-B1,MOHAN CO-OPERATIVE INDEX,MATHURA ROAD,PIN-110044 - 110044
92. RANA MOTORS PVT LTD (08NE-08-01), B-242, OKHLA INDUSTRIAL AREA PHASE 1, OKHLA, NEW DELHI
93. SHREYASH AUTOMOTIVES PVT LTD (08NA-08-S1), B-91, PHASE 1, MAYAPURI , DELHI - 110064
94. SHREYASH AUTOMOBILES PVT LTD (08NA-08-01), B-91, MAYAPURI PHASE-1, NEW DELHI
95. TR SAWHNEY AUTOMOBILES PVT LTD (08NN-08-01), C-46, OKHLA INDUSTRIAL AREA PHASE 2, OKHLA NEW DELHI PH :9953350008.

GOA

(TISWADI) GOA

96. SAI POINT (34NC-34-01), SR NO 183/13, MORGADO VADDO ROAD, NEAR INDIAN OIL PETROL PUMP, GOA VELHA, TISWADI, GOA - 403108

BICHOLIM

97. SAI SERVICE (BHNH-BHN-01), H. NO. 192, SURVEY NO. 103/1, ASHWAMED HEIGHTS, CARAPUR SARVANA VILLAGE, BICHOLIM, GOA - 403505 - 403505

GOA

98.	CHOWGULE INDUSTRIES PVT LTD (34NB-34-S1) - 0	111.	RAVIRATNA MOTORS PVT LTD (P9NA-P9-01), S. NO. 449 & 455, PLOT NO. 4 & 5, MAHAVIR TURNING POINT, ANKLESHWAR, GUJARAT - 393001 - 393001	122.	RB CARS (BKCIN-BKC-01), SURVEY NO. 1684, PLOT NO124/5-7, HALOL BYPASS, DISTRICT PANCHMAHAL, HALOL, GUJARAT - 389350 - 389350	PATAN	
99.	CHOWGULE INDUSTRIES PVT LTD (34NB-34-01), SY. NO. 267/1, NEXT TO ARLEM RTO, ARLEM, RAJA, SALCETE - (GOA) - 403720. - 403720 PH :9850966950.	BHARUCH		HALVAD		133.	STARLINE CARS PVT LTD (Q9NA-Q9-01), ADJACENT ARENA SET UP, PATAN UNJHA ROAD, PATAN (GUJARAT) - 382465 - 382465 PH :9909043244.
100.	SAI POINT CARS PVT LTD (34NC-34-S1) - 0	112.	RAVIRATNA MOTORS PVT LTD (F8NA-F8-01), SURVEY NO 185/3, NH8, ZARDESHWAR, BHARUCH, GUJARAT. - 392001 PH :9727700823.	123.	DREAM VEHICLES PVT LTD (GXNA-GX-01), NEAR JANTA FOOD MALL, HALAVAD-DHRANGADHRA HIGHWAY, HALVAD-36300. DISTRICT MORBI - 363330	RAJKOT	
MAPUSA		BHAVNAGAR		HIMATNAGAR		134.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (56NB-55-01), PLOT NO. 110, 111, 127 & 128, KOTHARIYA, NEAR PERFECT HOUSE, GONDAL ROAD, RAJKOT - 360004 PH :9512035501.
101.	SAI SERVICE PVT LTD (34NA-34-02), PLOT NO 41, TIVIM INDUSTRIAL ESTATE, KARASWADA, MAPUSA BARDEZ GOA	113.	KIRAN MOTORS LIMITED (C9NB-C9-01), RAMDEV SOCIETY, CHITRA GIDC, BHAVNAGAR - GUJARAT	124.	KIRAN MOTORS LIMITED (P6NA-P6-01), SURVEY NO. 114, OPP. SABAR DAIRY, BORIYA KHURD, HIMMATNAGAR, DIST. SABARKANTHA (GUJARAT).	RAJIPLA	
102.	CHOWGULE INDUSTRIES PVT LTD (34NB-34-02), PLOT NO 23, TIVIM INDUSTRIAL ESTATE, KARASWADA, MAPUSA GOA 403517. - 403517	BHUJ		JUNAGADH		135.	RAVIRATNA MOTORS PVT LTD (9XNA-9X-01), S.NO. 779, RAJIPLA VADODARA HIGHWAY, RAJIPLA, DISTRICT NARMADA
PANAJI		BOTAD		KADI		SURAT	
103.	SAI SERVICE PVT LTD (34NA-34-01), EMPRESSA INDUSTRIAL CHODANKAR, SURVEY NO. 114/2, SALVADOR DO MUNDO, PORVORIM, BARADEX, GOA - 403521	115.	KATARIA AUTOMOBILES PRIVATE LIMITED (APNA-AP-01), PLOT NO. 30/2, PALIYAD ROAD, BOTAD, GJ	125.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (K8NA-K8-01), GIDC 2, RAJKOT HIGHWAY, JUNAGARH - 362037 PH :9909022619.	136.	AMAR CARS PVT LTD (40ND-40-01), SURVEY NO 139,BLOCK NO-"218"A,OPPOSITE TO AWADH ARENA MALL,V.I.P ROAD ,BHARTHAMA,SURAT,GUJRAT - 395007 PH :9871389795.
		DABHOI		126.	STARLINE CARS PVT LTD (URNA-UR-01), CHHALTRAL KADI HIGHWAY, IRANA ROAD, MONJE BUDASAN, TALUKA KADI, DIST MEHSANA - 382715	137.	KATARIA AUTOMOBILES PRIVATE LIMITED (40NA-40-01), OPP. KAMNATH MAHADEV TEMPLE, NEAR SOHAM CIRCLE, ALTHAN CANAL ROAD, ALTHAN, SURAT. GUJARAT - 395017 - 395017
AHMEDABAD		DAHOD		MANDVI		138.	KIRAN MOTORS LIMITED (40NB-40-01), BLOCK NO 443, FP NO 26 MOJE PALGAM, ADAJAN, SURAT, GUJARAT -395009 - 395009 PH :7020569426.
104.	PEGASUS (A UNIT OF VISUAL MOTORS PVT LTD) (01NG-01-01), PLOT NO 9, OPP RABARI COLONY BRTS STOP, CTM, NAROL - NARODA HIGHWAY, NH-8, AHMEDABAD, GUJARAT. - 380026 PH :9909023000.	117.	R B CARS PVT LTD (2CNA-PL-02), PLOT NO. 142, BAPUNAGAR, DAHOD-INDOR HIGHWAY ROAD, DAHOD.	127.	KIRAN MOTORS LIMITED (UYNA-UY-01), SR. NO. 62, MANDVI ZANKHVAV ROAD, AT & PO RUPAN, TALUKA MANDVI, DISTT. SURAT.	139.	PEGASUS (A UNIT OF VISUAL MOTORS PVT LTD) (40NE-40-01), TP NO.8,FP NO.380,CS NO.1207,DHAMANWALA COMPOUND,NEAR GAYWALA CHAMBERS, CANAL ROAD, KHATODARA UDHANA
105.	POPULAR WHEELERS (INDIA) PVT LTD (01NC-01-01), T P 20, F P 78, OPPOSITE SUN SQUARE COMPLEX OFF, C G ROAD, NEAR HL COLLEGE, NAVRANGPURA GULBAI TEKRA, AHMEDABAD, GUJARAT - 380009 PH :9925203344.	DEHGAM		MEHSANA		SURENDRANAGAR	
106.	STARLINE CARS PVT LTD (01NE-01-01), PLOT NO 236, GIDC, NARODA, AHMEDABAD, GUJARAT. 382 330 - 382330 PH :7436003235.	118.	NANDA AUTOMOBILES PVT LTD (NRNA-NR-01), SURVEY NO. 4536/2, BESIDES SHREENATH SOCIETY, OPP. SABARMATI GAS STATION, DEHGAM, GUJARAT-382305.	128.	STARLINE CARS PVT LTD (D1NA-D1-01), REVENUE SURVEY NO. 342, PLOT NO.1, 4, 5 AND 6 TO 12, VILLAGE NAGALPUR, DISTRICT MEHSANA, GUJARAT - 384002	140.	DREAM VEHICLES PVT LTD (LCNA-LC-01), PLOT NO. 302, GIDC AREA, WADHWAN CITY, SURENDRANAGAR, GUJARAT. - 363035 PH :851104644.
107.	PEGASUS (A UNIT OF VISUAL MOTORS PVT LTD) (01NG-01-02), SURVEY NO. 407/1, FP NO. 308/1, VIP ROAD, SHELA, SOUTH BOPAL, AHMEDABAD	GANDHIDHAM		MORBI		VADODARA	
108.	KATARIA AUTOMOBILES PRIVATE LIMITED (01NF-01-01), PLOT NO. 14-23, T.P. SCHEME NO. 1, BOPAL, AHMEDABAD-380058 - 380058	119.	B M AUTOLINK (77NA-77-01), SURVEY NO 129/26, GALPADAR - ANJAR HIGHWAY, AIRPORT ROAD, GANDHIDHAM, KUTCH , GUJARAT - 370201 PH :7211120014.	129.	PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (X8NA-X5-01), RAJKOT MORBI HIGHWAY, VILLAGE SANALA, MORBI - GUJARAT (363641) - 363641	141.	AMAR CARS PVT LTD (22NB-22-01), SHED NO. 56, SARDAR INDUSTRIAL ESTATE, AJWA ROAD, VADODARA - 390019 - 390019
109.	KIRAN MOTORS LIMITED (01NB-01-01), RAUTHAL BANQUET, -SHILAJ ROAD,	GANDHINAGAR		NADIAD		142.	KATARIA AUTOMOBILES PRIVATE LIMITED (22NA-22-01), WARD NO 11 CIRCLE SAINATH ROAD, HARINAGAR-VASNA ROAD VADODARA - 390007 PH :9824701590.
ANAND		GODHRA		NAVSAARI		VAPI	
110.	AMAR CARS PVT LTD (F7NA-F7-01), SURVEY NO 1583, PLOT NO 144, NEAR GANESH CROSSING, ANAND SOJITRA ROAD, ANAND, GUJARAT - 388001 PH :9925407666.	121.	R B CARS PVT LTD (2CNA-2C-01), SURVEY NO. 38/2 PAIKE 1 PAIKE 2, LUNAWADA ROAD, OPP. GIDC, GODHRA - 389001 - 389001 PH :9925051444.	131.	KATARIA AUTOMOBILES PRIVATE LIMITED (Q7NA-Q7-01), BLOCK NO 1064 AT VILLAGE GANESH SISODARA, TALAND DISTRICT NAVSARI		
ANKLESHWAR		HALOL		PALANPUR			
				132.	TANU MOTORS PVT LTD (Q8NA-Q8-01), NR. MARUTI SUZUKI COMMERCIAL SHOWROOM, PALANPUR - DEESA HIGHWAY, PALANPUR-385001 - 385001		

143. KATARIA AUTOMOBILES PRIVATE LIMITED
(97NA-97-01), NEAR CROMA OUTLET, RATHOD
CHAMBERS, DAMAN ROAD, CHALA VAPI -
396191
PH :9714799985.

HARYANA

AMBALA

144. EAKANSH WHEELS (18NA-18-01),
AMBALA-CHANDIGARH HIGHWAY ADJOINING
AAJ SAMAJ VILLAGE-SADDOPUR, AMBALA
PH :8395903111.

ASSANDH

145. KARNAL MOTORS PVT LTD (CSNA-CS-01),
KAITHAL BYE-PASS, BEHIND CAR CREW
CENTER, ASSANDH

ATELI

146. PLATINUM MOTOCORP LLP (9QNA-9Q-02), OPP.
ANARKAUR HOSPITAL, WARD NO.-11, KANINA
ROAD, ATELI (HR)

BHIWANI

147. PASCO AUTOMOBILES (X3NA-X3-01), NEAR
HUNNAMAL PIAYU, ROHTAK ROAD, BHIWANI-
HARYANA-127021 - 127021
PH :9289192582.

CHARKHI DADRI

148. JAGMOHAN MOTORS PVT LTD (A6NA-CT-02),
PLOT NUMBER 1142, KHATAUNI NUMBER 1206,
CHARKHI DADRI, HARYANA

FARIDABAD

149. BVA AUTO PRIVATE LIMITED (58NC-58-01),
2J/53-54, NH-2, NIT FARIDABAD, HARYANA
PH :9911259288.

150. PASCO AUTOMOBILES (58NB-58-S1) - 0

151. PASCO AUTOMOBILES (58NB-58-01), 14/4,
MATHURA ROAD, FARIDABAD, HARYANA -
121003
PH :9999790229.

152. VIPUL MOTORS PVT LTD (58NA-58-01), SUB
DIVISION NO-3, INDUSTRIAL PLOT NO. -34,
N.I.T, FARIDABAD HARYANA - 121001
PH :8562019252.

FARIDABAD

153. AUTONATION (58NC-58-E1) - 121006

FARRUKHNAGAR

154. PLATINUM MOTOCORP LLP (KENA-KE-01),
KHEWAT NO. 4/21/8 & 21/6 PTAUDI ROAD,
FARRUKHNAGAR, HARYANA

GOHANA

155. JAGMOHAN AUTOMOTIVES PVT LTD
(CUNA-CU-01), KILLA NO 36/16/2-25, KHEWAT
NO 35/30 BAROTA VILLAGE SONIPAT ROAD,
GOHANA, SONIPAT, 131301

GURGAON

156. PASCO AUTOMOBILES (95NA-95-01), SEC 17-18
DIVIDING ROAD, GURGAON- HARYANA -
122015

157. PREM MOTORS PVT LTD (95ND-95-01), PLOT
NO. 5, IDC, SECTOR-16, GURGAON, HARYANA -
122001
PH :1292565666.

158. TR SAWHNEY AUTOMOBILES PVT LTD
(95NB-95-01), CRPF CAMP ROAD, VILLAGE
ULLAWAS, NR. PIONEER PARK SECTOR-62,
GURGAON, HARYANA - 122001
PH :1274254441.

159. PLATINUM MOTOCORP LLP (2LNA-95-02),
KHEVAT NO 406, KHATONI NO 411, ALMORA
CHOWK, SPR RD, SEC 75 A GURGAON - 122012

HISSAR

160. SARAOGI AUTOMOBILES PRIVATE LIMITED
(76NB-76-01), PLOT NO -180, SECTOR 27-28,
SATROD INDUSTRIAL AREA, HISSAR - 125001

JHAJJAR

161. COMPETENT AUTOMOBILES COMPANY
LIMITED (0BNA-08-01), PLOT NO - 309 ,
OFFICER COLONY , BADLI ROAD , NEAR ANAJ
MANDI , JHAJJAR , HARYANA

JIND

162. EAKANSH MOTORS PVT LTD (2KNA-2K-01),
KHEWAT NO - 155, KHASRA NO. - 142,
MURRABA NO. - 210 OPP. HP LPG BOTTLING
PLANT, ROHTAK-JIND ROAD, JIND. PIN - 126102

KAITHAL

163. EAKANSH MOTORS PVT LTD (U8NA-U8-01),
NH-65, OPP RKM FARM, AMBALA ROAD,
KAITHAL - 136027

164. EAKANSH MOTORS PVT LTD (U8NA-U8-02),
KHEWAT NO -458, KHATONI - 563, KITTAS -
20/87K 01M ADJOINING NEXA SHOWROOM,
AMBALA HISAR ROAD, KAITHAL - 136027
PH :8813038777.

KARNAL

165. KARNAL MOTORS PVT LTD (89NA-89-01),
118-119 KM MILESTONE, G.T. ROAD, KARNAL,
HARYANA - 132001

KHARKODA

166. JAGMOHAN AUTOMOTIVES PVT LTD
(BUNA-BU-01), KHEWAT NO 885, KHATA NO
1151-53, KILA NO 153/16/2/24-11, SERVICE
ROAD, KHARKHODA BYPASS, KHARKHODA
SONIPAT.

KOSLI

167. DINCO 4 WHEELS LLP (AUTO VIBES)
(CANN-CAN-01), KHEWAT NO. - 857& 900, RECT.
NO-75/2/2, KOSLI, DIST.-REWARI (HARYANA).

KURUKSHETRA

168. KARNAL MOTORS PVT LTD (U6NA-U6-01),
155-200 MILESTONE GT ROAD KURUKSHETRA -
136038

MANESAR

169. PLATINUM MOTOCORP LLP (2LNA-2L-S1) - 0

NARAINGARH

170. EAKANSH WHEELS (CVNA-CV-01), KHEWAT
NUMBER 118, W. NO. 5, NAHAN ROAD,
NARAINGARH

NARNAUL

171. PLATINUM MOTOCORP LLP (9QNA-9Q-01),
KAILASH NAGAR, REWARI ROAD, NARNAUL,
HARYANA - 123001

NARWANA

172. EAKANSH MOTORS PVT LTD (CWNA-CW-01),
KHEWAT & KHATA NO 441/626, OPPOSITE
MAHINDRA SHOWROOM, HISSAR UKLANA
ROAD, NARWANA, HARYANA.

NUH

173. PASCO AUTOMOBILES (7LNA-7L-01), KHATAUNI
NO. 550, KILA NO. 14/1, SADDIK NAGAR, ALWAR
ROAD, NUH (HARYANA).

PALWAL

174. AUTONATION (A UNIT OF TAYAL INDIA
MOTORS PVT LTD) (EENA-EE-01), KILA NO.-15/2
& 16/1, 57 MILESTONE, NEAR ECHS HOSPITAL,
MATHURA ROAD, PALWAL

PANIPAT

175. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES
PVT LTD) (D3NB-D3-01), NANGAL KHERI, NEAR
BMBB POWER HOUSE, OPP. SEC-29, PANIPAT,
HARYANA - 132103
PH :9812615000.

PATAUDI

176. PLATINUM MOTOCORP LLP (BYNB-BY-01), 422/2
, MITTAL & SONS. HAILYMANDI , WARD NO. 4
KULALNA ROAD , PATAUDI

REWARI

177. DINCO 4 WHEELS LLP (AUTO VIBES)
(U1NA-U1-01), OPP. TULARAM STADIUM, DELHI
ROAD, REWARI - 123401

ROHTAK

178. JAGMOHAN MOTORS PVT LTD (A6NA-A6-01),
NORTHERN BYEPASS, SUKHPURA CHOWK,
JIND ROAD, ROHTAK, HARYANA
PH :8754045446.

SIRSA

179. SHAKTI MOTORS PVT LTD (E4NA-E4-01), OPP.
DELHI PUBLIC SCHOOL, NH-09, HISSAR ROAD,
SIRSA - 125055

SONEPAT

180. JAGMOHAN AUTOMOTIVES PVT LTD
(J5NB-J5-01), SONIPAT MURTHAL ROAD,
OPPOSITE ASR CNG PUMP, SONIPAT - 131001
YAMUNANAGAR

181. PANDIT AUTOMOBILES PVT LTD (D2NA-D2-S1) -
0

HIMACHAL PRADESH

BADDI

182. GOYAL MOTORS PVT LTD (CIFN-CIF-01),
KHASRA NO. 968/800, OPP. HOTEL APEX,
BHUD, BADDI, DISTRICT SOLAN, HIMACHAL
PRADESH - 173205

BILASPUR-HP

183. COMPETENT AUTOMOBILES COMPANY
LIMITED (6YNA-6Y-01), KHASRA NO. 259/76 &
261/77 KHATONI : 18 , VILLAGE BEHAL PO
BAMTA TEHSIL SADAR

CHAMBA

184. PATHANKOT VEHICLELEADS PVT LTD
(JFNA-JF-01), KHASRA NO. 780/3702, GHOTI,
PO- SAROL, TEH AND DISTT- CHAMBA,
HIMACHAL PRADESH

HAMIRPUR

185. COMPETENT AUTOMOBILES COMPANY
LIMITED (W9NA-W9-01), KHEWAT 13 MIN,
KHATUANI 13 MIN, KHASRA NO. - 492,493,
MOHAL CHATTER MOUZA, UGIALTA TEH, DIST.
HAMIRPUR.

NAGROTA

186. KANGRA VEHICLELEADS (A UNIT OF
PATHANKOT VEHICLELEADS PVT LTD)
(D9NA-D9-01), VILL. HATWAS, PATHANKOT -
MANDI HIGHWAY, NAGROTA BAGWAN DISTT.
KANGRA - 176047
PH :7018145653.

PALAMPUR

187. KANGRA VEHICLELEADS (2TNA-2T-01), VPO
BHATTU SAMULA, SUB. TEHSIL SULAHA
(PALAMPUR), DISTT. - KANGRA, HIMACHAL
PRADESH - 176064 - 176064

PAONTA SAHIB

188. GOYAL MOTORS PVT LTD (8GNA-8G-01),
SHAMSHERPUR, NH-72, POANTA SAHIB,
HIMACHAL PRADESH.

RAMPUR (HP)

189. GOYAL MOTORS PVT LTD (CEZN-CEZ-01),
VILLAGE NIRSU, PO DUTT NAGAR, NEAR NEW
RELANCE PETROL PUMP, RAMPUR BUSHAHRA,
HP - 172001

ROHRU

190. GOYAL MOTORS PVT LTD (JZNA-JZ-01),
VILLAGE MEHENDLI, ROHRU - SHIMLA ROAD,
ROHRU, HIMACHAL PRADESH - 171207

SHIMLA

191. MODERN AUTOMOBILES (A9NA-A9-S1) - 0
192. GOVAL MOTORS PVT LTD (A9NB-A9-01),
RANJEET NAGAR , BHATTAKUFER , NEAR
APPLE MARKET, SHIMLA - 171010

SOLAN

193. GOVAL MOTORS PVT LTD (7DNA-7D-S1) - 0
194. GOVAL MOTORS PVT LTD (7DNA-7D-01),
DEONGHAT ,SOLAN, HIMACHAL PRADESH

UNA

195. COMPETENT AUTOMOBILES CO LTD
(QDNA-QD-01), VILLAGE LAL SINGHI (OPPOSITE
PRAKASH HONDA), NH 503, UNA, HIMACHAL
PRADESH.

JAMMU AND KASHMIR

AKHNOOR

196. JAMMU MOTORS PVT LTD (2XNA-2X-01),
KHASRA NO 680 MIN/52 KHEWAT NO 5/34
KHATA NO 90/203 MIN/204 MIN, BANGTI
DASKAL, AKHNOOR, JAMMU

BARAMULLA

197. JAMKASH VEHICLEADES (KASHMIR) PVT LTD
(8CNA-8C-01), KHIUSHAL PORA, CHANAD,
SANGRAMA, BARAMULLA, PIN-193202, JAMMU
& KASHMIR - 193202

JAMMU

198. JAMKASH VEHICLEADES PVT LTD (33NB-33-01),
NH-1A BYE PASS OPPOSITE CHANNI HIMMAT,
JAMMU (J&K)
199. JAMMU MOTORS PVT LTD (33ND-33-01),
KHASRA NO. 421, TOPE SHERKHANIA,
AKHNOOR ROAD, OPPOSITE BEST PRICE,
JAMMU, JAMMU & KASHMIR - 180016

KATHUA

200. JAMMU MOTORS PVT LTD (3BNA-3B-01),
KHASRA NO 406/213/73, KHATA NO 1, KHEWAT
NO 1, NATIONAL HIGHWAY, KALIBARI CHOWK,
JAMMU AND KASHMIR

RAJOURI

201. JAMKASH VEHICLEADES PVT LTD (AINA-AI-01),
449/1, MAIN CHOWK MURADPUR - TEHSIL,
RAJOURI

SRINAGAR

202. PEAKS AUTO PVT LTD (12NA-12-01), DR. ALI
JAN ROAD, SOURA, SRINAGAR PIN - 190001
PH :7006285604.
203. JAMKASH VEHICLEADES (KASHMIR) PVT LTD
(12NB-12-S1) - 190001
204. COMPETENT KASHMIR AUTOMOBILES PVT LTD
(12NC-12-01), KHASRA NO. 2745/1593/638 ,
KHEWAT NO. 352, MOUJA, BATAMALOO,
SRINAGAR, J&K

JHARKHAND

BOKARO

205. HINDUSTAN AUTO AGENCY (B5NA-B5-01),
KHATA NO. 752, PLOT NO. 7792, NH-32, CHAS,
BOKARO - 827013
PH :9304807318.

CHATRA

206. HINDUSTAN AUTO AGENCY (B5NA-B5-02), PLOT
NO - 1110, 1111, 1112 ; KHATA NO 112,163,22
THANA - CHATRA, DIST - CHATRA JHARKHAND

CHIRKUNDA

207. RELIABLE INDUSTRIES (52NA-CQT-02), NEHRU
ROAD , CHIRKUNDA - 828202

DALTONGANG

208. PREMSONS MOTOR UDYOG PVT LTD
(MPNA-MP-01), RANCHI ROAD, NORTH REDMA
MEDININAGAR PS DALTONGANG, DIST PALAMU
- 822102

DEOGHAR

209. PREMSONS MOTOR UDYOG PVT LTD
(SGWN-SGW-01), PLOT NO 318/319 UNDER
THANA NO 583,MAHESHMARA MOUJA
,DEOGHAR - 814112
PH :9835507004.

DHANBAD

210. RELIABLE INDUSTRIES (52NA-52-01), RELIABLE
INDUSTRIES NEXA WORKSHOP AMAGHATA, BY
PASS ROAD SUGADIH,PIN -828109 - 828109
PH :7992470853.

DUMKA

211. RELIABLE INDUSTRIES (L7NA-L7-01), TATA
CHOWK,

GIRIDIH

212. RELIABLE INDUSTRIES (3DNA-3D-01), KHATA
NO-51,PLOT NO-596,598 & 599, PO -
PACHAMBA, GIRIDIH , JHARKHAND-815316

HAZARIBAGH

213. PREMSONS MOTOR UDYOG PVT LTD
(Y9NA-Y9-01), PREMSON MOTOR UDYOG PVT
LTD ,NEXA SHOWROOM NEXT TO GST
OFFICE,ARYA
NAGAR,HURHURU,HAZARIBAGH,JHARKHAND
825301 - 825301
PH :9835507004.

JAMSHEDPUR

214. MOTOR WORLD (A UNIT OF KALIMATI MOTORS
PVT LTD) (31NB-31-01), NS-6, 2ND PHASE,
ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR -
831013
215. PEBCO MOTORS LTD (31NA-31-01), KANDRA
ROAD, ADITYAPUR INDUSTRIAL AREA,
JAMSHEDPUR - 831013
PH :9334183260.

RAMGARH

216. HINDUSTAN AUTO AGENCY (AVNA-AV-01),
KHATA NO -01, PLOT NO 195 MURRAMKALAN
NEAR RAMGARH BAZAAR , RAMGARH
JHARKHAND

RANCHI

217. PREMSONS MOTOR UDYOG PVT LTD
(51NC-51-01), PLOT NO 2651/2652, KHATA NO
239, MAUJA,
VILLAGE BARAGAI , BARIATU MAIN ROAD,
RANCHI, JHARKHAND - 834009
PH :9334811248.
218. HILLTOP MOTORS (A UNIT OF HIRALAL
MOTORS PRIVATE LIMITED) (51ND-51-01), PLOT
NO. 967, 972, 973, 974, 975, BIRSA CHOWK,
VILLAGE HINOO, RANCHI
219. HILLTOP MOTORS (A UNIT OF HIRALAL
MOTORS PRIVATE LIMITED) (51ND-51-02),
KATHALMORE, OPP. MANER DHABA, RANCHI -
834005

KARNATAKA

ANEKAL

220. PRATHAM MOTORS PVT LTD (FANA-FA-01),
SY.NO.36/5,KAVALA
HOSAHALLI,ANEKAL-CHANDAPURA MAIN
ROAD,SIDHIOSAKOTE POST,ANEKAL
TALUK,ANEKAL-562106 - 562106

BANGALORE

221. BIMAL AUTO AGENCY INDIA PVT LTD
(02NL-02-01), NO.1, 3RD BLOCK, 2ND STAGE,
NAGARABHAVI, OUTER RING ROAD,
BANGALORE - 560072 - 560072
222. BIMAL AUTO AGENCY INDIA PVT LTD
(02NC-02-01), SY.NO.9/04, NEAR
KATAMANALLUR GATE, KANNAMANGALA,
KADUGODI MAIN ROAD, BANGALORE - 560067
PH :9742289137.
223. BIMAL AUTO AGENCY INDIA PVT LTD
(02NC-2-03), SY NO. 2/2, MARATHAHALLI TO KR
PURAM OUTER RING ROAD, MAHADEVAPURA,
K R PURAM HOBLI, BANGALORE
224. KALYANI MOTORS PVT LTD (02NI-02-01),
SURVEY NO.17/2, KENCHENAHALLI VILLAGE,
RAJARAJESHWARI NAGAR, MYSORE
ROAD,BANGALORE, KARNATAKA - 560032
PH :9845049628.
225. KALYANI MOTORS PVT LTD (02NN-02-01), 152/7,
OUTER RING ROAD, DODDA BANASWADI,
HORAMAVU, KR PURAM HOBLI, BANGALORE
-560043 - 560043
PH :9900020454.
226. MANDONI MOTORS PVT LTD (02NJ-02-01),
SURVEY NO.33/2,ALLASANDRA, YELAHANKA
NORTH, BANGALORE, KARNATAKA - 560064
PH :9513729888.
227. PRATHAM MOTORS PVT LTD (02NK-02-01),
120,SARJAPUR MAIN ROAD,DODDAKANAHALLI,
VARTHUR HOBLI, BANGALORE EAST,
KARNATAKA- 560035 - 560035
PH :8884005079.
228. SURAKSHAA CAR CARE PVT LTD (02NF-02-01),
2/6, BERTEN AGRAHARA, OPP TO METRO
CASH & CARRY, HOSUR MAIN ROAD,
ELECTRONIC CITY, BANGALORE, KARNATAKA -
560100
PH :9845047393.
229. VARUN MOTORS PVT LTD (02NG-02-01),
NO.23/A, INDUSTRIAL SUBURB, 2ND STAGE,
TUMKUR ROAD, YESHWANTPUR, BANGALORE,
KARNATAKA- 560022 - 560022
PH :8971888885.
230. VARUN MOTORS PVT LTD (02NM-02-01), 37/56
NAGAVARA VILLAGE,HEBBAL RING ROAD
,BANGALORE - 560024
PH :9513394753.
231. KALYANI MOTORS PVT LTD (02NA-02-01),
MUNICIPAL NO 1, EVEREST TALKIES, NEW
WARD NO 78, PID NO 91-4-1,KENCHAPPA
ROAD, FAZER TOWN, BANGALORE - 560005
232. SURAKSHAA CAR CARE PVT LTD (02NP-02-01),
SY. NO.16/3, THALAGHATTAPURA VILLAGE,
UTTARAHALLI HOBLI, BANGALORE,
KARNATAKA
233. SURAKSHAA CAR CARE PVT LTD (02NP-02-02),
#47/2, 80FT ROAD, BANASHANKARI 6TH STAGE,
4TH BLOCK, TURAHALLI, BANGALORE -56006 -
56006
234. VARUN MOTORS PVT LTD (02NO-02-01), OPP
TO SOUTH EAST ASIAN TRUST, AYAPPA
NAGAR,HOODI, KR PURAM,BANGALORE - 560005
235. KALYANI MOTORS PVT LTD (02NQ-02-01),
SURVEY NO. 23/6,CHIKKABIDARAKALU
VILLAGE, ANCHAPALYA,
DASANAPURA-HOBLI,BANGALORE NORTH
TALUK BANGALORE - 560073,KARNATAKA.

BANGARPET

236. SURAKSHAA (ORNA-OR-01), OPP TO SUGAR
FACTORY, AMARAVATHI LAYOUT BUS STOP,
KGF MAIN ROAD, BANGARPET - 563114

BELGAUM

237. SHANTESHA MOTORS PVT LTD (E8NA-E8-01),
PLOT NO. 6/B, R.S NO. 34, BOUXIDE ROAD,
KANGRALI B K, BELGAUM, KARNATAKA-590010.
- 590010
PH :9538195381.

BELLARY

238. KPF PVT LTD (G2NA-G2-01), DOOR NO. 14&15,
1ST CROSS, GANDHI NAGAR, BELLARY- 583103
- 583103

BIJAPUR

239. CHAVAN MOTORS (KTK) PRIVATE LIMITED
(T7NA-T7-S1) - 586109

240. CHAVAN MOTORS (KTK) PRIVATE LIMITED (77NA-T7-01), R SY NO. 26/D1, KASABA VIJAYAPURA, BYE PASS CROSS, NH50 HIGHWAY ROAD, VIJAYAPURA (BIJAPUR) - 596109 PH :8799957100.	251. MUNEEER ENTERPRISE PRIVATE LIMITED (MUNEEER NEXA) (N7NA-N7-01), TTH WARD, A.S. GUDI, HAMPI ROAD, HOSPET ROAD, HOSPET, KARNATAKA	263. RNS MOTORS PVT LTD (MQNA-MQ-01), SY NO.260/A5, SHIVA COMPLEX,NEJJUR COMPO, BANAVASI ROAD, TALUK SIRSI, KARNATAKA	274. KVR AUTO MALL PVT LTD (K1NA-K1-01), SURVEY NO. 54/2, BYE PASS ROAD, KANNUUR-KOZHIODE, ELAYAVOOR VILLAGE, KUZHUTHALY DESAM, KANNUUR TALUK
CHICKBALLAPUR	HUBLI	UDUPI	KASARGOD
241. BIMAL AUTO AGENCY INDIA PVT LTD (KJNA-KJ-01), SY NO. 158 & 159, KANDAVARAKERE KASABA HOBLI, - 503224	252. RNS MOTORS PRIVATE LIMITED (73NC-73-01), SITE NO. 415/2A, P.B. UNKAL ROAD, HUBLI, KARNATAKA	264. ABHARAN MOTORS PVT LTD (G6NA-G6-01), SY NO. : 94/35 & 94/18B, UPPOR VILLAGE, UDUPI, KARNATAKA. - 576105	275. INDUS MOTOR COMPANY PVT LTD (3LNA-3L-01), SURVEY NO.384/3C,10, MUTTATHODY VILLAGE, INDIRA NAGAR, CHENGALA POST, KASARGODE, KERALA- 671541 - 671541
CHITRADURGA	KOLAR	KERALA	KATTAPPANA
242. SAKETH AUTOMOBILES (ALNA-AL-01), SITE NO.4181/4024/10782/2, SAROJABHAI KALYANA MATAPA, NH-04 SERVICE ROAD, CHITRADURGA - 577501 - 577501	253. MANDОВI MOTORS PVT LTD (02NJ-QU-02), KATHA NO2790,2790/1,PETECHAMANAHALI,KASABA HOBLI,KOLAR, KARNATAKA.	ALLEPPEY	276. BIMAL AUTO (ZNNA-ZN-01), SERIAL NO. 53/14, OPP. VELLAYAMKUDI POST OFFICE, THODUPUZA - PULIYANMALA ROAD, VELLAYAMKUDI, KATTAPPANA, KERALA - 685515
DAVANGERE	MANGALORE	CALICUT	KAYAKULAM
243. SHRUTI MOTORS PRIVATE LIMITED (S1NB-S1-01), AVARAGERE ROAD, OLD, PB RD, DAVANAGERE, KARNATAKA 577003 - 577003	254. MANDОВI MOTORS PVT LTD (45NA-45-01), SUMIT APARTMENT BUILDING, AIRPORT ROAD, MARY HILL, MANGLORE - 574142 PH :9845133077.	266. A M MOTORS (47NA-47-01), 18/1472, OPP TO COMTRUST EYE HOSPITAL,SRAMBIKKAL PARAMBA,MINI BYPASS JAIL ROAD JUNCTION,PUTHIYARA POST,CALICUT, KERELA-673004. - 673004 PH :7708833966.	277. SAI SERVICE PVT LTD (8LNA-8L-01), SAI SERVICE PVT LTD, WEST OF RAILWAY BRIDGE, K P ROAD, KAYAMKULAM, PIN : 690502 - 690502 PH :9288024222.
DEVANHALLI	MOODIBIDRI	267. POPULAR VEHICLES & SERVICES LTD (47NB-47-01), BYPASS SERVICE ROAD, BEHIND JAYA ARCADE, THONDYADU, CALICUT, KERALA - 673017 PH :9946104660.	KODANGALLUR
244. BIMAL AUTO AGENCY INDIA PVT LTD (02NL-WH-02), SURVEY NO 113,113/A, HISREAMANIKERE VILLAGE, KASABA HOBLI, DEVANHALLI, BANGALORE RURAL DISTRICT - 562110	256. BHARATH AUTO CARS PVT LTD (HNNA-HN-01), BHARATH BEEDI COMPOUND, NEAR ALVA'S HOSPITAL, MOODIBIDRI, KARNATAKA.	268. BIMAL AUTO AGENCY INDIA PVT LTD (47NC-47-01), KTC NAGAR (OLD FORD SHOWROOM), CALICUT ROAD, MEENCHANDA, KOZHIOKE, KERALA 673018	278. SAI SERVICE PVT LTD (8KNA-8K-01), SURVEY NO. 506/3-2, KODUNGALLUR, THRISSUR
DHARWAD	MYSORE	COCHIN	KOLLAM
245. RNS MOTORS PRIVATE LIMITED (BIXN-BIX-01), CTS NO. 29A/1, 29A/2, 29A/3, ASHOK NAGAR, GOA ROAD OPPOSITE PAVAN PARK, DODDANAYAKANA KOPPA DHARWAD - 580021	257. KALYANI MOTORS PVT LTD (25NC-25-01), PLOT NO.262, HEBBAL INDUSTRIAL AREA, MYSORE, KARNATAKA- 570016 - 570016	269. INDUS MOTOR COMPANY PVT LTD (27NC-27-01), NH 47,THAIKATTUKARA PO,THAIKAVU, ALUVA, COCHIN - 683106 - 683106 PH :9747508822.	279. SARATHY CARS PVT LTD (C7NA-C7-01), NH-47 BYE PASS ROAD, AYATHIL P.O KOLLAM DIST, KERALA STATE PIN 691021 - 691021 PH :9848659456.
GADAG	NEELAMANGALA	270. SAI SERVICE PVT LTD (27NA-27-01), 723/7,6,18,OPP TO HOTEL AARYAS, SEAPORT-AIRPORT, POOJARY VALAVU, KANAYANNOOR TALUK, THIRRAKKARA NORTH, COCHIN-682021. - 682021 PH :9645106193.	KOTTAYAM
246. RNS MOTORS PRIVATE LIMITED (RKNA-RK-01), SY NO. 48, BINKADAKATTI VILLAGE,GADAG, KARNATAKA.	258. MANDОВI MOTORS PVT LTD (25NA-25-01), SURVEY NO. 90/7, RT NAGAR, RING ROAD, DATTAGALLY, MYSORE, KARNATAKA -570023 - 570023	271. GEORGE MAIJO AUTOMOBILES PVT LTD (27ND-27-01), 32/1219,THIRAKKAKARA MUNICIPALITY, CIVIL LINE ROAD,VAZHAKALA JUNCTION, COCHIN	280. AVG MOTORS LTD (B8NA-B8-01), SY. NO. 182/3,182/4, WARD NO.10, PEROOR VILLAGE, ETTUMANOOR MUNICIPALITY, KOTTAYAM - 686630
GOKAK	PUTTUR	272. POPULAR VEHICLES AND SERVICES (27NB-27-01), MANAKKAPPADY JN, IRUMPANAM, COCHIN	281. SAI SERVICE PVT LTD (8BNB-B8-01), SY. NO. 341/11, 341/12, PERUR VILLAGE, MC ROAD, THELLAKOM, KOTTAYAM - 686630
247. SHANTESHA MOTORS PVT LTD (IRNA-IR-01), SY NO 106/3D/2 GOKAK- BELGAUM HIGHWAY	280. BHARATH AUTOCARS PVT LTD (CZNA-CZ-01), PLOT NO. 5-28/4, NEAR GOWDA SAMAJ HALL, BYEPASS ROAD, TENKLA, PUTTUR -574201.	KAIPAMAMGLAM	MUVATTUPUZA
GULBARGA	SAGARA	273. SAI SERVICE PRIVATE LIMITED (RPNA-RP-01), EDAMUTTOM, EDAMUTTOM, P.O, KAIPAMANGALAM RD, THRISSUR	282. INDUS MOTOR COMPANY PVT LTD (7ENA-7E-01), NELLIPILLIL HOUSE, ADODPARAMBU, MUVATTUPUZA P.O., ERNAKULAM. - 686661
248. LAHOTI MOTORS PVT LTD (E9NA-E9-01), #7-1211/A, OPP GUNJ BUS STAND HUMNABAD ROAD, GULBARGA - 585104	261. SHRUTI MOTORS PRIVATE LIMITED (WFNA-WF-01), NEAR INDIAN OIL PETROL BUNK,BASAVANA HOLE, JAMBAGARU, SAGARA, KARNATAKA - 577401	KANNUR	PALA
HASSAN	SHIMOGA	284. INDUS MOTORS (Y2NA-Y2-01), SURVEY NO. 133,135, NEARBY MOYANS SCHOOL, PALAKKAD CITY, KERALA.	TALIPARAMBA
249. VENKAT MOTORS (C8NA-C8-01), KHATA NO 200-201, DM HALLY, BANGALORE - MANGALORE ROAD, HASSAN, KARNATAKA - 0	262. SHRUTI MOTORS PRIVATE LIMITED (B7NB-B7-01), 217/215/91/79/1, OPP TO FOREST OFFICE, SHANTI NAAGARA, HONNALI ROAD, SHIMOGA,KARNATAKA - 577201		
HOSKOTE	SIRSI		
250. BIMAL AUTO AGENCY INDIA PVT LTD (SMNA-SM-01), SY NO. 102, NO.56, HOSAKOTE SANTE GATE FLYOVER, KAMMAVARI PETE, HOSKOTE, KARNATAKA - 562114			
HOSPET			

285.	POPULAR VEHICLES & SERVICES LTD (9WNA-9W-01), SY NO. 34/196 & 34/207, NH-66, TALIPARAMBA, KERALA - 670141	300.	ADINATH CARS PVT LTD (RDNA-RD-01), KHASRA NO. 39/11/2/2, GRAM HIRDAYPURA, SAGAR NAKA, DAMOH, MADHYA PRADESH - 470661 - 470661	314.	RUKMANI MOTORS PVT LTD (53NC-53-S1) - 0	327.	ADINATH CARS PVT LTD (G1NA-G1-01), KHASRA NO 155, P H NO. -77, BAHERIA GADGAD, SAGAR JABALPUR ROAD, SAGAR - 470004, MADHYA PRADESH, INDIA - 470004 PH :9752447690.
THIRUVANANTHAPURAM		DATA		JABALPUR		SANWER	
286.	INDUS MOTOR COMPANY PVT LTD (16NB-16-01), OPPOSITE EVM ASHOK LEYLAND ALUMOOD JN,NH 47,KANNIYAPURAM, TRIVANDRUM - 695301 - 695301 PH :9656685678.	301.	PREM MOTORS (WENA-WE-01), NEAR TATA COMMERCIAL SERVICE STATION, JHANSI ROAD, DATIA (MADHYA PRADESH) - 475661	316.	SHUBH VEHICLES LLP (54ND-54-S1) - 0	328.	RANA MOTORS PVT LTD (CWXX-CW-01), SURVEY NO. 217, KUDANA ROAD BYPASS, SANWER (MP).
287.	POPULAR VEHICLES & SERVICES LTD (16NC-16-01), SURVEY NO 39,40,59 & 75, NEAR LOURDE FORANE CHURCH, NEAR PMG JN, TRIVANDRUM - 695004	DEPALPUR		317.	SHUBH VEHICLES LLP (54ND-54-01), 297/14 MILE LAL BUNGLOW TILHARI JABALPUR - 482020	SATNA	
THRISSUR		302.	OCEAN MOTORS PVT LTD (WBNA-WB-01), SURVEY NO. 27/1 TAKIPURA, BETMA ROAD, DEPALPUR, INDORE, MADHYA PRADESH - 453115	318.	STANDARD MOTOCORP PVT LTD (54NC-54-01), KHASRA NO-529/1/1, NEAR TRIPURI CHOWK GARHA JABALPUR M. P - 482003 PH :9773543358.	329.	CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (D7NA-D7-01), BEHIND NEXA SHOWROOM, 666/2, AMOUDHA, PANNA ROAD, SATNA, MADHYA PRADESH - 485001 PH :6262230999.
288.	BRD CARWORLD LIMITED (A4NA-A4-S1) - 0	DEWAS		319.	STANDARD MOTOCORP PVT LTD (54NC-54-03), UKHARI TIRAHA, OPPOSITE TO RAMESHWARAM WATER TANK, MR-4 ROAD, VIJAY NAGAR, JABALPUR (M.P.)	SHAHDL	
289.	POPULAR VEHICLES & SERVICES LTD (A4NB-A4-01), SURVEY NO 62/P CHUNGAM,OLLARI, KANJANI ROAD, ARANATTUKARA VILLAGE, THRISSUR - 680618 - 680618	303.	UNITARA MOTORS PVT LTD (3QNB-3Q-01), 3, YAMUNA NAGAR, AB ROAD, DEWAS 455001 - 455001	KATNI		330.	STANDARD MOTOCORP PVT LTD (SFAN-SAF-01), KHASRA NO-459, VILLAGE JAMUI NEAR BAGHEL DHABA, BUDHAR ROAD, SHAHDOL (M.P.)
290.	BRD CARWORLD LIMITED (A4NA-A4-01), CHIYYARAM VILLAGE , VILLAGE THRISSUR	304.	UNITARA MOTORS PVT LTD (3QNB-3Q-S1)	KHARGONE		SINGRAULI	
MADHYA PRADESH		DHAR		321.	NIMAR MOTORS PRIVATE LIMITED (NEXA DIVISION) (AUNA-AU-01), SANAWAD ROAD ,JETAPUR KHARGONE - 451001	331.	CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (JUNA-JJ-01), KHASRA NO.- 3055, NAUGARD TEHSIL, SINGRAULI (MP)
ASHOK NAGAR		GUNA		KUKSHI		UJJAIN	
291.	PREM MOTORS PVT LTD (DSNA-DS-01), WARD NO 1 , KHASRA NO 67/2/3 , NEAR RAJMATA CHAURAHA , GUNA BYPASS ROAD , AKSHARDHAM COLONY , ASHONAGAR	306.	PREM MOTORS PVT LTD (S3NA-S3-01), SURVEY NO. 352, KASHONDA, AB ROAD, GUNA (M.P.)	322.	OCEAN MOTORS PVT LTD (BION-BI-01), PLOT NO 464 , VINAYAK COMPLEX INDORE KUKSHI ROAD	332.	YUG CARS (A UNIT RUKMARANI MOTORS PVT LTD) (3WNA-3W-01), 59/1, DEWAS ROAD, ADARSH NAGAR, NAGZIRI, UJJAIN - 456664 PH :9755512100.
BHOPAL		GWALIOR		MANDLA		333.	YUG CARS (A UNIT RUKMARANI MOTORS PVT LTD) (3WNA-3W-02), 1/2/3, UJJAIN DEWAS ROAD, UJJAIN, MADHYA PRADESH. - 456001
292.	JEEWAN MOTORS PVT LTD (03NB-03-S1) - 0	307.	NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT. LTD.) (30NB-30-01), MAHARANA PRATAP CHOWRAHA, GOLE KA MANDIR, GWALIOR, MADHYA PRADESH. - 474005	MANDSAUR		VIDISHA	
293.	OCEAN MOTORS PVT LTD (03ND-03-S1) - 0	308.	PREM MOTORS PVT LTD (30NA-30-S1) - 0	323.	STANDARD AUTO (WDNA-WD-01), KHASRA NO-44/1, BINJHIA, JABALPUR ROAD, MANDLA, MADHYA PRADESH-481661.	334.	RAJURUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (AYNA-AY-01), PLOT NO 349-3 (RG.NO 239/1, 240/242), AHMADPUR CHAURAHA, WARD NO. 29, VIDISHA (MP)
294.	OCEAN MOTORS PVT LTD (03ND-03ND-01), PLOT NO-54 & 55, SECTOR-A, GOVINDPURA INDUSTRIAL AREA, JK ROAD, BHOPAL	309.	PREM MOTORS PVT LTD (30NA-30-01), SURVEY NO 442/2 , JHANSI ROAD , MAHAGAOAN , GWALIOR	MORENA		MAHARASHTRA	
295.	RAJURUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (03NC-03-01), 42, 6, BLOCK, BHEL INDUSTRIAL ESTATE, HABIBGANJ, HOSHANGABAD ROAD, BHOPAL (M.P.)	INDORE		324.	PATEL MOTORS (INDORE) PVT LTD (WCNA-WC-01), SURVEY NO 362/6, OPP KRISHI UPJ MANDI, MHOW NEEMUCH ROAD, MANDSAUR (MP).	AHMEDNAGAR	
296.	RAJURUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (03NC-03-S2)	310.	OCEAN MOTORS PVT LTD (53NB-53-01), BICHOLI MARDANA NEAR SAMPATH PALACE OPP HOTEL PRIDE - 452001	NEEMUCH		335.	KANKARIYA AUTOMOBILES PVT LTD (A5NA-A5-01), SH-60,NEWASA ROAD ,NAGARDEOLE,AHMEDNAGAR,MAHARASHTRA - 414601 PH :9403961522.
297.	RAJURUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (03NC-03-S1) - 0	311.	PATEL MOTORS (INDORE) PVT LTD (53NA-53-01), 1105/1528/5/2, MIN-1 AND 1105/1528/4/5, GRAM: KHAJURANA, DISTRICT: INDORE, KANADIA ROAD, INDORE (M.P.) - 452016 PH :7771002581.	SAGAR		AKOLA	
BIAORA		312.	RANA MOTORS PVT LTD (53ND-53-01), LASUDIA MORI, DEWAS NAKA, INDORE, PIN CODE 452010 - 452010 PH :9933055539.	326.	PATEL MOTORS (INDORE) PVT LTD (3TNA-3T-01), KHASRA NO -1973/1&1975/2, MHOW - NEEMUCH ROAD, NEEMUCH - MADHYA PRADESH - 458441	336.	ASPA BANDSONS AUTO PVT LTD (F1NA-F1-01), SHIVANI AIRPORT AREA, AKOLA - MAHARASHTRA (444001) - 444001
CHHINDWARA		313.	RUKMANI MOTORS PVT LTD (53NC-53-01), RUKMANI MOTORS NEXA SERVICE,FOOTHI OTHI SQUARE,OPP.DASTOOR GARDEN,INDORE - 452002 PH :9755512100.			ALANDI	
DAMOH						337.	MY CAR (PUNE) PVT LTD (GJPN-GJP-01), SURVEY NO 214/1, PUNE ALANDI ROAD, KALE WASTI , VILLAGE CHARHOLI BURDUK , ALANDI - 412105

ALIBAG

338. SIMRAN MOTORS PVT LTD (3XNA-3X-01), 31/1/B
MOJJE VESHWI, GRAM PANCHAYAT VESHWI,
TALUKA ALIBAG, DISTT RAIGAD

AMRAVATI

339. ASPA BANDSONS AUTO PVT LTD (F2NA-F2-01),
F32/1 MIDC, AURANGABAD NAGPUR EXPRESS
HIGHWAY, AMRAVATI, MAHARASHTRA - 444607
PH-9130041513.

AURANGABAD

340. AUTOMOTIVE MANUFACTURERS PVT LTD
(21NB-21-01), PLOT NO :- L-3/1, BETWEEN
GARWARE & WOCKHARDT LTD, JALGAON
ROAD, MIDC CHIKALTHANA AURANGABAD PIN :-
431006, MAHARASHTRA - 431006
PH-9970499273.
341. PAGARIYA AUTO PVT LTD (21NA-21-01), OPP
AIRPORT, NEXT TO INDIAN OIL PETROL PUMP,
JALNA ROAD, AURANGABAD, MAHARASHTRA -
431006
PH-8888859502.

BADLAPUR

342. AHER AUTOPRIME LLP (90NA-90-01), MUKTA
AUTOMOBILES, BHARAT COLONY, NEAR
SHANTI NAGAR, WATER TANK ROAD,
BADLAPUR WEST 421503 - 421503

BARAMATI

343. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD
(7RNA-7R-01), BHIGWAN ROAD, SHIV NAGAR,
BARAMATI (MAHARASHTRA)
PH-9850994014.

CHANDRAPUR

344. BARBATE AUTOMOTIVE (INDIA) PVT LTD
(H3NA-H3-01), PLOT NO 15-18, OUT OF SURVEY
NO 14/4, 15/5, MAUZA BADOLI, NAGPUR
CHANDRAPUR HIGHWAY, CHANDRAPUR,
MAHARASHTRA - 440025
PH-8380887666.
345. BARBATE AUTOMOTIVE (INDIA) PVT LTD
(H3NA-H3-S1) - 0

CHIKHLI

346. KATARIA AUTOMOBILES (BCBN-BCB-01),
SURVEY NO. 678/5 AND 7, NEAR SHIV KRUPA
HOTEL, NH 48 HIGHWAY, THALA, CHIKHLI,
GUJARAT - 396521 - 396521

DHULE

347. SEVA AUTOMOTIVE PRIVATE LIMITED
(P3NA-P3-01), PLOT NO. F-1, ADDITIONAL
DHULE INDUSTRIAL AREA, DHULE,
MAHARASHTRA - 424006

GONDIA

348. BARBATE AUTOMOTIVE (INDIA) PVT LTD
(20NA-4C-03), HIMGIRI LAYOUT, KAWLEWADA
ROAD, GONDIA - 795140

INDAPUR

349. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD
(NQNA-NQ-01), GAT NO 212/1/B, PUNE
SOLAPUR ROAD, INDAPUR, DISTRICT PUNE

JALGAON

350. MANRAJ AUTOMOBILES PVT LTD (C4NB-C4-01),
P 93, MIDC, R L CHOWK, AJANTA ROAD,
JALGAON, MAHARASHTRA - 425003 - 425003

JALNA

351. AUTOMOTIVE MANUFACTURERS (BCNA-BC-01)

KALYAN

352. AHER AUTOPRIME LLP (IXNA-IX-01), SHOP
NO-2, ALLIANCE HERITAGE, NEXT TO
RELIANCE PETROL PUMP, KON GAON,
KALYAN-BHIWANDI ROAD, TAL - BHIWANDI
421311 - 421311

KHARGHAR

353. SIMRAN MOTORS PVT LTD (AACN-AAC-01),
60/72, JAWAHAR COOPERATIVE INDUSTRIAL
ESTATE, KALAMBOLI, KHARGHAR, MUMBAI,
MAHARASHTRA - 410209

KOLHAPUR

354. SAI SERVICE PVT LTD (38NA-38-01), 1243/66, E
WARD, SHIVAJI UDHYAMNAGAR, KOLHAPUR -
416001
PH-9923208401.
355. SAI SERVICE PVT LTD (38NA-38-02), PLOT NO.
C-6, SHIROLI MIDC, KOLHAPUR,
MAHARASHTRA.

LATUR

356. AUTOMOTIVE MANUFACTURERS PVT LTD
(V8NA-V8-01), C-4/1319/1, SURVEY NO. 89/C,
RING ROAD BETWEEN BABHAGAON CHOWK
AND GARUD CHOWK, PO & DIST LATUR,
MAHARASHTRA - 413512 - 413512

LONAVALA

357. SEHGAL AUTORIDERS PVT LTD (CGAN-CG-01),
GALI NO. 735/1, WAKSAI, LONAVALA,
TALUKA MAVAL, DISTRICT PUNE,
MAHARASHTRA-410405 - 410405

MANGAON

358. MY CAR (PUNE) PVT LTD (BAMN-BA-01), SHOP
NO 17, 18, 19, 20, SURVEY NO 55/1, 55/2 MUMBAI
GAO HIGHWAY,
TAHSIL MANGAON, DISTRICT RAIGAD

MUMBAI

359. FORTPOINT AUTOMOTIVE (CARS) PVT LTD
(05NJ-05-S1) - 0
360. KTS AUTOMOTORS PVT LTD (05NH-05-01), UNIT
NO A1, PANNAAL COMPOUND, LBS KANTIAL
MAGANLAL ESTATE, L.B.S MARG, BHANDUP
(W), MUMBAI - 400078

361. MY CAR (PUNE) PVT LTD (05NK-05-01), PLOT
NO- GEN-25 & GEN-25 B/1, TTC INDUSTRIAL
AREA, PAWAN, NAVI MUMBAI, MAHARASHTRA
(400709) - 0

362. MY CAR (PUNE) PVT LTD (05NK-05-S1) - 0

363. MY CAR (PUNE) PVT LTD (05NL-05-01), PLOT
NO. B-21 & B-24/1, THANE INDUSTRIAL AREA,
THANE, MAHARASHTRA - 400604

364. SAI SERVICE PVT LTD (05NB-05-01), JOSEPH
CARDIUM TECHNICAL SCHOOL, KHASHABA
JADHAV MARG, OFF DR. AMBEDKAR ROAD,
DADAR (EAST) MUMBAI, MAHARASHTRA -
400014

365. SHIVAM AUTOZONE INDIA PVT LTD
(05ND-05-S1) - 0

366. SHIVAM AUTOZONE INDIA PVT LTD
(05NE-05-01), PLOT NO. 1 & 2, RAMCHANDRA
LANE EXTN, KANCHPADA, OFF LINK ROAD,
MALAD-WEST - 400064
PH-9870938888.

367. SHIVAM AUTOZONE INDIA PVT LTD
(05ND-05-01), PLOT NO SILVER HOUSE, 110
MIDC, ROAD NO 13, MAROL, ANDHERI (EAST),
MUMBAI, MAHARASHTRA - 400069

NAGPUR

368. BARBATE AUTOMOTIVE (INDIA) PVT LTD
(20NA-20-01), 37/2, MANISH NAGAR, BESA T
POINT, BESA ROAD NAGPUR 440025 - 440025

369. BARBATE AUTOMOTIVE (INDIA) PVT LTD
(20NA-20-02), C-48/1, MIDC HINGNA MAIN ROAD,
WADI, NAGPUR, PIN-440028, MAHARASHTRA -
440028

370. ARUN MOTORS PRIVATE LIMITED (20ND-20-01),
PATNI ARCADE, C-48/1, MIDC HINGNA MAIN
ROAD, NAGPUR - 440028

NANDED

371. SEVA AUTOMOTIVE PRIVATE LIMITED
(68NA-68-01), AIRPORT ROAD, SANGVI - 431605
PH-7065026520

NARAYANGAON

372. KOTHARI AUTO WHEELS PRIVATE LIMITED
(FVNA-FY-01), WARULWADI, NH-50,
NARAYANGAON - 410504

NASHIK

373. SEVA AUTOMOTIVE PRIVATE LIMITED
(37NA-37-01), PLOT B-17, MIDC, AMBAD, NASIK,
MAHARASHTRA - 422010
PH-8975762303.

374. SHAAN CARS PVT LTD (37NB-37-01), PLOT E-2,
MIDC SATPUR, NASHIK, MAHARASHTRA -
422010

375. AUTOMOTIVE MANUFACTURERS LIMITED
(37NC-37-01), PLOT NO P/1/2, MIDC, AMBAD
, NASHIK - 422010

PALGHAR

376. SAI SERVICE PVT LTD (TENA-TE-01), MAHAVIR
NIRMAN, RAILWAY STATION ROAD, PALGHAR.
PANDARPUR

377. CHAVAN MOTORS DIVISION INDIA PVT LTD
(0HNA-0H-01), GAT NO. 94/1/42 & 94/1/43,
ISBAVI, WAKHARI ROAD, PANDHARPUR,
DISTRICT SOLAPUR, MAHARASHTRA - 413304 -
413304

PARBHANI

378. PAGARIYA AUTO PVT LTD (LNNA-LN-01), PLOT
NO. 857, OPPOSITE IOC PUMP, BASMAT ROAD,
PARBHANI

PHALTAN

379. CHOWGULE INDUSTRIES PVT LTD
(KHNA-KH-01), SR NO 83/2A/A2, PUNE
PANDHARPUR ROAD, PHALTAN, DIST SATARA

PUNE

380. EXCELL AUTOVISTA PVT LTD (19NG-19-01),
SURVEY NO 98/2A/P, NEW PUNE - MUMBAI
HIGHWAY, NEAR BALEWADI STADIUM, BANER
TALUKA, PUNE - 411045

381. KOTHARI AUTO WHEELS PRIVATE LIMITED
(19NU-19-01), GATE NO 1605, OLD 1099,
KESNAND ROAD, WAGHOLI, TAL-HAVELI,
DISTRICT - PUNE, MAHARASHTRA - 412207

382. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD
(19NI-19-01), NEAR SADGURU PETROL PUMP,
PUNE NASHIK HIGHWAY, AT KURALI, KHED
TALUKA, CHAKAN, PUNE - 410501
PH-9923589214.

383. MY CAR (PUNE) PVT LTD (19NA-19-S1) - 0

384. SAI SERVICE PVT LTD (19NC-19-01), SINHAGAD
ROAD, NEAR NANDED CITY, VADGAON KHURD,
PUNE, (MAHARASHTRA)
PH-9923308333.

385. SEHGAL AUTORIDERS PVT LTD (19NE-19-01),
SURVEY NO 63/2, SHEWALEWADI, MANJARI
BUDRUK, PUNE SOLAPUR HIGHWAY, PUNE,
MAHARASHTRA - 412307
PH-9158000049.

386. WONDER CARS PVT LTD (19ND-19-S1) - 0

387. WONDER CARS PVT LTD (19ND-19-01), PLOT
NO 52/1 BLOCK F2, MIDC PIMPRI, PUNE -
411019
PH-9850094151.

388. CHOWGULE INDUSTRIES PVT LTD
(19NH-19-01), 43/1, OFF KARVE ROAD,
KOTHRUD, OPPOSITE LILAVATI APARTMENT,
PUNE - 111045

PUNE (AMBEGAON)

389. MY CAR (PUNE) PVT LTD (19NM-19-01)

RATNAGIRI

390. JAGRUT MOTORS PVT LTD (G3NA-G3-01), 4106/1B, SALVI STOP, SHIVAJI NAGAR MAIN ROAD RATNAGIRI, MAHARASHTRA - 415612 PH :9820039626.
- SANGAMNER**
391. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD (HENA-HE-01), AHMADNAGAR
- SANGLI**
392. CHOWGULE INDUSTRIES PVT LTD (J1NA-J1-01), 118/21/ KUBERA CHAMBERS, MAHAVIRNAGAR, SANGLI (MAHARASHTRA) - 416416
393. CHOWGULE INDUSTRIES PVT LTD (J1NA-J1-S1) - 0
- SASWAD**
394. CHOWGULE INDUSTRIES PVT LTD (PHNA-PH-01), SURVEY NO. 611/1, NEAR INDIAN OIL PETROL PUMP, VILLAGE SASWAD, PUNE, MAHARASHTRA - 412301
- SATARA**
395. CHOWGULE INDUSTRIES PVT LTD (F3NA-F3-01), GATE NO 158/1/5B, PROPERTY NO.823, NEAR VIGHANHARTA SOCIETY COLONY B, MEDHA ROAD, AT/POST-KONDAVE, TALUKA-SATARA
- SHIKRAPUR**
396. KOTHARI AUTO WHEELS PRIVATE LIMITED (GKJN-GKJ-01), GAT NO. 1491/1B, PUNE NAGAR ROAD, SHIKRAPUR, TALUKA SHIRUR, PUNE - 412208 - 412208
- SHILPHATA**
397. VELOX MOTORS PRIVATE LIMITED (SGJN-SGJ-01), PLOT NO. 99, KALYAN SHIL ROAD, SHILPHATA - 410203
- SINNAR**
398. SHAAN CARS PVT LTD (FUNA-FU-01), SURVEY NO 932/2, NEAR UDYOG BHAVAN, SINNAR, MAHARASHTRA - 422103 - 422103
- SOLAPUR**
399. CHAVAN MOTORS DIVISION INDIA PVT LTD (B1NA-B1-01), SURVEY NO. 534/4, BALE PUNE ROAD, SOLAPUR, MAHARASHTRA - 413224 - 413224 PH :8888881314.
- TALEGAON DABHADE**
400. MY CAR (PUNE) PVT LTD (4KNA-4K-01), SR. NO. 408/8, OLD MUMBAI FUNE HIGHWAY, LIMB PHATA, TALEGAON DABHADE, TAL - MAVAL, DIST. - PUNE
- THANE**
401. AUTOMOTIVE MANUFACTURERS PVT LTD (39NB-39-01), NERUL, MUMBAI PUNE HIGHWAY, NAVI MUMBAI - 400706 PH :9769206120.

402. AUTOMOTIVE MANUFACTURERS PVT LTD (39NB-39-S1) - 400706
403. EXCELL AUTOVISTA PVT LTD (39NA-39-01), MOHAN MILL COMPOUND, GHODBUNDER ROAD , THANE, MAHARASHTRA - 400607 PH :9667331726.
404. EXCELL AUTOVISTA PVT LTD (39NA-39-02), NEAR ARIHANT COMPOUND, KALHER, BHIWANDI, THANE - 400607 PH :9667331726.
405. KIRAN MOTORS MAHARASHTRA (A DIVISION OF KIRAN MOTOS LIMITED) (39ND-39-01), BHOIR COMPOUND, FOUNTAIN JUNCTION, OFF NATIONAL HIGHWAY 8, VILLAGE - VARSOVA, GHODBUNDER, DISTRICT - THANE (MAHARASHTRA) 401104 - 401104
406. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (39NE-39-01)
- WADA**
407. SHIVAM AUTOZONE INDIA PVT LTD (BXDN-BXD-01), NO. 417/15, NEAR SNEH GARDEN, VILLAGE GANDHARE, WADA KUDUS BHIWANDI ROAD, WADA, DISTRICT PALGHAR, MAHARASHTRA - 421303
- YAVATMAL**
408. HIMALAYA CARS (4MNA-4M-01), PLOT NO. 14, MIDC, YAVATMAL INDUSTRIAL AREA, YAVATMAL

MANIPUR

- IMPHAL**
409. EASTERN MOTORS (74NA-74-01), NEW PATTA NO.30, DAG NO. 99, ASIAN HIGHWAY 1(NH 102) , IMPHAL - 795140

NAGALAND

- DIMAPUR**
410. PROGRESSIVE MOTORS (32NA-32-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, - 797115 PH :7669223736.
- KOHIMA**
411. SEYIE AUTO (4NNB-4N-01), NEAR IG STADIUM, MARIEMA, KOHIMA, NAGALAND - 797001

ODISHA

- BALASORE**
412. JYOTE MOTORS (BALASORE) PVT LTD (LSNA-L5-01), PLOT NO- 385, GANESHWARPUR, REMUNA, JANUGANJ,BALASORE, ODISHA 756019 - 756019
- BARIPADA**
413. JYOTE MOTORS PRIVATE LIMITED (RQNA-RQ-01), KARTABASHA , WARD NO 32 BALASORE JHARPOKRIA ROAD , BAGDIHA , BARIPADA - 757001

BERHAMPUR

414. SKY AUTOMOBILES (E2NA-E2-01), PLOT NO 373/2229 & 373/1204, AMABAPUA MOUZA, BRAHMAPUR (ODISHA) - 760007

BHUBANESHWAR

415. JYOTE MOTORS PVT LTD (04NA-04-S1) - 0
416. NARAYANI MOTORS PVT LTD (04NC-04-01), PLOT NO 140/2004, KHATA NO -1152/364, UNIT-20, JAGAMARA, KHANDGIRI, CHAWAK, BHUBANESHWAR - 0
417. NARAYANI MOTORS PVT LTD (04NC-04-S1) - 0
418. SKY AUTOMOBILES (04NB-04-01), BAPUJI NAGAR, SHREE VIHAR CHANDRASEKHARPUR ROAD, BHUBANESWAR - 751017 - 751017

BHUBANESWAR

419. TUSHI MOTORS PRIVATE LIMITED (04ND-04-01), IDCO SHED NO.: B/18, UNIT NO.: 12, BOMIKHAL, PS- RASULGARGH - 751010

JEYPORE

420. LEGEND CARS PRIVATE LIMITED (SWNA-SW-01), NH26, OPPOSITE HOTEL HELLO, INDUSTRIAL ESTATE, JEYPORE, ODISHA

JHARSUGUDA

421. ODYSSEY MOTORS PVT LTD (D4NA-BJU-02), POWER HOUSE ROAD, SARBAHAL,JHARSUGUDA-768201 (ODISHA) - 768201

PARADEEP

422. NARAYANI MOTORS PVT LTD (OENA-OE-01), DO-CHHAKI, PARADEEP - CHANDIKHOL RD, PARADEEP, ODISHA 754141

ROURKELA

423. ORBIT MOTORS PVT LTD (87NA-87-01), PLOT NO 5G/3, VED VYAS, SUNDARGARH, ROURKELA - 769041 PH :9165071234.

SAMBHALPUR

424. ODYSSEY MOTORS PVT LTD (D4NA-D4-01), SAMBALPUR, CHOWK, REMED, ODISHA 768006 - 768006

ORISSA

- JAIPUR**
425. SKY AUTOMOBILES (RZNA-RZ-01), PANIKOLI JAIPUR ROAD,JAIPUR

PUDUCHERRY

KARAIKAL

426. SHENBAKA CARS (CCFN-CC-01), RESY. NO. 38/16-A, POOVAM VILLAGE, KARAIKAL, PUDUCHERRY. - 609609

PUNJAB

AMRITSAR

427. JAYCEE MOTORS PRIVATE LIMITED (17NC-17-01), JAYCEE MOTORS, VERKA BYE PASS, OUTSIDE ASHBERRY HOMES, VILLAGE VALLAH, AMRITSAR, PUNJAB - 143501

BATALA

428. PATHANKOT VEHICLEADES PVT LTD (V5NA-V5-01), HARDO JANDE , GT ROAD, BATALA

BHATHINDA

429. TARA AUTOMOBILES (70NA-70-01), KHASRA NO. 3534, NEAR ITI CHOWK, MANSA ROAD, BHATHINDA, PUNJAB - 151001 PH :8437019666.

GURDASPUR

430. PATHANKOT VEHICLEADES (4XNA-4X-01), KHASRA NO. 24/1, 24/2, 25/1, KHEWAT NO. 54/55, SITUATED AT BABRI NATIONAL HIGHWAY, GURDASPUR, PUNJAB.

HOSHIARPUR

431. HOSHIARPUR AUTOMOBILES (H4NA-H4-S1) - 0
432. HOSHIARPUR AUTOMOBILES (H4NA-H4-01), SHED NO 11 A & 12 A, INDUSTRIAL ESTATE JALANDHAR ROAD HOSHIARPUR, 14602 - 14602

JALANDHAR

433. LOVELY AUTOS (35NA-35-01), NH 1 GT ROAD, PRAGPUR, JALANDHAR PUNJAB
434. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT LTD) (35NC-35-01), KHASRA NO - 16450, SITUATED AT RAJA GARDEN, KAPURTHALA ROAD, JALANDHAR CITY. - 144003 PH :9915944600.

KAPURTHALA

435. LOVELY AUTOS (4ZNA-4Z-01), KEVAT KHATA NO. 1140/1400, KHASRA NO. 2362/273-19, OPPOSITE NEW SABJI MANDI, SULTANPUR ROAD, KAPURTHALA CITY, PUNJAB

KHANNA

436. HOSHIARPUR AUTOMOBILES (N3NA-N3-01), H B NO. 221, KHAWAT NO. 231, ALOUR, KHANNA

LUDHIANA

437. GULZAR MOTORS PVT LTD (62NE-62-01), PLOT NO 2662 NEAR SILVER ARC MALL, AARTI CHOWK, LUDHIANA, PUNJAB - 141003 PH :9814839777.
438. HOSHIARPUR AUTOMOBILES (62NG-62-01), S-46/1616/1, G.T. ROAD, DHOLEWAL CHOWK, LUDHIANA, PUNJAB - 141003 PH :8872501234.
439. LOVELY AUTOS (62NF-62-01), 287/1, MOTI NAGAR, SHERPUR BYPASS, GT ROAD, LUDHIANA - 141010 PH :9875999161.

440.	MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT LTD) (B2NH-B2-01), OPP. MEDWAYS HOSPITAL, FEROPZPUR ROAD, LUDHIANA - 141015 PH :8872000357.	441.	TARA AUTOMOBILES (TLNA-TL-01), NEAR TEENKONI, SIRSIA MANSA FLY OVER , MANSA, PUNJAB.	442.	REMIRA MOTORS PVT LTD (H6NA-H6-S1) - 0	443.	CM AUTOSALES PRIVATE LIMITED (L1NA-L1-01), C-155, INDUSTRIAL AREA, PHASE-7, MOHALI	444.	DIVINE AUTOWORLD LLP (UFNA-UF-01), RADHA SWAMI BYPASS ROAD, ADJOINING PUNJAB FURNITURE PALACE, NABHA, DIST. PATIALA, PUNJAB - 147201	445.	LOVELY AUTOS (35NA-SB-02), KHASRA NO. 46/26 SHOWROOM NO. 1, NEAR ST. JUDE'S CONVENT SCHOOL, OPP. THE PALM, NAKODAR, JALANDHAR - 144040	446.	LOVELY AUTOS (J7NA-J7-01), VILL. LANGROYA, CHANDIGARH-NAWANSHAHR ROAD, DIST. NAWANSHAHR (S.B.S. NAGAR) - 144516 PH :9915028682.	447.	PATHANKOT VEHICLELEADS PVT LTD (ATNA-A7-01), PLOT NO.-C-30, INDUSTRIAL GROWTH CENTRE, VILL. CHACELI, PATHANKOT - 145023 PH :7527006800.	448.	DIVINE AUTOWORLD LLP (HKNA-HK-01), VILLAGE BHADAK, RAJPURA-PATIALA HIGHWAY, RAJPURA, PATIALA	449.	MAX AUTOMOBILES (G4NB-G4-01), VILL. BHINDRAN, PATIALA ROAD, SANGRUR PIN - 148001 - 148002	450.	JAYCEE MOTORS PRIVATE LIMITED (BLPN-BL-01), KHASRA NO 22/22(1-6), 22/9(3-4) 22/15(1/11-8) 22/12(0-8) 22/15(12/3-0) 22/17(0-16) SARHALI- AMRITSAR ROAD, NEAR MAJHA PUBLIC SCHOOL, TARN TARAN, PUNJAB	451.	NAVNEET MOTORS (B2NA-B2-01), PLOT NO7 -8,RIICO INDUTRAL ESTATE MAKHAPURA NASIRBAD ROAD, AJMER(RAJASTHAN)-PIN CODE-305002 - 305002 PH :9414149149.	452.	FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (F9NA-F9-01), 6TH MILESTONE VILLAGE JATIYANA,OPP. PETROL BEHROR ROAD ALWAR - 301001 PH :9982341741.	453.	ODYSSEY MOTORS PVT LTD (W1NA-W1-01), NH 55, KANDASAR, NALCO NAGAR, ANGUL, ODISHA, 759145	454.	PREM MOTORS PVT LTD (USNA-US-01), KHASRA NO. 64/1104, NH-8, AJMER ROAD, NEAR SANSKAR COLLAGE, BAGRU (RAJASTHAN)	455.	BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (PMNA-CTG-01), ATRU ROAD, BARAN, RAJASTHAN. - 325205	456.	LMJ SERVICES LTD (SHNA-SH-01), KHASRA NO. -1665/42, NH-68, OPP. CHOWDHARY PETROL PUMP, BARMER, RAJASTHAN.	457.	TM MOTORS PVT LTD (5JNA-5J-S1) - 0	458.	CHAMPION CARS (A UNIT OF PREM CARS PVT LTD) (E3NA-E3-01), NEXA SUKHADIA CIRCLE, CHAMPION CARS, AJMER ROAD, BHIWLARA - 311001 PH :9001027933.	459.	FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9HNA-9H-01), KHASRA NO 990/1329 VILLAGE KHUJURIWAS, OPP MATILA POLICE CHOWKI, BHIWADI (RJ) - 301019	460.	AURIC MOTORS PRIVATE LIMITED (71NA-71-01), PLOT NO. F-189, SRI GANAGANAGAR ROAD, OPPOSITE RAC-3RD, BICHHWAL INDUSTRIAL AREA, BIKANER 334001 - 334001 PH :9887222786.	461.	VIPUL MOTORS (71NB-71-01), E-62, PHASE -1, BICHHWAL INDUSTRIAL AREA, BIKANER (RJ) - 334001	462.	KTIL AUTOMOBILE (JMNA-JM-01), KHASRA NO. 2937, TONK ROAD CHAKSU, JAIPUR - 303901	463.	AURIC MOTORS PRIVATE LIMITED (SYNA-SY-01), WARD NO.-15, NEAR DOBI, CHIRAWA (RAJASTHAN)	464.	TECHNOY MOTORS INDIA PVT LTD (K9NA-K9-01), PLOT NO-28, OLD RIICO INDUSTRIAL AREA, CHITTORGARH, RAJASTHAN - 312001	465.	TECHNOY MOTORS INDIA PVT LTD (K9NA-'03-S1) - 0	466.	VIPUL MOTORS PVT LTD (FMNA-FM-01), 1365, RAJPOOT COLONY, JAIPUR ROAD, DAUSA	467.	FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (S0NA-S0-01), (KHASRNA NO 771,772, SH 1 , ROAD WAYS BUS STAND , PHULWARA , HNDDAUN CITY , KARAU LI	468.	KP AUTOMOTIVES PVT LTD (11NB-11-01), PLOT NO.3-4, MANGLAM RIICO INDUSTRIAL AREA,NEAR KANAKPURA RAILWAY STATION, SIRSI ROAD - 302034 PH :7412058823.	469.	PREM MOTORS PVT LTD (11NC-11-01), PLOT NO- 12,13,14, SUDARSHANPURA INDUSTRIAL AREA, NEAR 22 GODAM, JAIPUR	470.	PREM MOTORS PVT LTD (11NC-11-S1) - 0	471.	SATNAM MOTOCORP PVT LTD (11ND-11-S1) - 0	472.	SATNAM MOTOCORP PVT LTD (11ND-11-01), D-27, K/LM, ROAD NO.3,SIKAR ROAD, VISHWAKARMA INDUSTRIAL AREA ,JAIPUR, RAJASTHAN-302023. - 302023 PH :9649373311.	473.	VIPUL MOTORS PVT LTD (11NA-11-S1) - 0	474.	KTIL AUTOMOBILE PVT LTD (11NF-11-01), PLOT NO.- F-131, RIICO, MALVIYA NAGAR, JAIPUR (RAJ) - 302034	475.	SATNAM MOTOCORP PVT LTD (11ND-11-02), E-50, ROAD NO.3, SIKAR ROAD, VKIA, JAIPUR, PIN-302013	476.	BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (RVNA-RV-01), NEAR RAILWAY BRIDGE , GINDORE, TALUKA JHALARAPATAN, JHALAWAR, RAJASTHAN	477.	AURIC MOTORS PRIVATE LIMITED (FNNNA-FN-01), NEAR TVS TWO WHEELER SHOWROOM ROAD NO 3 GUDHA MOD, RAJASTHAN 333001 - 333001 PH :7970006402.	478.	AURIC MOTORS PRIVATE LIMITED (65NA-65-01), 14 A, HEAVY INDUSTRIAL AREA, ITI CIRCLE, SARASH DAIRY ROAD, JODHPUR - 334001 PH :7300077394.	479.	LMJ SERVICES LTD (65NB-65-01), B-8, C-9,10, MIA, BASNI, PHASE-1 JODHPUR - 342009 PH :7412087320.	480.	LMJ SERVICES LTD (65NB-65-02), PLOT NO -61, GERU MARKET, BHADWASIYA FRUIT MANDI, JODHPUR, RAJASTHAN - 342001 PH :8094011126.	481.	BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (61NA-61-01), G-11A, AUTOMOBILE ZONE, IPIA, NEAR DAKANIYA RAILWAY STATION, KOTA - 324005 PH :8094011126.	482.	SHRI MANGALAM AUTO PVT LTD (HLNA-HL-S1) - 0	483.	LMJ SERVICES LTD (J9NA-J9-01), PLOT NO. 21, SUMERPUR ROAD, PALI, RAJASTHAN. - 306401	484.	TECHNOY MOTORS INDIA PVT LTD (X2NA-X2-01), P.NO. F-28,29,30, RIICO INDUSTRIAL AREA, DHOINDA, RAJSAMAND (RAJ)	485.	PREM MOTORS PVT LTD (FYNA-FY-01), PLOT NO 9 & 10, RAMNAGAR VANUJAK YOJNA, OPPOSITE INDIAN PETROL PUMP , KHERDA , JEENAPUR,SAWAI MADHOPUR	486.	K.P. AUTOMOTIVES PVT LTD (NHNA-NH-01), 187/7715, DHANI HANUMAN SAGAR, WARD NO. -23, NH-48, SHAHPURA (RAJASTHAN).	487.	JAMU AUTOMOBILES PVT LTD (K7NA-K7-01), THAR PETROL PUMP,JAIPUR ROAD,SIKAR - 332001 PH :9414037515.	488.	AURIC MOTORS PRIVATE LIMITED (BRBN-BRB-01), NEAR AABKAAN THANA, CHAPPAR ROAD, SUJANGARH	489.	CHAKSU	490.	CHAKSU	491.	CHAKSU	492.	CHAKSU	493.	CHAKSU	494.	CHAKSU	495.	CHAKSU	496.	CHAKSU	497.	CHAKSU	498.	CHAKSU	499.	CHAKSU	500.	CHAKSU	501.	CHAKSU	502.	CHAKSU	503.	CHAKSU	504.	CHAKSU	505.	CHAKSU	506.	CHAKSU	507.	CHAKSU	508.	CHAKSU	509.	CHAKSU	510.	CHAKSU	511.	CHAKSU	512.	CHAKSU	513.	CHAKSU	514.	CHAKSU	515.	CHAKSU	516.	CHAKSU	517.	CHAKSU	518.	CHAKSU	519.	CHAKSU	520.	CHAKSU	521.	CHAKSU	522.	CHAKSU	523.	CHAKSU	524.	CHAKSU	525.	CHAKSU	526.	CHAKSU	527.	CHAKSU	528.	CHAKSU	529.	CHAKSU	530.	CHAKSU	531.	CHAKSU	532.	CHAKSU	533.	CHAKSU	534.	CHAKSU	535.	CHAKSU	536.	CHAKSU	
------	--	------	--	------	--	------	--	------	--	------	--	------	--	------	--	------	--	------	---	------	---	------	--	------	---	------	--	------	---	------	--	------	---	------	------------------------------------	------	---	------	---	------	---	------	--	------	--	------	--	------	---	------	--	------	---	------	---	------	--	------	---	------	--------------------------------------	------	--	------	--	------	---------------------------------------	------	--	------	---	------	---	------	---	------	--	------	---	------	---	------	---	------	---	------	--	------	--	------	--	------	--	------	---	------	---	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	------	--------	--

489.	AURIC MOTORS PVT LTD (LGNA-LG-01), PLOT NO. S-6, VRINDAVAN VIHAR, IN FRONT SURATGARH PG COLLEGE, OPP. GSS, MAIN GANGA NAGAR ROAD, SURATGARH, RAJASTHAN	501.	VISHNU CARS PVT LTD (14NG-14-02), POONAMALLEE HIGH ROAD, ARUMBAMAKKAM, KOYAMBEDU, CHENNAI, TAMIL NADU. - 600056 PH :7550333622.	514.	VISHNU CARS PVT LTD (BADN-BAD-01), SY NO. 5/2B & 6/3, GST ROAD, POTHERI, GUDUVANCHERRY, CHENGALPATTU DISTRICT, TAMIL NADU	525.	SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (X4NA-X4-01), SURVEY NO. A, 96/5, SALEM - NAMAKKAL ROAD, NAMAKKAL, TAMIL NADU 637001 - 637001
TONK		502.	CRESO (A UNIT OF NEXGEN VENTURES PVT LTD), (14NK-14-01), SY NO. 56/2, PERIYAR E.V.R SALAI (POONAMALLEE HIGH ROAD), PERIYAMET, CHENNAI - 600003.	HOSUR		OOTY	
490.	KP AUTOMOTIVES PVT LTD (GMNA-GM-01), PLOT NO - 36-39 , NEAR KAMDHENU CIRCLE , JAIPUR ROAD , TONK	503.	KALYANI MOTORS PVT LTD (14NM-14-S1)	515.	SRI AMMAN CARS INDIA PVT LTD (7QNA-7Q-01), NEAR CATER PILLAR WARE HOUSE, SEETHA RAMNAGAR,NH-44,OPP TO ANAND ELECTRONICS, HOSUR, KRISHNAGIRI DISTRICT, TAMILNADU - 635109 PH :841033464.	526.	SREE SARADHAMBAL AUTOMOBILES PVT LTD (41NA-Y1-02), DOOR NO 155/A IN ASSESSMENT NO 60466,UDHAGAMDALAM(OOTY),TAMIL NADU
UDAIPUR		CHIDAMBARAM		KARAIKUDI		PONDICHERRY	
491.	TECHNOY MOTORS INDIA PVT LTD (49NB-49-01), OPP. NAND BHAVAN, GOVERDHAN VILLAS , UDAIPUR	504.	VISHNU CARS PVT LTD (CPKN-CPK-01), TS NO: 1375/5A & 5B, RAJALAKSHMI NAGAR, CHIDAMBARAM BY-PASS LINK ROAD, CHIDAMBARAM -608001.	516.	MEENAKSHI AUTO ZONE PRIVATE LIMITED (HXNA-HX-01), T S NO 624/1, DOOR NO. 5, 1ST STREET, SUBRAMANIPURAM, KARAIKUDI, TAMIL NADU - 630001 PH :9940094881.	527.	SHENBAKA CARS PVT LTD (96NA-96-01), RS NO 50/5A, PONDICHERRY CUDDLORE MAIN ROAD ,KIRUMAMBAKKAM, BAHOR COMMUNE,PONDICHERRY - 607402 PH :7338322220.
492.	NAVNEET MOTORS (49NA-49-01), NEAR MEGNUS HOSPITAL, BHUVANA, UDAIPUR (RAJASTHAN)- 31	COIMBATORE		KARUR		RAJAPALAYAM	
TAMIL NADU		505.	AADHI CARS PRIVATE LIMITED (41NB-41-01), PLOT NO.50-55, ASHOK NAGAR, C-COLONY, TAKKAL PURAM, TRIVANDRUM ROAD,KOKKARAKULAM VILLAGE, PALAYAMKOTTAI, TIRUNELVELI,TAMILNADU - 627007 PH :9003977577.	517.	AADHI CARS PRIVATE LIMITED (K4NA-K4-01), SF NO. 364, SALEM BYPASS, KARUR, TAMIL NADU - 639006	528.	ABT (5VNA-SY-01), NO.490/3, OPPOSITE TO N.A MANJAMMAL POLYTECHNIC COLLEGE, IDYANKULAM PANCHAYAT, RAJAPALAYAM MAIN ROAD, MAMSAAPURAM, RAJAPALAYAM – 626110. - 626110
ATTUR		506.	ABT LIMITED (41NC-41-S1) - 0	KATPADI		SALEM	
493.	SM CAR PVT LTD (QTNA-QT-01), APPAMASAMUDRAM, ATTUR MAIN ROAD, TAMIL NADU - 636010	507.	ABT LIMITED (41NC-41-01), 56, BHARATHI NAGAR, SATHY MAIN ROAD, GANAPATHY, COIMBATORE - 641006	518.	GANESH CARS PVT LTD (C6NA-C6-3), SYNO 613/SA3, CHENNAI ROAD, KATPADI, VELLORE	529.	SM CAR PVT LTD (A2NB-A2-01), S NO 131/1A,BYPASS ROAD, NEAR INDIAN OIL ASSOCIATION, PETROL BUNK, KONDALAMPATTY, SALEM - 636010 PH :7094440010.
CHENGALPET		508.	JAIKRISHNAA AUTOSALES PVT LTD (41ND-41-01), NO. 656, TRICHY ROAD, NEAR ORTHO ONE HOSPITAL, COIMBATORE, TAMIL NADU- 641012 - 641012	KRISHNAGIRI		530.	THRIVENI CAR COMPANY PVT LTD (A2NA-A2-01), 2/6, KANDHAMPATTY,BYE PASS ROAD, SALEM, TAMILNADU - 636005 PH :9786022272.
CHENNAI		509.	SREE SARADHAMBAL AUTOMOBILES PVT LTD (41NA-41-01), 18/1472, S.N.R COLLEGE ROAD, NAVA INDIA, COIMBATORE, AND TAMILNADU-641004. - 641004 PH :9790004271.	KUMBAKUNAM		SRIPERUMBADUR	
495.	ABT LIMITED (14NU-14-01), NO123, KANNIGAPURAM, VELACHERY MAIN ROAD, BEHIND RACE COURSE, GUINDY, CHENNAI, TAMIL NADU - 600032 PH :9994444303.	CUDDALORE		520.	PILLAI & SONS MOTOR COMPANY (N4NA-N4-01), 3133/A, CRESANT NAGAR, CHENNAI BYPASS ROAD, KORANATTU KARUPPUR, KUMBakonam – 612501. - 612501	531.	VISHNU CARS PVT LTD (7BNA-7B-01), SURVEY NO 147/2A, NEW SR. NO : 147/10, CHENNAI -BANGALORE HIGHWAY, SRIPERUMBUDUR, TAMIL NADU 602105. - 602105
496.	KHIVRAJ MOTORS PVT LTD (14NA-14-01), PLOT NO.21, AMBIT IT PARK ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI-600058. - 600058 PH :9626099999.	DHARMAPURI		MADURAI		SULUR	
497.	KHIVRAJ MOTORS PVT LTD (14NA-14-02), OLD S.NO. 11/1 & 2, NEW S.NO.11/2 - B, NO.100, NERKUNDRAM VILLAGE, SAIDAPET TALUK, CHENNAI - 600107	510.	VISHNU CARS PVT LTD (5QNA-SQ-01), SY NO. 1898 & 1909/4, WARD NO.5, BLOCK NO. 50, RAMAKRISHNA AVENUE, CUDDALORE - 607002	521.	ASIR AUTOMOBILES PVT LTD (42NA-42-01), 176, MAIN ROAD, KAMARAJAR ROAD, MADURAI, TAMIL NADU – 625001 - 625001	532.	AADHI CARS PRIVATE LIMITED (TKNA-TK-01), 3/147-4C, ASHWINI MAHAL COMPLEX, TRICHY MAIN ROAD, SULUR, 641401
498.	PILLAI & SONS MOTOR COMPANY (14NC-14-01), DOOR NO.46, MEDAVAKKAM MAIN ROAD, KEELAKATTALAI, CHENNAI, TAMILNADU - 600117 PH :9994950505.	DINDIGUL		MAYILADUTHURAI		TENKASI	
499.	POPULAR VEHICLES & SERVICES LTD (14NB-14-01), 69/A & 69/B, SAMAYAPURAM MAIN ROAD, PORUR, CHENNAI,TAMILNADU- 600116. - 600116 PH :9842389111.	511.	SRI AMMAN CARS INDIA PVT LTD (5RNA-5R-01), SY NO. 5/1 & 1/12, KRISHNAGIRI MAIN ROAD, DHARMAPURI, TAMILNADU.	522.	PILLAI & SONS (AGNA-AG-01), NO.46, VALLALAGARAM, SS NALLUR POST, SIRKALI MAIN ROAD, MAYILADUTHURAI. - 609118	533.	AADHI CARS PRIVATE LIMITED (BXRN-BXR-01), D.NO. 166/4 & 166/5, KUTHUKKALVALASAI, TENKASI
500.	VISHNU CARS PVT LTD (14NG-14-01), SURVEY NO 219, ADJOINING HP PETROL PUMP, POONAMALLEE HIGH ROAD, KATTUPAKKAM, CHENNAI, TAMIL NDU - 600056 PH :7339359111.	ERODE		NAGERCOIL		THANJAVUR	
		513.	SREE SARADHAMBAL AUTOMOBILES ERODE PVT LTD (H7NA-H7-01), NO.75, NEAR SURABI NURSERY, PERUNDURAI ROAD, ERODE, TAMILNADU-638011. - 638011 PH :9786022272.	523.	ATHEN CARS (SSNA-S5-01), NO. G. 3/9, NO. 1197, NELSON COMPOUND, KP ROAD, PARVATHIPURAM, NAGERCOIL, TAMILNADU - 629003 PH :9751196436.	534.	PILLAI & SONS MOTOR COMPANY (E7NA-E7-01), SURVEY NO 237/1, NEELAGIRI THAKUR THOTTAM, VALLAM ROAD, THANJAVUR, TAMIL NADU - 613403 PH :9443264165.
		GUDUVANCHERRY		NAMAKKAL		THENI	

535. MEENAKSHI AUTO ZONE PRIVATE LIMITED
(9UNA-9U-01), SURVEY NO. 120, EAST
RATHINAM NAGAR, PERIYAKULAM MAIN ROAD,
THENI-625531

TIRUNELVELI

536. AADHI CARS PRIVATE LIMITED (A3NA-A3-01),
PLOT NO.50-55, ASHOK NAGAR, C-COLONY,
TAKKALPURAM, TRIVANDRUM ROAD, C1
KOKKARAKULAM

TIRUPUR

537. SHASHTI CAR PVT LTD (Y7NA-Y7-01),
16A-1,SHREE PADMINI GARDENS, KANGAYAM
RD, TIRUPPUR, TAMIL NADU - 641604
PH :9942903310.

TIRUVALLUR

538. KHIVRAJ MOTORS PVT LTD (HHNA-HH-01), 173
A, POONAMALLEE HIGH ROAD, VENGATHUR,
TIRUVALLUR - 602002

TIRUVANNAMALI

539. GANESH CARS PVT LTD (C6NA-LX-02), SURVEY
NO. 63/1A, VENGIKKAL, VELLORE MAIN ROAD,
TIRUVANNAMALI, PIN-606604, TAMILNADU -
-606604

TRICHY

540. PLA MOTORS (23NA-23-01), TS NO.29P,31P &
32P,36P, NEW WARD "E", NEW BLOCK NO.27,
ANNA NAGAR, TRICHY, TAMILNADU - 620017. -
620017
PH :8110099991.

TUTICORIN

541. ASIR AUTOMOBILES PVT LTD (S6NA-S6-S1) - 0

VELLORE

542. GANESH CARS PVT LTD (C6NA-C6-01), 96/6,
CHENNAI-BANGALORE HIGHWAY, NH-46,
PERUMUGAI,VELLORE, TAMILNADU - 632009
PH :984722126.

VILUPPURAM

543. ABT LIMITED (QQNA-QQ-01), NO. 526, 1,
MAMBALAPATTU ROAD, NEAR ES SCHOOL,
MOOVENDAR NAGAR, VILUPPURAM,
TAMILNADU. - 605602

TELANGANA

ARMUR

544. VARUN MOTORS PVT LTD (1HNA-BBN-03),
CHIKKABALLAPUR, KARNATAKA - 562101.

ATTAPUR (HYDERABAD)

545. ADARSHA AUTO (10NM-10-03), H.NO
13-6-434/C/1,PILLAR NO
85,ATTAPUR,HYDERABAD - 500048

BODUPAL (SECUNDERABAD)

546. VARUN MOTORS PVT LTD (K6NA-K6-02),
SURVEY NO 63, PEERZADIGUDA, BODUPPAL,
MEDCHAL MALKAGIRI DISTRICT, HYDERABAD

HYDERABAD

547. ADARSHA AUTO WORLD PVT LTD (10NG-10-01),
PLOT NO 6/P, 54, SURVEY NO. 204, PRAGATI
NAGAR, BALANAGAR, KUKATPALLY,
HYDERABAD - 500072

548. ADARSHA AUTO WORLD PVT LTD
(10NG-10-02), SHAMSHABAD, NH44,
HYDERABAD, TELANGANA - 501218 - 501218
PH :8297116633.

549. ADARSHA AUTO WORLD PVT LTD (10NG-10-S1)
- 0

550. ADARSHA AUTO WORLD PVT LTD (10NM-10-01),
SY NO 382 TO 385, RAMAPALLY, HYDERABAD -
500051

551. GEM MOTORS (INDIA) PVT LTD (10NH-10-01),
D.NO.8-96, SURVEY NO.128/2 & 129,
TYAGARAYANANAGAR COLONY, KOTHAPEET,
HYDERABAD, TELANGANA - 500084
PH :9912345899.

552. JAYABHERI AUTOMOTIVES PVT LTD
(10ND-10-01), HNO 2-40/64, SURVEY NO 23 TO
28, JUBILEE GARDENS, KOTHAGUDA,
HYDERABAD, TELANGANA-500032. - 500032

553. JAYABHERI AUTOMOTIVES PVT LTD
(10NN-10-01), STALL NO MI-1, MIYAPUR,
HYDERABAD -500049 - 500049

554. KALYANI MOTORS PVT LTD (10NE-10-01),
SURVEY NO.184, KARMAGHAT VILLAGE,
BESIDE KHARMANGHAT HANUMAN TEMPLE,
R.R DISTRICT, HYDERABAD, TELANGANA -
500079
PH :9347121212.

555. THE MITHRA AGENCIES (10NK-10-01), USHA
MAYURI THEATER, OPP TO SPENCERS
MARKET, MUSHEERABAD, SECUNDERABAD,
ANDRAPRADESH-500020. - 500020

556. POPULAR VEHICLES & SERVICES LTD
(10NO-10-S1) - 0

557. POPULAR VEHICLES & SERVICES LTD
(10NO-10-01), KOMPALLY,BASHIRABAD,
JEDIMETLA, SECUNDERABAD, TELANGANA
500010 - 500014

558. POPULAR VEHICLES & SERVICES LTD
(10NO-10-02), PLOT NO 8 MINI INDUSTRIAL
ESTATE,SERILINGAMPALLY, HAFEEZPET,
HYDERABAD - 500050

559. SAI SERVICE PVT LTD (10NC-10-01), SURVEY
NO 78, ADJACENT TO HP PETROL PUMP,
GOPANAPALLY, GACHIBOWLI, HYDERABAD
-500046 - 500046
PH :9966377888.

560. VARUN MOTORS PVT LTD (10NB-10-01), B-54,
CO.INDUTRIAL ESTATE, BALANAGAR,
HYDERABAD, TELEGANA - 500037

561. VARUN MOTORS PVT LTD (10NB-10-02), H.NO.
8-2-1201/17/A/2. PLOT NO. 83,83A,83B, ROAD
NO. 2, BESIDES SBI BANK, BANJARA HILLS,
HYDERABAD - TELANGANA - 500033
PH :9885610555.

562. KALYANI MOTORS PVT LTD (10NE-10-02),
NO.611 PEDDA AMBERPET MUNICIPALITY,
PEDDA AMBERPET, TELANGANA, HYDERABAD
- 501505

IBRAHIMPATNAM-TL

563. KALYANI MOTORS PRIVATE LIMITED
(CSFN-CSF-01), PLOT NO. 3, 4, 11 & 12,
SHERIGUDA, IBRAHIMPATNAM, TELANGANA

JANGAON

564. ADARSHA AUTO WORLD PVT LTD (KINA-KI-01),
SY NO:289,HYDERABAD ROAD,JANGOAN

KAMAREDDY

565. VARUN MOTORS PVT LTD (1HNA-KX-02),
BESIDES SK FUNCTION HALL , KAMAREDDY -
507125

KARIMNAGAR

566. ADARSHA AUTO WORLD PVT LTD
(N6NA-N6-01), 8-6-301, BY PASS ROAD, AUTO
NAGAR, KARIMNAGAR, TELANGANA - 505001
PH :9847073265.

567. ADARSHA AUTO WORLD PVT LTD
(N6NA-N6-02), PADMANAGAR, SIRICILLA ROAD,
KARIMNAGAR - 505001

KHAMMAM

568. PARAMASHIVA MOTORS PVT LTD
(1GNA-1G-01), SY NO. 507,VELUGUMATLA,
VILLAGE, KHAMMAM, TELANGANA

KOTHAGUDEM

569. VARUN MOTORS PVT LTD (26NA-HF-03),
TALLADA - KOTHAGUDEM RD, BABUCAMP,
KOTHAGUDEM, TELANGANA 507125 - 507125

MAHBUBNAGAR

570. SRI JAYARAMA MOTORS PRIVATE LIMITED
(WPNA-WP-01), CHRISTIANPALLY,
BHOOTPOOR ROAD, MAHBUBNAGAR,
TELANGANA - 509001
PH :8096990074.

MANCHERIAL

571. ADARSHA AUTO WORLD PVT LTD
(CMNA-CM-01), SURVEY NO-417,BELLAMPALLI
MANCHERIAL ROAD ,MANCHERIAL,TELANGANA
- 504208
PH :9133329709.

MEDAK

572. VARUN MOTORS PVT LTD (KHFNA-KF-01), PLOT
NO 74,SY NO 248/3, NEAR CWHC
GODOWNS,MEDAK

MEDCHAL

573. AUTOFIN LIMITED (CIDN-CID-01), OPP
BHARATH PETROLEUM HYDERBAD-KAMAREDDY
HIGHWAY, MEDCHAL

NIRMAL

574. ADARSHA AUTO WORLD PVT LTD
(10NG-AA-03), SY 79,80,83/A,KADTHAL
VILLAGE,M/O SOAN,NIRMAL

NIZAMABAD

575. VARUN MOTORS PVT LTD (1HNA-1H-01),
1-51/4/1/D4 MADAHAVA NAGAR,HYDERABAD
ROAD,NIZAMABAD,TELANGANA,503230 - 503230
PH :9542222486.

SANGAREDDY

576. SAI SERVICE (OINA-OI-01), SY NO
772/A,HYDERABAD TO MUMBAI HIGHWAY,
SANGAREDDY

SECUNDERABAD

577. AUTOFIN LIMITED (K6NB-K6-01), PLOT NO.6,
SURVEY NO.267/1 & 267/2, BOWENPALLY,
BALANAGAR MAIN ROAD, SECUNDERABAD,
TELANGANA - 500011
PH :8886144551.

578. VARUN MOTORS PVT LTD (K6NC-K6-01),
VARUN MOTORS,2ND CROSS
ROAD,SAINKIPURI,SECUNDERABAD
PH :779960094.

SHADNAGAR

579. SRI JAYARAMA MOTORS PRIVATE LIMITED
(WSNA-WS-01), SY.NO.204,BESIDE VIVA
HOSPITALS,SHADNAGAR

SIDDIPET

580. ADARSHA AUTO WORLD PVT LTD
(10NM-CAL-02), SY.NO.194/4 PONNALA CROSS,
BESIDE HP PETROL, SIDDIPET - 502375

WARRANGAL

581. ADARSHA AUTO WORLD PVT LTD
(D5NA-D5-01), H.NO: 23-6-132, HUNTER ROAD,
OPP TO CITIZENS CLUB, WARANGAL,
TELANGANA - 506007
PH :8978944414.

ZAHEERABAD

582. JAYABHERI AUTOMOTIVES PVT LTD
(BATN-BAT-01), SITE AT SY NO. 271 & 275, MAIN
ROAD, ZAHIRABAD

UTTAR PRADESH

AGRA

583. KTL PVT LTD (66NC-66-01), KHASRA NO - 246/1,
249/1, 251 , KUBERPUR, AGRA - 282006

584. PREM MOTORS PVT LTD (66NB-66-S1) - 0

585. PREM MOTORS PVT LTD (66NB-66-01), KHASRA
NO.-655, VILL ARTONI, DELHI-AGRA HIGHWAY,
AGRA - 282007

586. MERAK VEHICLES LLP (66NE-66-01), 30, MUNRO ROAD, SADAR BAZAAR, AGRA CANTT, 282001. - 282001	599. SHAKUMBHARI AUTOWHEELS PVT LTD (6D9A-6D-01), 4TH KM. MILESTONE, BIJNOR - NAJIBABAD RD, NEAR DPS SCHOOL, BIJNOR, UTTAR PRADESH 246701 - 246701	GORAKHPUR	625. SUMITRA DS MOTORS PVT. LTD. (M3NA-M3-01), KHASRA NO - PLOT NO. 706, VILLAGE BHANDSARIYA, SH 730, LAKHIMPUR KHERI, UTTAR PRADESH
AKBARPUR	BULANDSHAHR	614. SMARTWHEELS PVT LTD (72NA-72-01), ARAZI NO. 623, 624 & 625, GULHARIA BAZAR, MEDICAL COLLEGE ROAD, GORAKHPUR, UTTAR PRADESH - 273009 PH :8222002147.	LUCKNOW
587. KTL PVT LTD (LHNA-LH-01), GRAM BARA TEHSIL AKBARPUR, NEAR PRABHAT ENGINEERING COLLEGE. KANPUR DEHAT, (UTTAR PRADESH)	600. SKUNIVERSE AUTOMOBILES PVT LTD (M5NA-M5-01), 578M.DELHI ROAD,TRANSPORT NAGAR,BULANDSHAHR-203001 - 203001	615. ARBIT AUTOMOBILES PVT LTD (72NB-72-01), PLOT NO - A & B, BUDDH VIHAR YOUNA, PART-B, TARAMANDAL ROAD, GORAKHPUR - 273009	626. KTL AUTOMOBILE PVT LTD (13ND-13-S1) - 0
AKBARPUR-A NAGAR	ECOTECH (NOIDA)	GREATER NOIDA	627. KTL AUTOMOBILE PVT LTD (13ND-13-S2) - 0
588. SMARTWHEELS (BINA-BI-01), PLOT NO 486 MI MAJJA BAIRAMPUR BARWAN , AKBARPUR DISTT, AMBEDKAR NAGAR, UTTAR PRADESH	601. J J IMPEX (MSM) (T283-T2-S1) - 421503	616. MSM (JJ IMPEX) (T283-T2-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NO 02, ECOTECH 12, GREATER NOIDA, GAUTAM BUDDHA NAGAR, UTTAR PRADESH - 201009	628. KTL AUTOMOBILE PVT LTD (13ND-13-01), PLOT NO - 513, VILL HARIHARPUR BIJNAR, OPP ANSAL API, AMAR SHAHEED PATH, LUCKNOW - 227105 PH :7311190503.
ALIGARH	ETAH	617. RANA MOTORS PVT LTD (T2NB-T2-01), PLOT NO.26, SECTOR ECOTECH-12, GREATER NOIDA, GAUTAM BUDDH NAGAR, GREATER NOIDA, PIN-201310, UTTAR PRADESH	629. KTL AUTOMOBILE PVT LTD (13ND-13-02), GODAWARI ESTATE, SITAPUR ROAD, LUCKNOW
589. ANIL MOTORS (A UNIT OF CLML VEHICLES PVT LTD) (B6NA-B6-01), PLOT NO. 5/129, GT ROAD, RAM NAGAR COLONY, SANSOL, ALIGARH, UTTAR PRADESH. - 202002 PH :9639775522.	ETAWAH	HARDOI	630. KULDEEP MOTORS (LUCKNOW) PVT LTD (13NE-13-S1) - 0
590. ANIL MOTORS (A UNIT OF CLML VEHICLES PVT LTD) (B6NA-B6-02), VILL KARSUA, PALWAL-DELHI ROAD, ALIGARH PIN 202140 - 202140 PH :9358373099.	603. KULDEEP MOTORS PVT LTD (6ENA-6E-01), PILKHAR, KANPUR-ETAWAH ROAD, ETAWAH. - 206001	618. CONCEPT CARS LIMITED (QENA-QE-01), PLOT NO. 1609 & 1605, GUNGAJUB PURVA, BILGRAM RD, HARDOI, UTTAR PRADESH - 241001 PH :7607696666.	631. MEGA MOTORS (A UNIT OF AKM MOTORS PRIVATE LIMITED) (13NF-13-01), B-107, SECTOR-C, MAHANAGAR, LUCKNOW - 226006
591. ANIL MOTORS (A UNIT OF CLML VEHICLES PVT LTD) (B6NA-B6-S1)	FATEHPUR	HATHRAS	632. ANAND MOTOR AGENCIES LTD (13NC-13-01), GATA NO. 1062 PARGANA RAJA BILJI PASI VILLAGE AURANGABAD, SHAHEED PATH (OPPOSITE TO RAMABAI AMBEDKAR MAIDAN), LUCKNOW, UTTAR PRADESH - 226012
ALLAHABAD	604. KULDEEP MOTORS KANPUR LLP (TMNA-TM-01), 466, G.T ROAD, NAUWA BAGH, FATEHPUR, UTTAR PRADESH - 212601 - 212601	619. DEV MOTORS PVT LTD (LPNA-LP-01), NAGLA UMMED, NEAR COCA COLA FACTORY, BANNA DEVI, ALIGARH ROAD, HATHRAS	633. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-S2) - 0
592. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (29NC-29-01), PLOT NO. C-23, INDUSTRIAL AREA - NAINI, PRAYAGRAJ - 211009	FIROZABAD	JHANSI	634. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-S1) - 0
593. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (29NC-29-S1) - 0	605. DEV MOTORS PVT LTD (DFNA-DF-01), DHOLPURA, NEAR ST. JOHNS CHAURAHA, AGRA ROAD, FIROZABAD - 283203	620. SURI AUTOMOBILES (60NA-60-01), SHIVPURI - JHANSI ROAD, OPPOSITE HANSRAJ MODERN SCHOOL, JHANSI, UTTAR PRADESH - 284003 PH :7705000558.	635. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-01), PLOT NO - D10, SARJINI NAGAR INDUSTRIAL AREA, LUCKNOW. PIN - 226008 - 226008
594. AMITDEEP MOTORS (29NA-29-S1)	GAJRAULA	621. BASERA VELOCITY CARS (A UNIT OF BASERA HOTELS AND RESORTS LLP) (60NB-60-01), 329, BUDHA, BADAGAON, GWALIOR ROAD, JHANSI	636. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-02), KHASRA NO. 197, 198, 200, 201, 202 SEMRA, FAIZABAD ROAD, LUCKNOW.
ALMORA	GHAZIABAD	KANNAJ	637. ONEUP MOTORS INDIA PRIVATE LIMITED (13NG-13-01), KHASRA NO. 1040, MUBARAKPUR, LUCKNOW, UTTAR PRADESH 226201 - 226201
595. NAINITAL MOTORS PVT LTD (SQNA-SQ-01), NH109, PALTAN BAZAR, DHARANAULA, ALMORA, UTTARAKHAND	607. MOTORCRAFT SALES PVT LTD (59NB-59-S1) - 0	622. KTL PVT LTD (EMNA-EM-01), ARAZI GATA NO. 1247, NEAR MAA GAYATRI FILLING STATION, ASHOK NAGAR, SARAIMPEERA, KANNAJ, UTTAR PRADESH	MAHARAJGANJ
AMROHA	608. MSM (JJ IMPEX) (5982-59-N1), PLOT NO C, J J IMPEX (DELHI) LIMITED, 224, SITE-1, INDUSTRIAL AREA, BULANDSHAHR ROAD INDUSTRIAL AREA, GHAZIABAD, UTTAR PRADESH 201003 - 201003	KANPUR	638. ARBIT AUTOMOBILES PVT LTD (EINA-EI-01), 120, VILL RAMPUR, TEHSIL SADAR, MAHARAJGANJ, UTTAR PRADESH.
596. AKANKSHA MBD (AONA-AO-01), GATA NO. 2993, MOHALLA SARAI KOHNA, BIJNOR ROAD, AMROHA - 244221	609. REGENT AUTOLINKS PVT LTD (59NC-59-01), A-10/32.33.34, MEERUT ROAD INDUSTRIAL AREA, GHAZIABAD - 201002	623. KTL PVT LTD (28NB-28-01), ARAZI NO. 352, SINGHPUR KACHHAR, BITHOOR ROAD, NORTHERN RAILWAY COLONY, KANPUR, UTTAR PRADESH. - 208017 PH :7408409312.	MAHOBA
BARILLY	610. ROHAN MOTORS LTD (59NA-59-S1) - 0	KHURJA	639. VELOCITY CARS (RMNA-RM-01), 12/1, SHOP AT CHARKHARI, BYPASS ROAD, NEAR PARMANAND CHOWK, MAHOBA, UTTAR PRADESH
597. CORAL MOTORS PVT LTD (56NA-56-01), DELHI RAMPUR ROAD, IN FRONT OF MINI BYPASS, CB GANJ, BARILLY, UP - 243001 PH :9359101010.	611. ROHAN MOTORS LTD (59NA-59-01), KHASRA NO 46 , DELHI MEERUT ROAD MEERUT ROAD INDUSTRIAL AREA, MORTA, GHAZIABAD, UTTAR PRADESH 245101 - 245101 PH :8178839830.	SKUNIVERSE AUTOMOBILES PVT LTD (SKPN-SKP-01), 206, V-TAINA GOSPUR, KHURJA JEWAR ROAD, KHURJA,	MAINPURI
BARHALGANJ	612. TR SAWHNEY AUTOMOBILES PVT LTD (59ND-59-01), A-8 AMBEDKAR ROAD, GHAZIABAD UP - 201001	LAKHIMPUR KHERI	640. KULDEEP MOTORS PVT LTD (SGNA-SG-01), KHASRA NO. 1457, NAGAR PALIKA CHATRA, MAINPURI, 205001
598. ARBIT AUTOMOBILES PVT LTD (72NB-SHK-02), AARAZI NO- 395 & 395 SINDHUAPUR TEHSIL GOLLA DIST GORAKHPUR	613. MOTORCRAFT SALES PVT LTD (59NB-T2-02), D-40, SITE IV, GREATER NOIDA (U.P.)		MATHURA
BIJNOR			

641. UMA MOTORS PVT LTD (H8NA-H8-01), PLOT NO 222, MAHOLI, NEAR KIRAN HOSPITAL, MATHURA - 281004 PH -9997385999.	PRAYAGRAJ	667. ROHAN MOTORS LTD (57NA-57-S1) - 0	679. BEEKAY AUTO PVT LTD (F6NA-F6-01), NH-2 ,CHANDA MORE, POST KALI PAHARDI, JAMMURIA DISTRICT WEST BARDHAMAN - 713339 PH -9932049425.
MEERUT	656. SARASWATI (29ND-29-01), KHASRA NO. 638, ANDHAWA, TEHSIL PHOOLPUR, PRAYAGRAJ. RAEBARELI	668. SHAKUMBARI AUTOWHEELS PVT LTD (57ND-57-01), KHASRA NO.-15-ANA, MOHABBEWALA, SAHARANPUR ROAD, DEHRADUN-248001 - 248001	BANKURA
642. RADHAGOVIND WHEELS INDIA PRIVATE LIMITED (48NC-48-S1) - 0	657. KTL AUTOMOBILE PVT LTD (HSNA-HS-01), 1481, NEAR KATHWARA BUS STAND, LUCKNOW RAIBARELI HIGHWAY, HARCHANDPUR, RAIBARELI - 229303 PH :7311190503.	669. SHAKUMBARI AUTOWHEELS PVT LTD (57ND-57-S1) - 0	680. BHANDARI AUTOMOBILES PVT LTD (G7NA-GQ-02), VILLAGE KAMRAR MATH , CINEMA ROAD , MOUZA BIKNA
643. TR SAWHNEY AUTOMOBILES PVT LTD (48NB-48-01), 1183/17 RITHANI, ZONE - A, SECTOR 4 NEAR PETROL PUMP, MEERUT, UTTAR PRADESH - 250103 PH :18002704142.	RAMPUR	670. TANYA AUTOMOBILES PVT LTD (57NF-57-01), MOHBEWALA CHOWK, SAHARANPUR ROAD, DEHRADUN PIN 248002 - 248002	COOCHBEHAR
644. TANYA AUTOMOBILES PVT LTD (48ND-48-01), KHASRA NO. 150, VILLAGE RALI CHAUHAN, MEERUT.	658. AKANKSHA AUTOMOBILES PVT LTD (6LNA-6L-01), PLOT NO 95 , ADJACENT HONDA BIKE SHOWROOM, VILLAGE- TASHKA, NEAR RAMPUR HOSPITAL, NAINITAL ROAD, RAMPUR, UTTAR PRADESH	671. PREM MOTORS (57NG-57-S1)	681. SEVOKE MOTORS PVT LTD (BWZN-BWZ-01), NEXA COOCH BEHAR CENTRAL VILL & P.O. - MAHISHBATHAN P.S. - KOTWALI, NH - 31 COOCHBEHAR,W.B. - 734617 - 734617
MIRZAPUR	SAHARANPUR	HALDWANI	DARJEELING
645. VARANASI MOTORS PVT LTD (6KNA-6K-01), PURJAGIR, MIRZAPUR BHADOHI ROAD, MIRZAPUR	659. TANYA AUTOMOBILES PVT LTD (S2NA-S2-01), OPP. PHULWARI GARDEN, DELHI ROAD, SAHARANPUR PIN - 247001 - 247001	672. NAINITAL MOTORS PVT LTD (J6NA-J6-01), 5TH KM RAMPUR ROAD, JEETPUR NEGI, NEAR AMAR UJALA PRINTING PRESS, HALDWANI, UTTARAKHAND - 263139	682. BEEKAY AUTO (6UNA-6U-01), BATASIA HILL CART ROAD, PO GHOOM, PS - JOREBUNGLOW, DARJEELING - 734102 WEST BENGAL - 734102
MODINAGAR	SAHIBABAD	RAJSAMAND	GANGTOK
646. SNV AUTOMOBILES PVT LTD (M7NA-M7-01), KHASRA ANO- 564 , SIKARI KALAN , MEERUT ROAD , MODINAGAR - 201204	660. MSM (JJ IMPEX) (M983-M9-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NUMBER 58/4, SITE 4, SAHIBABAD INDUSTRIAL AREA - 201010 PH -9711474930.	673. TECHNOY MOTORS INDIA PVT LTD (X2NA-X2-S1)	683. ENTEL AUTOS (B9NA-B9-S1)
MORADABAD	SHAHJAHANPUR	RISHIKESH	HOWRAH
647. AKANKSHA AUTOMOBILES PVT LTD (B4NA-B4-01), RTO ROAD, LAKRI FAZALPUR, NEAR RAJAN OVERSEAS, MORADABAD - 244001	661. SUMITRA DS MOTORS PVT LTD (W2NA-W2-01), SH25 , RETI ROAD SHAHJAHANPUR	674. SHAKUMBARI AUTOMOBILES (AASN-AAS-01), GURUDEV PLAZA, 279/1, HARIDWAR ROAD, OPPOSITE GOVERNMENT P.G. COLLEGE, RISHIKESH, DISTRICT DEHRADUN	684. MACHINO TECHNO SALES LTD (X7NA-X7-01), 109, 1, UPPER FORESHORE RD, CHOURA BUSTEE, SHIBPUR, HOWRAH, WEST BENGAL 711102 - 711102 PH -9830081632.
648. AKANKSHA AUTOMOBILES PVT LTD (B4NA-B4-S1) - 0	SIKANDRABAD	ROORKEE	JALPAIGURI
NAUGARH	662. SKUNIVERSE AUTOMOBILE PVT LTD (CWQN-CWQ-01), 2328, OPP. AGRASEN INTER COLLEGE, DANKAUR ROAD, SIKANDRABAD, DIST.-BULANDSHAHR (UTTAR PRADESH). - 203205	675. SHAKUMBARI AUTOWHEELS PVT LTD (H2NA-H2-01), 5 KM MILESTONE ,NH-58 ROORKEE-DELHI ROAD, NEAR HOTEL GODWARI,ROORKEE, UTTARAKHAND - 247667	685. PODDAR CAR WORLD PVT LTD (XYNA-XY-01), ASSAM MORE BUS STOP, SH12A, JALPAIGURI, WEST BENGAL 735102 - 735102 PH -8945533002.
649. SMARTWHEELS (QGNA-QG-01), GATA NO. 110, 111, 112 & 113, GRAM-PIPPRA, POST- CHAURI MAHULANI, NEAR PAKDI CHAURAH, TEHSIL-NAUGARH DIST. SIDDHARTHANAGAR, UTTAR PRADESH, 272153 - 272153	SITAPUR	RUDRAPUR	JHARGRAM
NOIDA	663. CONCEPT CARS LIMITED (6MNA-6M-01), PLOT NO 279 , CANTT STATION	676. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (U4NB-U4-01), KASHIPUR ROAD, OPPOSITE GREEN PARK COLONY, VILLAGE DIBDIBA, TEHSIL BILASPUR, RAMPUR, UTTARAKHAND - 244901	686. BHANDARI AUTOMOBILES PVT LTD (BUGN-BUG-01), PLOT NO 200, KHATIAN NO 502 JL NO 370, MOUZA - JHAMDA PS JHARGRAM, DIST - JHARGRAM - WEST BENGAL
650. FAIR DEAL PREMIUM WHEELS PRIVATE LIMITED (A1ND-A1-01), A-107, SECTOR-5, NOIDA - 201301	SRINAGAR (UK)	VIKASNAGAR	KHARAGPUR
651. MOTORCRAFT SALES PVT LTD (59NB-59-01), C 42 SECTOR 57, NOIDA, UTTAR PRADESH - 201301	664. SHAKUMBARI AUTOWHEELS PVT LTD (ANAN-AN-01), KHATA NO 26/339, KHET NO 221 , KATULASYUN , SRINAGAR, PAURI	677. ROHAN MOTORS LTD (RINA-RI-01), KHASRA NO 5587, C/O BHARAT NEGI, NEAR SVM INTER COLLEGE, BABU GHAR, VIKASNAGAR, DEHRADUN WARD NO 6, UTTARAKHAND	687. BHANDARI AUTOMOBILES PVT LTD (G7NA-G7-01), CHOWRANGEE, PLOT NO-138 & 139, O T ROAD, KHARAGPUR - 721301 PH :7603076061.
652. VIPUL MOTORS PVT LTD (A1NB-A1-S1) - 0	VARANASI	UTTRAKHAND	KOLKATA
653. VIPUL MOTORS PVT LTD (A1NB-A1-01), C1 SECTOR 57, NOIDA - 201301 - 201301	665. AGR AUTOMOBILES PVT LTD (84NA-84-01), ARAZI NO - 285,286 LUCCHERPUR, PARGANA-ATHGAWA TEHSIL, HARHUA , VARANASI - 221105	RUDRAPRAYAG	688. JYOTE MOTORS (BENGAL) PVT LTD (06ND-06-01), MIRANIA ROAD, ARUPOTA ON BASANTI HIGHWAY. - 700105 PH :9074158220.
654. MAGIC AUTO PVT LTD (A UNIT OF MAGIC LEASING & FINANCE PVT LTD) (A1NE-A1-01), B-51, HOSIERY COMPLEX, NOIDA (U.P.) - 110025	666. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (84NB-84-01), HARDATTUPUR, MOHANSARAI, VARANASI-ALLAHABAD ROAD, VARANASI - 221001	678. ROHAN MOTORS (IKNA-IK-01), KHASRA NO. 149, 150, 151, KHATA NO. 7, RAINOLI PUNAR, NEAR BATALION 10 HOTEL, BADRINATH ROAD, RUDRAPRAYAG	689. MACHINO TECHNO SALES LTD (06NG-06-01), 98/A/2 BT ROAD,P.S - BARANAGAR, P.O. - ISI BT ROAD, KOLKATA, WEST BENGAL - 700090.
PRATAPGARH	UTTARAKHAND	WEST BENGAL	690. PREMIER CARWORLD PVT LTD (06NB-06-C1), PLOT NO 123,MICHEAL NAGAR, BESIDE NATIONAL MODEL HIGH SCHOOL, NEAR HP GYANI PETROL PUMP, KOLKATA , WEST BENGAL - 700133 - 700133
655. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (NKNA-NK-01), GATA NO 287,VILLAGE GOPALPUR, SADAR, PRATAPGARH, UTTAR PRADESH.	DEHRADUN	ASANSOL	

Nexa Workshop (AS ON 31.01.2026)

691. DEWARS GARAGE LIMITED (06NH-6-01), 1696/A,
LASKARAHAT, NAZIRABAD, P.S. - SONARPUR,
KOLKATA - 700150 - 700150

692. ONE AUTO (06NI-06-01), LR DAG NO
273.274.275.276 JL NO 20, RS NO 36 LR
KHAITAN NO 217, PS THAKURPUKUR DIST -
SOUTH 24 PARGANAS PIN 700104 - 700104

KOLKATA (TARATALA)

693. BHANDARI AUTOMOBILES (06NA-06-01), 1/NEW,
TARATALA ROAD, KOLKATA, WEST BENGAL -
700088

RANAGHAT

694. STARBUST MOTORS PVT LTD (BBTN-BBW-02),
NH 34 RANAGHAT, NEAR BEGOPARA,
CATHOLIC CHURCH NADIA WEST BENGAL -
741232 - 741232

SILIGURI

695. SEVOKE MOTORS PVT LTD (43NA-43-01), WARD
NO 42, 3RD MILE, NEXA, SEVOKE RD, NEAR
SONA PETROL PUMP, CHAYAN PARA,
SALUGARA, SILIGURI, WEST BENGAL - 734008

SREERAMPORE

696. STARBUST MOTORS PVT LTD (BBTN-BBT-01),
NEAR ALLAHABAD BANK, MOLLARBER,
SERAMPORE.

ANDHRA PRADESH**CUDDAPPAP**

1. SIVAJI MOTORS (3275--), BESIDES PADMASHALI KALYANA MANDAPAM, MADRAS ROAD, KADAPA-516002, ANDHRA PRADESH - 516002
PH -9849113189.
2. S V AUTO MOBILES WORKS (1030--), SANKARA PURAM, CUDDAPAH (A.P.), - 516002
PH -9704209620.

GUNTAKAL

3. S. MAHABOOB AUTOMOBILES (4075--), ALUR ROAD, GUNTAKAL-515802, - 515802
PH :9440208312.

GUNTUR

4. S. S. MOTORS (4946--), OPP. JKC COLLEGE, JKC COLLEGE ROAD, GUNTUR-522006, ANDHRA PRADESH - 522006
PH -9848936363.

KAKINADA

5. SATISH AUTO CARE (5038--), BEHIND KALPANA THEATRE, BEACH ROAD KAKINADA, DISTRICT EAST GODAVARI, ANDHRA PRADESH - 533005
PH -9848313599.
6. SRI SHIRDI SAI TECHNOLOGISTS (1459--), FLAT NO 36/2, I.D.A, RAMANAYYPETA, BESIDE MAHINDRA SHOW ROOM, OPP: BHAVANI CASTING ROAD, KAKINADA - 533005 - 533005
PH -984863336.

KAVALI

7. KAMAL MOTORS (3842--), 10-15-43/J3A OPP LIC, TANK ROAD, KAVALI, - 524201
PH -9440828888.

KURNOOL

8. SRI SRINIVASA AUTO GARAGE (5170--), KALLUR ROAD, KURNOOL, DISTRICT - KURNOOL, ANDHRA PRADESH - 518002
PH -9440244660.

MACHILIPATNAM

9. SRI MARUTI MECHANICAL WORKS (4172--), D.NO 4-121, PLOT NO 26.27, POTEPAI INDUSTRIAL PARK, MACHILIPATNAM- 521002, - 521002
PH -9440538012.

MANDAPETA

10. MODERN MARUTI CARE (4886--), D.NO. 4-1-59/2, MAIN ROAD, MANDAPETA-533309, DISTRICT-EAST GODAVARI, ANDHRA PRADESH - 533309
PH -9133198494.

MATHURAWADA

11. ANY TIME SERVICE CENTRE (4860--), D. NO. 1-55 (NH-16), POTHIMALLAYYA PALEM, MADHURAWADA, VISAKHAPATNAM - 530041, ANDHRA PRADESH - 530048
PH -8977799888.

NAGARI

12. PUJITHA SERVICE CENTER (5872--), TIRUPATI ROAD, NAGARI-517583, DISTRICT-CHITTOOR, ANDHRA PRADESH - 517583
PH -9966106128.

NANDYAL

13. MARUTI MOTORS (2635--), PLOT NO 428, NH-18, NEAR RAILWAY GATE, NANDYAL- 518501, - 518501
PH -9440554617.

NELLORE

14. MARUTI AUTO SERVICE STN. (2620--), 16/796 SANKARA AGRAHARAM, NELLORE-524 001 (A.P.), - 524001
PH -9885881905.
15. MARUTI MOTORS (176--), 16-3-995, MINI BYPASS ROAD, RAMALINGAPURAM, NELLORE-524 003 (A.P.), - 524003
PH -9440278243.

PATTIKONDA

16. ROYAL MOTORS (5776--), ADONI ARTS & SCIENCE, COLLEGE ROAD ADONI,PATTIKONDA-518302, DISTRICT-KURNOOL, ANDHRA PRADESH - 518302
PH -9866362847.

PRODDATTUR

17. SRI RAM MOTORS (3642--), 189 INDUSTRIAL AREA, NEAR SRI LAKSMI NAGAR, MYDURUR ROAD, PRODDATTUR (A.P.) - 516360
PH -9666890525.

RAJAHMUNDY

18. MARUTHI MOTORS (1257--), D.NO 88-30-04, OPP I.T.C. GADALAMMA NAGAR, NH-16, RAJAMAHENDRAVARAM -533107, - 533107
PH -9848253434.

SRICALAHASTI

19. SUNDEEP CARS (5972--), 16/550, PANAGAL ROAD, OPP. NTR PARK, SRICALAHASTI - 517644, TIRUPATI DISTRICT, ANDHRA PRADESH - 517644
PH -9848294869.

TENALI

20. RAHUL MOTORS (5157--), D. NO. - 19-15-26, BESIDE NUKALA RAMA KOTESWARA RAO KALYANA MANDAPAM (OLD THEATRE), BOSE ROAD, TENALI, ANDHRA PRADESH - 522201
PH -9490187453.

VISAKHAPATNAM

21. SIRI AUTOMOBILES (5232--), PLOT O 94/A IDA E BLOCK, AUTO NAGAR,GAJUWAKA, VISAKHAPATNAM, ANDHRA PRADESH - 530012
PH -9963296867.

22. SRINIVASA AUTO GARAGE (5440--), OPP. KANTI ROAD, NEAR RAYS PETROL PUMP - VISAKHAPATNAM, DISTRICT - VISAKHAPATNAM, ANDHRA PRADESH - 530031
PH -9912688943.

23. VIZAG AUTO SCANS (461--), 49-52-1/4/2, 80 FEET ROAD, OPP. HNR VIHAR APARTMENTS, SANTHIPURAM, SANKARAMATAM ROAD, VISAKHAPATNAM -530016 - 530016
PH -9246625885.

VIZIANAGARAM

24. VIKRAMA AUTOMOBILES (4621--), 17-13-4 TEMPLE STREET, VIZIANAGARAM - 531 202 (A.P.), - 535003
PH -9440192224.

ARUNACHAL PRADESH**ALONG**

25. BAANU MOTORS (1744--), SIYOM MARKET, ALONG, WEST SIANG DIST., (ARUNACHAL PRADESH) - 791001

BOMDILA

26. GURU MOTORS (3921--), BIRPUR, RUPA, ARUNACHAL PRADESH 790003, - 790003
PH :7640898278.

NIRJULI

27. SANGO SERVICE CENTRE (5742--), LEKHI VILLAGE, NH-415, NEAR MAHINDRA AUTOMOBILE, NAHARLAGUN, ARUNACHAL PRADESH - 791110 - 791110

TAWANG

28. TAWANG MARUTI SERVICING STATION (4255--), OLD BAZAR LINE, P.O. & P.S., TAWANG, ARUNACHAL PRADESH - 790104
PH -9402493456.

ZIRO

29. HILLS AUTO AGENCY (3922--), POLICE RESERVE & PETROL PUMP ROAD, HAPOLI BAZAR P.O. ZIRO, DISTT. LOWER SUBANSIRI, ARUNACHAL PRADESH - 791 120 - 791120
PH :9436047232.

ASSAM**BADARPUR**

30. MARUTI CAR PLAZA (3635--), NEAR INDUSTRIAL AREA, S.T. ROAD, BADARPUR, DISTT. KARIMGANJ (ASSAM) PIN-788 806 - 788806
PH -9854970591.

BISHAWANATH CHARIALI

31. BINA AUTOMATION (3677--), P.O. BISHAWANATH CHARIALI, DISTT. SONITPUR, ASSAM-784 176 - 784176
PH -9957309744.

32. DISHANG DONE (1058--), 52 N.H., BISHWANATH CHARIALI-784176, DISTT. SONITPUR, ASSAM - 784176
PH -9854004161.

33. BINA AUTOMATION (--), P.O. BISHAWANATH CHARIALI, DISTT. SONITPUR, ASSAM-784 176 - 784176
PH -9957309744.

BOKAJAN

34. SHREE GANESH MOTORS (6040--), SUKHANJAN GF ROAD, P.O.BOKAJAN(C.F.), DISTRICT KARBI ANGLONG, ASSAM - 782480
PH -9435167138.

BOKAKHAT

35. GOENKA AUTOMOBILES (2878--), P.O. BOKAKHAT, DISTT. GOLAGHAT, ASSAM-785 612, - 785612
PH -9854048910.

DHALIGAON

36. ADHIKARY MOTOR WORKS (4049--), KUKURMARI, DHALIGAON, DIST. - CHIRANG, ASSAM - 783385 - 783385
PH -9435020938.

DHEMAJI

37. NARAH AUTOMOBILES (3852--), C/O BLUE HILL COUNTER, P.O. DHEMAJI, DISTT. DHEMAJI, PIN-787 057 (ASSAM) - 787057
PH -9954390916.

DHUBRI

38. BRAHMAPUTRA MOTOR SERVICING STATION (3127--), G.T.B ROAD, DHUBRI-783 301, (ASSAM), - 783324
PH :9101176148.

DIBRUGARH

39. GEE DEE AUTO SERVICE (953--), JHALUKPARA, DIBRUGARH-786 001, ASSAM, - 786001
PH -9435131119.
40. MEHBOOB AUTOMOBILES & TYRE SERVICES (1760--), CHOWKIDINGHEE, NEAR STATE TRANSPORT, DIBRUGARH-3, - 786005
PH -9854432207.

DIGBOI

41. GAURI AUTOMOBILES (3760--), MULIABARI, DIGBOI 786 171, - 786171
PH -9435137556.

DOOM DOOMA

42. S K AUTO CARE (3962--), UCHAMATI, NATIONAL HIGHWAY, DOOM DUMA, ASSAM 786151 - 786151
PH :9435135876.

Maruti Authorized Service Station (AS ON 31.01.2026)

GOALPARA	54. CHINAKI SERVICE STATION (8963--), (MARUTI AUTHORISED SERVICE STATION), NATUN NAGAR, A.T. ROAD, MORANHAT-785 670, (ASSAM) - 785670 PH -9401512821.	64. AUTO MAKERS (934--), MAKUM ROAD, UDYOG NAGAR, TINSUKIA -786 146 (ASSAM). - 786146 PH -9435035341.	HAJIPUR
43. BHARAT ENGINEERING WORKS (969--), PO - BALDMARI, AGIA ROAD, GOALPARA (ASSAM) -783 102, - 783102 PH -9864767777.	MORIGAON	TITABAR	76. ALFA AUTO (5454--), PASWAN CHOWK, NH-13, HAJIPUR, DISTRICT - VAISHALI, BIHAR - 844101, - 844101
GOLAGHAT	55. PRAGATI MOTORS (5273--), MORIGAON TOWN, WARD NO.1, BHATBOR-, DOLON PATH, P.O.: MORIGAON, DISTRICT - MORIGAON, ASSAM - 782105 PH -9435064356.	65. SHANKAR AUTO WORKS (5174--), C/O.SHIV SHAKTI AUTO WORKS, BALAJI, MARKET TITABAR CHARIALI TITABAR, DISTRICT - JORHAT, ASSAM - 785630	77. HI-TECH AUTOMOBILES (3123--), GANDHI SETU PATH, N.H.-19, HAJIPUR, VAISHALI (BIHAR) - 844101 PH -9835044502.
GOSSAIGAO	NAGAON	UDALGURI	KAHALGAON
45. A.R. AUTOMOBILES (4544--), NH-31C, HABRUBIL, GOSSAIGAO, DIST KOKRAJHAR, ASSAM-783360 - 783360 PH -9435109765.	56. DAS MARUTI MOTOR WORKS (3734--), NAGAON -782001, . . (ASSAM) - 782002 PH -9435360246.	66. RENU MOTORS (4543--), WARD NO. 2, U.T. ROAD, UDALGURI TOWN, UDALGURI-784509, ASSAM - 784509 PH -9854348875.	78. MAHA GAURI ENTERPRISES (5822--), NTPC ROAD, GANGANAGAR, CHOWRATHIYASTHAN, KAHALGAON-813203, DISTRICT-BHAGALPUR, BIHAR - 813203 PH -9431463558.
HAILAKANDI	NALBARI	ARRAH	MADHEPURA
46. RONOK AUTOMOBILES (5978--), LALA ROAD, NEAR CIVIL HOSPITAL, HAILAKANDI-788151, DISTRICT-HAILAKANDI, ASSAM - 788151	57. B.R.K. AUTOMOBILES ENGINEERING WORKS (2836--), HAJO ROAD, NALBARI-781 335, (ASSAM), - 781335 PH -9954895264.	67. ANJALI ENTERPRISES (5533--), ARRAH - PATNA MAIN BYPASS ROAD, NH-30, AHIRPURWA, OPPOSITE SURYA MANDIR, ARRAH, BIHAR -802232 - 802232 PH -9304910843.	79. KRISHNA AUTOMOBILES (2639--), SINGHSWAR ROAD, PATHRAHA, MADHEPURA-852 213, (BIHAR) - 852213 PH -9430583338.
HOJAI	NAMRUP	AURANGABAD (BIHAR)	MADHUBANI
47. PRAMAN MOTORS (5730--), WARD NO. 12, HOLDING NO. 14, COLLEGE ROAD, HOJAI, ASSAM-782435, - 782435 PH -9954369700.	58. RAJ ENTERPRISES (3849--), NAMRUP INDUSTRIAL ENTERPRISES, SONARI TINIALI, PARBATPUR, NAMRUP-786 623 (ASSAM) - 786623 PH -9854135646.	68. K R N AUTOMOBILE (2242--), NEW G.T. ROAD, (NH-2), AURANGABAD-824 101, (BIHAR) - 824101 PH -9304930657.	80. VIDYAPATI AUTOMOBILE (4234--), BHUAJARA, GANGASAGAR, MADHUBANI, BIHAR - 847212 - 847212
JONAI	NORTH LAKHIMPUR	BEGUSARAI	MUNGER
48. BOROOAH MOTORS (4545--), NH-515, MURKONG SLEEK, DIST. DHEMAJI, JONAI-787060, ASSAM - 787060 PH -9864590237.	59. GREENLAND MARUTI WORKS (2974--), TOWN BANTOW, NH-15, WARD NO.-14, NORTH LAKHIMPUR, LAKHIMPUR, ASSAM - 787001 - 787031 PH -9435086197.	69. K.B. MOTORS (4768--), NH-31, SINGHAUL, POKHAR, BEGUSARAI-851134, BIHAR - 851134	81. SUNBEAM ENGINEERING WORKS (1533--), 150 BETWAN BAZAR, NEAR KHANKAH, P.O. & DISTT. MUNGER, BIHAR - 811201 - 811201 PH -9931962944.
KARIMGANJ	PATHSALA	BHAGALPUR	MUZAFFARPUR
49. S D AUTOMOBILE (4931--), SILCHAR ROAD, KARIMGANJ - 788710, . - 788710	60. USHA AUTOMOBILES (4240--), N.H 31, PATHSALA-781325, DISTRICT-BARPETA, ASSAM, - 781325 PH -9401310431.	70. NATIONAL AUTO WORKS (1536--), INDUSTRIAL AREA, BARAUNI, BEGUSARAI-851 122, - 851122 PH -9973381733.	82. DYNAMIC MARUTI SERVICE CENTRE (1163--), HARI SHARAN MARG, AMGOLA, POST OFF RAMNA, MUZAFFARPUR-842 002, - 842002
LUMDING	SILAPATHAR	BIHAR SHARIF	83. PERFECT MOTORS (3465--), NEAR CHANDNI CHAUK, JHITKAIYA, POST: MIT PS: BRAHAMPURA, MUZAFFARPUR-842 003 (BIHAR) - 842003 PH -9835007407.
50. BEDI MOTORS (5827--), MAIN ROAD, NORTH LUMDING, LUMDING-782447, DISTRICT - NAGAON, (ASSAM), - 782447 PH -9957333991.	61. BORLUIT MOTOR (9035--), KHANAMUKH, P.O/P.S -SILAPATHAR, DIST-DHEMAJI, ASSAM PIN-787059 - 787059 PH -8638981308.	72. SARVODAY ENGG. & AUTO SERVICE (1549--), INDUSTRIAL ESTATE, RAMCHANDRAPUR, BIHARSHARIF, NALANDA, BIHAR - 803101 PH -9334672919.	PATNA
MANGALDAI	SILCHAR	CHAPRA	84. CAR SCANNER (9039--), OPP. BATA, KANKAR BAGH COLONY, PATNA-800 020, - 800020 PH -9431016342.
51. PRIYAM AUTOMOBILES (2424--), NH 52 COLLEGE ROAD, MANGALDOI, ASSAM, PIN-784 125 - 784125	62. CARDROME (1559--), 2ND LINK ROAD JUNCTION, SONAI ROAD (M H C ROAD), SILCHAR-788 006, (ASSAM) - 788006 PH -9435071212.	73. PRASAD AUTOMOBILES (1974--), BHAGWAN BAZAR, CHAPRA-841 301, (BIHAR), - 841301	85. GOOD WRENCH SERVICES (3364--), NH 30, BETWEEN BHARAT PETROLEUM & HP PETROL PUMPS, . 1 KM WEST OF "O" MILE, ASHOKHAK, NANDLAL CHAPRA, PATNA - 800007, - 800007 PH -7277772777.
MARGHERITA	TEZPUR	DARBHANGA	86. MOHINI AUTOMOBILES (1049--), BEHIND RESERVE BANK OF INDIA, EXHIBITION ROAD, PATNA-800 001, - 800001
52. VIRDI MOTOR WORKS (955--), MISSION ROAD, P.O. MARGHERITA-786 181, DIST. TINSUKIA, (ASSAM) - 786181 PH -8011164932.	63. POOJA MOTOR WORKS (4373--), N.T. ROAD, MURATETLI, TEZPUR-784001, ASSAM - 784001 PH -9957907256.	74. SINGH MARUTI CARE (2277--), RAJKUMARGANJ, P.O. LALBAGH, DARBHANGA-846 004, (BIHAR), - 846004 PH -9431293796.	87. TIRUPATI AUTO (1956--), ASHIANA MORE, BAILEY ROAD OPPOSITE UNION BANK, RAJABAZAR, PATNA-14 - 800014
MARIANI	TINSUKIA	GAYA	PURNEA
53. VASKAR AUTOMOBILES (5237--), NEAR NST TINALI P.O. -MARIANI, DISTRICT - JORHAT, ASSAM - 785634 PH -9508486813.		75. AUTO CARE (3027--), DURGA BARI, HARIDAS CHATTERJEE LANE, NEAR SAINT PAUL SCHOOL, GAYA-823 001 (BIHAR) - 823001 PH -9102060955.	
MORANHAT			

88. AUTO INDIA (3026--), SRI DHAM MANDIR,
PURNEA CITY, PURNEA 854302 - 854301
PH :9470204501.

SASARAM

89. TRIPITY CAR SERVICE CENTRE (5535--), NEAR
RELANCE PETROL PUMP, G.T.
ROAD,NH-2,SASARAM-821115,
DISTRICT-SASARAM, BIHAR - 821115
PH :9934792421.

SITAMARHI

90. SITAMARHI AUTO CARE (6050--), INDUSTRIAL
AREA,RAJOPATTI, PO.SITAMARHI-843302,
DISTRICT-SITAMARHI, BIHAR - 843302
PH :9430012437.

CHANDIGARH

91. CAR CLINIC (179--), PLOT NO-81, INDUSTRIAL
AREA, PHASE-2, CHANDIGARH, - 160002
PH :9417216782.
92. HI-TEK MOTORZ (4743--), PLOT NO. 695,
INDUSTRIAL AREA, PHASE-1, CHANDIGARH -
160002
PH :9827567868.
93. RATTAN MOTORS (1155--), SECTOR 23-C,
CHANDIGARH-160 023, - 160023
PH :9814008335.

CHHATTISGARH**AMBIKAPUR**

94. MARUTI AUTO CARE (4839--), KHARSIA NAKA,
AMBIKAPUR -497001, DISTRICT-SURGUJA,
CHATTISGARH - 497001
PH :9425256087.

JAGDALPUR

95. VISHWAKARMA AUTOMOBILES (4467--),
RAJMAHAL PARISHAR, CHAMBER OF
COMMERCE ROAD, JAGDALPUR,
CHATTISGARH- 494001 - 494001
PH :9753300033.

KORBA

96. AUTO SELF SERVICE (8940--), RAILWAY
STATION CANAL ROAD, NEAR SUNALIYA
RAILWAY CROSSING , MURARKA GALI,
KORBA, CHATTISGARH -495678 - 495678
PH :9229495000.

MANENDRGARH

97. SHARMA AUTO CENTRE (5354--), MAIN ROAD -
MANENDRGARH, DISTRICT - KOREA , PIN -
497442, CHHATTISGARH - 497442
PH :7771011802.

RAIPUR

98. SHIVAM CAR SERVICES (4774--), BILASPUR
ROAD, KHAMTARI, RAIPUR-492006,
CHATTISGARH - 492006
PH :9039090522.

**AND NAGAR HAVELI AND DAMAN A
DAMAN**

99. CAR ZONE (4358--), SURVEY NO. 70/3,
VARKUND, OPP VEERA DA DHABA, VAPI
DAMAN ROAD, DAMAN-396210 - 396210
PH :9824184449.
100. TOP GEAR (5469--), DAMAN-KUNTA
ROAD,KUNTA DAMAN-396210, DISTRICT -
UNION TERRITORY , GUJARAT, - 396210
PH :9825631264.

DELHI

- DELHI
101. AAPKA KARKHANA (MOTORS) PVT. LTD. (869--),
62/1 POSANGIPUR MAIN MARKET, A-3 BLOCK
JANAKPURI, NEW DELHI-58, - 110058
PH :9811034869.
102. ANAND MOTORS (4471--), B-27, G.T. KARNAL
ROAD, INDUSTRIAL AREA, NEW DELHI-110033 -
110033
PH :9582379699.
103. A-ONE AUTOMOBILES (3362--), 487/35
NATIONAL MARKET, PEERAGARHI, DELHI-110
087, - 110087
PH :9810257472.
104. AUTO ENGRS.SERVICE STN. (8023--),
OPP.MODEL TOWN, DERAVAL NAGAR,
DELHI-9, - 110009
PH :9811137929.
105. AUTO POINT SERVICE (1267--), 70B RATTAN
PARK, OPP. RAMESH NAGAR, NEW DELHI-110
015, - 110015
PH :9958062220.
106. AUTOTECH ENGINEERS (4551--), PLOT NO.
20-24, MATIYALA VILLAGE, SECTOR-3, NEAR
DPS DWARKA, NEW DELHI-110075 - 110075
PH :9811608008.
107. BASANT MOTORS (8003--), 78 TOLSTOY LANE,
BEHIND SCINDIA HOUSE, NEW DELHI-110 001, -
110001
PH :9811522266.
108. BHAGIRATHI MOTORS (4737--), PLOT NO.
153/543, POOTH KHURD, DELHI-110039, - 110039
PH :9810804556.
109. BHASIN SERVICE STATION (830--),
DR.K.S.KRISHNAN ROAD, NEAR PUSA GATE,
NEW DELHI-110 012, - 110012
PH :9971977992.
110. BRIGHT MOTORS (P) LTD. (885--), C-263
PEERAGARHI, OUTER RING ROAD, DELHI - 110
087, - 110087
PH :9810203018.
111. DRIVEWELL SERVICE STATION (866--),
1/486,G.C.S. COMPLEX,MAIN G.T. ROAD ,
DILSHAD GARDEN,NEW DELHI-110095 , DELHI
, - 110095
PH :9811020603.

112. ENGINEERS SERVICE STATION (834--), SHRI
AUROBINDO MARG, (SAFDRJANG AIRPORT),
NEW DELHI-110 003, - 110003
PH :9654262692.
113. EXCEL AUTOMOBILES (3342--), PLOT NO.78,
BAGDOLA VILLAGE, SECTOR-8, DWARKA, NEW
DELHI - 110077 - 110077
PH :7011765194.
114. EXCLUSIVE AUTOMOBILES PVT. LTD. (3546--),
98 MANGOLPUR KALAN, SECTOR-2 NEAR
JAIPUR GOLDEN HOSPITAL, ROHINI, DELHI-110
085 - 110085
PH :9910782127.
115. GLOBE SERVICE STATION (8961--), A-17, B1,
EXTENSION MCIE, MATHURA ROAD,
BADARPUR, DELHI-110 044, - 110044
PH :9540944009.
116. HUNDRED PERCENT (8967--), LSC, SECTOR-9,
OPP. NHAI, DWARKA, NEW DELHI-110075 -
110075
PH :8130301833.
117. IMAGE (2561--), IOC PUMP, NEAR SAMACHAR
APT. OPP. KIRTI APT., MAYUR VIHAR PHASE-I
EXT., DELHI-110 091 - 110091
PH :9312082213.
118. R S AUTOMOBILES (273--), 111/9 KISHANGARH,
OPP. CNG PUMP NEAR SPYM INSTITUTE,
ARUNA ASAF ALI ROAD, VASANT KUNJ, NEW
DELHI - 110070 - 110070
PH :9540944009.
119. KUMAR AUTOMOBILES (855--), B-281 OKHLA
INDUSTRIAL AREA, PHASE-I, NEW DELHI-110
020, - 110020
PH :9810001625.
120. NAVEEN AUTOMOBILES (4934--), 37,
PATPARGANJ INDUSTRIAL AREA, NEW
DELHI-110092, - 110092
PH :9911278537.
121. NORTHERN SERVICE STATION (337--), SARAI
BASTI, ROAD NO.40, OPP. SHASTRI NAGAR,
DELHI-35 - 110035
PH :9213710643.
122. P R G MOTORS (365--), A-99.103CH.TEKCHAND
MARKET, GANESH NAGAR - TILAK NAGAR,
DELHI-110 018, DELHI - 110018
PH :9711196811.
123. QUTAB SERVICE STATION (8078--), MEHRAULI
ROAD, NEW DELHI-110 017, - 110017
PH :9811021862.
124. RAJINDRA SERVICES P.LTD. (826--), B-55
G.T.KARNAL ROAD, INDUSTRIAL AREA,
DELHI-110 033, - 110033
PH :9899580820.
125. ROHAN SERVICES (5444--), PLOT
NO:125,VILLAGE POCHANPUR, SECTOR - 23
DWARKA, DISTRICT - DELHI (WEST), DELHI -
110075
PH :9911180827.

126. SATYA SERVICE STATION PVT. LTD. (3625--),
L-BLOCK HARI NAGAR, JAIL ROAD, NEW
DELHI-84, - 110064
PH :9873461414.
127. SEVEN HILLS AUTOMOBILES PVT LTD. (848--),
D-20/1 OKHLA INDUSTRIAL AREA, PHASE II,
NEW DELHI-110 020., - 110020
PH :9811037954.
128. SHALIMAR AUTOMOBILES PVT. LTD (871--),
C-91/9 WAZIRPUR INDUSTRIAL AREA, ASHOK
VIHAR CROSSING, DELHI-110052, DELHI -
110052
PH :9811171489.
129. SRI BALAJI AUTOMOBILE (8038--), KHASRA
NO.33, 13/2-12 MAIN BAWANA ROAD,
SAMEYUPUR (NEAR DELHI COLLEGE OF ENGG.),
DELHI - 110085
PH :9811039601.
130. SRI SAI AUTO ENGINEERS (8074--), 487/59
PEERA GARHI, INDUSTRIAL AREA, DELHI, -
110087
PH :9650531612.
131. WIG AUTOMOBILES (8012--), D-3, S.M.A CO-OP.
INDL. ESTATE, (OPP. JAHANGIR PURI CHOWK),
G.T. KARNAL ROAD, DELHI-110 033 - 110033
PH :9811297607.
132. YASHWANT PLACE SER.STN. (8022--), AFRICA
AVENUE, (OPP.CHANAKYA CINEMA), NEW
DELHI-21, - 110021
PH :9868255788.

GOA**BICHOLIM**

133. SHREEGURUKRUPA AUTOWORLD (1249--),
PLOT NO.76, BICHOLIM INDUSTRIAL ESTATE,
BICHOLIM, GOA - 403529 - 403529
PH :9637137129.

CURCHOREM

134. VIPUL AUTOMOBILES (5378--), PLOT
NO.7,8,9,KAKODA INDUSTRIAL ESTATE,
KAKODA CURCHOREM, DISTRICT - SOUTH
GOA, GOA - 403706
PH :9422018746.

KUNDAIM

135. VIKAS ENGINEERING WORKS (4953--), BHOMA,
KUNDAIM, GOA-403107, - 403107
PH :9823780335.

MAPUSA

136. SARDESAI AUTOMOBILES (2176--), 194,
GAUNSAWADA , NEAR MILAGRES CHURCH,
MAPUSA, GOA-403 507 - 403507
PH :9764448741.

PONDA

137. DHAULIKAR AUTOMOBILES (2041--), NO.5 TIP
TOP MANSION IV, INDIRA NAGAR, DHAVALI,
PONDA, GOA-403 401 - 403401
PH :9890669879.

Maruti Authorized Service Station (AS ON 31.01.2026)

VERNA

138. LUBRICARE SERVICES (261--), 7-D GOULLOY,
NH.17 NUVEM, SALTETE, GOA-403 601 - 403601
PH :9822124376.

GUJARAT

AHMEDABAD

139. AUTOWAY (125--), MANGALYA COMPLEX, NEAR
ANJALI CINEMA CROSS ROAD, BATTHA,
AHMEDABAD - 380007
PH :9825016888.
140. DAHSON MOTORS (143--), NEAR MANAV
MANDIR, DRIVE IN ROAD, AHMEDABAD-380 052,
- 380052
PH :9898096242.
141. MEGHDOOT MOTORS (3437--), SURVEY NO.
478/3, NEAR SABARTAL CROSS ROAD,
OPPOSITE BHIMJIPURA SWIMMING POOL,
NAYA VAJAD, AHMEDABAD, GUJARAT - 380013
PH :9825972345.
142. POKAR AUTO REPAIRERS (2479--), NEAR
UNION CO. BANK, SAJIPUR BOGHA, NARODA
ROAD, AHMEDABAD-382 345 - 382345
PH :9428608515.
143. RAJAN MOTORS (8968--), 60, MADHUVAN PARK
SOCIETY, B/H. TRAFFIC CHOWKDI, GHODASAR
CHAR RASTA, GHODASAR, AHMEDABAD -
380050 - 380008
PH :9825972345.
144. SPEED AUTO CARE PVT. LTD (5524--), GIDC
PLOT NO 12, ODHAV INDUSTRIAL ESTATE,
NEAR BRTS GRID STATION, NEXT TORRENT
POWER SUB STATION, ODHAV, AHMEDABAD -
380023
PH :9979992779.

AMRELI

145. CAR CARE CENTRE (2734--), PATEL GARAGE,
CHAKRAGADH ROAD, AMRELI-365 601,
(GUJARAT) - 365601
PH :9825422922.

ANAND

146. PATEL TRACTOR COMPANY (2221--), (SERVICE
DIVISION), BEHIND SUNIL CHAMBERS, STATION
ROAD, ANAND-388 001 - 388001
PH :9925534494.
147. SHAKTI MOTORS (2226--), OPP. J.K. PARK,
NATIONAL HIGHWAY NO. 48, P.O.
VAGHASHI-388 320, TA: ANAND DISTT. ANAND -
388320
PH :9825792999.

ANJAR

148. CAR AGE (5542--), PLOT NO.11, MAHATMA
NAGAR-1,ANJAR- , GADHPADAR
ROAD,NR.MAHAKALESHWAR, MAHADEV
MANDIR,ANJAR , GUJARAT - 370110
PH :9427216886.

BARDOLI

149. POOJA MOTORS (361--), NEAR GIDC, SURAT
ROAD, BARDOLI-394 601, (GUJARAT) - 394601
PH :9825762621.

BHARUCH

150. NEW MARUTI MOTORS (5156--), 9/16 AKASH
GANGA,B/H CNG PUMP, OLD NH -8,BHOLAV ,
DISTRICT - BHARUCH, GUJARAT - 392001
PH :9898611424.

BHAVNAGAR

151. VIKRAM MOTOR GARAGE (127--),
TAKHTESHWAR PLOT, NEAR CHANDRA
BHUVAN, BHAVNAGAR - 364 002., - 364002
PH :9427145452.

BHUJ

152. ASHA MOTORS (3629--), NEAR JAY NAGAR BUS
STOP, MIRZAPUR HIGHWAY, BHUJ KUTCH,
GUJARAT - 370001. - 370001
PH :9825225088.

BILIMORA

153. PATEL AUTOMOBILES (4030--), DANDEKAR
COMPOUND, GANDEVI ROAD, BILIMORA, -
396321
PH :9824123875.

BORSAD

154. SPEED AUTO (8953--), I B PETROL PUMP,
VASAD-TARAPUR HIGHWAY ROAD, VILLAGE
BORSAD, TALUKA BORSAD, DISTRICT ANAND,
GUJARAT- 388540 - 388540
PH :9979992779.

CHAND KHEDA

155. BALVINDER AUTOMOBILES (8948--), ZUNDAL
CIRCLE, BEHINDDWARIKESH PARTY
PLOT,NEAR SHAGUN 108,CHANDKHERA,
VILLAGEZUNDAL, DISTRICTGANDHINAGAR,
GUJARAT -382421 - 382424
PH :9924016000.

CHIKHLI (GUJ.)

156. INAL MOTORS (3929--), POST MAJIGAM, CHIKLI
BILIMORA ROAD, DISTT NAVSARI, - 396521
PH :9099033773.
157. SHREE AMBICA MOTORS (2663--), KUNDI
FATAK, NEAR ADARSH NURSERY, N.H.8,
CHIKHLI DISTT. VALSAD (GUJARAT)-396 001 -
396001
PH :9825131520.

DAHOD

158. CAR SEVA (2438--), SAINT STEPHEN SCHOOL
ROAD, GODHRA ROAD., DAHOD. PIN-389151, -
389151
PH :9426469122.

DEESA

159. VAKHARIA MOTORS (3970--), PLOT NO. 57-60,
SURVEY NO. - 16/1, DEESA - PALANPUR
HIGHWAY, DEESA, DISTT. - BANASKANTHA,
GUJARAT, - 385535
PH :9377728841.

DHARI

160. GURUKRUPA MOTORS (5876--), NR.
NARMADESHWAR MAHADEV TEMPLE,
DHARI,AMRELI ROAD,DHARI-365640,
DISTRICT-AMRELI, GUJARAT - 365640
PH :9825374658.

DHORAJI

161. UNIVERSE AUTO (5837--), SARDAR
CHOWK,DHORAJI-360410, DISTRICT-RAJKOT,
GUJARAT, - 360410
PH :9727714643.

GANDHI NAGAR

162. LABH MOTORS (4527--), PLOT NO - B - 206+207
,, GIDC, SECTOR -25, GANDHINAGAR
GUJARAT, - 382024
PH :9825020030.
163. SHREE ARBUDA MOTORS PVT. LTD. (2151--),
G.I.D.C. E-19/10/B, NEAR K-7, SECTOR 26,
GANDHINAGAR, GUJARAT - 382026 - 382044
PH :9825041331.
164. SHITAL MOTORS (134--), 304 G.I.D.C.,
SECTOR-28, GANDHINAGAR - 382 028
(GUJARAT), - 382028
PH :9924127065.

HALOL

165. MAA MOTORS (4767--), GODHRA ROAD, NEAR
TELEPHONE EXCHANGE, HALOL, GUJARAT -
389350
PH :9898610212.

HIMMATNAGAR

166. MEHTA SERVICE STATION (135--), NEAR
SHANTI GARDEN, RESTAURANT, DIWALI BAUG
MOTIPURA, N.H.8, HIMMATNAGAR,
GUJARAT-383 001 - 383001
PH :9426555664.

IDAR

167. SUN MOTORS (5175--), IDAR-HIMMATNAGAR
HIGHWAY ROAD, AT,KRUSHNAGAR,PO
NETRAML, TA.IDER DISTRICT SABARKANTA,
GUJARAT - 383430
PH :9228286768.

JAMKHAMBHALLIA

168. SHRI HARI OM MOTORS (9023--), AT.
JAMNAGAR DWARKA HIGHWAY ROAD, OPP.
AIR FORCE GATE, JKV NAGAR-8, DHARAMPUR,
JAM-KHAMBHALIYA, DIST. DEVBHUMI DWARKA,
GUJARAT, PIN - 361305. - 361305
PH :9426955344.

JAMNAGAR

169. LANDMARK AUTOMOBILES (1973--), PLOT
NO-4/2, JAMNAGAR- KALVAD ROAD,
MAHAPRABHUJI BETHAK ROAD, OPP SUBHASH
BRIDGE, JAMNAGAR-361 006, (GUJARAT) -
361006
PH :7600000733.

JETPUR

170. GIRIRAJ MOTORS (3971--), JUNAGADH
HIGHWAY, NEAR JALARAM TEMPLE, JETPUR, -
360370
PH :9727154392.

JUNAGADH

171. MARUTI MOTORS (266--), G.I.D.C. - I, RAJKOT
HIGHWAY, DOLATPARA, JUNAGADH(GUJARAT)
- 362001
PH :9099849888.

KALOL

172. SUNRISE AUTO CENTRE (146--), BLOCK
SURVEY NO. 1141, OPP JANPATH PETROLEUM,
NEAR SINDBAD HOTEL,
AHMEDABAD-MEHSANA HIGHWAY, KALOL,
DISTRICT - GANDHINAGAR, GUJARAT - 382721
PH :9879542207 .

KAMREJ

173. PATEL MOTOR GARAGE (2764--), PLOT NO
1.2,3, NAVAGAM,, NR. MANISHA HOTEL, OPP.
DADABHAGWAN TEMPLE, NAVAGAM, KAMREJ,,
DIST: SURAT-394185 - 394185
PH :9825127413.

KAPADVANJI

174. DISHA MOTORS (5960--),
MAHAMADPURA,KAPADVANJI-NADIAD ROAD,
KAPADVANJI-387620, DISTRICT-KHEDA,
GUJARAT - 387620
PH :9825641244.

KESHOD

175. PRASAD MOTORS (3969--), VERAVAL HIGHWAY,
KESHOD, - 362220
PH :9825024488.

LIMDI

176. PARTH AUTOMOBILES (4171--),
OPP.SWAMINARAYAN TEMPLE, NH NO-8A,
LIMBIDI DIST, SURENDRNAGAR , PIN-363421 -
363421
PH :9426714510.

LUNAWADA

177. N.J. MOTORS (4370--), R SURVEY NO 358,
MODASA HIGHWAY, MOTA SONELA,
LUNAWADA, DIST. MAHISAGAR 389230 - 389230
PH :9924252700.

MEHSANA

178. SANSKAR MOTORS (5468--), PALAVASANA -BECHARAJI ROAD, , NR.ONGC FIRE STATION MEHSANA-384002 , DISTRICT-MEHSANA, GUJARAT - 384002
PH :9825106359.
179. SHUBH AUTO SERVICES (3367--), NEAR AGRO PETROL PUMP, OLD RTO, RAMOSNA JAKAT NAKA, MEHSANA (GUJARAT) - 384001
PH :9825322460.

MORBI

180. ARUN MOTORS SERVICE (2071--), SANALA BYE PASS, NEAR G.P. GINING MILLS, MORBI -363641
PH :9825222825.

NADIAD

181. SHIVAM MOTORS (4430--), PLOT NO 35/1, QUALITY SEEDS COMPOUND, NEAR BHUTIA BUNGLOW, DABHAM, NADIAD, DISTRICT KHEDA, GUJARAT - 387320 - 387320
PH :9825021960.

NAKHATRAMA

182. ASHA MOTORS (4340--), NANA ANGLADESH, NAKHATRAMA HIGHWAY ROAD, NAKHATRAMA, KUTCH - 370615
PH :9727499383.

PETLAD

183. SIDDHI MOTORS (4166--), OPP. GEB, NEAR RAILWAY CROSSING, NADIAD-KHAMBHAT HIGHWAY, PETLAD, ANAND, PIN-388450 - 388450
PH :7359465067.

RAJKOT

184. KHODIYAR MOTORS (356--), DHEBAR ROAD (SOUTH), ATIKA INDUSTRIAL ESTATE, RAJKOT-360 001 , - 360001
PH :9426202885.
185. UNIVERSE AUTO (5544--), C/O DELHI GUJARAT TRANSPORT,NR. NAVAGAM, OCTROI POINT,AHMEDABAD HIGHWAY, RAJKOT-380002, DISTRICT - RAJKOT , GUJARAT - 380002
PH :9879616643.

RAJPIPLA

186. R. N. MOTORS (5255--), 22-GIDC NEAR PETROL PUMP , RAJPIPLA, DISTRICT - NARMADA , GUJARAT - 393145
PH :9925325300.

SAVARKUNDLA

187. SHYAM MOTORS (8925--), OPP. ESSAR PETROL PUMP, AMRELI ROAD,SAVARKUNDLA-364515, DISTRICT-AMRELI, GUJARAT - 364515
PH :9427742134.

SIDDHPUR

188. GOOD LUCK MOTORS (5341--), 2.UMIYA COMPLEX.NEAR GURUKUL , HIGH SCHOOL SIDDHPUR , DISTRICT - PATAN, GUJARAT - 384151
PH :9898428989.

SIHOR

189. MOMAI MOTORS (6032--), NR. RAJ MOMAI PETROLIUM , BHAVNAGAR-RAJKOT HIGHWAY,SIHOR-364240, DISTRICT-BHAVNAGAR, GUJARAT - 364240
PH :9510201800.

SURAT

190. EMPEROR CAR TECH (1748--), F.PLOT NO.124 NEAR RELIANCE COMPLEX, BESIDE SHEETAL MARBLE, SURAT-DUMAS ROAD PIPLD, SURAT-395 007 - 395007
PH :9825033396.
191. J.K.MOTORS (5158--), TP-16, FP-8, GAURAV PATH ROAD, PAL, SURAT - 394510, GUJARAT - 394510
PH :9909920902.
192. NILESH MOTORS (5347--), AMBER SHOPPING CENTRE.OPP.SADHNA CHAMBERS, VARACHHA ROAD , DISTRICT - SURAT , GUJARAT - 395004
PH :9377762660.
193. PATEL MOTORS (3060--), 64 BAJRANG NAGAR, NEAR OCTROI CHECK POST, NANA VARCHA, SURAT-395 006 - 395006
PH :9909149498.
194. J.K.MOTORS (--), TP-16, FP-8, GAURAV PATH ROAD, PAL, SURAT - 394510, GUJARAT - 394510
PH :9909920902.

TALALA

195. RUBY MOTORS (5942--), TALALA ROAD , RAMRECHI(GIR), DIST - GIR, SOMNATH - 362150 , - 362150
PH :9824061044.

UMBERGAON

196. KARAN AUTOMOBILES (2571--), OPP. DAMRUWADI, UMBERGAON SANJAN ROAD, UMBERGAON, DIST. - VALSAD, GUJARAT - 396170 - 396170
PH :9824336583.

UNJHA

197. AMBIKA MOTORS (3932--), SADGURU COMPLEX, AHMEDABAD PALAM PUR HIGHWAY ROAD, UNJHA, MEHSANA-384170 - 384170
PH :9824517382.

VADALI

198. V/RAJ MOTORS (4560--), UMIYA PARK, HIGHWAY ROAD, VADALI TA, VADALI, SABARKANTA (GUJARAT) - 382335
PH :9427364109.

VADGAM

199. CHAUDHARY & CHAUDHARY MOTORS (5651--), OPP.RELIANCE PETROL PUMP, PALAMPUR ROAD - VADGAM, DISTRICT - BANASKANTHA, GUJARAT - 385410
PH :9664590698.

VADODARA

200. CAR CARE (2229--), NEAR GANDHI OIL MILL, GORWA INDUSTRIAL ESTATE. BARODA-390 016, - 390016
PH :9825044610.
201. CAR CLINIC (4640--), PLOT NO. B-7 (PART), ANUR ESTATE, NEAR DABHOI ROAD, JAKATNAKA, VADODARA (GUJARAT) - 390004
PH :9925003558.
202. DREAM MACHINES (2933--), 19 MULJINAGAR COLONY, OPP. GHELANI PETROL PUMP, NIZAMPURA, VADODARA-390 002 - 390005
PH :7575909940.
203. GENERAL MOTOR REPAIRING WORKS (2529--), NEAR LOK SATTA PRESS, NAGARWADA, VADODARA-390 001, - 390001
PH :9825026106.
204. HONEST AUTO STRUCTURE WORKS (279--), 9, VINODBAUG BEHIND HOTEL SANMAN, JETPUR ROAD, VADODARA, PIN : 390005, - 390002
PH :9824014046.
205. MAYUR SERVICE STATION (2224--), NEAR POLICE STATION, PRATAPNAGAR ROAD, BARODA-390 004, - 390001
PH :9879453031.
206. CAR CARE (--), NEAR GANDHI OIL MILL, GORWA INDUSTRIAL ESTATE, BARODA-390 016, - 390016
PH :9825044610.

VALIA

207. HARI OM AUTO CARE (5750--), NEAR MAZDA HOTEL - VALIA, ANKALESHWAR ROAD-VALIA, DISTRICT-BHARUCH, GUJARAT - 393135
PH :9427336094.

VALSAD

208. HONEST AUTO GARAGE (2220--), SUGHAR FALIA, BEHIND MOTI GHANCHIWAD, VALSAD-396 001 (GUJARAT), - 396001
PH :9426110767.

VANTHLI

209. INFINITY MOTORS (5963--), RAVI RATAN VADLA FATAK , OPP.HP PETROL PUMP ,POST VADLA,TAL VANTHLI-362205, DISTRICT-JUNAGADH, GUJARAT - 362001
PH :9898990120.

VIRAMGAM

210. KRISHNA MOTOR GARAGE (4038--), OUTSIDE BHARWADI GATE, NEAR BHARAT PETROL PUMP, VIRAMGAM, - 382150
PH :9426415274.

VYARA

211. PARTH MOTORS (8928--), D-1.CITY LIGHT TOWER KAKRAPAR, BYPASS ROAD-VYARA, DISTRICT-SURAT, GUJARAT - 394650
PH :9898292020.

HARYANA**AMBALA**

212. BASSAN MOTORS (4964--), 99 TH MALL, AMBALA CATT - 133001, HARYANA, - 133001
PH :9466000000.
213. GURU NANAK MOTORS (2036--), POLICE LINES CHOWK, AMBALA CITY, - 134003
PH :8708357725.
214. HIRA MOTORS (2740--), AMBALA CHANDIGARH NATIONAL HIGHWAY, BALDEV NAGAR, AMBALA CITY - 134002
PH :9255285212.
215. RAVI MOTORS (8988--), 125 STAFF ROAD, HOTEL SAVOY, AMBALA CANTT-126 102, - 133001
PH :9315110209.

BADHARA

216. S.S MOTORS (5735--), 3 KM. SATNALI ROAD, BADHRA - 127308, DISTRICT - CHARKI DADRI, HARYANA - 127308
PH :9255141288.

BAHADURGARH

217. G L AUTOMOBILE (5263--), MAIN DELHI ROHTAK ROAD, NEAR LAST METRO PILLAR NO. 912, BAHADURGARH, DISTRICT- JHAJJAR, HARYANA - 124507 - 124507
PH :9416303473.

BARARA

218. LUXMI AUTOZONE (5334--), VPO BARARA , DISTRICT - AMBALA, HARYANA, - 133201
PH :8222024046.

BARWALA (HARYANA)

219. FAQIR CHAND QUALITY FUELS (5435--), KILLA NO.20L.H.S. NH-65, CHANDIGARH ROAD - BARWALA, DISTRICT - HISAR, HARYANA - 125121
PH :9991000764.

BHIWANI

220. VEER MOTOR WORKSHOP (8958--), 22,23,24 AUTO MARKET, LOHARU ROAD, BHIWANI, HARYANA-127021 - 127021
PH :9416057857.

BHUNA

221. MITTAL AUTOMOBILES (5748--), NEAR BUS STAND ,JAKHAL ROAD - BHUNA, PIN-125111, DISTRICT-FATEHABAD, HARYANA - 125111
PH :9813207221.

FARIDABAD

Maruti Authorized Service Station (AS ON 31.01.2026)

222. BALAJI SERVICE STATION (4956--), SECTOR 23-24, MAIN ROAD, NEAR BALAJI DHARM KATA, FARIDABAD-121004, HARYANA - 121001	237. QUTAB AUTO PVT. LTD. (3668--), KHEWAT/ KHATA NO 714/909, VILLAGE JHARSA, UNITECH CYBER PARK ROAD, SECTOR 39, GURGAON, HARYANA 122001 - 122001 PH -9811687333.	249. VINAYAK MOTORS (9024--), OPP. MAHARAJA PALACE ,AMBALA HISSAR ROAD , ISMAILABAD-136129 , HARYANA - 136129 PH -9034820190.	260. SAINI MOTORS (2131--), G.T. ROAD, UMRI CHOWK, KURUKSHETRA, (HARYANA) - 136118 PH -8996183931.
223. INSUH AUTO (377--), 13/3 MAIN MATHURA ROAD, NEAR NHPF CHOWK, FARIDABAD, HARYANA - 121003 - 121003	238. RAJASTHAN AUTO WORKS (4760--), LT. ATUL KARATIA MARG, NEAR PETROL PUMP, AKASHI FILLING STATION, AMAN PURA, SECTOR-5 ROAD, GURGAON-122001 (HARYANA) - 122001 PH -9910070220.	ISRAMA	LOHARU
224. KHURANA AUTOMOBILES (2863--), 3C/60 B.P. (OPPOSITE ESI HOSPITAL), N.I.T., FARIDABAD, - 121001	239. S G MOTORS (5756--), PLOT NO 494, SECTOR 37., PACE CITY II, VUDYOG VIHAR VI - GURGAON, DISTRICT-GURGAON, HARYANA - 122001 PH -9711770092.	250. SHIV DARSHAN AUTOMOBILES (6051--), ISRAMA PANIPAT ROAD, NR. NC COLLEGE, ISRAMA-132103, DISTRICT-PANIPAT , HARYANA - 132107 PH -9911366230.	261. BHAUWNA MOTORS (6028--), BHIWANI ROAD, LOHARU-127201, DISTRICT-BHIWANI , HARYANA - 127201 PH -8901276555.
225. PERFECT AUTOZONE (P). LTD. (5667--), PLOT NO 9, ADJACENT TO UNION BANK OF INDIA, ANKHIR, OPP SEC 21-D, MAIN BADHKAL ROAD, DISTT FARIDABAD, HARYANA - 121001 - 121001	240. M R MOTORS (8946--), VIJAY VIHAR, MAIN SILOKHRA ROAD, SEC-30, GURGAON- 122002 , HARYANA , - 122001 PH -9992111244.	JHAJJAR	MAHENDERGARH
226. SARASWATI AUTOMOBILES (4465--), 44 B.P, NEELAM BATA ROAD, N.I.T, FARIDABAD - 121001	241. SOMESH AUTOMOBILES (455--), PLOT NO 249/2/8, BLOCK A, ROAD NO A-56, DLF PHASE 1, GURGAON 122002 - 122002 PH -9650690000.	251. VASUNDHRA MOTORS (1467--), REWARI ROAD, JHAJJAR-124 103, (HARYANA), - 124103 PH -9812012180.	262. SHREE SHYAM MOTORS (8960--), NEAR I.O.C PETROL PUMP, MAHENDERGARH-123029, DISTRICT-MAHENDERGARH, (HARYANA) - 123028
FARRUKHNAGAR	242. TOP GEAR AUTOMOTIVE ENGINEERS (4464--), G-34, REZANG LA ROAD, ASHOK VIHAR PHASE 2, GURGAON 122006 - 122001	JIND	MANDI ADAMPUR
227. M R MOTORS (5946--), GURGAON-JHAJJAR ROAD, OPP. ANAAS MANDI, FARRUKHNAGAR-123506, DISTRICT-GURGAON, HARYANA - 122506 PH -9810831200.	243. SOMESH AUTOMOBILES (-), PLOT NO 249/2/8, BLOCK A, ROAD NO A-56, DLF PHASE 1, GURGAON 122002 - 122002 PH -9650690000.	252. MOHIT MOTORS (1574--), SAFIDON GATE, JIND-126 102, , - 126102 PH -9355129844.	263. MITTAL AUTO AGENCIES (2966--), 113-15 AUTO MARKET, MANDI ADAMPUR, (HARYANA), - 125052 PH -9729173300.
FATEHABAD (HARYANA)	244. VIKAS AUTOMOBILES (4744--), SHANTI NIKETAN, OPP. JIND BYE PASS, G.T. ROAD, HANSI, DISTRICT-HISSAR (HARYANA) - 125033 PH -9466248037.	KAITHAL	MANESAR
228. DHINGRA AUTOMOBILES (1856--), G.T. ROAD, FATEHABAD, (HARYANA) , - 125050 PH -9896012906.	245. SAI AUTOMOBILES (5267--), TOSHAM ROAD, NEAR AAKASH INSTITUTE, SECTOR-13, HISSAR, HARYANA , - 125001 PH -7988238034.	KANINA	NILOKHERI
229. MOTOR CRAFT (3064--), OPPOSITE M M COLLEGE, SIRSA ROAD, FATEHABAD, 125050 - 125050 PH -9254080200.	246. SALASAR AUTO (4735--), OPP. VIDYUT NAGAR GATE NO. 2, DELHI ROAD, HISSAR-125001, HARYANA - 125001 PH -9355486716.	253. HIND AUTOMOBILES (1858--), AMBALA ROAD, KAITHAL, , - 136027 PH -7015806781.	264. MAITRI SERVICE STATION (2378--), N.H.8, DELHI-JAIPUR ROAD, MANESAR (GURGAON), - 122001 PH -9818001128.
GANAUR	247. VED MOTORS (2247--), HIGHWAY ROAD, NEAR RAILWAY STATION CHOWK, HODAL-121 106, (FARIDABAD) - 121106 PH -7988978936.	254. SHREE KRISHNA MOTORS (5953--), BHOOP SINGH MARKET, NEAR PETROL PUMP, MAHINDERGARH ROAD, KANINA-123027, DISTRICT-MAHINDERGARH, HARYANA - 123027 PH -9467641678.	265. SAHIL MOTORS (8974--), NEW NEHSIL ROAD, NILOKHERI, DISTRICT KARNAL , NILOKHERI-132117, HARYANA - 132117 PH -9812510190.
GANGWA	HODAL	KARNAL	PALWAL
231. PANCHMUKHI AUTOMOBILES (5968--), HISSAR RAJGARH ROAD,, GANGWA-125001, DISTRICT-HISSAR, HARYANA - 125001 PH -9728100029.	248. ASHOKA MOTORS (6041--), OPP. PARTAP FILLING STATION, LADWA ROAD,, TEHSIL-INDRI, DISTRICT-KARNAL, HARYANA , - 132041 PH -8813000316.	255. RUBY MOTORS (4734--), 28/3 HSIDC, NEAR NAMASTEY CHOWK INDUSTRIAL AREA, KARNAL -132001, HARYANA - 132001 PH -9896345633.	266. D.K. & R.K. MOTORS (1159--), NEAR BUS STAND , NH-2 PALWAL, PALWAL, - 121102
GOHANA	INDRI	KHARKHODA	267. SHEELA MOTORS (5141--), OPP MUNICIPAL COUNCIL OFFICE, OLD G T ROAD, PALWAL, DISTRICT - FARIDABAD, HARYANA - 121102
232. KRISHNA MOTORS (4132--), ROHTAK ROAD, GOHANA, , - 131301 PH -9017062999.	ISMAILABAD	KUNDLI	PANCHKULA
GURGAON		257. SHIV SHAKTI AUTOMOBILES (4628--), SECTOR 53, HSIDC, JANTI ROAD, NEAR K.H.I COLD STORAGE, KUNDLI, SONEPAT, HARYANA - 131028 - 131001 PH -9811047480.	268. PANCHKULA AUTO SERVICES (1949--), PLOT NO.300, PHASE-II INDUSTRIAL AREA, PANCHKULA-134 109, (HARYANA) - 134109 PH -9872441546.
233. A & A ENTERPRISES (4639--), 396, PHASE-IV, UDYOG VIHAR, GURGAON (HARYANA) - 122015 PH -8851819511.		KURUKSHETRA	PANIPAT
234. GANGA MOTORS (363--), SHIVPURI, GURGAON-122 001 - 122001		258. KARTAR MOTORS (1645--), RED ROAD, KURUKSHETRA-132 118, , - 136118 PH -9896245900.	269. PREM MOTORS (2266--), PLOT NO.134, SECTOR 25 INDUSTRIAL AREA, PANIPAT, - 132103 PH -8996306380.
235. KUMAR AUTOMOBILES (4848--), KILLA NO 1/2, NEAR BMW TRAINING CENTER, SPR ROAD, GURUGRAM, HARYANA - 122002		259. KARTAR MOTORS (5349--), PLOT O 65-66, SECTOR -2, HUDA INDUSTRIAL, AREA KURUKSHETRA, 136118 PH -9896245900.	PATAUDI
236. MANISH AUTOMOBILES (4777--), GHATA ROAD, VAZIRABAD, NEAR SECTOR-56, GURGAON-122001, HARYANA - 122001			270. SHUBHAM AUTOMOBILES (4641--), REWARI ROAD, PATAUDI, DISTT. GURGAON, - 122413
			PEHOWA
			271. AMAR AUTOMOBILES (2270--), OPP. DAV COLLEGE, AMBALA ROAD, PEHOWA DISTT. KURUKSHETRA, (HARYANA) - 136128 PH -8900602974.
			RAIDAUR

272. SHRI SHIVAM AUTOMOBILES (5852--), S.K. ROAD, OPP. ESSAR PETROL PUMP, RADAUR-135133, DISTRICT-YAMUNANAGAR, HARYANA - 135133
PH :9034384003.

REWARI

273. GAUTAM MOTORS (1837--), NARNAUL ROAD, REWARI -123401 (HARYANA), , - 123401
PH :9416064894.
274. PULYANI MOTORS (8994--), OPPOSITE POLICE LINE, DELHI ROAD, REWARI - 123401
PH :9813433433.
275. SHIVAM SERVICES (1466--), OPPOSITE B.D.O. BLOCK OFFICE, GARHI BOLNI ROAD, REWARI, HARYANA - 123401 - 123401

SADHAURA

276. SHREE GANESH MOTORS (5959--), NEAR INDIAN OIL PETROL PUMP, KALA AMB ROAD, SADHAURA-133204, DISTRICT-YAMUNANAGAR, HARYANA - 133204
PH :9813376260.

SHAHABAD

277. MAHALAXMI MOTORS (354--), LADWA ROAD, SHAHABAD MARKANDA-136 135, (HARYANA), - 136135
PH :9812036433.

SIWANI

278. GANESH AUTOMOBILES (5931--), NEAR RELIANCE PETROL PUMP, HISAR ROAD, SIWANI, DISTRICT-BHIWANI, HARYANA - 127046 - 127046
PH :8607113000.

SOHNA

279. SHRI SHYAM MOTORS (8978--), OPP. RAGHUNANDAN PETROL PUMP, NEAR GD GOENKA INTERNATIONAL SCHOOL, SOHNA-122103, HARYANA - 122103
PH :9416455660.

SONIPAT

280. NEW HIGHWAY MOTORS (8923--), MAIN DELHI ROAD, SONEPAT, HARYANA, - 131001
PH :9416672009.

TAURU

281. R M MOTORS (5842--), SOHNA ROAD, WARD NO. - 4, OPPOSITE UCO BANK, TAURU, DISTRICT - NUH, HARYANA - 122105 - 122105
PH :9812378663.

TOSHAM

282. MOHINI AUTOMOBILES (6026--), OPP. NEW ANAJ MANDI, NEAR MINI BANK, TOSHAM-127040 , DISTRICT-BHIWANI, HARYANA - 127040

UKLANA

283. SHREE GANESH MOTORS (5747--), PLOT NO#29, UKLANA MANDI, DISTRICT-HISSAR, PIN-125113, HARYANA - 125713
PH :8168399836.

HIMACHAL PRADESH

ALAMPUR

284. SUBH AUTOMOBILES (5964--), SH-39,ALAMPUR-176110, DISTRICT-KANGRA, HIMACHAL PRADESH, - 176082
PH :9816675551.

AMB

285. SHUBHAM MOTORS (5933--), NEAR PINDI ASHRAM, HAMIRPUR ROAD, AMB-177203, DISTRICT-UNA, HIMACHAL PRADESH - 177203
PH :9418114176.

ANNI

286. SARAJ AUTO WORLD (6044--), VERMA BUILDING, NR. NAGAN HARIPUR , TEHSIL, ANNI-172026 , DISTRICT-KULLU , HIMACHAL PRADESH - 172026

BADDI

287. LAJ MOTORS (5541--), 436, MAJJA SURAJ, MAJRA LABANA, BADDI, DISTRICT - SOLAN, HIMACHAL PRADESH - 173205
PH :9816039189.

BANGANA

288. TRISHLA AUTOMOBILES (5869--), VILLAGE BPO & TEHSIL BANGANA, BANGANA-174307, DISTRICT-UNA, HIMACHAL PRADESH - 174307
PH :9817645350.

BANOI

289. BABA SERVICE STATION (4634--), VILL BANOI, TEH SHAHPUR P.O., BANOI, DIST KANGRA (HIMACHAL PRADESH) - 176209
PH :9418051290.

BARMANA

290. AVER AUTO (9038--), VILLAGE LAGHAT, TEHSIL SADAR, PO BARMANA-174013, HIMACHAL PRADESH, - 174013
PH :9418064130.

BHAMBLA

291. DHIMAN MOTORS (3837--), PLOT NO. 42., INDUSTRIAL AREA, BHAMBLA, JAHU, DISTT MANDI - 175004
PH :9816227437.

BHUNTAR

292. HANDA MOTORS (4262--), HANDA COMPLEX, NEAR AIRPORT, BHUNTAR, KULLU (H.P) - 175125
PH :9816007003.

BILASPUR (H.P)

293. BHASKAR AUTO SPARE & SERVICE (1730--), 8-B ROURA SECTOR II, (NEAR DURGA MANDIR), BILASPUR-174 001 (H.P.), - 174001
PH :9816436001.

CHAMBA

294. AUTOZONE (5247--), PATHANKOT RAOD , PAREL , SULTANPUR - CHAMBA , DISTRICT - CHAMBA , HIMACHAL PRADESH - 176310
PH :9418214848.

295. KAILASH SERVICE STATION (3527--), MOHALLA TATWANI, NEAR NEW BUS STAND, CHAMBA, HIMACHAL PRADESH - 176310
PH :9896679445.

DARLAGHAT

296. CHANDEL SERVICE STATION (5233--), DARLAGHAT , DISTRICT-SOLAN, HIMACHAL PRADESH, - 171102
PH :9816039865.

DHARAMSHALA

297. HIM AUTO STATION (8964--), VPO DARI, DHARAMSHALA, (H.P.), - 176057
PH :9418029655.
298. SHIV SHAKTI CAR CARE (1277--), NEAR RAINBOW SCHOOL, DARI ROAD, DHARAMSHALA-176 057, - 176057
PH :9318752074.

GHUMARWIN

299. BHASKAR AUTO SPARE & SERVICE (5147--), VILLAGE KULARU, GHUMARWIN, DISTRICT - BILASPUR, HIMACHAL PRADESH - 174021
PH :9816090504.

GUMMA

300. CHAUHAN ENTERPRISES (5660--), VILLAGE GUMMA, TEHSIL KOTKHAI, GUMMA, DISTRICT - SHIMLA, HIMACHAL PRADESH - 171202
PH :9218690917.

JAWALA JI

301. SRI PARBHAT MOTORS (8965--), VPO & TEHSIL, JAWAL-(BHANEI), DISTRICT - KANGRA, (HIMACHAL PRADESH), - 176023
PH :9805511205.

JAWALAMUKHI

302. LAKSHMI AUTO SPARE & SERVICE CENTRE (4630--), NEAR GANJU BAGH, DEHRA ROAD, JAWALAMUKHI, TEH. DEHRA, DIST. KANGRA (HIMACHAL PRADESH) - 176031
PH :9418091048.

KARSOG

303. DEEPAK AUTOMOBILES (4057--), MR. DEEPAK SHARMA, C/O SHARMA GENERAL STORE, KARSOG, MAIN BAZAR, DIST MANDI, HIMACHAL PRADESH - 175011

KAZA

304. SPITI MOTORS (6033--), VILL. & PO, KAZA-172114, DISTRICT-LAHAUL & SPITI, HIMACHAL PRADESH, - 172114
PH :9418758974.

KEYLONG

305. YOLAX MOTORS (3830--), KEYLONG, DISTT. LAHAUL & SPITI, , - 175133
PH :7651031580.

KULLU

306. PURI BROTHER'S (4242--), I.O.C DEALER, DHALPUR, KULLU, H.P. - 175101
PH :9818395358.

KUMARHATTI

307. SOLAN AUTOMOBILES PVT. LTD. (6420--), DAGHOTA(SOLAN), P.O.KUMAR HATTI-173 229 (H.P.), , - 173229
PH :9816030330.

KUMARSAIN

308. RED LINE (5965--), VILL. KEPU, PO KIRTI SAINZ, TEHSIL, KUMARSAIN-172030, DISTRICT-SHIMLA, HIMACHAL PRADESH - 172030
PH :9816027007.

MANDI

309. BHAGWATI AUTOMOBILES (269--), PLOT NO. 3, INDUSTRIAL AREA PHASE 3, SAULI KHAD, MANDI, HIMACHAL PRADESH - 175001
PH :9418461897.

MARANDA

310. MODERN SERVICE CENTRE (1175--), PUSHPO COMPLEX, MARANDA-176 102, (H.P.), - 176102
PH :7018243011.

MUBARAKPUR

311. SHIV SHAKTI AUTOMOBILES (1732--), HOSHARPUR ROAD, MUBARAKPUR, DISTT. UNA, (H.P.) - 177202
PH :9418328361.

NADAUN

312. CAR CARE ENGINEERS (4423--), HOSHARPUR ROAD, MANPUL, NADAUN DISTT, HAMIRPUR, HP - 177033
PH :9857799080.

NAHAN

313. AGGARWAL MOTORS (3334--), GUNNU GHAT, NEAR TELECOM COLONY, NAHAN-173 001, - 173001
PH :9418023558.

NALAGARH

314. KRISHNA MOTOR (5275--), PEERTHAN PO NALAGARH, DISTRICT - SOLAN, HIMACHAL PRADESH, - 174101
PH :9418094064.

PALAMPUR

Maruti Authorized Service Station (AS ON 31.01.2026)

315. SANGRAI AUTO SERVICE (6430--), OPP. SITLA MATA MANDIR, PALAMPUR-176 061, DISTT. KANGRA (H.P.), - 176061
PH :9418085915

316. SANTOSHI AUTOMOBILES (4776--), VILLAGE & P.O. BHAWARNA, TEHSIL, PALAMPUR, DISTRICT- KANGRA (HIMACHAL PRADESH) - 176083
PH :9418184367.

PAONTA SAHIB

317. SUMEET MOTORS (1441--), SHAMSHERPUR, PAONTA SAHIB-173 025, (H.P.), - 173025
PH :9418018329.

PAPROLA

318. ABROL AUTOMOBILES (3470--), VPO PAPROLA, TEHSIL BAJNATH, DISTT KANGRA, HIMACHAL PRADESH -176115 - 176115
PH :9418066917.

PARWANOO

319. DIVYA SALES (6428--), DIVYA BHAWAN VILL. KAMLI, SECTOR-1, PARWANOO, - 173220
PH :9816032002.

PATLI KUHAL

320. JAMDAGNI MOTORS (760--), VILLAGE PATLI KUHAL, P.O.KATRAIN, DISTT.KULLU (H.P.), - 175129
PH :9816040247.

RAJGARH (H.P)

321. RAJGARH AUTOMOBILES (5458--), PO RAJGARH,TEH RAJGARH, DISTRICT - SIRMOUR, HIMACHAL PRADESH, - 173101
PH :9418021344.

RAMPUR BUSHAHR

322. HIGHWAY SERVICE STATION (2649--), CHUHA BAG, RAMPUR BUSHAHR, (H.P.) - 172001 - 172001
PH :9805831627.
323. KRISHNA AUTOMOBILE (4438--), VILL CHUHA BAG, RAMPUR BUSHAHR-172001, - 172001
PH :9418036091.

RECONG PEO

324. KRISH AUTO (4134--), RECONG PEO, TEHSIL KALPA, DISTT KINNAUR, HIMACHAL PRADESH - 172707 - 172107
PH :9816579999.

ROHRU

325. KAMTA SERVICE STATION (2338--), ROHRU, DISTT. SHIMLA, (H.P.), - 171207
PH :9418040106.

SALASHI

326. THAKUR AUTOMOBILES (3838--), JALANDHAR MANALI NATIONAL HIGHWAY (NH70), NEAR DAY SCHOOL, VILLAGE SALASHI, DISTT HAMIRPUR - 177001
PH :9418490904.

SARKAGHAT

327. SHAKUNTALA MOTORS (5755--), MANDI ROAD-SARKAGHAT, DISTRICT-MANDI, PIN-175024, HIMACHAL PRADESH - 175024
PH :9817818822.

SHIMLA

328. GURRAJ AUTO SERVICE (757--), NEAR CPRI ROAD, BEMLOI, SHIMLA-171 001, - 171001
PH :9816233030.

329. MOTO WORLD (6433--), NAVBAHAR, SHIMLA-171 002, - 171002
PH :9459050769.

SOLAN

330. SOLAN SERVICE CENTRE (764--), BYE PASS, NEAR PWD OFFICE, SOLAN-173 212, - 173212
PH :9816022640.

SUBATHU

331. SHYAM AUTOMOBILES (4558--), NEAR SHANTI FILLING STATION, V.P.O RADYANA, SUBATHU, DIST SOLAN (HIMACHAL PRADESH) - 173206
PH :9418061757.

SUNDERNAGAR

332. V.M. SERVICE STATION (3777--), CHAMUKHA, P O HARABAGH, NH-21, SUNDER NAGAR-174 402 (H.P.) - 175019
PH :9418064130.

THEOG

333. JOSHI MOTORS (2778--), SHALLI BAZAR, THEOG, DIST. SHIMLA, (H.P.) - 171201
PH :9459100051.

UNA (H.P)

334. RUDRA MOTORS (3925--), NEAR OLD HOSPITAL CHOWK, NH-22, UNA - 174303 (H.P.), - 174303
PH :8628803717.

335. TRINITY AUTO FAST ENGINEERS (1755--), JALGRAN TABBA, NANGAL ROAD, UNA, HIMACHAL PRADESH - 174303 - 174303
PH :9816628020.

JAMMU AND KASHMIR

AWANTIPORA

336. KESAR AUTOMOBILES (5938--), KHAR ,MORH,NATIONAL HIGHWAY 1A, AWANTIPORA-192122, DISTRICT-PULWAMA, JAMMU & KASHMIR - 192122
PH :7780873161.

BARAMULA

337. MARUTI MASTERS (4369--), KANISPORA, BARAMULA, KASHMIR, - 193101
PH :9906864748.

CHADOORA

338. VEHICLE MASTERS (4661--), MAIN ROAD, CHADOORA-190001, DIST. BUDGAM, JAMMU & KASHMIR - 190001
PH :9419441217.

JAMMU

339. CARE POINT AUTOMOBILES (4652--), OPP. BSF CAMPUS ROAD, AKHNOOR ROAD, JAMMU-180002, - 180002
PH :9419283151.

340. CHECK N CARE AUTOMOBILE CENTRE (1773--), OPP. GURUDWARA SRI SINGH SABHA, NARWAL BYE PASS ROAD, JAMMU, - 180001
PH :9419190796.

341. KWIK FIT (2343--), AMBPHALLA, B.C. ROAD, JAMMU-180 001, - 180001
PH :9419104400.

342. MAGNA GARAGES (441--), NARWAL CHOWK, TRANSPORT NAGAR, JAMMU-180 006 - 180006
PH :9796800000.

343. NATIONAL MOTORS (5074--), OPP APNA VIHAR.B.P. PETROL PUMP , NH-1A.KUNJWANI JAMMU, DISTRICT - JAMMU, JAMMU & KASHMIR - 180010
PH :9419322222.

KATHUA

344. KATHUA MOTORS (3323--), HATLI MORE, KATHUA-184 102, (J&K), - 184102
PH :9419150694.

KATRA

345. VIDYA AUTOMOBILES (1165--), JAMMU ROAD, KATRA, (J&K) - 182320
PH :9596676576.

KISHTWAR

346. MINTOO MOTORS (4133--), NEAR H.H.P.C SCHOOL, KISHTWAR, DISTT DODA (J & K), - 182204
PH :9622055250.

MATTAN

347. DANISH AUTOMOBILES (5478--), PAHAL GAM ROAD, STATE HIGHWAY - MATTAN, DISTRICT - ANANTNAG, JAMMU & KASHMIR - 192125
PH :9419041724.

PHINTER

348. BADYAL AUTOMOBILES (4149--), C/O BADYAL AUTOMOBILE, PHINTER, TEH BILLAWAR, DISTT KATHUA PHINTER (J & K) - 184203
PH :9419691916.

PULWAMA

349. KASHMIR AUTOMOBILES (8969--), NEAR FRUIT MANDI, PRICHOO PULWAMA, KASHMIR - 192301
PH :962222291.

RAJOURI

350. MILLENNIUM MOTORADES (2937--), ALPHA GATE, T.C.P., RAJOURI-185 132, (J&K) - 185132
PH :7006122022.

REASI

351. U LIKE CAR CLINIC (4771--), GITA NAGAR, REASI JYOTIPURAM ROAD, REASI, DISTRICT-REASI (JAMMU & KASHMIR) - 182311
PH :7006083550.

SAMBHA

352. DHANSAR CAR CLINIC (5146--), NATIONAL HIGHWAY, SUPPAL SAMBHA, DISTRICT - JAMMU, J&K - 184120
PH :9419393949.

SOPORE

353. HASSAN MOTORS (2434--), BPC DEALER, SOPORE, KASHMIR, - 193201
PH :9906506786.

SRINAGAR

354. A.B. MOTORS (5072--), BEHIND NEW SECRETARIAT ROAD, SRINAGAR, DISTRICT - SRINAGAR, JAMMU & KASHMIR - 190009
PH :9419007966.

355. ADAM'S AUTOAIDES (5766--), SIDCO INDUSTRIAL ESTATE,SHALTENG, SRINAGAR - 190015, DISTRICT-SRINAGAR, JAMMU & KASHMIR - 191202
PH :9906580089.

356. HASEEN MOTORS (5249--), BY-PASS BRIDGE ,BAGH MEHTAB, SRINAGAR , JAMMU & KASHMIR, - 190019
PH :9419006847.

357. NEW NATIONAL AUTOMOBILES (5073--), RAM BAGH,AIRPORT ROAD,SRINAGAR, DISTRICT - SRINAGAR, JAMMU & KASHMIR, - 190009
PH :9419013778.

SURNKOTE

358. A.S. AUTOMOBILES (5976--), IQBAL NAGAR,SURANKOTE, DISTRICT-POONCH, JAMMU & KASHMIR , - 185121
PH :9469014765.

VIJAYPUR

359. BANSI LAL MARUTI SERVICE STATION (4748--), SWANKHA MORH, NATIONAL HIGHWAY, VIJAYPUR-180001, DISTRICT-SAMBA (JAMMU & KASHMIR) - 180001
PH :9419106798.

JHARKHAND

BOKARO

360. UUEA (4845--), S-21 CITY CENTRE, BOKARO STEEL CITY, BOKARO-827004, JHARKHAND - 827004
PH :9431127441.

DEOGHAR

361. GARGEE AUTOMOBILES (2276--), OPP. D.C. RESIDENCE, CIRCULAR ROAD, BARMASIA, DEOGHAR-814 112 (JHARKHAND) - 814112 PH :9405080983.	372. BHARAT MOTORS (5970--), SHIV JEE CHOWK, HARMU ROAD, RANCHI-834001, DISTRICT-RANCHI, JHARKHAND - 834001, - 834001 PH :9608502258.	383. CHANDANA MOTORS (4872--), NO. 9 UNIVERSITY ROAD, GNANABHARTHI (POST), MARIYAAPPANA PALYA, BANGALORE-560056 (KARNATAKA) - 560056 PH :9880659864.	396. SOLOTECH SERVICE CENTRE (5245--), 50 FEET MAIN ROAD, AVALAHALLI, MUNESHWARA BLOCK, DISTRICT - BANGALORE, KARNATAKA - 560010 PH :9845772634.
DHANBAD	373. MARUTI AUTOMOBILES (5127--), HOTEL AKASHWANI MANSION, RATU ROAD, RANCHI-834 001, - 834001 PH :9835156186.	384. GIRIMAJI ENTERPRISES (258--), NO.2 27TH CROSS, K R ROAD, B S K II STAGE, BANGALORE-560 070 PH :9844004403.	397. SPEED MOTORS (1750--), 17/1 SUBRAMANYAPURA MAIN ROAD, KADIRENAHALLI, PADMANABHA NAGAR, BANGALORE-560 070 PH :9845153102.
363. PRIYA AUTO (4868--), OPPOSITE MINNING SCHOOL, SINDRI ROAD, BHAGA, DHANBAD-828301, JHARKHAND - 828301 PH :9431124817.	374. MARUTI CLINIC (2548--), LAL KOTHI, OLD HAZARIBAGH ROAD, KANTA TOLI, RANCHI-1, JHARKHAND - 834001 PH :9431109214.	385. GREEN CARS PVT. LTD. (2154--), NO.12/6 80 FEET ROAD, 6TH BLOCK KORAMANGALA, BANGALORE-560 095, PH :9845020796.	398. TEAM TECH AUTOMOBILES (5662--), 78/1, SULEKUNDE, NEAR MUTHANALLUR CROSS., SARJAPURA MAIN ROAD, BANGALORE -562125 - 562125 PH :9538516111.
HAZARIBAGH	KARNATAKA	386. KESHKAMAL MOTORS (2075--), NO.943 21ST MAIN, BANASHANKARI 2ND STAGE, (NEAR KIMS MEDICAL COLLEGE), BANGALORE-560 070 PH :9448071067.	399. TRINITY CAR CARE PVT. LTD (5851--), SURVEY NO 52/1, SRI GANDHADAKAVAL VILLAGE, NAGARBHAVI, BANGALORE-560091, DISTRICT-BANGALORE , KARNATAKA - 560091 PH :9880793980.
364. ALOK MOTORS (379--), NEAR INDRAPURI CHAWK, HAZARIBAG-825 301, (JHARKHAND), - 825301 PH :9431140740.	ATHANI	387. LE MANS MOTORS (3460--), NEAR AYYAPPA TEMPLE, S.M. ROAD, T. DASARAHALLY, BANGALORE-560 057 PH :9845145001.	400. TRINITY MOTORS (4638--), NO. 36, 4TH STAGE, W.C. ROAD, BASAVESHWARANAGAR, BANGALORE-560079 - 560079 PH :9845539474.
365. SRI RAM MARUTI SERVICE STATION (3663--), DEVI DAYAL LANE, HAZARIBAG-825 301, (JHARKHAND), - 825301 PH :9431384877.	BAGALKOT	388. CANARA MOTORS (8987--), 9TH MAIN, NEAR PARLE G, TUMKUR ROAD, CHIKKABIDARAKALLU VILLAGE, BANGALORE-560073. - 560058 PH :9845842288.	401. VISWAS CAR SERVICES PVT. LTD. (3238--), NO 2, (OUT NO OF SY.NO 100/2) OFF SERVICE ROAD, KALYAN NAGAR ROAD, CHELEKERE , BANASWADI POST BANGALORE -560043 - 560043 PH :9591313379.
JAMSHEDPUR	376. NARA AUTOMOBILES (4357--), TP NO. 158 A/2, WARD NO. 10, SHABADI COMPOUND EXTN, BAGALKOT-587101 - 587101 PH :9880875595.	389. NEXUS (1153--), 2ND MAIN KHB COLONY, GANDHI NAGAR, YELAHANKA, BANGALORE-560 064 PH :9844013436.	BELGAUM
366. MAHESHWARI BROS. (5124--), NATIONAL HIGHWAY 33, BALIGUMA MANGO, P.O.-M.G.M. MEDICAL COLLEGE, JAMSHEDPUR-831 018 - 831018 PH :9031144444.	BAILHONGAL	390. NEXUS (2768--), #275/301, 80 FEET ROAD, OPP. M.S. RAMAIAH HOSPITAL (BEL ROAD), RMV 2ND STAGE, BANGALORE-560 094 PH :9844013436.	402. BHARAT AUTO SCAN (350--), 892/1 PB ROAD, BELGAUM-590 016, , PH :9448120495.
KHUNTI	377. MAHANATH MOTORS (5763--), RTO ROAD BAILHONGAL, TALUK-591102, DISTRICT-BELGAUM, KARNATAKA, - 591102 PH :9535653166.	391. PACE AUTOMOBILES (1057--), 6TH MAIN HMT LAYOUT, R.T. NAGAR, BANGALORE-560 032, PH :9845004710.	BIJAPUR
367. MOD MOBILES (5579--), MAIN ROAD, RANCHI ROAD - KHUNTI, DISTRICT - KHUNTI, PIN - 835210, JHARKHAND - 835210 PH :9304468855.	BALEHONNUR	392. PUSHPAK MOTORS (4642--), 105/1 2ND MAIN NANJAPPA LAYOUT, VIDYARANYAPURA MAIN ROAD, (OPP KRUTHIKA HOSPITAL), BANGALORE-560097 - 560097 PH :9845087842.	403. BAGALI MOTORS (5159--), SHIKARKHANA ROAD, BIJAPUR - 586104, DISTRICT - BIJAPUR, KARNATAKA - 586104 PH :9448100444.
MAITHON	378. CREST MOTORS (5253--), MALLE GOWDA COMPLEX, 278, JAYAPURA-KOPPA MAIN ROAD, BALEHONNUR, CHIKKAMAGALURU DISTRICT-577112, KARNATAKA - 577204 PH :9148000131.	393. RAJ MOTORS (2829--), NO.10 MAGADI MAIN ROAD, OPP. UNANI MEDICINE INSTITUTE, KOTIGEPALYA, BANGALORE-560 091 PH :9663555677.	CHIKBALLAPUR
368. MAITHON SERVICING CENTRE (5838--), MAITHON ROAD, NEAR VMC COLONY, SANJAY CHOWK, PO CHIRKUNDA-MAITHON, DISTRICT-DHANBAD, (JHARKHAND) - 828203 PH :7209423707.	BANGALORE	394. SMART CARS (3571--), 3RD CROSS NEAR J.B. TILES, KAGGADASA PURA MAIN ROAD, C.V. RAMAN NAGAR, BANGALORE-560 093 PH :9863324361.	404. SUKOVE ENTERPRISES (3426--), B.B. ROAD N.H.7, CHIKBALLAPUR-562 101, (KARNATAKA), PH :9880607034.
PAKUR	379. ADARSHA AUTOMOBILES (4553--), 108/9, HALASAHALLI ROAD, OPP HP GAS GODOWN, NEXT TO SK FLOOR MILL, VARTHUR, BANGALORE - 560087 - 560037 PH :9880195465.	395. SOLOTECH MOTORS (2760--), SURVEY NO.82/2, D'SOUZA NAGAR, HOSAKEREHALLI-BANGALURU, DISTRICT-BANGALURU 560085, KARNATAKA - 560085	CHIKMAGALUR
369. SPEED WHEEL SERVICE CENTRE-PAKUR (4976--), MAIN ROAD, PAKUR - 816107, , - 816107 PH :9434101917.	380. ANEKAR MOTORS (227--), 230 MAGADI ROAD, BANGALORE-560 023, (KARNATAKA), , PH :9845889911.		405. AAMANTHRANA MOTORS (4346--), K.M. ROAD, CHIKMAGALUR, - 577101 PH :9945462658.
RAMGARH	381. ASHWA CARS (9982--), #14, 1ST MAIN, 6TH CROSS, SANJEEVNI NAGAR, MOODAPALYA, BANGALORE 560072, - 560072 PH :9611413516.		406. FORMULA MOTORS (338--), K.M. ROAD, CHIKMAGALUR-577 101, , PH :9448743284.
370. RAHIL MOTORS (5054--), C/O NIYAMAT MISTRI, DUSHAD MOHLA, DISTRICT RAMGARH CANTT., - 829122 PH :9771577422.	382. BENAKA MOTORS (3237--), NO.158/2 VIBHUTIPURA, VIGNAN NAGAR BEHIND B.E.M.L., NEAR RENUKA SWIMMING POOL, BANGALORE-560 017 PH :9845212416.		CHIKODI
371. SAINI MOTORS (5126--), NEAR VISWAKARMA MANDIR, MAIN ROAD, RAMGARH CANTT 829 122, DISTT. HAZARIBAG - 829122 PH :9835141302.			407. OM MOTORS (9026--), 1751, ANKALI ROAD, NEAR B K COLLEGE, CHIKODI-591201, KARNATAKA - 591201 PH :8861555999.
RANCHI			CHINTAMANI

Maruti Authorized Service Station (AS ON 31.01.2026)

408. TIPPUR AUTO GARAGE (5770-), MG ROAD, NEAR BAGEPALLI CROSS, CHINTAMANI-563125, DISTRICT-KALOR, KARNATAKA - 563125
PH :9036895340.

CHITRADURGA

409. PRINCIPAL (255-), J.M.I.T, N.H.4, P.B. NO.73, CHITRADURGA-577 502
PH :9731330300.

DAVANGERE

410. HEGDE AUTO CENTER (172-), NO 2007/37, NEAR BIET, SHAMANUR ROAD, DAVANGERE, KARNATAKA-577004 - 577004
PH :8494853646.

411. SREE MALLIKARJUNA MOTOR (229-), NO 68, RMC ROAD, NEAR KSRTC BUS STAND, DAVANGERE, KARNATAKA - 577003
PH :9880701015.

DEVANAHALLI

412. SAHARA AUTOMOBILES (8983-), OPP. A. RTO OFFICE, NH-7, B.B. ROAD, DEVANAHALLI-562110, KARNATAKA - 562110
PH :9611150788.

DHARWAD

413. MYSORE GARAGE (2468-), BELGAUM ROAD, DHARWAD-580 001, (KARNATAKA),
PH :9844133273.

DODDABALLAPUR

414. PRESTIGE MOTORS (8996-), NEAR RAILWAY STATION KHASBHAG, DODDABALLAPUR, , - 560026
PH :9900274594.

GADAG

415. MODERN MOTORS (8939-), HUBLI ROAD, GADAG-582 103, (KARNATAKA),
PH :9448746579.

GULBARGA

416. DELUX AUTO SERVICE (5840-), SURVEY NO 77/8,VILLAGE KUSNOOR,NEAR -, UNIVERSITY, SEDAM ROAD, GULBARGA-585104, DISTRICT-GULBARGA, (KARNATAKA) - 585104
PH :9242991292.

HOSPET

417. SUPREME AUTO SERVICE (2569-), NEAR RTO OFFICE, HARIHAR ROAD, HOSPET-583 203, (KARNATAKA)
PH :9845307361.

HUBLI

418. SRI BASAVA MOTORS (4968-), OPP SANA COLLEGE APMC PB ROAD, BHIRIDEVARKOPPA,HUBLI-580025, , - 580025
PH :9980025644.

KADUR

419. SRI SAI MARUTHI SERVICE STATION (5725-), ULUKINAKALLU, NH 206, KADUR, , - 583201
PH :9916947196.

KARKALA

420. KARKALA MOTORS (3549-), TELLAR ROAD, KARKALA-574 104, (KARNATAKA),
PH :9845356244.

KOLAR

421. SHIVA SERVICE POINT (2472-), M.B. ROAD, KOLAR-563 101, (KARNATAKA),
PH :9448228604.

KOLLEGAL

422. FIX PLUS AUTO CARE CENTRE (4249-), C-8, IND. ESTATE, MAHADESHWARA COLLEGE ROAD, KOLLEGAL-571440, - 571440
PH :9448807237.

KOPPA

423. AUTO TECH (3448-), MAIN ROAD, UPPERPET, KOPPA-577 126, (CHIKMAGALUR DIST.)
PH :9448156950.

KUMTA

424. SOLOTECH (4547-), NEAR MARUTI TEMPLE, HANDIGON, KUMTA- 581343, - 581362
PH :9448149607.

KUNDAPUR

425. PRAKASH AUTO SERVICE (4522-), NH-66, NEAR K.E.B., VODERHOBLI, KUNDAPUR, KARNATAKA - 576201
PH :9341035642.

MANIPAL

426. MANIPAL MARUTI AUTO WORKS (4578-), BUILDING NO.1, FLAT NO.: 16 181 N7 & N8, SIDDESH COMPLEX, NEAR R.C.CHURCH, OPP. SIGMA BAR, MANIPAL, UDIPI DISTRICT, KARNATAKA - 591102
PH :9448108318.

MUDHOL

427. OM MOTORS (5857-), PLOT NO. 21 & 29, LOKAPUR ROAD, VISHWESHWAR NAGAR, MUDHOL - 587313, KARNATAKA - 587313
PH :9663830660.

MUDIGERE

428. BADRIYA CAR SERVICE POINT (5364-), K.M. ROAD, MUDIGERE , DISTRICT- CHIKAMANGALORE , PIN - 577132 , (KARNATAKA) - 577132
PH :9448007094.

MYSORE

429. CAR CLINIC (346-), 1959/A, BOGADI RING ROAD, NEAR GLN CONVENTION HALL, BOGADI, MYSORE, - 585106
PH :9342184831.

NELAMANGALA

430. GOUTHAM MOTORS (4332-), PATEL CHANNAPPA EKTN, NELAMANGALA-562123, KARNATAKA, - 562123
PH :9880251546.

RABAKAVI BANAHATTI

431. SANGAMA MOTORS (5726-), BESIDE CMC.RAMPUR MAIN ROAD, RABAKAVI-587314, DISTRICT-BAGALKOT, KARNATAKA - 587314
PH :9480035617.

RAICHUR

432. HEERA MOTORS (3730-), OPP. MOTI MASJID, SHIVJI OIL MILL COMPOUND, TIPU SULTAN ROAD, RAICHUR-584 101 (KARNATAKA)
PH :9845156322.

RANEBENNUR

433. KIZEN MOTORS (4568-), P.B.ROAD, RANEBENNUR, KARNATAKA - 581115 - 581115
PH :9900922022.

SAGAR (KARNATAKA)

434. ADITYA AUTOMOBILES (2077-), JOG ROAD, SAGAR-577 401, (KARNATAKA),
PH :9448024395.

435. MALLIKA AUTO CENTRE (2133-), NO. 459/1204, GANDHI NAGAR, BEHIND BHARAT PETROLEUM, NH 206, SAGARA - 577401, KARNATAKA
PH :9448139605.

SHIMOGA

436. NEPTUNE AUTO WORKS (5271-), PLOT -5 AUTO COMPLEX , SAGAR ROAD - SHIMOGA , DISTRICT - SHIMOGA , KARNATAKA - 577204
PH :9448319758.

437. SHIMOGA AUTO ENGINEERING WORKS (8955-), GARDEN AREA, 2ND CROSS, SHIMOGA KARNATAKA-577 201
PH :7899114872.

SIDDAPUR

438. MARUTI AUTO WORKS (5335-), KARNATAKA - 581355
PH :9448525801.

SIRSI

439. ARUNDHATI MOTORS (1258-), HUBLI ROAD, SIRSI-581 402, (UTTAR KARNATAKA),
PH :9845098822.

SRINGERI

440. SHUBHASHREE MOTORS (5434-), AGUMBLE ROAD ,SRINGERI , DISTRICT - CHIKAMAGALUR , SRINGERI - 577139, KARNATAKA - 577139
PH :9448170400.

TIRTHALLI

441. SUMUKA AUTOMOBILES (5133-), AP ROAD, CEEBENE KERI, DISTRICT-SIMGA, SHIMGA-577414, KARNATAKA - 577414
PH :9686944949.

TUMKUR

442. APOORVA CAR CARE CENTRE (5327-), B.N.P. COMPOUND, BEHIND KRISHNA THEATRE, M.G. ROAD - TUMKUR, DISTRICT - TUMKUR, KARNATAKA - 571440
PH :9901515516.

UDIPI

443. ST. JUDE AUTOMOBILE ENGG. WORKS (4521-), B.D.MARG, AMBALAPADI, UDIPI-576 103,
PH :9844991241.

UPPINANGADI

444. RATHNA ENTERPRISES (5447-), 5/514, KUKKAJE, SUBRAMANYA ROAD, UPPINANGADY, DAKSHIN KANNADA - 574241, KARNATAKA - 587313
PH :9972995341.

KERALA

ADIMALY

445. PLATHOTTAM AUTOMOBILES (3864-), NH-49, OPPOSITE TO MINI INDUSTRIAL ESTATE, ADIMALI-685561 , - 685561
PH :9447023073.

ADOOR

446. AUTO CLUB (2132-), NEAR H.P. PUMP, VADAKKADATHUKAVU P.O, ADOOR, PATHNAMTHITTA DISTT - 691523
PH :9447440184.

ALAPPUZA

447. ESSAR MOTORS (4959-), KALARKODE, NEAR CHINMAYA SCHOOL, NH-47, ALAPPUZA-688003, KERALA - 688003
PH :9249938474.

ALUVA

448. AUTO TEAM (2630-), A/189 A, PARUR JUNCTION, ALUVA, (KERALA) - 683108
PH :9947333760.

AMBALLUR

449. LAKSHMI DEVI AUTO GARAGE (4137-), AMBALLUR, P.O. PUDUKAD, TRICHUR, KERALA - 680301
PH :9847903949.

ANCHAL

450. NAMI-TAJ (2534-), NEAR ST. GEORGE CENTRAL SCHOOL, R.O. JUNCTION, ANCHAL, KERALA - 691 306. - 691306
PH :9447453745.

ANJUMOORTHY

451. SAFA AUTO CARE (3847-), N H ROAD, MANGALAM PALAM, ANJUMOORTHY POST, VADAKKENCHERY, PALAKKAD DISTT, KERALA - 678682
PH :9447303347.

AYOOR

452. MAKKATTU AUTO CLINIC (5051--), AYOOR-ANCHAL ROAD.PANACHAILA, AYOOR - 691306, DISTRICT - KOLLAM, KERALA - 691306 PH :9847288624.	464. PRAKASH AUTO ENGINEERS (5548--), VADASSERIKONAM P.O. KALLAMBALAM, VARKALA,KALLAMBALAM-695143, DISTRICT-TRIVANDRUM, KERALA - 695143 PH :9847159618.	474. PERFECT MOTORS (8995--), MARUTI SERVICE CENTRE, NH-47, CHEPPAD, KAYANKULAM-690507, DISTRICT-ALAPPUZHA (KERALA) - 690507 PH :9447048338.	484. TOP CLEAN SERVICES (2834--), 13/450 MANNUTHI BYE PASS, P.O. OLLUKKARA, THRISSUR, (KERALA) - 680651 PH :8592947776.
CALICUT			MEENANGADI
453. MALABAR MOTORS (4655--), EAST NADAKKAVU, P.O. ERANIPALAM, CALICUT-673006, KERALA - 673006 PH :9846089190.	KALLUMUTTY	475. PERFECT MOTORS (--), MARUTI SERVICE CENTRE, NH-47, CHEPPAD, KAYANKULAM-690507, DISTRICT-ALAPPUZHA (KERALA) - 690507 PH :9447048338.	485. MOTOR TECH (2440--), EAST MEENANGADI, KRISHNAGIRI P.O., WAYANAD-673 591, (KERALA) - 673591 PH :9539195850.
454. MARUTI SCAN (1675--), BYE PASS JUNCTION, MEENCHANDA, CALICUT-673 018, - 673018 PH :9847130508.	KALPETTA	KONNI	MOOCHIKKAL
CHALAKUDY	466. VARCO MOTORS (4724--), 18/226-1, NEAR VELLARAMKUNNU, NH 212, KALPETTA - 673121, . - 673121 PH :9961569898.	476. MUTTATH AUTOMOBILES (5525--), AROORPALAM,KONNI-689691, DISTRICT - PATHANANHITTA, KERALA, - 689691 PH :9447431751.	486. CHELADANS MARUTI ENGINEERS (4659--), THANUR ROAD, MOOCHIKKAL-676307, MEENADATHUR, TIRUR, MALAPURAM DIST (KERALA) - 676307 PH :9895443563.
455. STAR MARUTI GARAGE (5367--), NH47 BYE PASS, NEAR CRESCENT PUBLIC SCHOOL, .CHALAKKUDY, DISTRICT - THRISSUR - 680307 PH :9946009375.	KANIRAPPALLY	KOOTHATTUKULAM	MUNNAR
456. VIJAY AUTO SERVICE (1626--), POTTA, CHALAKUDY-680 307, . - 680307 PH :9995074628.	467. MACK ENTERPRISES (2729--), NH-183, NEAR AKJIM SCHOOL, KANJRAPALLY, KERALA - 686507 - 686507 PH :9447093739.	477. EXTRA CARE SERVICES (3232--), 38A, RAMAPURAM JUNCTION, PALA ROAD, KOOTHATTUKULAM, ERNAKULAM DIST., KERALA - 686662 - 689121 PH :9544552080.	487. PLATHOTTAM AUTOMOBILES (4447--), COLONY ROAD, IKKA NAGAR, MUNNAR, IDUKKI, KERALA - 685612 - 685612 PH :9447023073.
CHANGANACHERRY	KANNUR	KOTHAMANGALAM	MUVATTUPUZHA
457. PALATHRA MOTORS & SERVICE CENTRE (1072--), VADAKKEKARA, VEROOR P.O., CHANGANACHERRY-686 104, - 686104 PH :9447195154.	468. AREN MOTORS (5139--), CHAKKARAKAL P.O. MUZHAPPALA, DISTRICT - KANNUR, KERALA, - 670613 PH :9446771237.	478. EXCEL MARUTI SERVICE (4342--), BYE-PASS ROAD, KOTHAMANGALAM, ERNAKULAM-686691, - 686691 PH :8848605865.	488. JAWAN AUTOMOBILES (2730--), MADAVOOR POST, MUVATTUPUZHA-686 669, - 686669 PH :8943345500.
458. SAAFAA AUTOMOBILES (1148--), PALATHARA CHIRA, BY PASS ROAD, CHANGANACHERRY, KOTTAYAM-686104, . - 686104 PH :9447042517.	469. PIONEER AUTO & ENGG.WORKS (4722--), KANNOTHUMCHAL ROAD, KANNUR - 2, (KERALA) - 670005 PH :9447798255.	479. JAWAN AUTOMOBILES (8985--), NEAR THANKALAM BYE-PASS ROAD, KOTHAMANGALAM-686 691, KERALA, - 686691 PH :9673102460.	NEYYATTINKARA
CHENGANNUR	KARIMANOOR	KUNDARA	489. XANON ENGINEERS (8951--), RAVELI TOLL JUNCTION, NEYYATTINKARA, TRIVANDRUM-695121, - 695121 PH :9946357813.
459. NEW TECH AUTOMOBILES (1978--), INDUSTRIAL ESTATE, MUNDANCAVU, CHENGANNUR-689 121, KERALA - 689121 PH :9388915757.	470. JAWAN MARUTI SERVICE (8976--), XIV/359B, THODUPUZHA - UDUMBANNOOR ROAD, KARIMANOOR PO, KARIMANOOR, THODUPUZA, KERALA - 685581 PH :9544545500.	480. SPARK SERVICE (5772--), ELAMPALLOOR,P.O. KUNDARA-691501, DISTRICT-KOLLAM, (KERALA) - 691501 PH :9809608020.	NILAMBUR
CHERTHALA	KATTAKADA	KUTHUPARAMBA	490. CONFIDENCE MOTORS (5140--), PALUNDA CHUNGATHARA, NILAMBUR-679334, DISTRICT - MALLAPURAM, KERALA - 679334 PH :8075272281.
460. POZHICKAL CAR WORLD (3037--), NEAR BOYS HIGH SCHOOL, CHERTHALA, ALAPPUZHA DIST., KERALA-688 524 - 688524 PH :9947474752.	471. CITY ENGINEERS (4947--), MARUTI SERVICE CENTRE, NEYYATTINKARA ROAD, KATTAKADA-695572, DISTRICT-TRIVANDRUM (KERALA) - 695572 PH :9447206257.	481. KRISHNA MOTORS (3435--), KUTTIKKUNNU, NEAR 66 KV SUB STATION, KUTHUPARAMBA-670 643, KANNUR DIST. (KERALA) - 670643 PH :9497296380.	NILAMEL
ETTUMANOOR	472. MADATHIL MOTORS (5456--), MADATHIL HOUSE,CHOONDUPALAKA , KATTAKADA P.O. - TRIVANDRUM , DISTRICT - TRIVANDRUM , (KERALA) - 695543 PH :9495192389.	MANJERI	491. LIBRA (8975--), M.C. ROAD, NILAMEL-691 535, KOLLAM DIST., (KERALA) - 691535 PH :9895629768.
461. ROHIT MOTORS (4636--), THELLAKOM P.O., M.C. ROAD, ETTUMANOOR, KERALA - 686630 PH :9447079010.	KATTAPPANA	482. MARUTI AUTO HOUSE (4726--), CHERANI, KARUVAMBARAM PO, MANJERI, KERALA. PIN 676123 - 676123 PH :9447129289.	OCHIRA
462. ROHIT MOTORS (--), THELLAKOM P.O., M.C. ROAD, ETTUMANOOR, KERALA - 686630 PH :9447079010.	473. UNITED SERVICE CENTER (4433--), EDASSERT JUNCTION, KATTAPPANA-685508, KERALA, - 685508 PH :9961432941.	MANNAR	492. MANGALATH AUTOMOBILES (3836--), NH 47 VALIYAKULANGARA, OCHIRA P.O, KOLLAM DIST, KERALA-690526 - 690526 PH :9847258696.
KALANJOOR	KAYAMKULAM	483. MOHANS AUTOMOBILES (5457--), MOHANS AUTOMOBILES & ENGINEERS KUTTEMPEROOR P.O. MANNAR, DISTRICT - ALAPPUZHA , (KERALA) - 689622 PH :9447877377.	OLLUR
463. AGT MOTORS (5937--), KIP JUNCTION, KALANJOOR-689694 DISTRICT-PATHANAMTHITTA, KERALA - 689698 PH :9744409444.		MANNUTHY	493. TOPCLEAN SERVICES (4468--), 10/153, CHRISTOPHER NAGAR, P.O OLLUR, TRICHUR (KERALA) - 680306 PH :9846037818.
KALLAMBALAM			PALAKKAD
			494. CAR CRAFT (2139--), 5/682 (1), MANALI, PALAKAD-678 001, (KERALA) - 678001 PH :9349607619.
			PANDALAM

Maruti Authorized Service Station (AS ON 31.01.2026)

495. AISHWARYA AUTOMOBILES (2067--), NEAR K.S.R.T.C. BUS STOP, PANDALAM-689 501, , - 689501 PH :9847049140.	505. NEW INDIAN (8970--), MYSORE ROAD, SULTAN BATHERY, WAYANAD DISTRICT, KERALA-673592 - 673592 PH :8281682822	516. PROFESSIONAL MOTORS (1256--), NEAR ELECTRICITY BOARD, PEROORKADA, TRIVANDRUM-695 005. - 695005 PH :9947175650	526. SPEED AUTOMOBILES (5260--), KHANDWA BARODA ROAD, NR. BALAJI TOLL KANTA BARWANI-451552, DISTRICT-BARWANI, MADHYA PRADESH - 451552 PH :9926146073.
PARIPALLY	506. TEE PEE MOTORS (4773--), 9/668-B OOTY ROAD, NEAR BLOCK OFFICE, SULTAN BATHERY, WAYANAD (KERALA) - 673592 PH :8547201421.	517. SREEKARIYAM AUTOMOBILES (353--), SREEKARIYAM P.O., THIRUVANANTHAPURAM-695 017, , - 695017 PH :9447050313.	BETUL
496. ALLIANCE MARUTI SERVICES (3243--), NH-47, PARIPPALLY-691 574, KOLLAM DIST. (KERALA), - 691574 PH :9349926440.	THALASSERY	VADANAPPALLY	527. ADITYA MOTORS (1263--), NAGPUR BHOPAL ROAD, SADAR, BETUL-461 001, MADHYA PRADESH - 460001 PH :9425381581.
PATHANAPURAM	507. SAFE HANDS AUTOMOBILES (3038--), ERANHOLI, CHUNGAM, THALASSERY -670 107, (KERALA) - 670107 PH :9744322317.	518. MONARCH MARUTI SERVICE CENTRE (4079--), NEAR NORTH JUMA MASJID, GANESHA MANGALAM, P O VADANAPPALLY, TRICHUR DIST (KERALA) - 680614 PH :9847792698.	BHIND
497. MANNIL AUTOMOBILES (4150--), NEAR PANCHAYAT OFFICE, PATHANAPURAM, KERALA-689695. - 689695 PH :9447258496.	THALAYOLAPARAMBU	VADAVATHOOR	528. MAA PITAMBARA MOTORS (5241--), OPP.RAJENDERA CONVENT SCHOOL , LAKSHAR ROAD - BHIND , MADHYA PRADESH, - 477001 PH :9826240582.
PATHANMTHITTA	508. MYALIPARAMPIL MOTORS (3233--), SILON JUNCTION, NEAR THALAYOLARAMBU, POOZHIKOL P O 686604, - 686604 PH :9447562050.	519. C CARS (5754--), VADAVATHOOR PO-KOTTAYAM, DISTRICT-KOTTAYAM, PIN-686503, KERALA - 685503 PH :9447208558.	BHOPAL
498. C.J. MARUTI CARE CENTRE (1255--), VARIYAPURAM, ELANTHOOR EAST P.O., PATHANAMTHITTA-689 643, (KERALA) - 689643 PH :9446913874.	THAMARASSERY	VARKALA	529. SHRI KRISHAN CAR CARE (1679--), POLYTECHNIC ROAD, NEAR PETROL PUMP, BHOPAL, (M.P.) - 462002 PH :9424454030.
PERAVOOR	509. MALABAR MOTORS (4645--), WARD NO. 12, BLDG NO. 121, WAYANAD ROAD, KARADY, THAMARASSERY, CALICUT - 673573 PH :9349114119.	520. S.S. MOTORS (2979--), NEAR POLICE STATION, VARKALA-695 141, TRIVANDRUM DISTT., - 695141 PH :9446104991.	530. SHUBHAM AUTOMOBILES (5052--), PLOT NO. 1 & 2, TIRANGA ROAD, SHAHPURA, BHOPAL, MADHYA PRADESH -462039 - 462039 PH :9425009869.
499. CAR CARE AUTOMOBILES (4422--), KODENCHAL, PERAVOOR, NIDUMPOYIL P.O. , KANNUR- 670650. - 670650 PH :9946444691.	THIRUVALLA	VATAKARA	531. TAURUS AUTOMOBILES (3372--), ALAKNANDA COMPLEX, OPP.VIJAY STAMBH PRESS COMPLEX, M.P. NAGAR ZONE-I, BHOPAL (M.P.) - 462011 PH :9303131403.
PERUMBAAVOOR	510. MARUTI AUTO SPOT (1628--), AYROOKUZHYYIL HOLDINGS, OPPOSITE PUSHAGIRI MEDICITY, PERUMTHURUTHY, THIRUVALLA, KERALA - 689107 - 689107 PH :9447860777.	521. RANI CARS (8957--), BUILDING NO. 10/496A, NADAPURAM ROAD,MADAPPALLI COLLEGE POST, VATAKARA, DISTRICT KOZHIKODE, KERALA- 673102. - 673102 PH :9400513139.	BIAORA
500. MILLENNIUM MOTORS (4873--), OLD VALLAM ROAD, KADUVAL, PERUMBAAVOOR-683542, DISTRICT-ERNAKULAM (KERALA) - 683542 PH :9446661111.	THODUPUZHA	LADAKH	532. GURUKRIPA MOTORS (5670--), OPP PRABHAT BREAD INDUSTRY, AB ROAD - BIAORA, DISTRICT - BIAORA, MADHYA PRADESH - 465674 PH :9425038727.
QUILANDY	511. UNIVERSAL MARUTI (2563--), VENGALLOOR P.O., THODUPUZHA, (KERALA), - 685585 PH :9447023024.	LAKSHADWEEP	BURHANPUR
501. HITECH MARUTI (3025--), MAIN ROAD, KOYILANDY, PIN-673 305, CALICUT DISTT. - 673305 PH :9447457996.	TRIVANDRUM	522. ZOZILA ENGG. WORKS (374--), KARGIL, LADAKH-194 105 - 194105 PH :9419176212.	533. SWADESHI MOTORS (4229--), NEAR GANPATI MANDIR, GANPATI NAKA, BURHANPUR, MADHYA PRADESH - 450331
RANNY	512. EMINENT MARUTI SERVICE (2360--), T.C. 610 M.C. ROAD, MANNANTHALA, TRIVANDRUM-695 015. - 695015 PH :9447713639.	LAKSHADWEEP	DABRA
502. DEEPA AUTOMOBILES (5177--), DEEPA AUTOMOBILES PAZHAVANGADI, P.O. RANNY .689673, DISTRICT-PATHANAMTHITTA, KERALA - 689673 PH :9447216725.	513. HITECH INDUSTRIES (1951--), NEAR ULLOOR BRIDGE, PATTOM P.O., THIRUVANANTHAPURAM-695 004, (KERALA) - 695004 PH :9447732057.	523. POPULAR REPAIR & SERVICE CENTRE (2944--), SECRETARIAT ROAD, KAVARATTI, LAKSHADWEEP-682 555. - 682555 PH :9448463737.	534. MODI MOTORS (3857--), BALLA KA DERA, JHANSI ROAD, DABRA, GWALIOR - 475110 PH :8770360194.
SASTHA MANGALAM	514. KICHU MOTORS (5453--), TC.49/962 ,SREEMOOLAM NAGAR CHIRAMUKKU , MANACAUR (PO) TRIVANDRUM, DISTRICT - TRIVANDRUM, KERALA - 695572 PH :9847023025.	MADHYA PRADESH	DAMOH
503. MARSHAL AUTOMOBILES (4035--), SWATHI NAGAR, TC 22/1565, PIPPINMOOD, SASTHAMANGALAM - PEROORKADA ROAD, PEROORKADA PO, THIRUVANANTHAPURAM - 695005, KERALA - 695005 PH :9447461101.	515. MUKUNDANS (3434--), POONTHI ROAD, KUMARAPURAM, MEDICAL COLLEGE P.O., THIRUVANANTHAPURAM, KERALA - 695011 - 695011 PH :9349882788.	BALAGHAT	535. MARUTI PRIME (1156--), SAUR STAND, STATION ROAD, DAMOH-470 661, PH :8319706998.
SULTAN BATHERY		524. SAURAV MOTORS (4069--), DEENHI ROAD, GARRA INDUSTRIAL AREA, BALAGHAT, MADHYA PRADESH - 481001 PH :9300963731.	DATIA
504. AUTOMEK (4725--), BEENCHI P.O., SULTAN BATTERY-673 592, , - 673592 PH :9249999515.		525. GULAB AUTOMOBILES (1553--), VARDHMAN NAGAR, NEAR SHUBHARAMB LAWN, GONDIYA ROAD, KOSMI, BALAGHAT, MP - 481001 - 481001 PH :9425402926.	536. HIND MOTORS (4470--), NH-75, JHANSI BYPASS ROAD, NEAR S.R.I COLLEGE, KALAMPURAM TIRHA, DATIA, MADHYA PRADESH - 475661 - 475661 PH :9406969206.
		BARWANI	

DEWAS

537. AZAD MOTORS (4534--), 10, JAWAHAR NAGAR COMPLEX AB ROAD DEWAS(MP)404051 - 455001
PH :9827533591.

GWALIOR

538. MARUTI ENTERPRISES (3021--), KHERAPATI ROAD, GWALIOR-474 002, (M.P.) - 474002
PH :9425116466.
539. CLASSIC MOTORS & SERVICE STATION (5242--), CHAUHAN PIAO M.G. ROAD, THATIPUR ,MORAR, GWALIOR , MADHYA PRADESH - 474011
PH :9329603001.

HARDA

540. MANOJ UDYOG & SERVICE CENTER (4145--), 87-58, INDUSTRIAL AREA, CHHIPANER ROAD, HARDA, M.P. - 461331
PH :9826227245.

INDORE

541. BOMBAY MOTORS (1655--), 10 Y.N. ROAD, INDORE-452 003, (M.P.) - 452003
PH :7314222786.
542. JYOTI RAGHUNATH MOTORS (5149--), 3/3 RAMBAGH, BEHIND PETROL PUMP , INDORE -452001, MADHYA PRADESH - 452001
PH :9425353568.

ITARSI

543. PITAMBARA MOTORS (5041--), NH-69,BETUL ROAD,NEAR PLYBOARD, FACTORY ITARSI , DISTRICT - ITARSI, MADHYA PRADESH - 461111
PH :9406525060.
544. UNITY ENTERPRISES (3270--), PLOT NO.97, INDUSTRIAL AREA, KHEDA, ITARSI-461 111 (M.P.)
PH :8120025666.

JABALPUR

545. SUPER MARUTI SERVICE (4952--), 375-A PREM NAGAR, OPP. GURUDWARA, JABALPUR-482001, MADHYA PRADESH - 482001
PH :7999993375.
546. YASH VEHICLES CARE (2169--), 1664, WRIGHT TOWN ,OPP. TELEGRAPH GATE NO. 2 JABALPUR (M.P.) - 482002
PH :9893237505.

JAWAD

547. SHARMA MOTORS (5764--), IN FRONT OF PAWAN MILL, STATION ROAD,JAWAD-458330, DISTRICT-NEEMUCH, MADHYA PRADESH - 458330
PH :9425441270.

KATNI

548. KATNI MOTORS (4949--), C/O MAHURANIPUR UNION, TRANSPORT CORPORATION, NH-7, PANNA MORH, KATNI-483501 (MADHYA PRADESH) - 483501
PH :9425162660.

KHANDWA

549. M.K.AUTOMOBILES (5326--), SANTOSH NAGAR, OPP. JHEELODHYAN, INDORE ROAD, KHANDWA - 450 001 - 450001
PH :9425085666.

KUKSHI

550. DILIP MARUTI SERVICE CENTER (4649--), OPP. GAYATRI SAROVAR, KUKSHI, DISTT DHAR, - 454331
PH :9179649974.

MANDSAUR

551. DEV MOTORS (4562--), SITAMAU FATAK, MANDSAUR-458001, MADHYA PRADESH, - 458001
PH :9826751534.
552. JANGID MOTORS (2735--), NAYAPURA ROAD, NEAR R.K. HOSPITAL, MANDSAUR-458 001, (M.P.) - 458001
PH :9827266583.

MHOW

553. HIGHWAY MOTORS (8979--), A.B. ROAD, DONGRAGAON, MHOW-453441, INDORE M.P. - 453441
PH :9826035653.

NAGDA

554. MARUTI NANDAN (3939--), 15 VERDHAMAN NAGAR, MEHATWASA, BIRLAGRAM, NAGDA, DISTT UJJAIN - 456335
PH :9910074658.

SAGAR (M.P)

555. SHREE SAGAR MOTORS (4955--), NEAR GURUDWARA, JHANSI BHOPAL ROAD, BHAGWANGANJ, SAGAR-470002, MADHYA PRADESH - 470002
PH :9826070549.

SARNI

556. JHANNVI SERVICE STATION (3738--), MAIN ROAD, BAGDONA, SARNI-460 449, DISTT. BETUL (M.P.) - 460449
PH :9589650034.

SATNA

557. KAPOOR SERVICING CENTRE (1162--), 90 PREM NAGAR, SATNA-485 001, (M.P.) - 470661
PH :9827095182.
558. KAPOOR SERVICING CENTRE (--), 90 PREM NAGAR, SATNA-485 001, (M.P.) - 470661
PH :9827095182.

SEONI

559. HIGHWAY MOTORS (2262--), NEAR MOTEL CENTER POINT, SEONI-JABALPUR HIGHWAY, SEONI, (M.P.) - 480882
PH :9424928978.

SHAHDOL

560. PACE CRAFTERS (2145--), NEAR VIRAT TEMPLE, BANGANGA TIRAHA, REWA ROAD, SHAHDOL, (M.P.) - 484001
PH :9424701495.

SHAJAPUR

561. SHRIYA MOTORS (2568--), 174 A.B. ROAD, SHAHJAPUR-456 001, (M.P.), MADHYA PRADESH
PH :9826783993.

SHEOPUR

562. GOYAL AUTO (5446--), NEAR NABBAN MARKET, BARODA ROAD, SHEOPUR, DISTRICT - SHEOPUR, MADHYA PRADESH - 476337
PH :9826240944.

SHIVPURI

563. KURIN MOTORS (4273--), NEAR ARUN DHARAMKANTA, GUNA NAKA, A.B. ROAD, SHIVPURI - 473551
PH :9425728285.

SIDHI

564. KHARE MOTORS (4068--), NH-75, SINGRAULI ROAD, SIDHI, MADHYA PRADESH - 486661
PH :9425177518.

TIKAMGARH

565. ASHENDRA AUTOMOBILES (2636--), 350 OPP. JAWAHAR NAVODAYA VIDYALAYA, KUNDRESHWAR, TIKAMGARH-472 001, MADHYA PRADESH - 472001
PH :9009129909.

UJJAIN

566. SUGANDHI BROTHERS (324--), DEWAS ROAD, UJJAIN (M.P.) , MADHYA PRADESH - 456010
PH :9406822255.
567. ZALANI AUTO SERVICE (1554--), A 15/9, MAHAKAL VANIYA KENDRA, NANAKHEDA, UJJAIN 456010, - 456010
PH :9713884177.

VIDISHA

568. SAMAY MOTORS (5179--), NEAR SC/ST SHED , PITALMIL CHOURAHA, SAGAR ROAD NH-86, VIDISHA, MP-464002 - 464002
PH :9425392521.

WAIDHAN

569. ANANT MOTORS (5732--), NEAR ESSAR TOWNSHIP, BILAUJJI, WAIDHAN, DISTRICT-SINGRAULI, PIN-486886, MADHYA PRADESH - 486886
PH :8319050124.

MAHARASHTRA

AHMEDNAGAR

570. AMIT SERVICE STATION (4158--), NEAR NAGAPUR HIGHWAY BRIDGE, NAGAR-MANMAD HIGHWAY, NAGAPUR DIST-AHMADNAGAR, MAHARASHTRA - 414111

AKLUJ

571. SONAJ AUTOMOTIVES PVT. LTD. (2665--), SHANKARRAO MOHITE PATIL, CO-OP INDUSTRIAL ESTATE, PLOT NO.36 P.O. BOX NO.-11, AKLUJ -413 101 (MAHARASHTRA) - 413101
PH :9657713360.

AKOLA

572. AUTOLAND (5936--), RAM NAGAR,TOSHNIWAL LAYOUT, AKOLA-444005, DISTRICT-AKOLA, MAHARASHTRA - 444005
PH :9422164050.

AKOLE

573. SAMARTH CAR CARE (5555--), MAHALAXMI COLONY,K.G. ROAD-AKOLE, DISTRICT - AHMEDNAGAR, PIN-422601, MAHARASHTRA - 422601
PH :9881759099.

AMALNER

574. LUCKY AUTO CARES (5853--), R.K. COMPLEX,R.K. NAGAR,PHULE ROAD, AMALNER-425401, DISTRICT-JALGAON, MAHARASHTRA - 425401
PH :9422789764.

AMBERNATH

575. J.S. AUTOMOBILES (4567--), B-31/3, MIDC, KALYAN AMBERNATH ROAD, AMBERNATH-421501, MAHARASHTRA - 421501
PH :9370116436.

AURANGABAD

576. CAR CARE (5173--), #85.SERVICE INDUSTRIAL SECTOR, TOWN CENTRE,CIDCO, DISTRICT-AURANGABAD, MAHARASHTRA - 431006
PH :9158000029.
577. MARUTI AUTOMOBILES (3441--), SHREYANAGAR, KALDA CORNER, SAMBAHAJI NAGAR (AURANGABAD) - 431101
PH :9767301999.

BADLAPUR

578. OMKAR AUTO SERVICES (3376--), PLOT NO-A/54/1, KARJAT - BADLAPUR ROAD, MIDC BADLAPUR, MAHARASHTRA 421503 - 421503
PH :9326080457.

BARSHI

579. OM SERVICING CENTRE (5359--), KURWEDI ROAD - BARSI, DISTRICT - SOLAPUR , PIN - 413401, (MAHARASHTRA) - 413401
PH :9850437003.

Maruti Authorized Service Station (AS ON 31.01.2026)

BEED	580.	NEW AGWAN SERVICES (2235--), 850 SHYOG NAGAR, JALNA ROAD, BEED-431 122, - 431122 PH :9822217321.	590.	VIJAY MOTORS (5134--), PETH ISLAMPUR ROAD , NEAR PETH NAKA -ISLAMPUR, DISTRICT - SANGLI, MAHARASHTRA - 415409 PH :9860446084.	600.	APPOLO MOTOR REPAIRING WORKS (2543--), MUMBAI-PUNE ROAD, LONAVALA, MAHARASHTRA-410 401, - 415409 PH :9370721905.	612.	CHHAGAN MITHA (8945--), CORNER OF WARDEN ROAD & PEDDAR ROAD, POST BOX NO. 6521, MUMBAI -400026, MAHARASHTRA - 400026 PH :9820861441.		
BOISAR	581.	SIFAR CAR CARE (4055--), PLOT NO. 15 AT-KURGAON, P O KUNDAN, BOISAR TARAPUR ROAD, TAL PALGHAR, DISTT THANE - 401506 PH :9765509990.	JALGAON	591.	SHREE MOTORS (3040--), 362 SHIVAJI NAGAR, JALGAON-425 001, - 425001 PH :9823150704.	MAHAD	601.	SHREE AUTO (2572--), NAGALWADI PHATA BOMBAY-GOA HIGHWAY, AT & TALUKA - MAHAD, DISTT. RAIGAD, MAHARASHTRA-402 301 - 402301 PH :9422495799.	613.	HIND AUTOMOBILES (550--), 29 SEWREE WADALA ROAD, KING'S CIRCLE, MUMBAI - 400 019 (MHRS), - 400019 PH :9833876440.
CHANDRAPUR (MAHARASHTRA)	582.	SHEIKH AUTOMOBILES (5379--), APPOSITE GOVT. ITI.CIVIL LINES , CHANDRAPUR, DISTRICT - CHANDRAPUR, MAHARASHTRA - 442401 PH :9422171896.	KALWA	592.	SHREE SIDDHI MOTORS (5668--), NEXT TO LILAVATI CO-OP SOCIETY,DATTAWADA, KALWA KHAREGAON ROAD-KALWA(W)-400605, DISTRICT - THANE, (MAHARASHTRA) - 400605 PH :9769775444.	MALEGAON	602.	MALEGAON AUTO CENTRE (3721--), NEAR MOTI BAUG NAKA, MALEGAON-423 203, - 423203 PH :9371376911.	614.	LAXMI AUTO WORKS (2542--), PLOT NO.1041, SAYANI ROAD, PRABHADEVI, MUMBAI-400 025 - 400025 PH :9820303646.
CHIPLUN	583.	MANORKAR AUTOMOBILES (270--), NEAR RAILWAY STATION, BOMBAY-GOA HIGHWAY, WALOPE CHIPLUN-415 605, DISTT. RATNAGIRI - 415605 PH :9421239999.	KALWAN	593.	KRISHNA AUTOMOTIVE (4037--), GANESH NAGAR, AT POST & TALUKA, KALWAN, DIST NASHIK-423501 - 423501 PH :8087988735.	MANGAON	603.	KRUPA SERVICES (574--), KRUPA SERVICES, AT : NANORE, POST : MANGAON, DISTT-RAIGAD-402 104 - 402104 PH :9422375444.	615.	ORIX AUTO INFRASTRUCTURE SERVICES LTD (1971--), 94 MAROL INDUSTRIAL ESTATE, ANDHERI KURLA ROAD, ANDHERI (EAST), MUMBAI-400 059 - 400059 PH :9820409079.
	584.	MAYUR MOTORS (168--), SITA APARTMENTS, NEAR BAHADUR SHEIKH NAKA, CHIPLUN DISTT. RATNAGIRI, MAHARASHTRA - 415605 PH :9422431112.	KANKAVLI	594.	SAPALE AUTO SERVICE PVT. LTD. (1975--), MUMBAI GOA ROAD, N.H.17, KALMATH, KANKAVLI DISTT. SINDHUDURG-416 602 - 416602 PH :9422434701.	MIRAJ	604.	ASHOK AUTOMOBILES (5672--), C.S. NO.70-C,CHH - SHIVAJI ROAD, MIRAJ, DISTRICT - SANGLI, MAHARASHTRA - 416410	616.	POWAI AUTO WORKS (1660--), OPP. PANCH KUTIR BUS STOP, 19 ADI SANKARACHARYA MARG, POWAI, MUMBAI-400 076 - 400076 PH :9820635317.
DAPOLI	585.	ROYAL AUTO SERVICE STATION (3444--), DAPOLI-MANDANGAD ROAD, MAUJE-DAPOLI, TAL- DAPOLI, DIST. RATNAGIRI-415 712 (MAHARASHTRA) - 415712 PH :8888101776.	KATOL	595.	BALAJI SERVICE STATION (5962--), PLOT NO. XI,MIDC,SAWARGAON ROAD,DONGARGAON-, KATOL,NAGPUR-441302, DISTRICT-NAGPUR, MAHARASHTRA - 441302 PH :9763867144.	MUMBAI	605.	ALLIED AUTO AGENCIES (2666--), 86/20 DR. AMBEDKAR ROAD, KHAR, MUMBAI-400 052, - 400052 PH :9768257450.	617.	POWAI AUTO WORKS (4966--), GALA NO 14/15/16, BUILDING NO1, C WING, KAILAS INDUSTRIAL COMPLEX, PARKSITE VIDHROLI (W), - 400079 PH :9820635317.
DEOPUR	586.	AGRO ENGINEERING SERVICES (2244--), DIVERSION ROAD, DEOPUR, DHULE-424 005, - 424005 PH :9823059471.	KHAMGAON	596.	JAIDEEP MOTORS (4779--), NEAR RELIANCE PETROL PUMP, NANDURA ROAD, KHAMGAON-444303, DISTRICT-BULDHANA (MAHARASHTRA) - 444303 PH :9850352826.		606.	ASHA AUTO SERVICE (570--), I.O.C. DEALER, L.B.SHASTRI MARG, KURLA, MUMBAI-400 070 - 400070 PH :9833728833.	618.	PRINCE SERVICE CENTRE LLP (8931--), 34 GAMDEVI ROAD, SANGHANI ESTATE, GHATKOPAR (WEST), MUMBAI-400 086 - 400086 PH :9869034445.
DOMBIVLI	587.	MEGA SERVICES (2573--), A-173,PHASE-1,, NEW KALYAN BYPASS ROAD , OPPOSITE ADARSH PARK,MIDC, DOMBIVLI (E)-421203 - 421203 PH :8424070777.	KHED	597.	BHARAT AGENCIES (4548--), NEAR KAMAKSHI PETROL PUMP, AT POST KALBANI, TALUKA KHED, DISTRICT RATNAGIRI, 415621 - 415621 PH :9049024781.		607.	AUTO CRAFT (4759--), PLOT NO. 1-B, NEXT TO DAMJI SHAMJI IND ESTATE, LBS MARG, VIKHROLI (W), MUMBAI-400083 - 400083 PH :9820022227.	619.	RAVI AUTOMOBILE SERVICES (553--), GHATKOPAR-MAHUL ROAD, TILAK NAGAR, CHAMBUR, MUMBAI-400 089, - 400089 PH :8657442190.
GADACHIROLI	588.	VENUS AUTOMOTIVE (4170--), PLOT # 2, NR GOVERNMENT ITI COLLEGE, ADJ TO CHANDRAPUR GADACHIROLI HIGHWAY, GADACHIROLI, MAHARASHTRA-442605 - 442605 PH :9689228222.	KOLHAPUR	598.	VAKRATUNDA MOTORS (3142--), OPP MAHAVIR COLLEGE, NAGALA PARK, KOLHAPUR , - 416003 PH :9822611559.		608.	AMAR AUTOMOBILES (526--), KING'S CIRCLE, MATUNGA, MUMBAI-400 019 (MHRS), - 400019 PH :9869473310.	620.	SHAH CAR CARE (5436--), SADANWADI LAKE ROAD,OFF LBS MARG, NEAR KRISHNA TALKIES, DISTRICT - MUMBAI , (MAHARASHTRA) - 400078 PH :982068380.
ICHALKARANJ	589.	SAI AUTO LEADS (3821--), 6/1108, SANGLI VES, ICHALKARANJ - 416115, DIST. KOLHAPUR, MAHARASHTRA - 416115 PH :9822009788.	KOPARGAON	599.	SAI MOTORS (4449--), NAGAR MANMAD HIGHWAY, NEAR HOTEL ASHOKA, KOPARGAON, DIST. AHMEDNAGAR (MAHARASHTRA) - 423601 PH :9850684384.		609.	CARKRAFT AUTOMOBILES AND INFRASTRUCTURE PVT. LTD. (4654--), ABC GODOWN, MINERVA INDUSTRIAL ESTATE, OFF P.K. ROAD, NEAR SAI DHAM MANDHIR, MULUND (W), MUMBAI - 400080 PH :9820296924.	621.	SHAMAL MOTORS (1154--), VAITY WADI, BHANDUP-SONAPUR ROAD, BHANDUP (WEST), MUMBAI-400 078 - 400078 PH :9773911111.
ISI AMPUR			LONAVALA				610.	CHAMUNDA MOTORS (P) LTD. (520--), RAMBAUG NEAR SUNDAR DHAM, OFF S.V.ROAD, BORIVILI (W), MUMBAI-400 092 - 400092 PH :9820063626.	622.	ST. FRANCIS AUTOMOBILE (5154--), MOUNT POINSUR BORIVALI (WEST), MUMBAI - 400103, DISTRICT - MUMBAI, MAHARASHTRA - 400103 PH :8828904552.
							611.	CHEMBUR MOTORS (2526--), 31/A ANAND NAGAR, OFF SION TROMBAY ROAD, SINDHI SOCIETY CHEMBUR, MUMBAI-400 071 - 400071 PH :9820475704.	623.	SUPER AUTO SERVICES PVT. LTD. (2430--), DESAI WADI, JAYWANT SAWANT ROAD, NEAR HAPPY HOME SOCIETY, DAHISAR (W), MUMBAI-400 068 - 400068 PH :9867253000.
									624.	SURAJ SANGHI SERVICE STATION (438--), DR. ANNIE BESANT ROAD, WORLI, MUMBAI-400 018, - 400018 PH :9821115492.
									MURBAD	

225.	JAYDEEP AUTOMOBILES (5676--), MURBAD KALYAN HIGHWAY(NH-222),NEAR NAVDURGA HOTEL, AT-PO-TAL.MURBAD-421401, DISTRICT-THANE, MAHARASHTRA - 415621 PH :9423370219.	NAVI MUMBAI	638.	BOSS (265--), AT/P.O. - TURBHE, SECTOR-22, VASHI, NAVI MUMBAI-400 705 - 400705 PH :9167766474.	649.	SAGAR MOTORS (5979--), MALIBABHULGAON, NAGAR ROAD PATHARDI, MAHARASHTRA 414102 - 414102 PH :9822197969.	661.	RUCHI MOTORS (2631--), MARUTI AUTHORISED SERVICE STATION, RAVER-425 508, DISTT. JALGAON, (MAHARASHTRA) - 425508 PH :8805373406.				
NAGPUR			639.	C G MOTORS (4138--), PLOT NO R-966, NEAR MK ENGINEERING, RABALE MIDC, RABALE, NAVI MUMBAI, PINCODE 400701 - 400701 PH :9920205756.	PEN	650.	NAVNATH AUTO (5677--), OPPOSITE RAMWADI,S.T. STAND, NATIONAL HIGHWAY-17,TAL PEN-402107, DISTRICT-RAIGAD, MAHARASHTRA - 402107 PH :9834279228.	ROHA				
626.	BALAJI MOTORS (3078--), PLOT NO.18/27, NEAR NAKA NO.-1, KORADI ROAD, NAGPUR-20 - 440020 PH :9960634068.		640.	CHETAN MOTORS (3143--), PLOT NO.-45, SECTOR-19A, OPP. DANA BAZAR EXIT GATE NO.3, BEHIND SHAMRAO VITHAL CO-OP BANK, VASHI, NAVI MUMBAI - 400705 - 400705 PH :9892067288.	PHALTAN	651.	VORA AUTOMOTIVE (2436--), SHINGNAPUR ROAD, KOLKI, PHALTAN-415523, - 415523 PH :7709436262.	SAKURI				
627.	HASAN GARAGE (2021--), MOHAN NAGAR, NAGPUR - 440 001 (MHRS)., - 440001			NIGDI				663.	SHREE SAI SERVICE CENTRE (5344--), NAGAR-MANMAD ROAD, GODAVARI, HOTEL JEWEL ,PO.SAKURI,TAL-RAHATA, DISTRICT - AHMEDNAGAR , MAHARASHTRA - 423107 PH :9970741777.			
628.	M S SERVICES (5339--), 14 HILL ROAD , GANDHI NAGAR - NAGPUR , DISTRICT - NAGPUR , MAHARASHTRA - 440010 PH :9373422822.		641.	SHALU AGENCY (2872--), 516/27 PRADHIKARAN, NIGADI, PUNE-411 044, - 411014	PIMPALGAON	652.	ASHWAMEDHA AUTO (2435--), "ASHWAMEDH", MUMBAI-AGRA HIGHWAY, PIMPLEGAON (B), DISTT. NASHIK - 422209 PH :9766600064.	SANGAMNER				
629.	R K MOTORS (8977--), 69 A V A LAYOUT, LAKADGANJ, NAGPUR-440 008, - 440008 PH :9890424190.		NIPHAD	642.	SHRI SAI SERVICE STATION (4452--), NIPHAD AURANGABAD ROAD, NIPHAD, NASIK, MAHARASHTRA - 422303 PH :9823679999.	PUNE	653.	APPU AUTOMOBILES (5029--), SR. NO. 165, PLOT NO. 801, TALAWADE ROAD, PUNE - 412114, MAHARASHTRA - 411062 PH :9371017595.	664.	SAI MOTORS (2840--), NEAR GULEWADI PHATA, PUNE NASIK ROAD, SANGAMNER DIST. AHMEDNAGAR, PIN-422 608 (MHRS.) - 422608 PH :9860027513.		
630.	SAGAR AUTOMOBILES (2667--), MARUTI AUTHORISED SERVICE STATION, PLOT NO.3 NEAR PETROL PUMP, WARDHA ROAD UJJJWAL NAGAR, NAGPUR-440 025 - 440025 PH :9960695823.		PACHORA	643.	POOJA MARUTI AUTHORISED SERVICE CENTER (5564--), PLOT NO 75,PREM NAGAR ,KRISHNA PURI SHEVAR, PACHORA, DISTRICT - JALGAON , MAHARASHTRA - 424201 PH :9890320803.		654.	APPU SERVICE STATION (8966--), T BLOCK, S-32, NEAR PAWANA COMPLEX, MIDC, PUNE-411026 (MAHARASHTRA) - 411026 PH :9763538871.	665.	ASHOK AUTOMOBILES (3723--), 595/B, M.G.ROAD, SANGLI-416 416, - 416416		
631.	SAGAR AUTOMOBILES (4971--), WARDHA ROAD, CHINCHBHAWAN, NAGPUR - 441108, - 441108 PH :9422145365.		PALGHAR	644.	SIDDHI MOTORS (5553--), THEMBHEDE ROAD,GANESH KUND, PALGHAR,DISTRICT - THANE, MAHARASHTRA - 401404 PH :9890609107.		655.	ATHARVA CAR SERVICES (5161--), 5, BHUSARI COLONY, PAUD ROAD, KOTHRUD,PUNE-411038 , MAHARASHTRA - 411038 PH :9685024803.	666.	AWATI MOTORS (4772--), PADMAVATI COLONY, NEMINATH NAGAR VISHRAMBHAG, SANGLI-416415, MAHARASHTRA - 416415 PH :9422407284.		
632.	SHREEJEE SERVICES (2027--), CHANDAK KOTHI, SUBASH ROAD, NAGPUR-440 018, - 440018 PH :9766699321.			PANVEL	645.	GANGAL MOTORS (2934--), PLOT NO.:132.133 &117, SECTOR 1-S, ROAD NO-5, BEHIND CIDCO GODOWN, NEW PANVEL, DISTRICT - RAIGAD, (MAHARASHTRA) - 410206 PH :9320226072		656.	MANAS AUTOMOTIVE (5443--), SURVEY NO 920A, ANAND THORAT ROAD, NEAR APJ ABDUL KALAM E LEARNING SCHOOL, KARVE NAGAR, PUNE - 411052, - 411052 PH :9822043007.	667.	BALAJI AUTO SERVICE (1564--), PLOT NO.43,GOLDEN PARK , BYPASS ROAD,SANGLI-416416, DISTRICT-SANGLI , MAHARASHTRA - 416416 PH :9822106126.	
NANDED							657.	MARUTI CARE POINT (3337--), S. NO 273/5,BANER ROAD,OPP. VARSHA PARK, BANER,PUNE-411045, MAHARASHTRA, - 411045 PH :9689901475.	SATANA	668.	PATHAK MOTORS (5037--), YASHWANT NAGAR,TAHARABAD ROAD, , SATANA - 423301, DISTRICT - NASIK, (MAHARASHTRA) - 423301 PH :9890216257.	
633.	MARUTI CARES AND COLOURS (5778--), LABH NAGAR,BACK SIDE OF SURABH HOTEL, NANDED-431605, DISTRICT-NANDED, MAHARASHTRA - 431605 PH :9225751444.						658.	SAINATH AUTOMOBILES INDUSTRIES (1569--), SURVEY NO.36 PLOT NO.1, VADGAON KHURD SINHAGAD ROAD, NEAR GREEN FIELD HOTEL, PUNE-411 041 - 411041 PH :9822214282.	SATARA	669.	SIDDIH AUTOMOBILES (5464--), 294/A,DEGAON PATA - SATARA, RAHAMPTPUR ROAD,MIDC SATARA, DISTRICT - SATARA , (MAHARASHTRA) - 415002 PH :9422403178.	
NANDURBAR							659.	SANTOOR CAR CARE (2053--), ASHOK PLAZA, 32/2 WADGAON SHERI NEAR WEIKFIELD, PUNE NAGAR ROAD, PUNE-411 014 - 411014 PH :982214282.	SAWANTWADI	670.	CARKRAFT SERVICES PRIVATE LIMITED (8990--), PLOT NO.21, MUMBAI GOA HIGHWAY, KOLGAON-BHOM, SAWANTWADI-416 510, DIST. SINDHUGARH, MAHARASHTRA - 416510 PH :9423304639.	
634.	MAULEE MOTORS (4736--), SURVEY NO. 130/2, PLOT NO. 43, ADARSHA NAGAR, NIZAR ROAD, NANDURBAR-425412, MAHARASHTRA - 425412 PH :9822377931.						RAHURI	660.	ANAND MOTORS (4152--),IN FRONT OF ASHVINI HOTEL, NAGAR MANMA ROAD, A/P RAHURI DIST- AHMADNAGAR, MAHARASHTRA - 413705 PH :7350008501.	SHAHADA	671.	MATOSHREE AUTOMOBILES (2870--), NO.558 SHAHADA DHONDAICHA ROAD, TAL. SHAHADA, NANDURBAR DISTT., (MAHARASHTRA) - 425409 PH :9421726230.
NASHIK												
635.	HI TECH AUTO SERVICES (4451--), SURVEY NO 89/2, PLOT 1 & 2, OPP MOTIWALA MEDICAL COLLEGE, GANGAPUR-SATPUR LINK ROAD, NASHIK - 422012, MAHARASHTRA - 422007 PH :9825142471.		PARBHANI	647.	SAI SERVICING CENTRE (5252--), P7/5 MIDC, PARBHANI-431 401, MAHARASHTRA, - 431401 PH :9404504111.							
636.	RACCA SERVICES (3720--), RACCA ESTATE, OLD GANGAPUR NAKA, HANUMAN WADI LINK ROAD, PANCHVATI, NASHIK - 422003 - 422003 PH :9096846468.		PASHAN	648.	MARUTI CAR SANJIVANI (5278--), SURVEY NO 5/2,SUTARWADI ,SUSROAD,PASHAN, DISTRICT - PUNE, PUNE - 411021, MAHARASHTRA - 411021 PH :9960733360.							
637.	SAI AUTOMOBILES (3722--), SAPAT COMPLEX, OPP. PRESS HOSPITAL, NASIK ROAD-422 101, - 422101 PH :9822027931.		PATHARDI									

Maruti Authorized Service Station (AS ON 31.01.2026)

SHIRDI		VADA		693. KOMUO MARUTI WORKS (4644--), NH-2, MAO TAPHOU, SENAPATI HQ, SENAPATI DISTRICT, MANIPUR - 795106 - 795106 PH :8794109474.		703. INDO JAPAN SERVICE (4936--), PLOT NO. 18, 19, 30 & 31, BHAGABANPUR INDUSTRIAL ESTATE, PO - PATRAPADA, BHUBANESHWAR-752019, ORISSA - 752019 PH :9861095444.	
672. SHREE GANESH AUTO CARE (4268--), POST SAKURI, TALUKA RAHATA, AHMEDNAGAR-423107, - 423107		683. SAI MOTORS & SERVICE CENTRE (5675--), VARALA, OPP. LAKE CITY, MANOR ROAD, WADA, - 421303 PH :9226338578.		MIZORAM		CUTTACK	
SHRIRAMPUR		VITA		CHAMPAI		704. AUTO MATES (426--), 3B/1325, SECTOR-11, CDA, CUTTACK, ODISHA - 753014 - 753008 PH :9437020646.	
673. G.K. MOTORS (2871--), K.V. ROAD, SHRIRAMPUR, DISTT. AHMEDNAGAR, PIN-413 709, - 413709 PH :9822094098.		684. SONA AUTOMOTIVE (5671--), MAYANI ROAD, NEAR PRUTHIVIRAJ HOTEL, OPP. LAKADE PETROL PUMP, DISTT VITA- 415311, - 415311 PH :9890223938.		694. IRDIV- TC AUTO WORKS (5744--), SVENH DAY TLANG,ZOTLANG ROAD, NEW CHAMPHAI-CHAMPHAI, DISTRICT-CHAMPHAI, MIZORAM - 796321 PH :9862405715.		705. DURGA SERVICE CENTRE (8984--), NEAR PALAMANDAP, BADAMBADI, PO - ARUNODAY MARKET, DISTT - CUTTACK, PIN-753012 - 753012 PH :9937035762.	
SOLAPUR		WAI		LUNGLEI		DHENKANAL	
674. BALAJI MOTORS (1930--), 8536 B/1 MURARJI PETH, OPP. OLD PUNE NAKA OFFICE, SOLAPUR-413 002, - 413008 PH :9765111110.		685. ADITYA AUTO SERVICE (4271--), WAI SATARA ROAD, WAI-412803, SATARA DIST., - 412803 PH :9423862119.		695. LAWMA ENGINEERING WORKS (3125--), , A O C SQUARE, LUNGLEI, MIZORAM-796 701 - 796701 PH :9436147141.		706. SHREE AUTO (8997--), GOUDUNIBEDIA, DHENKANAL - 759013, ODISHA - 759001 PH :9437414972.	
THANE		WANI		NAGALAND		JHARSUGUDA	
675. PATRICIA AUTOMOBILES (529--), ALIGHT CHAMBER, ADJACENT GOLDEN DYES, OLD AGRA ROAD, HARDAS NAGAR, GOKUL NAGAR, THANE, WEST - 400601 - 400601 PH :9987175866.		686. SHEIKH AUTOMOBILES (8950--), PLOT NO 101, WANI GHUGUS ROAD, OM NAGRI, LAL GUDA TALAO, WANI, DIST. YAVATMAL, MAHARASHTRA 445304 - 445304 PH :9422171896.		696. ERJO MOTORS (4871--), EAST BLOCK, BURMA CAMP, NEAR BIBLE HOUSE, DIMAPUR, NAGALAND - 797112, - 797112 PH :9436004350.		707. AUTO MECHANIKA (2638--), S.H-10 BEHERAMALL, JHARSUGUDA-768 203, ORISSA, - 768203 PH :9040380001.	
676. SEAN MOTORS (5377--), DONTOLAV - VATAR, VIRAR (W), VIRAR SATPALA ROAD, TAL VASAI, DISTRICT - PALGHAR, MAHARASHTRA - 401301 PH :9324003123.		WARDHA		ODISHA		PURI	
677. STERLING MOTOR GARAGE (555--), B1/B2, KOTHARI COMPOUND NO.3, 27 ACRES, NEXT TO D'MART, OFF GHODBUNDER ROAD, MANPADA, THANE (WEST), MAHARASHTRA - 400610 - 400601 PH :9820252926.		687. BHARAT MOTOR (1631--), NAGPUR ROAD, NALWADI, WARDHA, MAHARASHTRA - 442001 PH :9881588388.		697. ZEET AUTOMOBILES (1573--), NALCO NAGAR, KANDASAR, ANGUL - 759 145, ORISSA - 759145 PH :9437021285.		708. URMILA MOTORS (5040--), HERA GOHRI SAHI CHOWK, PURI -1, DISTRICT - PURI, (ORISSA), - 752001 PH :7008651960.	
678. THANAWALA MOTOR AGENCY PVT. LTD. (3724 --), DHIRAJ BAUG, L.B.S. MARG, NAUPAD, NEAR HARINIWAS CIRCLE, THANE-400 602 - 400602 PH :9833795855.		WARORA		BALANGIR		SAMBALPUR	
679. CARRAFT SERVICES PRIVATE LIMITED (8973--), SAINATH NAGAR, GHODBUNDER ROAD, KASARVADAVALI, THANE (W) - 400615 PH :9833795855.		688. ROHIT AUTOMOTIVE (5873--), NAGPUR,CHANDRAPUR ROAD,VINAYAK, LAYOUT,TILAK WARD,WARORA-442907, DISTRICT-CHANDRAPUR, MAHARASHTRA - 442907 PH :9172060099.		698. ASHIRWAD AUTOMOBILE WORKS (3177--), DAMJI GARAGE, THIKADARPARA, , , BALANGIR-767 001 - 767001 PH :9437223452.		709. ANITA AUTO CARE (4834--), SALIA BAGICHA, LIONS CLUB ROAD, KUMBHARPURA, SAMBALPUR-768001 (ORISSA) - 768001 PH :9861248403.	
ULHASNAGAR		YAVATMAL		BALASORE		SEMLIGUDA	
680. CHIMAN AUTOMOBILES (3845--), NEAR KAJAL PETROL PUMP, BALANI COMPOUND, VITHALWADI STATION ROAD, ULHASNAGAR 421003 - 421003 PH :9850223422.		689. M.S. MOTORS (460--), AMRAVATI ROAD HIGHWAY, LOHARA, YAVATMAL-445 001, - 445001 PH :9822222579.		699. AUTO CARE (432--), AT-BAMPADA, PO-CHHANPUR, CITY - BALESHWAR (BALASORE), ODISHA - 756056 - 756056 PH :9437051944.		710. ASHUTOSH MOTORS (5035--), MAIN ROAD, NH-43, SEMILIGUDA, DISTRICT-KORAPUT, (ORISSA) - 764036 PH :9437405417.	
681. MODERN CAR CARE (3260--), SHED NO 1/2/3, OPPOSITE SUPPER POINT HOTEL, SECTION 17, ULHASNAGAR - 421003, MAHARASHTRA - 421003 PH :9819774588.		690. RAMESH MOTORS (2024--), GARDEN ROAD, YAVATMAL, MAHARASHTRA-445 001, - 445001 PH :9422865222.		700. TEKNO INDIA (3666--), D-2/9 INDUSTRIAL AREA, O.T. ROAD, BALASORE-756 003, (ORISSA) - 756001 PH :9861034990.		PONDICHERRY	
URAN		YEOLA		BARBIL		KARAIKAL	
682. SAI AUTOMOBILES (5665--), STATE HIGHWAY NO.56,NEAR JASAI NAKA, JASAI VILLAGE,URAN-410206, DISTRICT - RAIGAD, MAHARASHTRA - 410206 PH :9821806806.		691. BIJASANI AUTOMOTIVE (3041--), PLOT NO 46, SURVEY NO 35/3, VINCHUR ROAD, YEOLA. DIST. NASIK, MAHARASHTRA - 423401 PH :9423185025.		701. INDU MOTORS (3241--), IN FRONT OF UTKAL AUTOMOBILES, JODA-BARBIL HIGHWAY, BARBIL-758 035, (ORISSA) - 758035 PH :9437718008.		711. MARUTI TECH (2669--), NO.1,AKKARAVATTAM,NAGAORE MAIN ROAD , OPP TO ONGC,KARAIKAL-609604, DISTRICT-KARAIKAL, PONDICHERRY - 609604 PH :7373788705.	
SENAPATI		IMPHAL		702. INDU MOTORS (--), IN FRONT OF UTKAL AUTOMOBILES, JODA-BARBIL HIGHWAY, BARBIL-758 035, (ORISSA) - 758035 PH :9437718008.		PUDUCHERRY	
		692. BORDIN MARUTI GARAGE (4879--), SANGAIPROU AIRPORT ROAD,, IMPHAL WEST, MANIPUR - 795001, , - 795001		BHUBANESHWAR		712. S D K MOTORS (471--), PLOT NO.12, 100 FEET ROAD, OZHANDAI KEERAPALAYAM MUDALIARPET, PONDICHERRY-605 004 - 605004 PH :9843045689.	
						713. A.P.P. MARUTI MOTORS (2670--), PLOT NO.6 GUNDU SALAI ROAD, NATESAN NAGAR, NEAR 100 FEET ROAD, PONDICHERRY-605 005 - 605009	

714. MARUTI MISSION (5067--), 60 RAGAVENDIRA NAGAR,KAMARAJ SALAI, THATTANCHAVADY PONDICHERRY, TINDIVANAM ROAD PONDICHERRY-9, PONDICHERRY - 605009 PH :9786589000.

PUNJAB

AHMEDGARH

715. GAHIR AUTOMOBILES (2877--), LUDHIANA MAER KOTLA ROAD, VILL. GOPALPUR CITY, AHMEDGARH, (PUNJAB) - 148021 PH :9817553627.

AJNALI

716. VISHWAKARMA MOTORS (5666--), NEAR VIMAL DHARAMKANTA - AJNALI, DISTRICT - FATEHGARH SAHIB, PUNJAB, - 147301 PH :9814528084.

AMLOH

717. BINDRA MOTORS (5844--), NEAR DESH BHAGAT COLLEGE SONTI, AMLOH, DISTRICT-FATEH GARH SAHIB, PUNJAB - 147203

AMRITSAR

718. HANSON AUTOMOBILES (1722--), MAQBOOL PURA, G.T. ROAD, AMRITSAR, - 143001 PH :9815167669.

719. JACKSON LUBRICANTS (364--), 16 COURT ROAD, NEAR RAVI GAS AGENCY, AMRITSAR-143 001, - 143001 PH :9814299944.

720. KAPOOR'S KAR KARE PVT. LTD. (737--), I/S MAHA LAKSHMI, CALICO PRINTING MILLS, OLD JAIL ROAD, AMRITSAR(PUNJAB) - 143001 PH :9814213113.

721. SAGGU SERVICE CENTRE (733--), HIDE MARKET, AMRITSAR-143 001 (PUNJAB), , - 143001 PH :9868497779.

BANUR

722. AMRIK SERVICE STATION (2433--), PATIALA ROAD, BANUR, DISTT. MOHALI(PUNJAB), - 140601 PH :9815591325.

BARNALA

723. GAURAV MOTORS (4962--), DHANAULA ROAD, BARNALA - 148101, DISTRICT SANGRUR, PUNJAB - 148101 PH :9317512916.

724. PUNJAB MOTOR GARAGE (6222--), DHANAULA ROAD, BARNALA (PUNJAB), , - 148101 PH :9317512360.

BHADSON

725. FRIENDS MOTORS (2233--), NABHA ROAD, BHADSON-147 202, DISTT. PATIALA, (PUNJAB) - 147202 PH :9815700778.

BHATINDA

726. KRISHNA AUTOS (4571--), 40FT ROAD NAMDEV MARG NEAR INDRANI HOSPITAL ,BATHINDA (PUNJAB) 151001 - 151001 PH :9886871810.

727. MODERN MOTORS (6234--), OPP. T.V. TOWER, MANSA ROAD, BHATINDA, - 151001 PH :9814177075.

728. SUPER AUTOMOBILES (6232--), TINKONI, GONIANA ROAD, BHATINDA, - 151001 PH :9814036163.

BUDHLADHA

729. JINDAL AUTOMOBILES (2147--), NEAR P.S.E.B., BHIKHI ROAD, BUDHLADA-151 502, DISTT. MANSA - 151502 PH :9815516964.

DERABASSI

730. BINDAL AUTOMOBILES (1248--), CHANDIGARH AMBALA ROAD, PARAS RAM MARKET, DERA BASSI-140 507, - 140507 PH :9914449711.

DHURI

731. SHIV MOTORS (1962--), NEAR SDM OFFICE, SANGRUR ROAD, DHURI-148 024, - 148024 PH :9872851068.

DINANAGAR

732. D.S. MARUTI SERVICE STATION (3333--), G.T. ROAD, DINA NAGAR, DIST. GURDASPUR-143 531, (PUNJAB) - 143531 PH :9814873101.

DIRBA

733. PENTAGON MECHANICAL WORKS (2564--), JIND-SANGRUR ROAD, DIRBA, DISTT. SANGRUR, (PUNJAB) - 148035 PH :9876543400.

DORAHA

734. FATEH MOTORS (2048--), G.T. ROAD, DORAHA, (LUDHIANA), - 141421 PH :9814031784.

FAZILKA

735. BAHF. MOTORS (6229--), ABOHAR ROAD, FAZILKA-152 123, , - 152123 PH :9815700550.

FIROZPUR

736. SUTLEJ AUTOMOBILES (3568--), G.T. ROAD, FEROZEPUR CANTT., PIN-152 001 (PUNJAB), - 152001 PH :9417009985.

GIDDARBAHA

737. JIWAN CAR CENTRE (9021--), BHATINDA ABOHAR, NATIONAL HIGHWAY, GIDDERBAHA-152 101, DIST. MUKETSAR (PUNJAB) - 152101 PH :9779600086.

GOINDWAL SAHIB

738. DASS MOTORS (8941--), NEAR KALAYAN JEWELLERS MINI SHOWROOM, KHADOOR SAHIB CHOWK, GOINDWAL SAHIB, TARN TARAN, PUNJAB - 143422, - 143429 PH :9914699121.

GURDASPUR

739. VIJAY SERVICE STATION (749--), NEAR RAILWAY CROSSING, PATHANKOT ROAD, GURDASPUR, (PUNJAB) - 143521 PH :9814437637.

HOSHIAHPUR

740. JOGINDER MOTORS (2268--), BYE PASS TANDA ROAD, HOSHIAHPUR-146 001, , - 146001 PH :9803227000.

JAGRAON

741. DHALIWAL AUTOMOBILES (2035--), NEAR AJANTA PETROL PUMP, G.T. ROAD, JAGRAON DISTT. LUDHIANA, (PUNJAB) - 142026 PH :9814318600.

JALANDHAR

742. CITY POINT SERVICE STATION (4528--), AVTAR NAGAR ROAD, BEHIND T.V. CENTRE, OPP HOTEL REGENT PARK, JALANDHAR - 144003 PH :9779613576.

743. KAAR KARES (725--), G.T.ROAD, JALANDHAR, 144 001 (PUNJAB), - 144001 PH :9569295585.

744. KAPOOR MOTOR GARAGE (1649--), OPP. SPORTS COLLEGE, KAPURTHALA ROAD, JALANDHAR CITY, - 144623 PH :9815040411.

745. PUNJAB MOTOR GARAGE (8959--), HMV CHOWK, NEW GRAIN MARKET ROAD, JALANDHAR CITY-144 008 - 144008 PH :9814675433.

KAPURTHALA

746. T.S. WALIA MOTORS (267--), MANSOORWAL, JALLANDHAR ROAD, KAPURTHALA, - 144601 PH :9357211525.

KHARAR

747. AUTOXON (9027--), SCF 2, CHANDIGARH ROAD, KHARAR, SAS NAGAR,140301 - 160055 PH :9781815959.

KURALI

748. V K MOTORS (8943--), CHANDIGARH ROPAR ROAD, KURALI, DISTRICT SAS NAGAR (MOHALI), PUNJAB -140103 - 140103 PH :9814273873.

LALRU

749. HITECH MOTORS (2777--), IOC PETROL PUMP, AMBALA CHANDIGARH ROAD, LALRU DISTT. PATIALA, PUNJAB - 140501 PH :9888191444.

LUDHIANA

750. PUNJAB AUTO CENTRE (6221--), OPP TELEPHONE EXCHANGE, BHARAT NAGAR CHOWK, LUDHIANA-141 001, - 141001 PH :9855170003.

751. REEHAL AUTOMOBILE SERVICES (1176--), OPP. JAMALPUR POWER HOUSE, CHANDIGARH ROAD, LUDHIANA-141 010, - 141015 PH :9357110000.

752. SATNAM MOTOR WORKSHOP (4533--), OPP MILK PLANT, FIROZPUR ROAD, LUDHIANA, - 141003 PH :9855228591.

753. STAR AUTOS (4650--), JALANDHAR BY PASS, G.T. ROAD, LUDHIANA, - 141012 PH :9216844220.

754. VISHAL AUTOMOBILES (1262--), G.T. ROAD, DHOLEWAL, LUDHIANA-141 003, - 141003 PH :9815206060.

MANDI GOBINDGARH

755. NATIONAL MOTORS (1070--), G.T. ROAD, NEAR P & S BANK, MANDI GOBINDGARH-147 301, - 147301 PH :9317862000.

MANSA (PUNJAB)

756. LOVEKESH ENTERPRISES (2162--), NEAR N.M. COLLEGE, MANSA-151 505, (PUNJAB), - 151505 PH :9216524143.

MOGA

757. GURU NANAK MOTOR REPAIRING WORKS (732--), G.T.ROAD, MOGA-142 001 (PUNJAB), , - 142001 PH :9914212387.

MOHALI

758. BENZ AUTO SCAN (5734--), E-153,PHASE 7, INDUSTRIAL AREA -MOHALI, DISTRICT-MOHALI, PUNJAB - 160055 PH :9876101806.

759. SETHI MOTORS (4742--), PLOT NO. E-159, INDUSTRIAL AREA, PHASE-7, MOHALI, PUNJAB - 160055 PH :9814307002.

760. UNIPPOINT (5043--), PLOT NO.593., INDUSTRIAL AREA PHASE-IX,MOHALI, DISTRICT - MOHALI, (PUNJAB) - 160062 PH :7814402838.

MORINDA

761. SONY MOTOR PALACE (1077--), SIRHIND ROAD, MORINDA-140 101, , - 140101 PH :9815612477.

MUKERIAN

Maruti Authorized Service Station (AS ON 31.01.2026)

762. MARSHAL SALES CORPORATION (5251--), NEAR RADHA SOAMI SATSANG, PATHANKOT ROAD, MUKERIAN, - 144211, DISTRICT HOSHIARPUR, PUNJAB - 144211 PH -8283835926.	773. BALAJI AUTOMOBILES (4443--), OPPOSITE FCI GODOWN, RAMPURA PHUL - 151103 - 151103 PH -9417172671.	785. POOJA MOTORS (5439--), POOJA MOTORS, NEAR AMARNATH PETROL PUMP, DELHI ROAD, MUNESKA - ALWAR, DISTRICT - ALWAR, RAJASTHAN - 301001	CHOMU
763. NEW MODERN AUTOMOBILES (4437--), G.T. ROAD, MUKERIAN, PUNJAB, - 144211 PH -9463292013.	774. VIRDI MOTOR GARAGE (3046--), BARNALA ROAD, RAMPURAPHUL-151 103, DISTT. BATHINDA, (PUNJAB) - 151103 PH -9872874175.	786. VERTEX AUTOMOBILES PVT. LTD. (1944--), CHANDUKA BHAWAN, SWARG ROAD, ALWAR-301 001, - 301001	798. SHREE LAXMI MOTORS (3072--), MORIJA ROAD, CHOMU, JAIPUR-303702, (RAJASTHAN) - 303702 PH -9828160281.
MUKTSAR	SANGRUR	BARMER	CHURU
764. MALWA MARUTI CENTRE (4764--), OPP GOVT COLLEGE KOTKAPURA ROAD, MUKTSAR, PUNJAB, - 152026 PH -9814622081.	775. RAKESH MARUTI SERVICE (6325--), JIND - DELHI ROAD, NEAR E.S.I. DISPENSARY, SANGRUR-148 001, - 148001 PH -9815103944.	787. VEW SERVICE (1238--), S-181 & 182, RIICO, BARMER-344 001, (RAJASTHAN) - 344001	799. ABS MOTORS (2978--), JAIPUR ROAD, CHURU-331 001, (RAJASTHAN), - 331001
NAKODAR	776. SANGRUR MARUTI CENTRE (1632--), PATIALA ROAD, OPP. MILITARY CAMPUS, SANGRUR-148 001, (PUNJAB) - 148001 PH -9417510111.	BASSI	DAUSA
765. MEHTA MOTORS (3531--), KHADDAR BHANDAR ROAD, NAKODAR-144040 - 144040 PH -9815600082.	SIRHIND	788. VARDHANI MOTORS (5358--), NEAR NALAYA BASSI, DISTRICT - JAIPUR, RAJASTHAN, - 303301 PH -9950107203.	800. BALAJI MOTORS (4564--), NEW MANDI ROAD, NEAR TRANSFORMER, DAUSA-303303, - 303303
PATIALA	777. BADRI DHAM CAR SERVICE (1062--), G.T. ROAD, SIRHIND-140 406, - 140406	BEHROR	DHAULPUR
766. PARAS MOTORS (4778--), PLOT NO. 25-A, NEAR HOTEL FLYOVER FACTORY AREA, PATIALA-147001, PUNJAB - 147001 PH -9814089861.	778. MALHOTRA MOTORS (4657--), OPP. INCOME TAX OFFICE, SIRHIND, DISTT FATEHGARH SAHIB, PUNJAB - 140406 PH -9815844008.	789. K.L. INTERNATIONAL AUTOMOBILES (1763--), DELHI JAIPUR HIGHWAY, VILLAGE DHAMI, P.O. KANKARODPA, TEHSIL BEHROR DIST. ALWAR (RAJASTHAN) - 301701	801. NARAYAN MOTORS (3345--), G.T. ROAD, DHOLPUR, (RAJASTHAN), - 328001 PH -9116013413.
767. RAJINDRA MOTORS (8924--), C-177, INDUSTRIAL FOCAL POINT, PATIALA, PUNJAB - 147003 PH -9316200335.	SULTANPUR LODHI	BHARATPUR	802. NARSING SERVICE CENTRE (3074--), NEAR JAGDISH TALKIES, BARI ROAD, DHOLPUR-328 001, (RAJASTHAN) - 328001 PH -9414026820.
PATTI	779. HANDA MOTORS (2776--), TALWANDI ROAD, SULTANPUR LODHI, DISTT. KAPURTHALA, (PUNJAB) - 144626 PH -9815623392.	790. CLASSIC MOTORS (2348--), DEEG ROAD, KUMHER GATE, BHARATPUR-321 001, (RAJASTHAN) - 321001 PH -9414026545.	DIDWANA
768. ANU AUTOMOBILE (2747--), AMRITSAR ROAD, NEAR RADHA SWAMI SATSANG, PATTI DISTT. AMRITSAR, (PUNJAB) - 143416 PH -8575210003.	SUNAM	BHILWARA	803. SANTOSH AUTOMOBILES (5450--), SANTOSH ATUOMOBILES, KUCHAMAN ROAD DIDWANA, DISTRICT - NAGOUR, (RAJASTHAN) - 341303 PH -9828833363.
PHAGWARA	780. SUNAM AUTOMOBILES (3924--), PATIALA ROAD, NEAR OCTROI POST, SUNAM, DISTT. SANGRUR - 148028 PH -9417076315.	791. NATIONAL SERVICE CENTER (4761--), SANGANER COLONY, KOTA ROAD, BHILWARA-311001, RAJASTHAN - 311001 PH -9829120285.	DUDU
769. SWAMI MOTORS (3774--), (PAMMI W/SHOP), OPP. B.N. DUGGAL PETROL PUMP, G.T. ROAD, PHAGWARA DIST. KAPURTHALA - 144401 PH -9815107989.	TANDA	792. QUICK SERVICES (3473--), SABUN MARG, PURAN DAS JI KI BAGICHEE, BHILWARA-311 001, - 311001	JAIPUR
QADIAN	781. MALWA AUTO CARE CENTRE (2073--), G.T. ROAD BY-PASS, TANDA, DISTT. HOSHIARPUR, (PUNJAB) - 144204 PH -9814392103.	BHINIMAL	805. J.K. AUTOMOBILES (2058--), 38 SUSHILPURA, AJMER ROAD, JAIPUR-302 007, - 302007
770. HI-TECH AUTOMOBILES (4945--), NEAR VILLAGE NATHPURA, BATALA ROAD, QADIAN, DISTT. - GURDASPUR, PIN - 143516, PUNJAB - 143516 PH -9877510294.	ZIRA	793. GURJAR MOTORS (5567--), RAMSIN ROAD, OPP PRADEEP PETROL PUMP, BHINMAL, DISTRICT - JALOR, RAJASTHAN - 343029 PH -9414374962.	806. JAI SHRI RAM AUTO SERVICE CENTRE (1140--), OPP. SHYAM NAGAR TURN, MAIN AJMER ROAD, SODALA JAIPUR, RAJASTHAN - 302019
RAIKOT	782. NEW AUTOMOBILES (5477--), NEAR BYE PASS, FEROZPUR ROAD, ZIRA, TEHSIL ZIRA, DIST. FEROZPUR, PUNJAB - 142047, - 142047 PH -9463240231.	BHIWADI	807. KATARIA MOTORS (2577--), 9-A NEMINAGAR VISTAR, AMRAPALI MARG, VAISHALI NAGAR, JAIPUR - 302021 - 302021
771. RANA SUPREME MOTOR GARAGE (3732--), NEAR GURUDWARA TAHLIANA SAHIB, BARNALA BYE PASS ROAD, RAIKOT, DISTT. LUDHIANA (PUNJAB) - 141109 PH -9814265791.	RAJASTHAN	794. WHEEL-O-CITY (4246--), E-7D (A) PHASE-1, NEAR R119 CHOWK, BHIWADI, RAJASTHAN - 301001	808. KRISHNA AUTOMOBILES (5363--), B-27 SUNDAR NAGAR, MANSAROVAR, JAIPUR, DISTRICT - JAIPUR, RAJASTHAN - 302020 PH -9829968075.
RAJPURA	ABU ROAD	BIKANER	809. LAXMI MOTORS (2576--), OPP METRO PILLAR NO 34, GANGA JAMUNA CROSSING, NIRMAN NAGAR, JAIPUR, RAJASTHAN - 302019 - 302019 PH -9351551181.
772. NOOR MOTORS (3045--), PATIALA ROAD, RAJPURA-140 401, (PUNJAB), - 140401 PH -9814507867.	783. UNIQUE MOTORS (4923--), MOUNT ROAD, AKRABHATTA, ABU ROAD-307 510, (RAJASTHAN) - 307510 PH -9929177781.	795. GENERAL AUTOMOBILES (1123--), RANI BAZAR, RAIWAY CROSSING, BIKANER (RAJASTHAN), - 334001	810. M. R. MOTORS (8933--), PLOT NO. 120-121 & 125-126, VANE VIHAR, 200FT BYE PASS, JHOTWARA, JAIPUR (RAJASTHAN) - 302012
RAMPURAPHUL	AJMER	796. VISHI MOTORS (5559--), PLOT NO 55(A) J.A. RANI BAZAR-BIKANER, DISTRICT - BIKANER, RAJASTHAN, - 334001	811. A-1 MOTORS (4856--), D-28 MALVIYA NAGAR., INDUSTRIAL AREA JAIPUR, DISTRICT - JAIPUR RAJASTHAN - 302017 PH -9414047628.
	784. ASHOK AUTOMOBILES (1121--), BYEPASS ROAD, PARVATPURA, IND.AREA, AJMER (RAJASTHAN) - 305002	BUNDI	
	ALWAR	797. SHRI JI MOTORS (2174--), OPP. KUMBHA STADIUM, KHOJA GATE, BUNDI, (RAJASTHAN) - 323001 PH -9990270676.	

812.	AMGI AUTOMOBILES (8993--), DIGGI MALPURA ROAD, SANGANER, JAIPUR - 302029, RAJASTHAN - 302029 PH -9828012009.	KOTA	837.	APNA MARUTI GARAGE (5940--), OPP. RAM TEKRI MANDIR,PRATAP MARKET, MAIN ROAD,RAWATBHATA-323305, DISTRICT-CHITTORGARH, RAJASTHAN - 323305	848.	HARI AGENCIES (468--), #27, ANNA SALAI, ARCOT , TAMIL NADU -632503, - 632503				
813.	AUTONITY JAIPUR (4852--), GOPALPURA BYPASS, DELHI KISHANGARH, HIGHWAY JAIPUR, DISTRICT - JAIPUR - 302019, RAJASTHAN - 302019 PH -9784377503.	KOTPUTLI	SIKAR		ATTUR	849.	GANESAA MOTORS (4538--), 1/1D, ARANGABALA NAGAR, SALEM CUDDALORE MAIN ROAD, NARASINGAPURAM, ATTUR (TK), SALEM, TAMIL NADU, PIN - 636108 - 636108 PH -9443273866.			
814.	AUTONITY VKIA (8927--), PLOT NO.6, GIRDHAR COLONY, SIKAR ROAD, JAIPUR-302 013 - 302039	827.	VIKAS MARUTI SERVICE CENTRE (4970--), NH-8, NEAR MEENA GAS AGENCY GODOWN, KOTPUTLI - 303108, RAJASTHAN - 303108 PH -9929383045.	SRI MADHOPUR	839.	BHARAT MOTORS (5757--), WARD NO.4,BYE PASS ROAD , SRI MADHOPUR-323715, DISTRICT- NEEMKATHANA, (RAJASTHAN) - 323715 PH -9251377020.	AVINASHI	850.	K.P.K AUTOMOTIVE (5547--), SF NO.460/2,TIRUPPUR MAIN ROAD, AVINASHILINGAMALAYAM,AVINASHI-641654, DISTRICT-COIMBATORE, TAMILNADU - 641654 PH -9443301732.	
815.	RIGHTWAYS CO. (1131--), KISHANPOLE BAZAR, JAIPUR, - 302002	KUCHAMAN	828.	DALUKA AUTO SALES (4565--), NEARBY SHARDA PALACE HOTEL,, KUCHAMAN BYE PASS,, KUCHAMAN CITY, 341508, - 341508 PH -9414433240.	SRIGANGANAGAR	840.	ROHIT UDYOG (1132--), 75 K-BLOCK, SRIGANGANAGAR, , - 335001	BHAVANI	851.	CAR ZONE AUTO SERVICE (5332--), METTUR MAIN ROAD - NATARAJAPURAM BHAVANI, DISTRICT - ERODE , TAMILNADU - 638301 PH -9842085670.
816.	SAISHA MOTORS (1764--), MAIN SHIPRA PATH, OPP. SECTOR 93, AGARWAL FARM, MANSAROVAR, JAIPUR-302 020 - 302020	MAKRANA	829.	GEHLOT MOTORS (454--), OPPOSITE TO G.S.S, MANGLANA ROAD, MAKRANA, RAJASTHAN - 341505 PH -9829024687.	SUJANGARH	841.	SHRI CHARBHUJA MARUTI (4924--), LANDU ROAD, SUJANGARH, DISTRICT-CHURU, RAJASTHAN - 331507 PH -9828118827.	CHENGLEPUT	852.	MARUTI PRO CARE (2941--), 57-A/1 THIRUKAZHUKUNDRAM ROAD, CHENGALPATTU-603 002, (T.N.), - 603002
817.	SERVICE CENTRE (1139--), OPP. TOURIST HOTEL, M.I. ROAD, JAIPUR-1, - 302001 PH -9351551181.	MERTA	830.	DELUX CAR SERVICE CENTRE (3856--), KUCHERY ROAD, MERTA CITY, DISTT. NAGAUER, - 341510 PH -9414004543.	SURATGARH	842.	ROHIN SERVICE STATION (2646--), N.H.15 BIKANER ROAD, OPP. G.S.S. POWER HOUSE, SURATGARH-335 804, (RAJASTHAN) - 335804	CHENNAI	853.	NSK MARUTI (4975--), 2/547, EAST COAST ROAD, NEELANKARAI, CHENNAI, TAMIL NADU - 600115 PH -9841047232.
818.	SHARP MOTORS (2032--), J-3 HIMMAT NAGAR, MAIN TONK ROAD, GOPAL PURA CIRCLE, JAIPUR-302 004 - 302004 PH -9694420002.	NAGAUER	831.	CLASSIC AUTOMOBILES (1179--), DIDWANA ROAD, (DELHI GATE), NAGAUER-341 001, (RAJASTHAN) - 341001 PH -9672501234.	TIJARA	843.	M D MOTORS (5875--), ALWAR ROAD,NEAR BOLLYWOOD FARM, TIJARA-, DISTRICT-ALWAR, RAJASTHAN - 301411 PH -9351607080.	854.	P.A. SERVICE STATION (2346--), NO. 1 GOVINDARAJ ALUMEL AMMAL NAGAR, NEAR 100 FEET ROAD, AGRAHARAM, KORATTUR, CHENNAI-600 076 - 600076 PH -9840378025.	
819.	SUPREME MOTORS (8952--), A-25 ASSAM MANSION, TRANSPORT NAGAR, JAIPUR-302 003, - 302003 PH -773279332.	NEWAI	832.	HEENA MOTORS (5568--), NEWAI BYEPASS ,NEAR JHILAY MOAD, NEWAI, DISTRICT - TONK, RAJASTHAN - 304021 PH -9414228066.	TONK	844.	SUMIT MARUTI (4566--), G 1 - 103, RIICO INDUSTRIAL AREA, JAIPUR ROAD, TONK-304001, RAJASTHAN - 304001 PH -9214494900.	855.	SWAMY AUTOMOBILES (456--), NO. 5, TANK BUND ROAD, NUNGAMBAKKAM, CHENNAI, TAMIL NADU - 600034 - 600008 PH -9840891916.	
820.	TOSHINIWAL AUTOMOBILES (3475--), 131 SHRI GOPAL NGAR, GOPALPURA BYEPASS, JAIPUR, (RAJASTHAN) - 302015 PH -9887553836.	PILANI	833.	MARUTI CARE CENTRE (3073--), CHIRAWA ROAD, DHANI POPSINGH, PILANI- 333031, RAJASTHAN - 333031	UDAIPUR (RAJASTHAN)	845.	ALOK AUTOMOBILES (8999--), PLOT NO. 1, ZHAMAR KOTRA ROAD, OPPOSITE SAHKARI UPBHOKTA MARKET, SECTOR-6, UDAIPUR-313001 - 313001 PH -9414166305.	856.	UNIQUE CAR CARE (5868--), NO.54, FIRST STREET, MANIKANDAPURAM, MTH HIGH ROAD, THIRUMULLA VOYAL, CHENNAI, TAMILNADU - 600062 - 600062	
JHUNJHUNJ		PINDWARA	834.	MARUTI CARE CENTRE (--), CHIRAWA ROAD, DHANI POPSINGH, PILANI- 333031, RAJASTHAN - 333031	846.	SHREE SAI CAR CARE (2376--), PUNJAWATI, PULLA, UDAIPUR-313 001, - 313001 PH -9414167605.	857.	VAISHALI MOTORS (4529--), 4/577 RAJIV STREET, OLD MAHABALIPURAM ROAD, KOTTIVAKAM, CHENNAI-600041 - 600041 PH -9840138888.		
821.	DADHIMATI MOTORS (1648--), OPPOSITE RSEB OFFICE, BAGAR ROAD, JHUNJHUNJ, (RAJASTHAN) - 333001 PH -9587007122.	RAJSAMAND	835.	RUNEJA MOTORS (5758--), NH-14,OPP PATHIK MIDWAY , PINDWARA-307022, DISTRICT-SIROHI, RAJASTHAN - 307022 PH -9610451492.	TAMIL NADU		858.	WHEELS AUTO (469--), 40 KASTURIBA NAGAR, 1ST CROSS ROAD, ADYAR, CHENNAI-600 020 - 600020 PH -9840138888.		
822.	VISHWAKARMA AUTOMOBILES (3071--), HPC DEALER, RANI SATHI ROAD, JHUNJHUNJ-333 001, (RAJASTHAN) - 333001 PH -9461058939.		836.	VIPUL AUTOMOBILES (2170--), NH -8, BHAGWANDA , BEHIND GOVT. PRIMARY SCHOOL, , RAJSAMAND, RAJASTHAN - 313333	ARAVAKURICHI	847.	GOWRI MARUTI (5570--), OPPOSITE IOCL PETROL PUMP,NH-7, ARAVAKURICHI, DISTRICT - KARUR, TAMILNADU - 639201 PH -9994818043.	859.	ABIRAMI MOTORS (5131--), 6 ANNA NEDUMATHAI, CHOOLABEDU, CHENNAI-600094, TAMILNADU - 600094 PH -9840017558.	
JODHPUR		RAWATBHATA			ARCO		860.	AUTO TECH (3445--), NO.6, 1ST STREET, KAMATCHI COLONY, CHENNAI, KANCHIPURAM, TAMIL NADU - 600047 - 600047 PH -9941019455.		
823.	DEORA MOTORS (5353--), UPPER UNDER BRIDGE ,PAOTA 'C' ROAD, JODHPUR, DISTRICT - JODHPUR, RAJASTHAN - 342006 PH -9829026069.									
824.	P.D. MOTORS (3340--), NATIONAL HIGHWAY NO. 62, NEW PALI ROAD, NEAR JHALAMAND CIRLCE, JODHPUR, RAJASTHAN - 342005 - 342005									
KISHANGARH										
825.	RADHA SWAMI AUTOMOBILES (440--), NEAR AJMER ROAD - BUS STAND, , KISHANGARH,, DISTRICT AJMER, RAJASTHAN - , - 305801 PH -9252059798.									

Maruti Authorized Service Station (AS ON 31.01.2026)

861. EASVARI MOTORS PRIVATE LIMITED (1431--), W-110 ANNA NAGAR, CHENNAI-600 040, - 600010 PH :9840855665.	872. SRI KRISHNA AUTOMOBILE ENTERPRISES (2320--), 184, CAUVERY ROAD, ERODE - 638003, TAMIL NADU - 638003 PH :9842721805.	KARUMATHAMPATTY	893. SREE GANAPATHY MOTORS (1629--), NO.12 JAWAHAR STREET, R.V. PURAM, NAGERCOIL-629 001, - 629001 PH :9345322333.
862. KARS KARE SERVICE CENTRE (2579--), 648 T.H. ROAD, TONDIPART, CHENNAI-600 081, - 600081 PH :9841097259.	873. SRI SAKTHI CARE (8937--), 13, NGGO COLONY MAIN STREET, ERODE, TAMILNADU, 638009 - 638009 PH :9597726311.	KARUR	NAMAKKAL
863. MARUTI NEEDS (2531--), NO.2 PARK ROAD, PADI, CHENNAI-600 050, - 600050 PH :9940099500.	GADALUR	884. SRI SAKTHI AUTO CARE (2532--), NO. 3/244, BHARATHIYAR STREET, COVAI ROAD, VADIVEL NAGAR, L.N.S. POST, KARUR - 639002, TAMILNADU - 638009 PH :9842526585.	894. ARUNA MOTORS (1461--), MARUTI SERVICE CENTRE, OPP. N.S.R. BUILDING, SALEM MAIN ROAD, NAMAKKAL-637 001 - 637001 PH :9842775761.
CHIDAMBARAM	874. GREENWAY MARUTI SERVICE CENTER (5471--), KALAMPUZA D.O. NO 12/59-3, GUDALUR, DISTRICT - NILGIRLS, TAMILNADU - 643212 PH :9443603815.	KOVILPATTI	PALLADAM
864. HI-TECH MARUTI (3231--), NO.45,SITHIVEL NAGAR,SALIYANTHOPPU , BYE PASS ROAD,CHIDAMBARAM-608001 , DISTRICT-CUDDALORE , TAMILNADU - 608001 PH :9585538671.	GOBICHETTIPALAYAM	885. CLASSIC AUTOMOBILES (6037--), 3/531 - B, TIRUNELVELI TO MADURAI BYPASS ROAD, NH-7, INAM MANIYACHI, KOVILPATTI, TAMIL NADU - 628502, - 628502 PH :9442552000.	895. CHENDU MOTORS (4333--), KALIVELAMPATTI PIRIVU, TRICHY ROAD, PALLADAM-641662, COIMBATORE DIST - 641662 PH :9842225058.
COIMBATORE	875. HI-TEC AUTO GARAGE (2426--), 426,ASIRIYAR NAGAR, KULLAMPALAYAM POST , ERODE MAIN ROAD, GOBICHETTIPALAYAM-638 476, - 638476 PH :9842447725.	KRISHNAGIRI	PALLAVARAM
865. SOUTH INDIA MOTORS (MARUTI) (4752--), 9A/3 AVINASHI ROAD, NEAR KMCH POLICE CHECK POST, CIVIL AERODROME POST, SITRA, COIMBATORE-641014 (TAMIL NADU) - 641014 PH :9843027601.	HOSUR	886. THIRUTHANIGAI MOTORS (2427--), SALEM-CHENNAI BYE PASS ROAD, KRISHNAGIRI-635 001, (TAMILNADU), - 635001 PH :9842129890.	896. VBK MOTORS (4463--), NO. 91, G.S.T ROAD, ALVITONE ESTATE, PALLAVARAM, CHENNAI - 600043, - 600043 PH :9841425030.
866. GURU AUTO GARAGE (4965--), 2/98, IRUGUR ROAD, NEAR BSNL OFFICE, CHINNAMPALAYAM, COIMBATORE, TAMIL NADU - 641062 PH :9843256247.	877. AUTO SCAN (2070--), DOOR NO. OLD NO.-77, NEW NO. 58 -D2, BANGALORE ROAD, NEW VIVEK GARDEN, HOSUR TALUK, KRISHNAGIRI DISTRICT, TAMILNADU - 635109, - 635109 PH :8122904091.	KUMBakonAM	PARAMAKUDI
867. LOTUS AUTOMOBILES (4758--), 1647-A AVINASHI ROAD, HOPE COLLEGE, PEELAMEDU, COIMBATORE-641004 (TAMILNADU) - 641004 PH :9842265133.	878. BALAJI MOTORS (5136--), PLOT NO. 11 & 18, MARUTHI NAGAR, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109 - 635109 PH :9842755402.	MADURAI	897. SIVA AUTOMOBILES (4542--), NEAR SRIKUMARA SUBRAMANIAM SWAMY TEMPLE, OPP FIRE STATION, MADURAI RAMESWARAM ROAD, PARAMAKUDI-623707 RAMNAD DIST - 623707 PH :9388405305.
COONOOR	KALPAKKAM	888. SHALOM MOTORS (4629--), THENI MAIN ROAD, ACHAMPATHU, NEAR BHARAT PETROLEUM, MADURAI-625019 - 625019 PH :8754033244.	PARAMATHIVELUR
868. SHANTHI AUTO CARE (6054--), FIGURE OF 8 ROAD, COONOOR-643101, NILGRIS, (TAMIL NADU) - 643101 PH :9443273888.	879. MARUTI MOTORS (4253--), NO. 374, HAJIYAR NAGAR, ECR ROAD, PUDUPATTINAM VILLAGE, THIRUKALUKUNDRAM TALUKA, CHENGALPATTU DISTRICT, KALPAKKAM-603102, TAMIL NADU - 603102 PH :9443366535.	889. FRIENDLY MOTORS (3141--), 32 PALAM STATION ROAD, NEAR LIC BUS STOP, SELLUR, MADURAI-625 002 - 625002 PH :9842714047.	898. RADHA CAR CARE (5828--), NO 96/1,BYE PASS ROAD,VETTUKATTU PUDAR, PIRIVUR ROAD,PARAMATHIVELUR-638182, DISTRICT-NAMAKKAL, TAMILNADU - 638182 PH :8608090140.
CUDDALORE	KANCHEEPURAM	MADURANTHAKAM	PERUNDURAI
869. SUNTAR AUTOS (2134--), KTR BUILDINGS, CHIDAMBARAM ROAD, CUDDALORE-607 002, - 607002 PH :9842453690.	880. SVS MARUTI SERVICE CENTRE (5466--), NO1 MILITARY ROAD, SEVILIMEDU, OPP BRINDAVANAM NAGAR, KANCHIPURAM, TAMILNADU 631501 - 631501	890. MARUTHI MOTORS (6036--), NO.33,G.S.T. ROAD,KARUNGUZHI, MADURANTHAKAM-603303, DISTRICT-KANCHIPURAM, TAMILNADU - 603303 PH :9443354073.	899. PRIYAM AUTOMOBILES (3036--), 28/4, JJ NAGAR, KOVAI MAIN ROAD, PERUNDURAI, ERODE DISTRICT, TAMIL NADU - 638052 - 638052
CUMBUM	KANGAYAM	MAYILADUTHURAI	POLACHI
870. SRI BALAJI MOTOR WORKS (3139--), 221-A 1/3 THENI ROAD, NEAR REGULATED MARKET, VIRAMPURAM, CUMBUM-625 516 - 625516 PH :9994169309.	881. SRI KANGAYAM MARUTI (3949--), COIMBATORE ROAD, NEAR IBP PETROL BUNK, KANGAYAM - 638701, - 638701 PH :9443329526.	891. R.M.S. MARUTI AUTO (2237--), 53/54 MAHADHANA STREET, MAYILADUTHURAI-609 001, (TAMIL NADU), - 609001 PH :9842922685.	900. J D & COMPANY (6055--), 160 COIMBATORE ROAD, POLLACHI - 642002, TAMIL NADU - 642002 PH :9443565785.
DINDIGUL	KARAIKUDI	NAGAPATTINAM	RAJAPALAYAM
871. MAGNUM MOTORS (1241--), MEENAKSHI NAIKAN PATTY, NH-83 BYE PASS ROAD, DINDIGUL - 624002, TAMIL NADU - 624002 PH :9842231340.	882. SURABI MOTORS (2340--), NO.11 TRICHY MAIN ROAD, (NEAR RAILWAY CROSS), SRIRAM NAGAR, KOTAIYUR, KARAIKUDI-630 001 - 630106 PH :9443351484.	892. MARUTI-TECH (1671--), PUTHUR ROUNDANA E C R ROAD, NAGAPATTINAM, - 611001 PH :9842653718.	901. RAJA MOTORS (4128--), 52/ A, SRI JANAKIRAM MILLS ROAD, SRIVILLIPUTTUR MAIN ROAD, RAJAPALAYAM, VIRUDHUNAGAR- 620117, - 626117 PH :7094597178.
ERODE		NAGERCOIL	RASIPURAM
			902. ROYAL AUTO CARS (4052--), 5/120 NH-7, SALEM MAIN ROAD, NEAR TSTC DEPOT, MUTHUKALPATTI POST, RASIPURAM TALUK, NAMAKKAL DISTRICT-637408 - 637401 PH :9443230339.
			SALEM

903. MEENATCHI AUTO (2940--), 57 KALARAMPATY MAIN ROAD, (NEAR DEVI THEATRE), SALEM-636 015, (T.N.) - 636015
904. NATSUN MOTORS (8998--), 18/1 & 18/2, BANGALORE BYE PASS ROAD, KANDHAMPATY, SALEM, TAMIL NADU - 636005 - 636005
PH -9788497788.

SANKAGIRI

905. TECH ZONE AUTO SERVICE (2640--), 10/78 BHAVANI MAIN ROAD, (NEAR ERODE PIRIVU), SANKAGIRI SALEM DISTT., PIN-637 303 - 637303

SANKARANKOIL

906. RAJA MOTORS (4555--), RALAPALAYAM ROAD, OPPOSITE TO LIC BUILDING, SANKARANKOIL-627756, - 627756
PH -9994409363.

TENKASI

907. CARE ZONE (3766--), 5/165, MADURAI ROAD, KUTHUKAL VALASAI, TENKASI, TAMILNADU - 627803 - 627811
PH -9842133134.

THANJAVUR

908. R K P MOTORS (5238--), 121/7, THANJAVUR KUMBakonam, HIGHWAY PALLIAGRAHARAM, THANJAVUR, TAMILNADU - 613003

THENI

909. SATHURAGIRI MOTOR WORKS (1650--), DOOR NO. 21/5, RAVENTHIRA OIL MILL COMPOUND, CUMBUM ROAD, THENI - 625531, TAMIL NADU - 625531
PH -9047033678.

TIRUNELVELI

910. FRIENDS INDIA AUTO CLINIC (5030--), 16D, NORTH BYE PASS ROAD, VANNARPETTAI, TIRUNELVELI - 627003, TAMIL NADU - 627003
PH -9786606111.

TIRUPUR

911. LAKSHMI MOTORZ (2461--), 263/3E, PALLADAM ROAD, CHINNAKARAI, TIRUPUR - 641604, TAMIL NADU - 641604
PH -9842377959.

TRICHY

912. VYTHES MOBILE PARK (443--), 8/6 TANJORE ROAD, THIRUCHIRAPALLI-620 008, - 620008
PH -6383353727.

UDAMALAPET

913. S.R.K. MOTORS (1456--), 123, PALANI ROAD, MUNEE RICE MILL COMPLEX, UDUMAPLET, TIRUPPUR, TAMIL NADU - 642126, - 642126
PH -9843011520.

VELLORE

914. MARUTI AUTO SERVICE (2844--), 106 (OLD NO.: 78), KATPADI ROAD, GANDHI NAGAR, VELLORE-632 006 (T.N.) - 632006
PH -9843093422.

VILLUPURAM

915. RAGAVENDRA MOTORS (2361--), 2/3 MADRAS TRUNK ROAD, VILLUPURAM-605 602, (TAMIL NADU), - 605602
PH -9244555860.

VRIDDHACHALAM

916. VISHWA MARUTI CARE CENTER (8934--), NO 11, NEAR FIRE SERVICE STATION, NAVANEETHAM STREET, PERIYAR NAGAR NORTH, VRIDDHACHALAM, CUDDALORE DISTRICT, TAMIL NADU - 606001 - 606001
PH -9842246092.

TELANGANA

ADILABAD

917. MAHA LAXMI AUTOMOTIVES (2240--), NH# 7 OPP. H.P. PETROL BUNK, TIRUPALLI, ADILABAD-504 001, (A.P.) - 504001
PH -9000345313.

BHADRACHALAM

918. SRI VENKATARAMANA AUTO CARE (2831--), MARUTI SERVICE STATION, OPP. COLLEGE GROUNDS, GOLLAGATTA ROAD, BHADRACHALAM-507 111 (A.P.) - 507111
PH -9290792269.

GAJWEL

919. VIJAY MOTORS (4864--), HYDERABAD ROAD, STATE HIGH WAY FROM HYDERABAD, TO KARIMNAGAR, PREGHAPUR - GAJWEL, TELANGANA - 502278
PH -9849883665.

HYDERABAD

920. ARYAN MOTORS (3264--), D.NO.17-1-382/K/5 & 6, CHAMPAPET SAIDABAD, SAGAR ROAD, HYDERABAD - 500059
PH -9246155464.
921. COSMO AUTO CLINIC PVT. LTD. (1045--), PLOT NO 1, RD NO 5, CHANDRAPURI COLONY, LB NAGAR, HYDERABAD - 500074, - 500074
922. PISTONS & SPANNERS (2766--), 2-3-37 MAHARANA PRATAP FUNCTION HALL, AMBERPET, HYDERABAD-500 013, PH -99060649504.
923. SERWELL AUTOMOBILES GARAGE (5234--), PLOT NO 202&203, ADITYA NAGAR, OPP. JNTU, KUKATPALLY, HYDERABAD, TELANGANA - 500072
PH -9490105147.

JAGTIAL

924. KRK MOTORS (3851--), OPPOSITE 132 KV SUBSTATION, DHAROOR CAMP, KARIMNAGAR ROAD, DISTRICT - JAGTIAL, TELANGANA - 505327 - 505455
PH -9912664659.

KARIMNAGAR

925. MYTRI MOTORS (5152--), 8-6 188.KOTHI RAMPUR, KARIMNAGAR, DISTRICT - KARIMNAGAR, TELANGANA - 505001
PH -9441475357.
926. PUSHPAK MOTORS (1032--), SY-772, KOTHIRAMPUR, NEAR MGB MOTORS - JCB SHOWROOM, BEHIND LAKSHMI NIVAS INDUSTRIES, KARIMNAGAR, TELANGANA - 505001, - 505001
PH -9849489431.

KHAMMAM

927. EXCEL AUTO CARE (1043--), RAPARTHI NAGAR, BYPASS ROAD, KHAMMAM - 507001, - 507001
PH -9848156363.

KODAD

928. SAI KAKATIYA SERVICE STATION (4664--), SURYAPETA ROAD, OPPOSITE LORRY ASSOCIATION BUILDING, KODAD-508206, DISTRICT-NALGONDA (TELANGANA) - 508206
PH -9848057813.

MAHABUB NAGAR

929. SRI AYYAPPA MARUTI CLINIC (3941--), OPP HOSPITAL, HYDERABAD ROAD, YEMUGONDA, MAHABUB NAGAR (TELANGANA) - 509002
PH -9440569259.

MANCHERIAL

930. PARVATHI MOTORS (4129--), 4-53 BPL ROAD, MANCHERIAL, DISTRICT ADILABAD, TELANGANA. - 504208
PH -9885554888.

MIRYALGUDA

931. GANESH MOTORS (4536--), D.NO. 6-366, P.V. COMPLEX, NALGONDA ROAD, MIRYALGUDA, NALGONDA DISTT (TELANGANA) - 508207
PH -9393900666.

NALGONDA

932. SRIRAM AUTHORISED SERVICE STATION (4627--), HYDERABAD ROAD, OPP. SUB STATION, NALGONDA, TELANGANA - 508001
PH -9848378133.

NIZAMABAD

933. PRIYA SERVICING (1771--), C/O TIRUMALA CHITRA MANDIR, HOUSE NO.1-9-833, PHULANG ROAD, NIZAMABAD-503 003 (A.P.) - 503003
PH -9948034523.

RAMAGUNDAM

934. ALI AUTOMOBILES (2849--), NEAR TV RELAY STATION, NTPC JYOTHINAGAR, RAMAGUNDAM-505 215, DISTT. KARIMNAGAR (TELANGANA) - 505208
PH -9848219102.

SIRSILLA

935. SATHVIKA MOTORS (5649--), KARIMNAGAR ROAD,OPP HP PETROL PUMP, SIRSILLA-505301, DISTRICT - KARIMNAGAR, TELANGANA - 505301
PH -9490284726.

SURYAPET

936. SAI GLOBAL AUTO SERVICES (4550--), OPP. AYYAPPA SWAMY TEMPLE, BY PASS ROAD, NH-9, SURYAPET-508213, TELANGANA - 508213
PH -9848076108.

WANAPARTHY

937. SMC MOTORS (5658--), K.K.T. ROAD,BASAVANNA GADDA, WANAPARTHY, DISTRICT -MAHABUBNAGAR, TELANGANA - 509103
PH -9840142927.

WARANGAL

938. VAISHNAVI AUTOMOBILES (470--), OPP. NEW SCIENCE DEGREE COLLEGE, HUNTER ROAD, HANAMKONDA, WARANGAL-506 001
PH -9849002528.

TRIPURA

AMBASSA

939. CHAKRABORTY MECHANICAL WORKSHOP (5351--), NH-44, NEAR ZILLA PARISWAD OFFICE, AMBASSA, DISTRICT - DHALAI, TRIPURA - 799289
PH -9436136054.

DHARMANAGAR

940. RAJ AUTOMOBILES (2868--), STATION ROAD, RAJABARI, DHARMANAGAR, TRIPURA (NORTH) -799 253 - 799253
PH -9436477578.

UDAIPUR

941. SUR UDYOG (3963--), TOWN FULKUMARI NO. 1, BRAMHABARI, P O UDAIPUR COURT, UDAYPUR, TRIPURA SOUTH - 799120
PH -9862276650.

UTTAR PRADESH

AGRA

942. GAYATRI MOTORS (4730--), IN FRONT OF NEEL FLORENCE APARTMENT, GOVINDPURI COLONY, VILLAGE BABARPUR, POST SIKENDRA, AGRA, UTTAR PRADESH-282007 - 282007
PH -8077786331.

ALIGARH

Maruti Authorized Service Station (AS ON 31.01.2026)

943. KAPIL AUTOMOBILES (1344--), OLD KHURJA BUS STAND, G.T.ROAD, ALIGARH(U.P.), - 202002 PH -9837007636.	BAREILLY 956. S P MOTORS (5746--), 383.SURKHA CHAWNI,NAINITAL ROAD, BAREILLY-243001, DISTRICT-BAREILLY, UTTAR PRADESH - 243001 PH -9568033111.	966. S K MOTORS (4672--), CHANDPUR HARBANS ALLAHABAD ROAD, NH-96, FAIZABAD-224001, UTTAR PRADESH - 224001 PH -9307088750.	978. AMAN MOTORS (3858--), PORTER GANJ, LUCKNOW ROAD, GONDA, UTTAR PRADESH - 271001 PH -9415120101.
944. KAR SCAN CENTRE (449--), RAMGHAT ROAD, KWARSI, ALIGARH-202 002, - 202002 PH -8937000111.	BIJNOR 957. SARDAR MOTORS (4671--), DELHI HIGHWAY ROAD, 4TH KM MILE STONE , BIJNOR - 246701, UTTAR PRADESH - 246701 PH -9837265076.	FARUKHABAD 967. APOORVA MOTORS (4675--), SATANPUR MANDI ROAD, FARRUKHABAD, DISTRICT FARRUKHABAD, UTTAR PRADESH - 209625 PH -9044498958.	979. PANKAJ AUTOMOBILES (1370--), C/O NEW DELHI MOTOR WORKS, BARAICH ROAD, GONDA, - 271801 PH -9415664930.
ALLAHABAD 945. ANSHUMAN AUTOMOBILES (4933--), 6D, DAUD NAGAR, OPPOSITE BAIDYANATH COMPANY, MIRZAPUR ROAD, NAINI, ALLAHABAD, UTTAR PRADESH - 211008 - 211008 PH -9335138119.	BULANDSHAHR 958. DELHI AUTO ENGRS (1351--), PLOT NO-106, NEAR TAFE TRACTOR AGENCY, NEAR CHANDPUR VILLAGE, DELHI ALIGARH BYPASS ROAD, BULANDSHAHR (UP) 203001. - 203001	968. SANDEEP MOTORS (4161--), THANDI SADAQ, OPP. JITENDRA GAS GODOWN, FARUKHABAD, UTTAR PRADESH - 209625 PH -9838940322.	980. AMAN MOTORS (--), PORTER GANJ, LUCKNOW ROAD, GONDA, UTTAR PRADESH - 271001 PH -9415120101.
946. KAY CEE AUTOMOBILES (2155--), 72/60 L.B. SHASTRI MARG, ALLAHABAD, , - 211001 PH -9415317225.	CHANDPUR 959. BHARTI AUTOMOBILES (1777--), DHANORA ROAD, CHANDPUR, DISTT. BIJNOR, (U.P.) - 246725 PH -9837380551.	FATEHPUR SIKRI 969. LAXMI MOTORS (5943--), FATEHPUR SIKRI ROAD,KHEDA KORAI , FATEHPUR SIKRI-283110, DISTRICT-AGRA, UTTAR PRADESH - 283110 PH -9837749949.	GREATER NOIDA 981. JAISWAL MOTORS (5078--), PLOT NO. 31, SECTOR MUP-II, GREATER NOIDA , DISTRICT - GAUTAM BUDH NAGAR, UTTAR PRADESH - 201308
947. TRIBENI MOTORS (2539--), 23 KANPUR ROAD, ALLAHABAD-211 001, (U.P.), - 211001 PH -9415324244.	CHITRAKOOT 960. SHYAM MOTORS (4367--), BUS STAND, KARWI, CHITRAKOOT-210205, - 210205 PH -9415143900.	FIROZABAD 970. AMAN MOTORS (4366--), USAYANI CHAURAHA, RAJA KA TAAL, BYE PASS ROAD, FEROZABAD, UTTAR PRADESH - 283103 PH -9837500220.	982. KUMAR MOTORS (8926--), M-8, SITE-5, UPSIDC, KASNA INDUSTRIAL AREA, GREATER NOIDA, DISTRICT-GOUTAM BUDH NAGAR, UTTAR PRADESH - 201312
AMROHA 948. SUNNY MOTORS (2165--), BIJNORE ROAD, J.P. NAGAR, AMROHA-244 221, (U.P.) - 244221 PH -9412248884.	DADRI 961. NATIONAL MOTOR AGENCY (5143--), NOIDA ROAD , DADRI -203207, DISTRICT - GAUTAMBUDH NAGAR , UTTAR PRADESH - 203207	HAPUR 971. GOVIND AUTOMOBILES (1739--), NH-2, INFRONT OF SUB POWER STATION, MODHA, ASFABAD CHAURAHA, FIROZABAD, UTTAR PRADESH, 283203 - 283203 PH -9837169332.	983. SRASHTI MOTORS (3076--), NEAR HDFC BANK, DELHI ROAD, HAPUR, (U.P.) -245 101 - 245101
AURAIYA 949. SINGH AUTOMOBILES (8989--), KANPUR ROAD,AURAIYA , DISTRICT - AURAIYA , PIN - 206122, UTTAR PRADSH - 206122 PH -9808403258.	DANKAUR 962. MARUTI CARS CARE (5934--), SIKANDRABAD ROAD,NEAR KISAN INTER COLLEGE, DANKAUR-203201, DISTRICT- GAUTAM BUDH NAGAR, UTTAR PRADESH - 203201 PH :7599195174.	HARDOI 972. SHRI KRISHNA MOTORS (5939--), BYE PASS ROAD RAM GARH GANGOH-247341, DISTRICT-SAHARANPUR, UTTAR PRADESH, - 247341 PH -9997102785.	984. M. MOTORS & SERVICE CENTRE (3371--), CHAND BEHTA, LUCKNOW ROAD, HARDOI-241 001, (U.P.) - 241001 PH -9415175610.
BABUGARH 950. GURUNANAK AUTOMOBILES (5977--), NH- 9, VILL SIMROLI , BABUGARH CANTT. , DISTRICT- HAPUR, UTTAR PRADESH - 245102	DEOBAND 963. PRACHI MOTORS (3361--), ADJACENT TO CIVIL COURTS, G.T. ROAD, DEOBAND, DISTT. SAHARANPUR (U.P.) - 247554 PH :7017803402.	HATHRAS 973. CHAWLA AUTOMOBILES (2643--), 67 AMBEDKAR ROAD, OPP. NEHRU YUVA KENDRA, GHAZIABAD , - 201001 PH -9811720929.	985. TAYAL AUTOMOTIVES (4265--), SOHRA KOTHI, BAWAN CHUNGI, HARDOI-241001, - 241001 PH -9415149951.
BAGHPAT 951. KAUSHIK MOTORS (4473--), PLOT NO 525, DELHI SAHARANPUR ROAD,PALI, BAGHPAT, UTTAR PRADESH 250609 - 250609 PH -9837800582.	DEORIA 964. CLASSIC MOTORS (2971--), D-13/14 INDUSTRIAL ESTATE, OPPOSITE RTO OFFICE, GORAKHPUR ROAD, DEORIA-274 001 (U.P.) - 274001 PH -9415313939.	GHAZIABAD 974. D.N. AUTOLAND (272--), E-4 MEERUT ROAD, INDUSTRIAL AREA, (NEAR OLD MEERUT CHUNGI), GHAZIABAD , - 201003	986. RADHEY RADHEY AUTOMOBILES (4344--), NEAR BUS STAND, AGRA ROAD, HATHRAS-204101, - 204101 PH -9897069159.
BALRAMPUR 952. D M AUTOMOBILES (3933--), NEAR S.P.AWAS, GONDA ROAD, BAHADURAPUR, DISTT: BALRAMPUR, UTTAR PRADESH - 271201 - 271201 PH -9415071840.	DHAMPUR 965. AUTAR AUTOMOBILES (4846--), NOORPUR ROAD, DHAMPUR-246761, DISTRICT-BIJNOR, UTTAR PRADESH - 246761 PH :7017211986.	JAGDISHPUR 975. KRISHNA AUTOMOBILES (5356--), 101.LAL KUAN SHIV MANDIR, BULANDSHAHAHAR ROAD , DISTRICT - GHAZIABAD, UTTAR PRADESH - 201009	JAGDISHPUR 987. SUPER AUTOMOBILES (3564--), JAFARGANJ P.O., INDUSTRIAL AREA, JAGDISHPUR, DISTT. SULTANPUR-227 817 (U.P.) - 227817 PH -9415177882.
BANDA 953. CHAUDHARY TRACTORS (2249--), STATION ROAD, BANDA-210 001, (U.P.), - 210001 PH -9415143033.	FAIZABAD 966. S K MOTORS (4672--), CHANDPUR HARBANS ALLAHABAD ROAD, NH-96, FAIZABAD-224001, UTTAR PRADESH - 224001 PH -9307088750.	JHANSI 976. S P MOTORS (4973--), HAPUR BYPASS ROAD, MEHRAULI, GHAZIABAD , - 201001	988. SADGURU MOTORS (5071--), FAIZBAGH (NEAR TDM OFFICE), UMARPUR,JAUNPUR, JAUNPUR-222142, UTTAR PRADESH - 222142 PH -8318984440.
BARAUT 954. HIGH TECH ENGINEERS (4821--), 216/5 SAHARANPUR ROAD, BARAUT, , - 250611 PH :7302352660.	FAIZABAD 967. APOORVA MOTORS (4675--), SATANPUR MANDI ROAD, FARRUKHABAD, DISTRICT FARRUKHABAD, UTTAR PRADESH - 209625 PH -9044498958.	977. SHIVA MOTORS (--), 17TH KM STONE, 118-119 SHIVPURI, SECTOR-9 VIJAY NAGAR BYEPASS NH-24, GHAZIABAD-201 009 (U.P.) - 201009 PH -9873000571.	JHANSI 989. A.B. MOTORS (8938--), EDULJEE BOYCÉE COMPOUND, NEAR ALLAHABAD BANK CROSSING, CIVIL LINES, JHANSI - 284001, UTTAR PRADESH - 284001 PH -9415059820.
955. SIGNET AUTOMOBILES (4441--), NEAR INDUSTRIAL POLICE CHOWKI, DELHI ROAD, BARAUT-250611, DISTT BAGHPAT (U.P.) - 250611 PH -8218779429.		GONDA	KANNAJ

990. SARALA AUTO CARE (5854--), G.T. ROAD, KANNAUJ, DISTRICT-KANNAUJ, UTTAR PRADESH. - 209725 PH -9918692324.	1002. SAMBHAV AUTOMOBILES (5168--), 31.RURAL INDUSTRIAL ESTATE, ARYA NAGAR INDUSTRIAL AREA, MAIN DELHI SHAHRANPUR HIGHWAY, UTTAR PRADESH - 201102	MAHOBA 1016. ROYAL SERVICE STATION (2238--), HAMIRPUR CHUNGHI, KANPUR ROAD, MAHOBA, (U.P.) - 210427 PH -9450269053.	1027. GURU TEG BAHADUR AUTO ENTERPRISES (4072--), 4 SENANI VIHAR, RAI BAREILLY ROAD, MOHANLAL GANJ, LUCKNOW U P - 226027 PH -9415229172.
KANPUR	LUCKNOW	MAINPURI	MORADABAD
991. AJAY SALES (3134--), 117/N/81 KAKADEVO, KANPUR, - 208025 PH -9919828000.	1003. B.K. MOTORS (2537--), KALYANPUR, RING ROAD, OPP. CARRIER CONVENT BOARD, LUCKNOW-226 015 - 226015 PH -9335908130.	1017. JATIN MOTORS (5540--), GANESH MILL COLONY,RADHA RAMAN ROAD, MAINPURI-205001, DISTRICT-MAINPURI, UTTAR PRADESH - 205001 PH -8193825000.	1028. ASHISH AUTOMOBILES (1477--), KANTH ROAD, MORADABAD-244 001, - 244001 PH -9837055258.
992. AUTO GARAGE (4266--), P-22-A, PRATAP GANJ, FACTORY AREA, OPP GANDA NALA, KANPUR-208012 - 208012 PH -9415126189.	1004. BALAJI MOTORS (1336--), 1 NEWAL KISHORE ROAD, LUCKNOW-226 001.(U.P.), - 226001 PH -9336253838.	MARIAHU	NAJIBABAD
993. CHANDRA MOTORS (4458--), 621/3 W-2 JUHI, BEHIND SACHAN GUEST HOUSE, KANPUR, - 208027 PH -9839928280.	1005. GALAXY MOTORS (5274--), KASHANA SITAPUR ROAD, NEAR SHIA, P G COLLGEG - LUCKNOW, DISTRICT - LUCKNOW, UTTAR PRADESH - 226021 PH -9305567878.	1018. BABU MOTORS (5740--), MACHALISHAHAR ROAD, NEAR POST OFFICE, MARIAHU-222161, DISTRICT - JAUNPUR, UTTAR PRADESH - 222161 PH -9919263663.	1029. SETHI MOTORS (4557--), C/O SETHI BOARD INDUSTRIES LIMITED, OPP. HINDUSTAN COCO-COLA BOTTLING PLANT, NAGINA ROAD, NAJIBABAD-246763, DISTT. BJUNOR (UTTAR PRADESH) - 246732 PH -9837590800.
994. EXCELLENT MOTORS (9022--), 123/793 FAZALGANJ, KANPUR-208 012, - 208012 PH -9336119874.	1006. GUD'S CAR CARE (2538--), MAIN ROAD, NISHATGANJ, LUCKNOW-226 006, - 226006 PH -9415024495.	MATHURA	NOIDA
995. SUJIPA MOTORS (4337--), 127/465, U-BLOCK, NIRALA NAGAR, KANPUR - 208014 PH -9415050146.	1007. KALYAN MOTORS (1161--), GOVT. POLYTECHNIC CROSSING, FAIZABAD ROAD, GOMTI NAGAR, LUCKNOW - 226010 PH -9936942527.	1019. GIRIRAJ CAR CARE (5624--), BIMAL ENGG COMPLEX, BAD, MATHURA-281 006, - 281006 PH -9837071321.	1030. RAHUL MOTORS (4662--), A-59 SECTOR-80, PHASE-II, NOIDA-201303, UTTAR PRADESH - 201305
KHALILABAD	1008. KAPOOR MOTORS (1751--), PLOT NO.380, NEAR GUNGA BAHARA SCHOOL, TILAK NAGAR, UTTAR PRADESH - 206122 PH -9795457050.	1020. NAND SERVICE STATION (3578--), GOPAL PURA VILLAGE, REFINERY TOWNSHIP, NH-2, MATHURA - 281001 PH -9997982828.	1031. RAJESH & ANIL MOTOR CO (5330--), B-110, SECTOR 2, NOIDA, DISTRICT - GAUTAM BUDDH NAGAR, UTTAR PRADESH. - 201301
996. RATAN MOTORS (5645--), NEAR VAISHNO MATA MANDIR, CHOTI SARAU, NH- 27, KHALILABAD, UTTAR PRADESH - 272175 PH -9621294899.	1009. KAPOOR MOTORS (5044--), 555/GA/50, BARA BIRWA, KANPUR ROAD-, ALAMBAGH LUCKNOW-, DISTRICT - LUCKNOW, (UTTAR PRADESH) - 226005 PH -9795457050.	1021. SHREE GOPAL AUTOMOBILES (5664--), DELHI BYE PASS ROAD, NEAR GOKUL RESTAURANT, MATHURA - 281001, DISTRICT - MATHURA, UTTAR PRADESH - 281001 PH -9412726760.	1032. SKUNIVERSE AUTOMOBILE PRIVATE LIMITED (8922--), C-2 SECTOR 63, NOIDA - 201301, - 201301
KHATAULI	1010. KRISHNA MOTORS (5026--), BALAGANJ HARDOI ROAD, CHOWK LUCKNOW, DISTRICT LUCKNOW, UTTAR PRADESH - 226020 PH -9839177777.	1022. SIYA RAM MOTORS (1666--), JAYSINGHPURA, NEAR BIRLA MANDIR, MATHURA-281 003, (U.P.) - 281003 PH -9897053962.	1033. RAHUL MOTORS (--), A-59 SECTOR-80, PHASE-II, NOIDA-201303, UTTAR PRADESH - 201305
997. EAGLE MOTORS (5142--), OPPOSITE EW ROADWAYS, G.T. ROAD. NH -58.KHATAULI, DISTRICT - MUZAFFARNAGAR, UTTAR PRADESH - 251201 PH -9997039786.	1011. MVV MOTORS (5531--), A1/14,VIJAY KHAND,GOMTI NAGAR, LUCKNOW-226010, DISTRICT - LUCKNOW, UTTAR PRADESH - 226010 PH -9792877779.	MEERUT	OBRA
KHEKRA	1012. RELIANCE MOTORS CARE (1236--), 7-B/1 PRIME PALACE, FAIZABAD ROAD, INDIRA NAGAR, LUCKNOW-226 016 - 226016 PH -9918100051.	1023. EXPERT CAR SCANNER (1174--), 83 HILL STREET (KATH-KA-PUL), BEHIND ABU LANE, MEERUT CANTT., (U.P.) - 250001 PH -9412201195.	1034. APPRECIATE SERVICES (4678--), BILLI RAILWAY STATION ROAD, OBRA, SONEBHADRA, UTTAR PRADESH - 231219 - 231219 PH -8765833557.
998. KAILASH MOTORS (5767--), OPP TEHSIL ,DELHI BAGHPAT ROAD, KHEKRA-201101, DISTRICT-BAGHPAT, UTTAR PRADESH - 250101 PH -9760027001.	1013. S.K. MOTORS (2449--), 8/881 VIKAS NAGAR, PICNIC SPOT ROAD, KHURAM NAGAR, LUCKNOW-226 013 - 226013 PH -9415005564.	1024. KRISHNA AUTOMOBILES (5573--), PLOT NO D-10,SHRADHA PURI., KANKARKHERA - MEERUT, DISTRICT - MEERUT, UTTAR PRADESH - 250001 PH -9927241738.	PILIBHIT
KOSIKALAN	1014. THE GARAGE (5479--), BEHIND NEW HANUMAN MANDIR,MADIR PARK , MAHANAGAR - LUCKNOW , DISTRICT - LUCKNOW, UTTAR PRADESH - 226006 PH -9236711634.	1025. SARAN AUTOMOBILES LTD. (1078--), DELHI ROAD, RITHANI, MEERUT, - 250001 PH -93584506555.	1035. UNIVERSAL MARUTI SERVICE STATION (4365--), BYE PASS ROAD, PILIBHIT, UTTAR PRADESH. - 243006 PH -9412313499.
999. ADITYA MOTORS (1940--), IOC PUMP, NATIONAL HIGHWAY, KOSIKALAN, (U.P.) - 281403 PH -9837050778.	LUCKNOW	MIRZAPUR	PILKHUWA
LAKHIMPUR KHERI	1015. V.S. MOTORS (4745--), RAMADHIN SINGH INTER COLLEGE CAMPUS, BABU GANJ, LUCKNOW-226007, UTTAR PRADESH - 226020 PH -9984749000.	1026. PRABHAT MOTORS (4131--), NH-7 REWA ROAD, CHANDAIPUR LAKHAMPUR, MIRZAPUR, U P - 231309 PH -9838940382.	1036. SHREE BANKEY BIHARI MOTORS (6025--), NH-24,DELHI-GARH ROAD,PILKHUWA-245307, DISTRICT-GHAZIABAD, UTTAR PRADESH. - 245304 PH -9045548101.
LAMBHUA BAZAR		MOHANLAL GANJ	PRATAPGARH (U.P)
1001. VIKRAM MOTORS (3729--), LAMBHUA BAZAR, SULTANPUR (DIST.), UTTAR PRADESH-222 302, - 222302 PH -9450215996.			1037. SHREE MOTORS (4146--), 10, CHIBILA RANJEETPUR, PRAYAGRAJ AYODHYA HIGHWAY, NH-330, PRATAPGARH, UTTAR PRADESH, PIN-230001 - 230001 PH -9415229257.
LONI			RAI-BAREILI

Maruti Authorized Service Station (AS ON 31.01.2026)

1038. STANDARD GARAGE (4429--), MANIKA CENEMA ROAD, NEAR INSPECTION HOUSE, RAE BAREILLY - 229206
PH :9415190703.

RAMPUR

1039. FIZZA MOTORS (2241--), NEAR AMBEDKAR PARK, CIVIL LINES, RAMPUR (U.P.), PIN-244 901 - 244901
PH :9897879711.

RATH

1040. MARUTI POINT (4228--), ROOP NAGAR, BUDHOLIYANA, NEAR BUS STAND, ORAI ROAD, RATH, DIST. HAMIRPUR (U.P.) - 210431
PH :9415331735.

RENUKUT

1041. AMBIKA MOTORS (1050--), PATEL NAGAR, MURDHAWA, RENUKUT-231 217, SONBHADRA (U.P.) - 231217
PH :9415251724.

ROBERTSGANJ

1042. KAMAKHYA AUTOMOBILES (4163--), PIPRI ROAD, ROBERTSGANJ, SONBHADRA (U.P.) - 231216
PH :9918301052.

SADABAD

1043. ASHU SERVICE CENTRE (8972--), AGRA BYE PASS ROAD, SADABAD-281306, DISTRICT-HATHRAS, UTTAR PRADESH - 281306
PH :9058832658.

SAHARANPUR

1044. GANESH CAR SERVICES (1871--), OPP. REMOUNT DEROT GATE, DEHRADUN ROAD, SAHARANPUR-247 001, - 247001
PH :9358306804.

SAHIBABAD

1045. HINDON MOTORS (3576--), S-69, SITE 2, INDUSTRIAL AREA, MOHAN NAGAR, NEAR HINDON AIRFORCE ROUND ABOUT, SAHIBABAD, UTTAR PRADESH - 201007
1046. MOTOR MAGIC AUTO ZONE (4462--), 4/29-A SITE-IV, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD - 201005
1047. PANDIT AUTOMOBILES (4647--), 3/1/1, SITE-IV, INDUSTRIAL AREA, SAHIBABAD, OPP. KAUSHAMBI, GHAZIABAD (UTTAR PRADESH - 201010

1048. POOJA MOTORS (3562--), TEELA MORE, SHAHBAJPUR, LONI, DISTT. GHAZIABAD (U.P.) - 201102

SANDILA

1049. SHUBHAM SERVICE CENTRE (4042--), NEAR NEHAR KOTHI ROAD, SANDILA, HARDOI, UTTAR PRADESH - 241204 - 241204
PH :9506181818.

SHAHJAHANPUR

1050. SUPER AUTO (3135--), OLD DIST. HOSPITAL ROAD, SHAHJAHANPUR (U.P.), PIN-242 001, - 242001
PH :9415035644.

SHAMLI

1051. ROYAL MOTORS (5277--), PANIPAT KARANA ROAD, SHAMLI, SHAMLI-247776, UTTAR PRADESH - 247776
PH :9927272766.

SHIKOHABAD

1052. KUMAR MOTORS (5575--), SUBHASH TIRAHA ,AGRA GATE - SIKOHABAD, DISTRICT - FEROZABAD, UTTAR PRADESH, - 283203
PH :9411937033.

SIDDHARTH NAGAR

1053. MARUTI CARE CENTRE (8992--), OPP. SIDDHARTH SCHOOL, AZAD NAGAR, SIDDHARTH NAGAR-272 207, (U.P.) - 272207
PH :9935642651.

SIKANDRABAD

1054. NALIN AUTO (8921--), G.T. ROAD, SIKANDRABAD, DISTT. BULANDSHAHAH, (U.P.) - 203205

SIRSAGANJ

1055. SATGURU MOTORS (3739--), BYE PASS KAUARARA ROAD, SIRSAGANJ DISTT. FIROZABAD, ETAWAH-AGRA ROAD, SIRSAGANJ (U.P.) - 283151
PH :9412316660.

SONEBHADRA

1056. OUDH SERVICE STATION (8956--), SHAKTI NAGAR, SONEBHADRA-231 222, - 231222
PH :7408434860.

SULTANPUR

1057. HINDUSTAN AUTO GARAGE (1360--), BARHAIYA BEER RD., (ADJ.BUS STAND), SULTANPUR-228 001 (U.P.) - 228001
PH :9984154002.

VARANASI

1058. MISHRA ENGINEERS (4957--), S-4/68, NAI BASTI, PAHARIA, VARANASI-221002, UTTAR PRADESH - 221002
PH :9415301483.

UTTARAKHAND

ALMORA

1059. AROMA AUTOMOBILES (3149--), THE MALL, ALMORA, (UTTARAKHAND), - 263601
PH :9412093410.

BAZPUR

1060. TARAI AUTOMOBILE ENGG WORKS (4459--), GURUTE G BAHADUR ROAD, U.S. NAGAR, BAZPUR-262401, UTTARAKHAND - 263401
PH :9837506765.

BHAGESWAR

1061. SHREE ISHT DEV AUTOMOBILES (4570--), GARUR ROAD, MOTA SIMAL, DIST. BAGESHWAR, UTTARAKHAND - 262642
PH :9997895347.

DEHRADUN

1062. ASHIRWAD MOTORS (5144--), CANAL ROAD, NEAR BALLUPUR CHOWK, DEHRADUN-248001, UTTARAKHAND - 248001
PH :9219594748.

1063. HANS LAKHERA MOTORS (5032--), JOGI WALA RING ROAD, NATHAPUR APPARTMNT., NAR NEHRU GRAM POST OFFC, MASSOORI BYEPASS, DEHRADUN - 248001
PH :9897456677.

1064. KRIPALASHWARI MOTORS (8947--), HARIDWAR ROAD, NEAR LIC BUILDING, DEHRADUN-248001, UTTARAKHAND - 248001
PH :9412963384.

HALDWANI

1065. ANJINI SERVICE CENTRE (8980--), NEAR BLOCK OFFICE,KALADHUNGI ROAD, LOHRISAL MALLA, CITY - HALDWANI, UTTARAKHAND - 263139 - 263139
PH :9837098699.

1066. EXCEL MOTORS & ENGG. WORKS (3827--), RAMPUR ROAD, NEAR STM FOREST HOSPITAL, HALDWANI, NAINITAL - 263139
PH :9837191688.

1067. HARYAL SERVICE CENTRE (5340--), BAREILLY ROAD, GUAJALI - TALLI, HALDWANI, DISTRICT - NAINITAL, UTTARAKHAND - 263139
PH :9997200227.

HARIDWAR

1068. PREET MOTORS (5561--), SHRI NATH NAGAR, RAILWAY ROAD,JAWALPUR - HARDWAR, DISTRICT - HARDWAR, UTTARAKHAND - 249408
PH :912010497.

KANKHAL

1069. HIGHWAY MOTORS (4261--), NEAR SINGH DWAR CHOWK, ROORKEE-HARDWAR BY PASS ROAD, POST OFFICE, GURUKUL KANGRI, KANKHAL, DISTT HARDWAR - 249408
PH :9412072889.

KASHIPUR

1070. OM MOTORS (4329--), OPPOSITE SWAGAT MANDAP, BAZPUR ROAD, KASHIPUR DIST., U.S. NAGAR (UTTARAKHAND) - 244713
PH :9927500007.

1071. KRISHNA AUTOMOBILES (4824--), MORADABAD ROAD, KASHIPUR, - 244713
PH :9870998368.

KICHHA

1072. SHRI SHYAMJI AUTO SERVICE CENTER (5648--), BAREILLY ROAD,KICHHA, PIN-263148, DISTRICT-UDHAM SINGH NAGAR, UTTARAKHAND - 263148
PH :9837033377.

KOTDWAR

1073. BHATT MOTORS (1775--), NAJIBABAD ROAD, KOTDWARA, (GARHWAL), UTTARAKHAND - 246149
PH :9917005404.

LAKSAR

1074. SHIV AUTOMOBILES (5560--), 110/1/3 BALAWALI ROAD - LAKSAR, DISTRICT - HARIDWAR, PIN - 247663, UTTARAKHAND - 247663
PH :9690111444.

NEW TEHRI

1075. BHAGWATI SERVICE CENTER (4472--), SECTOR-8E/537, NEAR STADIUM, BARURI, NEW TEHRI, GARWAL (UTTARAKHAND) - 249001
PH :7895219517.

PAURI

1076. KRISHNA MOTORS (5957--), SHRINAGAR ROAD,NEAR KARGIL SHAHEED PETROL, PUMP,PAURI-246001, DISTRICT-PAURI GARHWAL, UTTARAKHAND - 246001
PH :9719723484.

PITHORAGARH

1077. CAR CARE CENTER (4371--), CANTT ROAD, PITHORAGARH, UTTARAKHAND, - 262501
PH :9756284676.
1078. MAA MAHAKALI MOTORS (4142--), DHARCHULA ROAD, RAI BRIDGE, PITHORAGARH, UTTARAKHAND - 262501
PH :9634713124.

RANIKHET

1079. LATIF MOTOR WORKS (3269--), SADAR BAZAR, GANDHI CHOWK, RANIKHET, (UTTARAKHAND) - 263645
PH :9761250801.

RISHIKESH

1080. GARHWAL GASOLINE STATION (3639--), . H.P. PETROL PUMP, LAXMAN JHULA ROAD, RISHIKESH-249 201 - 249137
PH :9837377767.

1081. RAKESH AUTOMOBILE ENGINEERS (1464--), OPP. BHARAT MANDIR INTER COLLEGE, HARDWAR ROAD, RISHIKESH-249 201, - 249137
PH :9412051655.

ROORKEE

1082. DUM DUM ENGG. WORKS (1343--), GROUND FLOOR, A TO Z TOWER, NEAR SOLANI BRIDGE, HARIDWAR ROAD, ROORKEE - 247664
PH :8449155002.

1083. ROORKEE AUTO SCANNERS (2675-), 786 WEST AMBER TALAB, RAM NAGAR CHOWK, ROORKEE-247 667, - 247664
PH -9837032367.

RUDRAPRAYAG

1084. RAJESHWARI AUTOMOBILES (5669-), BADRINATH ROAD,GHOLTRI, RUDRAPRAYAG, DISTRICT - RUDRAPRAYAG, UTTARAKHAND - 246171
PH -9997217788.

RUDRAPUR

1085. BALAJI SERVICE CENTRE (1335-), HALDWANI ROAD, RUDRAPUR(NAINITAL), (UTTARAKHAND), - 263153
PH -9897057385.

1086. CORUS MOTORS (5059-), D1 D2.20/1.NAINITAL ROAD, DISTRICT - U.S. NAGAR , UTTARAKHAND - 263153
PH -9927500007.

SIMLI

1087. PINDER AUTOMOBILES (5527-), PLOT # C6-C9, INDUSTRIAL AREA , NEAR KARNAPRAYAG - SIMLI, UTTARAKHAND - 246449
PH -9627687196.

SITARGANJ

1088. SHRI RAM MOTORS (5833-), AGARWAL BHAWAN,BYE PASS ROAD, SITARGANJ-242605, DISTRICT-UDHAM SINGH NAGAR, UTTARAKHAND - 262405
PH -8859468786.

VIKASNAGAR

1089. SHREE RAM AUTOMOBILES (5066-), NEAR TEHSIL, CHAKROTA ROAD, VIKAS NAGAR-DEHRADUN, UTTARAKHAND - 248198
PH -9897731200.

1090. SOUMYA MOTORS (4272-), CHAKRATA ROAD, BEHIND STATE BANK OF INDIA, VIKASNAGAR, DISTT. DEHRADUN (U.A) - 248198
PH -9412382490.

UTTARAKHAND

RAMNAGAR

1091. MAHI AUTOMOBILES (5532-), SHANKARPUR RAMNAGAR, DISTRICT - NAINITAL, UTTARAKHAND, - 244715
PH -9837920845.

WEST BENGAL

ALIPURDUAR

1092. PRADYOUT AUTOMOBILE WORKS (653-), PURAN BAZAR, P.O.ALIPURDUAR, JALPAIGURI, WEST BENGAL - 736121
PH -9832487473.

ASANSOL

1093. AGARWALLA AUTO SERVICE (3122-), 181 BURNPUR ROAD, P.O. BURNPUR, DT. BURDWAN-713 325, (WEST BENGAL) - 713325
PH -9832179346.

1094. WEST END MOTORS (1665-), KALYANPUR SATELITE TOWNSHIP PROJECT, KANYAPUR LINK ROAD, PALASHDIAH MORE, PO-KANYAPUR, PIN-713341, ASANSOL, WESTBENGAL - 713341
PH -8798107541.

BAHRAMPUR

1095. MARUTI CARE (3674-), NH-34 UTTARPARA MORE, P.O. RADHARGHAT, BERMHAMPURE, MURSHIDABAD -742 187 (WEST BENGAL) - 742187
PH -9434394040.

1096. NARAYAN BUS SERVICE (656-), NH-34, CHOUDANPUR, PO - CHALTIA, PS - BERMHAMPURE, MURSHIDABAD, WEST BENGAL, PIN - 742165 - 742101
PH -9732628065.

BALURGHAT

1097. GHOSH AUTOMOBILES (2644-), NARAYANPUR, BALURGHAT, DAKSHIN DINAJPUR-733 101, - 733101
PH -9434963493.

BANDEL

1098. CAR HOSPITAL (3675-), 2 NO. NETAJI PARK, G.T. ROAD, (OPP. MILITARY COLONY), BANDEL (WEST BENGAL) - 712102
PH -9038021085.

BARRACKPORE

1099. SAMANTA AUTOMOBILES PVT LTD (268-), CHIRIMORE, BARRACKPORE-743 101, NORTH -24 PARGANAS, WEST BENGAL - 743101
PH -9831054432.

BIRPARA

1100. PARTAP ENGINEERING WORKS (8942-), VILLAGE DEMDIMA, PO-BIRPARA, DISTRICT ALIPURDUAR, WEST BENGAL, PIN -735204 - 735204
PH -9832429319.

BOLPUR

1101. BASUNDHARA AUTOMOBILES (4241-), GOAL PARA, BOLPUR SURI ROAD, BOLPUR, - 731235
PH -9832132851.

CHINSURAH

1102. UNIVERSAL AUTO REMEDY (648-), C/O MR.BN CHATTERJEE, BHAGABOTI DANGA KHADINA MORE, PO CHINSURAH, HOOGHLY-712102 - 712102
PH -9830056592.

COOCH BEHAR

1103. PROVA AUTOMOBILES (8936-), NH-17 (FORMERLY NH-31), CHAKCHAKA CHECK POST, P.O. - NILKUTHI BABURHAT, DIST. - COOCH BEHAR, PIN-736156, WEST BENGAL - 736101
PH -9434174309.

DINHATA

1104. DINHATA AUTOMOBILES (5739-), NEAR J K DHABA, NEAR CHECK POST, DINHATA COOCH BEHAR MAIN ROAD, PO: PUTIMARI, DINHATA, WEST BENGAL-736135 - 736135
PH -9432456518.

DURGAPUR

1105. THE QUICKEST (2879-), BANS KOPA, (NEAR PARADISE INN), G.T. ROAD, DURGAPUR-713 212 - 713212
PH -9832165126.

FARAKKA

1106. SPEED WHEEL SERVICE CENTRE (1056-), TTS HCC COLONY, FARAKKA, P.O. NABARUN, DISTT. MURSHIDABAD (W.B.) - 742236
PH -9434101917.

HALDIA

1107. S.D. REPAIRING CENTRE (2168-), I.O.C. GATE NO.1, P.O. HALDIA OIL REFINERY, HALDIA-721 606, DISTT. MIDNAPORE (W.B.) - 721606
PH -9434021405.

HOWRAH

1108. GREWAL AUTO SERVICE (1570-), 97/1 FORESHORE ROAD, SHIBPUR, HOWRAH-711 102, - 711102
PH -9831017806.

JAIGAON

1109. SHAKTI TRADING CO. (770-), M.G. ROAD, JAIGAON-736 182, - 736182
PH -7760808990.

JALPAIGURI

1110. AUTOSTEL (646-), SAKOAJHORA, P.O. GAIRKATA-735 212, DIST.JALPAIGURI, (W.B.) - 735212
PH -9934111868.

1111. S.S. AUTOMOBILES (3664-), ASSAM MORE, JALPAIGURI, WEST BENGAL-735 101, - 735101
PH -943430252.

KALYANI

1112. GOPAL AUTO SERVICE CENTRE (3373-), B.K. EXPRESSWAY, BUDHHA PARK, KALYANI-741 235, NADIA (WEST BENGAL) - 741235
PH -9831319161.

1113. KRISHNA ENGINEERING WORKS (5270-), PLOT NO.199,KANTABELE.O.N.G.C ROAD, KALYANI EXPRESS ROAD,PO:GHORAGACHHA, PS - KALYANI, WEST BENGAL - 741245
PH -7439007218.

KOLKATA

1114. ADAMS MOTOR WORKS (465-), 61 A SHAKESPEARE SARANI, CALCUTTA-700 017, - 700017
PH -9830703287.

1115. AUTO SCAN (2272-), 100/1, B.T.ROAD, BARANAGAR, DISTRICT - NORTH 24 PARGANAS, WEST BENGAL - 700090 - 700090
PH -9231622309.

1116. AUTOKRAFT (620-), F 1/G-3, RIC IND.ESTATE UPEN BANERJEE ROAD, PARNASREE, CALCUTTA - 700060 (W.B.) - 700060
PH -9830053331.

1117. BHAWANIPUR AUTO CENTRE (628-), 49 S.P.MUKHERJEE ROAD, CALCUTTA - 700 026 (W.B.), - 700026
PH -9831783130.

1118. CAMAC (621-), 2/E CAMAC STREET, CALCUTTA-700016(W.B.), - 700016
PH -9831493716.

1119. CLASSIC ENGINEERING WORKS (3171-), C/O CLASSIC ENGINEERING WORKS, 620 D H ROAD BEHALA INDUSTRIAL ESTATE, PLOT NO.G-1, KOLKATA-700 034 - 700034
PH -9903390559.

1120. DELUXE SERVICE STATION (672-), P-256 257 CIT ROAD, CALCUTTA-700 010, - 700010
PH -9836490083.

1121. DIAL AUTOMOBILES PVT.LTD. (643-), 162A, PEARY MOHAN ROY ROAD, P.S.: CHETLA, KOLKATA - 700027 - 700027
PH -9830552191.

1122. FORTUNE AUTO CARE (3167-), 16 G/6 KHANPUR ROAD, KOLKATA-700 047, (W.B.), - 700047
PH -9831754527.

1123. SONA AUTO UDYOG (3144-), 1404 PURBACHAL MAIN ROAD, OPP. KALIKAPUR MARKET, KOLKATA-700 099, - 700099
PH -9804608684.

1124. TECHNO AUTO WORKS (4669-), 619, RAJA RAM MOHAN ROY ROAD, BIREN ROY ROAD EAST, BEHALA, KOLKATA-700008 - 700008
PH -9830111258.

1125. ULTRA CRAFT (4643-), 103/1B, RAJA DINENDRA STREET, KOLKATA-700006, WEST BENGAL - 700006
PH -9831313321.

1126. YOUNG AUTOMOBILES (637-), 50/2 HAZARA ROAD, CALCUTTA-700 019,(W.B.), - 700019
PH -9830778611.

1127. ZENITH AUTO (5529-), BHOLA NATH SARANI,CHINAR PARK, RAJARHAT , KOLKATA-700157, DISTRICT - KOLKATA, WEST BENGAL - 700157
PH -9830643781.

Maruti Authorized Service Station (AS ON 31.01.2026)

1128. ZOVAN AUTOMOBILES PVT. LTD (5578--), 42A/1B, RAJA SANTOSH ROAD, KOLKATA, DISTRICT - KOLKATA, WEST BENGAL - 700027 PH :9831082193.	1142. ABHISEK AUTO CENTRE (1976--), N.H.34, NEAR ST. XAVIER SCHOOL, P.O. MOKDUMPUR, DISTT. MALDA-732 101 (W.B.) - 732101 PH :9434065360.	ULUBERIA
1129. INTERNATIONAL AUTO WORKS (2648--), 48-C SOUTH TANGRA ROAD, KOLKATA-700 046, - 700046 PH :9163703015.	MIDNAPORE	1153. APSARA SERVICE STATION (3374--), NEAR BANITABLA CHECKPOST, ON NH-6, ULUBERIA-711 316, (W.B.) - 711316 PH :7797484735.
1130. MARUTI LINK (1633--), CK-12 SECTOR 2, SALT LAKE, CALCUTTA-700 091, - 700091 PH :9831180421.	1143. CHATTERJEE AUTOMOBILE (4960--), INDUSTRIAL GROWTH AREA, KHASJANGAL (NEAR KERANICHOTI), MIDNAPORE-721101, DISTRICT-PACHIM MIDNAPORE - 721101 PH :9434043558.	
1131. MOTORKRAFT (635--), P-149 REMOUNT ROAD, CALCUTTA-700 027.(W.B.) , - 700027	NARENDRAPUR	
1132. NORTH POINT MOTORS PVT. LTD. (344--), DUTTO BAGAN - 3D/1 BUS TERMINUS, 64/2B BELGACHIA ROAD, CALCUTTA-700 037, - 700037 PH :9830220069.	1144. A.M. AUTOMOBILES (3175--), KAMALGAZI, NARENDURPUR, KOLKATA-700 103, (WEST BENGAL) - 700103 PH :8335860051.	
1133. PRINCE MOTOR WORKSHOP (9031--), RAIGACHI (AZADNAGAR), P.S. RAJARHAT, RAJARHAT ROAD, NORTH 24 PARGANAS, KOLKATA - 700135 - 700059 PH :9875625595.	PURULIA	
1134. R.S. SERVICE CENTRE (1948--), 1/2 MAHENDRE ROY LANE, CALCUTTA-700 046, - 700046 PH :9831170273.	1145. BANERJEE AUTO SERVICE (640--), ANABILA VILLA, RANCHI ROAD, PURULIA (W.B.) - 723101 PH :9434656942.	
1135. RAJ AUTO SERVICE (5338--), 35.CANAL EAST ROAD, KOLKATA , PIN - 700011, WEST BENGAL - 700011 PH :9831103901.	RAGHUNATHGANJ	
1136. ROYAL CALCUTTA AUTOMOBILES (4651--), 68 BROAD STREET, KOLKATA-700019, - 700019 PH :8777762005.	1146. AUTO WHEEL (4427--), NH 34, UMARPUR, PO GHORSALA, DO MURSHIDABAD, WEST BENGAL, PIN 742235 - 742235 PH :9434101917.	
1137. RUSSA ROAD SERVICE STATION (622--), 30 SP MUKERJEE RROAD, CALCUTTA - 700025 (W.B.) , - 700025 PH :9748757842.	RUPNARAYANPUR	
KRISHNANAGAR	1147. L K MOTORS (3477--), NH 2 BYPASS, POINT (CHOWRANGI), RUPNARAYANPUR (CHALBALPUR), BURDWAN-713 343 - 713343 PH :9091392314.	
1138. TARA MA AUTOMOBILES (1947--), AUROBINDRA SARANI (NEAR KRISHNANAGAR WOMEN'S COLLEGE), KRISHNANAGAR,NADIA, , WEST BENGAL 7411011, - 741101 PH :8001100930.	SILIGURI	
1139. HIGHWAY SERVICE CENTRE (4455--), ASHA DEEP, N.H.34, KRISHNANAGAR, NADIA-741101, WEST BENGAL - 741101 PH :9434165494.	1148. BHAWANI MOTOR GARAGE (4844--), BIDYASAGAR PALLY, NEAR RISHI BHAWAN, BURDWAN ROAD, SILIGURI-734405, WEST BENGAL - 734405 PH :9641162127.	
MADHYAMGRAM	1149. MUM AUTO WORKS (4835--), NEAR DELHI PUBLIC SCHOOL, PANCHANAI (DAGAPUR), SILIGURI, WEST BENGAL-734003 - 734003 PH :9832068537.	
1140. J G BEHAL AUTO (4653--), DOLTALA, GANGANAGAR, MADHYAMGRAM, KOLKATA-700129 (WEST BENGAL) - 700129 PH :9831094430.	SODEPUR	
1141. PAUL AUTOMOBILE (671--), JESSORE ROAD, MADHYAMGRAM, DOHARIYA PO GANGANAGAR, DISTT 24 PGNS NORTH - 700132 PH :9830239001.	1150. CAR CARE (8986--), B.T. ROAD, SODEPUR, P.O.: SUKCHAR, 24 PARGANAS (NORTH) - 700115 PH :9674907411.	
MALDA	SRIRAMPUR	
	1151. MARUTI AUTO CENTRE (2167--), 85/18 G.T. ROAD (WEST), PO : MULLIKPARA, SRIRAMPUR, HOOGLY-712 203 (W.B.) - 712203 PH :8777417901.	
	SURI	
	1152. PANCHANATH AUTOMOBILES (4456--), BROJARGRAM BARABAGAN, BAKRESWAR PATHARCHAPURI HIGHWAY MORE, SURI, WEST BENGAL-731101 - 731101 PH :9732026250.	

DELHI

DELHI

1. MSM (0883-08-01), F-39,OKHLA INDUSTRIAL
AREA,PHASE-II,NEW DELHI - 110020

TAMIL NADU

CHENNAI

2. MSM (1485-14-01), # 9, (SP), THIRU-VI-KA
INDUSTRIAL ESTATE, GUINDY, CHENNAI -
600032

ARUNACHAL PRADESH

ITANAGAR

1. HIBRO AUTOMOBILES (7581-75-01), D-SECTOR, DISTT: PAPUMPARE, ITANAGAR - 791111

ASSAM

BARPETA

2. ROY AUTO ENGINEERING WORKS (7281-7Z-01), POST OFFICE, BARPETA ROAD, MAIN ROAD , WARD NO.-4, ASSAM - 781315

DULIAJAN

3. B.S. MOTORS (X881-X8-01), NO. 01, BORPOTHAR TINALI, DULIAJAN. - 786602

BIHAR

PATNA

4. CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE, PATLIPUTRA , PATNA - 800013

DELHI

DELHI

5. GALAXY AUTOMOBILES (0881-08-01), 8 INDUSTRIAL AREA, TILAK NAGAR, NEW DELHI, - 110018
6. A M AUTOMOBILES (A UNIT OF BLUE BIRD ENTERPRISES) (0891-08-01), 189-91, LAWRANCE ROAD, DELHI - 110035

HARYANA

BALLABHGARH

7. ROYAL MOTORS (9R82-9R-01), 21/5, G.T. ROAD, BALLABHGARH, DISTT-FARIDABAD - 121004

MURTHAL

8. MURTHAL AUTO PVT. LTD. (BV81-BV-01), 44 HSIDC, MURTHAL - 131027

PANCHKULA

9. CARE TAKER (K381-K3-01), PLOT NO. 36, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113

PANIPAT

10. VIJAY MOTORS (D381-D3-01), PLOT# 136, INDUSTRIAL AREA, PHASE-1 - 132103

SAHA

11. PUNJAB MOTOR & ENGG WORKS (1881-18-01), NH-73, SHAHZADPUR ROAD, SAHA, DISTT.-AMBALA - 133104

YAMUNANAGAR

12. HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA - 135001

HIMACHAL PRADESH

JASSUR

13. CLASSIC MOTOR GARAGE (8H81-8H-01), TEHSEEL NOOPUR, KANGRA, JASSUR, HIMACHAL PRADESH - 176201

JAMMU AND KASHMIR

SRINAGAR

14. RAHIM MOTORS (1281-12-01), SIDGO INDUSTRIAL AREA, RANGRETH, SRINAGAR - 241384

JHARKHAND

RANCHI

15. PODDAR CAR WORLD PVT LTD (5181-51-01), 47, 48, KOKAR INDUSTRIAL AREA, RANCHI. - 834001

KERALA

PATHANAMTHITTA

16. AGT MOTORS (W881-W8-01), AGT TOWERS, PUTHENPEEDI, OMALLUR, PATHANAMTHITTA - 689640

MADHYA PRADESH

NEEMUCH

17. AUTO SCAN (3T81-3T-01), MHOW ROAD, NEEMUCH, MADHYAPRADESH. - 454775

MAHARASHTRA

PUNE

18. MARUTI CARE POINT (1983-19-01), 17/1, RAHATANI, AUNDH-CHINCHWAD ROAD. OPP PCMC 'D' PRABHAG KARYALAY, NEXT TO HP SUBHIKA PETROL PUMP, RAHATNI, PUNE, MAHARASHTRA - 411017

THANE

19. THANAWALA MOTOR AGENCY (P) LTD (3981-39-01), B-31, OPPOSITE ITI, WAGLE ESTATE MAIN ROAD, WAGLE ESTATE, THANE - 400007

ODISHA

KEONJHAR

20. KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA - 758001

PUNJAB

BATALA

21. CITI AUTOMOBILES (V581-V5-01), NEAR GURUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA. - 143505

MOGA

22. SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI , G.T. ROAD, MOGA - 142001

RAJASTHAN

JAIPUR

23. KATARIA AUTOZONE PVT.LTD (1181-11-01), 1-A ; NARAYANPURI, KATARIA KRISHI FARM, SIRSI ROAD, JAIPUR - 302034

TELANGANA

HYDERABAD

24. RETOUCH (1082-10-01), H.NO. 3-67/A. B. C. D.NEW NAGOLE COLONY, NAGOLE VILLAGE, HYDERABAD, NAGOLE, HYDERABAD - 500068

UTTAR PRADESH

ALIGARH

25. VINEET MOTORS (B681-B6-02), PLOT NO.D-138 &139, SECTOR-1, TALA NAGARI, RAMGHAT ROAD, ALIGARH - 202001

GHAZIABAD

26. KAP AUTOMOBILES PVT. LTD. (5981-59-01), D-BLOCK SHASHTRI NAGAR, HAPUR ROAD, GHAZIABAD
27. CHIRAG AUTOMOBILES (5983-59-01), PLOT NO. B1, SECTOR-B3, TRONICA CITY, GHAZIABAD - 201102

LUCKNOW

28. K M AUTOCRAFT (1381-13-01), 76/3, BARAURA, HUSSAIN BARI, HARDOI ROAD, LUCKNOW - 226003

MEERUT

29. UNIQUE CAR SCANNERS (4882-48-01), PLOT NO-514/4, SURAJ KUND ROAD, MEERUT, - 250001

NOIDA

30. MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8 & 9, SECTOR-8, NOIDA
31. MOTORCRAFT INDIA PVT LTD (A181-A1-02), C-125, SECTOR-63, NOIDA.
32. JKM MOTORS (A184-A1-01), A-25, SECTOR 9, DISTT. GAUTAM BUDH NAGAR, NOIDA - 201301
33. FAST TRACK AUTOCARE(INDIA) PVT. LTD. (A185-A1-01), A-13, SECTOR 63, NOIDA, G.B. NAGAR - 201301

SAHIBABAD

34. FAST TRACK SERVICES (M981-M9-01), PLOT NO.40/1B/2, 3 & 4, SITE 4, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD (U.P.). - 201010

UNNAO

35. VISHAL WHEELERS PVT. LTD. (1382-KL-01), PLOT NO. 1164, KANPUR-LUCKNOW BYE PASS, UNNAO, UTTAR PRADESH. - 209801

VARANASI

36. PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2, CLUB ROAD, VARANASI - 221002

WEST BENGAL

KOLKATA

37. MANOCO SALES (P) LTD. (0681-06-01), 25/1, CHETLA CENTRAL ROAD, OPPOSITE CHETLA PARK, KOLKATA - 700027

BATTERY LABEL SYMBOL MEANINGS

	No smoking, no naked flames, no sparks		Battery acid
	Shield eyes		Note operating instructions
	Keep away from children		Explosive gas

Prepared by
MARUTI SUZUKI INDIA LIMITED

Service Division
March, 2026

Part No. 99011M75UE1-74W
Printed in India

**For round-the-clock on-road assistance,
call Maruti On-road Service at 1800 102 1800[#] / 1800 1800 180[#]**

No STD code to be prefixed.

 **MARUTI SUZUKI**
GENUINE ACCESSORIES

 **MARUTI SUZUKI**
GENUINE PARTS

 **MARUTI SUZUKI**
COST PROTECT

 **MARUTI SUZUKI**
HELPLINE

 **MARUTI SUZUKI**
ROAD SERVICE

SERVICE DIVISION

MARUTI SUZUKI INDIA LIMITED

Palam-Gurgaon Road, Gurgaon – 122 015 (Haryana), India

Visit us at: www.marutisuzuki.com